



MAKEHOHCKI

POLSKI

ROMÂN

РУССКИ

LATVIEŠU

LΙΕΤυνιψ Κ

ı

To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL SH5







 
Front Panel



The buttons are located on the rear.

<u> </u>	ტ/
F Selects Function	F
+ Adjusts Volume	- +

Rear Panel



OPTICAL IN Connect to an Optical device
PORTABLE IN Connect to a Portable device
USB port Connect to a USB device
HDMI IN Connect to HDMI out on a device
HDMI OUT (TV ARC) Connect to a TV

1 Subwoofer Connection

Place the wireless subwoofer near the speaker and follow steps below.

- Connect the power cord of wireless subwoofer to the outlet.
- 2 Turn on the main unit.:

The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

Subwoofer Connection Manually

Reset the Subwoofer

If the green LED on the subwoofer blinks quickly, skip this step and go to 2

- Press and hold Pairing button for 5 seconds.
- The LED lights up alternately in red and green.
- Plug out the power cord. After the LED turns off completely, plug in the power cord again.

 
When the reset is completed, the subwoofer's green LED blinks quickly.

- Reset the sound bar
 - Adjust volume to minimum. "MIN" appears on display window.
 - Press and hold \(\psi \) (Mute) button on the remote control for 3 seconds.
 "SUB - WF RESET" appears on display window.
 - Turn the sound bar's power off and on while the subwoofer's green LED blinks.

When the connection is completed, you can see the green LED on the subwoofer.



Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1m to prevent wireless interference.




2 |

TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


Optical Connection

 - Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.



B HDMI(ARC) Connection

 
- Connect the sound bar to the TV using HDMI cable.
- Set up [External Speaker (HDMI ARC)] on your TV setting menu.



HDMI connection is unavailable if your TV does not support HDMI ARC.

Addtional Device Connection

Connect to the external device as follows.

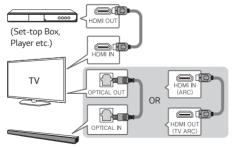

2 Set the input source by pressing **F** on the remote control or unit repeatedly.

Remote control




*): Turns down the volume at night.

AV SYNC: Synchronizes the audio and video.

AUTO VOL: Adjusts the volume level appropriately.

AUTO POWER: Automatically turns on by an input source.

Replacement of battery

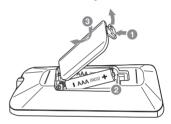

Additional Information

Specification

Power consumption	Refer to the main label.	
	Networked standby : 0.5 W (If all network ports are activated.)	
AC adapter	 Model: DA-38A25 Manufacturer: Asian Power Devices Inc. Input: 100 - 240 V ~ 50 - 60 Hz 1.2 A Output: 25 V == 1.52 A 	
Dimensions (W x H x D)	Approx. 945 mm x 53 mm x 85 mm Without foot	
Net Weight	Approx. 2.6 kg	
Bus Power Supply (USB)	5 V === 500 mA	
Amplifier (Total RMS Output power)	320 W	

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Declaration of Conformity

C€ 0197

Hereby, LG Electronics European Shared Service Center B.V., declares that this Wireless Sound Bar is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.
Krijgsman 1
1186 DM Amstelveen
The Netherlands

or can be requested at our dedicated DoC website:

http://www.lg.com/global/support/cedoc/cedoc#

This device is a $2.4~\mathrm{GHz}$ and $5~\mathrm{GHz}$ wideband transmission system, intended for use in all EU member states and EFTA countries.

