



Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <a href="http://www.lg.com">http://www.lg.com</a> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL RK7



www.lg.com

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

ČESKY

SLOVENČINA

POLSKI

ROMÂNĂ

LATVIEŠ

HRVATSH

AF C












# Top panel

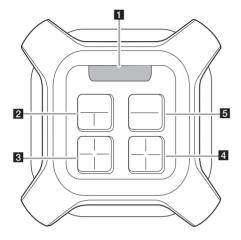

- 1 Display window
- 2 (I) (Standby) Turns the power on or off.

#### ⊕ DUAL

Connects two speakers for DUAL mode in WIRELESS PARTY LINK.

#### ⊕ MULTI

Connects multiple speakers for MULTI mode in WIRELESS PARTY LINK.

The unit might not synchronize between audio and video in DUAL/MULTI mode

## 3 F (Function)

- Selects the function and input source.
- Press and hold to select the PARTY LINK with AUX.

#### **II** (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono (Horizon mode only).

#### KM/DD (Skip/Search)

- Skips backward or forward.
- Searches for a section within a file.
- Selects the radio stations.

#### 4 AUTO DJ / RDS

- Selects the AUTO DJ mode.
- RDS (Radio Data System)

#### USER EQ / DEMO

- Selects the sound effect created by your own.
- In power off status, if you press  $\ensuremath{\mathsf{USER}}\xspace \ensuremath{\mathsf{EQ}}\xspace$  /  $\ensuremath{\mathsf{DEMO}}\xspace$ , show DEMO mode.

#### SOUND EFFECT / BASS BLAST (or BASS BLAST+)

- Chooses sound impressions.
- Press and hold to select BASS (or BASS+) effect directly.

#### LIGHTING

Selects lighting mode.

**5** +/- (Volume)

Adjusts speaker volume

#### Controller App






Download the Music Flow Bluetooth App to your device. (Android only)


#### LG Sound Sync



For more information, download the online owner's manual. http://www.lg.com

# Front panel / Rear panel

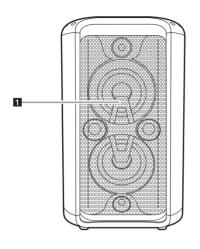

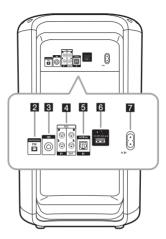

1 Remote sensor

- 2 FM ANTENNA
- 3 MIC (Microphone) jack
- 4 AUX IN / OUT (L/R)
- 5 OPTICAL IN
- 6 USB port
- 7 AC IN socket

# How to place the unit

Vertical



Horizon



# Additional Information

## **Specifications**

Power Requirements	Refer to the main label on the unit.
	Refer to the main label on the unit.
Power Consumption	Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 345 mm X 650 mm X 345 mm
Bus Power Supply (USB)	5 V === 500 mA
Amplifier (Total RMS output power)	550 W RMS

Design and specifications are subject to change without notice.


#### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

# How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

## Replacement of battery

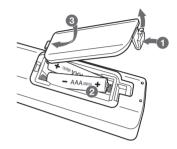

# **Declaration of Conformity**



Hereby, LG Electronics declares that the radio equipment type HIGH POWER SPEAKER SYSTEM is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://www.lg.com/global/support/cedoc/cedoc#

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm