



SIMPLE MANUAL

HIGH POWER

SPEAKER

SYSTEM

To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
FH6



www.lg.com

Copyright © 2017 LG Electronics. All Rights Reserved

ENGLISH



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.


Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

POWER: This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN:** LIVE - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Disposal of your old appliance



1. This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.

2. Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.

3. You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lg.com/global/recycling

Disposal of waste batteries/accumulators



Pb

1. This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.

2. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

3. The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.

4. For more detailed information about disposal of your old batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the product. (<http://www.lg.com/global/sustainability/environment/take-back-recycling/global-network-europe>)

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type HIGH POWER SPEAKER SYSTEM is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm

- LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee.
 - All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase.
 - The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this LG equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.
- PLEASE NOTE:**
- The dealer may restrict the guarantee to the original purchaser.
 - The dealer is not obliged to carry out service under guarantee if unauthorized modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.
 - Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase.
 - We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use.
 - Aerial alignment and consumer control adjustments are not covered by this guarantee.

 
This guarantee does not affect your statutory rights.

- REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE:**
RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVIDED.
- Product Registration Card :
It is helpful to complete at least your name, address, phone, model & serial numbers and return it. This will enable LG to assist you in the future should you lose your receipt, your units be stolen, or should modifications be necessary.
- To obtain information or assistance:
Call UK: 0344 847 5454 IE: 01 686 9454


MODEL NO.*	SERIAL NO.*	DATE OF PURCHASE.*

In all cases of difficulty - consult your LG dealer from whom the product was purchased

LGEUK Website : www.lg.com/uk
(Service website : www.lg.com/uk/support)




Top panel

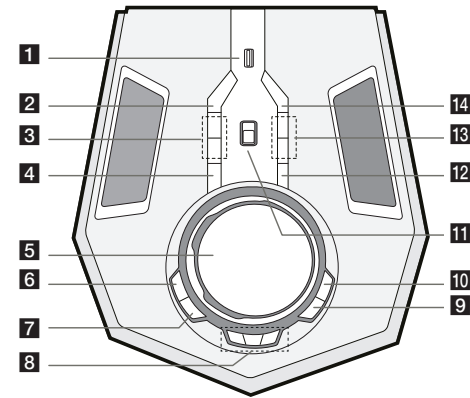 

- 1** USB
You can play or record sound by connecting the USB device.
- 2** USB REC / DEMO
- Records to USB.
- Shows Demo mode.
- 3** MIC (Microphone) VOL +/-
- 4** VOICE CANCELLER
VOICE CANCELLER can reduce the Vocals of Singer in certain source/content allowing you to enjoy the music.
Press to switch this Mode On or Off.
- 5** SCRATCH / SEARCH & LEVEL CONTROL
- Turns clockwise or counterclockwise to make Scratch sound.
- Searches a folder or a file.
- Adjust DJ EFFECT level.
- 6** DJ EFFECT
Selects DJ EFFECT mode.
- 7** LIGHTING
- Turns ON/OFF the lighting effects.
- Press and hold to turn on/off the Flash Lighting.
- 8** CLUB, DRUM, USER (DJ PRO)
Press and hold to select CLUB, DRUM or USER sound effect for mix.
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)
1, 2, 3 (DJ PRO PAD)
Press a desired sound pad.
- 9** OK / RDS
- Selects a folder when searching a file.
- RDS (Radio Data System)
- 10** SEARCH
Moves to folder or file in selection mode.
- 11** BLUETOOTH
Changes input source to the **Bluetooth**.
(Even in power off mode, if you press BLUETOOTH, then power is on and automatically changed to **Bluetooth** function.)
- 12** USER EQ / BASS BLAST
- Selects the sound effect created by your own.
- Press and hold to select BASS effect directly.
- 13** KEY CHANGER (# / b)
Changes the key to suit your vocal range.
- 14** WIRELESS LINK
Selects Wireless Party Link mode.

 Front panel / Rear panel

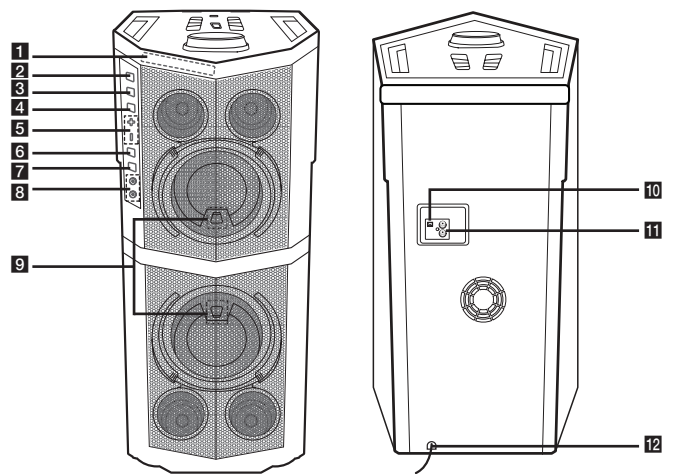

- 1** Display window
- 2** >>I (Skip/Search)
- Skips forward.
- Searches for a section within a file.
- Selects the radio stations.
- 3** >II (Play/Pause)
- Starts or pauses playback.
- Selects Stereo/Mono (Horizon mode Only)
- 4** I<< (Skip/Search)
- Skips backward.
- Searches for a section within a file.
- Selects the radio stations.
- 5** +/- (Volume)
Adjusts speaker volume.
- 6** F (Function)
Selects the function and input source.
- 7** I (Standby/On)
- 8** MIC (Microphone) 1 / 2 jack
- 9** Remote control receiver
- 10** FM ANTENNA
- 11** AUX IN (L/R)
- 12** Power cord

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 818 mm X 318 mm X 388 mm
Net Weight	Approx. 17.2 kg
Bus Power Supply (USB)	5 V --- 1 A
Amplifier (Total RMS output power)	600 W

Design and specifications are subject to change without notice.

 
Note

- Do Not look directly at the light emitting path when lighting function is operational.
- If the brightness from the illuminating light source causes excessive glare and eye discomfort during operation then turn On room lights or turn Off the LIGHTING of the unit.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

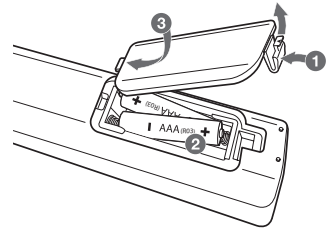

Controller App



Download the **Music Flow Bluetooth** App to your device.

 
LG Sound Sync (Wireless)



For more information, download the online owner's manual <http://www.lg.com>

How to place the unit

Vertical



Horizon

