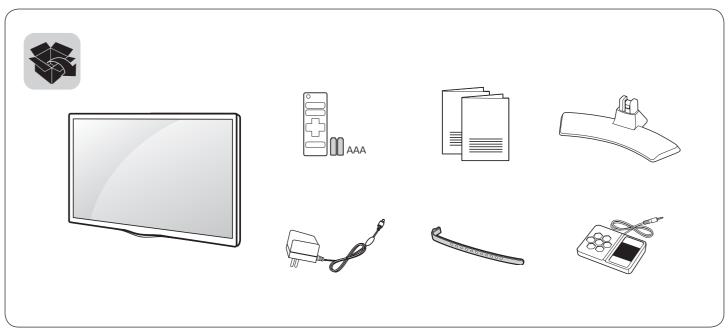




Quick Start Guide



^{*}Image may vary depending on model.



Unpacking
Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

P/No: MFL69446172 (1702-REV00)









English

- Read **Safety and Reference**.
- For the power supply and power consumption, refer to the label attached to the product.



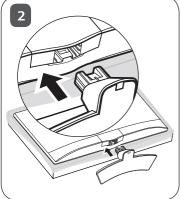




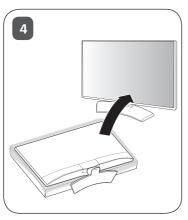












· (CAUTION -

Image shown may differ from your TV

When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.







 


 


Image shown may vary depending on model. All connection cables & devices shown in the picture are not included along with the TV set.

USB Connection

Connect a USB storage device such as a USB flash memory, external hard drive, or a USB memory card reader to the TV and access the entertainment menu to use Various multimedia files.





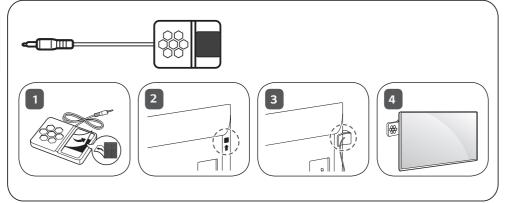


















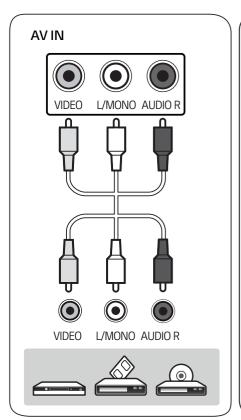


 


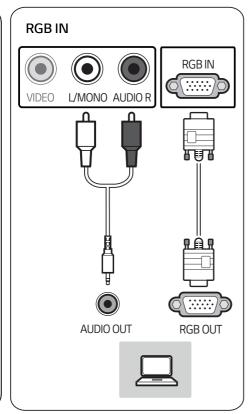


NOTE

Image shown may vary depending on model. All connection cables & devices shown in the picture are not included along with the TV set.















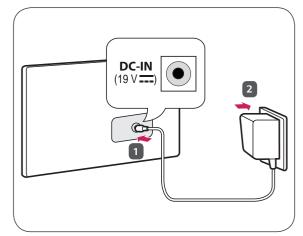










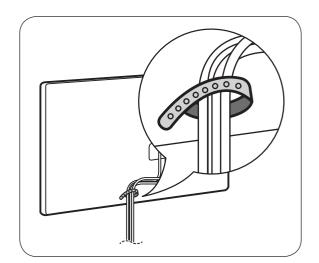




Image shown may vary depending on models.



Do not use sub standard batteries in TV remote which may lead to leakage & damage the remote control unit permanently. For long unused applications of remote controller it is advisable to remove batteries from remote control unit.



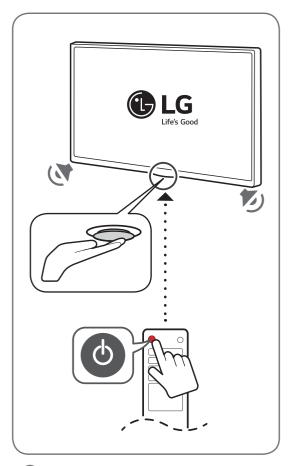












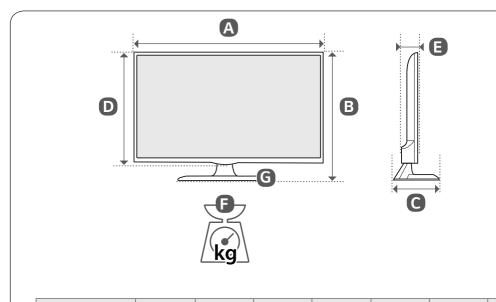
NOTE Image shown may vary depending on models.



V







	A (mm)	B (mm)	C (mm)	(mm)	E (mm)	F (kg)	F - G (kg)
24LJ470A-TA	556	387.3	146.3	343.1	53.1	3.3	3.1
Power requirement					19 V 1.6 A		

NOTE -

Image shown may vary depending on models.

IN002043