



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.

RF Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.



SIMPLE MANUAL

Mini Hi-Fi System

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

 
MODEL
CM4360 (CM4360, CMS4360F)



www.lg.com




Front Panel

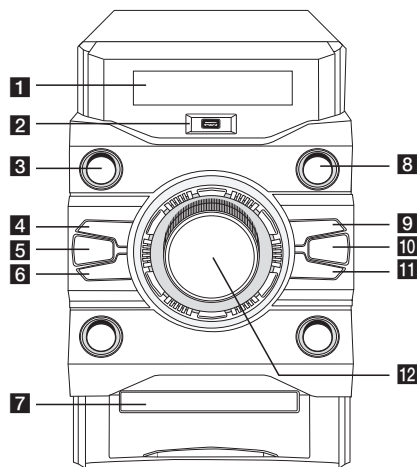

- 1 Display window
- 2 USB : Plays the audio files by connecting the USB device.
- 3 P/I (Power) : Switches the unit ON or OFF.
- 4 \gg/I (Skip/Search) : Searches forward. / Skips to the next track/file.
- 5 AUTO DJ : Selects the AUTO DJ mode.
- 6 $\text{I}\ll$ (Skip/Search) : Searches backward. / Skips to the previous track/file.
- 7 Disc tray
- 8 FUNCTION : Selects the function or input source.
- 9 \gg/II (Play/Pause) : Starts or pauses playback. / Selects Stereo/Mono.
- 10 REGION EQ / B. BLAST : Chooses region equalizer. / Selects BASS effect.
- 11 \triangle : Opens or closes the disc tray.
- 12 Master Volume : Adjusts volume of speaker.

 Rear Panel

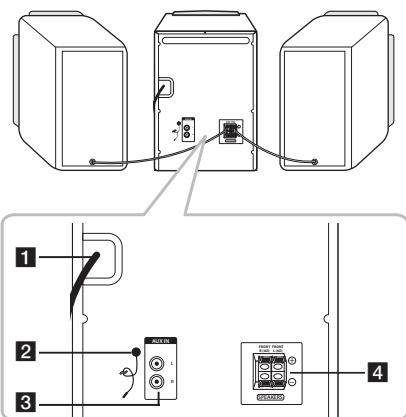

- 1 POWER IN
- 2 FM ANTENNA
- 3 AUX IN (L/R) connectors
- 4 SPEAKERS (L/R) terminals

Controller App



 
Download the **Music Flow Bluetooth** App to your device.

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>


Speaker Connection

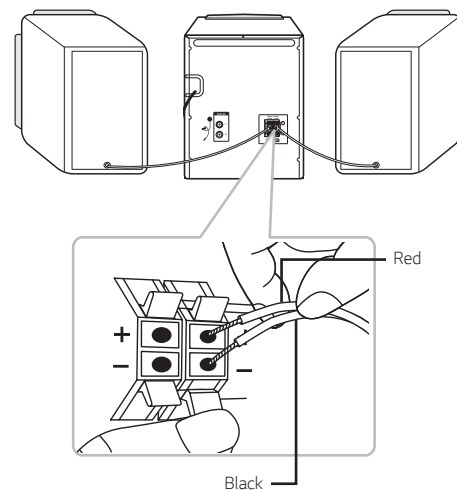

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

 Replacement of battery

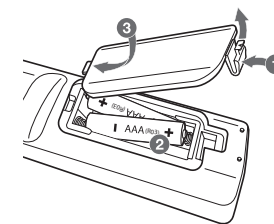

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.4 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 204.5 mm x 278 mm x 285.5 mm
Net Weight	Approx. 2.53 kg
Bus Power Supply (USB)	5 V --- 500 mA
Total Output (RMS)	230 W

Design and specifications are subject to change without notice.