 


LAS454B/LAS453B/LAS260B SW Update Guide – Preparation

● Preparation

- 1. LAS454B, LAS453B, LAS260B Main Units
- 2. LAS454B, LAS453B, LAS260B Remote Controller Unit
- 3. USB Memory
- 4. SW File



<Main Unit>
Necessary



<RCU>
Necessary



<USB Memory>
Necessary

<Software Download – Example>

- 1. Website : <http://www.lg.com>
- 2. Path : Support > Software&Drivers
- 3. Search your “model name”
- 4. And then pop-up window will be showed
- 5. Select the file and download it

The screenshot shows the LG website's 'Software & Drivers' section. The search bar contains 'SJ4Y' and the results show a firmware update for SJ4Y (Version 1704262). The results table lists the software download guide and the firmware update file.

File Name	Size	Download Date
Software_download_guide(Eng)_20170428.pdf	3.30K	04/28/2017
MICOM_SJ4_1704262_919D_rev3093.zip	75K	04/28/2017

Reference

Close

- ※ Take care not to power off during update
- ※ Do format USB memory before update (FAT32 file system)
- < Please do it only on Windows 7 >

LAS454B/LAS453B/LAS260B SW Update Guide – Update

■ Update

Step 1. Prepare LAS454B, LAS453B, LAS260B update binaries.

※ File Name Change PG540_FW_LASXXB_1712140.bin to Below

Update module	Filename Sample
DSP	LAS454B : PG540_FW_LAS454B_1712140.bin LAS453B : PG540_FW_LAS453B_1712140.bin LAS260B : PG540_FW_LAS260B_1712140.bin

Step 2. Copy SW file to USB memory stick.

Step 3. Power on LAS454B, LAS453B, LAS260B main unit.

Remove Back cover using screw-driver(Tip shape : “+”). [Pic 1]



[Pic 1]

Step 4. Press “SET Vol –” and “RCU Vol +” more than 5 sec at the same time [Pic 2]



[Pic 2]

Step 5. Insert USB memory stick which has update software file to the USB at the back of LAS454B, LAS453B, LAS260B main unit. [Pic 3]



[Pic 3]

Step 6. Update will be started automatically.

And then icon will be turned on one by one like [Pic 4]



[Pic 4]

Step 7. LAS454B, LAS453B, LAS260B main unit will be turned off automatically after update finish.

Step 8. LAS454B, LAS453B, LAS260B main unit Power Plug out. Combine the back cover.

LAS454B/LAS453B/LAS260B BT Lock Setting Guide

■ Check BT Lock

Step 9. Enable BT lock [Pic 5]

Go to Bluetooth function. Hold “Auto Power On” Key of RCU during 2 sec over.

If “BT Lock” is set, the RED LED will be blink.



[Pic 5]

Step 10. Check ON-BT Lock

In condition of Optical, Portable Function, Try to Search or Connect to sound-bar by Smart Phone.

If you cannot connect to sound-bar, “BT-Lock” is “ON” normally.

Appendix. Check OFF - BT Lock

Go to Bluetooth Function. Hold “Auto Power On” Key of RCU during 2 sec over.

If “BT Lock” is set, the RED LED will be blink.

In condition of all function, Try to Search or Connect to sound-bar by Smart Phone.

If you can connect to sound-bar by Bluetooth, “BT-Lock” is “OFF” normally. [Pic 6]



[Pic 6]