



OWNER'S MANUAL

Magic Remote

Please read this manual carefully before using your remote and retain it for future reference.

AN-MR19BA


www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved.


ACCESSORIES

The remote control image shown may differ from the actual product.

(+ Depending on country)

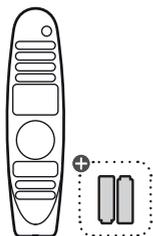

Magic Remote and Alkaline Batteries (AA)

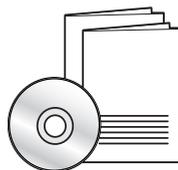


Owner's manual

- Contents in this manual may be changed without prior notice due to upgrade of product functions.

BATTERY

1. Installing Batteries

- Please read this manual carefully.
- Press the top of the battery cover, slide it back, and lift the cover as shown below.
- To replace batteries, open the battery cover, replace alkaline batteries (1.5 V, AA) matching ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV.
- To remove the batteries, perform the installation actions in reverse. Don't mix old or used batteries with new ones. Close the cover securely.
- **Open the battery cover to find the label.**

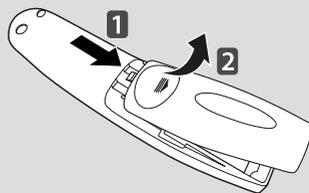


2. Precautions

- After replacement of the batteries, pair the remote control and use it in accordance with user manual.
- If the unit does not operate after replacement of batteries, reattempt pairing in accordance with the user manual.
- If the remote controller is not being used for prolonged period of time, remove the batteries from the unit.
- Do not dismantle or expose the batteries to heat.
- Do not drop or exert extreme impact on the batteries. This may cause the case to be damaged.
- Do not immerse the batteries in water.
- There is danger of explosion if batteries are inserted incorrectly.
- Properly dispose of used batteries.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.

REMOTE DESCRIPTION

- The remote control image shown may differ from the actual product.
- The order of description may differ from the actual product.
- Some buttons and services may not be provided depending on models or regions.

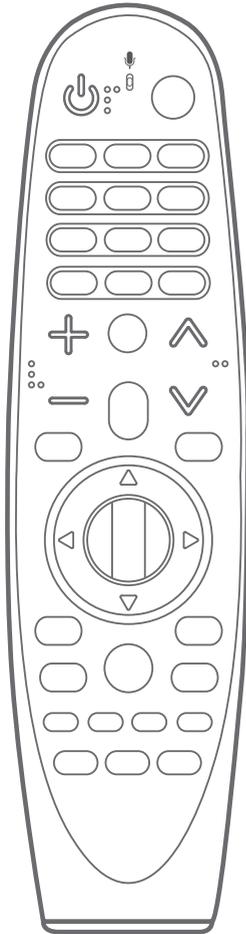

(POWER)

Turns the TV on or off.

STB / PWR

You can turn your set-top box on or off by adding the set-top box to the universal remote control for your TV.

Number buttons

Enters numbers.

*

Accesses the [QUICK HELP].

(DASH)

Inserts a  (DASH) between numbers such as 2-1 and 2-2.

(DASH)*

Enter data broadcast. (Depending on country)

LIST/

Accesses the saved channels or programmes list.

QUICK ACCESS*

Edits QUICK ACCESS.

(QUICK ACCESS is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.)

... (MORE ACTIONS)

Displays more remote control functions.

AD/SAP *


Video/audio descriptions function will be enabled. (Depending on country)

SAP (Secondary Audio Program) feature can also be enabled by pressing the ... button. (Depending on country)

(VOL)

Adjusts the volume level.

* To use the button, press and hold for more than 1 second.

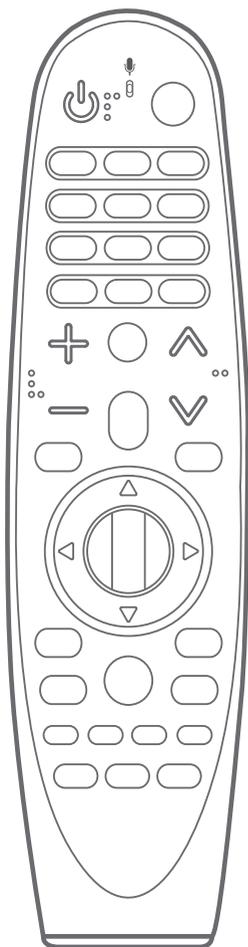

 **(Voice recognition)***

Network connection is required to use the voice recognition function. Once the voice display bar is activated on the TV screen, press and hold the button and speak your command out loud.

 **(MUTE)**

Mutes all sounds.

 **(MUTE)***

Accesses the [Accessibility] menu.

   **(CH/P)**

Scrolls through the saved channels or programmes.

 **(HOME)**

Accesses the Home menu.

 **(HOME)***

Shows the previous history.

 **(Q. Settings)**

Accesses the Quick Settings.

 **(Q. Settings)***

Displays the [All Settings] menu.

 **Wheel (OK)**

Press the center of the  **Wheel (OK)** button to select a menu.


You can change channels or programmes by using the  **Wheel (OK)** button.

    **(up/down/left/right)**

Press the up, down, left, or right button to scroll the menu.

If you press     buttons while the pointer is in use, the pointer will disappear from the screen and the Magic Remote will operate like a general remote control.

To display the pointer on the screen again, shake the Magic Remote to the left and right.

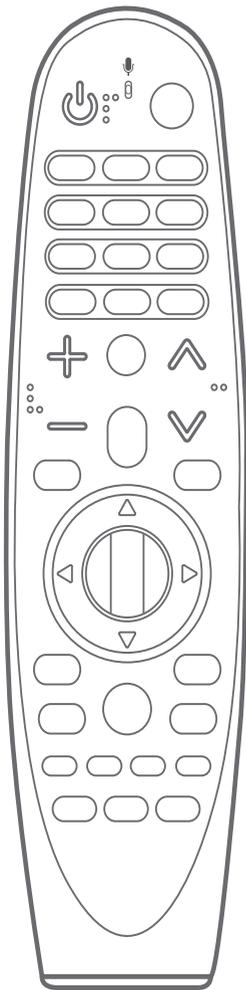

GUIDE / GUIDE

Shows channels or programmes guide.

← / BACK

Returns to the previous screen.

← / BACK *

Clears on-screen displays and returns to last input viewing.

(INPUT)

Changes the input source.

(INPUT)*

Accesses the [HOME DASHBOARD].

Streaming Service buttons

Connects to the Video Streaming Service.

STB / STB MENU / MENU

Displays the set-top box Home menu. (When you are not watching via a set-top box: the display changes to the set-top box screen.)



Shows the previous history. (Depending on country)



These access special functions in some menus.

• *: Runs the record function. (Depending on country)


•• *: Enter Cheering mode. (Depending on country)

▷, || (Control buttons)

Controls media contents.

USING


1. How to register (pair) or deregister (unpair)

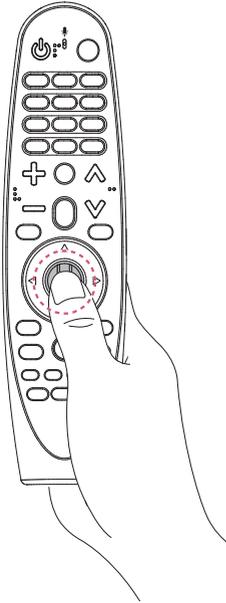

How to register (pair) the Magic Remote

To use the Magic Remote, first pair it with your TV.

1. Put batteries into the Magic Remote and turn the TV on.
 2. Point the Magic Remote at your TV and press the  **Wheel (OK)** on the remote control.
- If the TV fails to register the Magic Remote, try again after turning the TV off and back on.

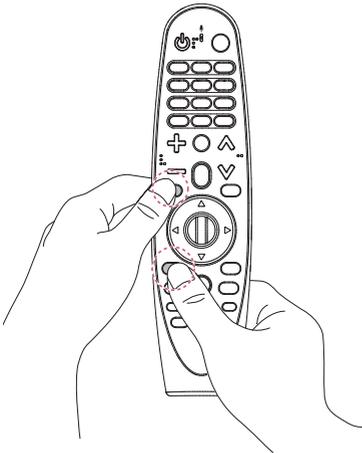


How to deregister (unpair) the Magic Remote

Press and hold the  (**HOME**) and  **BACK** buttons at the same time for five seconds, to unpair the Magic Remote with your TV.

- Pressing and holding the  **GUIDE** button will let you cancel and re-register Magic Remote at once.

2. How to use

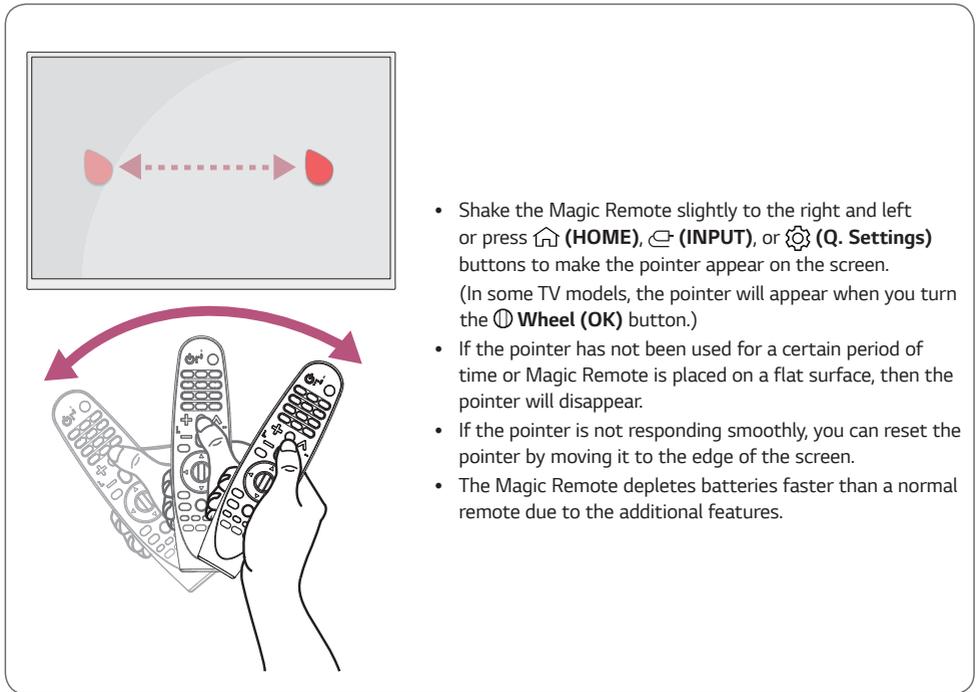

PRECAUTIONS TO TAKE

- Use the remote control within the specified range (within 10 m).
You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area.
- You may experience communication failures depending on the accessories.
Devices such as a microwave oven and wireless LAN operate in the same frequency band (2.4 GHz) as the Magic Remote. This may cause communication failures.
- The Magic Remote may not work properly if a wireless router (AP) is within 0.2 m of the TV. Your wireless router should be more than 0.2 m away from the TV.
- Do not disassemble or heat the batteries.
- Do not drop the battery. Avoid extreme shocks to the battery.
- Inserting a battery in the wrong way may result in explosion.

SPECIFICATIONS

CATEGORIES	DETAILS
Model No.	AN-MR19BA
Range of frequency	2.400 GHz to 2.4835 GHz
Output Power (Max.)	4 dBm
Channel	40 channels
Power source	AA 1.5 V, 2 alkaline batteries are used
Operational temperature range	0 °C to 40 °C

