

# OWNER'S MANUAL

## DVD Player

Please read this manual carefully before operating your set and retain it for future reference.

DP132

# Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the

product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing)

instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**CAUTION:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



**CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

## CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.




Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## Symbols

~	Refers to alternating current(AC).
==	Refers to direct current(DC).
	Refers to class II equipment.
	Refers to stand-by.
I	Refers to "ON" (power).
	Refers to dangerous voltage.



# Table of Contents

## 1 Getting Started

---

- 2 Safety Information
- 6 Introduction
  - 6 – About the “O” Symbol Display
  - 6 – Symbols Used in this Manual
  - 6 – Supplied Accessories
  - 6 – Playable Discs
  - 6 – Regional Code
  - 7 – File Compatibility
- 8 Remote Control
- 9 Front Panel
- 9 Rear Panel

## 2 Connecting

---

- 10 Connecting to your TV
  - 10 – Connecting Video / Audio cable
- 10 Connecting to an Amplifier
  - 10 – Connecting Audio cable

## 3 System Setting

---

- 11 Settings
  - 11 – Adjust the Setup Settings
  - 11 – [LANGUAGE] Menu
  - 11 – [DISPLAY] Menu
  - 12 – [AUDIO] Menu
  - 12 – [LOCK] Menu
  - 12 – [OTHERS] Menu

## 4 Operating

---

- 13 General Playback
  - 13 – Playing a Disc
  - 13 – Playing a File
  - 13 – On-Screen Display
- 14 General Operation
  - 14 Advanced Playback
    - 14 – Movie
    - 15 – Music
    - 16 – Photo

## 5 Troubleshooting

---

- 17 Troubleshooting

## 6 Appendix

---

- 18 Area Code List
- 19 Language Code List
- 20 Specifications
- 20 Trademarks and Licenses
- 21 Maintenance
  - 21 – Handling the unit
  - 21 – Notes on discs

1

2

3

4

5

6

# Introduction

## About the “⊘” Symbol Display

 
“⊘” may appear on your TV display during operation and indicates that the function explained in this owner’s manual is not available on that specific media.

## Symbols Used in this Manual


A section whose title has one of the following symbols are applicable only to the disc or file represented by the symbol.

<b>DVD</b>	DVD-Video, DVD±R/RW
<b>ACD</b>	Audio CDs
<b>MOVIE</b>	Video files contained in the USB/Disc
<b>MUSIC</b>	Audio files contained in the USB/Disc
<b>PHOTO</b>	Photo files contained in the USB/Disc


## Supplied Accessories

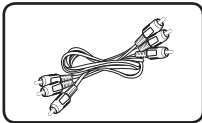

RCA Video/Audio cable  
(1)

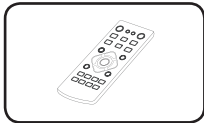 

Remote control (1)

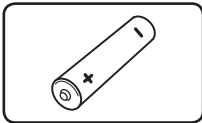 

Battery (1)

## Playable Discs

	DVD-VIDEO (8 cm / 12 cm disc) Discs such as movies that can be purchased or rented.
	DVD±R (8 cm / 12 cm disc) <ul style="list-style-type: none"><li>- Video mode and finalized only</li><li>- Supports the dual layer disc also</li><li>- DVD±R discs that contain Video, Audio or Photo files.</li></ul>
	DVD-RW (8 cm / 12 cm disc) <ul style="list-style-type: none"><li>- VR mode, Video mode and finalized only</li><li>- DVD-RW discs that contain Video, Audio or Photo files.</li></ul>
	DVD+RW (8 cm / 12 cm disc) <ul style="list-style-type: none"><li>- Video mode and finalized only</li><li>- DVD+RW discs that contain Video, Audio or Photo files.</li></ul>
	 Audio CD (8 cm / 12 cm disc)
	CD-R/RW (8 cm / 12 cm disc) <ul style="list-style-type: none"><li>- CD-R/RW discs that contain audio titles, Video, Audio or Photo files.</li></ul>

## Regional Code

This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or “ALL”.

## File Compatibility

### Overall

**Available File extensions:** ".avi", ".mpg", ".mpeg", ".mp3", ".wma", ".jpg", ".jpeg"

- The file name is limited to 20 characters.
- Depending on the size and number of the files, it may take several minutes to read the contents on the media.

**Maximum Files/Folder:** Less than 600 (total number of files and folders)

**CD-R/RW, DVD±R/RW Format:** ISO 9660

### Video Files

**Available resolution size:** 720 x 576 (W x H) pixels

**Playable subtitle:** SubRip (.srt/ .txt), SAMI (.smi), SubStation Alpha (.ssa/.txt), MicroDVD (.sub/.txt), SubViewer 2.0 (.sub/.txt), TMPlayer (.txt), DVD Subtitle System (.txt)

**Playable Codec format:**

"Xvid", "MPEG-1", "MPEG-2"

**Playable Audio format:**

"Dolby Digital", "PCM", "MP3", "WMA"

**Sampling frequency:**

within 8 to 48 kHz (MP3), within 32 to 48 kHz (WMA)

**Bit rate (MP3/WMA):**

within 8 to 320 kbps (MP3), within 32 to 192 kbps (WMA)

### Audio Files

**Sampling frequency:**

within 8 to 48 kHz (MP3), within 32 to 48 kHz (WMA)

**Bit rate:**

within 8 to 320 kbps (MP3), within 32 to 192 kbps (WMA)

### Photo Files


**Photo size:** Less than 2M recommended.

- Progressive and lossless compression photo image files are not supported.

### Notes of USB Device

- This unit supports USB device with FAT16 or FAT32 format.
- Do not extract the USB device during operation (play, etc.).
- A USB device which requires additional program installation when you have connected it to a computer, is not supported.
- USB device: USB device that supports USB1.1 and USB2.0.
- Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages.
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable, USB HUB, USB Multi-reader, or External HDD, the USB device may not be recognized.
- Some USB device may not work with this unit.
- Digital camera and mobile phone are not supported.
- USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.
 
# Remote Control

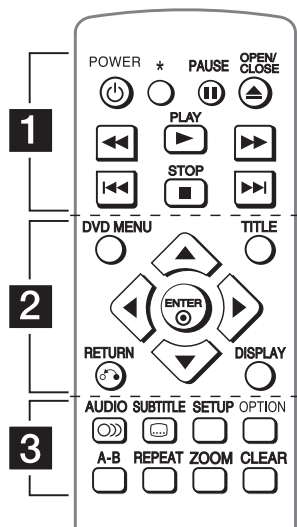

## 1

**POWER** (⏻): Switches the unit ON or OFF.

★: This button is not available.

**PAUSE** (⏸): Pauses playback.

**OPEN/CLOSE** (⏏): Opens and closes the disc tray.

**SCAN** (⏮/⏭): Searches backward or forward.

**PLAY** (▶): Starts playback.

**SKIP** (⏮/⏭): Goes to the next or previous chapter / track / file.

**STOP** (■): Stops playback.

## 2

**DVD MENU**: Accesses or exits the DVD menu.

**TITLE**: Accesses the disc's title menu, if available.

▲/▼/◀/▶: Navigates the menus.

**ENTER** (⊙): Confirms menu selection.

**DISPLAY**: Accesses or exits On-Screen Display.

**RETURN** (↶): Moves backward or exit the menu.

## 3

**AUDIO** (🔊): Selects an audio language or audio channel.

**SUBTITLE** (📄): Selects a subtitle language.

**SETUP**: Accesses or exits the setup menu.

**OPTION**: Shows OPTION menu.

**A-B**: Repeats a section.

 
**REPEAT**: Repeats a chapter, track, title or all.

**ZOOM**: Enlarges video image

**CLEAR**: Erases the password.


## Battery Installation

Remove the battery cover on the rear of the Remote Control, and insert R03 (size AAA) battery with + and - matched correctly.

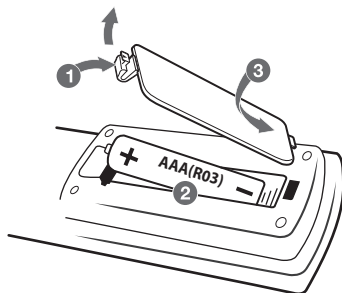



## Front Panel

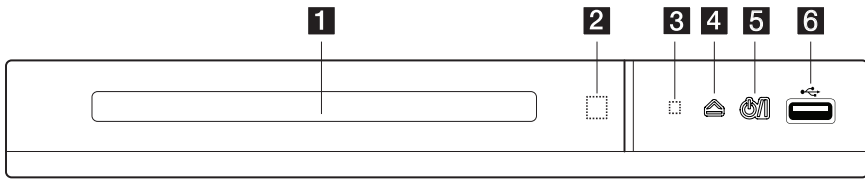 

**1** Disc Tray

**2** Remote sensor


**3** Power indicator

**4** △ (Open/Close)

**5** ⏻ / | (Power)

**6** USB Port

## Rear Panel

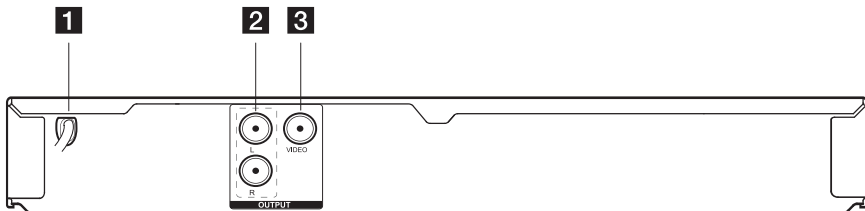 

**1** AC power cord


**2** AUDIO OUTPUT (Left/Right)

**3** VIDEO OUTPUT

## Connecting to your TV
 
### Connecting Video / Audio cable


Connect the VIDEO/AUDIO OUTPUT on the unit to VIDEO/AUDIO IN on TV with Video/Audio cable, such as VIDEO with yellow, AUDIO Left/Right with white/ red.

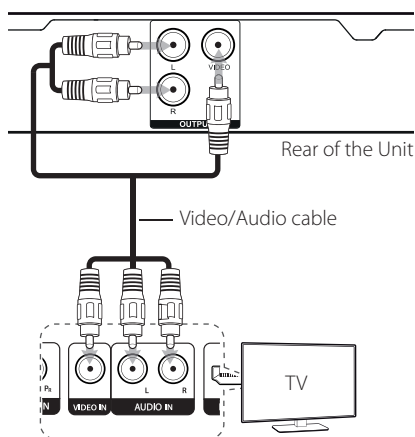

## Connecting to an Amplifier

### Connecting Audio cable

 Connect the AUDIO OUTPUT on the unit to 2CH AUDIO IN on amplifier with Audio cable, such as AUDIO Left/Right with white/ red.

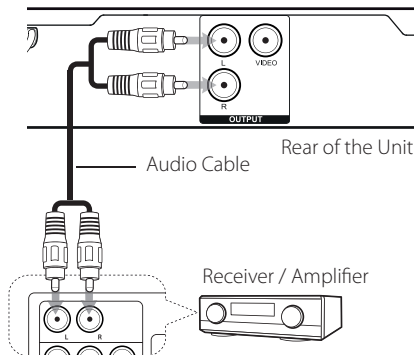

#### ! Note

- The DTS is not supported. In case of DTS audio format, audio is not output.
- To see the audio format of the current disc in the on-screen display, press AUDIO.

# Settings

When the unit is turned-on at the first time, you have to select the desired language. (Optional)

## Adjust the Setup Settings

You can change the settings of the unit in the [Setup] menu.

1. Press SETUP.
2. Use ▲/▼ to select the first setup option, and press ► to move to the second level.
3. Use ▲/▼ to select a second setup option, and press ► to move to the third level.
4. Use ▲/▼ to select a desired setting, and press ENTER (⊙) to confirm your selection.

## [LANGUAGE] Menu

### Menu Language

Select a language for the Setup menu and on-screen display.

### Disc Audio/Subtitle/Menu

Select a language for the Disc Audio/Subtitle/Menu.

---

**[Original]:** Refers to the original language in which the disc was recorded.

---

**[Other]:** To select another language, enter the corresponding 4-digit number using ▲/▼/◀/▶. For the language code list, refer to page 19.

---

**[Off]** (for Disc Subtitle): Turn off Subtitle.

---

## [DISPLAY] Menu

### TV Aspect

Select which screen aspect to use based on the shape of your TV screen.

---

**[4:3]:** Select when a standard 4:3 TV is connected.

---

**[16:9]:** Select when a 16:9 wide TV is connected.

---

### Display Mode

If you selected 4:3, you'll need to define how you would like widescreen programs and films to be displayed on your TV screen.

---

**[Letterbox]:** This displays a widescreen picture with black bands at the top and bottom of the screen.

---

**[Panscan]:** This fills the entire 4:3 screen, cropping the picture as necessary.

---

## [AUDIO] Menu

Set the player's Audio options according to various disc output type you use.

### DRC (Dynamic Range Control)

Make the sound clear when the volume is turned down (Dolby Digital only). Set to [On] for this effect.

### Vocal

Set to [On] only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc mix into normal stereo sound.

## [LOCK] Menu

Firstly, you have to create the 4-digit password on [Area Code] to use the LOCK menu.

### If you forget the password

Remove the disc and press SETUP and OPTION in order. Then input "2104" using ▲/▼/◀/▶ and ENTER(⊙). The password will be cleared.

## Rating

Select a rating level. The lower the level, the stricter the rating. Select [Unlock] to deactivate the rating.

## Password

Sets or changes the password for lock settings.

## Area Code

To input the standardized area code referring the Area Code List on page 18.

## [OTHERS] Menu

### B.L.E (Black Level Expansion)

Select On or Off to expand the black level or not. It just operates when TV system is set to NTSC.

### REC Bitrate

You can choose a bit rate for USB direct recording. Higher bit rate gives the better sound quality but uses more space on the USB Flash Drive. For USB direct recording, see page 15.

# General Playback

## Playing a Disc **DVD** **ACD**

1. Press OPEN/CLOSE (▲), and place a disc on the disc tray.
2. Press OPEN/CLOSE (▲) to close the disc tray  
For the most DVD-ROM discs, playback starts automatically.

For the Audio CD, select a track using ▲/▼/◀/▶ and press PLAY (▶) or ENTER (⊙) to play the Track.

To search the desired track, press OPTION, input the track number using ▲/▼/◀/▶ and press ENTER (⊙).

## Playing a File **MOVIE** **MUSIC** **PHOTO**







1. Press OPEN/CLOSE (▲) to place a disc on the disc tray, or connect the USB device.
2. Select a file using ▲/▼/◀/▶, and press PLAY (▶) or ENTER (⊙) to play the file.

RETURN (↶)	Changes between Disc and USB Device.
TITLE	Changes the mode. (Music → Photo → Movie)

## On-Screen Display **DVD** **MOVIE**

You can display and adjust various information and settings about the content.

1. While playback, press DISPLAY to show various playback information.
2. Select an option using ▲/▼.
3. Use ◀/▶ to adjust the selected option value.
4. Press DISPLAY to exit the On-Screen display.

 2/6	Current title number/total number of titles
 01/33	Current chapter number/total number of chapters
 C 0:01:44 T 1:51:39	Elapsed playing time Selected total time of current title/file
 1. ENG D D D 3/2. 1 CH	Selected audio language or channel
 1. KOR	Selected subtitle
 1/1	Selected angle/total number of angles

## General Operation

To	Do this
<b>Playback</b>	Press PLAY (▶)
<b>Pause</b>	Press PAUSE/STEP (⏸)
<b>Stop</b>	Press STOP (■)
<b>Skip to the next or previous</b>	Press ◀◀ or ▶▶ during playback.
<b>Fast forward or fast reverse</b>	Press ◀◀ or ▶▶ during playback.
<b>Resume playback</b>	<p>Press STOP (■) during playback to save the stopped point.</p> <ul style="list-style-type: none"><li>• Press STOP (■) once: Displayed ⏸ on the screen (Resume Stop)</li><li>• Press STOP (■) twice: Displayed ■ on the screen (Complete Stop)</li></ul>
<b>System Select</b>	You must select the appropriate system mode for your TV system. Remove any disc that might be in the unit, press and hold PAUSE/STEP (⏸) for more than five seconds to be able to select a system (PAL, NTSC, AUTO).
<b>Screen Saver</b>	Leave the unit in Stop mode for about five minutes, then the screen saver appears. If the Screen Saver is displayed for five minutes, the unit automatically turns itself off.
<b>Last Scene Memory</b>	Turn off the unit, then the unit memorize the lastly viewed scene even if disc is inserted again after removal or unit is turned on after off with same disc. (DVD/ Audio CD only)

## Advanced Playback

### Movie **DVD** **MOVIE**

To	Do this
<b>Display disc menu</b>	Press DVD MENU. (DVD Only)
<b>Play repeatedly</b>	<p>Press REPEAT during playback. To select an option to be repeated, Press REPEAT repeatedly.</p> <ul style="list-style-type: none"><li>• DVD: Chapter/ Title/ Off</li><li>• MOVIE: Track/ All/ Off</li></ul>
<b>Play frame-by-frame</b>	Press PAUSE/STEP (⏸) while Video file playback and press PAUSE/STEP (⏸) repeatedly to play Frame-by-Frame playback.
<b>Repeat a specific portion</b>	<p>Press A-B at the beginning of the portion you wish to repeat and again at the end of the portion. To return to normal playback, press A-B to select [Off].</p>
<b>Set the desired starting time of playback</b>	<p>Searches for the starting point of entered time code. Press DISPLAY then select clock icon. Press OPTION and enter a time using ▲/▼/◀/▶. Select [OK] then press ENTER(⏻). For example, to find a scene at 1 hour, 10 minutes, and 20 seconds, enter "11020" and press ENTER(⏻).</p>
<b>Change the subtitle code page (Video file only)</b>	<p>Press and hold SUBTITLE for 3 seconds during playback. The language code will appear. Press ◀/▶ to select another language code until the subtitle is displayed properly and then press ENTER (⏻)</p>

<b>Slow down the playing speed (Forward only)</b>	While the playback is paused, press ►► repeatedly to play various speeds of slow motion. Press PLAY (►) to continue play at normal speed.
<b>Watch an enlarged video</b>	<p>During playback or pause mode, press ZOOM repeatedly to select zoom mode.</p> <p>ZOOM: 100% → 200% → 300% → 400% → 100%</p> <p>▲/▼/◀/▶: Move through the zoomed picture.</p>

Music **ACD MUSIC**

To	Do this
<b>Play repeatedly</b>	<p>Press REPEAT during playback. To select an item to be repeated, Press REPEAT repeatedly.</p> <ul style="list-style-type: none"><li>• TRACK/ ALL/ (REPEAT Off)</li></ul>
<b>Create or delete your own program</b>	<p>Select the desired file in [List] and press ► to move to "X", and then press ENTER(B) to create the music lists.</p> <p>Select the undesired file in [Program] and press ► to move to "X", and then press ENTER(⊙) to delete programmed music lists.</p> <p>But, if you want to delete all from programmed lists, select [Clear All] and then press ENTER(⊙).</p>
<b>Display file information (ID3 TAG).</b>	<p>While playing a MP3 file containing file information, you can display the information by pressing DISPLAY repeatedly.</p> <ul style="list-style-type: none"><li>• Depending on the MP3 files, information may not be displayed on the screen.</li></ul>
<b>Record the Audio CD to USB device</b>	<p>Connect USB Flash Drive to the unit before recording.</p> <p>Insert an Audio CD, and then select a track using ▲/▼, DVD MENU.</p> <ul style="list-style-type: none"><li>• For track recording: Press AUDIO(⊞) in play, pause or resume stop mode.</li><li>• For all track recording: Press AUDIO(⊞) in complete stop mode.</li><li>• For program list recording: In stop mode, press AUDIO(⊞) after selecting a track on the program list.</li></ul>

**! Note**

- If you use this function, the “CD\_REC” folder will be created automatically in the USB Flash Driver then the music file(s) is saved in it.
- If you remove USB Flash Drive, turn off or open the unit while recording, it can make a malfunction.
- If the remaining space on the USB Flash Drive is insufficient, the recording is not available. To increase the free space, delete files in it using your PC.
- CD-G disc and Audio CDs encoded in DTS cannot be recorded.
- External HDD, Multi Card reader, Multi Partition USB, Locked device and MP3 player are not supported.
- You can set the recording speed pressing OPTION during USB direct recording.
  - X1 Track: While normal speed recording, you can listen to the music.
  - X4 Track: While 4X speed recording, you can not listen to the music.
- Recording format: MP3 file
- Encoding Bit rate: 128 Kbps / 160 Kbps / 192 Kbps / 256 Kbps / 320 Kbps

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible**  
**Respect copyrights**

**Photo PHOTO**

To	Do this
<b>View photo files as a slide show</b>	Use ▲/▼/◀/▶ to highlight (🖼️) icon then press ENTER (🔍) to start slide show.
<b>Adjust slide show speed</b>	You can change slide show speed using ◀/▶ when (🖼️) icon is highlighted.
<b>Rotate a photo</b>	Use ▲/▼ to rotate the photo in full screen counterclockwise or clockwise while viewing a photo in full screen.
<b>Watch an enlarged Photo</b>	While viewing a photo in full screen, press ZOOM repeatedly to select zoom mode.  ZOOM: 100% → 200% → 300% → 400% → 100% ▲/▼/◀/▶: Move through the zoomed photo.
<b>Listen to music during slide show</b>	You can listen to music during slide show, if the disc contain music and photo files together. Use ▲/▼/◀/▶ to highlight (🎵🖼️) icon then press ENTER (🔍) to start slide show.



# Troubleshooting

Symptom	Cause	Solution
No power.	The power cord is disconnected.	Plug the power cord into the wall outlet securely.
The power is on, but the unit does not work.	No disc is inserted.	Insert a disc.
The unit does not start playback.	An unplayable disc is inserted.	Insert a playable disc. (Check the disc type and regional code.)
	The rating level is set.	Change the rating level.
The remote control does not work properly.	The remote control is not pointed at the remote sensor on the unit.	Point the remote control at the remote sensor of the unit.
	The remote control is too far from the unit.	Operate the remote control closer to the unit.
Poor picture quality and sound distortion.	Fingerprints and dust are stained on the disc.	Wipe the disc from the center to out with a clean cloth. Do not use strong solvents. (alcohol, benzine, thinner, commercially available cleaners)
No picture.	The TV is not set to receive the signal from the unit.	Select the appropriate video input mode on the TV.
	The video cable is not connected securely.	Connect the video cable securely.
No sound.	The equipment connected with the audio cable is not set to receive the signal from the unit.	Select the correct input mode of the audio amplifier.
	The AUDIO options are set to the wrong position.	Set the AUDIO settings to the correct position.

# Area Code List

Choose an area code from this list.


Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Fiji	FJ	Monaco	MC	Singapore	SG
Argentina	AR	Finland	FI	Mongolia	MN	Slovak Republic	SK
Australia	AU	France	FR	Morocco	MA	Slovenia	SI
Austria	AT	Germany	DE	Nepal	NP	South Africa	ZA
Belgium	BE	Great Britain	GB	Netherlands	NL	South Korea	KR
Bhutan	BT	Greece	GR	Antilles	AN	Spain	ES
Bolivia	BO	Greenland	GL	New Zealand	NZ	Sri Lanka	LK
Brazil	BR	Hong Kong	HK	Nigeria	NG	Sweden	SE
Cambodia	KH	Hungary	HU	Norway	NO	Switzerland	CH
Canada	CA	India	IN	Oman	OM	Taiwan	TW
Chile	CL	Indonesia	ID	Pakistan	PK	Thailand	TH
China	CN	Israel	IL	Panama	PA	Turkey	TR
Colombia	CO	Italy	IT	Paraguay	PY	Uganda	UG
Congo	CG	Jamaica	JM	Philippines	PH	Ukraine	UA
Costa Rica	CR	Japan	JP	Poland	PL	United States	US
Croatia	HR	Kenya	KE	Portugal	PT	Uruguay	UY
Czech Republic	CZ	Kuwait	KW	Romania	RO	Uzbekistan	UZ
Denmark	DK	Libya	LY	Russian	RU	Vietnam	VN
Ecuador	EC	Luxembourg	LU	Federation		Zimbabwe	ZW
Egypt	EG	Malaysia	MY	Saudi Arabia			
El Salvador	SV	Maldives	MV	Senegal			
Ethiopia	ET	Mexico	MX				

# Language Code List

Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	French	7082	Lithuanian	7684	Sindhi	8368
Afrikaans	6570	Frisian	7089	Macedonian	7775	Singhalese	8373
Albanian	8381	Galician	7176	Malagasy	7771	Slovak	8375
Amharic	6577	Georgian	7565	Malay	7783	Slovenian	8376
Arabic	6582	German	6869	Malayalam	7776	Spanish	6983
Armenian	7289	Greek	6976	Maori	7773	Sudanese	8385
Assamese	6583	Greenlandic	7576	Marathi	7782	Swahili	8387
Aymara	6588	Guarani	7178	Moldavian	7779	Swedish	8386
Azerbaijani	6590	Gujarati	7185	Mongolian	7778	Tagalog	8476
Bashkir	6665	Hausa	7265	Nauru	7865	Tajik	8471
Basque	6985	Hebrew	7387	Nepali	7869	Tamil	8465
Bengali; Bangla	6678	Hindi	7273	Norwegian	7879	Telugu	8469
Bhutani	6890	Hungarian	7285	Oriya	7982	Thai	8472
Bihari	6672	Icelandic	7383	Panjabi	8065	Tonga	8479
Breton	6682	Indonesian	7378	Pashto, Pushto	8083	Turkish	8482
Bulgarian	6671	Interlingua	7365	Persian	7065	Turkmen	8475
Burmese	7789	Irish	7165	Polish	8076	Twi	8487
Byelorussian	6669	Italian	7384	Portuguese	8084	Ukrainian	8575
Chinese	9072	Japanese	7465	Quechua	8185	Urdu	8582
Croatian	7282	Kannada	7578	Rhaeto-Romance	8277	Uzbek	8590
Czech	6783	Kashmiri	7583	Rumanian	8279	Vietnamese	8673
Danish	6865	Kazakh	7575	Russian	8285	Volapük	8679
Dutch	7876	Kirghiz	7589	Samoan	8377	Welsh	6789
English	6978	Korean	7579	Sanskrit	8365	Wolof	8779
Esperanto	6979	Kurdish	7585	Scots Gaelic	7168	Xhosa	8872
Estonian	6984	Laotian	7679	Serbian	8382	Yiddish	7473
Faroese	7079	Latin	7665	Serbo-Croatian	8372	Yoruba	8979
Fiji	7074	Latvian, Lettish	7686	Shona	8378	Zulu	9085
Finnish	7073	Lingala	7678				

# Specifications

Power requirements	AC 110 - 240 V, 50 / 60Hz
Power consumption	9 W
Dimensions (W x H x D)	(250 x 37.5 x 203) mm
Net Weight (Approx.)	0.9 kg
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 90 %
Laser	Semiconductor laser
Signal system	PAL / NTSC
Bus Power Supply (USB)	5 V  200 mA
VIDEO OUTPUT	1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1
ANALOG AUDIO OUTPUT	2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1

Design and specifications are subject to change without prior notice.

# Trademarks and Licenses

All other trademarks are trademarks of their respective owners.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.



# Maintenance

## Handling the unit

### When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

### Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

### Cleaning the unit

To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

## Notes on discs

### Handling discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.

### Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

### Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center to out.

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

