



# FEATURES

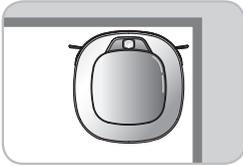

## Corner Master

By having adopted a brand new concept design that is appropriate for walls, the Robot Cleaner's cleaning performance is incredibly efficient.

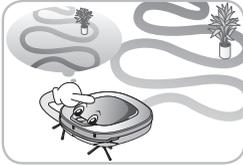


## Learning Mode

The Robot Cleaner is capable of memorizing the cleaning environment via its Smart Operation feature for smarter cleaning.



## Turbo Mode

In the Turbo mode, the Robot Cleaner operates the suction motor and the brushes at a greater speed giving cleaner results. When selected, the "Turbo" mode is automatically activated on carpets, which enables the Robot Cleaner to run more efficiently.

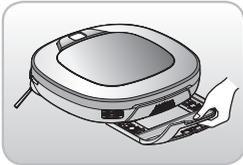

## Drawer Mop Plate (Option)

The "Drawer mop plate" makes it much easier for users to fit and remove the mop without having to turn over the device.




## My Space Mode

By commanding it to clean a particular area, the Robot Cleaner quickly cleans that desired area.



## Repeat Cleaning

The Robot Cleaner will continuously clean.

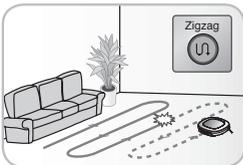

## Location Search Function

If the Robot Cleaner is moved from a spot while operating, the device will automatically search for the previous location and return to the spot from where it was interrupted.

# CONTENTS

## 1 BEFORE USING

---

- 2~6 Safety precautions
- 7 Included with product
- 8~9 Parts description - robot cleaner
- 10~11 Button functions – robot cleaner
- 12 Display status information
- 13 Before you start
- 14 Overview

## 2 METHOD OF USE

---

- 15 How to install the home station
- 16 How to turn the robot cleaner power supply on & off
- 17 How to start and stop cleaning
- 18~19 How to charge the battery
- 20~21 Cleaning modes
- 22~23 Auxiliary cleaning modes
- 24 Time setting
- 25 Scheduled cleaning
- 26 Mop cleaning (option)
- 27 Location search function
- 28~29 Smart diagnosis
- 30~51 Smart application function
- 52 Product info initialization

## 3 HANDLING METHOD AFTER USE

---

- 53 Cleaning the dust bin
- 54 Cleaning the dust bin filter
- 55 Cleaning the brush
- 56 Cleaning the sensors/charging terminals
- 57 Cleaning the side brush
- 58 Cleaning the ultra microfiber mop (option)

## 4 ADDITIONAL INFORMATION

---

- 59~61 Troubleshooting
- 62 Before you call for service

## 5 REFERENCE

---

- 63 Reference items
- 64 [IEC 62929 Standard] Setting for Cleaning Performance Test

# SAFETY PRECAUTIONS

The purpose of the safety precautions described below is for the user to use the product safely and correctly to prevent any unexpected risk of injury or damage.

## Basic safety precautions

After reading this manual, please keep it in an easily accessible location.



This is the safety alert symbol. This symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death.



### **WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



### **CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.




## **WARNING**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by LG Electronics Service Agent in order to avoid a hazard
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance must not be made by children without supervision.

# SAFETY PRECAUTIONS

## ! WARNING

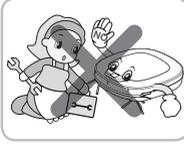


For your safety, do not remove the battery from the Robot Cleaner. If you need to replace the battery of the Robot Cleaner, take it to the nearest authorized LG Electronics service center or dealer for assistance.

Failure to follow this warning can cause fire or product failure.



Never use the Robot Cleaner with a battery and/or home station from any other product than the Robot Cleaner.

Doing so can cause fire or product failure.

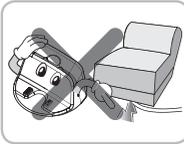


Make sure the power cord of the home station is not crushed under a heavy object or damaged by contact with sharp objects.

Failure to follow this warning can cause electric shock, fire or product failure. If the power cord is broken, do not plug it in. Take the product to an LG Electronics Authorized service repairer.




Do not use the Robot Cleaner when candles or fragile objects are placed on the floor.

Doing so can cause fire or product failure.

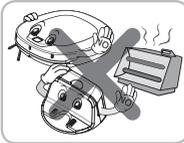

Do not place the home station and the Robot Cleaner near a heating device.

Doing so can cause product deformation, fire, or product failure.

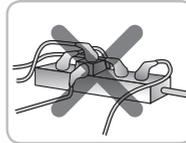


Always use a dedicated power outlet with a 10 amp rating.

If multiple appliances are connected to an outlet simultaneously, they can generate enough heat to cause a fire.



Do not force the power plug to bend. Do not use the power plug when it has been damaged or loosened.

Doing so can cause fire or product failure.

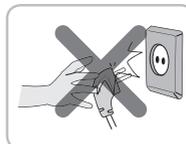


When pulling out the home station power plug, always pull it out by grabbing the plug, not the cord. When pulling out the power plug, do not touch the prongs with your fingers.

Doing so can cause an electric shock.



Do not touch the power plug with wet hands.

Doing so can cause electric shock.

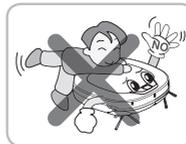

Do not allow children or pets to play with or rest upon the Robot Cleaner at any time. Do not use the Robot Cleaner while an object is hanging from it.

Doing so can cause injury or product damage.

# SAFETY PRECAUTIONS

## WARNING



**Do not spray or use inflammable materials, surfactants, or drinking water in the vicinity of the Robot Cleaner.**

Doing so can cause fire or product failure.

- \* Inflammable materials: gasoline, thinner, etc.
- \* Surfactant: detergent, articles for bath, etc.




**Turn the power supply off immediately if any abnormal sound, odor, or smoke is generated from the Robot Cleaner by removing it from the home station and turning off the main switch on the rear side of the unit.**

Failure to do so can cause fire or product failure.




**Do not insert any part of the body, such as a hand or foot, below the brush or wheels of the Robot Cleaner while in use.**

Doing so can cause injury or product damage.

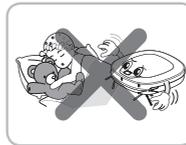

**Do not operate the Robot Cleaner in a room where a child is sleeping.**

Doing so can cause injury or product damage.

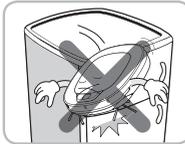

**Do not operate the Robot Cleaner on narrow and high furniture such as a wardrobe, refrigerator, desk, table, etc.**

Doing so can cause injury, product failure or damage which is not covered by the warranty.



**Do not leave Children or pets near the Robot Cleaner unsupervised.**

Doing so can cause injury or product damage.



**Do not activate the device on a floor that has more than a 10 degree incline.**

The device may not work properly.

 **This product is intended for indoor domestic home use and should not be used in mobile applications. It should not be used in commercial applications such as workshops or garages or around indoor swimming pools, etc.**

# SAFETY PRECAUTIONS

## ! CAUTION



**Frequently empty the dust bin and maintain its cleanliness.**

The dust collected in the dust bin can trigger allergies and may contain harmful insects. It should be cleaned after each use.



**Use the Robot Cleaner indoors only.**

Using it outdoors can cause product failure and irreparable damage to the unit.



**Close the cover of the dust bin on the main unit before starting cleaning.**

If the cover is not closed, it can cause injury or product damage.




**DO NOT use the Robot Cleaner around a banister, staircase or any other dangerous place.**

Doing so could cause injury or damage to the unit.



**In rare cases, the Robot Cleaner's brush can damage carpet. If this happens, immediately stop the cleaning operation.**

When a carpet has long tassels, the tassels can be damaged.

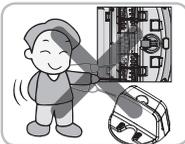

**Do not let the main unit and charging terminal of the home station come into contact with metallic objects.**

Doing so can cause product failure.



**Do not put water, detergent, etc. into or onto the Robot Cleaner.**

Doing so can cause product failure. Do not put any water or detergent on the Robot Cleaner. If liquids get inside of the Robot Cleaner, turn off the power supply and contact an LG Electronics sales agent or customer care center.



**Do not drop the Robot Cleaner or subject it to strong impacts.**

Doing so can cause injury or product failure not covered by the warranty.



**Do not expose the Robot Cleaner to cold temperatures (less than -5 °C) for a long period of time.**

Doing so can cause product failure.



**Remove any cables or string from the floor before starting.**

Cable or string can get tangled in the wheels of Robot Cleaner and cause product failure or the cord of an appliance can be disconnected.



**Make sure the Robot Cleaner is not put on a table or desk, with the power ON.**

It may result in an injury or damage to the product.




**Do not allow the Robot Cleaner to sweep up liquids, blades, thumb tacks, sharp objects or ashes, hot or cold, etc.**

These items can cause product failure or damage.



**Do not put sharp objects into the opening of the Robot Cleaner's ultrasonic sensors.**

Doing so can cause product failure.

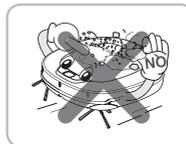

**Do not use the Robot Cleaner when the dust bin is completely full.**

Doing so can cause product failure.


# SAFETY PRECAUTIONS

## ! CAUTION




If the floor is wet or has wet spots, wipe them up before using the Robot Cleaner. Do not use the Robot Cleaner on a wet surface.

Doing so can cause product failure.

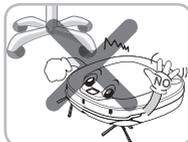

When the robot cleaner is operating, it may hit the chair leg, desk leg, table leg or other narrow pieces of furniture.

For quicker and better cleaning, place the dining chairs on top of the dining table.

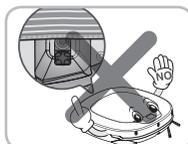


When attaching the mop, ensure that it is fitted correctly so that it does not block the lower camera sensor.

Blocking the bottom camera sensor may not allow the product to work correctly.



**NOTE:** Very low thresholds will allow the Robot cleaner to go over them and perhaps into an undesirable location. Make sure that all the doors of the rooms that are not to be cleaned are closed.

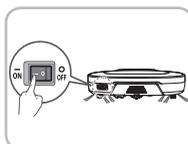

To save energy when the Roboking is not in use for longer periods, turn off the power switch, and turn on the power switch again just prior to using the Robot cleaner again.



**Tip** Check the following items before use:

- Empty the dust bin after each operation or prior to it filling up.
- Remove any cables or long strings from the floor.
- Remove any moisture from the floor before cleaning.
- Close the cover of the dust bin before cleaning.
- Remove fragile or unnecessary objects from the room to be cleaned. For example, remove expensive ceramics and valuables from the floor.
- Confirm whether the battery has sufficient power, and if it is low, recharge it.
- Close the doors of any room that you do not want the Robot Cleaner to enter. During cleaning, the Robot Cleaner may enter another room and continue cleaning.
- Do not use this product in the room where a child is sleeping alone. The child can be hurt or woken.
- Remove towels, foot towel or any other thin cloth from the floor as they can get caught by the brush.
- Before starting the device, it's better to remove carpets that are thicker than 20 mm as they may cause it to malfunction.
- Please close any balcony doors as the wheels may get stuck while cleaning.


# INCLUDED WITH PRODUCT



Robot Cleaner




Remote controller

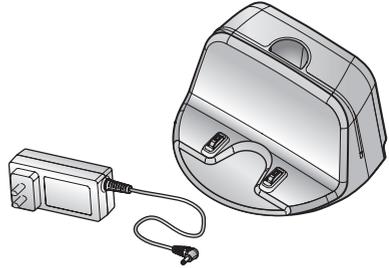


Home station

► Figures can be different from actual objects.

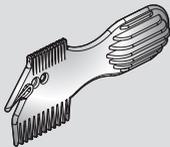


Cleaning Tool

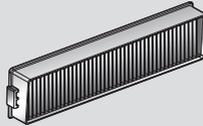

Dust bin filter (spare)  
(option)




DVD Manual

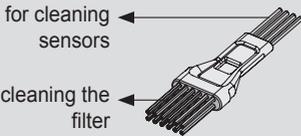

for cleaning  
sensors

for cleaning  
the filter

 Cleaning brush  
(It's on the dust bin cover)



Mop plate (option)




Ultra microfiber mop  
(2 pieces) (option)



Batteries for remote controller  
(2 units of AAA size)




Side brush (2 pieces)  
(option)

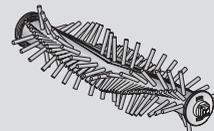


Pet Brush  
(option)

# PARTS DESCRIPTION - ROBOT CLEANER


## Plan view

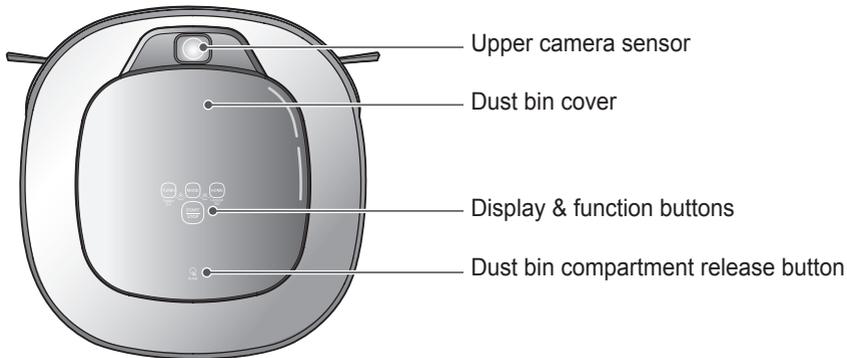


## Front view

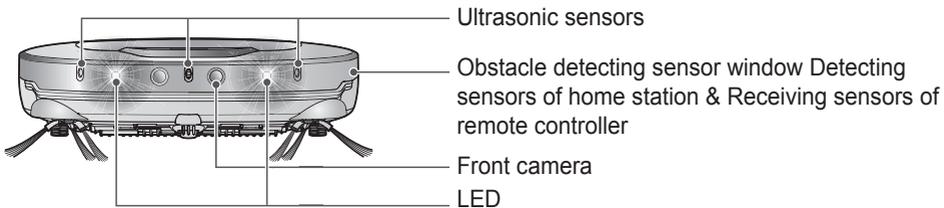

## Rear view

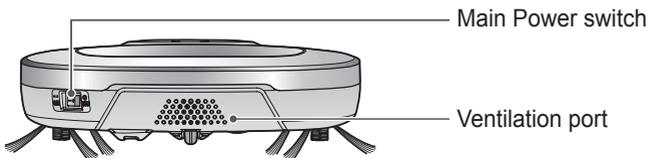


## Bottom view

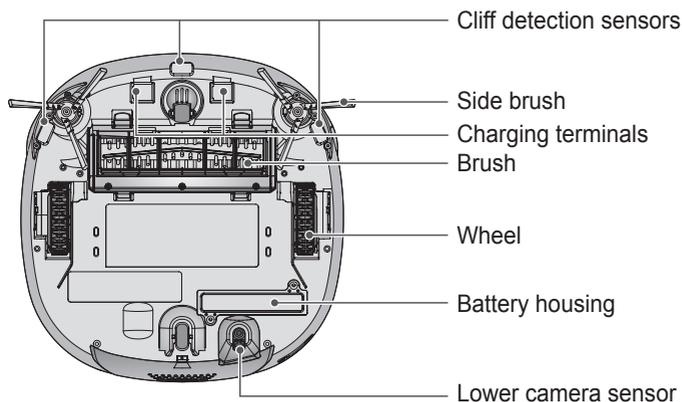


► Figures can be different from actual objects.

# PART DESCRIPTION – HOME STATION / DUST BIN

## Home station

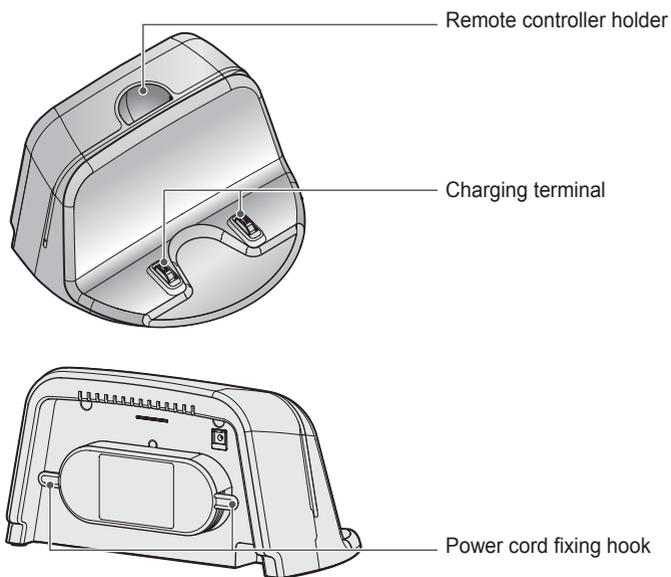


## Dust bin

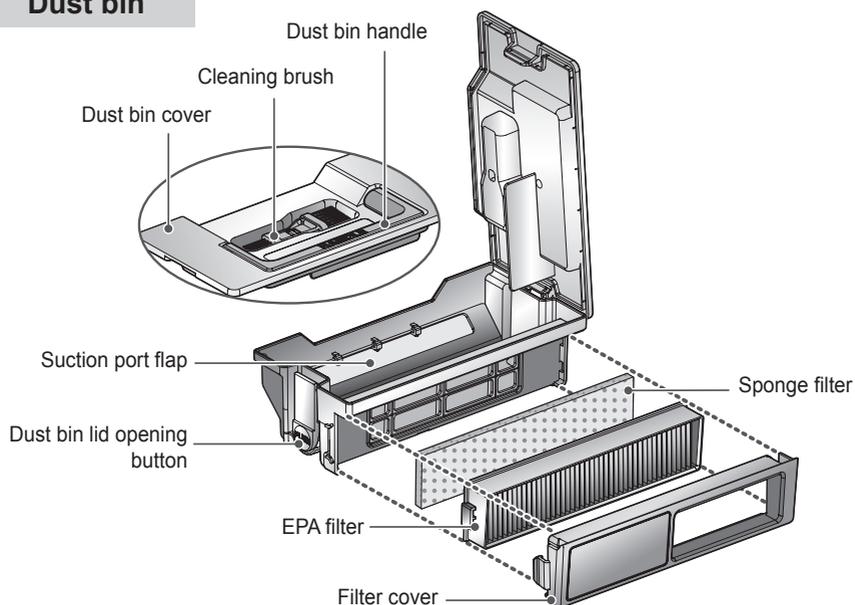

► Figures can be different from actual objects.

# BUTTON FUNCTIONS – ROBOT CLEANER

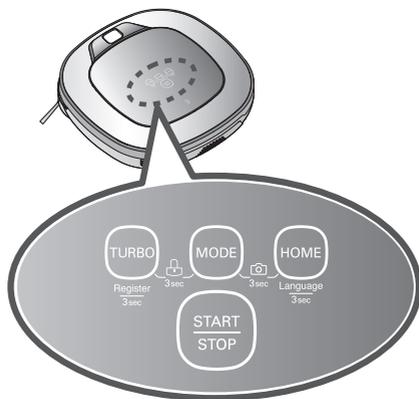

<b>TURBO</b>	<ul style="list-style-type: none"> <li>• If the button is pressed, 'Turbo Mode' will be set with a voice confirmation.</li> <li>• If the button is pressed whilst in 'Turbo Mode', it will be canceled.</li> </ul>
<b>START/STOP</b>	<ul style="list-style-type: none"> <li>• Used to turn the power on from Standby, start or stop cleaning.</li> <li>• If the button is pressed whilst the unit is powered ON, it will start cleaning.</li> <li>• If button is pressed during the cleaning, it will stop the cleaning.</li> <li>• If the button is pressed for about 2 sec. whilst the power is ON, the power will be returned to Standby.</li> <li>• If the button is pressed in 'Smart Diagnosis' mode, it will end the diagnosis.</li> </ul>
<b>MODE</b>	<ul style="list-style-type: none"> <li>• Used to change the clean mode setting.</li> <li>• If the machine is at the Home Station, 'Spot Clean' option is not available.</li> <li>• The 'My Space' mode can only be selected by remote control (when the Robot Cleaner is not on the home station).</li> </ul>
<b>HOME</b>	<ul style="list-style-type: none"> <li>• Used to return the Robot Cleaner back to the home station for charging.</li> <li>• If cleaning is finished or the battery is low, the Robot Cleaner will return to the Home Station by itself to recharge its battery.</li> </ul>
<b>BUTTON LOCK On/Off</b>	<ul style="list-style-type: none"> <li>• Pressing the 'Turbo' and 'Mode' button for 3 seconds will activate or deactivate the Lock function.</li> <li>• If 'Lock' is ON, a voice announcement "Key lock has already been set" will be heard each time a button is pressed.</li> </ul>
<b>Language Change</b>	<ul style="list-style-type: none"> <li>• Pressing the 'HOME' button for 3 seconds will change the language for the voice message.</li> <li>• You cannot use this function with the button on the remote controller.</li> </ul>
<b>Product registration (Wi-Fi)</b>	<ul style="list-style-type: none"> <li>• Press and hold down the Turbo button for 3 seconds to activate the registration mode with a voice message.</li> <li>• This mode is for registering the product to Robot Cleaner over Wi-Fi.</li> </ul>
<b>Front camera On/OFF</b>	<ul style="list-style-type: none"> <li>• Press and hold down the MODE and CHARGE buttons for 3 seconds to activate or deactivate the front camera.</li> <li>• Home Guard and Home View will not be available with the front camera disabled.</li> </ul>

# BUTTON FUNCTIONS – REMOTE CONTROLLER

## Power

Pressing this button will turn the power on from Standby or the power will be returned to Standby while the power is ON. (p17)

## Mode

Changes the cleaning mode. (p20)

## Directional button

This button enables Manual Operation and selection of an area in 'My Space cleaning' mode.

## Repeat

This button allows activating or deactivating 'Repeat Cleaning' mode. (p23)

## Schedule

Used to start cleaning at a scheduled time.  
Pressing the button for 3 sec. will cancel the scheduled cleaning.  
\* Schedule Setting/Cancel options are available only in 'Charge' mode. (p25)

## Clock

Used to set the current time indicated on the Robot Cleaner. (p24)



## Home

Used to recharge the Robot Cleaner by making it return to the Home Station. (p18)

## Turbo

Used to activate or deactivate 'Turbo' mode. (p23)

## Start/Stop button

Pressing the button will Start or Stop the Robot Cleaner, or confirm a cleaning schedule or time setting.

## My Space

Used to put the Robot Cleaner in 'My Space clean' mode. (p21)

## Mute

Used to activate or deactivate 'Mute' mode. (p12)

## Diagnosis


Used to run Smart Diagnosis. Available only when Robot Cleaner is recharging. (p28)



## Tip

- With the machine's power OFF, the Remote Controller will not work.
- To turn the power ON/OFF, use the 'START/STOP' button on the upper section of the Robot Cleaner or 'Power' button on the Remote Controller.
- The 'Mode', 'My Space' or 'Clock' button can only be used after stopping the Robot Cleaner or whilst it is charging on the Home station.

# DISPLAY STATUS INFORMATION

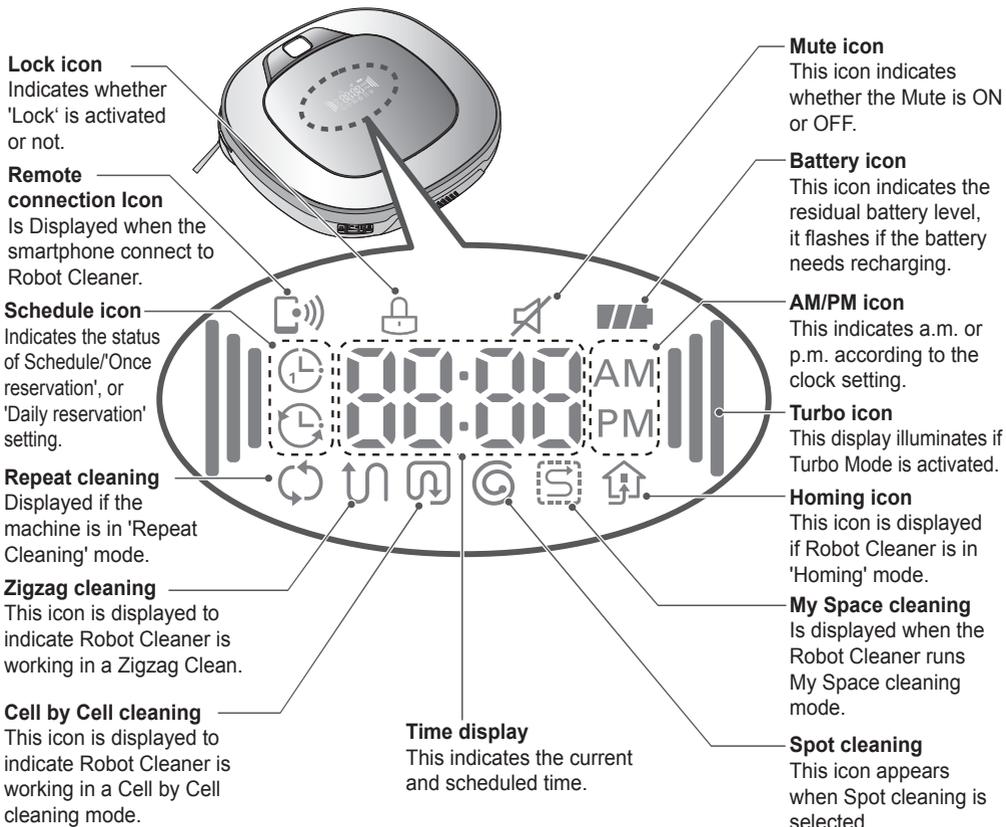

- Tip**
- Once the clean mode is selected (Zigzag or Cell by Cell) it will be remembered even if the power is OFF.
  - To cancel the reservation, please press the 'Schedule' button on the remote for 3 seconds while the Robot Cleaner is recharging.


# BEFORE YOU START

## Check these items before cleaning

- Do not use this device in a room where a child is left alone. The child could be injured.
- Remove fragile or unnecessary objects from the room to be cleaned. Especially, remove expensive ceramics and valuables from the floor.
- Close the cover of the dust bin compartment before cleaning.
- Remove any moisture that might be on the floor.
- Remove cables, strips, towels, mats etc. from the floor so they will not get tangled in the brushes.
- Confirm whether the battery charge is sufficient, and if it is low, recharge it.
- Empty the dust bin before or after each clean, or before it becomes full.
- Close the doors of any room that you do not want the Robot Cleaner to enter. During cleaning, the Robot Cleaner may enter another room and continue cleaning.
- When the mop is attached, Robot Cleaner will not be able to go over thresholds of 5 mm or higher. If you are not planning to use the mop for cleaning, remove the mop before using Robot Cleaner.
- Before starting the device, it's better to remove carpets that are thicker than 20 mm as they may cause it to malfunction.
- Please close any balcony doors as the wheels may get stuck while cleaning.

## Loading the remote controller battery

1. Open the battery cover by lifting the rear hook of the remote controller.
2. Insert two AAA batteries, checking for +, - nodes while loading.
3. Close the battery cover completely so that the batteries will not fall out.

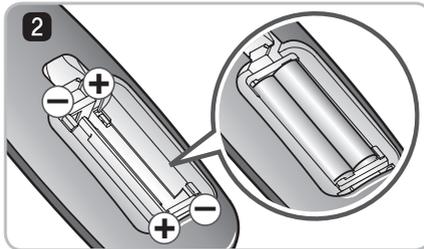

## Precautions while using the remote control


- Only press one button at a time.
- Do not drop or subject it to any impact.
- Do not store it near devices that give off heat, fire or hot air.
- Certain fluorescent lamps, such as the three band radiation lamp, can interfere with the activation of the remote control. Therefore, use it as far away as possible from such lamps.
- If the remote control is far from the Robot Cleaner when activated, it may fail to operate properly. Use the remote within 3 m of the Robot Cleaner if possible.

# OVERVIEW

1

## Install the home station. (p15)

Insert the power cord plug into an outlet and locate the station against a wall. If power is not supplied to the home station, the Robot Cleaner will not charge.

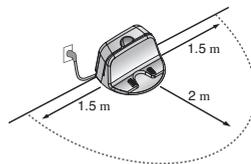


2

## Turn on the power supply of the Robot Cleaner. (p16)

Turn ON the power switch on the rear-left of Robot Cleaner, and press the 'START/STOP' button on the top or press the 'Power' button on the Remote controller.


\* If the power supply is not turned on, refer to page 16.

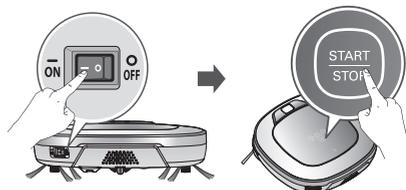

3

## Check the dust bin.


Check the cleanness of the dust bin before starting cleaning and close the dust bin compartment cover on the main unit.

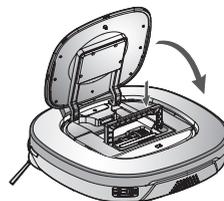

4

## Start cleaning. (p17)


Press the 'START/STOP' button (or '▶||' button on the Remote Controller) once again while the Robot Cleaner is turned on. You will hear an announcement of the cleaning mode and cleaning will begin once the Robot Cleaner has reversed and turned around.

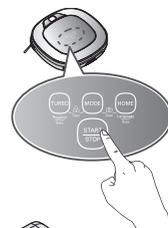

5

## Automatic charge. (p18~19)

The Robot Cleaner will self-diagnose and automatically return to the home station to recharge before the complete discharge of the battery. It takes approximately three hours to charge the battery.

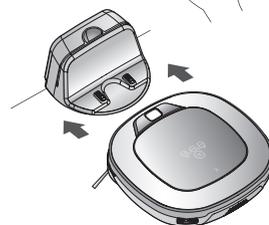

6

## Use the cleaning mode and auxiliary functions. (p20~26)

Use the buttons on Robot cleaner and Remote Controller to use each cleaning mode and supporting features. Cleaning modes include ZigZag, Cell by Cell, Spot, My space, and Repeat cleaning; supporting features include Manual, Scheduled and Microfiber Mop cleaning.





< Warning > When the Robot Cleaner is operated with the dust bin compartment lid left open, it can cause an injury or serious damage to the product.

# HOW TO INSTALL THE HOME STATION

## How to Install the Home Station


1. Position the home station against a wall on hard level flooring to prevent sliding during docking.

Remove objects within 1.5 m to the right and left side and within 2 m to the front.

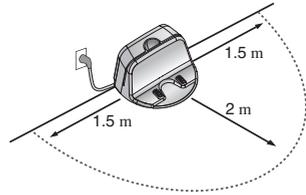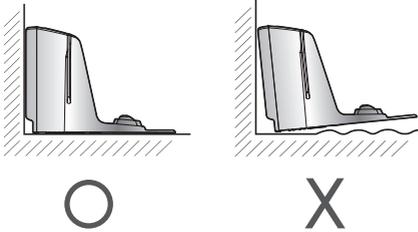


2. Plug the power cord into an outlet.


Wrap the remaining power cord around the fixed hook on the back side of the home station or along the wall surface so that the travel path of the Robot Cleaner will not be obstructed.

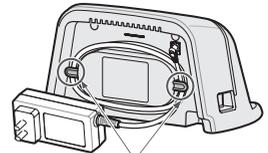


Fixing hook of power cord

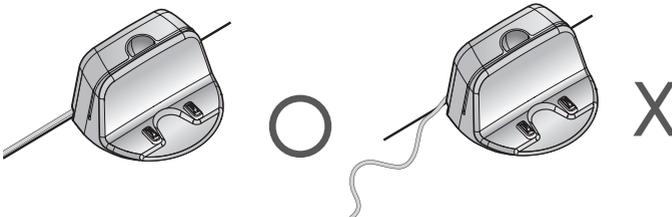

3. Fix the home station against the wall so that it does not move. Then turn on the power switch.

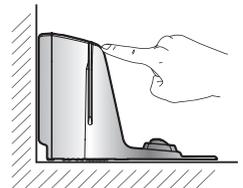

4. When the remote controller is not used, store it in the remote controller holder on the home station.

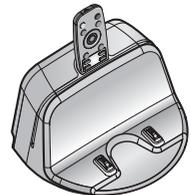

**Tip** • Always keep the home station plugged in when in use. If the home station is not plugged in, the Robot Cleaner will not return to the station to charge automatically.

**< Warning >** Do not operate the Robot Cleaner if the Home Station has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. To avoid electrical hazards, the cord must be replaced by LG Electronics, Inc. or a qualified service person.


# HOW TO TURN THE ROBOT CLEANER POWER SUPPLY ON & OFF

## Turning on the main power supply

Make sure the Power Switch is on at the rear-left of the Robot Cleaner.

If the power is OFF, turn the switch ON.


- \* When turning on the power switch, do not press or touch any button located on the upper section of the Robot Cleaner. Button operations can be delayed.
- \* Turn off the power switch if the Robot Cleaner is not used for a long period of time in order to protect the battery. The Robotic Cleaner cannot charge if the main switch is in the "OFF" position.

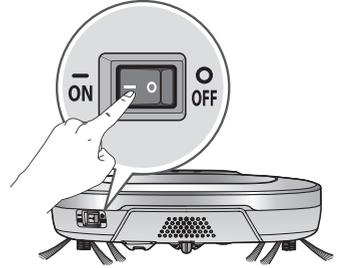

## Turning on from Stand By power.

With the Standby power of the Robot Cleaner OFF, press 'START/STOP' button for 1 second until a "Ting" sound is heard or press 'Power' button on the remote controller. In about 10 seconds, the power will be on and a melody will sound.

- \* If 10 minutes elapse without the Robot Cleaner having being given an active command after being turned on, the power will automatically return to Standby again.

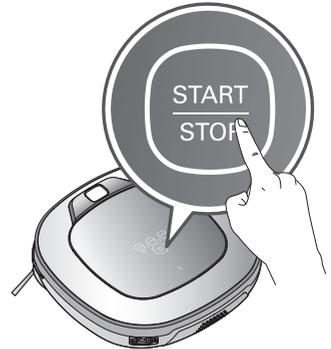

## Turning off the power supply

Press and hold the START/STOP button for two seconds or Power button on the remote controller while the Robot Cleaner is turned on. A melody will sound when the power is turned off.

-  **Tip**
- If the power cannot be turned on, do the following.
    - Turn the main power switch OFF, wait 5 seconds then ON again.
    - Press the 'START/STOP' button or press 'Power' button on the remote controller after the main power switch has been turned on again
    - If the power is not turned on or if there is no display but only the "Ting" sound, put the Robot Cleaner manually on to the home station as the battery may be flat.

# HOW TO START AND STOP CLEANING

## Using the buttons on the Robot Cleaner

After the Robot Cleaner main power switch is turned on, press the START/STOP button to begin cleaning. A melody will sound and cleaning will begin.

Press the START/STOP button during the cleaning cycle to stop cleaning.

\* When the 'START/STOP' button is pressed while the power supply of the Robot Cleaner is in Standby, the power will be turned on. Press the 'START/STOP' button one more time to start cleaning.



## Using the remote controller

After the Robot Cleaner is turned on press the '▶||' button on the remote controller. A melody will sound and cleaning will begin.

Press the ▶|| button during the cleaning cycle to stop cleaning.

\* When the power is off, press the 'Power' button on the remote controller to turn the power on.



\* During cleaning, collisions can happen when the sensor cannot detect objects because of their shape (Thin chairs and table legs, furniture corner). When this happens, the internal impact detecting sensor will react by using a backward motion.

\* If the Robot Cleaner is set to start cleaning at a location away from the home station, put the Robot Cleaner on a flat floor in order to prevent a malfunction of the obstacle detecting sensor. In addition, start cleaning from a location where there are no obstacles. For example, curtains or walls must be 30cm from the Robot Cleaner.

 **Tip** For best results:


- Briefly scan the area to be cleaned for big and small objects that will cause difficulty for the Robot Cleaner.
- If cleaning is started when the Robot Cleaner is at the home station, the device can rapidly be returned to the home station as the current home position has been accurately read.
- When the mop plate is installed, to prevent a 2<sup>nd</sup> contamination from the contaminated mop, it will not go over door sills of 5 mm or higher.

# HOW TO CHARGE THE BATTERY

## Automatic charging


The Robot Cleaner returns to the home station at the end of a cleaning cycle or when its battery is running low.

- \* If 10 minutes elapse without the Robot Cleaner moving or the battery is too low, the power will be automatically turned OFF.
- \* **Do NOT turn OFF the Main Power Switch as the battery will not be recharged. If the machine is returned manually with the Main Power Switch OFF, it announces an error message, "Main power switch on the back of the Roboking is turned off. Please turn the switch on."**
- \* In the event that the unit returns to the Home Station due to a low battery during the cleaning, cleaning will be started, after recharging, from the nearest place of the area which has not been cleaned before. (Page 19)
- \* If Robot Cleaner is unable to dock to the home station on its first attempt, it will try again until it docks successfully.
- \* When Robot Cleaner has completed all areas that it can clean, it will return to the home station even when the battery level is not low.

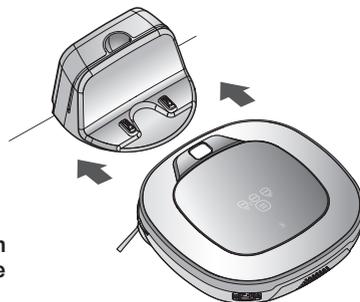

## Manual charging

You can manually charge the battery prior to using the Robot Cleaner for the first time or to charge the battery during cleaning.

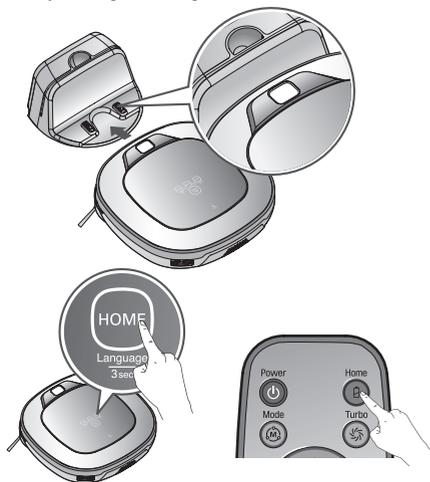

**Method 1.** Attach the Robot Cleaner to the home station by aligning to the front side of the home station. A melody sound will be generated along with an audio message to start charging.

- \* **If a voice message, "Main power switch on the back of the Roboking is turned off. Please turn the switch on." is announced repeatedly, then turn on the Main Power Switch.**

**Method 2.** When the 'HOME' button of the remote control or the Robot Cleaner is pressed, charging will be prompted by automatically generating a searching signal and returning the Robot Cleaner to the home station.

- \* **If the Robot Cleaner did not start cleaning from the home station or if the Robot Cleaner is manually charged by pressing the Home button, it may take slightly longer to find the home station.**
- \* If the Robot Cleaner is within 10 cm of the front of the charging terminal while the power is turned on from Standby, it will automatically be returned to the home station and charging will begin.

**Tip** Take the following precautions when using the home station:


- If foreign material is caught on the charging terminal, charging may not be activated. Wipe the terminal from time to time with a dry cloth after the power plug is disconnected.(p50)
- To prevent electric shock or damage to the home station, do not touch the charging terminal with any metallic objects.
- To avoid fire or electric shock, never disassemble or modify the home station.
- Do not place the Robot cleaner, the home station or power plug near a heating source.

# HOW TO CHARGE THE BATTERY

## Remaining Battery Charge Indicator

The Battery level is indicated on the Status Display, as follows.

- If recharging is in progress, the Battery Level indicator flashes showing the battery charge status level.
- If recharging is complete, only the 'Battery' and 'Clean Mode' icons are displayed to save the energy.
- Upon the need for recharging, only the first level of the Battery charge level indicator will be on and flashing.

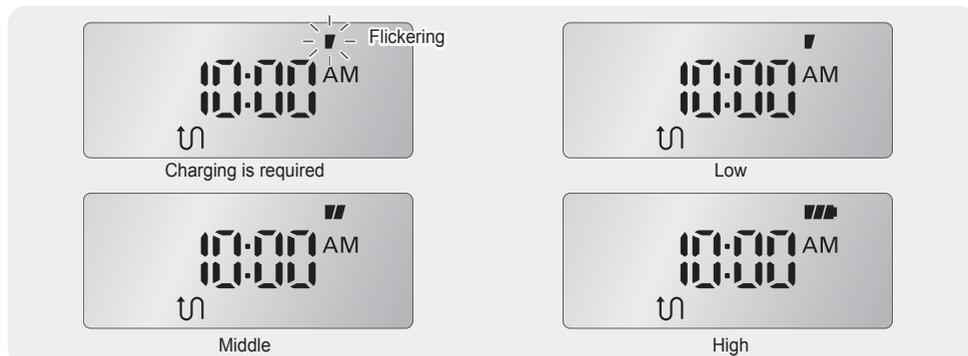

\* If Robot Cleaner goes back to the Home Station, in need of a charge during the cleaning mode, the Cleaning mode indicator will continue to flash during charging to indicate that cleaning was disrupted as the battery required charging.

- When the 'Clean Mode' lamp continues to flash after recharging is complete, Robot Cleaner will then resume cleaning the areas which were not previously completed.
- Pressing the 'Start' button on the Remote Controller or 'Start/Stop' button on main unit whilst it is recharging, with the 'Clean Mode' lamp flashing, will also manually force the Robot Cleaner to find and clean the uncovered areas.
- Pressing the "Start" button on the remote control or the "Start/Stop" button on the Robot Cleaner after the Charging has completed will make the Robot Cleaner start to clean from the beginning again.

The status indicators show the different pending conditions during charging mode.



In the case of no existing area to be cleaned after charging.




In the case of an existing area that the Robot Cleaner will resume cleaning when charging has completed. (flashing Cleaning indicator)

## If the Battery is Not Charging

### Check 1:

If the battery is not charging even when the Robot Cleaner is attached to the home station, check the following items.

- Turn the power switch on the rear-left of the Robot Cleaner off once and then on again.
- Check the power lamp of the home station.
- Wipe the terminals on the home station with a dry cloth. (p50)

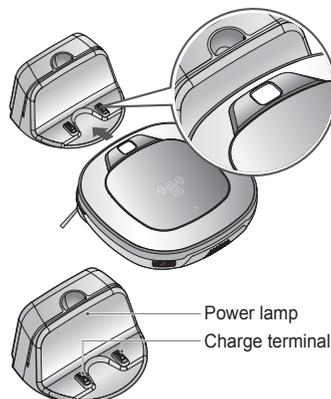

# CLEANING MODES



## Zigzag Cleaning

In 'Zigzag' mode, Robot Cleaner repeats a zigzag operation to clean each and every spot in the cleaning area.

If you need to quickly clean an area choose 'Zigzag' mode.

Press 'Mode' button on Remote Controller or main unit to select 'Zigzag' mode and press '▶||' button.

\* Factory release default setting is 'Zigzag'.

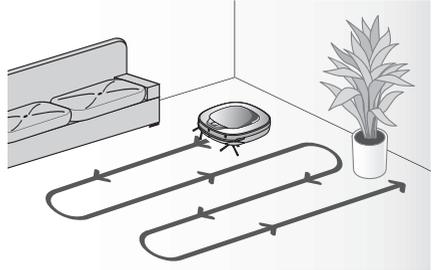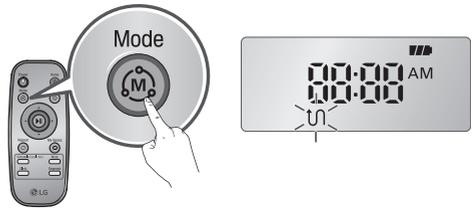

## Cell by Cell Cleaning

In 'Cell by Cell' mode, Robot Cleaner cleans the area by dividing it into rectangular spaces. For meticulous cleaning, select this mode.

Press 'Mode' button on Remote Controller to select 'Cell by Cell' mode and press '▶||' button.



### The 1st stage:

The maximum outline of 3 m x 3 m of cleaning area will be cleaned. (The size of the outline may vary in accordance with the shape of the area to be cleaned.)

### The 2nd stage:

The 2nd stage of Cell by Cell cleaning engages a Zigzag mode automatically.

When the 1st, and 2nd stages are completed, the cleaned area will be cleaned again through the repetition of the above cleaning method as the device advances to the next part of cleaning area.

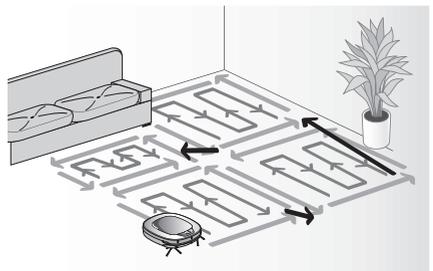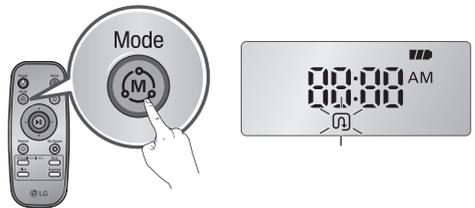

### Tip

- Once set up, the cleaning mode(Zigzag, Cell by Cell) setting will be maintained even after the power supply is turned off.
- During operation, if a mode change is required, press the ▶|| button and then select the mode. Cleaning will then start from the beginning.


# CLEANING MODES

## My Space Cleaning


Pressing 'My Space' on the Remote Controller will set the My Space cleaning mode with a voice message. For cleaning of particular spaces, select this mode.

### The 1st stage:

Use the Remote Controller to manually set the parameters of each cleaning block.

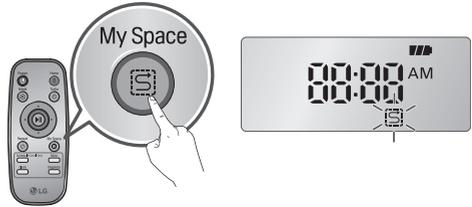


\* This cleaning mode will be accepted when the distance of the start and end position is less than 1 m in area.

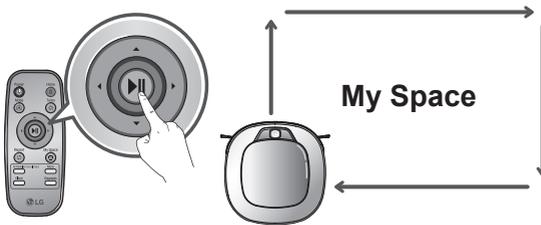

### The 2nd stage:

Pressing the '▶||' button will then make the Robot Cleaner clean the 'manually outlined area by itself.

- \* Upon failure to correctly outline a zone, a voice will announce, which says "Area does not meet the specified conditions. Please continue to make specified area for cleaning process."  
Use the Remote Controller to assign a zone, again.
- \* Upon completion of cleaning for all selected areas, the Robot Cleaner will resume the cleaning mode (Zigzag or Cell by Cell) which it was last set to.

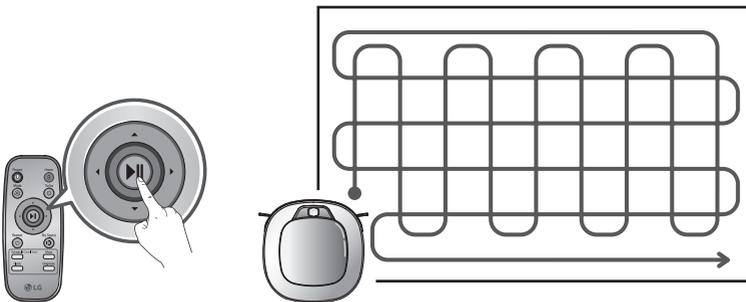

- ✓ **Tip**
  - While recharging, you cannot activate 'My Space' mode.
  - To change the cleaning mode while the Robot Cleaner is in operation, press ▶|| button first then select a cleaning mode. The cleaning will then start from the beginning.


# AUXILIARY CLEANING MODES

## Manual Cleaning

By pressing a direction key on the Remote Controller, you can move the Robot Cleaner manually.

Robot Cleaner will clean the area, by pressing the forward/backward/left/right buttons accordingly on the keypad of the remote control.

While in 'Manual' mode, the robot cleaner will run into obstacles placed behind it if the backward key on the remote is pressed or held down.

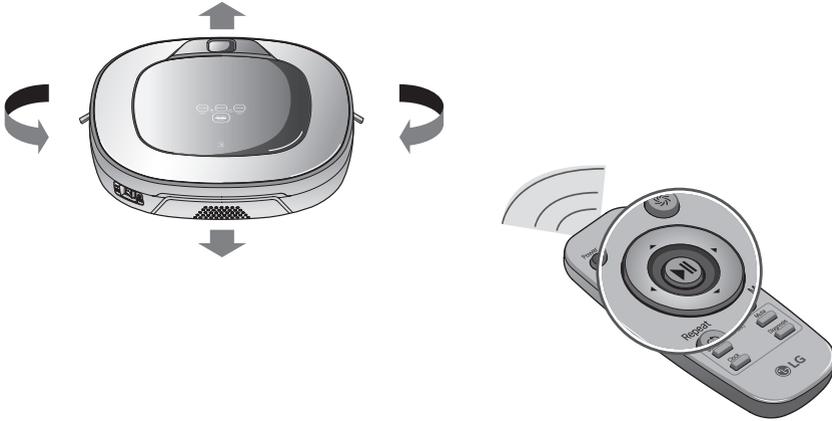


## Spot Cleaning

Is best used to clean certain parts of the house.

Press 'Mode' button on the Remote Controller to select 'Spot' mode, which will then indicate on the Status Display, then press the **▶||** button, then Robot Cleaner will start Spot cleaning an area of 1.5 m in diameter around it.

\* While recharging, 'Spot' cannot be selected.

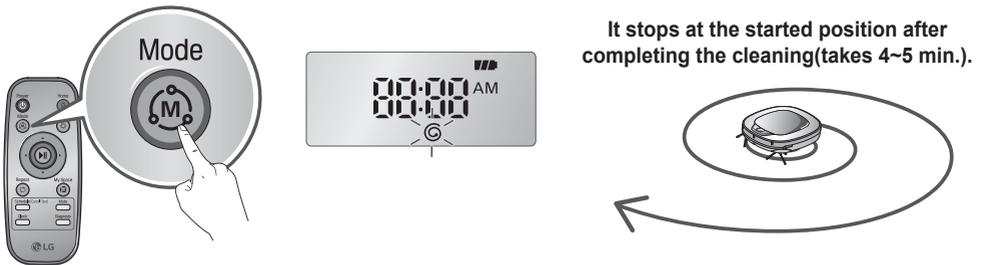

It stops at the started position after completing the cleaning(takes 4~5 min.).

# AUXILIARY CLEANING MODES

## Turbo Mode


Pressing the 'Turbo' button on the Remote Controller or main unit will activate 'Turbo' mode, with a voice message.

While in 'Turbo' mode, pressing the same button will cancel 'Turbo' mode, with a voice message.

In 'Turbo' mode, Robot Cleaner runs more intensely for a powerful clean. Turbo mode will reduce the battery duration.

### \* <Turbo Mode (Floor Master Function)>

'Turbo mode' will automatically operate when the Robot Cleaner cleans carpets.

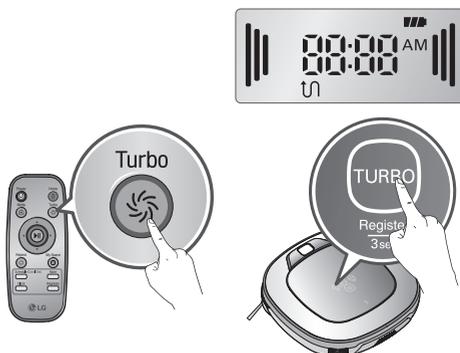


## Repeat Mode

Pressing 'Repeat' button on Remote Controller will activate 'Repeat' mode, with a voice message.

While in 'Repeat' mode, pressing the same button will cancel 'Repeat' mode, with a voice message.


In 'Repeat' mode, Robot Cleaner repeats the cleaning in progress.

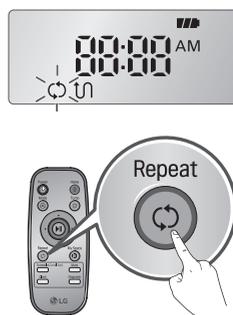

## Learning Mode

The Robot Cleaner is capable of memorising the cleaning environment through its Learning mode for an intelligent cleaning operation.

\* 'Learning Mode' is available only when the machine starts cleaning from the Home Station.

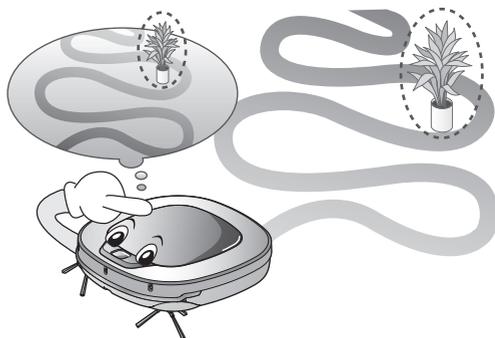

### Tip

#### • Precautions with Smart Operation

- This Learning mode enables memorizing locations with obstacles to help bypass them. Robot Cleaner memorizes every aspect of the environment it was subjected to from when it started cleaning from the Home Station to the moment it finishes its course.
- Robot Cleaner learns new conditions again when the location of Home Station has been changed.
- If the learning mode is accepted, a voice message will say "Environment has been studied by learning process."

# TIME SETTING

You can set or change the current time on the Robot Cleaner.

Pressing 'Clock' button on the Remote Controller, when the Robot Cleaner is in standby mode, will start the clock setting mode.



		<p>Set the hour by using '▲▼' buttons on Remote Controller.</p>
<p>Select by using '◀▶' buttons on the Remote Controller.</p>		<p>Set the minutes using '▲▼' buttons on Remote Controller.</p>
<p>The function can be heard through the voice guide.</p>		<p>Set the AM/PM using '▲▼' buttons on Remote Controller.</p>
		<p>Pressing 'Clock' or '▶▶' button on Remote Controller will complete the time setting process.</p>



## Tip

- Any scheduled cleaning will be activated based on the time on the Robot Cleaner. You must set the clock before setting scheduled cleaning.
- If there is no input for 10 seconds, the clock setting is canceled.

# SCHEDULED CLEANING

You can schedule cleaning so that the Robot Cleaner starts cleaning at a scheduled time. Pressing 'Schedule' button on Remote Controller, only when the Robot Cleaner is recharging, will start the scheduled cleaning setting.



Setting/Canceling the schedule cleaning is only possible when the unit is recharging on the home station


		<p>Select 'Once reservation' or 'Daily reservation' option by using '▲▼' buttons on Remote Controller. A voice message will confirm the schedule.</p>
<p>Select a setting by using '◀▶' buttons on Remote Controller.</p>		<p>Set the hour by using the '▲▼' buttons on Remote Controller.</p>
<p>'Once reservation'</p>		<p>Set the minutes by using the '▲▼' buttons on Remote Controller.</p>
<p>'Daily reservation'</p>		<p>Set the AM/PM using the '▲▼' buttons on Remote Controller.</p>
		<p>Pressing 'Schedule' or '▶▶' button on Remote Controller will then complete the scheduling process.</p>

- Tip**
- When the scheduled time comes up, Robot Cleaner will start cleaning by itself.
  - Scheduled cleaning can only be set when the Robot Cleaner is recharging.
  - While recharging, by pressing the 'Schedule' button on the Remote Controller for 3 seconds will cancel the set schedule.
  - If there is no input when setting the schedule time within 10 seconds, the setting is canceled.

# MOP CLEANING (OPTION)

By attaching the ultra microfiber mop, you can effectively use the Robot Cleaner to remove dust on hard floor surfaces.


When the mop plate is attached, the Robot Cleaner will not climb on to carpets or over thresholds, in order to prevent transferring dirt from the mop.

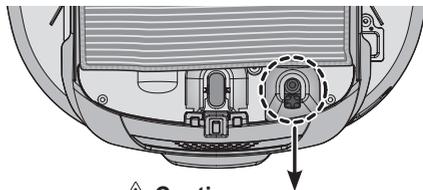

**⚠ Caution**  
Do not cover the bottom camera sensor by mop.


For mop cleaning, mount the mop and mop plate to the Robot Cleaner according to the following instructions:

1. Attach the ultra microfiber mop to the Velcro of the mop plate as shown in the figure.

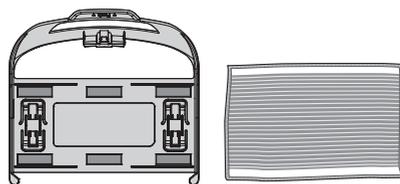


2. Firmly slide the Mop Plate into the furrows until you hear a 'click' sound.

\* Note that, if the Mop Plate is not secured correctly, it may separate during the cleaning.

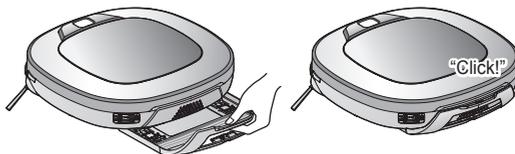

3. It is essential that the fixing hooks on the Mop Plate align correctly on to the fixing grooves on the underside of the cleaner.

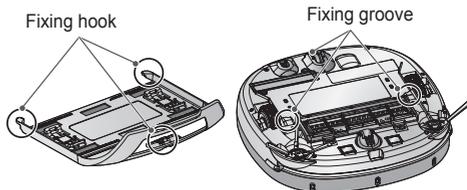

## Tip


- To avoid odors, wash any foreign material or dust off the mop after cleaning is completed.
- To avoid staining floors, do not use the ultra microfiber mop to clean when dirt is contaminated with liquids such as coffee or ink.
- To avoid damage to carpets from the Velcro or dirt transfer from the mop, do not attempt to clean the carpet while the mop plate or mop is attached.
- Keep the ultra microfiber mop dry. Do not use it on wet surfaces.  
If there is moisture on the floor, it can interfere with the navigation and damage the unit.
- Smart Diagnosis feature is not available, when the Mop Plate is attached.

# LOCATION SEARCH FUNCTION

The Robot Cleaner remembers its location while cleaning.

If the user moves the Robot Cleaner while it is operating, it will search for the location it was moved from by using its navigational location search function before continuing to clean.

\* The navigating function will be activated after the Robot Cleaner adequately recognizes the cleaning environment.

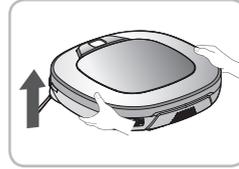

Change location




When the location search function is activated, the cleaning mode of the status indicator will flash

## Manual Relocation.

1. With the power off, locate the Robot Cleaner near the location where it was originally moved from.


\* The location search is more effective when the Robot Cleaner is closer to the location where it was moved from.

\* If it is moved from its original cleaning position by more than 1 m, it becomes difficult for the Robot Cleaner to search for its previous location.

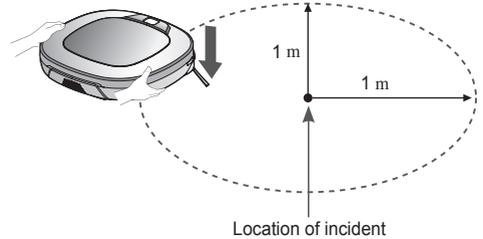


2. Press the START/STOP button on the Robot Cleaner or  button on the remote controller. Robot Cleaner will then start the location search function along with an audio guide.

\* When the location search is successfully completed, it will continue cleaning from where it was moved. If the location search fails, it will start again from the beginning.

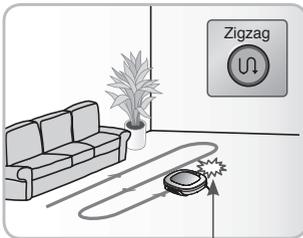

Location of incident

To find exact location, please step away from the Roboking.

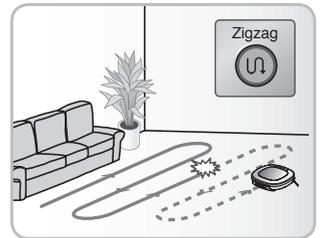

## Tip

- If the power is turned off after the location search function is set, the location search function will be canceled.
- Location search will be more effective when the Robot Cleaner is closer to the location where it was moved from.

# SMART DIAGNOSIS

Robot Cleaner uses this Smart Diagnosis feature to run a self-diagnosis.

If any irregularity is found from the diagnosis, please contact the local LG Electronics service center.

\* **During Smart Diagnosis, the Robot Cleaner will move about within a 50 cm radius. So, make sure no objects are in the way within a 1 m radius around the Home Station, before starting Smart Diagnosis.**

1. Smart Diagnosis will operate when the main power switch of the Robot cleaner and the Home station are turned on, and the unit docked on the Home station.

\* **Smart Diagnosis is only possible when the Robot Cleaner is attached to the Home Station.**



2. Press 'Diagnosis' button on the Remote Controller, then the process will start with a voice message which says "Roboking smart diagnosis will be started. Please step away and clear around 1 meter around the home station."

\* **If the Mop Plate is attached, the process will not be activated.**



3. When the Smart Diagnosis has successfully finished, Robot Cleaner will return back to the Home Station and inform the result through a voice message. After the voice message, pressing the 'HOME' button on the Remote Controller or main unit will allow the voice message to be repeated. To terminate the diagnosing process, press the '▶||' button on the Remote Controller or main unit.

\* **After the Smart Diagnosis voice message, the Robot Cleaner will start recharging after 1 minute.**

\* **If an error is detected with any of the Sensors whilst in Smart Diagnosis, a voice message will announce, and the unit will not return to the home station.**



-  **Tip**
- Be careful not to touch the Robot Cleaner or disturb its operation before Smart Diagnosis is complete. If it is accidentally interrupted, turn the main power switch OFF then ON again to resume the diagnosis.
  - Smart Diagnosis will not be activated in each of the following cases. In each case, check the problem and try again.
    - Robot Cleaner is detached from Home Station
    - Battery level is insufficient
    - No Dust Bin Filter is fitted.
    - Mop Plate is attached

# SMART DIAGNOSIS


If a voice message is announced after Smart Diagnosis, refer to the following table to take proper actions.

Voice message	Measures (for reference)
Roboking smart diagnosis will be started. Please step away and clear around 1 meter around the home station.	Clear any object within a 1 m radius around Home Station, and stay back until the diagnosis is complete.
Smart diagnosis can start when it is being charged. Please dock Roboking to the home station to charge.	Move Robot cleaner to the Home Station to recharge it.
No defect found during diagnosis.	
Diagnosis mode cannot be operated due to a low battery. Please try again after the battery is charged.	Try the Smart Diagnosis again after recharging the battery.
Please check if the dust bin is installed with the filter.	Open the Dust Bin Cover and examine the bin.
Charging cannot be done due to a problem in infrared sensor.	Run Smart Diagnosis again and, if the same message is announced, contact an LG Electronics service center.
Charging cannot be done due to a problem in ultrasonic sensor.	Run Smart Diagnosis again and, if the same message is announced, contact an LG Electronics service center.
Charging cannot be done due to a problem in the cliff detection sensors on the bottom. Please clean the sensors.	Clean the three Cliff Sensors on the bottom at the front of the unit.
Please wipe the lower camera sensor on the right bottom of the Roboking.	Clean the lens of Camera Sensor on the bottom-right.
Please wipe the obstacle detecting sensor window on the left and right side of the Roboking.	Clean the lens of the Obstacle Sensors on both the left and right hand sides.
A problem has been found on the Gyro Sensor.	Run Smart Diagnosis again and, if the same message is announced, contact an LG Electronics service center.
Please check for dirt on the left wheel.	Check for foreign materials on the left wheel.
Please check for dirt on the right wheel.	Check for foreign materials on the right wheel.
A problem has been found on the left wheel sensor.	Run Smart Diagnosis again and, if the same message is announced, contact an LG Electronics service center.
A problem has been found on the right wheel sensor.	Run Smart Diagnosis again and, if the same message is announced, contact an LG Electronics service center.
Please check the brushes for obstructions.	Check for any foreign material stuck in the Brush.
A problem has been found in the suction motor.	Run Smart Diagnosis again and, if the same message is announced, contact an LG Electronics service center.
A problem has been found in the acceleration sensor.	Run Smart Diagnosis again and, if the same message is announced, contact an LG Electronics service center.
In order to listen to the smart diagnosis result again, please press the charging button. To stop, please press the stop button.	If you need to repeat the diagnosis result, press the 'Home' button, or press '▶  ' button to finish the diagnosis.
Smart diagnosis mode will be turned off.	Please try smart diagnosis again after turning the main power switch off and on from the back of Roboking. If the problem continues, please contact LG Electronics customer care.
Smart Diagnosis mode cannot be operated with mop plate being attached. Please try again after removing it.	Run Smart Diagnosis again after removing the Mop Plate.
Smart diagnosis has failed to operate. Please try it again after turning off and on the main power switch on the back of the Roboking.	Turn the main power switch OFF and then ON again to resume the diagnosis. Do NOT touch the robot or disturb its operation until the diagnosis is complete.

# SMART APPLICATION FUNCTION

You can control the Robot Cleaner from your smartphone.  
The "LG Roboking" application provides the following functions:

- **HomeView, HomeGuard, Cleaning Diary, Schedule Cleaning, Smart Diagnosis**

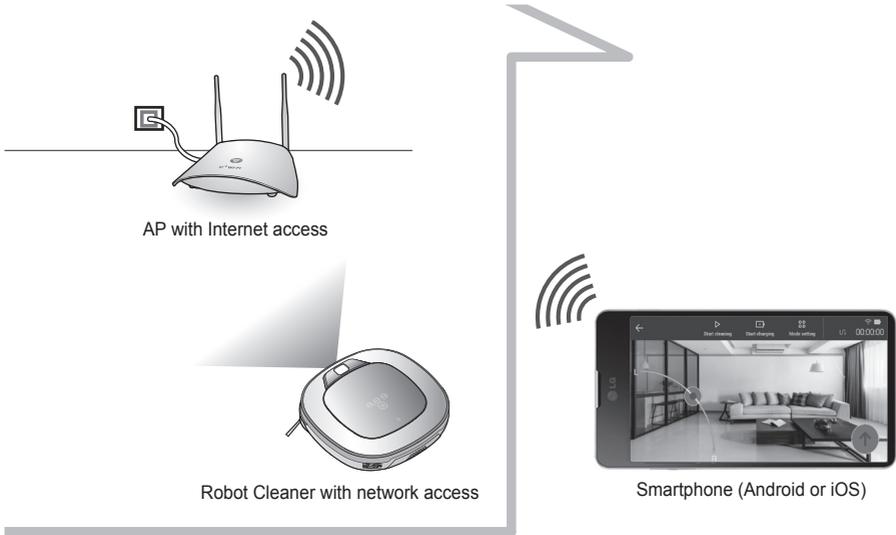

## What to check before using the product

Some models and OS versions may restrict the use, or render the application inoperable from the smartphone.

Special characters in the ID of the router may hamper product connection or registration.

### Recommended specification

- Android: Higher than 4.1.2(Jelly Bean)
- iOS : Higher than iOS 8 (iPhone5)
- Screen resolution : 1920x1080

\* Connecting to the Wireless Access Point without proper security setup may cause security issues.

\* If security is set up internally for your organization, it may affect connection therein.

\* To improve the quality of the application in use, modifications may be proceeded without notice to customers.

## Installing SmartThinQ App

1. Search "Smart ThinQ" in Google Play Store or App Store.
2. Download and install the "Smart ThinQ" application.



[Roboking application]

- ✓ **Tip** • The "Smart ThinQ" application cannot be used on a tablet device or a desk top or laptop computer.

# SMART APPLICATION FUNCTION


## Signing up for membership

You need to subscribe your personal login ID on the server to control the Robot Cleaner from your smartphone.

1. The [Startup Screen] opens when you run the "Smart ThinQ" application. Select "nation / Language" and click "Sign in".
2. You can sign up with the [Create account] button on the "sign in screen" page. Fill the Blanks on [create account screen] page to create account.
3. If you have successfully created an account, try to sign in on the "Sign in" page after receiving an authentication sign in e-mail.

\* Don't change 'Nation/Language' in the [Startup Screen] page. If you change it, you will not be able to register your robot cleaner that you purchased in nation. If it is set to another country, change it to Nation/ Language.


\* You can also sign in with google and facebook at the [Log in screen] page.

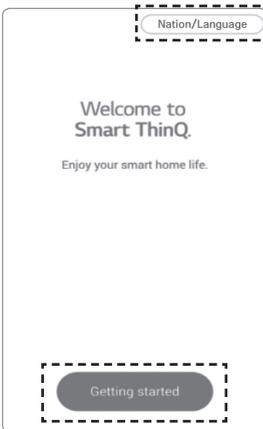


[Startup screen]




[Sign in screen1]

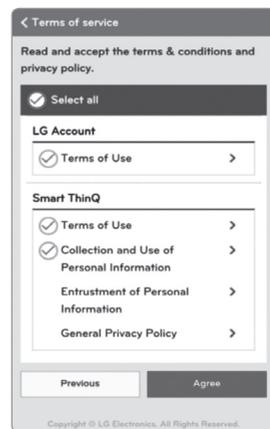

[Terms of service]

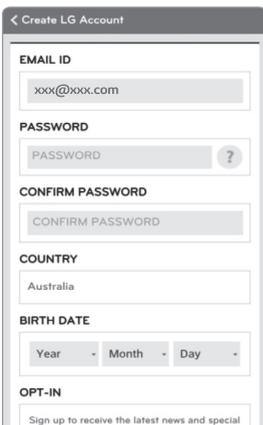

[Create Account]

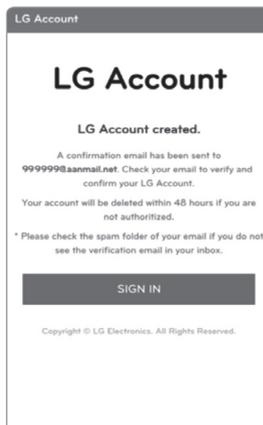

[Confirm email]



[Sign in screen2]

# SMART APPLICATION FUNCTION


## How to register the product (Android)

You will need to register the product on the application to control the Robot Cleaner from your smartphone. Add your Robot Cleaner to the app with the Wi-Fi feature to use the Smart function.

1. The [Startup Screen] opens when you run the "Smart ThinQ" application. Click the "Register product" Button.
2. Select Robot cleaner on [Select Product Screen].
3. Proceed to add your Robot Cleaner on to your smartphone via Wi-Fi.



[Start-up screen]

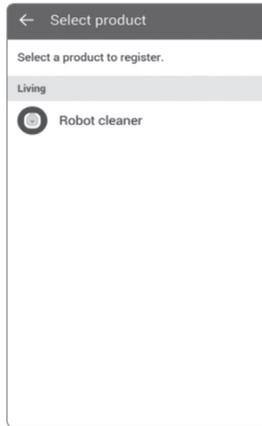

[Select Product screen]



### Tip

- The distance between the Robot Cleaner and the router should be within 5m; there should be no obstacle between the router and the Robot Cleaner to help reduce problems during registration.
- Replacing the router, changing its security settings, or changing the router settings on the app, will require the Robot cleaner to be reregistered. You can change the router information in the product network on the setting page.
- Wait for approximately 5 minutes after replacing the router or changing its security settings, as it may take some time for the changed setting to be recognized.

# SMART APPLICATION FUNCTION

## Wi-Fi / Register product (Android)

Product registration can be done using the "Wi-Fi" function for Robot cleaner.

1. Check whether the "Smart ThinQ" mark is printed or not.  
If there is a "Smart ThinQ" mark on the product, press the "Yes" button.




[Product category]

-  **Tip** • Registering the product is required for the initial connection only; you can then connect to the Robot Cleaner thereafter without having to repeat this process.


# SMART APPLICATION FUNCTION

## Product network / Register product (Android)


1. Long-press the "TURBO(Register/3sec)" button on Roboking for 3 seconds. The [Select AP(Wi-Fi)] screen will open soon.
2. By selecting your AP on the "Wi-Fi network" list, you will automatically be directed to the product registration mode.
3. After registration is complete, the [Dashboard] screen will open.
4. With the network function enabled on the Robot Cleaner, press "Robot cleaner image" to connect to Robot Cleaner.

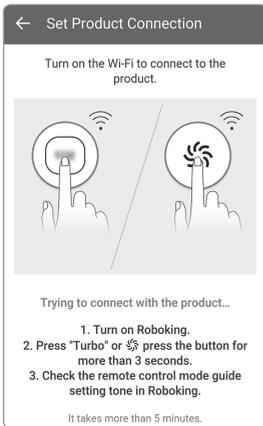


[Press the 'TURBO' button]

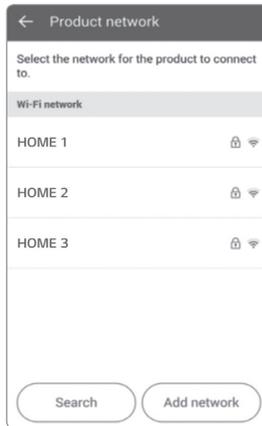


[Select AP(Wi-Fi)]

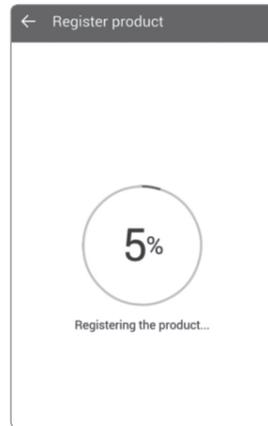


[Register product]

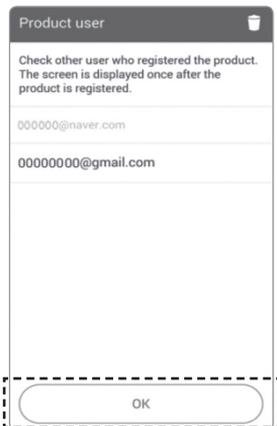

[Registered user list]

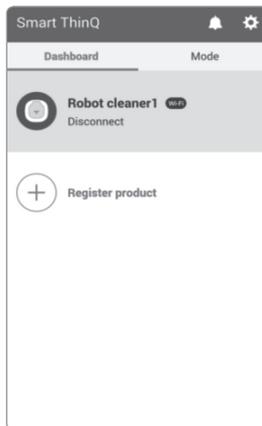

[Product selection screen - when connection unavailable]

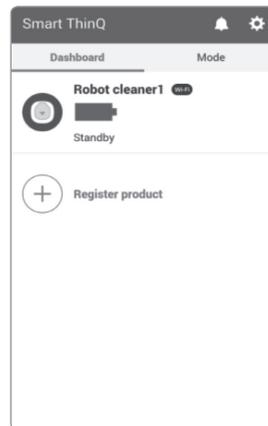

[Product selection screen - when connection available]

-  **Tip**
- With the network function enabled on the Robot Cleaner, press "Access" to connect to the Robot Cleaner.
  - Use a 2.4GHz bandwidth.
  - Special characters in the ID of the router may hamper product connection or registration.

# SMART APPLICATION FUNCTION

## How to register the product (iOS)

You will need to register the product on the application to control the Robot Cleaner from your smartphone. Add your Robot Cleaner to the app with the Wi-Fi feature to use the Smart function.

1. Check whether the "Smart ThinQ" mark is printed or not.  
If there is a "Smart ThinQ" mark on the product, press the "Yes" button.




[Product category]

-  **Tip**
- The distance between the Robot Cleaner and the router should be within 5m; there should be no obstacle between the router and the Robot Cleaner to help reduce problems during registration.
  - Replacing the router, changing its security settings, or changing the router settings on the app, will require the Robot cleaner to be reregistered. You can change the router information in the product network on the setting page.
  - Wait for approximately 5 minutes after replacing the router or changing its security settings, as it may take some time for the changed setting to be recognized.

# SMART APPLICATION FUNCTION

## Product network / Register product (iOS)

1. Please long-press the "Turbo" button for 3 seconds while the Robot cleaner is turned on.  
The [Select 'LG\_HOMBOT\_REG~' Wi-Fi] screen will open soon.
2. Please turn on the "Wi-Fi connection" function in iPhone "Settings."
3. Please press the "Check connection" button on the App screen after connecting to "LG\_HOMBOT\_REG~" in the Wi-Fi list.
4. After checking the network, please enter the network ID and password to connect to the product.

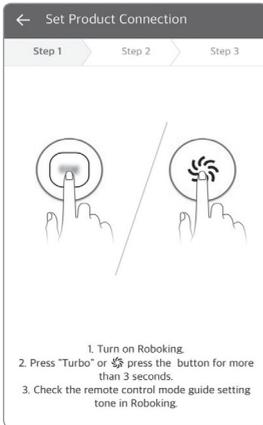


[Press 'TURBO' button]




[Select 'LG\_HOMBOT\_REG~' Wi-Fi]




[Check connections]

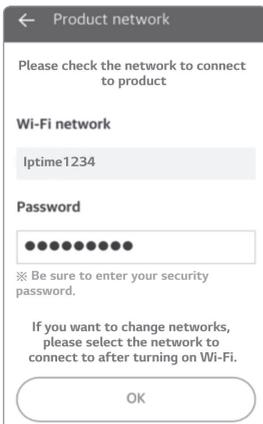

[Select network]

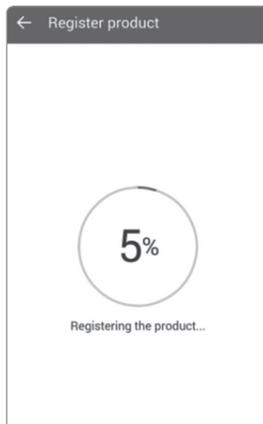

[Product registration]

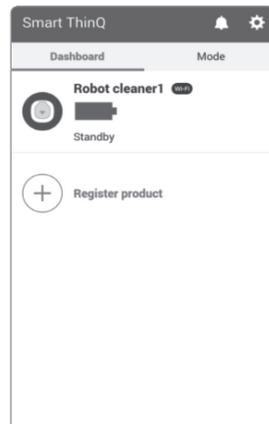

[Product selection screen - when connection available]




### Tip

- With the network function enabled on the Robot Cleaner, press "Access" to connect to the Robot Cleaner.
- Use a 2.4GHz bandwidth.
- Special characters in the ID of the router may hamper product connection or registration.

# SMART APPLICATION FUNCTION

## Startup screen of application

The following screen will open when you connect to the Robot Cleaner for the first time from the "Smart ThinQ" application:

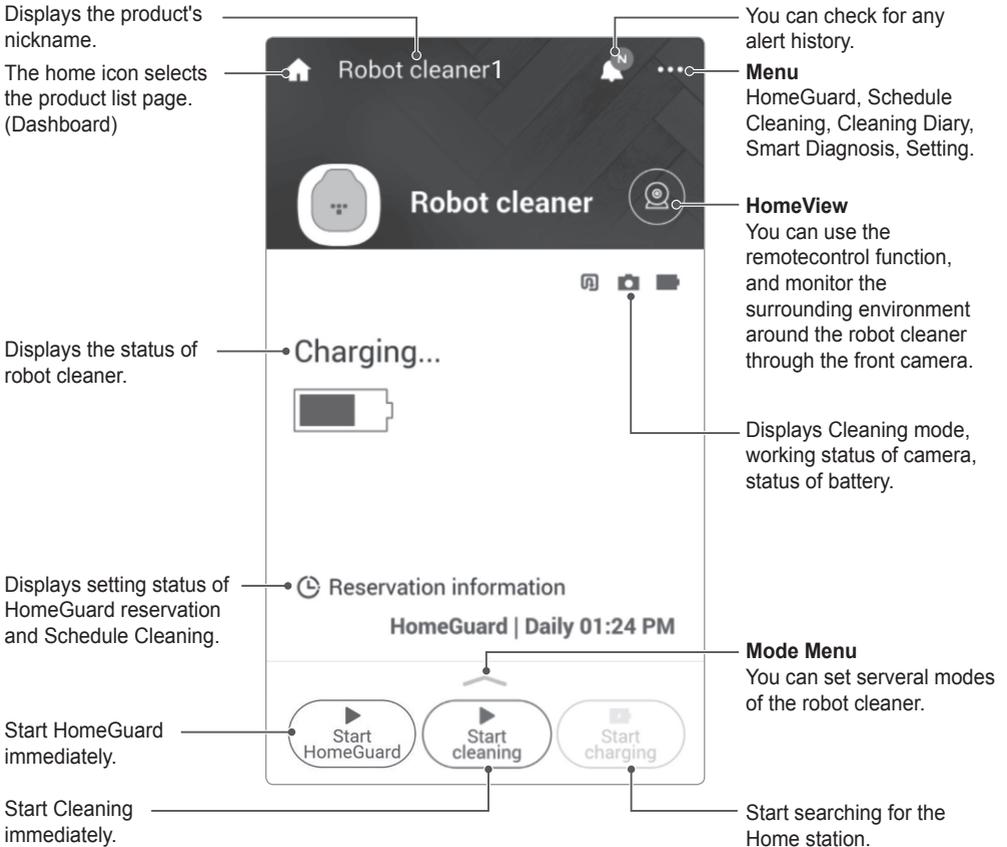

# SMART APPLICATION FUNCTION

## Startup screen of application

**Menu**  
HomeGuard, Schedule Cleaning, Cleaning Diary, Smart Diagnosis, Setting.

**HomeView**  
You can use the remotecontrol function, and monitor the surrounding environment around the robot cleaner through the front camera.

**Mode Menu**  
Cleaning mode, Repeat mode, Turbo mode.

# SMART APPLICATION FUNCTION

## HomeView (interface configuration)

Open HomeView; the following control screen icons will appear:

### HomeView main menu

Each button provides the corresponding function.



### Status icons

Wi-Fi, battery, Reserve Cleaning, cleaning mode, Turbo mode, repeat mode, lighting mode, and cleaning time are displayed here.



### Mode setting

Click each icon to toggle Cleaning modes, Repeat mode, Turbo mode, and Lighting.

# SMART APPLICATION FUNCTION

## HomeView (Cleaning)


You can change to the cleaning mode during HomeView and have the Robot Cleaner start cleaning by clicking "Start cleaning."



[Waiting to clean]

Click "Start cleaning" to engage the cleaning mode. You can select another cleaning mode by clicking the "Mode setting" button before pressing the "Start cleaning" button.

- Tip**
- Spiral Spot mode is not available whilst the cleaner is on the charging station.
  - My space cleaning mode can only be selected with the remote control.
  - Click any blank area to make the buttons disappear; click again to show the buttons again.

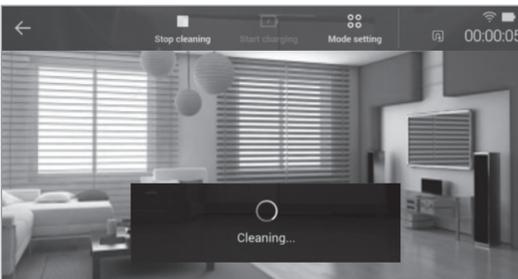

[During Cleaning]


While the Robot Cleaner is cleaning, the "Stop cleaning" button is displayed. Click it to stop the Robot Cleaner.

Click "Mode setting" to turn on or off the Repetition Mode, Turbo Mode, or Lighting on and off (Lighting is active at maximum power when turned on and at low power when turned off).

# SMART APPLICATION FUNCTION

## HomeView (Redock for charging)

Click "Start Charging" when the Robot Cleaner is not charging to have the Robot Cleaner start searching for the Home station. Click "Stop" to have the Robot Cleaner stop searching.

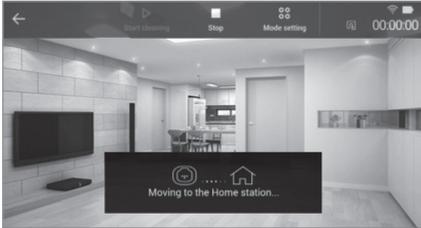


[Moving to Home station]



[Charging]

## HomeView (Manual control)

Press the "Manual Control" button to have the Robot Cleaner operate by manual control. Move the Robot Cleaner with the rotation button on the lower left corner and the forward button on the lower right corner. Unlike the remote control or Simple Control, you can press both buttons simultaneously.

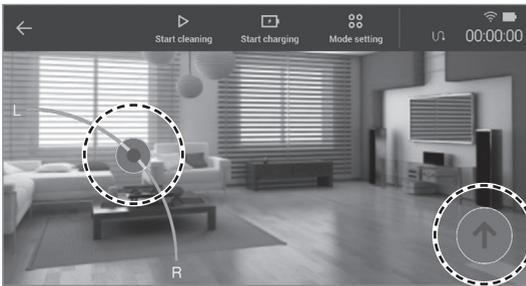


[Manual Control]

-  **Tip** • There may be a delay in the video on the Manual control screen and the Robot Cleaner's responsiveness when using the manual control due to the WiFi and Router network conditions.


# SMART APPLICATION FUNCTION

## Menu - HomeGuard (Main screen)

HomeGuard lets you monitor the house through the Robot Cleaner's camera at its designated location while you are away from home. The Robot Cleaner will take pictures of any activity it detects and sends them to you as Alerts. (You can choose whether to receive such pictures or not in "Setting").

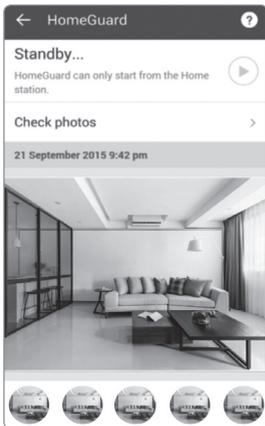

[HomeGuard is inactive]

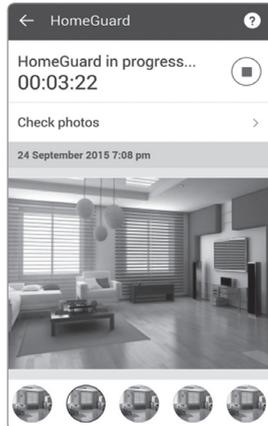


[HomeGuard is active]


- Tip**
- When ambient lighting is lower than 20 lux, the HomeGuard function may be inefficient, and detection may not work well.
  - Movement may be constantly detected for households with indoor pets and sudden lighting condition changes.
  - If you do not want to receive the alerts and notification, you can change the alert setting in "Setting."

## Menu - HomeGuard (HomeGuard reservation)

If you go to work regularly or have to leave the house on a regular basis, you can Reserve the Home Guard function to activate at the desired time.

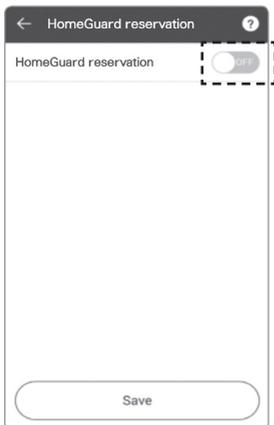

[Home Guard not scheduled]

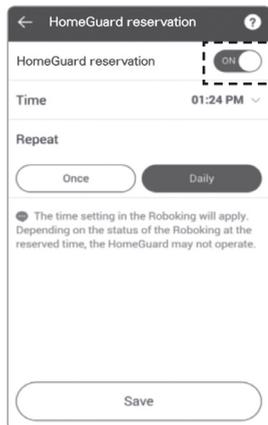


[Home Guard scheduled]

# SMART APPLICATION FUNCTION


## Menu - HomeGuard (Location setting)

To start HomeGuard, first, you have to set the location where the Robot Cleaner will remain during the HomeGuard mode. Select the location on the virtual map.


1. Click the target location on the map or drag the Robot Cleaner to the desired location within the designated area. The monitoring location can be continuously changed before it is saved.

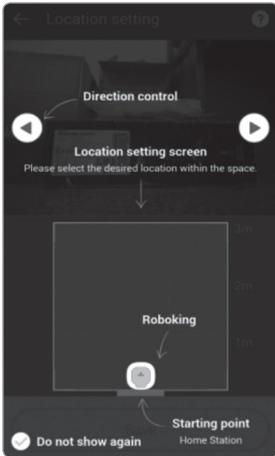

[Location setting]

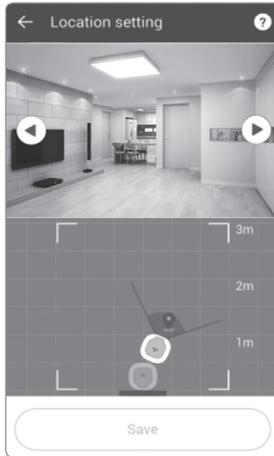


[Location setting1]

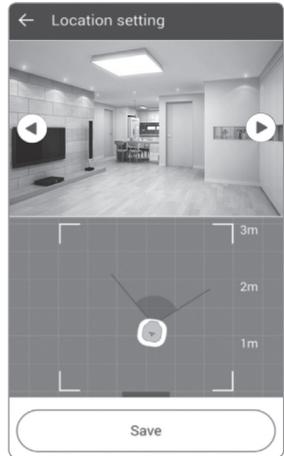

[Location setting2]

-  **Tip** • The Home Guard monitoring location can only be within 1.5m to the right and left side and within 3m from the front of the home station. If the Home Station is relocated, the Home Guard position will always use the Home station as the starting point, and so the Home Guard position will need to be set again.

2. Use the two arrows on both sides of the video feed to set the desired direction.

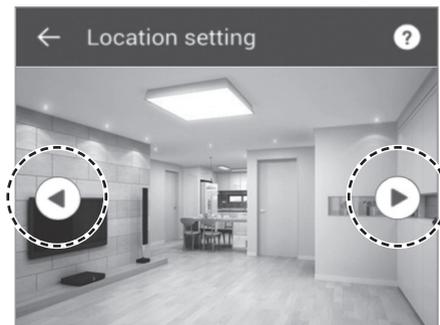


[Location Setting]

-  **Tip** • If the Home Guard mode has been terminated, or the mode is stopped due to low battery level, the Robot Cleaner exits Home Guard mode and returns to the Home station where it will remain on charge until further command.

# SMART APPLICATION FUNCTION

## Menu - HomeGuard (Location setting)

3. Check if the location is satisfactory from the video feed and click "Save" to complete location setup.

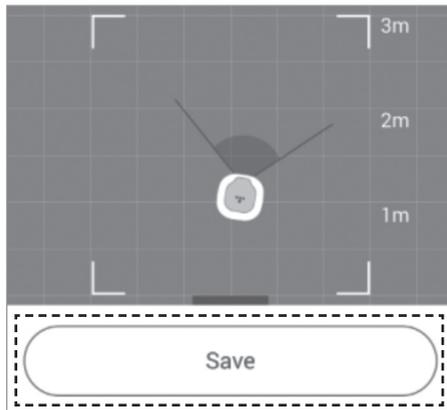


[Saving Location setting]

**Tip** • The Robot Cleaner searches for the saved location with the Home station as the starting point, so you will have to set up the location again if the station has been moved.

## Menu - HomeGuard (Check photos)

You can view the pictures taken in Home Guard mode that have been sent by the Robot Cleaner and can save them on your Smartphone.

Up to 20 pictures are stored on the Robot Cleaner. Click "Save in Gallery" if you want to save the pictures on your smartphone. If they are not saved to your smartphone, then they will be deleted and overridden with any ongoing new photos.

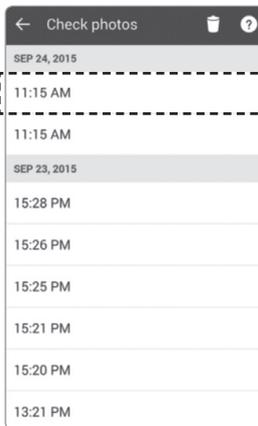

[HomeGuard Photos list]



[HomeGuard Photos]


**Tip** • Upon detecting movement, The Robot Cleaner takes 5 consecutive pictures.

# SMART APPLICATION FUNCTION


## Menu - HomeGuard (Alert)

Upon detecting any movement while in HomeGuard mode, the Robot Cleaner takes pictures and sends an alert to your smartphone. Press "Confirm" on the alert pop-up to view the picture or use the "Call" "View home". "Call" switches the screen to the phone interface; "View home" opens the Home View mode.


You can change the alert setting in "setting."

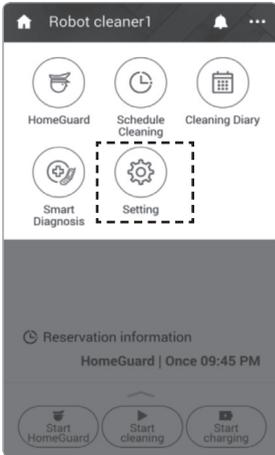


[Menu-Setting]

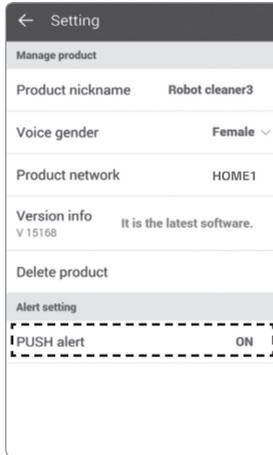


[setting screen - Alert enabled]

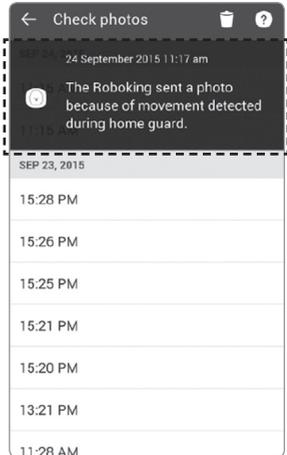

[HomeGuard alert window]

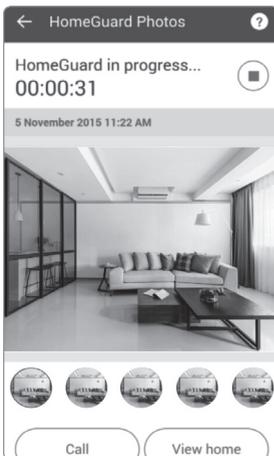

[HomeGuard picture checking screen]

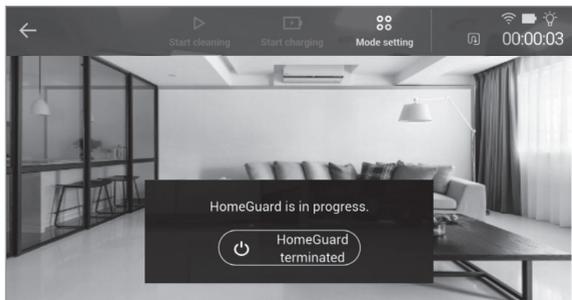

[HomeView screen]


# SMART APPLICATION FUNCTION

## Menu – Schedule Cleaning

You can schedule the time you want the Robot Cleaner to start cleaning.

To set up Schedule cleaning, toggle across the Schedule cleaning key to turn it on or off in the Schedule cleaning menu. After enabling Schedule cleaning, set up the time and repetition, and then click "Save" to complete scheduling.

-  **Tip**
- The Schedule cleaning menu on the application has the same function as that of the remote control. Refer to Schedule cleaning on page 25.
  - Setting up or starting Schedule cleaning can only be done whilst the Robot Cleaner is charging.

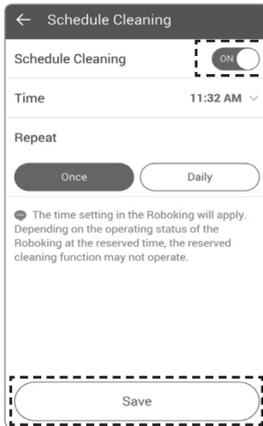

[With Schedule cleaning on]



[With Schedule cleaning off]


# SMART APPLICATION FUNCTION

## Menu – Cleaning Diary

You can view the diary to find out when the Robot Cleaner did the cleaning.


Cleaning Diary records information such as date, mode, and the start and completion times of each cleaning.

Click Play button on the right of the completed cleaning list; an active cleaning map of that particular cleaning event will appear.

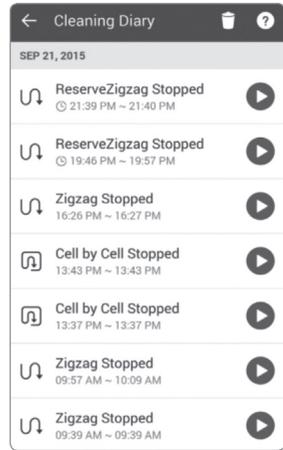

[Cleaning Diary]

The cleaning map shows an animated map of the Robot Cleaner's course whilst it was in the cleaning mode; you can control the playback speed or rotate the map.

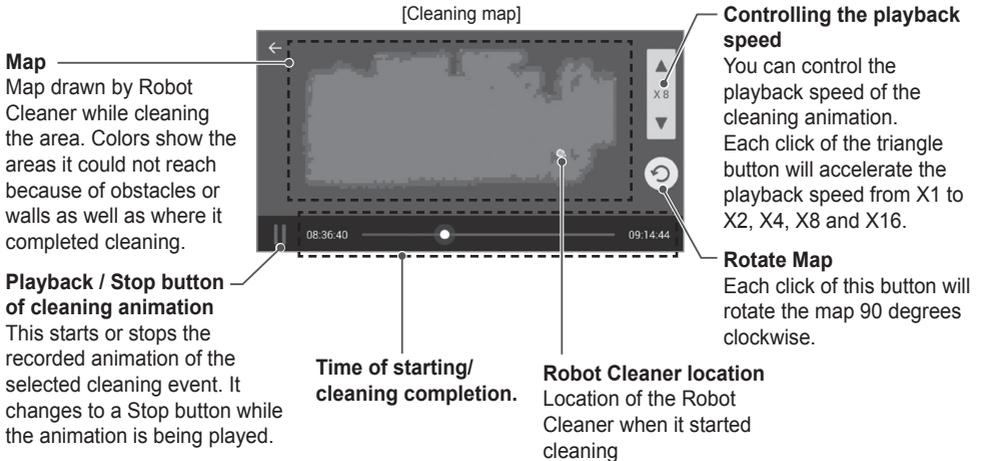

### Tip

- The Cleaning Diary list shows the 20 most recent cleaning sessions.
- If charging was required during a session, the charging time is included in the completed cleaning time. The displayed message will indicate the sequence that occurred.  
**(Eg.) After recharging, Zigzag finished**
- If cleaning was interrupted by pressing the "Charge" button, only a map up to that exact point will be drawn.  
**(Eg.) Zigzag Stopped**
- A cleaning diary list entry may say "Stopped" if the cleaning was interrupted and the Robot Cleaner did not return back to the Home Station within 10 minutes after cleaning stopped, or if the power turns off due to an error.
- If power is turned off manually, or any button on the Roboking is pressed during cleaning, the session may not be logged in the list.

# SMART APPLICATION FUNCTION

## Menu – Smart Diagnosis

The Robot Cleaner can self-diagnose with the Smart Diagnosis function.


Click "Start Smart Diagnosis" whilst the Robot Cleaner is charging.

Be sure to resolve any issue identified in the diagnosis by taking a corresponding measure. If the symptom persists, contact the customer service center of LG Electronics.

-  **Tip**
- Smart Diagnosis on the application provides the same function as that of the remote control. Refer to pages 28 and 29 for details on Smart Diagnosis.
  - Smart Diagnosis can only be activated whilst the Robot Cleaner is charging.



[Smart Diagnosis]

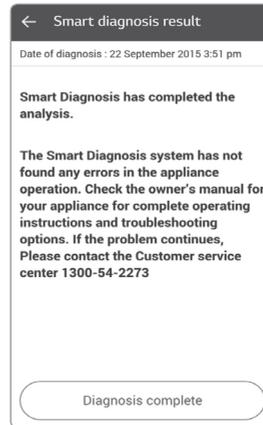

[Smart Diagnosis result]

# SMART APPLICATION FUNCTION

## Menu – Setting


You can check or change the current information set up on Robot Cleaner.

Click Voice gender to change the voice of the Robot Cleaner to male or female.


Click Product nickname to change the current nickname of the Robot Cleaner; a pop-up where you can enter a new nickname opens (up to 10 characters allowed including English, Korean and numeric).

You can check the current software version of the Robot Cleaner and the latest version. If the current software is not the latest, please update it. Refer to the details on "Software Update."


Basic Information shows the current version of the application and open source license information.

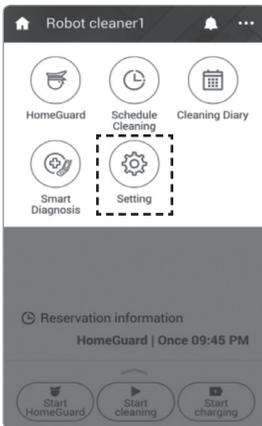

[Setting 1]

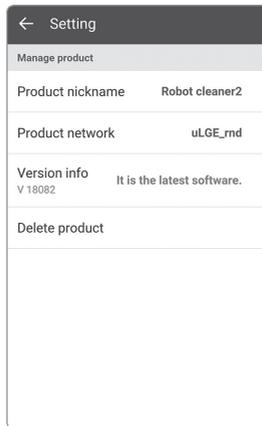

[Setting 2]

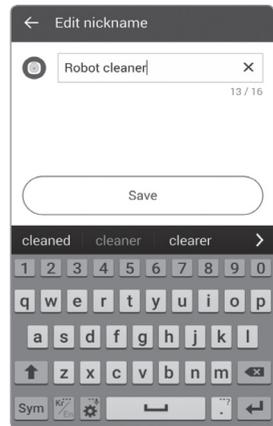

[Edit nickname]


# SMART APPLICATION FUNCTION

## Misc. 1 - Software update


The network-enabled model of the Robot Cleaner can update the software automatically via the application.

1. Make sure that the "Smart ThinQ" application is up to date on the Play Store.(Unless you update the app to the latest version, software update will not be available.)
2. If a new version is available upon connecting to the Roboking, an update will start.


-  **Tip**
- Software update can only be done whilst the Roboking is charging.
  - Software updates will only be done if there is sufficient battery level. Ensure that the battery is fully charged before engaging any software update.

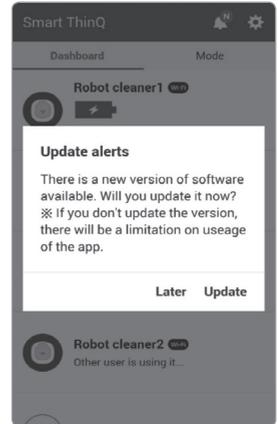

3. A new software file is downloaded to the Roboking when the updating starts.
4. When download is completed, the update will be started after transmitting files to the Roboking.
5. The Roboking will turn off and on again automatically in the process, and updating will resume.
6. A voice message saying that update is completed will be announced when the update is done. The Roboking will turn off and on again to apply the updated software.

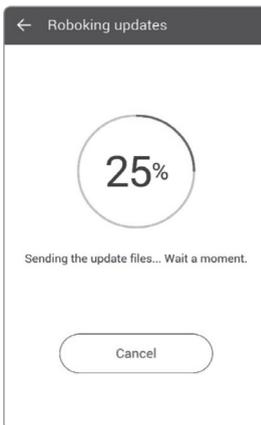

[Software file download window]

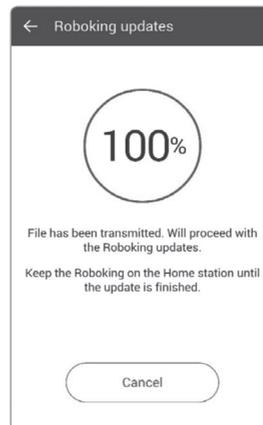

[Updating Roboking]

# SMART APPLICATION FUNCTION

## Misc. 2 - Mode


You can order to robot cleaner simply without connection with robot cleaner through Mode function. Mode function has total 4 functions. If you push 'Applied' button, Robot cleaner will act according to Mode like below.

Going-home mode : start searching home station


Holiday mode : start HomeGuard

Away mode : start cleaning


Sleeping mode : start searching home station

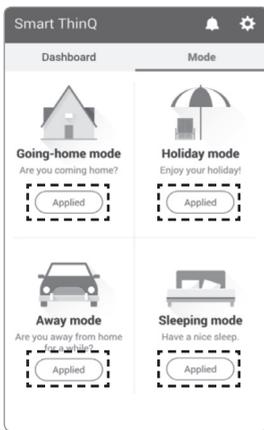

[Mode]

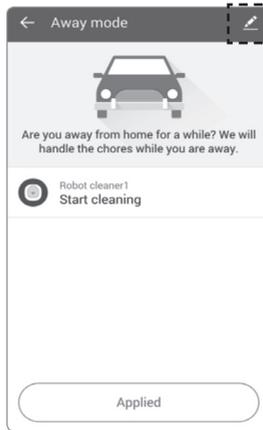

[Away mode]

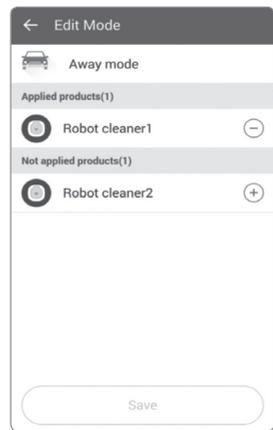

[Edit mode]


- ※ If more than one Robot cleaner is registered, only one of them can be set by the mode function. In the event that there are 2 registered Robot cleaners, the first Registered one will be the one set by the mode function.
- You can change which of the Robot Cleaners will be set by the mode function by editing them. [Edit mode] (You can enter Edit mode by pressing the pencil image.)

# PRODUCT INFO INITIALIZATION

## Product info initialization

If you happen to sell a used Robot Cleaner, or if you would like to initialize information set up on the product, run Initialization.

1. Press and hold down the "Turbo" and "Charge" buttons for 3 seconds with the power on; all displays will then be lit with a "ding" sound.

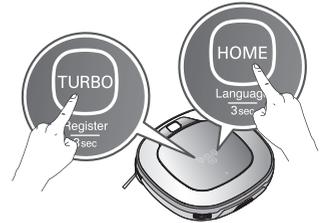

2. Press "Start/Stop" to initialize the product; power will be turned off.
3. Pressing "Start/Stop" again will turn Robot Cleaner on with a melody.



※ Any dispute between seller and buyer is an issue between the two parties. LG Electronics provides a product initialization function for smooth transaction.

- Tip** • Initialization returns the following information as factory default setting.
- Home Guard image
  - Home Guard location
  - Front camera (Back to on)
  - Learned cleaning information
  - Cleaning Diary
  - Smart Diagnosis record
  - Nickname

# CLEANING THE DUST BIN

If the dust bin is full, suction power can be reduced. Clean the dust bin before or after each cleaning session. Clean the dust bin using the following sequence:

1. Open the dust bin compartment cover by pressing the PUSH button on the Robot Cleaner.





2. Grab the handle of the dust bin and pull it upward.



3. Pull the hook on the left of Filter Cover on the rear of Dust Bin to separate the filter and the sponge.


\* Note that separating the filter may result in dust dropping.

\* Refer to p.48 when cleaning the Dust Bin Filter.

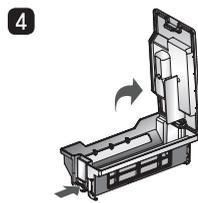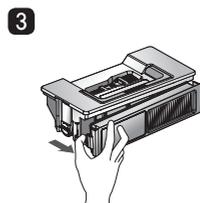

4. Lift the dust bin lid upward while pressing the separation button on the dust bin.



5. Empty the dust bin and clean it with a cleaning brush or under running water.

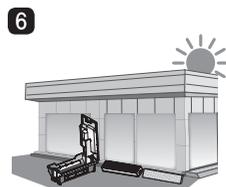

6. After cleaning with water, completely dry the dust bin in a well-ventilated area out of the direct sunlight.

7. When reassembling or fitting the cleaned Dust Bin, close the lid and put in the Sponge and EPA Filter.

\* Refer to p.48 for detailed assembly guides.

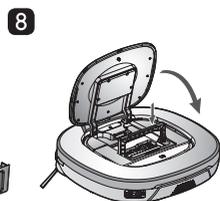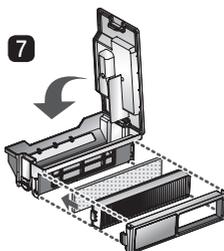


8. Put the dust bin into the Robot Cleaner and close the dust bin compartment cover.



## Tip


- Operating the unit without Filters fitted to the dust bin can cause a motor malfunction not covered by warranty.
- After cleaning the Dust Bin, make sure to assemble the filter and fit it to the Dust Bin. If you initiate cleaning, with no filters fitted to the dust bin or Filter Cover not assembled, a voice message will be announced which says "Please check if the dust bin is installed with the filter."
- Always ensure that the dust bin lid is refitted correctly after cleaning the dust bin so that it closes easily and accurately.

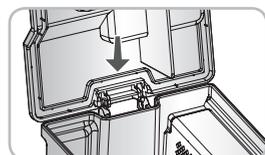

# CLEANING THE DUST BIN FILTER

The Dust Bin Filter consists of a EPA Filter and Sponge Filter.  
Clean both the EPA and Sponge filters as per the following sequence.

1. Pull the hook on the left of the EPA Filter module on the rear side of Dust Bin to separate the EPA Filter and the sponge.

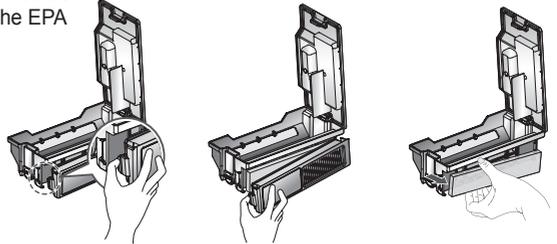


2. Thoroughly clean out the fine dust particles on the EPA Filter, with a vacuum cleaner or cleaning brush.

\* Do NOT wash the EPA Filter with water.  
Its suction power will be reduced.




3. Use a cleaning brush to clean the Sponge Filter.  
If using water to clean it, allow it to dry completely in the shade before refitting.

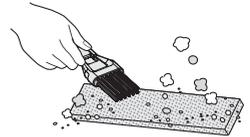


4. Assemble the EPA and Sponge filters back onto the Filter housing as per the following sequence.

\* Fit the rectangular locator on the EPA Filter into the locating slot of the filter body.

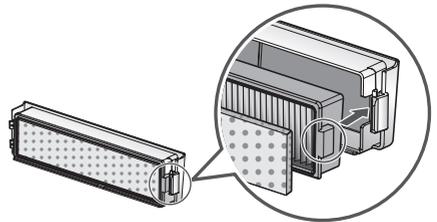

\* Be careful not to incorrectly assemble EPA and Sponge Filter onto the Filter housing.

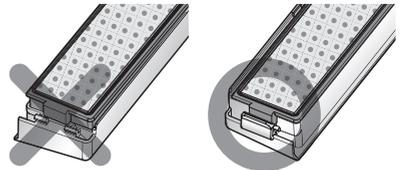

## Tip

- To preserve the performance of the Robot Cleaner, clean the EPA Filter at least once a week, with a brush or vacuum cleaner.
- The EPA and sponge filters must be fitted to the filter housing before refitting the filter to the dust bin. Operating the Robot cleaner without the EPA and sponge filters will cause the suction motor to malfunction.

# CLEANING THE BRUSH

The rotating Brush, located on the bottom of Robot Cleaner, helps collect the dust. Clean the Brush as per the following sequence.

\* **Before turning over the main unit, lay a soft cloth on the floor and remove the Dust Bin. Otherwise, the main unit can get scratched and dust will fall from the Dust Bin.**


- 1** Turn the Main Power Switch OFF before starting the clean. Put the Robot Cleaner upside down on a soft cloth.




- 2** After checking for foreign materials, press down the Fixing Hook and pull it up to separate the brush Cover.




- 3** By using the cleaning tool, clear hairs and other debris and foreign materials on the Brush and from the 2 smaller jockey wheels.

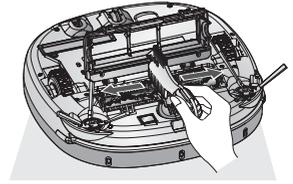


- 4** Push the Brush all the way into the yellow protrusion.

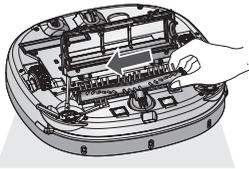


- 5** While pushing the Brush, lift the white protrusion part up to separate it from the main unit.

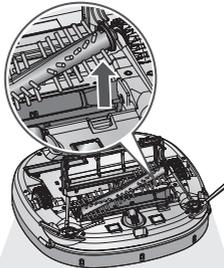


- 6** Carefully clean the Brush with a vacuum cleaner or scissors.

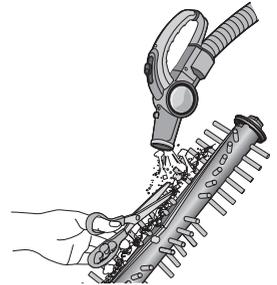

- 7** Fit the Fixing Hook (rectangular shape) on the side of the Brush into the slots, with the colors matching.

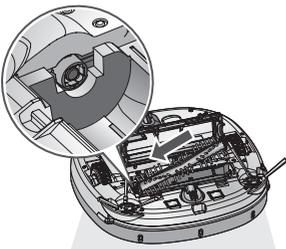


- 8** While pushing the Brush to the arrow direction, fit the Fixing Hook (rectangular shape) on the opposite side into the slot.

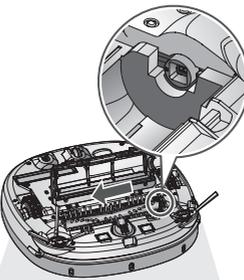

- 9** Press down and close the Cover until a 'crack' sound is heard from both sides of Fixing Hook.



\* Be careful not to trap the side brush bristles under the cover when closing it.

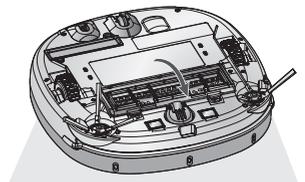

# CLEANING THE SENSORS/CHARGING TERMINALS

There are sensors on the Robot Cleaner that detect obstacles, stairways and the home station for charging the battery. In order to maintain the performance of the Robot Cleaner, regularly clean the sensors and charging terminals as follows:

1. Turn off the power switch on the rear side of the Robot Cleaner.  
Injury can be caused by the activation of the Robot Cleaner if the main power is not turned off.
  2. Lay a smooth cloth on the floor, turn over the Robot Cleaner and put it on the cloth.
- \* **Please make sure to remove the dust bin before rotating the main body. Otherwise, the dust in the dust bin may fall out.**
3. Use a smooth cloth or cleaning brush to wipe the dust off each of the 3 cliff sensors, camera sensors and ultrasonic sensors and the charging terminal as described below.

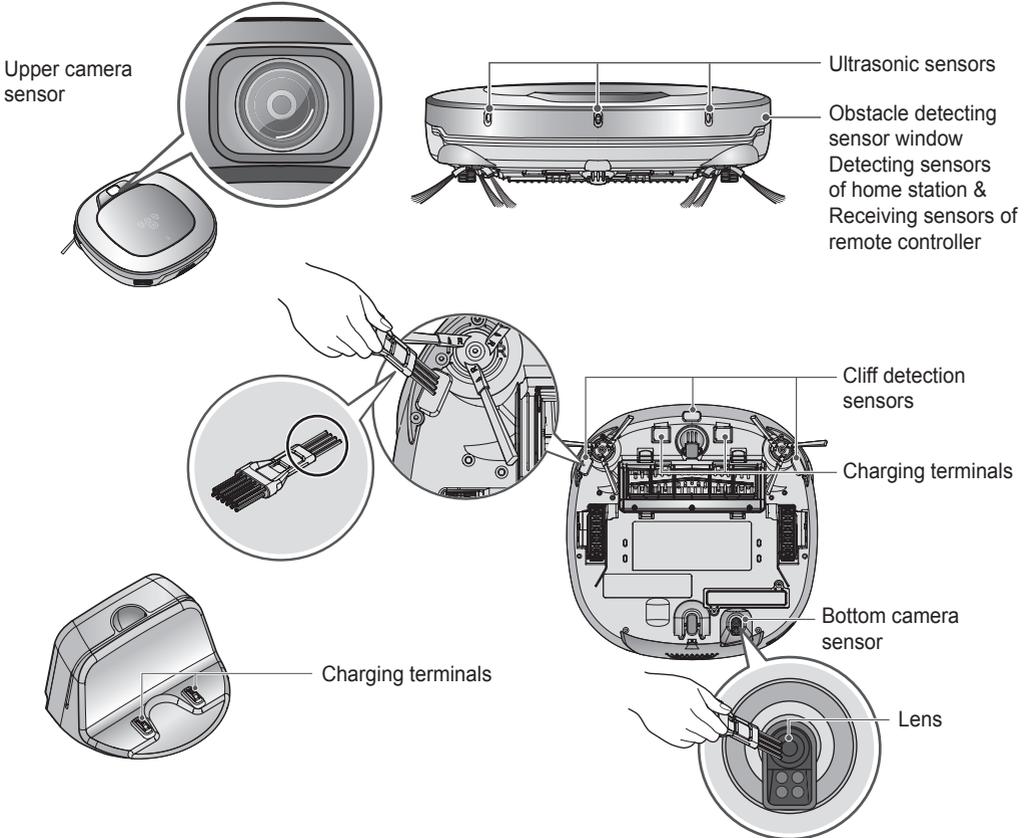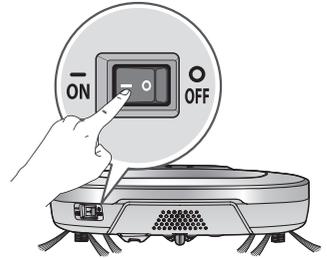


- Tip**
- Do not clean the Robot Cleaner by directly spraying it with water, thinners, solvents, benzene, or any other liquids.
  - Call the service center if the sensor or charging terminal is damaged. Sensor and terminal damage can cause the product to malfunction.
  - To clean the sensor/charging terminals, use the cleaning brush.

# CLEANING THE SIDE BRUSH

Foreign objects/materials such as hair can easily adhere to the side brush. Remove such materials at least once a week.

If excessive amounts of foreign materials are stuck to the brush, there is the risk of damage to the brushes.

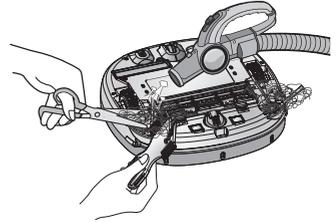


If the floor is rough or frequently cleaned, the side brushes may bend or become deformed. In this case, use the following method to straighten the side brush.

1. The following procedure is helpful in restoring deformed brushes.
2. Turn off the power by switching the main switch off on the rear of the unit.
3. Place the Robot Cleaner at the end of a table to make cleaning the side brush easier. Make sure that the Robot Cleaner is not in danger of falling.
4. Soak the side brush in warm to hot water.
5. Press down on the side brush for about ten seconds so that it is completely submerged in the water.
6. Slowly wipe the side brush by sliding it through your hand.
7. Rotate the side brush and repeat steps 4-6 for each section of the brush.
8. Use the side brush only after it has completely dried.



## Side Brush management


1. Remove the screws by using a suitable screw driver and separate the Side Brush from the main unit.
2. Remove any hair after the separation.
3. Assemble the Side Brush by replacing it onto the bottom of the Robot Cleaner, with the 'R' and 'L' marking of the Brush matching the counterparts on Robot Cleaner.

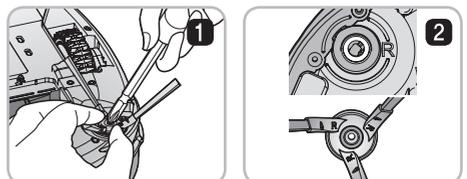

# CLEANING THE ULTRA MICROFIBER MOP (OPTION)

To avoid odors, dirt and dust should be washed off the mop after it is used for cleaning. Follow these directions to wash the ultra microfiber mop:

1. Separate the ultra microfiber mop from the mop plate.

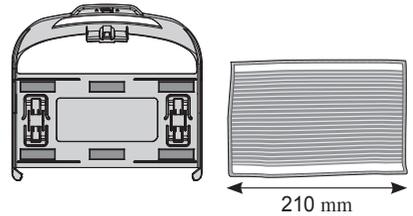


2. Carefully clean it with warm water.



3. Use the Mop after completely drying it in direct sunlight.

\* If the Mop is used in a damp or wet state, it will cause the Robot Cleaner to malfunction.

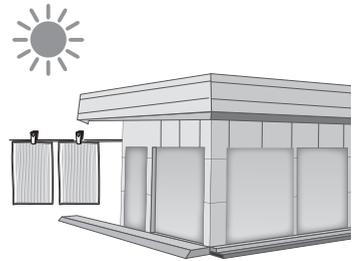

## Tip

- To avoid product malfunction, only use the ultra microfiber mop provided with the Robot Cleaner.
- Additional microfiber mops can be purchased by visiting a nearby LG Electronics service center.

# TROUBLESHOOTING

## Upon a voice message, "The wheels are not touching the floor. Please move Roboking onto flat floor."


A warning message will be given if a wheel does not contact the floor surface for any reason.

- Is a wheel trapped in the front door, balcony, stairway, etc?
  - ▶ Move the Robot Cleaner on to the flat floor.



## Upon a voice message, "Please remove foreign material on the left/right wheel."


- Is any foreign material wound around the wheel?
  - ▶ Turn off the main power switch on the rear side of the Robot cleaner. Then lay a soft cloth on the floor, turn over the Robot Cleaner, and put it on the cloth. Remove foreign material after observing the wheels.
- \* Please make sure to remove the dust bin before turning over the main body. Otherwise, the dust in the dust bin may fall out.

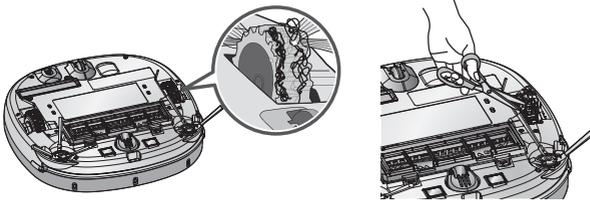

## Upon a voice message, "Roboking cannot continue cleaning. Please check the area around Roboking."

A warning message will be given if Robot Cleaner cannot go on cleaning due to any unfavourable condition.

- Is the Robot Cleaner stuck?
  - ▶ After removing it from the obstacle, place the Robot Cleaner back onto the flat floor.

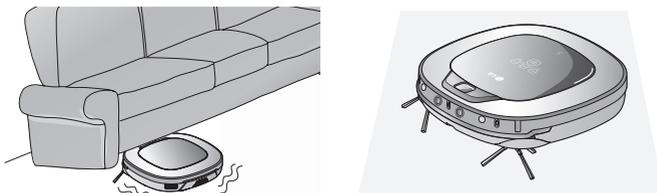


# TROUBLESHOOTING


## Upon a voice message, "Please check if the dust bin is installed with the filter."

A warning message will be given if there is no Dust Bin or Filter housing fitted.

- Is the Dust Bin fitted to the Robot Cleaner?
  - ▶ Open the Dust Bin compartment cover and check to ensure the Dust Bin is in place.
  - ▶ Do NOT leave the Dust Bin Cover open.

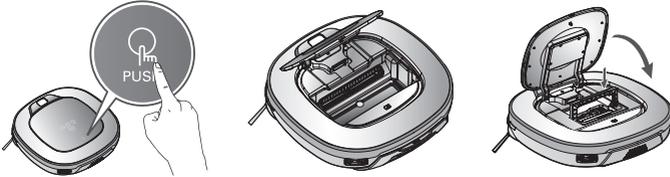


- Make sure the Filter housing is assembled onto the Dust Bin.

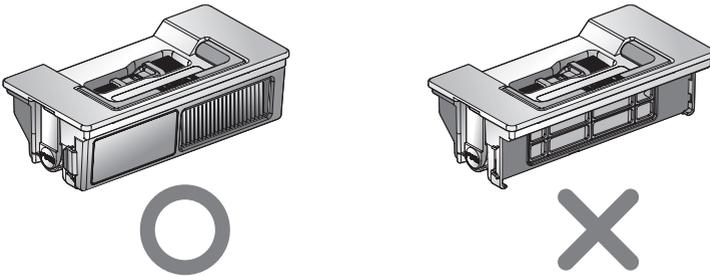

## Upon a voice message, "Battery is low. Please move Roboking onto the home station to charge."

When the remaining amount of battery power is almost nil, the voice, "Battery is low", is generated.

- Initiate battery charging of the Robot Cleaner by moving it to the home station.
  - ▶ When the Robot Cleaner is attached to the docking station successfully, it will start the recharging with the recharging start melody.

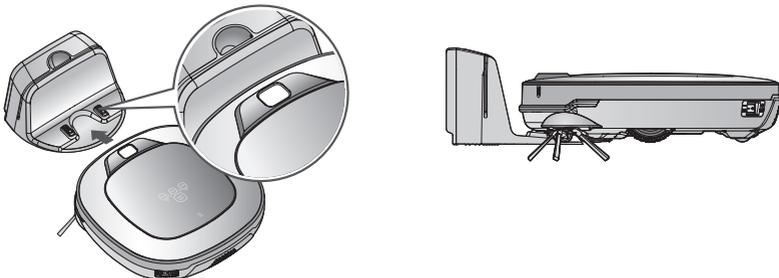

# TROUBLESHOOTING


## Upon a voice message, "Please remove foreign material from the brushes on the bottom."

A warning message will be given if foreign materials restrict the Brush's rotation.


Turn off the main power switch on the rear of the Robot Cleaner. Lay a soft cloth on the floor and put the Robot Cleaner upside down on it.

**\* Before turning over the main unit, remove the Dust Bin. Otherwise, it will cause dust to fall from the Dust Bin.**

- The brush is making a loud, abnormal sound.
  - ▶ Confirm the correct assembly of the brush by checking the separation groove of the brush
  - ▶ Remove the lower rotating brush from the Robot Cleaner and remove any foreign material from the brush.

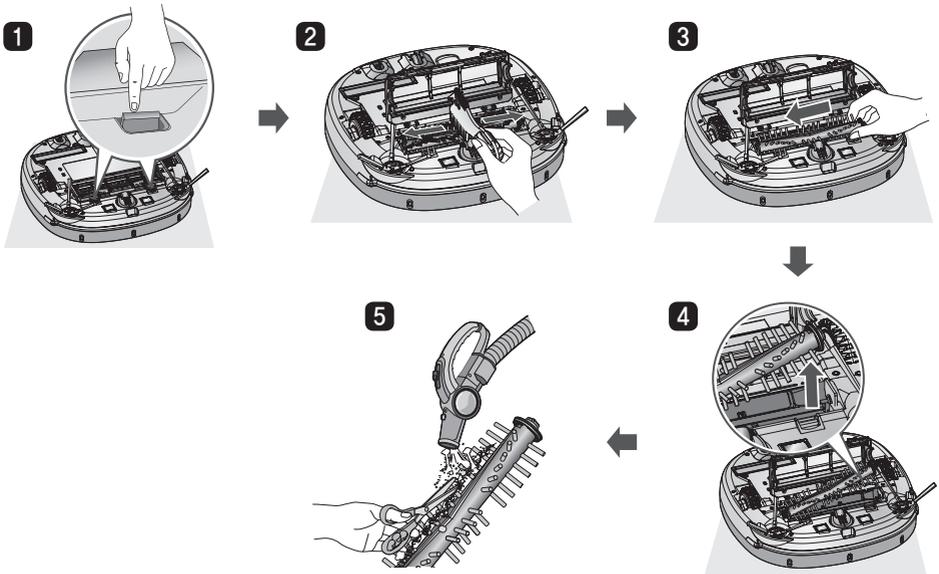

- The lower rotating brush or side brush is stuck.
  - ▶ Remove any foreign materials such as cables, thread or hair caught in the side brushes or the lower rotating brush.

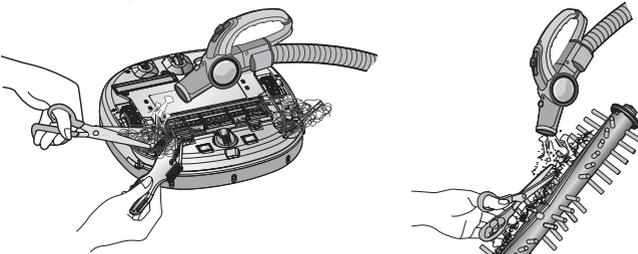

\* For a more detailed description of this process, refer to the instructions on page 49, 51.

# BEFORE YOU CALL FOR SERVICE

Confirm before reporting the failure of Robot Cleaner.


Problem	Solutions (Reference page)
The power supply cannot be turned on.	Check that the power switch is turned on. (Page 16)
The power supply automatically turns off.	This is not a failure. Robot Cleaner has its own power saving function. If it is not used for ten minutes after the power supply is turned on, the power will automatically turn off. (Page 18)
The Robot Cleaner will not charge.	<ul style="list-style-type: none"> <li>▶ Check whether the main power switch is turned on.</li> <li>▶ Remove objects around the home station. (Page 16)</li> <li>▶ Confirm that the power supply is connected to the home station. (Page 15)</li> <li>▶ Wipe the charging terminals with a dry cloth.</li> </ul>
Suction power becomes weak.	<ul style="list-style-type: none"> <li>▶ Check whether there is foreign material blocking the suction port. (Page 49)</li> <li>▶ Empty the dust bin. (Page 47)</li> <li>▶ Clean the dust bin filter. (Page 48)</li> </ul>
Noise becomes louder.	<ul style="list-style-type: none"> <li>▶ Confirm that the dust bin has been mounted properly.</li> <li>▶ Confirm that the dust bin filter has been mounted properly. (Page 48)</li> <li>▶ Check whether foreign material is caught in the brush. (Page 49)</li> </ul>
The Robot Cleaner will not activate.	<ul style="list-style-type: none"> <li>▶ Confirm that the power switch is turned on. (Page 16)</li> <li>▶ Confirm that the battery has been charged. (Page 19)</li> </ul>
The lower brush does not rotate.	<ul style="list-style-type: none"> <li>▶ Clean the brush. (Page 49)</li> <li>▶ Confirm that the brush has been mounted properly. (Page 49)</li> </ul>
Movements or travel path are abnormal.	<ul style="list-style-type: none"> <li>▶ Carefully wipe the sensors with a dry soft cloth. (Page 50)</li> <li>▶ If the ultra microfiber mop is attached, confirm that it is mounted properly. (Page 26)</li> <li>▶ Turn the main power switch off and on.</li> </ul>
The Robot Cleaner cannot be activated with the remote control.	<ul style="list-style-type: none"> <li>▶ Replace the remote control batteries. (Page 13)</li> <li>▶ Confirm that the control is within the coverage area of the main unit, which is less than 3 m. (Page 13)</li> <li>▶ Check whether the main power switch is turned on. (Page 16)</li> </ul>

## Open source software notice


To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.


## Removing / Refitting the battery pack

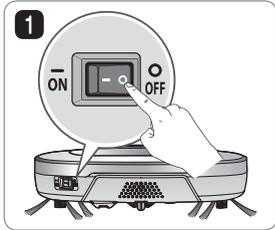


1 Turn off the main power switch on the back-left side of the Robot Cleaner.

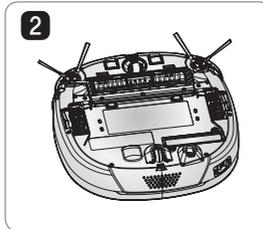


2 Place a soft cloth on the floor, remove the dust bin, and flip the Robot Cleaner over.

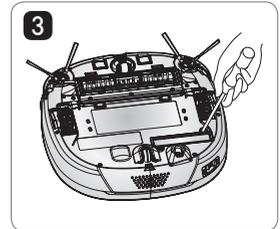


3 Remove the screws by using a Phillips head screwdriver.

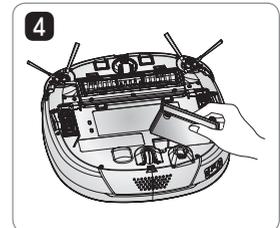

4 Remove the battery from the device.

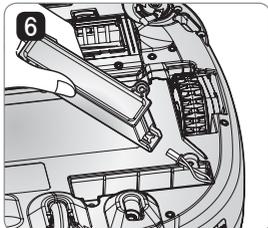

6 Refit the battery in the reverse order.

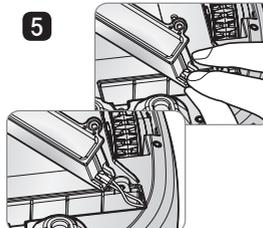

5 Press the connector release lug on the connecting plug to disconnect the battery wiring.

## WARNING

### Please be careful of fire, explosion, electric shock, or breakdown.

- Do not charge this Battery Pack with any other type of charger other than the one originally provided with the Robot Cleaner.
- Do not damage the battery pack in such ways as dropping, crushing, cutting, or shorting external contacts.
- Do not attempt to disassembly the battery pack In any case. When the battery pack is damaged or malfunctioning, bring it and the Robot cleaner and Home station to an authorised service center.
- Do not place the battery pack near a heat source or do not dispose of in fire or water.
- Please keep the battery pack away from any damp or wet environment when the pack is charged.
- Please keep away from children, infants or pets.


# [IEC 62929 STANDARD] SETTING FOR CLEANING PERFORMANCE TEST

## Dust Removal Test - Box(Hard Floor & Carpet)

1. Put fully charged Robot Cleaner down on start point and turn on.
2. Push 'TURBO' button on the Robot Cleaner or 'Turbo' button on the Remote Controller and Robot Cleaner will be set Turbo Mode.
3. Push 'Repeat' button on the Remote Controller and Robot Cleaner will be set Repeat Mode.
4. Push 'START/STOP' button on the Robot Cleaner or '▶||' button on the Remote Controller and Robot Cleaner will be operated.

## Dust Removal Test - Straight Line(Hard Floor & Carpet)

1. Put fully charged Robot Cleaner down on start point and turn on.
2. Push both 'Schedule' button and 'Mode' button for 3 seconds to access Test Mode(Straight).
3. (1) In case of testing on Hard Floor, LED expression : T-H.  
(2) In case of testing on Carpet, LED expression : T-C.  
\* Change LED expression by pushing 'Mode' button on the Remote Controller or 'MODE' button on the Robot Cleaner.
4. Push 'START/STOP' button on the Robot Cleaner or '▶||' button on the Remote Controller and Robot Cleaner will be operated.

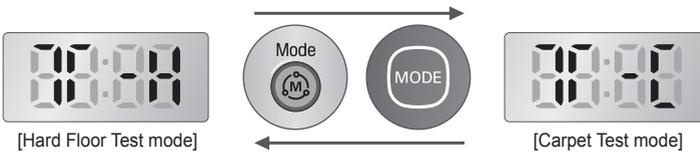

## Autonomous navigation/coverage test

1. Put fully charged Robot Cleaner down on start point and turn on.
  2. Push 'Repeat' button on the Remote Controller and Robot Cleaner will be set Repeat Mode.
  3. Push 'START/STOP' button on the Robot Cleaner or '▶||' button on the Remote Controller and Robot Cleaner will be operated.
- \* Use this mode only when organizations test cleaning performance or driving performance according to IEC62929