

OWNER'S MANUAL AIR CONDITIONER

Please read this manual carefully before operating your set and retain it for future reference.

Ceiling Concealed Duct - Low Static - High Static Original instruction

www.lg.com

Ceiling Concealed Duct - Low Static - High Static Type Indoor Unit Owner's Manual

TABLE OF CONTENTS

- Safety Precautions......3
- Prior to Operation,

Operating Instructions.....-

Name and function of wired remote controller(Accessory)....F€

Maintenance and Service %%

Before you Call for Service1H



Write the model and serial numbers here:

Model #

Serial #

You can find them on a label on the side of each unit.

Dealer's Name

Date Purchased

Staple your receipt to this page in the event you need to prove date of purchase or to issue warranty.

O READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of

Troubleshooting Tips first, you may not need to call for service at all.

PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- · Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

| A WARNII | NG This | symbol indicates the possibility of death of | or serious injury. |
|---------------------------------------------------------------------------------------|------------------------------------|------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | DN This | symbol indicates the possibility of injury of | or damage to properties only. |
| Meanings of symbols | s used in thi | s manual are as shown below. | |
| \bigcirc | | Be sure not to | do. |
| 0 | Be sure to follow the instruction. | | |
| | | | |
| Installation – | | | |
| Do not use a defectiv derrated circuit break this appliance on a do circuit. | ker. Use | For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center. | Always ground the product. |
| There is risk of fire or electric shock. | | Do not disassemble or repair the product. There is risk of fire or electric shock. | There is risk of fire or electric shock. |
| Install the panel and the cover of control box securely. | | Always install a dedicated cir- cuit and breaker. | Use the correctly rated breaker or fuse. |
| • There is risk of fire or e shock. | electric | Improper wiring or installation may cause fire or electric shock | There is risk of fire or electric shock. |
| Do not modify or exte power cable. | nd the | Do not install, remove, or re-in- stall the unit by yourself (cus- tomer). | Be cautious when unpacking and installing the product. |
| There is risk of fire or electric shock. | | There is risk of fire, electric shock, explosion, or injury. | • Sharp edges could cause injury. Be especially careful of the case edges and the fins on the con- denser and evaporator. |
| For installation, alway the dealer or an Author Service Center. | | Do not install the product on a defective installation stand. | Be sure the installation area does not deteriorate with age. |
| There is risk of fire, electric shock, explosion, or injury. | | It may cause injury, accident, or damage to the product. | If the base collapses, the air con- ditioner could fall with it, causing property damage, product failure, and personal injury. |

| Operation | | | | |
|--------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open. | | nsure that power of be pulled out or ng operation. | Do not place anything on the power cable. | |
| Moisture may condense and wet or damage furniture. | There is risk of fire or electric shock. | | There is risk of fire or electric shock. | |
| Do not plug or unplug the power supply plug during oper- ation. | Do not touch(operate) the prod- uct with wet hands. | | Do not place a heater or other appliances near the power cable. | |
| There is risk of fire or electric shock. | There is risk of fire or electrical shock. | | There is risk of fire and electric shock. | |
| Do not allow water to run into electric parts. | Do not store or use flammable gas or combustibles near the product. | | Do not use the product in a tightly closed space for a long time. | |
| • It may cause There is risk of fire, failure of the product, or electric shock. | There is risk of product. | fire or failure of | Oxygen deficiency could occur. | |
| When flammable gas leaks, turn off the gas and open a win- dow for ventilation before turn the product on. | If strange sounds, or small or smoke comes from product. Turn the breaker off or discon- nect the power supply cable. | | Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives. | |
| Do not use the telephone or turn switches on or off. There is risk of explosion or fire | There is risk of electric shock or fire. | | There is risk of property damage, failure of product, or electric shock. | |
| Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.) | When the product is soaked (flooded or submerged), con- tact an Authorized Service Cen- ter. | | Be cautious that water could not enter the product. | |
| There is risk of physical injury, electric shock, or product failure. | There is risk of shock. | fire or electric | There is risk of fire, electric shock or product damage. | |
| Ventilate the product from time to erating it together with a stove, e | | Turn the main power off when cleaning or main- taining the product. | | |
| There is risk of fire or electric shock. There is risk of electric shock. | | | | |
| When the product is not be used for a long time, Take care to ensure that nobody could step on or | | | | |

When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.

- There is risk of product damage or failure, or unintended operation.
- This could result in personal injury and product damage.

fall onto the outdoor unit.

| | = $($ A CAUTION $)=$ | |
|-------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Installation | | |
| Always check for gas (refrigerant) leakage after installation or repair of product. | Install the drain hose to ensure that water is drained away prop- erly. | Keep level even when installing the product. |
| Low refrigerant levels may cause failure of product. | A bad connection may cause water leakage. | To avoid vibration or water leak- age. |
| Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods. | Use two or more people to lift and transport the product. | Do not install the product where it will be exposed to sea wind (salt spray) directly. |
| It may cause a problem for your neighbors. | Avoid personal injury. | It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation. |
| Operation | | |
| Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.) | Do not use the product for special pur- poses, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system. | Do not block the inlet or outlet of air flow. |
| This could harm to your health. | There is risk of damage or loss of property. | It may cause product failure. |
| Use a soft cloth to clean. Do not use harsh detergents, solvents, etc. | Do not touch the metal parts of the product when removing the air filter. They are very sharp! | Do not step on or put anyting on the product. (outdoor units) |
| There is risk of fire, electric shock, or damage to the plastic parts of the product. | There is risk of personal injury. | There is risk of personal injury and failure of product. |
| Always insert the filter securely. Clean the filter every two weeks or more often if necessary. | Do not insert hands or other objects through the air inlet or outlet while the product is operated. | Do not drink the water drained from the product. |
| A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage. | There are sharp and moving parts that could cause personal injury. | It is not sanitary and could cause serious health issues. |
| Use a firm stool or ladder when cleaning or maintaining the product. | Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries. | Do not recharge or disassem- ble the batteries. Do not dispose of batteries in a fire. |
| Be careful and avoid personal injury. | There is risk of fire or explosion | They may burn or explode. |
| If the liquid from the batteries ge or clothes, wash it well with clear | ts onto your skin If you eat the li | Iney may burn or explode. quid from the batteries, brush you loctor. Do not use the remote if th |

use the remote if the batteries have leaked.

· The chemicals in batteries could cause burns or other health hazards.

OPERATING TEMPERATURE(°C)

| COOLING MODE | | | |
|--------------|------|---------|------|
| INDOOR | | OUTDOOR | |
| MAX. | MIN. | MAX. | MIN. |
| 32°C | 21°C | 43°C | 21°C |

| HEATING MODE | | | | |
|--------------|------|---------|------|--|
| INDOOR | | OUTDOOR | | |
| MAX. | MIN. | MAX. | MIN. | |
| 27°C | 20°C | 24°C | 1°C | |

batteries have leaked.

- teeth and see doctor. Do not use the remote if the
- The chemicals in batteries could cause burns or other health hazards.

Prior to Operation

Preparing for operation

- 1. Contact an installation specialist for installation.
- 2. Use a dedicated circuit.

Usage

- 1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
- Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
- 3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

Cleaning and maintenance


- 1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- 2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- 3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.

Service

For repair and maintenance, contact your authorized service dealer.

Operating Instructions

Name and function of wired remote controller(Accessory)

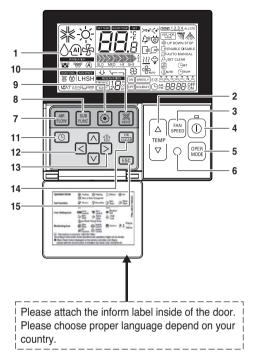


- 1. Operation indication screen
- 2. Set temperature button
 - It will set not room temperature but outlet air temperature.
- 3. Fan speed button
 - · Fan Speed have 3 Steps.
 - Middle and Low step is same
- 4. ON/OFF button
- 5. Opration mode selection button
- 6. Wireless remote controller receiver
 - · Some products don't receive the wireless signals.
- 7. Air flow button
- 8. Subfunction button
- 9. Function setting button
- 10. Ventilation button
- 11. Reservation
- 12. Up,down,left,right button
 - To check the indoor temperature, press [button.
- 13. Room temperature button
 - Displays only the room temperature of the remote controller perception.
 - · There is no control of room temperature.
 - In case of fresh air intake unit, displays only the temperature around remote controller.
- 14. Setting/Cancel button
- 15. Exit button

* Some functions may not be operated and displayed depending on the product type.

* It will display strange value to the room temperature if wired remote controller is not connected.

Model : PQRCVSL0 (Black Color) PQRCVSL0QW (White Color)

Name and function of wired remote controller(Optional)

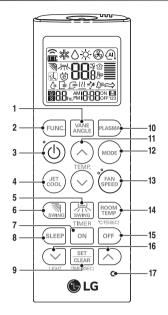

PQWRCQ0FDB (Cooling only) PQWRHQ0FDB (Heat pump)

Operation Mode 貒 Cooling Mode 亇 . Auto Mode or Auto Changeover (AI) Û . Dehumidification mode \triangle ₽ -ờ-**Heating Mode** Sp Fan Mode Cooling Model(√), Heat Pump Model(↓)

1. VANE ANGLE Button

Used to set each vane angle.

- 2. FUNCTION SETTING Button Used to set or clear Auto Clean, Smart Clean, Electric heater or Individual vane angle control.
- 3. ON/OFF Button Used to turn on/off the unit.
- 4. JET COOL Button Speed cooling operates super high fan speed.
- LEFT/RIGHT AIRFLOW Button (OPTIONAL) Used to set the desired left/right(horizontal) airflow direction.
- 6. UP/DOWN AIRFLOW Button

Used to stop or start louver movement and set the desired up/down airflow direction.

7. ON TIMER Button

Used to set the time of starting operation.

- 8. SLEEP TIMER Button Used to set the time of sleeping operation.
- 9. SET / CLEAR Button

Used to set/clear the timer. Used to set the current time(if it input for 3sec.)

- 10. PLASMA Button (OPTIONAL) Used to start or stop the plasma-purification function.
- 11. ROOM TEMPERATURE SETTING Button Used to select the room temperature.
- **12. OPERATION MODE SELECTION Button** Used to select the operation mode.
- INDOOR FAN SPEED SELECTION Button Used to select fan speed in four steps low, medium, high and chaos.
- 14. ROOM TEMPERATURE CHECKING Button Used to check the room temperature.
- 15. OFF TIMER Button Used to set the time of stopping operation.
- 16. TIMER SETTING(Up/Down)/LIGHT Button Used to set the timer. Used to adjust the brightness.(if it is not time adjust mode)
- 17. RESET Button

Used to reset the remote controller.

Maintenance and Service



CAUTION: Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Controller

 
Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

 


NOTICE Power supply must be disconnected before cleaning the indoor unit.

Air Filters

The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if neccessary.






Never use any of the followings:

 - Water hotter than 40°C. Could cause deformation and/or discoloration.
- Volatile substances. Could damage the surfaces of the air conditioner.






- 1. Remove the Air filters.
 - Take hold of the tab and pull slightly forward to remove the filter.



CAUTION: When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (50°C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

When the air conditioner is not going to be used for a long time.

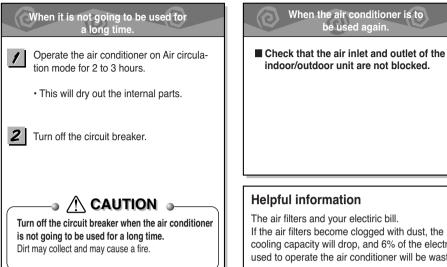

Helpful information

The air filters and your electiric bill. If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

be used again.

Operation Tips

| Do not overcool the room. This is not good for the health and wastes electricity. | Keep blinds or curtains closed. Do not let direct sunshine enter the room when the air conditioner is in operation. | Make sure that the doors and windows are shut tight. Avoid opening doors and win- dows as much as possible to keep the cool air in the room. |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Clean the air filter regularly. Blockages in the air filter re- duce the airflow and lower cooling and dehumidifying ef- fects. Clean at least once every two weeks. | Ventilate the room occasion- ally. Since windows are kept closed, it is a good idea to open them and ventilate the room now and then. | |

Before you call for service...



Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persists, please contact your dealer.

| The air conditioner does not operate. Have you made a mistake in timer operation? Has the fuse blown or has the circuit breaker been tripped? | The room has a peculiar odor. Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room. | It seems that con- densation is leaking from the air condi- tioner. • Condensation occurs when the airflow from the air conditioner cools the warm room air. | Air conditioner does not operate for about 3 minutes when restart. • This is the protector of the mechanism. • Wait about three min- utes and operation will begin. |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Does not cool or heat effectively. Is the air filter dirty? See air filter cleaning instructions. The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. Has the temperature been set incorrectly? Are the indoor unit's air inlet or outlet vents obstructed? | The air conditioner operation is noisy. For a noise that sounds like water flowing. This is the sound of freon flowing inside the air conditioner unit. For a noise that sounds like the compressed air releasing into atmosphere. This is the sound of the dehumidifying water being processed inside the air conditioning unit. | Crack sound is heard. • This sound is generated by the expansion/ con- striction of the front panel, etc. due to changes of temperature. Filter sign lamp (LED) is ON. • Cleaning the filter, press the Timer button and ◀ button of wired remote controller at the same time for 3 sec. | Remote control display is faint, or no display at all. • Are the batteries depleted? • Are the batteries inserted in the opposite (+) and (-) directions? |

NOTICE

WATER RESISTANT: The outdoor side of this appliance is WATER RESISTANT. The indoor side is not water resistant and should not be exposed to excess water.



