



SIMPLE MANUAL

Portable Bluetooth Speaker

MODELS
PK5/PK5L



MFL70480428


ENGLISH

FRANÇAIS

PORTUGUÊS

www.lg.com

Copyright © 2018 LG Electronics Inc.
All Rights Reserved.

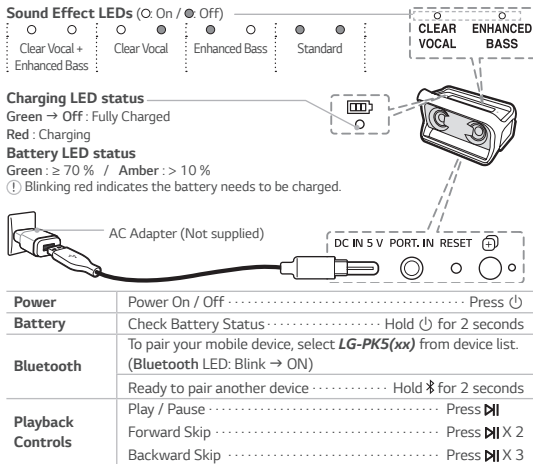


Handsfree	Receive / Disconnect Press ⏻
Volume	Volume Control Press — or +
Voice Command	Use voice command of your smart device Press 🗣️ ! Make sure use the smart device that has voice command.
Mood light	Party (Various colors) → Water (Blue tone) → Forest (Yellow tone) → [My style (Customizing)] → Off Hold 🌟 for 2 seconds ! To enable My Style option, you have to customize with "Music Flow Bluetooth" app. (Only Android)
Sound effect	Enjoy premium sound with MERIDIAN technology Press CLEAR VOCAL and/or ENHANCED BASS ! Fine-tune sound to provide optimal high-quality sound. For more information, refer to online owner's manual.
Dual Play (Optional)	You need two speakers. Press and hold each speaker's 🔊 button for 2 seconds. (Dual play LED: Blink → ON)

! Connect **Bluetooth** prior to use the Playback controls, Handsfree and Voice command.



Specification

Power Supply:

- 5 V  1.8 A (AC Adapter)
- Built-in rechargeable battery

Power consumption: Refer to the main label.

Dimensions (W x H x D):

- Approx. 220 mm X 129 mm X 119 mm

Operating Temperature: 5 °C to 35 °C

Operating Humidity: 5 % to 60 %

Water-proof: IPX5

- Degree of protection against jets of water.

Battery Life: Approx. 18 hours

(Varies by volume level and audio content.)

- Design and specifications are subject to change without notice.


NCA APPROVED: BR3-1M-GE2-0F8

TRC/LPD/2018/360

Important Notice

- Fully charge the device before using for the first time.
- It is recommended that you use the 5 V AC adapter (more than 1.8 A) with this unit
- For more information on Dual Play (Connection, Compatible models etc.), refer to online owner's manual.
 - The speaker might not synchronize sound with visuals in Dual play.
- To enjoy more features, download the "Music Flow Bluetooth" App to your device. (Only Android)
- **Resetting**

In the case of the speaker freezing due to malfunction, press the **RESET** button using an object like a thin pin.

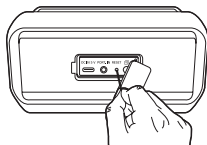

For more information, download the online owner's manual. <http://www.lg.com>