


Just to name a few examples of the
extraordinary features:

Table of Contents

Welcome to LG

Thank you for buying this LG video cassette recorder Model **AF491P/AF291P**.

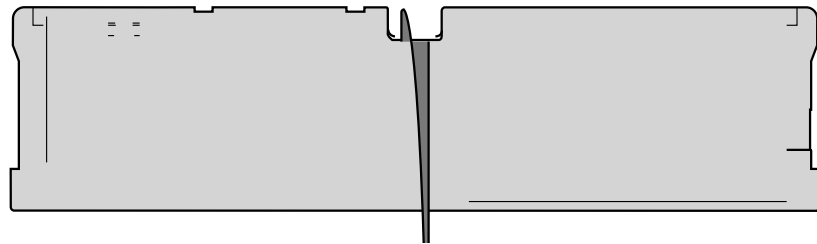

How to use the main menu

This VCR can easily be programmed by using the menus displayed on screen.
The menus are controlled from the REMOTE CONTROL HANDSET.

Turn on your TV set.

Press **i**.

Press **F** or **G** to select
the desired menu.

Press "**i**" to remove the
menu.

Press **POWER** to turn on
your VCR.

The main menu will
appear on the TV screen.

Press **OK** and press **D** or
E to select the sub
menu.

wish to watch videos.
select the channel you

Switch on your TV and

described earlier in this
channel on your TV as
VCR and tuned a video
correctly installed your



How to use the Shuttle Ring

TO ADVANCE THE TAPE RAPIDLY

Press the "STOP" button and turn the "SHUTTLE RING" clockwise.

TO REWIND THE TAPE

Press the "STOP" button and turn the "SHUTTLE RING" counterclockwise.

TO VIEW THE PICTURE DURING FAST FORWARD MODE OR REWIND MODE

Hold down the "SHUTTLE RING" clockwise during fast forward, and counterclockwise during rewind.

Slow motion playback, Shuttle (AF491P):

During playing back or still picture press **F** or **G**.

You can reach the following playback speeds.

(-7xplay, -3xplay, -play, -1/19 slow, still, 1/19 slow, play, 2xplay, 7xplay)

To switch off the slow motion and shuttle, press the desired function.

During slow motion and shuttle, the noise bars may appear on the picture accordDurito the status of tape.

If distortions can be seen in the picture, reduce them with **D** or **E**.

Press **STOP** to end playback.

Press **EJECT**.

If the end of the tape is reached, your VCR will stop playback automatically, rewind, stop, eject the tape and place itself into power off.

CM (Commercial Message) Skip:

This feature enables you during playback of a tape to skip a commercial break in a few seconds, then resume normal playback.

While tape is playing press **CM SKIP** on the remote control to skip commercial (or another programme material).

Repeatedly press **CM SKIP** to skip material:

- 1 Press 30 seconds
- 2 Press 60 seconds
- 3 Press 90 seconds
- 4 Press 120 seconds
- 5 Press 150 seconds
- 6T* [(5 Press)-1880 seconds

OPR (Optimum Picture Response):

This feature automatically improves playback picture quality by adjusting your VCR to the condition of the tape.

Press **i**.

Press **F** or **G** to select

OPR.

Press **OK**

|

Press **i**.

Press **F** or **G** to select
TIME DATE.

Press **OK**.

Use the **numbered buttons** on the remote control to alter or enter the **HOURS, MINUTES, DAY, MONTH** and **YEAR**.

Please note your VCR uses a 24 hour clock.
e.g. 1 pm will be displayed as 13:00.

When entering singles numbers a 0 must be added first, for example 1 must be entered as 01, 2 as 02 etc.

The day of the week will appear automatically when you enter the date.

If you make a mistake press **F** or **G** and enter the correct details.

Press **i**.

Your new clock settings are stored and will appear on your video recorder's display.

— |

| —

| —

Press the **numbered buttons** to enter the date of the programme.

Press the **numbered buttons** to enter the recording start and end times of the programme that you wish to record.

If you press **OK** before entering the date you may select one of the following automated recording features. Press **F** or **G** to select, then press **OK** to confirm.

DLY(Daily) To record every day (except Saturday and Sunday) at the same time.

Weekly To record at the same time every week.

Please note your VCR uses a 24 hour clock. e.g. 1 pm will be displayed as 13:00. You may also select the start and end times by pressing **▲** or **▼**.

Press **OK/CLK/CNT** repeatedly until the counter is displayed on screen.

Press **CLEAR** to set the counter to 0:00:00.

Press **PLAY** or start recording.

The tape counter will



Press **POWER** during
tape rewind.

Your VCR will turn itself
off after 15 minutes if it does
not receive a TV signal.

The tape will rewind to
the beginning and your VCR will automatically switch itself off.

Check points

Is the mains plug plugged in and switched on?
Is the TV switched on?
Try another channel, maybe a weak signal.
Check aerial is it plugged in? Check aerial, is the lead broken or damaged?
Have you tuned in a video channel on your TV to watch video on?
If you have used a SCART lead to connect your VCR and TV have you selected the AV channel on your TV?
Check tuning, carry out Automatic Tuning again

Are the TV channels tuned in properly?
Have you tried using another cassette?
Can you minimise the noise bars to an acceptable level with D or E ?

Can you get a picture on the TV?
Are the aerial leads and special RF connector lead between your VCR and TV connected?
Are the TV channels tuned in properly?
Has the safety tab on the video cassette been removed to prevent recording?
Try another station, maybe a weak signal
Check aerial is it plugged into TV?

Check points

Is the cassette compartment empty?
Are you trying to insert the cassette the right way round?

Is the mains plug plugged in and switched on?
Is the VCR switched on
Check the batteries in remote control.

Is the video cassette damaged, have you tried using another one?
Adjust the horizontal control on your TV.
Check aerial is it plugged into VCR?
Check aerial, is the lead broken or damaged?
Check for local interference
Make sure that you are using a video TV channel on your TV.

Has the safety tab been removed from the video cassette?