



# Instruction Manual

GB

 
F

D



I

E

NL

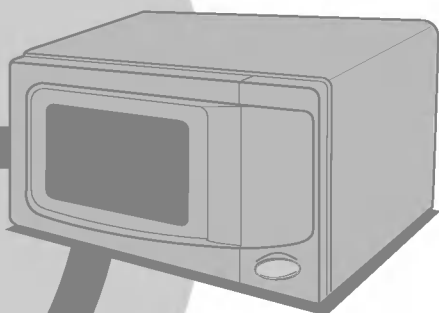

  MB-3907C • 2807C  
MG-3909D • 4907C • 4907D • 5807C • 5507D  
MS-1904C • 1905C(Y)(U) • 1907C(U) • 1947C(U) • 2507D • 2807C

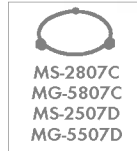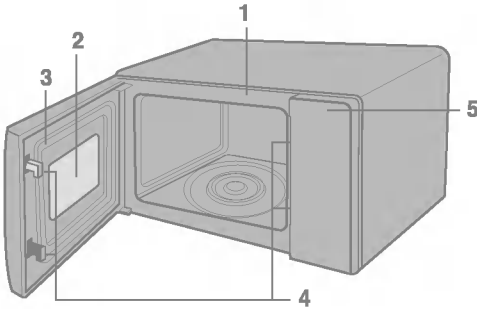

MB-3907C  
MB-3947C  
MG-3909D  
MG-4907C  
MG-4947C  
MG-5807C  
MG-5507D



8

**GB**

1. Front plate
2. Viewing window
3. Door seal
4. Safety lock system
5. Control panel
6. Glass tray
7. Roller rest
8. Grill rack

**NL**

1. Voorkant
2. Venster
3. Deurafdichting
4. Veiligheidsslot
5. Bedieningspaneel
6. Glazen bak
7. Roterende steun
8. Grille-rooster

**D**

1. Frontplatte
2. Sichtscheibe
3. Türdichtung
4. Sicherheitsverschluss
5. Bedienfeld
6. Glasschale
7. Rollenauflage
8. Grilleinschub

**I**

1. Piastra frontale
2. Vetro dello sportello
3. Guarnizione dello sportello
4. Sistema di bloccaggio di sicurezza
5. Pannello di controllo
6. Vassoio in vetro
7. Appoggio a rotelle
8. Griglia

 
**F**

1. Plaque avant
2. Vitre
3. Joint de porte
4. Système de verrouillage de sécurité
5. Tableau de commande
6. Plateau en verre
7. Support rouleaux
8. Grille


**E**

1. Placa delantera
2. Ventanilla
3. Precinto de la puerta
4. Sistema de cierre de seguridad
5. Cuadro de mandos
6. Plataforma de cristal
7. Soporte de giro
8. Parrilla


# Control Panel / Bedienfeld / Tableau de commande

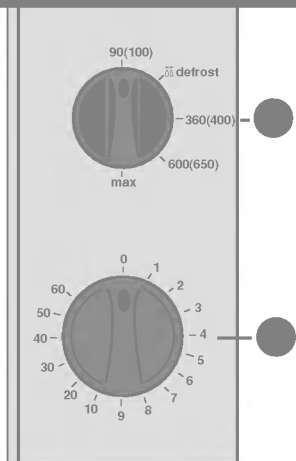

 
**MS-1905C(Y)(U)**  
**MS-1904C**  
**MS-1907C(U)**  
**MS-1947C(U)**  
**MS-2807C**

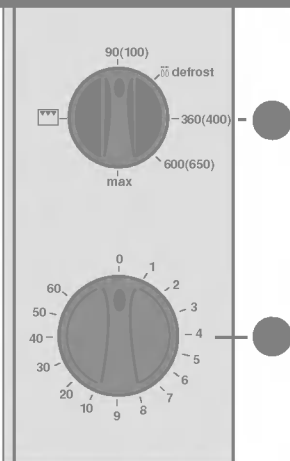


**MB-3907C**  
**MB-3947C**

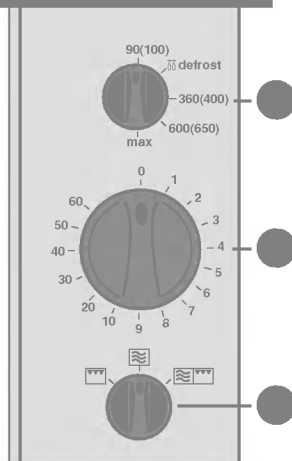 

 
**MG-4907C**  
**MG-4947C**  
**MG-5807C**

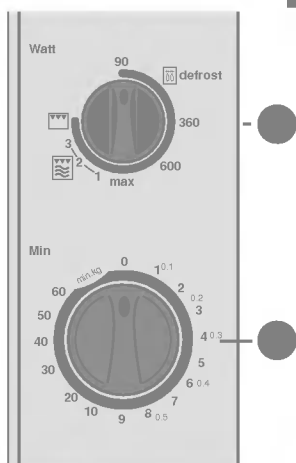

**MG-3909D**

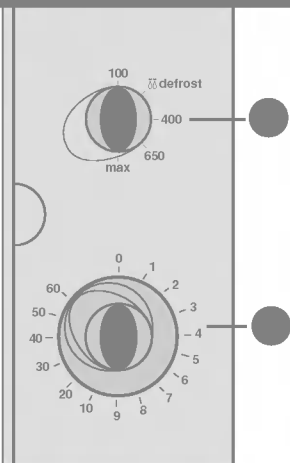 

**MS-2507D**

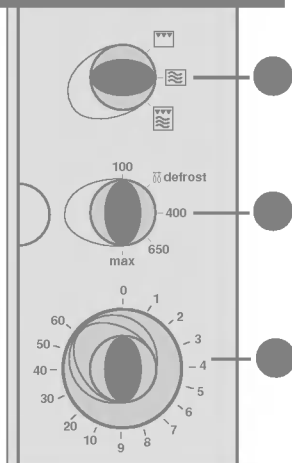 

**MG-5507D**

**GB**

- 1 Power selector**  
Allows selection of desired power.
- 2 Timer**  
permits selection of the desired cooking time.
- 3 Function selector**  
Allows selection of cooking mode.
- 4 Function & Power selector**

**NL**

- 1 Vermogens-selector**  
Hiermee kan het gewenste vermogen worden gekozen.
- 2 Timer**  
Hiermee kan de gewenste kooktijd worden ingesteld.
- 3 Functie-selector**  
Hiermee worden de juiste kookfuncties gekozen.
- 4 Functie- en vermogens-selector**

**D**

- 1 Netzschalter**  
Zur Wahl der gewünschten Stromstärke.
- 2 Zeitgeber**  
Zur Wahl der gewünschten Kochzeit.
- 3 Funktionsschalter**  
Zur Wahl der Kochfunktion.
- 4 Funktions- und Netzschalter**

**I**

- 1 Manopola di selezione della potenza**  
Consente di selezionare la potenza desiderata.
- 2 Orologio**  
Consente di selezionare il tempo di cottura desiderato.
- 3 Manopola di selezione delle funzioni**  
Consente di selezionare la modalità di cottura.
- 4 Manopola di selezione delle funzioni e della potenza**

**F**

- 1 Sélecteur de puissance**  
Permet de choisir la puissance désirée.
- 2 Minuterie**  
Permet de choisir le temps de cuisson désiré.
- 3 Sélecteur de fonction**  
Permet de choisir le mode de cuisson.
- 4 Sélecteur de fonction et de puissance**

**E**

- 1 Selector de energía**  
Para seleccionar la energía deseada.
- 2 Cronómetro**  
Para seleccionar el tiempo de calentamiento deseado.
- 3 Selector de funciones**  
Para seleccionar el modo de cocinar.
- 4 Selector de funciones y energía**

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

You cannot operate your oven with the door open due to the safety interlocks built into the door mechanism. These safety interlocks automatically switch off any cooking activity when the door is opened ; which in the case of a microwave oven could result in harmful exposure to microwave energy.

**It is important not to tamper with the safety interlocks.**

Do not place any object between the oven front face and the door or allow food or cleaner residue to accumulate on sealing surfaces. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.

Your oven should only be adjusted or repaired by anyone except qualified service personnel.

## WARNING

When heating liquids, e.g. soups, sauces and beverages in your microwave oven, delayed eruptive boiling can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Do not overheat.
3. Stir the liquid before placing the container in the oven and again halfway through the heating time.
4. After heating, allow to stand in the oven for a short time, stir or shake them (especially the contents of feeding bottles and baby food jars) again carefully and check and check the temperature before consumption to avoid burns (especially, contents of feeding bottles and baby food jars).  
Be careful when handling the container.

## Installation

1. Remove all packing materials and accessories.
2. Place the oven in the level location of your choice with more than 85cm height but make sure there is at least 30cm of space on the top and 10cm at the rear for proper ventilation. The side of the oven should be kept clear so there is air flow for ventilation. The front of the oven should be at least 8cm from the edge of the surface to prevent tipping.

An exhaust outlet is located on top or side of the oven. Blocking the outlet can damage the oven.

3. Plug your oven into a standard voltage household outlet. Ensure that the electrical circuit is at least 10 amps (13 amps for models MG-3909D • MG-4907C • MG-4947C • MG-5807C • MG-5507D) and that the oven is the only appliance on the circuit.

**NOTE:** • This appliance should not be used for commercial catering purposes.

## WARNING: THIS APPLIANCE MUST BE EARTHED

The wires in the mains lead are coloured in accordance with the following code:

|                  |           |
|------------------|-----------|
| Blue             | - Neutral |
| Brown            | - Live    |
| Green and Yellow | - Earth   |

If the power cord is damaged it must be replaced by the manufacturer or tis service agent or similarly qualified person in order to avoid a hazard.

## Precautions

- Do not operate the oven when empty. It is best to leave a glass of water in the oven when not in use. The water will safely absorb all microwave energy if the oven is accidentally started.
  - Do not dry clothes in the microwave oven. They may become carbonized or burned if heated too long.
  - Do not cook food wrapped in paper towels, unless your cook book contains instructions for the food you are cooking.
  - Do not use the oven for drying kitchen towels or paper products. They may burn.
  - Do not use wooden containers. They may heat up and char.
  - Do not use recycled paper products since they may contain impurities which may cause sparks and/or fires when used in cooking.
  - Allow the turntable to cool before cleaning.
  - Small amounts of food require shorter cooking or heating time. If normal times are allowed they may overheat and burn.
- Before cooking, pierce the skin of fruit and vegetables.
  - Do not cook eggs in their shell. Pressure will build up inside the egg which will burst.
  - Do not attempt deep fat frying in your oven.
  - Remove the plastic wrapping from food before cooking or defrosting. Note though that in some cases food should be covered with plastic film, for heating or cooking, as detailed in microwave cook books.
  - If smoke is observed, switch off or disconnect the oven from the power supply and keep the oven door closed in order to stifle any flames.
  - When food is heated or cooked in disposable containers of plastic, paper or other combustible materials, check the oven frequently due to the possibility of ignition.

- **WARNING :** Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- **WARNING :** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- **WARNING :** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person.
- **WARNING :** Do not attempt to tamper with, or make any adjustments or repairs to the door, control panel, safety interlock switches or any other part of the oven. It is hazardous for anyone to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy. Repairs should only be undertaken by a qualified service technician.

## COOKING UTENSILS

Utensils should be checked to ensure that they are suitable for use in microwave oven.

The following chart summarises the proper use of cooking utensils in your oven:

| Cooking utensils                    | Microwave   | Grill |
|-------------------------------------|---|-------|
| Heat resistant glass, glass ceramic | yes   | yes   |
| Ceramic, china                      | yes<br>(Do not use china with gold or silver trim.) | yes   |
| Metal cookware                      | no  | yes   |
| Non-heat resistant glass            | no  | no    |
| Microwave plastic                   | yes   | no    |
| Plastic wrap                        | yes   | no    |
| Paper (cup, plates, towels)         | yes   | no    |
| Straw, wicker and wood              | no  | no    |

### Microwave

- Most glass, glass ceramic, and heat resistant glassware utensils are excellent. Those with metal trim should not be used in a microwave oven.
- Paper napkins, towels, plates, cups, cartons, and cardboard can be used in the microwave oven. Do not use recycled paper products since they may contain impurities which may cause sparks and/or fires when used in cooking.  
(Consult your cookbook for correct use of these products.)
- Plastic dishes, cups, freezer bags, and plastic wraps may be used in the microwave oven. Follow the manufacturer's instructions or the information given in the cookbook when using plastics in the microwave oven.
- Metal utensils and utensils with metallic trim should not be used in the microwave oven. For more information on the proper use of metal in your oven, please read the introduction section in the cookbook. If the use of aluminum foil, skewers, or utensils containing metal in the oven is specified in the recipe, allow at least 2.5cm clearance between the metal object and the interior oven wall. If arcing (sparks) occurs, remove immediately.

### Note:

Consult your cookbook, individual recipes, and charts for correct use of cooking containers, products, and other useful information.

### Grill

- Heat resistant glassware, ceramic and metal cookware can be used.
- Paper napkins, towels, and plastics should not be used.

### Notes:

- Care should be taken when removing utensils or the glass turntable, as they may become hot during cooking.
- Only use a thermometer that is designed or recommended for use in the microwave oven.
- Ensure the turntable is in place when you operate the oven.

## Other Helpful Instructions

**For best results and more enjoyable cooking, please read these comments thoroughly.**

### For Best Results:

1. When determining the time for a particular food, begin by using minimum time and checking condition occasionally. It is easy to overcook food because microwaves cook very quickly.
2. Small quantities of food, or foods with low water content may dry out and become hard if cooked too long.

### Defrosting Frozen Foods:

1. Foods that have been frozen can be placed directly in the oven for thawing. (Be certain to remove any metallic ties or wraps.)
2. Defrost according to the Defrosting Tips found in this Manual.
3. For areas of the food thawing faster than others, cover with small pieces of aluminium foil. This helps slow down or stop the defrosting process.
4. Some foods should not be completely thawed before cooking. For example, fish cooks so quickly that it is sometimes better to begin cooking while still slightly frozen.

5. It may be necessary to increase or decrease the cooking time in some recipes, depending on the starting temperature of the foods.

### NOTE:

Air from the vent may become warm during cooking.

### Browning:

There are a few foods which are not cooked long enough in the microwave oven to brown and may need additional colour.

Coatings such as paprika, and browning agents such as Worcestershire sauce may be used on chops, meat patties or chicken pieces. Roasts, poultry or ham, cooked for 10-15 minutes or longer, will brown without extra additives.

## Cleaning and Care

### BE SURE THE OVEN IS TURNED OFF BEFORE CLEANING.

Keep the oven interior surfaces clean and dry. As a general rule clean after each use.

### INTERIOR WALLS

Remove any crumbs and food remains between the door and oven using a damp cloth. This area has to be particularly well cleaned to ensure the door will close properly. Remove any grease splashes with a soapy cloth then rinse and dry. Do not use abrasives which may scratch and damage the painted surface of the oven.

NEVER POUR WATER INTO THE OVEN

### ROLLER REST

The roller rest should be removed and cleaned in hot soapy water at least once a week to prevent grease restricting the rotation of the wheels.

### DOOR

The door and door seals should be kept clean at all times. Use only warm, soapy water to rinse then dry thoroughly.

DO NOT USE ABRASIVE MATERIALS, SUCH AS CLEANING POWDERS OR STEEL AND PLASTIC PADS.

Metal parts will be easier to maintain if wiped frequently with a damp cloth.

### EXTERIOR

Clean with mild soap and warm water, rinse and dry with a soft cloth. Do not use abrasive materials. Do not spill water in the vents. If the power lead becomes soiled wipe it with a damp cloth.



## MICROWAVE COOKING

See page 3.

1. Open the oven door, place the food on the turntable in the oven, and close the oven door.
2. For models MG-4907C, MG-4947C, MG-5807C and MG-5507D, set function selector (3) to micro function (☰).  
For all other ovens, skip this step.
3. Set the power selector (1, 4) to the desired power level. There are five power levels from 90/100 Watts to max. The power selector can be set to any one of these positions.

|  |   |
|--|---|
| MS-1904C • MS-1905C/CY/CU<br>MS-1907C/CU • MS-1947C/CU<br>MB-3907C/CU • MB-3947C<br>MG-4907C • MG-4947C • MG-3909D<br>(Watt) | MS-2507D<br>MS-2807C<br>MG-5807C<br>MG-5507D<br>(Watt)  |
| <ul style="list-style-type: none"> <li>• max</li> <li>• 600</li> <li>• 360</li> <li>• ☰ defrost</li> <li>• 90</li> </ul>     | <ul style="list-style-type: none"> <li>• max</li> <li>• 650</li> <li>• 400</li> <li>• ☰ defrost</li> <li>• 100</li> </ul> |

4. Set the timer (2) to the desired cooking time. The turntable begins to rotate and cooking starts. At the end of cooking time the bell will ring, and the lamp is turned off.

### Note:

- Each number on the scale represents one minute. To ensure accurate timing, it is advisable to turn the timer knob slightly past the desired cooking time and then back to the proposed setting.
- Press the door opener to check the cooking condition during oven operation. Opening the door during cooking automatically turns off the oven and stops the timer. If cooking is to continue, close the door - the oven will turn on and the timer will resume counting.
- The turntable may rotate in either direction.

## WEIGHT DEFROST COOKING

See page 3.

Defrosting frozen food is one of the benefits of a microwave oven. Defrosting using a microwave oven is much faster than in the refrigerator and safer than at room temperature, as it does not promote the growth of harmful bacteria.

It is important to remember that defrosting takes longer than normal cooking. Check the food, turning it over at least once during defrosting.

1. For models MG-4907C, MG-4947C, MG-5807C and MG-5507D set function selector (3) to micro function (☰). For all other ovens, skip this step.
2. Turn the power select knob (1, 4) to set the defrosting mode. (☰)
3. Turn the timer knob (2) clockwise to set the weight (kg) of food.

**NOTE:** The oven starts working as soon as the timer knob is turned. Each number on the scale represents one kg.

**MB-3907C • MB-3947C • MG-3909D  
MG-5507D • MG-4907C • MG-4947C  
MG-5807C**

**MG-3909D • MG-4907C • MG-4947C  
MG-5807C • MG-5507D**

## GRILL COOKING

See page 3.

1. Open the oven door, place the food on the rack in the oven, and close the oven door.
2. For models MB-3907C, MB-3947 and MG-3909D, turn the function & power selector (4) to grill mode (☐). For models MG-4907C, MG-4947C, MG-5807C or MG-5507D, turn the function selector (3) to grill mode (☐).
3. Set the timer (2) to the desired cooking time. The turntable begins to rotate, cooking starts, and the lamp is turned on. At the end of the cooking time you will hear the bell ring and the lamp is turned off.
  - Refer to the note under MICROWAVE COOKING if you want to check the cooking condition.
  - Don't touch the viewing window during grill operation, because the temperature of the glass may rise up to 100°C.
  - Prevent children from touching the front screen!
  - When the grill is operated for the first time after purchasing the oven, some smoke may be observed. This will soon disappear.

### Note:

- Use of the grill rack is preferable, as time and performance of cooking will vary when turntable is used alone.
- This model is fitted with a QUARTZ GRILL, so preheating is not necessary.

## COMBINATION COOKING

See page 3.

The above models have a combination cooking mode which allows you to cook food with **grill** (☐) and **microwave** (☒) at the same time. The time it takes to cook food using this mode is generally shorter than using the two features separately.

1. Open the oven door, place the food on the turntable or rack in the oven and close the oven door.
2. Turn the function selector (3) (4) to COMBI mode (☒ + ☐)(☒) and power selector (1) to the desired power level.
3. Set the timer (2) to the desired cooking time. The turntable begins to rotate and cooking starts. At the end of cooking time you will hear the bell ring, and the lamp is turned off.

The **quartz heater** grills the surface of the food while **microwave** cooking reaches inside.

**CAUTION: After use, be sure to return the TIMER to 0 or the oven will continue to operate.**

**Be careful when removing your food the container will be hot!**

## Heating or Reheating Guide

To heat or reheat successfully in the microwave, it is important to follow several guidelines. Measure the amount of food in order to determine the time needed to reheat. Arrange the food in a circular pattern for best results. Room temperature food will heat faster than refrigerated food. Canned foods should be taken out of the can and placed in a microwavable container. The food will be heated more evenly if covered with a microwavable lid or vented plastic wrap. Remove cover carefully to prevent steam burns. Use the following chart as a guide for reheating cooked food.

| Item   | Cook time<br>(at HIGH)        | Special Instructions  |
|--|-------------------------------|---|
| Sliced meat<br>3 slices (0.5cm thick)  | 1½~2½ minutes                 | Place sliced meat on microwavable plate.<br>Cover with plastic wrap and vent.<br>• Note: Gravy or sauce helps to keep meat juicy.             |
| Chicken pieces<br>1 breast<br>1 leg and thigh  | 2~3½ minutes<br>1½~2½ minutes | Place chicken pieces on microwavable plate.<br>Cover with plastic wrap and vent.  |
| Fish fillet<br>(170-230g)  | 1~2½ minutes                  | Place fish on microwavable plate.<br>Cover with plastic wrap and vent.  |
| Lasagne<br>1 serving (300g)  | 4½~7 minutes                  | Place lasagne on microwavable plate.<br>Cover with plastic wrap and vent.   |
| Casserole<br>1 cup<br>4 cups   | 1½~3½ minutes<br>5~7½ minutes | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |
| Casserole<br>cream or cheese<br>1 cup<br>4 cups                                      | 1½~3 minutes<br>4~6½ minutes  | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |
| Sloppy Joe or<br>Barbecued beef<br>1 sandwich<br>(½ cup meat filling)<br>without bun | 1~3 minutes                   | Reheat filling and bun separately.<br>Cook filling covered in microwavable casserole dish.<br>Stir once. Heat bun as directed in chart below. |
| Mashed potatoes<br>1 cup<br>4 cups   | 2~3½ minutes<br>6~8½ minutes  | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |
| Baked beans<br>1 cup   | 2~3½ minutes                  | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |
| Ravioli or pasta in sauce<br>1 cup<br>4 cups   | 3~4½ minutes<br>8~11½ minutes | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |
| Rice<br>1 cup<br>4 cups  | 1½~2 minutes<br>4~6 minutes   | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |
| Sandwich roll or bun<br>1 roll   | 20~35 seconds                 | Wrap in paper towel and place on glass tray.  |
| Vegetables<br>1 cup<br>4 cups  | 1½~3 minutes<br>4~6 minutes   | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |
| Soup<br>1 serving (8 oz.)  | 2~3 minutes                   | COOK covered in microwavable casserole dish.<br>Stir once halfway through cooking.  |

## Fresh Vegetable Chart

| Vegetable  | Amount                   | Cook time<br>(at HIGH) | Instructions   | Standing<br>Time           |
|--|--------------------------|------------------------|--|----------------------------|
| Artichokes<br>(230g each)                          | 2 medium<br>4 medium     | 5~8<br>11~13           | Trim. Add 2 tsp water and 2 tsp juice.<br>Cover.   | 2-3 minutes                |
| Asparagus,<br>Fresh, Spears                        | 450g                     | 3~7                    | Add ½ cup water. Cover.  | 2-3 minutes                |
| Green Beans  | 450g                     | 8~12                   | Add ½ cup water in 1.5 litre casserole<br>dish. Stir halfway through cooking.                              | 2-3 minutes                |
| Beets, Fresh                                       | 450g                     | 13~18                  | Add ½ cup water in 1.5 litre covered casserole<br>dish. Rearrange halfway through cooking.                 | 2-3 minutes                |
| Broccoli, Fresh,<br>Spears                         | 450g                     | 5~9                    | Place broccoli in baking dish.<br>Add ½ cup water.   | 2-3 minutes                |
| Cabbage, Fresh,<br>Chopped                         | 450g                     | 6~8                    | Add ½ cup water in 1.5 litre covered casserole<br>dish. Stir halfway through cooking.                      | 2-3 minutes                |
| Carrots, Fresh,<br>Sliced                          | 200g                     | 3~6                    | Add ½ cup water in 1 litre covered casserole<br>dish. Stir halfway through cooking.                        | 2-3 minutes                |
| Cauliflower,<br>Fresh, Whole                       | 450g                     | 8~10                   | Trim. Add ½ cup water in 1 litre covered<br>casserole dish. Stir halfway through cooking.                  | 2-3 minutes                |
| Fresh, Flowerettes                                 | 2 cups                   | 3~6                    | Slice. Add ½ cup water in 1.5 litre covered<br>casserole dish. Stir halfway through cooking.               | 2-3 minutes                |
| Celery, Fresh,<br>Sliced                           | 4 cups                   | 8~10                   |  |                            |
| Corn, Fresh  | 2 ears                   | 5~9                    | Husk. Add 2 tbsp water in 1.5 litre baking dish.<br>Cover.   | 2-3 minutes                |
| Mushrooms,<br>Fresh, Sliced                        | 230g                     | 2~3                    | Place mushrooms in 1.5 litre covered<br>casserole dish. Stir halfway through cooking.                      | 2-3 minutes                |
| Parsnips, Fresh,<br>Sliced                         | 450g                     | 4~8                    | Add ½ cup water in 1.5 litre covered<br>casserole dish. Stir halfway through cooking.                      | 2-3 minutes                |
| Peas, Green,<br>Fresh                              | 4 cups                   | 7~10                   | Add ½ cup water in 1.5 litre covered<br>casserole dish. Stir halfway through cooking.                      | 2-3 minutes                |
| Sweet Potatoes<br>Whole Baking<br>(170~230g each)  | 2 medium<br>4 medium     | 5~10<br>7~13           | Pierce potatoes several times with fork.<br>Place on 2 paper towels.<br>Turn over halfway through cooking. | 2-3 minutes<br>2-3 minutes |
| White potatoes,<br>Whole Baking<br>(170~230g each) | 2 potatoes<br>4 potatoes | 6~8<br>10~15           | Pierce potatoes several times with fork.<br>Place on 2 paper towels.<br>Turn over halfway through cooking. | 2-3 minutes<br>2-3 minutes |
| Spinach, Fresh,<br>Leaf                            | 450g                     | 5~8                    | Add ½ cup water in 2 litre covered casserole dish.   | 2-3 minutes                |
| Courgette, Fresh,<br>Sliced                        | 450g                     | 5~8                    | Add ½ cup water in 1.5 litre covered casserole<br>dish. Stir halfway through cooking.                      | 2-3 minutes                |
| Courgette, Fresh,<br>Whole                         | 450g                     | 7~10                   | Pierce. Place on 2 paper towels.<br>Turn courgette over and rearrange halfway<br>through cooking.          | 2-3 minutes                |

## Defrosting meats tips & techniques

- You can defrost meats in their original wrapping as long as no metal is present. If necessary, shield small areas of meat or poultry with flat pieces of aluminium foil. This will prevent thin areas becoming warm during defrosting. Ensure the foil does not touch the oven walls.
- Food to be defrosted should be in a suitable microwave safe container and placed uncovered on the glass turntable.
- Defrost meats only as long as necessary. Separate items like minced meat, chops, sausages and bacon as soon as possible. Remove defrosted portions and continue to defrost remaining pieces. It is essential that food is checked during DEFROSTING as different foods vary in their defrosting speed.
- Whole pieces of meat are ready for standing time as soon as a fork can be pushed into the center of the meat using moderate pressure. The center will still be icy. Allow to stand until completely thawed.
- Defrost meat on defrost mode.

| Food                      | Weight     | Defrosting time (minutes) | Standing time (minutes) | Remark   |
|---------------------------|------------|---------------------------|-------------------------|--|
| <b>BEEF</b>               |            |                           |                         |  |
| Frankfurter               | 450g       | 4-5                       | 5-10                    | Turn over after half the time.                                 |
| Minced beef               | 500g       | 7-9                       | 5-10                    | Turn over after two thirds of the time, remove thawed portion. |
| Steak, sirloin            | 450g       | 5-7                       | 5-10                    | Turn over after half the time. Separate.                       |
| Roast, loin(boneless)     | 1000g      | 10-15                     | 10-15                   | Turn over after half the time. Shield as needed.               |
| Patties                   | 4ea (114g) | 5-8                       | 5-10                    | Turn over after half the time.                                 |
| <b>PORK</b>               |            |                           |                         |  |
| Mince                     | 500g       | 7-9                       | 5-10                    | Turn over after two thirds of the time, remove thawed portion. |
| Chops                     | 450g       | 5-6                       | 5-10                    | Separate and turn over once.                                   |
| Roast, loin(boneless)     | 1000g      | 10-15                     | 10-15                   | Turn over after half the time. Shield as needed.               |
| <b>POULTRY</b>            |            |                           |                         |  |
| Whole Chicken             | 1000g      | 17-23                     | 10-15                   | Separate and rearrange once. Shield as needed.                 |
| Breasts (with bone)       | 450g       | 5-7                       | 5-10                    | Separate and rearrange once.                                   |
| Drumsticks                | 450g       | 8-9                       | 5-10                    | Separate and rearrange once.                                   |
| Thighs                    | 450g       | 8-9                       | 5-10                    | Separate and rearrange once.                                   |
| Wings                     | 450g       | 6-8                       | 5-10                    | Separate and rearrange once.                                   |
| <b>FISH &amp; SEAFOOD</b> |            |                           |                         |  |
| Whole fish                | 450g       | 6-8                       | 5-10                    | Turn over after half the time. Shield as needed.               |
| Fish filelts              | 500g       | 7-9                       | 5-10                    | Separate and rearrange once.                                   |
| Shrimp                    | 250g       | 4-6                       | 5-10                    | Separate and rearrange once.                                   |

## Grill Cooking Chart

### Directions for grilling meat on grill

- Trim excess fat from meat. Cut fat, making sure you do not cut into the lean. (This will stop the fat curling.)
- Arrange on the rack. Brush with melted butter or oil.
- Halfway through, turn the meat over.

| Item                          | Weight              | Approx. Cooking time (in minutes) | Hints  |
|-------------------------------|---------------------|-----------------------------------|--|
| Beefburgers                   | 50g x 2<br>100g x 2 | 13-16<br>19-23                    | Baste with oil or melted butter. Thin items should be placed on the grill rack. Thick items can be placed on to a drip tray. Turn food over after half the cooking time. |
| Beefsteaks (2.5cm (1") thick) |                     |                                   |  |
| Rare                          | 230g x 2            | 18-20                             |  |
| Medium                        | 230g x 2            | 22-24                             |  |
| Well                          | 230g x 2            | 26-28                             |  |
| Pork chops (2.5cm (1") thick) | 230g x 2            | 27-32                             |  |
| Lamb chops (2.5cm (1") thick) | 230g x 2            | 25-32                             |  |
| Sausages                      | 230g                | 13-16                             | Turn frequently.   |

### Directions for grilling fish and seafood

Place fish and seafood on the rack. Whole fish should be scored diagonally on both sides before grilling. Brush fish and seafood with melted butter, margarine or oil before and during cooking. This helps stop the fish drying out. Grill for times recommended in the chart. Whole fish and fish steaks should be carefully turned over halfway through grilling time. If desired thick fillets can also be turned halfway.

| Item   | Weight                | Approx. Cooking time (in minutes) | Hints   |
|--|-----------------------|-----------------------------------|---|
| Fish fillets<br>1cm (½") thick<br>1.5cm (¾") thick | 230g<br>230g          | 17-21<br>20-24                    | Brush with melted butter and turn over halfway through cooking. |
| Fish steaks<br>2.5cm (1") thick                    | 230g                  | 24-28                             |   |
| Whole fish   | 225-350g each<br>450g | 16-20<br>24-28                    | Allow extra time for thick and oily fish.                       |
| Scallops<br>Prawns uncooked                        | 450g<br>450g          | 16-20<br>16-20                    | Baste well during cooking.                                      |

Q. What's wrong when the oven light will not glow?

- A. ■ Light bulb has blown.  
■ Door is not closed.

Q. Why is steam coming out of the air exhaust vent and/or why is water dripping from the bottom of the door?

- A. Steam is normally produced during cooking operations. The microwave has been made to vent this steam out of the side vent, occasionally this steam condenses on the door and water then drips out at the bottom of the door. This is quite normal and safe.

Q. Does microwave energy pass through the viewing screen in the door?

- A. No. The metal screen reflects the energy to the oven cavity. The holes, or ports are made to allow light to pass; they do not let microwave energy through.

Q. Will the microwave oven be damaged if it operates while empty?

- A. Yes. Never run it empty.

Q. Why do eggs sometimes pop?

- A. When baking or poaching eggs, the yolk may pop due to steam build-up inside the yolk membrane. To prevent this, simply pierce the yolk with a toothpick before cooking. Never cook eggs without piercing their shells.

Q. Why is standing time recommended after the cooking operation has been completed?

- A. Standing time is very important. With microwave cooking, the heat is in the food, not in the oven.

Many foods build up enough internal heat to allow the cooking process to continue, even after the food is removed from the oven. Standing time for joints of meat, large vegetables and cakes is to allow the inside to cook completely, without overcooking the outside.

Q. Why does my oven not always cook as fast as the microwave cooking guide says?

- A. Check your cooking guide again, to make sure you've followed directions exactly; and to see what might cause variations in cooking time. Cooking guide times and heat settings are suggestions, to help prevent over-cooking . . . the most common problem in getting used to a microwave oven. Variations in the size, shape and weights and dimensions could require longer cooking time. Use your own judgement along with the cooking guide suggestions to check whether the food has been properly cooked just as you would do with a conventional cooker.

Q. Why do sparks and crackling (arcing) occur in the oven?

- A. There may be several reasons why sparks and crackling (arcing) within cavity happens.
- You are using dishes with metal parts or trim (silver or gold).
  - You have left a fork or other metal utensil in the oven.
  - You are using a large amount of metal foil.
  - You are using a metal twist-tie.

## Technical Specifications

|                                   | <b>MS-1905C(Y)(U)</b> | <b>MS-1904C • 1907C(U) • 1947C(U)</b> |
|-----------------------------------|-----------------------|---------------------------------------|
| Power Input                       | 230 V AC, 50 Hz       | 230 V AC, 50 Hz                       |
| Output (IEC 705 RATING STANDARD)  | 750 Watts             | 800 Watts                             |
| Microwave Frequency               | 2450 MHz              | 2450 MHz                              |
| Outside Dimensions (W x H x D mm) | 483 x 285 x 334       | 483 x 285 x 334                       |
| Power Consumption                 | 1150 Watts            | 1250 Watts                            |

|                                   | <b>MS-2807C</b> |
|-----------------------------------|-----------------|
| Power Input                       | 230 V AC, 50 Hz |
| Output (IEC 705 RATING STANDARD)  | 900 Watts       |
| Microwave Frequency               | 2450 MHz        |
| Outside Dimensions (W x H x D mm) | 530 x 322 x 385 |
| Power Consumption                 | 1300 Watts      |

|                                   | <b>MB-3907C • 3947C</b> |
|-----------------------------------|-------------------------|
| Power Input                       | 230 V AC, 50 Hz         |
| Output (IEC 705 RATING STANDARD)  | 800 Watts               |
| Microwave Frequency               | 2450 MHz                |
| Outside Dimensions (W x H x D mm) | 483 x 285 x 334         |
| Power Consumption                 |                         |
| Microwave                         | 1250 Watts              |
| Grill                             | 1100 Watts              |

|                                   | <b>MG-3909D • 4907C • 4947C</b> | <b>MG-5807C</b> |
|-----------------------------------|---------------------------------|-----------------|
| Power Input                       | 230 V AC, 50 Hz                 | 230 V AC, 50 Hz |
| Output (IEC 705 RATING STANDARD)  | 800 Watts                       | 900 Watts       |
| Microwave Frequency               | 2450 MHz                        | 2450 MHz        |
| Outside Dimensions (W x H x D mm) | 483 x 285 x 334                 | 530 x 322 x 385 |
| Power Consumption                 |                                 |                 |
| Microwave                         | 1250 Watts                      | 1350 Watts      |
| Grill                             | 1100 Watts                      | 1250 Watts      |
| Combination                       | 2300 Watts                      | 2550 Watts      |

|                                   | <b>MG-5507D</b> | <b>MS-2507D</b> |
|-----------------------------------|-----------------|-----------------|
| Power Input                       | 230 V AC, 50 Hz | 230 V AC, 50 Hz |
| Output (IEC 705 RATING STANDARD)  | 850 Watts       | 900 Watts       |
| Microwave Frequency               | 2450 MHz        | 2450 MHz        |
| Outside Dimensions (W x H x D mm) | 510 x 306 x 378 | 510 x 306 x 378 |
| Power Consumption                 |                 |                 |
| Microwave                         | 1300 Watts      | 1350 Watts      |
| Grill                             | 1250 Watts      |                 |
| Combination                       | 2500 Watts      |                 |

- Dimensions shown are approximate.
- Because we continually strive to improve our products we may change specifications without prior notice.



## MAFF

This microwave oven has been tested and labelled to the Ministry of Agriculture Fisheries and Food (MAFF) agreement, concerning the reheating of cooked chilled food.

The heating category represents the oven's ability to heat small quantities of food (approx. 350g), it does not represent the oven's general performance. The category (from the letter A to E) will help you to reheat small quantities of food such as microwavable ready meals. The greater heating category of the oven, the less heating time is required.

Displayed on the food packages will be the cooking times for each of the BAND categories. For example **A** may be 10 minutes. **B** may be 9 minutes etc depending on the food type.

Three wavy lines denotes oven tested in compliance with the agreement.

Denotes the microwave oven output power.

MS-1907C/CU  
MS-1947C/CU  
MB-3907C  
MB-3947C  
MG-3909D  
MG-4907C



This category links with the heating times given on food.



MS-2807C  
MG-5807C  
MS-2507D



MS-1905C/CY/CU



MG-5507D

## Wiring

The wires in this mains lead are coloured in accordance with the following codes

BLUE ~ Neutral

BROWN ~ Live

GREEN & YELLOW ~ Earth

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings on the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or Coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

The wire which is coloured GREEN & YELLOW or GREEN must be connected to the terminal which is marked with the letter E or  $\perp$

You must use a 13 Amp plug (BS 1363) and fit a 13 Amp fuse (BS 1362). If any other of type of plug is used a 13 Amp fuse must be fitted either in the plug adapter or at the distribution board. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your supplying dealer or LG Electronics.

