



Room Air Conditioner

(Window Type)

OWNER'S MANUAL

ТҰРМЫСТЫҚ АУА КОНДИЦИОНЕРІ

(Терезеге орнатуға арналған)

ПАЙДАЛАНУШЫ БАСШЫЛЫҚҚА АЛАТЫН НҰСҚАУ



BE01

Prior to installation, this conditioning unit must be submitted for approval to the utility service which provides electricity (Eurasian Conformity Norm).

Кондиционерді орнатар алдында, кондиционерді орнатуға рұқсат алу үшін өзіңізді электр энергиясымен қамтамасыз ететін қызмет көрсету орнына хабарласуыңыз қажет (Еурасиялық 000-3 Norm құжаты).

Safety Precautions

Safety Precautions3

Operating Instructions

About the Controls on the Air
Conditioner5
Care and Maintenance7

Installation Instructions

Features and
Installation Hardware8
Installation Instructions.....9

Troubleshooting Tips

Before You
Call for Service11

FOR YOUR RECORDS

Write the model and serial numbers here:

Model #

Serial #

You can find them on a label on the side of each unit.

Dealer's Name

Date Purchased


READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of **Troubleshooting Tips** first, you may not need to call for service at all.

CAUTION

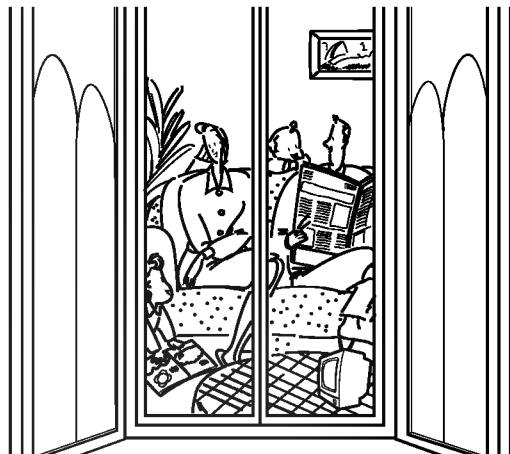

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.



Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

■ Incorrect operation due to ignoring of instruction will cause harm or damage, the seriousness is classified by the following indications.


	WARNING : This symbol shows the possibility of causing death or serious injury.
	CAUTION : This symbol indicates the possibility of injury or damage to properties only.

■ The items to be followed are classified by the following symbols.

	Never Do This
	Always Do This

WARNING


• Otherwise, it will cause electric shock or fire due to heat generation or electrical shock.

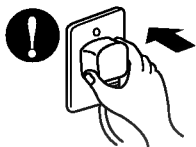


• It will cause electrical shock or fire due to heat generation.



• It will cause electrical shock or fire.
• If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

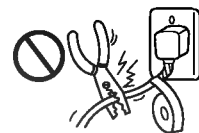


• It will cause electrical shock or fire due to heat generation.

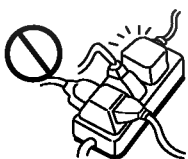

• It may cause electrical shock.




• This could damage your health.

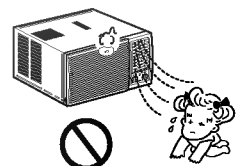




CAUTION


• It may cause an injury.

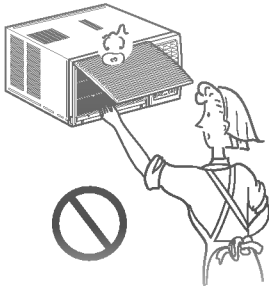


• Water may enter the unit and degrade the insulation. It may cause an electric shock.

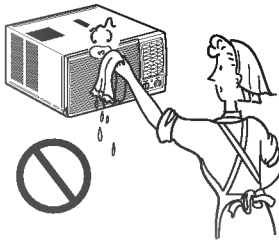


• An oxygen shortage may occur.

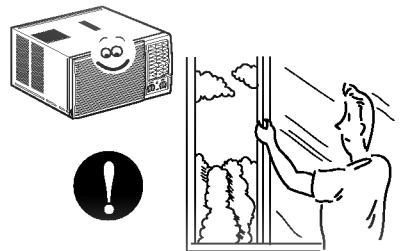


• Since the fan rotates at high speed during operation, it may cause an injury.

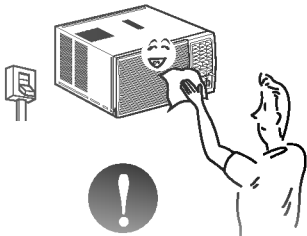


• This could injure the pet or plant.

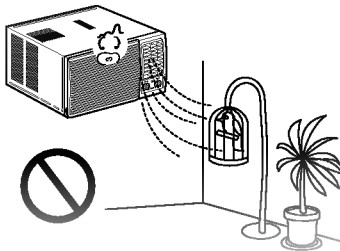


• Do not use this air conditioner to preserve precision devices, food, pets, plants, and art objects. It may cause deterioration of quality, etc.

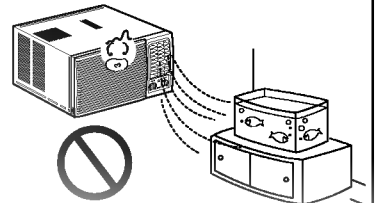


• It may cause an electric shock.

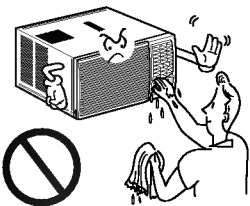

• It may cause a fire or deformation of the cabinet.

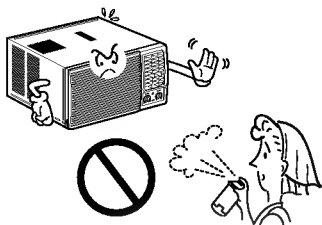


• It may cause imperfect combustion.

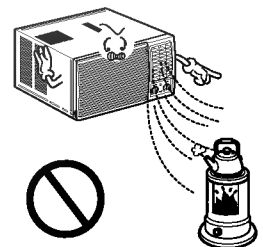

About the Controls on the air conditioner

The controls will look like one of the following.

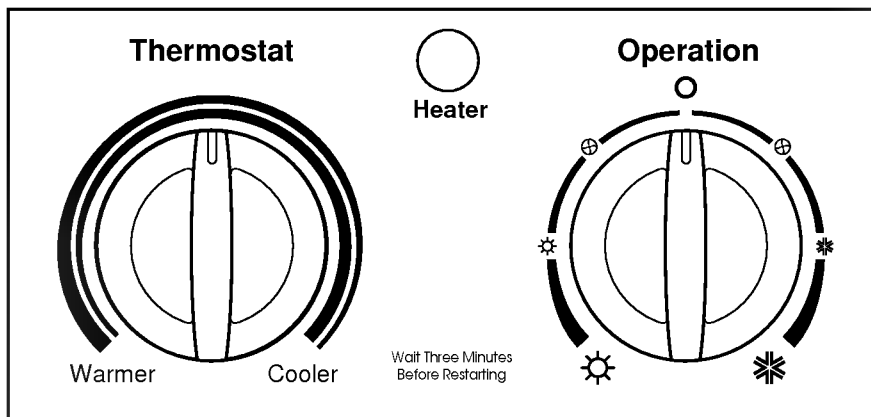

Controls

1 OPERATION

HIGH (☀️) Cool, **LOW** (☀️) Cool provide cooling with different fan speeds. **HIGH** (☀️) heat, **LOW** (☀️) heat provide heating with different fan speeds. **FAN** (⊕) provides air circulation and filtering without cooling or heating. **OFF** (○) turns the air conditioner off.

NOTE: If you move the switch from the cool (or the heat) setting to off or to a fan setting, wait at least 3 minutes before switching back to a cool (or heat) setting.

Cooling Descriptions

For Normal Cooling- Select **HIGH** Cool with the **OPERATION** knob at the midpoint of the **THERMOSTAT** knob.

For Maximum Cooling- Select **HIGH** Cool with the **OPERATION** knob at the clockwise available on the **THERMOSTAT** knob.

For Quieter & Nighttime Cooling- Select **LOW** Cool with the **OPERATION** knob at the midpoint of the **THERMOSTAT** knob.

Heating Descriptions

For Normal Heating- Select **HIGH** heat with the **OPERATION** knob at the midpoint of the **THERMOSTAT** knob.

For Maximum Heating- Select **HIGH** heat with the **OPERATION** knob at the counterclockwise available on the **THERMOSTAT** knob.

For Quieter Heating- Select **LOW** heat with the **OPERATION** knob at the midpoint of the **THERMOSTAT** knob.

2 THERMOSTAT

The **THERMOSTAT** is used to maintain the room temperature. The compressor will cycle on and off to keep the room at the same level of comfort. The temperature is selected by turning the **THERMOSTAT** knob to the desired position.

3 HEATER LAMP


At the heating operation, the lamp is lighted. When the frost settles on the heat exchanger of the outside, defrosting is made automatically and the lamp is unlighted. After defrosting, the heating operation begins again.

Additional controls and important information.

Vent Control

The vent control is located above the control knobs.

When it set at **CLOSE**, only the air inside the room will be circulated and conditioned. When it set at **OPEN**, some inside air is exhausted outside.

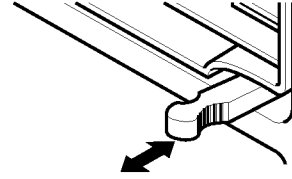

CLOSE  **VENT**  **OPEN**

*To open the vent, pull the lever toward you.
To close it, push it in.*

Air Direction



The direction of air can be controlled horizontally or vertically by using the horizontal louver or vertical louver.

- **Horizontal Air-Direction**

The horizontal air direction is adjusted by moving the inside louvers to the left or right.

- **Vertical Air-Direction**

Fingertip pressure on the bank of horizontal louvers adjusts the air direction up or down

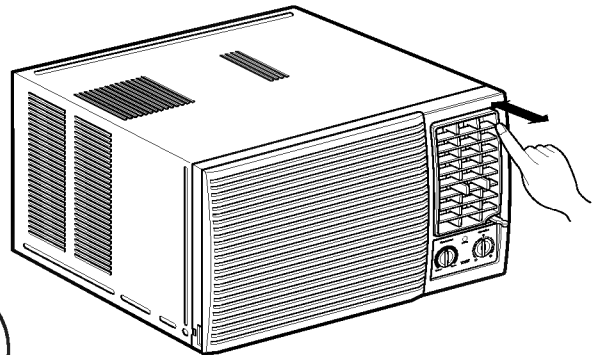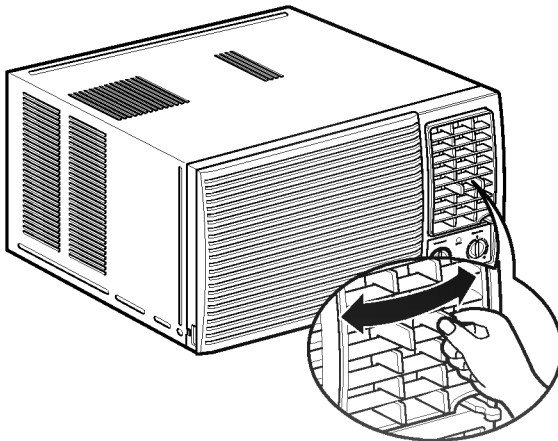

Care and maintenance of the air conditioner

Air Filter




The air filter behind the front grille should be checked and cleaned at least once every 2 weeks or more often if necessary.

The grille is designed to clean the filter both upward and downward.

To remove:

- 1 Open the inlet grille upward by pulling out the bottom of the inlet grille or downward by pulling out the top of the inlet grille.
- 2 Using the tab, pull up slightly on the filter to release it and pull it down or up.
- 3 Clean the filter with warm, soapy water below 40°C (104°F).
- 4 Rinse and gently shake off all the water from the filter and let it dry before replacing it.


CAUTION: DO NOT operate the air conditioner without a filter because dirt and lint will clog it and reduce performance.

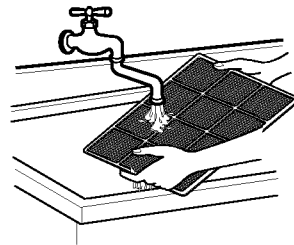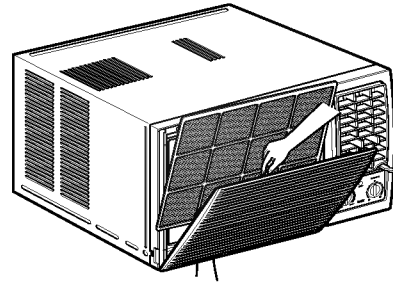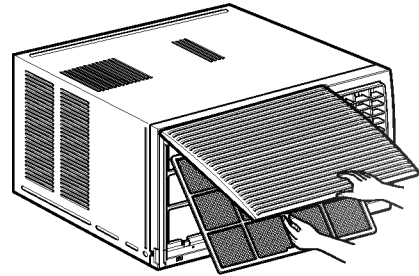

Drainage

In humid weather, excess water may cause the BASE PAN to overflow. To drain the water, install the drain pan as below.



- 1 Take the drain pan which is located in the air discharge or on the barrier.
- 2 Remove the hole rubber from the base-pan. (for some models).
- 3 Install the drain pan to the right or the left corner of the cabinet with 2 screws.
- 4 Connect the drain hose to the outlet located at the bottom of the drain pan. You can purchase the drain hose or tubing locally to satisfy your particular needs. (Drain hose is not supplied).

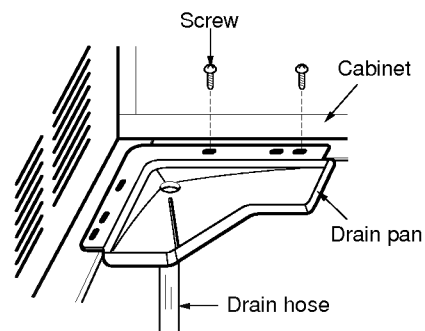

Features and Installation Hardware

Learning parts name prior to installation will help you understanding the installation procedure.


Features

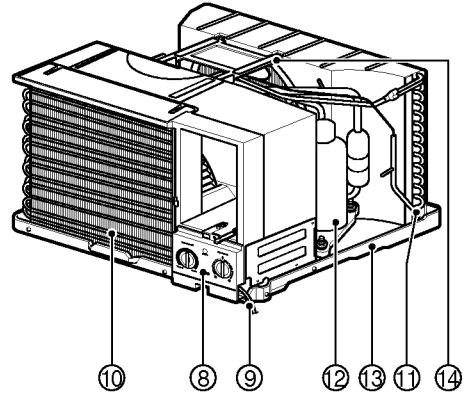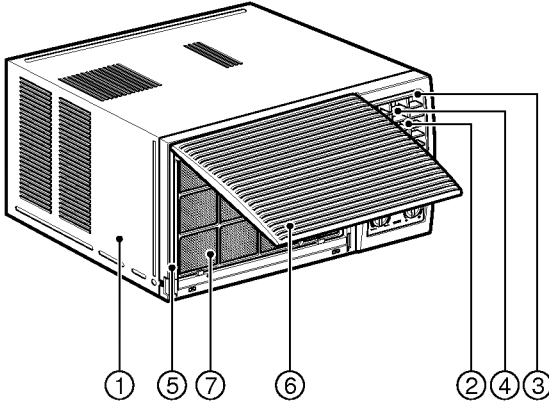

1. CABINET
2. HORIZONTAL AIR DEFLECTOR
(VERTICAL LOUVER)
3. VERTICAL AIR DEFLECTOR
(HORIZONTAL LOUVER)
4. AIR DISCHARGE
5. FRONT GRILLE
6. INLET GRILLE (AIR INTAKE)

7. AIR FILTER
8. CONTROL BOARD
9. POWER CORD
10. EVAPORATOR
11. CONDENSER
12. COMPRESSOR
13. BASE PAN
14. BRACE


Installation Hardware

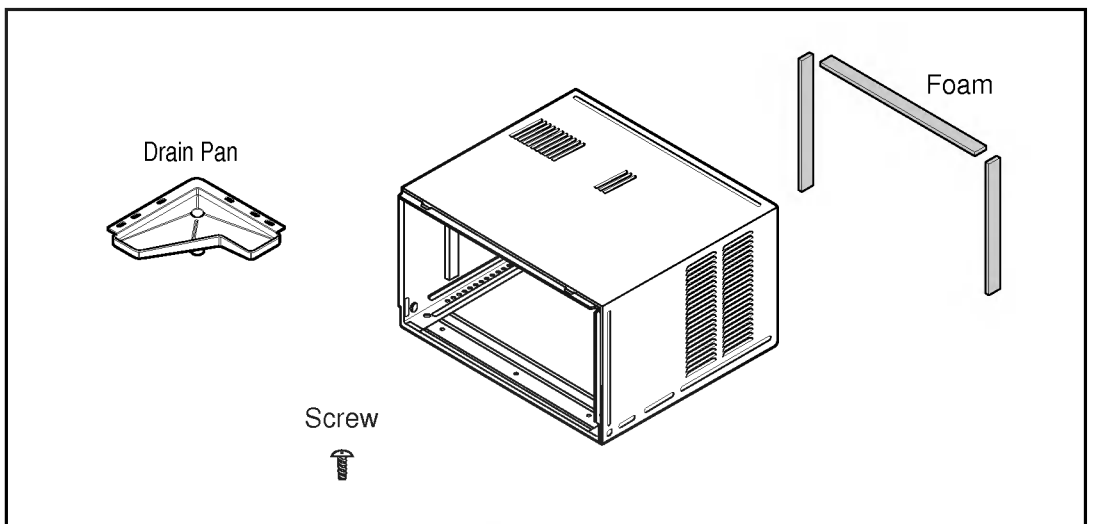

Installation Instructions

Read completely, then follow step by step.



- The appliance shall be installed in accordance with national wiring regulation.
- If a power plug isn't to be used, provide a circuit breaker between power source and the unit, as following picture.

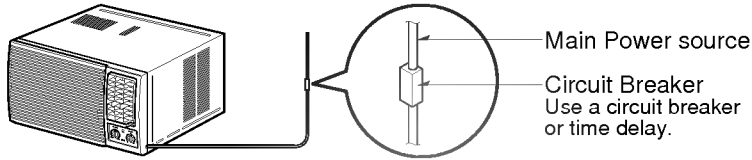

Select the Best Location




- A** To prevent vibration and noise, make sure the unit is installed securely and firmly.
- B** Install the unit where the sunlight does not shine directly on the unit.
- C** There should be no obstacle, such as a fence or wall, within 50cm from the back of the cabinet because it will prevent heat radiation of the condenser. Restriction of outside air will greatly reduce the cooling efficiency of the air conditioner.
- D** Install the unit a little obliquely outward not to leak the condensed water into the room (about 10 ~ 15mm or 1/4 bubble with level).

CAUTION: All side louvers of the cabinet must remain exposed to the outside of the structure.

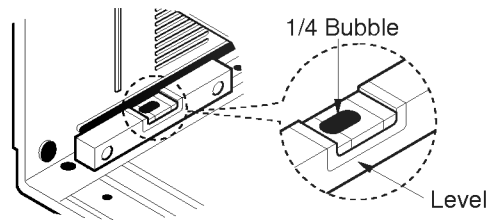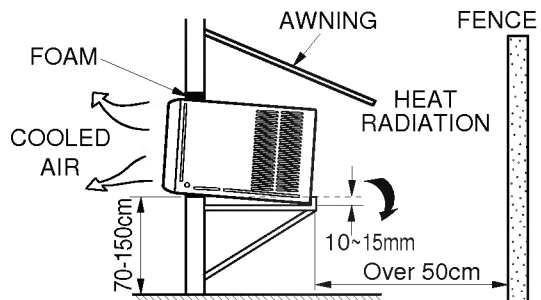


Remove the Air Conditioner From the Case

- A** Remove the 2 shipping screws from the back of the case.
- B** Remove the 2 screws on each side of the case. Keep these for later use.
- C** Slide the air conditioner from the case by gripping the base pan handle and pulling forward while bracing the case.

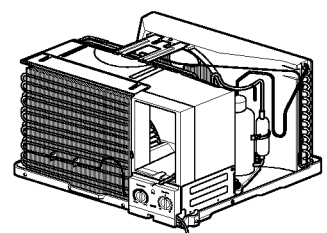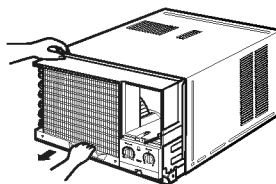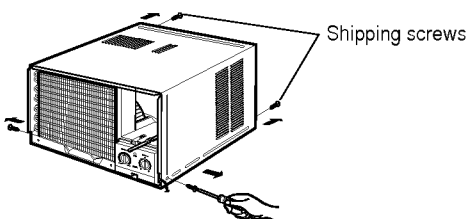


Install the Air Conditioner in the Case

- A** Slide the air conditioner into the case. Reinstall the 2 screws removed earlier on each side of the case.

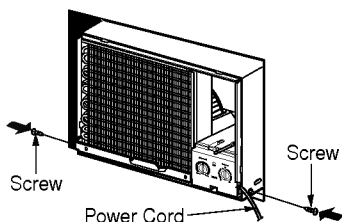


CAUTION: The power cord must be connected to an independent circuit. The green wire must be grounded.


- B** Stuff the foam between the top of the unit and the wall to prevent air and insects from getting into the room.

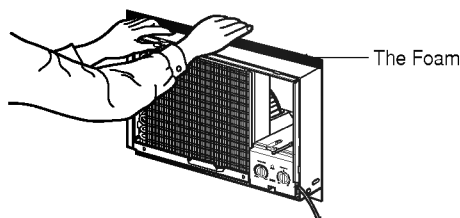


- C** Before installing the front grille, pull out the vent control lever located above the unit control knobs, as shown.

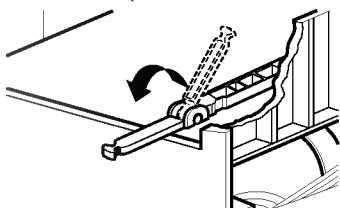


- D** Attach the front grille to the case by inserting the tabs on the grille into the slots on the front of the case. Push the grille in until it snaps into place.

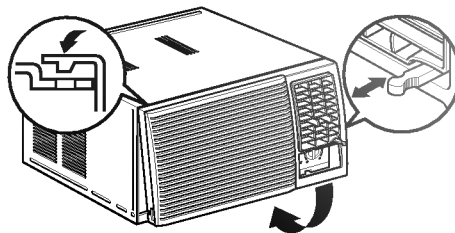

When you detach the front grille from the case, push the grille to your right side and pull it toward you.

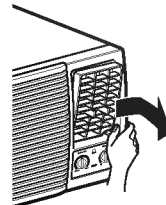


- E** Lift the inlet grill and secure the front grille with a screw. Lower the inlet grille into place.

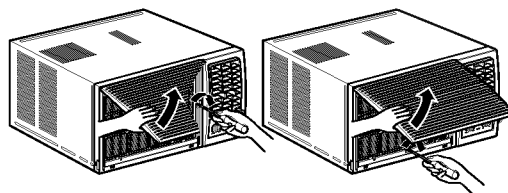


Use the Reversible Inlet Grille

- A** If you want to pull out the filter upward, open the inlet grille slightly. Turn inside out the front grille. Disassemble the inlet grille from the front grille with separating the hinged part by inserting a "-" type screw-driver tip. Rotate the inlet grille 180 degrees and insert the hooks into the lower holes of front grille. Then, insert the filter

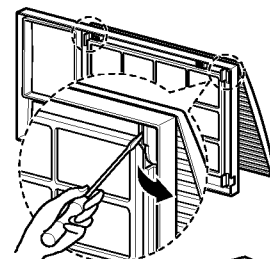

- B** If you want to pull out the filter downward, use the reversible inlet grille without change. (The grille is already assembled for that way.)

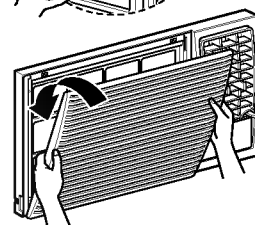

Before you call for service...



Troubleshooting Tips
 Save time and money! Review the chart below first and you may not need to call for service.

Normal Operation

- You may hear a pinging noise caused by water being picked up and thrown against the condenser on rainy days or when the humidity is high. This design feature helps remove moisture and improve efficiency.
- You may hear the thermostat click when the compressor cycles on and off.
- Water will collect in the base pan during high humidity or on rainy days. The water may overflow and drip from the outdoor side of the unit.
- The fan may run even when the compressor does not.

Abnormal Operation

Air conditioner does not start	■ <i>The air conditioner is unplugged.</i>	• Make sure the air conditioner plug is pushed completely into the outlet.
	■ <i>The fuse is blown/circuit breaker is tripped.</i>	• Check the house fuse/circuit breaker box and replace the fuse or reset the breaker.
	■ <i>Power failure.</i>	• If power failure occurs, turn the OPERATION control to OFF (O) . When power is restored, wait 3 minutes to restart the air conditioner to prevent tripping of the compressor overload.
Air conditioner does not cool as it should	■ <i>Airflow is restricted.</i>	• Make sure there are no curtains, blinds, or furniture blocking the front of the air conditioner.
	■ <i>The THERMOSTAT may not be set high enough.</i>	• Turn the knob to a higher setting. The highest setting provides maximum cooling.
	■ <i>The air filter is dirty.</i>	• Clean the filter at least every 2 weeks. See the operating instructions section.
	■ <i>The room may have been hot.</i>	• When the air conditioner is first turned on you need to allow time for the room to cool down.
	■ <i>Cold air is escaping.</i>	• Check for open furnace floor registers and cold air returns. • Set the air conditioner's vent to the closed position.
	■ <i>Cooling coils have iced up.</i>	• See Air Conditioner Freezing Up below.
Air conditioner freezing up	■ <i>Ice blocks the air flow and stops the air conditioner from cooling the room.</i>	• Set the OPERATION control at fan or HIGH cool with the thermostat at the warmer position.