



Colour Television

OWNER'S MANUAL



CH01

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this
information to your dealer when you require service.

Model number :
Serial number :



Contents

Installation	3
Location and function of controls	4
Remote control handset	
Front panel	
Battery installation	
Basic operation	6
On and off / Programme selection	
Volume adjustment / Mute function / Quick view	
On screen language selection (option)	
On screen menus	7
Menu selection	
Setting up TV stations	8
Auto programme tuning	
Manual programme tuning	
Fine Tuning	
Programme edit	
Picture adjustment	12
Picture adjustment / Eye (option)	
Picture format selection	
Other functions	13
Child lock / Auto sleep	
On timer / Off timer	
TV and AV modes / Blue back	
CSM (Colour Status Memory) / CAMERA mode (option)	
Teletext (option)	16
Switch on / off	
SIMPLE text / LIST mode	
TOP text (option) / FASTEXT	
Special teletext functions	
Connection of external equipment	19
Aerial socket	
Audio / Video in / out sockets (option)	
Euro scart socket (option)	
Headphone socket (option)	
CAMERA sockets (option)	
Troubleshooting check list	Back cover

Installation

Power

This set operates on an AC mains supply, the voltage is as indicated on the label on the back cover. Never apply DC power to the set. In the event of thunderstorms or powercuts, please pull out the aerial and mains plugs.

Warning

To prevent fire or shock hazard, do not expose the set to rain or moisture.

Service

Never remove the back cover of the set as this can expose you to very high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

Aerial

Connect the aerial cable to the socket marked 1175 Ω on the back cover. For the best reception an outdoor aerial should be used.

Location

Position your set so that no bright light or sunlight falls directly onto the screen. Care should be taken not to expose the set to any unnecessary vibration, moisture, dust or heat. Also ensure that the set is placed in a position to allow a free flow of air. Do not cover the ventilation openings on the back cover.


If the set is moved or placed in a different direction, the main power button must be switched off for at least 30 minutes in order to take out a colour strain on the screen.

Location and function of controls

Remote control handset

All the functions can be controlled with the remote control handset. Some functions can also be adjusted with the buttons on the front panel of the set.

Before you use the remote control handset, please install the batteries.


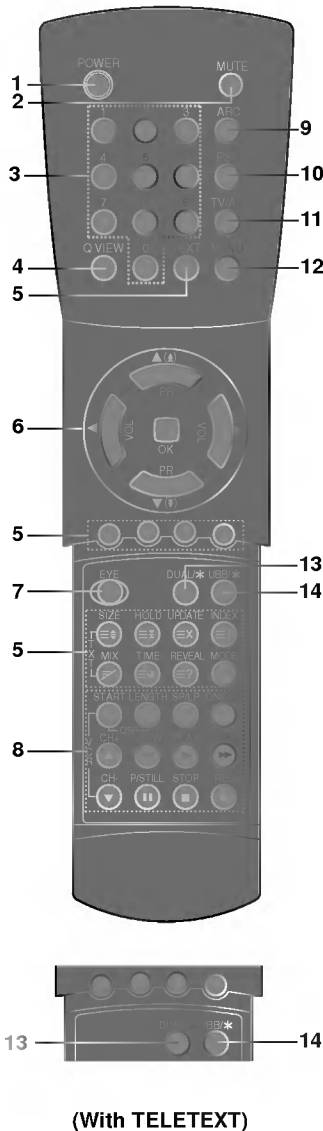


- 1. POWER**
switches the set on from standby or off to standby.
- 2. MUTE**
switches the sound on or off.
- 3. NUMBER BUTTONS**
switch the set on from standby or directly select a number.
- 4. Q.VIEW**
returns to the previously viewed programme.
- 5. TELETEXT BUTTONS (option)**
These buttons are used for teletext.
For further details, see the 'Teletext' section.
- 6. ▲ (▲) / ▼ (▼) (Programme Up/Down)**
switches the set on from standby.
selects a programme or a menu item.
scans programmes automatically.
- ◀ / ▶ (Volume Down/Up)**
adjusts the volume.
- 5. OK**
accepts your selection or displays the current mode.
- 7. EYE (option)**
switches the Eye function on or off.
- 8. VCR BUTTONS (option)**
control a LG/GoldStar video cassette recorder.
- 9. ARC (Aspect Ratio Control)**
changes the picture format.
- 10. PSM (Picture Status Memory)**
recalls your preferred picture setting.
- 11. TV/AV**
selects TV or AV mode.
clears the menu from the screen.
- 12. MENU**
selects a menu.
- 13. I/II or DUAL/✳(option)**
selects the language during dual language broadcast.
selects the sound output.(option)
- 14. UBB/✳(option)**
switches the UBB sound on or off.

Location and function of controls

Front panel

Shown is a simplified representation of front or side panel. Here shown may be somewhat different from your set.

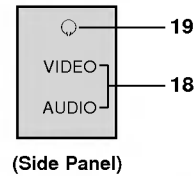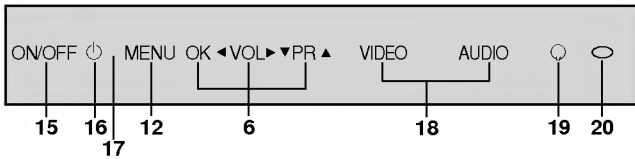

15. MAIN POWER (ON / OFF)

switches the set on or off.

Note : One power line lives even when the main power is off.

16. POWER/STANDBY INDICATOR (Ⓞ /stand-by)

illuminates brightly when the set is in standby mode.
dims when the set is switched on.

17. REMOTE CONTROL SENSOR

18. AUDIO/VIDEO IN SOCKETS (option)

Connect the audio/video out sockets of external equipment to these sockets.

Note : If both the input jacks on the front/side panel and back panel have been connected to external equipments simultaneously, only the input jacks on the front/side panel can be received.

19. HEADPHONE SOCKET (option)

Connect the headphone plug to this socket.

20. EYE (option)

adjusts picture according to the surrounding conditions.


Note : Eye is an optional function. Only a set with the eye option can perform this function.

Note :

* : No function.

Battery installation

The remote control handset is powered by two AA type batteries. To load the batteries, turn the handset over and slide open the battery compartment. Install two batteries as indicated by the polarity symbols (+ and -) marked inside the compartment. Here shown may be somewhat different from your set.

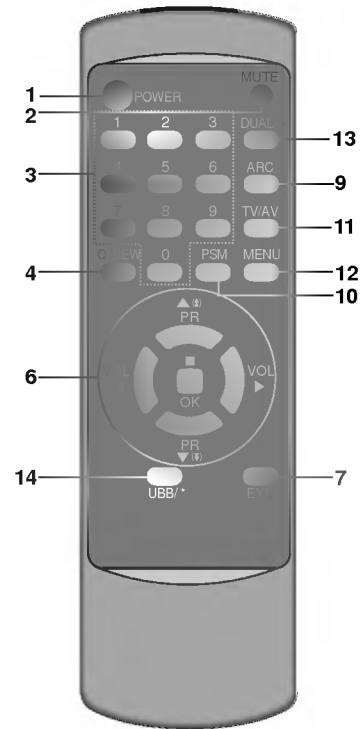

(Without TELETEXT)

Note : To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.

Basic operation

On and off

1. Press the main power button to switch the set on.
2. If the set is in standby mode, press the **POWER**, **▲ / ▼**, **TV/AV** or **NUMBER** buttons on the remote control handset to switch it on fully.
3. Press the **POWER** button on the remote control handset. The set reverts to standby mode.
4. Press the main power button on the set again. It switches the set off and the power/standby indicator goes out in a few seconds.

Note : If, while the set is switched on, the mains plug is disconnected the set will switch to standby or power on when the mains plug is replaced in the mains power socket.


Programme selection

You can select a programme number with the **▲ / ▼** or **NUMBER** buttons.

Volume adjustment

Press the **◀ / ▶** button to adjust the volume.

Mute function

Press the **MUTE** button. The sound is switched off and the display  appears. You can cancel it by pressing the **MUTE** or **◀ / ▶** button.


Quick view

Press the **Q.VIEW** button to view the last programme you were watching.

On screen language selection (option)

This is an optional function. The menu can be displayed on the screen in the desired language. First select your language.

1. Press the **MENU** button to display MENU 1.
2. Press the **▲ / ▼** button to select **LANGUAGE**.
3. Press the **OK** button to display the sub menu.
4. Press the **▲ / ▼** button to select the desired language.
5. Press the **OK** button.
All the on screen displays will appear in the selected language.
6. Press the **TV/AV** button to return to normal TV viewing.

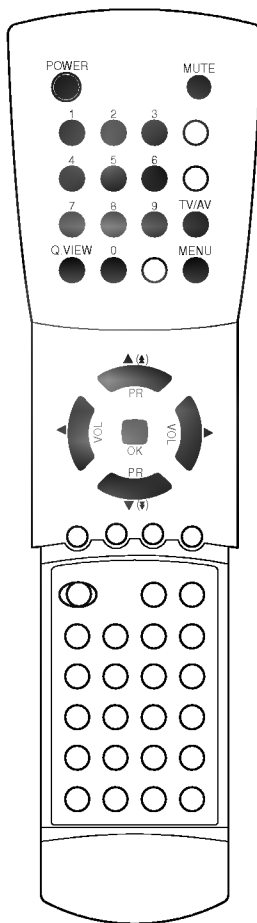


On screen menus



The dialogue between you and your set takes place on screen with an operator menu. The buttons required for the operating steps are also displayed.

Menu selection

1. Press the **MENU** button to display each menu.
2. Press the **▲ / ▼** button to select a menu item.
3. Press the **◀ / ▶** button to change the setting of a menu item or **OK** button to display the sub menu.

Note :

- a. The menus automatically disappear in about 1 minute if you do not press a button.
- b. In the AV mode, MENU 1 is not displayed.
- c. In the teletext mode, menus are not displayed.
- d. In the MENU 2, the display  appears at the bottom of the menu if the eye function is on.
- e. In some models, the menu items **AUTO AV, LANGUAGE, SYSTEM, BOOSTER, SWITCHING TIME** and **MELODY VOLUME** are not displayed on the screen menu.
- f. In some models, the menu items **SWITCHING TIME** and **MELODY VOLUME** appears only in the Camera mode.

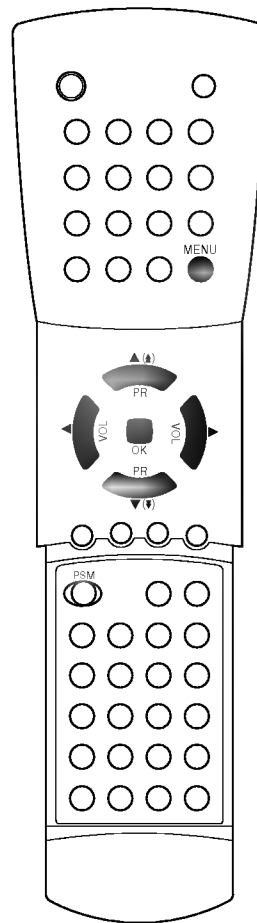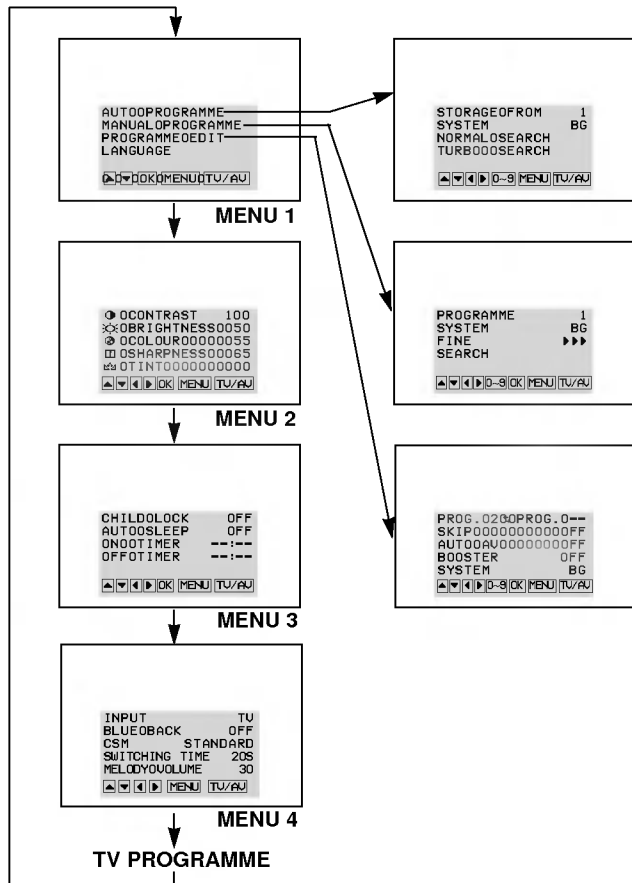

Setting up TV stations

MENU 1





Up to 100 TV stations can be stored in this set by programme numbers (00 to 99). Once you have preset the stations, you will be able to use the ▲ / ▼ or NUMBER buttons to scan the stations you programmed. Stations can be tuned using automatic or manual modes.

Auto programme tuning

All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

1. Press the **MENU** button to display MENU 1.
2. Press the ▲ / ▼ button to select **AUTO PROGRAMME**.
3. Press the **OK** button to display the **AUTO PROGRAMME** menu.

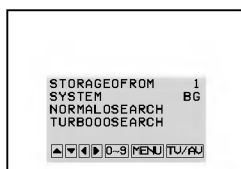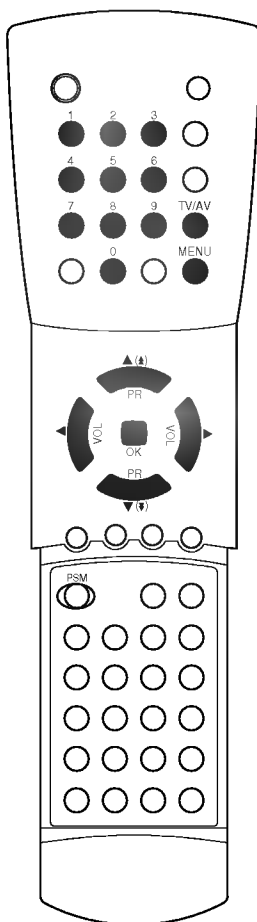

4. Press the ▲ / ▼ button to select **STORAGE FROM**. Select the beginning programme number with the ◀ / ▶ button or NUMBER buttons. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
5. Press the ▲ / ▼ button to select **SYSTEM**. Select a TV system with the ◀ / ▶ button; **BG**(Asia/New Zealand/M.East/Africa/Australia), **I** (Hong Kong/South Africa), **DK**(East Europe/China/Africa/CIS) or **M**(USA/Korea/Philippines).


Option:

In some models, the menu item **SYSTEM** is not displayed on the screen, so that there is no necessity for selecting it at that time.


6. Press the ▲ / ▼ button to select **NORMAL SEARCH** or **TURBO SEARCH**.

Note :

- a. **TURBO SEARCH** is further faster than **NORMAL SEARCH** and in some models, **NORMAL SEARCH** will automatically store all receivable stations. **TURBO SEARCH** is faster but will store them in the system selected.
 - b. If the programmed station has poor quality sound, select the system again in the **MANUAL PROGRAMME** menu.
7. Press the **OK** button to begin auto programming.

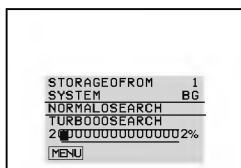

(Normal search)

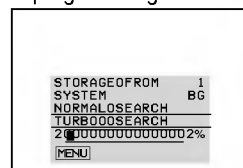

(Turbo search)

All receivable stations are stored.

To stop auto programming, press the **MENU** button.

When auto programming is completed, the **PROGRAMME EDIT** menu appears on the screen. See the 'Programme edit' section to edit the stored programme.

8. Press the **TV/AV** button to return to normal TV viewing.

Auto programme scan

To automatically scan the pictures of stored programmes, press the ▲ (▲) or ▼ (▼) button for about 3 seconds. The picture of stored programmes appears on the screen one by one.


To stop auto programme scanning, press any button except VCR buttons.

Setting up TV stations

Manual programme tuning

Manual programme let you manually tune and arrange the station in whatever order you desire.


1. Press the **MENU** button to display MENU 1.
2. Press the **▲ / ▼** button to select **MANUAL PROGRAMME**.
3. Press the **OK** button to display the **MANUAL PROGRAMME** menu.

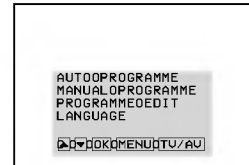

MENU 1



4. Press the **▲ / ▼** button to select **PROGRAMME**. Select the desired programme number with the **◀ / ▶** button or NUMBER buttons. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
5. Press the **▲ / ▼** button to select **SYSTEM**. Select a TV system with the **◀ / ▶** button; **BG**(Asia/New Zealand/M.East/Africa/Australia), **I** (Hong Kong/South Africa), **DK**(East Europe/China/Africa/CIS) or **M**(USA/Korea/Philippines).
Option:
In some models, the menu item **SYSTEM** is not displayed on the screen, so that there is no necessity for selecting it at that time.
6. Press the **▲ / ▼** button to select **SEARCH**.
7. Press the **◀ / ▶** button to commence searching. If a station is found the search will stop.
8. Press the **OK** button. The display **STORED** will appear.
9. To store another station repeat steps 4 to 8.
10. Press the **TV/AV** button to return to normal TV viewing.

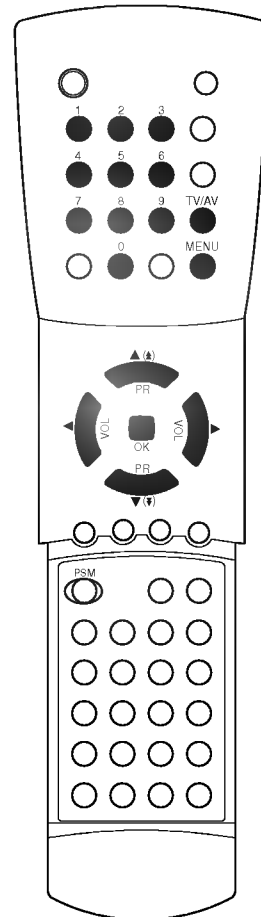

Fine tuning

Normally fine tuning is only necessary if reception is poor.

1. Repeat 'Manual programme tuning' steps 1 to 3.
2. Press the **▲ / ▼** button to select **FINE**.
3. Press the **◀ / ▶** button to fine tune for the best picture and sound.
4. Press the **OK** button. The display **STORED** will appear.
5. Press the **TV/AV** button to return to normal TV viewing.
The finely tuned programme will be indicated by yellow number during programme selection.

Setting up TV stations



MENU 1



Programme edit

This function enables you to rearrange the programmes stored by auto programming in whatever order you desire. Also you can skip particular programme numbers stored by auto programming.

1. Press the **MENU** button to display MENU 1.
2. Press the **▲ / ▼** button to select **PROGRAMME EDIT**.
3. Press the **OK** button to display the **PROGRAMME EDIT** menu.

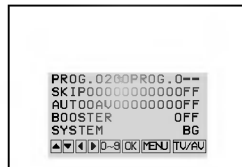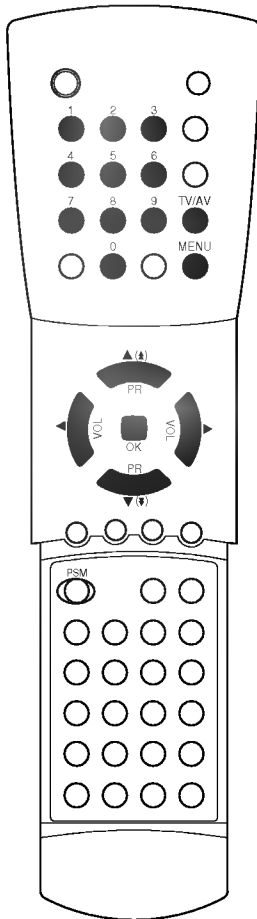

Exchanging programmes

1. Press the **◀ / ▶** button to change the left hand programme number. The viewing station corresponding to the new programme number is shown on the screen.
2. Press the **NUMBER** buttons to enter the desired right hand programme number. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
3. Press the **OK** button. The station stored in the right hand programme number will now appear as the left hand programme number.
4. Repeat steps 1 to 3 to exchange other programmes.

Skipping a stored programme

1. Press the **◀ / ▶** button to select the programme you want to skip. The viewing station corresponding to the selected programme number is shown on the screen.
2. Press the **▲ / ▼** button to select **SKIP**.
3. Press the **◀ / ▶** button to select **ON** or **OFF**.
If you select **ON**, the selected station is skipped.
4. Press the **OK** button. The display **STORED** will appear.
5. Repeat steps 1 to 4 to skip another programme.

The selection of the skipped programme numbers with the **NUMBER** buttons is still possible and they will be indicated by cyan numbers during programme selection.

Note : The programme number 1 cannot be skipped.

Setting up TV stations

Auto AV setting (option)

Auto AV is an optional function.

If your VCR outputs a switching voltage when it is switched to playback, select **AUTO AV ON** with the VCR connected to Euro scart. The set is automatically switched to AV mode when an AV signal is input. But if you want to keep on watching TV mode, set **AUTO AV** to **OFF**.

1. Press the ◀ / ▶ button to select your desired programme number.
2. Press the ▲ / ▼ button to select **AUTO AV**.
3. Press the ◀ / ▶ button to select **ON** or **OFF**.
4. Press the OK button. The display **STORED** will appear.
5. Repeat steps 1 to 4 to set another programme.

Note : In some models, the menu items **AUTO AV** will display in the manual program mode. Only a set with the Euro scart can perform this function.


Booster (option)

In some models, **BOOSTER** is an optional function. Only a set with **BOOSTER** can perform this function.


If the reception is poor at the fringe area of TV signal, select **BOOSTER** to **ON**. When the picture condition is good, do not select **BOOSTER** to **ON**.

1. Press the ◀ / ▶ button to select your desired programme number.
2. Press the ▲ / ▼ button to select **BOOSTER**.
3. Press the ◀ / ▶ button to select **ON** or **OFF**.
4. Press the OK button. The display **STORED** will appear.
5. Repeat steps 1 to 4 to set another programme.

Press the TV/AV button to return to normal TV viewing.

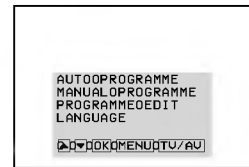


MENU 1

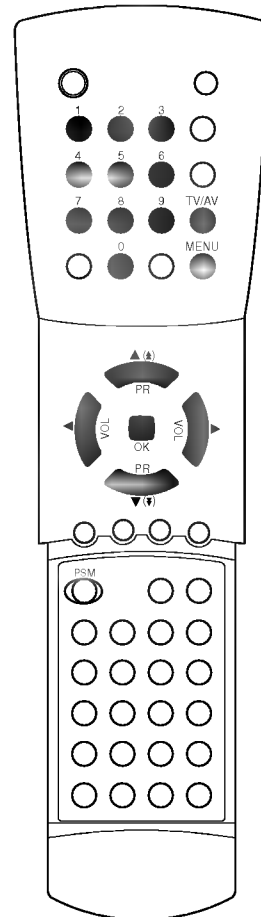

Picture adjustment

MENU 2

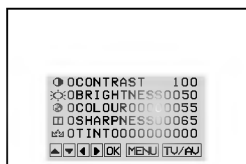

Picture adjustment

You can adjust picture contrast, brightness, colour intensity, sharpness and tint (NTSC input only) to the levels you prefer.

1. Press the **MENU** button to display MENU 2.
2. Press the **▲ / ▼** button to select the desired picture item.
3. Press the **◀ / ▶** button to make appropriate adjustments.
4. Press the **OK** button. The display **STORED** will appear.

To recall your preferred setting, press the **PSM** button until the desired picture (**DYNAMIC**, **MILD**, **USER** or **STANDARD**) appears. **DYNAMIC**, **MILD**, **USER** and **STANDARD** are programmed at the factory for good picture reproduction appropriate to each programme character and cannot be changed.



Note : If you press the **PSM** button after making appropriate adjustment in MENU 2, the display **USER** automatically appears even though you have already set a factory preset setting; **DYNAMIC**, **MILD**, **USER** and **STANDARD**.

Eye (option)

Eye is an optional function.

This set will automatically adjust the picture according to the surrounding conditions. This will enable you to enjoy the most suitable picture according to the surroundings.

Press the **EYE** button to switch the eye function on or off.

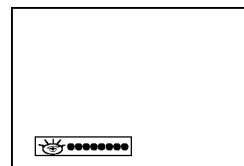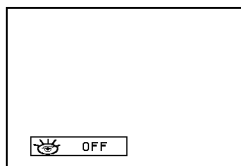

When the eye function is on, the most suitable picture automatically is adjusted according to the surrounding conditions. At this time the display **●●●●●●** in green does not appear continuously but the display **●●●●●●** in yellow appears each time the picture condition changes.

Note : If you press the **PSM** button with the eye function, the eye function is automatically switched off.

Picture format selection

You can watch the TV in three picture formats; **STANDARD**, **WIDE** and **ZOOM**.

Press the **ARC (Aspect Ratio Control)** button to switch to **STANDARD**, **WIDE** or **ZOOM** picture format.

STANDARD (4:3)

This is the normal picture size 4 by 3 as displayed on all TV sets.

WIDE (16:9)


This is the cinema screen picture format. Some TV stations broadcast in this picture format. To receive the picture size 16 by 9, select **WIDE**.

ZOOM

This is the picture format the **STANDARD** picture is magnified vertically. The extreme top and bottom of the picture may be lost.

Note :

- a. When you switch the set to standby or off, the **WIDE** or **ZOOM** picture format is reset to the **STANDARD** (4:3).
- b. In the manual AV mode, **WIDE** picture format is not available.

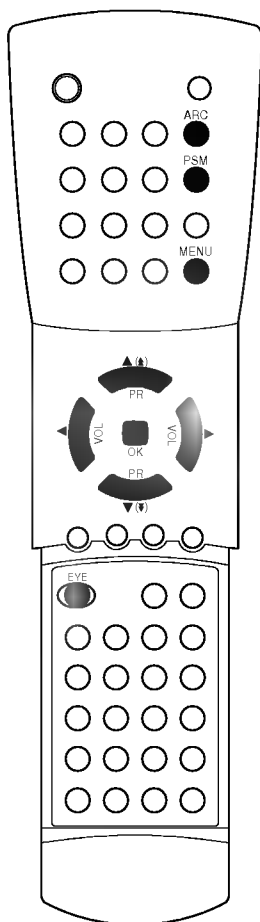


Other functions

Child lock

The TV can be set so that the remote control handset is needed to control it. This feature can be used to prevent unauthorised viewing.

1. Press the **MENU** button to display MENU 3.
2. Press the **▲ / ▼** button to select **CHILD LOCK**.
3. Press the **◀ / ▶** button on the remote control handset to select **ON**.
4. Press the **OK** or **TV/AV** button to return to normal TV viewing.

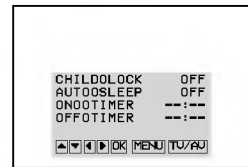

With the lock on, the display **CHILD LOCK ON** appears on the screen if any button on the front panel is pressed while viewing the TV.

Auto sleep

If you select **AUTO SLEEP ON** the set will automatically switch itself to standby mode approximately ten minutes after a TV station stops broadcasting.

1. Press the **MENU** button to display MENU 3.
2. Press the **▲ / ▼** button to select **AUTO SLEEP**.
3. Press the **◀ / ▶** button to select **ON**.
4. Press the **OK** or **TV/AV** button to return to normal TV viewing.

On timer

The set automatically switches on after the preset time elapses.

1. Press the **MENU** button to display MENU 3.
2. Press the **▲ / ▼** button to select **ON TIMER**.
3. Set the desired time period with the **◀ / ▶** button.
4. Press the **OK** or **TV/AV** button to return to normal TV viewing.

Off timer


The off timer automatically switches the set to standby after the pre-set time elapses.

1. Press the **MENU** button to display MENU 3.
2. Press the **▲ / ▼** button to select **OFF TIMER**.
3. Set the desired time period with the **◀ / ▶** button.
4. Press the **OK** or **TV/AV** button to return to normal TV viewing.

You can set the on/off timer from 10 minutes up to 12 hours 50 minutes in 10 minutes steps. The timer begins to count down from the selected time period.


Note :

- a. This set must be put into standby mode with the **POWER** button on the remote control to operate the on timer function.
- b. Two hours after the set is switched on by the on timer function it will automatically switch back to standby mode unless a button has been pressed.
- c. To view the remaining on/off time, select MENU 3.
- d. To cancel the set on/off time, set the on/off timer to --:--.
- e. When you switch the main power off, the on/off time is reset.

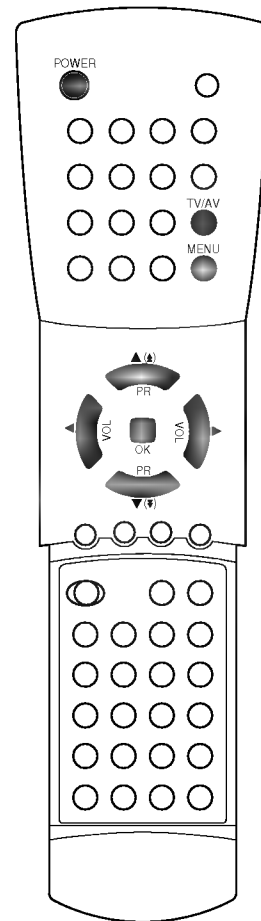

Other functions

MENU 4

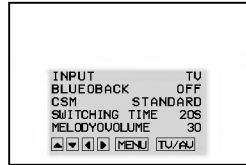

TV and AV modes

Inputs can be set for TV or AV mode. AV mode is used when a video cassette recorder (VCR), or other equipment is connected to the set.

Note : When a VCR is connected via the aerial socket the set is used in TV mode. See the 'Connection of external equipment' section.


1. Press the **MENU** button to display MENU 4.
2. Press the **▲ / ▼** button to select **INPUT**.
3. Press the **◀ / ▶** button to select **TV** or **AV**.

Note : If both the input jacks on the front/side panel and back panel have been connected to external equipments simultaneously, only the input jacks on the front/side panel can be received.

4. Press the **TV/AV** button.

To return to TV mode from AV mode press the **▲ / ▼**, **TV/AV** or **NUMBER** buttons.

Alternatively you can select the TV or AV mode by pressing the **TV/AV** button.

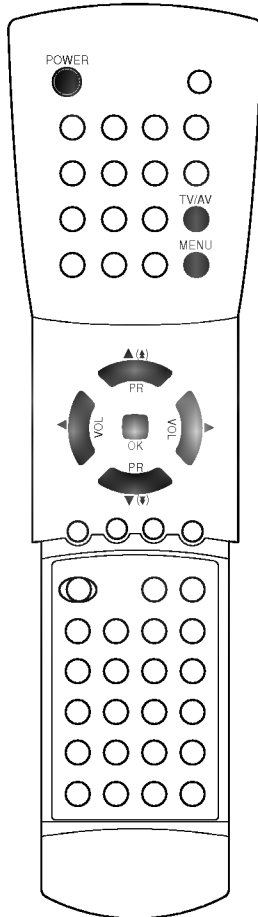

Blue back

If you have set **BLUE BACK ON**, the blue background appears on the screen when there is no broadcasting signal.

1. Press the **MENU** button to display MENU 4.
2. Press the **▲ / ▼** button to select **BLUE BACK**.
3. Press the **◀ / ▶** button to select **ON** or **OFF**.
4. Press the **TV/AV** button to return to normal TV viewing.

CSM (Colour Status Memory)

You can select the picture colour status; standard, reddish, greenish or bluish, as you prefer.

1. Press the **MENU** button to display MENU 4.
2. Press the **▲ / ▼** button to select **CSM**.
3. Press the **◀ / ▶** button to select **STANDARD**, **REDDISH**, **GREENISH** or **BLUISH**.
4. Press the **TV/AV** button to return to normal TV viewing.

Other functions

CAMERA mode (option)

Camera connected to back of your TV is displayed via TV screen. After connecting Camera sockets to back of your TV, when someone push a bell button, input mode of your set revert to the camera mode and the input signals through these socket appears on TV screen and melody volume ring during selected switching time.

Note :

- a. When a camera is connected via the camera sockets of back of your TV the set is used in camera mode. See the 'Connection of external equipment' section.
- b. To return to TV mode from CAMERA mode press the ▲ / ▼ or NUMBER buttons.
- c. To exit from CAMERA mode press any buttons (except for POWER button) when melody rings.
 1. Repeat 'TV and AV modes' steps 1 to 2.
 2. Press the ◀ / ▶ button to select **CAMERA**.
 3. Press the ▲ / ▼ button to select **SWITCHING TIME**.
 4. Press the ◀ / ▶ to select seconds of switching time of melody you want to select or **OFF**.

Note : You can select switching time from 10 seconds up to 60 seconds in 1 second steps or **OFF**. If you can select switching time to **OFF**, when input mode revert to camera mode, the display 'CAMERA' appears in about 5 seconds on the screen. Even when TV set is off, if someone pushes a bell button in the camera, TV set will be on for 10 seconds and it will be off.


5. Press the ▲ / ▼ button to select **MELODY VOLUME**.
6. Press the ◀ / ▶ to adjust melody volume level when melody rings.
7. Press the OK button.

Language selection for dual language broadcast (option)


If a programme received in two languages (dual language), you can switch to **DUAL I**, or **DUAL II** by pressing the DUAL/ * button repeatedly.

DUAL I sends the primary broadcast language to the loudspeakers.

DUAL II sends the secondary broadcast language to the loudspeakers.

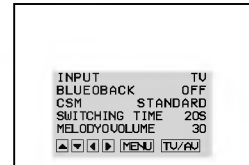

MENU 4

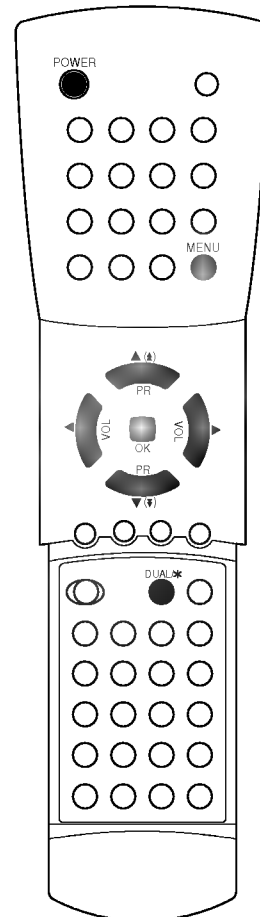


Teletext (option)

Teletext is an optional function, therefore only a set with the teletext system can receive the teletext broadcast.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

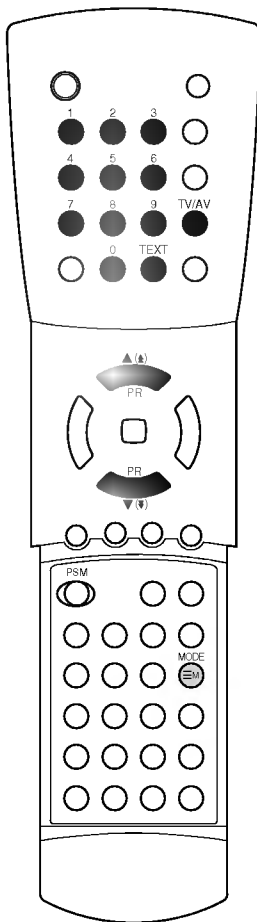

Switch on/off

Press the **TEXT** button to switch to teletext. The initial page or last selected page appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

Press the **TEXT** or **TV/AV** button to switch off teletext. The previous mode reappears.

SIMPLE text

If the TV is in Simple text, TOP text or FASTEXT, press the **MODE** button to switch to LIST mode.

Page selection

1. Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
2. The **▲ / ▼** button can be used to select the preceding or following page.

Teletext (option)

LIST mode

Programming a colour button

Four teletext page numbers of your choice can be colour coded and easily selected by pressing the corresponding coloured button on the remote control handset.

1. Using the NUMBER buttons, select the page you wish to programme.
2. Wait until the page is displayed on the screen and press the **OK** button. The page numbers in the colour boxes along the bottom of the screen change to "000?".
3. Press a colour button to store the page number. From now on, you can select this page with the same coloured button.
4. The three other coloured buttons are programmed in the same way

TOP text (option)

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

Group/block/page selection

1. With the blue button you can progress from block to block.
2. Use the yellow button to proceed to the next group with automatic overflow to the next block.
3. With the green button you can proceed to the next existing page with automatic overflow to the next group. Alternatively the ▲ button can be used.
4. The red button permits to return to previous selection. Alternatively the ▼ button can be used.

Direct page selection


Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

Page selection

1. Press the **INDEX** button to select the index page.
2. You can select the pages which are colour coded along the bottom line with the same coloured buttons.
3. Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
4. The ▲ / ▼ button can be used to select the preceding or following page.

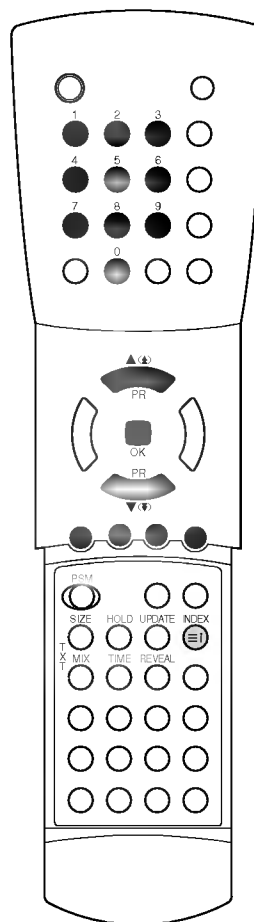

Teletext (option)

Special teletext functions

REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.

Press this button again to remove the information from the display.

EXPAND (SIZE)

 
 
 
 
Selects double height text.

Press this button to enlarge the top half of the page.

Press this button again to enlarge the bottom half of the page.

Press this button again to return to the normal display.

UPDATE

Displays the TV picture on the screen while waiting for the new teletext page. The display  or  will appear at the top left hand corner of the screen. When the updated page is available then display  or  will change to the page number.

Press this button to view the updated teletext page.

HOLD (STOP)

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited.


 
To continue press this button again.


MIX

Displays the teletext pages superimposed on the TV picture.

To switch the TV picture off press this button again.

TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/GREEN,  /  or NUMBER buttons. Press again to exit this function.

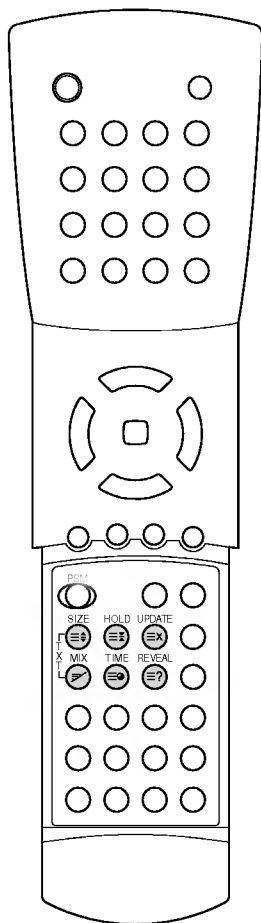


Connection of external equipment

You can connect additional equipment, such as VCRs, camcorders etc. to your set. Here shown may be somewhat different from your set.


Aerial socket

1. Connect the RF out socket of the VCR to the aerial socket on the back of the set.
2. Connect the aerial cable to the RF aerial in socket of the VCR.
3. Store the VCR channel on a desired programme number using the 'Manual programme tuning' section.
4. Select the programme number where the VCR channel is stored.
5. Press the **PLAY** button on the VCR.

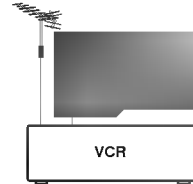

Audio/Video in/out sockets (option)


1. Connect the audio/video out sockets of the VCR to audio/video in sockets of the set and in sockets of the VCR to out sockets of the set.
 2. Press the **TV/AV** button to select **AV**.
 3. Press the **PLAY** button on the VCR.
- The VCR playback picture appears on the screen.

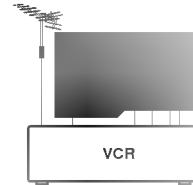

You can also record programmes received by the TV on video tape via audio/video out sockets.

Euro scart socket (option)

1. Connect the Euro scart socket of the VCR to the Euro scart socket of the set.
 2. Press the **PLAY** button on the VCR.
- If your VCR outputs a switching voltage the set will switch to AV1 mode automatically. Otherwise press the **TV/AV** button on the remote control handset to select **AV**. The VCR playback picture appears on the screen.

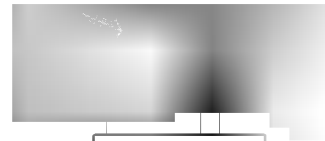

You can also record programmes received by the TV on video tape.


Note : Signal type RGB, i.e. the signals red, green and blue can only be selected for the Euro scart socket. These signals are transmitted, for example, by a computer, pay TV decoder, game machine or photo CD unit, etc.

Headphone socket (option)

In some models which have a headphone socket can perform this function. Insert the headphone plug to the headphone socket on the front or side panel.

You can listen to the sound through the headphone. To adjust the headphone volume, press the ◀ / ▶ button.


If you press the **MUTE** button, the sound from the headphone is switched off.

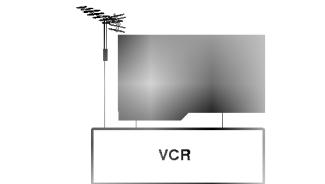

CAMERA sockets (option)

Connect YELLOW sockets of CAMERA cable to camera sockets (yellow) of the set and WHITE sockets of CAMERA cable to 12V sockets (white) of the set.


Note : For information of installation of camera, please refer to your reference paper in the box with camera.

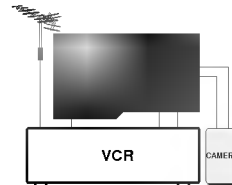

Troubleshooting check list



Check these items and try to adjust these

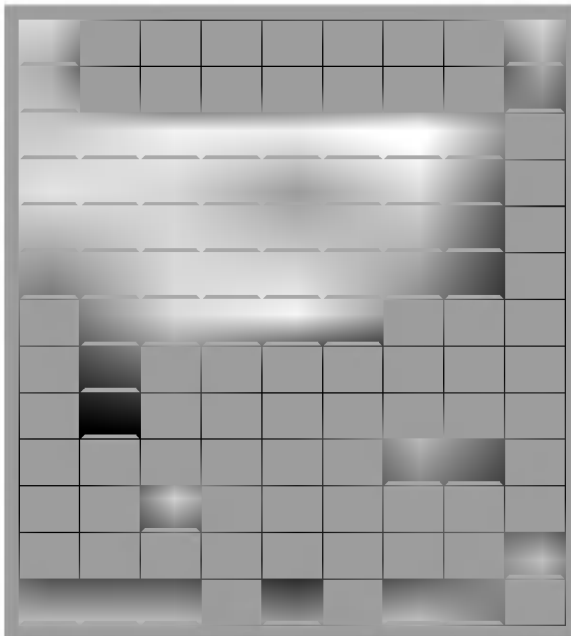

- The mains plug-(plugged in and switched on)
 - Is the TV switched on
 - Try another channel (weak signal)
 - Check aerial (plugged into TV?)
 - Check aerial (broken lead?)
 - Check aerial
 - Check for local interference
 - Adjust contrast
 - Adjust brightness
 - Adjust colour
 - Adjust volume
 - Check the batteries in remote control
 - Check Audio/Video sockets (VCR only)
-