


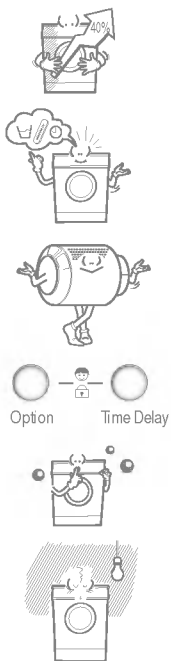


Washing Machine OWNER'S MANUAL

WD-14112(7)FD

A large, light grey watermark of the LG logo is positioned in the lower-left and center of the page. It features a stylized 'L' and 'G' within a circular frame.

Thank you for buying a
LG Fully Automatic Washing machine.
Please read your owner's manual carefully, it provides
instructions on safe installation, use and maintenance.
Retain it for future reference.
Record the model and serial numbers of your washing machine.



■ **Jumbo drum**

LG's jumbo drum can wash about 40% more load than conventional washing machines. A bigger drum improves the wash performance.

■ **More economical by Intelligent Wash System**

Intelligent Wash System detects the amount of load and water temperature, and then determines the optimum water level and washing time to minimize energy and water consumption.

■ **Direct Drive System**

The advanced Brushless DC motor rotates the Drum directly without belt and pulley.

■ **Child-Lock**

The Child-Lock system has been used to prevent children from pressing any button to change the program during operation.

■ **Low noise speed control system**

By sensing the amount of load and balance, it evenly distributes load to minimize the spinning noise level.

■ **Auto Restart**

If the washing machine is turned off by a power failure, it will restart automatically from the position it stopped at adjusting accordingly.

Warnings.....3

Specification4

Installation.....5

Care before washing.....11

Adding detergent12

Function13

How to use washer14

Maintenance21

Troubleshooting guide24

READ ALL INSTRUCTIONS BEFORE USE



For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury, or loss of life.

IMPORTANT SAFETY INSTRUCTIONS

WARNING : To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or published user-repair instructions that you understand and have the skills to carry out.
- Keep the area underneath and around your appliances free of combustible materials such as lint, paper, rags, chemicals, etc.
- Close supervision is necessary if this appliance is used by or near children.
Do not allow children to play on, with, or inside this or any other appliance.
- Do not leave the washer door open.
An open door could entice children to hang on the door or crawl inside the washer.
- Never reach into washer while it is moving. Wait until the drum has completely stopped.
- The laundry process can reduce the flame retardant of fabrics.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) which may ignite or explode.
- To avoid such a result, carefully follow the garment manufacturer's wash and care instructions.
- Do not slam the washer door closed or try to force the door open when locked. This could result in damage to the washer.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.


SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinance.

- Do not use an adapter or otherwise defeat the grounding plug.
- If you don't have the proper outlet, consult an electrician.


WARNING : Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance - if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

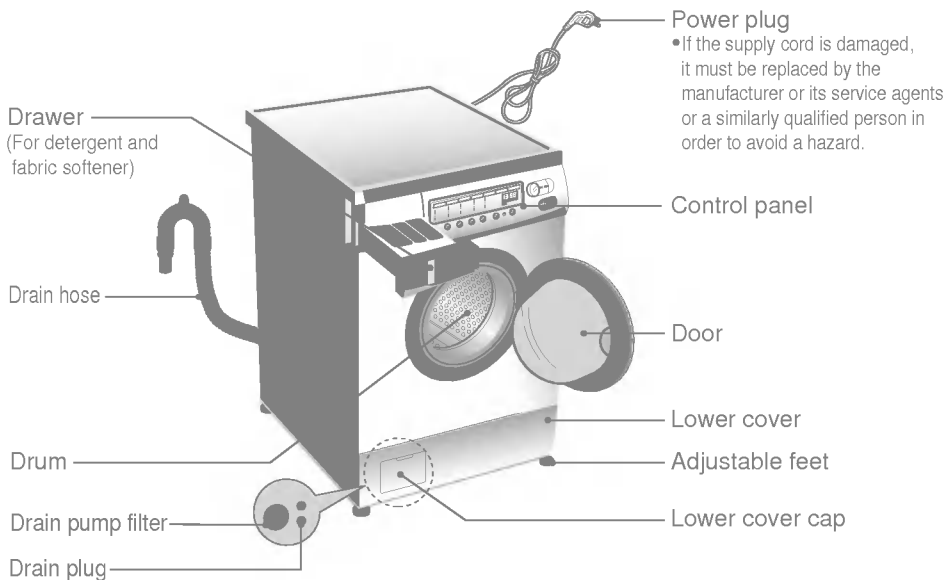

- Name : Front loading washing machine
- Power supply : 220 - 240V~, 50Hz
- Size : 600mm(W) × 600mm(D) × 850mm(H)
- Weight : 65kg
- Wash capacity : 7kg
- Max. Watt : 2100W
- Spin speed : 400/800/1000/1200/1400
- Water consumption : 75 ℓ (10.7 ℓ / kg)
- Permissible water pressure : 0.3-10kgf/cm² (30-1000kPa)

* The appearance and specifications may be varied without notice to raise the units quality.

 ■ Accessories



Inlet hose(1EA)



Spanner

Install or store where it will not be exposed to temperatures below freezing or exposed to the weather. Properly ground washer to conform with all governing codes and ordinances. The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.


In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in clean condition at all times.

Any damage which may be caused by cockroaches or other vermin will not be covered by the appliance guarantee.

■ Transit bolts


The appliance is fitted with transit bolts to prevent internal damage during transport.

■ Removing transit bolts

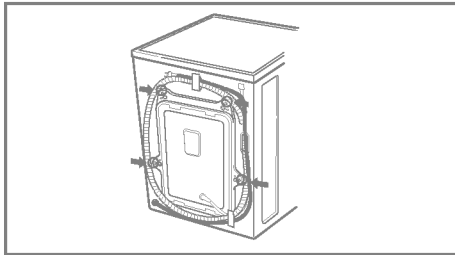


1. To prevent internal damage during transport, the special 4 bolts are locked. Before operating the washer, remove the bolts along with the rubber bungs.

• If they are not removed, it may cause heavy vibration, noise and malfunction.

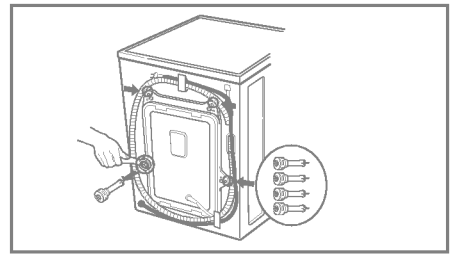


3. Take out the 4 bolts along with the rubber bungs by slightly twisting the bung. Keep the 4 bolts and the spanner for future use.

• Whenever the appliance is transported, the transit bolts must be refitted.

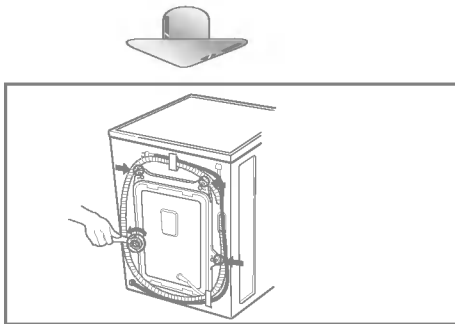


2. Unscrew the 4 bolts with the spanner supplied.

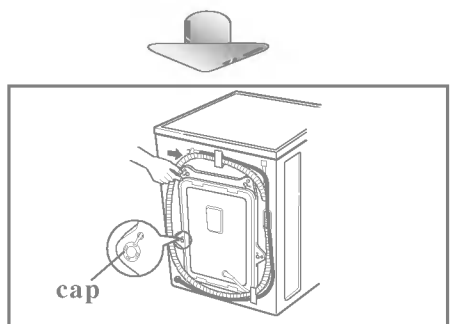

4. Close the holes with the caps supplied.

■ Installation place requirement

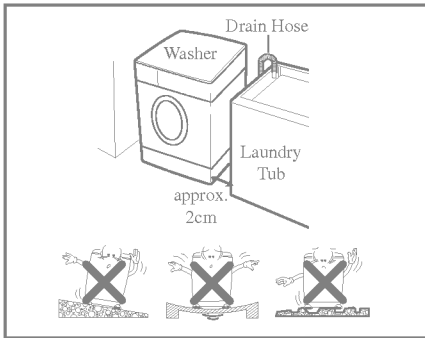

Level floor :

Allowable slope under entire washer is 1°

Power outlet :


Must be within 1.5 meters of either side of location of washer. Do not overload the outlet with more than one appliance.

Additional Clearance :

For wall, door and floor modeling is required. (10cm : rear /2cm:right & left side)

Do not place or store laundry products on top of washer at any times.

They can damage the finish or controls.

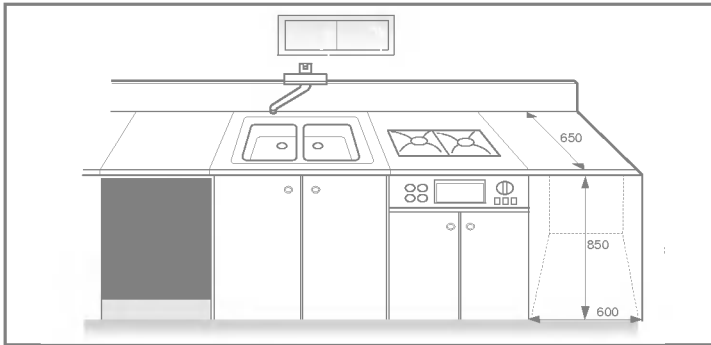

■ BS Plug Safety Details (For U.K. User)

IMPORTANT

 
THE WIRES IN THIS MAINS LEAD ARE COLOURS IN ACCORDANCE WITH THE FOLLOWING CODE:

GREEN AND YELLOW: EARTH

BLUE: NEUTRAL

BROWN: LIVE

This appliance must be earthed



As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \oplus or coloured Green or Green and Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Red.


If a 13 amp (BS 1363) plug is used, fit a 13 amp BS 1362 fuse.

■ Electrical connection

1. Do not use an extension cord or double adapter.
 2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
 3. Always unplug the machine and turn off the water supply after use.
 4. Connect the machine to an earthed socket in accordance with current wiring regulations.
 5. The appliance must be positioned so that the plug is easily accessible.
- Repairs to the washing machine must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service center
 - Do not install your washing machine in rooms where temperatures below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
 - If the appliance is delivered in the winter months and temperatures are below freezing : Store the washing machine at room temperature for a few hours before putting it into operation.

■ Washing Machine is to be connected to the water mains using new hose-sets and that old hose-sets should not be used.


■ Connecting water supply hose

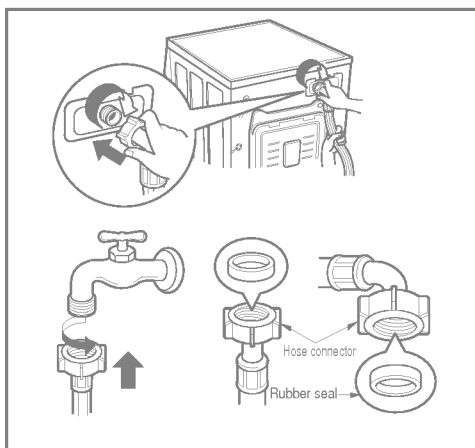


- ▶ *Water supply pressure must be between 30kPa and 1000kPa (0.3~10kgf/cm²)*
 - ▶ *Don't strip or crosstread when connecting Inlet hose to the valve.*
 - ▶ *If the water supply pressure is more than 1000kPa, a decompression device should be installed.*
- Two rubber seals are supplied with the water inlet hoses these are in order to prevent water leaks.
 - Check water tightness of washing machine connections by turning the tap completely on.
 - Periodically check the condition of the hose and replace the hose if necessary.
 - Make sure that there is no kink on the hose and that it is not crushed.

■ Normal Tap without thread & screw type inlet hose

 
1. Unscrew the fixing screw to attach the tap.



 2. Push the connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.




3. Push the water supply hose vertically upwards so that the rubber packing within the hose can adhere completely to the tap and then tighten it by screwing it to the right.

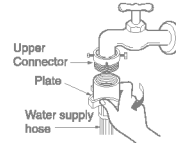


■ Normal Tap without thread & one touch type inlet hose (Single inlet models)

 
1. Untighten the upper connector screw.




2. Push the upper connector up till the rubber packing is in tight contact with the tap. Then tighten the 4 screws.

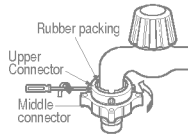

3. Connect the water supply hose to the middle connector, pushing the plate down.

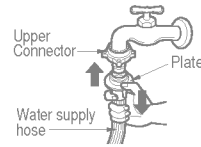


 • In case the diameter of the tap is large remove the guide plate.



- Turn the middle connector not to have water leaked.
- Make sure that the rubber seal is inside the hose connector.

- To separate the water supply hose from the middle connector shut off the tap. Then pull the inlet hose down, pushing the plate down.

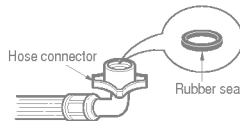

Used the horizontal tap

Horizontal tap



Extension tap



Square tap



- Your machine comes with only cold water connection.
- Make sure that there are no kinks in the hose and that it is not crushed.



This equipment is not designed for maritime use or for use mobile installations such as caravans, aircraft etc.

Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain(gully) in the immediate vicinity.



When disposing of the appliance, cut off the mains cable, and destroy the plug Disable the door lock to prevent young children being trapped inside.

Packaging material (e.g. Films, Styrofoam) can be dangerous for children. There is a risk of suffocation ! Keep all packaging well away from children

■ Installation of drain hose

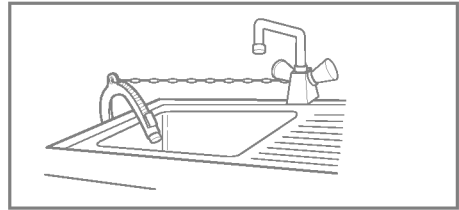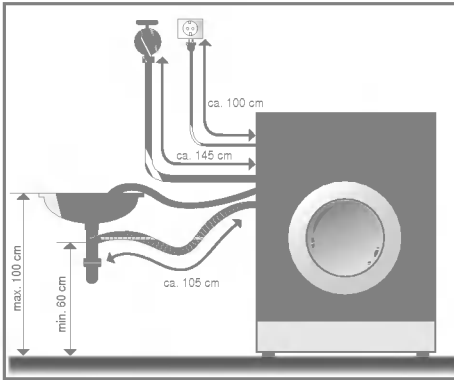


- When installing the drain hose sink, secure it tightly with a string.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.

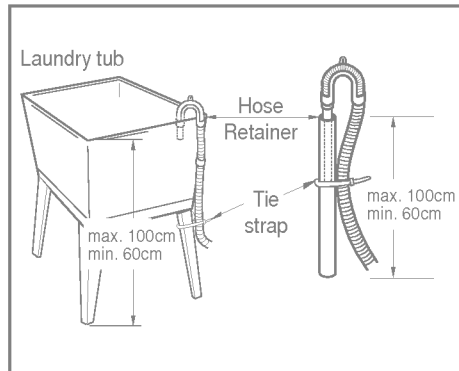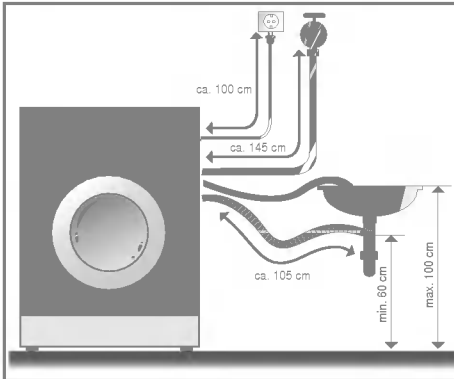


- The drain hose should not be placed higher than 100 cm above the floor.
- Proper securing of the drain hose will protect the floor from damage due to water leakage.
- When the drain hose is too long, do not force back into the washer. This will cause abnormal noise.


■ Level adjustment

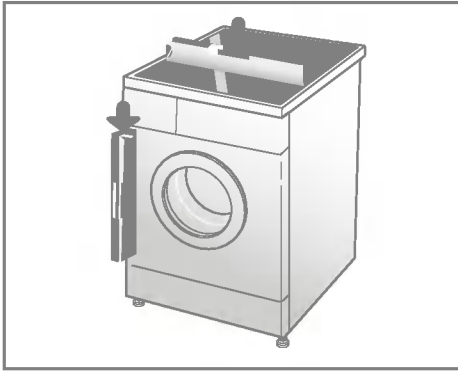

1. Adjusting the washing machine level properly prevents excessive noise and vibration.
Install the appliance on a solid and level floor surface, preferably in a corner of the room.

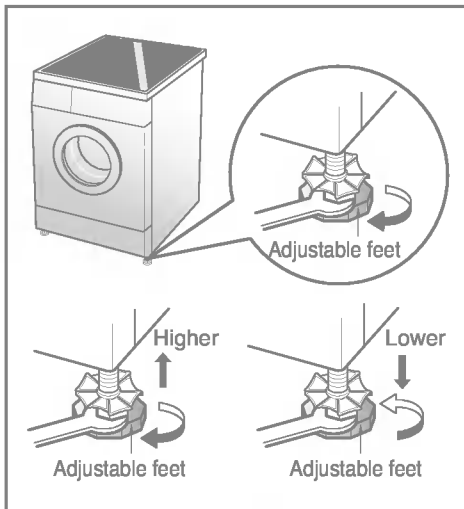

2. If the floor is uneven, adjust the adjustable feet as required. (do not insert pieces of wood etc. under the feet)
Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level.

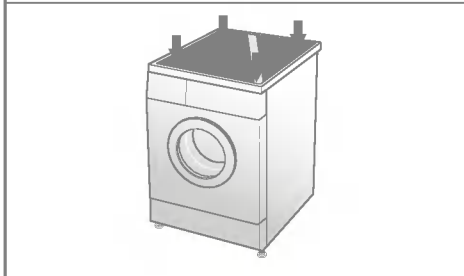

* Diagonal Check

*When pushing down the edges of the washing machine top plate diagonally, the machine should not move up and down at all. (Please, check both of two directions)
If machine rocks when pushing the machine top plate diagonally, adjust the feet again.*

■ Caring before washing

1. Care Labels

Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed.

2. Sorting



To get the best results, Sort clothes into loads that can be washed with the same wash cycle. Water temperature and spin speed and different fabrics need to be washed in different ways. Always sort dark colors from pale colors and whites. Wash separately as dye and lint transfer can occur causing discoloration of white etc. If possible, do not wash heavily soiled items with lightly soiled one.

Soil (Heavy, Normal, Light)
Color (White, Lights, Darks)
Lint (Lint producers, Collectors)

Separate clothes according to amount of soil.
Separate white fabrics from colored fabrics.
Wash lint producers and lint collectors separately.

3. Caring before loading


- **Combine large and small items in a load. Load large items first. Large items should not be more than half the total wash load. Do not wash single items. This may cause an out-of-balance load. Add one or two similar items.**

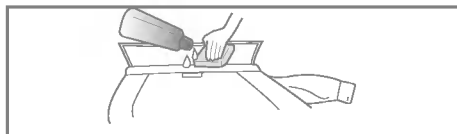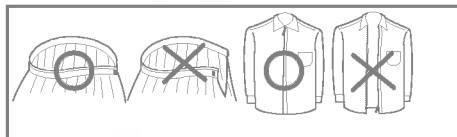




- Check all pockets to make sure that they are empty. Items such as nails, hair clip, matches, pens, coins and keys can damage both your washer and your clothes.
- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.
- Pre treat dirt and stains by brushing a little detergent dissolved in water onto stains like collars and cuffs to help shift dirt.


■ Adding detergent and fabric softener

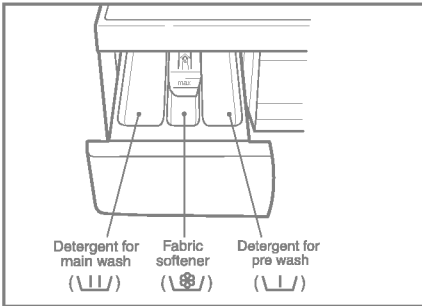1. The Dispenser Drawer



- Main wash only U 
- Pre Wash + Main Wash U  . 

2. Adding Fabric Softener

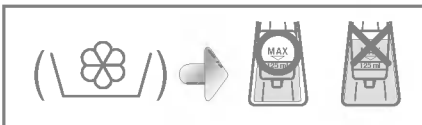

- Do not exceed the maximum fill line. Overfilling can cause early dispensing of the fabric softener which could stain clothes.
- Do not leave the fabric softener in the detergent drawer for more than 2 days. (Fabric softener could harden)
- Softener will automatically be added during the last rinse cycle.
- Do not open the drawer when water is supplied.
- Solvents (benzene, etc) are not allowable.

NO Do not pour fabric softener directly on the cloths

3. Detergent dosage

- The detergent should be used according to the instruction of the detergent manufacture.
- If too much detergent is used more than the recommended amount, too many suds can occur and this will decrease the washing result or cause heavy load to the motor. (Causing a malfunction)
- Use powder detergent only for the front loading washer.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.

* Tips

Full load : according to manufacturer's recommendation.
Part load : 3/4 of the normal amount.
Minimum load : 1/2 of full load.

- Detergent is flushed from the dispenser at the beginning of the cycle.

■ Recommended program according to the laundry type

Program	Fabric Type	Proper Temp. (Option)	Washing (Option)	Load	Water in Liter	Energy in KWh	Time in Minutes
Whites	First check if laundry is machine washable. (white cotton, linen towels and sheets...)	95°C (40°C, 60°C)	Main+(Pre)	7.0kg	95	2.9	165
				5.0kg	88	2.4	165
				2.0kg	75	1.8	125
Coloureds	Color fast garments (shirts, night dresses, pajamas...)and lightly soiled white cotton (underwear...)	40°C (Cold, 30°C, 60°C)	Main+(Pre)	7.0kg	75	0.72	122
				5.0kg	65	0.7	122
				2.0kg	52	0.6	112
Synthetic	Polyamide, Acrylic, Polyester.	40°C (Cold, 30°C, 60°C)	Main+(Pre)	3.5kg	60	0.5	89
				2.0kg	48	0.4	
Delicate	Delicate laundry easily damaged.(silk, curtains...)	30°C (Cold, 40°C)	Main	3.0kg	60	0.5	64
				1.0kg	48	0.3	
Wool	Machine washable woollens with pure new wool only.	30°C (Cold, 40°C)	Main	2.0kg	52	0.3	62
				1.0kg	48	0.2	
Hand Wash	"Hand Wash" marked delicate and wool laundry.	Cold (30°C, 40°C)	Main	2.0kg	52	0.03	56
				1.0kg	48	0.01	
Quick 30	Laundry type is the same in Cotton and Synthetic.	30°C (Cold, 40°C)	Main	5.0kg	48	0.3	30
				2.0kg	40	0.2	


* Pre Wash : If the laundry is heavily soiled, "Pre Wash" course is recommended.

Pre Wash is available in Whites, Coloureds, Synthetic program.

* Water Temperature : Select the water temperature to the wash cycles. Always follow garment manufacture's care label or instructions when laundering.

* Eco : By selecting Eco function, the water temperature is reduced and washing time is lengthened. So you can economize in your consumption of heating energy.

NB. You can select Eco function when temperature is higher than 60°C in Whites, Coloureds and Synthetic.

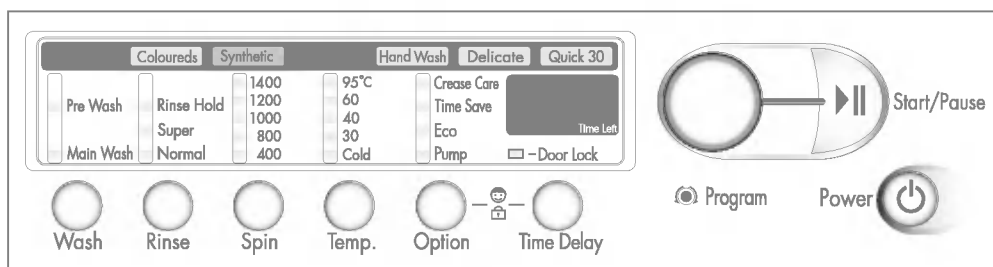

1. Coloureds automatically selected upon power on.

- Press the **Power**(⏻) button to start.
- Press the **Start/Pause**(▶||) button.
- Initial condition
 - *Wash : Main wash*
 - *Rinse : 3 times*
 - *Spin : 1400 rpm*
 - *Water temperature : 40°C*
 - *Program : Coloureds*

2. Manual Selecting


- Press the **Power**(⏻) button to start.
 - Select the conditions which you want to use, by pressing each button.
- For selecting the each conditions, please refer to the page15~page20*
- Press the **Start/Pause**(▶||) button.

3. Beep on/off

- The beep on/off function can be set by pressing and holding the **Temp.** and **Time Delay** button simultaneously.
- The beep on/off function can be set at any time and it is automatically canceled when power failure occur. Also the beep on/off function works when power is off.

4. Auto half load.

- Auto half load saves you time and money when washing smaller loads. The washing machine is fitted with a self adjusting water level system.
- This system enables the machine to use the amount of water needed to wash and rinse the laundry in relation to the particular load.

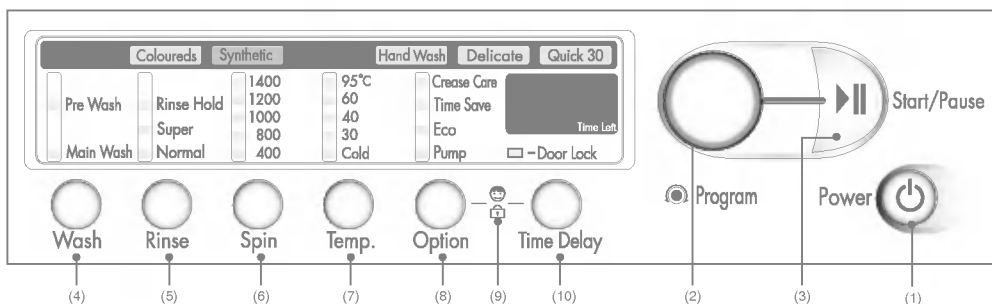

(1) Button : Power

(2) Dial : Programme

(3) Button : Start/Pause

(4) Button : Wash

(5) Button : Rinse

(6) Button : Spin

(7) Button : Water Temp.

(8) Button : Option

(9) Child lock

(10) Button : Time Delay

Power



1. Power

- Press the **Power**(⏻) button to turn power on and off
- To cancel the **Time Delay** function, the **Power**(⏻) button should be pressed.

2. Initial Program

- When the **Power**(⏻) button is pressed, the washer is ready for **Coloureds** program. And the other initial conditions as follows.
- So, if you want to advance into the washing cycle without changing the program, just press **Start/Pause**(▶||) button and then the washer will proceed.

Initial program

- Coloureds Program / Main Wash / Normal Rinse / 1400 rpm / 40°C

- 7 programs are available according to the laundry type.
- Lamp will light up to indicate selected program.

Coloureds Synthetic Hand Wash Delicate Quick 30
(Programme)

- Whites - Wool - Delicate
- Coloureds - Hand Wash - Quick 30
- Synthetic

1. Program selection

- When **Start/Pause**(▶||) button is pressed, the **Coloureds** program is automatically selected.
- By rotating the Program Dial, the program is selected in order of "Coloureds – Synthetic – Wool – Hand Wash – Delicate – Quick 30 – Whites".

Regarding to the laundry type for each program Please refer to the page13.

2. Program

- Whites - Wool - Delicate
- Coloureds - Hand Wash - Quick 30
- Synthetic



1. Start

- This **Start/Pause**(▶||) button is used to start wash cycle or pause the wash cycle.

2. Pause

- If temporary stop of wash cycle is needed, press **Start/Pause**(▶||) button.
- When in Pause, the power is turned off automatically after 4 minutes.
- **NB.** The door will not open before 1 to 2 minutes when Pause is selected, or at the end of the wash cycle.



- By pressing the **Wash** button, the wash type can be selected.

- *Main Wash*
- *Pre Wash + Main Wash*

 
1. Main Wash

- *Main Wash* course is available for lightly or normally soiled laundry.

2. Pre Wash + Main Wash

- If the laundry is heavily soiled, “*Pre Wash + Main Wash*” course is effective.
- *Pre Wash* is available in *Whites*, *Coloureds* and *Synthetic* program.

The required lamp will light up for identification.



- By pressing the **Rinse** button, the rinse type can be selected.

- *Normal*
- *Super*
- *Normal + Rinse Hold*
- *Super + Rinse Hold*

1. Normal

- *Whites / Coloureds / Synthetic performs 3 Rinses*
- *Wool / Hand Wash /Delicate / Quick 30 performs 2 Rinses*

2. Super


- Normal + 1 more rinse time.
- Use the *Super rinse* when additional rinsing is desired to remove excess dirt and detergent soiled loads.

3. Rinse Hold

- Is selected by pressing the Rinse button repeatedly this function leaves clothes in the washer; suspended in the water after a rinse without entering into spin.
- If you want to drain and spin, when Rinse Hold function is proceed, Press the **Start/Pause**(▶||) button to cancel the Rinse Hold function and select spin speed or program. Press the **Start/Pause**(▶||) button again to start program.

- If you want to drain only, press the spin button lamp turn off.

The required lamp will light up for identification.

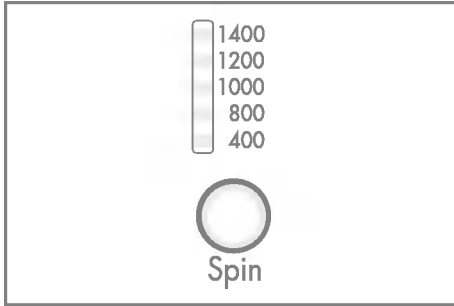

- By pressing the **Spin** button, the spin speed can be selected.

- **400**
- **800**
- **1000**
- **1200**
- **1400**

1. Spin selection

- Spin speed is available according to the program as follows.

- **Whites / Coloureds / Quick 30**

 
(No Spin) - 400 - 800 - 1000 -
1200 -1400

- **Synthetic / Wool**

(No Spin) - 400 - 800 - 1000

- **Delicate / Hand Wash**


(No Spin) - 400 - 800



• By pressing the **Temp.** button, the water temperature can be selected.

- *Cold*

- *30°C / 40°C / 60°C / 95°C*

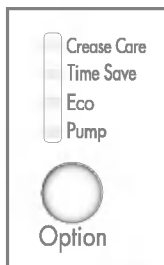

• If you use to select option function, you can wash more effectively.

• By pressing the Option button, only one Option function may be selected.

1. Water Temperature

• Water temperature can be selected as below according to the program.

- *Whites*

40°C - 60°C - 95°C

- *Coloureds / Synthetic*

Cold - 30°C - 40°C - 60°C

- *Wool / Delicate /*

Quick 30 / Hand Wash

Cold - 30°C - 40°C

The required temperature lamp will light up for identification.

For the more detailed information, please refer to the page13.

1. Crease Care

• If you want to prevent crease, select this function with spin.

2. Time Save

• This option can be used to reduce the time of a wash program.

• This option is not available with *Quick 30* program.

3. Eco

• By selecting *Eco* function, the water temperature is reduced and washing time is lengthened. So you can economize in your consumption of heating energy.

NB. You can select *Eco* function when temperature is higher than 60°C in *Whites, Coloureds and Synthetic.*

4. Pump

• If "Pump" is selected, the washer stops after draining water.

* It is possible to remove this spin on the rinse when "Pump" is selected on the Wool, Delicate and Hand Wash program.

The required lamp will light up for identification.



If you choose to lock the buttons on the control assembly to prevent tampering this function may be selected.

1. Child lock

- Child lock can be set by pressing and holding the **Option** and **Time Delay** button simultaneously.



- When child lock is set, all buttons are inoperable.
- To deactivate Child lock system, press and hold the **Option** and **Time Delay** button simultaneously again.



- To change to the desired program, whilst in child lock mode.

1. Press and hold both **Option** and **Time Delay** button together once again.
2. Press the **Start/Pause** button.
3. Select the desired program and press the **Start/Pause** button again.



- The *child lock* can be set at any time and it is automatically canceled when operational errors occur. Also *Child lock* works when power is off.



1. Time Delay

Preparing washing before starting “Time Delay.”

- Turn on the water tap.
 - Load laundry and close the door.
 - Place the detergent and fabric softener in the drawer.
- How to set “**Time Delay**”
 1. Press **Power** button.
 2. Rotate the **Program Dial** button to select the program you require.
 3. Press **Time Delay** button and set the desired time.
 4. Press the **Start/Pause** button. (“.” blinks.)
 - If **Time Delay** button is pressed, “3:00” is displayed. The maximum delayed time is 19:00 hours and the minimum time is 3:00 hours.
 - Each pressing of the button advances time on delay by one hour.
 - To cancel the time delay, press the **Power** button.
 - **Time Delay** is ‘expected time’ from the present to the completion of washing cycle or selected process (Wash, Rinse, Spin).
 - According to the condition of water supply and temperature, the delayed time and the actual washing time may vary.

1. Special function display

- When Child lock is selected, the “**CL**” is displayed.
- When time delay is selected, it shows the remaining times to finish the selected program.

2. Self diagnose display

- If the washer encounters a fault during operation, the associated fault will be displayed.

“**IE**” : Water inlet trouble

“**DE**” : Drainage trouble

“**UE**” : Unbalanced load

“**dE**” : Door is not closed

“**tE**” : Water temperature trouble

“**FE**” : Problem of overfilling water

“**PE**” : Water pressure sensing error

“**CE**” : Over load in motor

“**LE**” : Over load in motor

If these error letters are displayed, please refer to the troubleshooting page 26 and follow the guide.

3. Completion of washing

- When washing cycle is completed, “**End**” is displayed on the “*Multi display*”.

4. Time left

- During washing cycle, the remaining washing time is displayed.
- Default time of each program.
 - Whites : around 2 hours and 45minutes
 - Coloureds : around 2 hours and 2minutes
 - Synthetic : around 1 hour and 29 minutes
 - Wool : around 1 hour and 2 minutes
 - Hand Wash : around 56 minutes
 - Delicate : around 1 hour and 4 minutes
 - Quick 30 : around 30 minutes
- The washing time may vary by the amount of laundry, water pressure, water temperature and other washing conditions.
- If an unbalanced load is detected or if the suds removing program operates, the wash time may be extended. (Max. increasing time is 45minutes.)

* Before cleaning the washer interior, unplug the electrical power cord to avoid electrical shock to avoid electrical shock hazards.


* When disposing of the appliance, cut off the mains cable, and destroy the plug Disable the door lock to prevent young children being trapped inside.

■ The water inlet filter


- " **iE** " error message will blink on the control panel when water does not enter the detergent drawer.

- If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.


It is therefore a good idea to clean it from time to time.

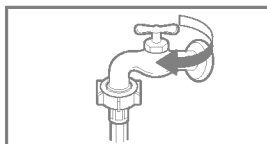

1. Turn off the water tap.

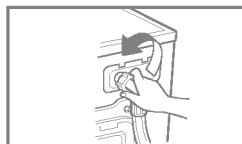

2. Unscrew the water inlet hose.

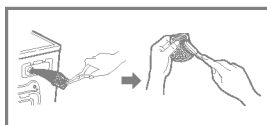

3. Clean the filter using a hard bristle brush.



4. Tighten up the inlet hose.

■ The drain pump filter

* The drain filter collects threads and small objects left in the laundry.

Check regularly that the filter is clean to ensure smooth running of your machine.

▲ CAUTION First drain using the drain hose and then open the pump filter to remove whatever any threads or objects.




Be careful when draining if the water is hot.

* Allow the water to cool down before cleaning the drain pump, carrying out emergency emptying or opening the door in an emergency.

1. Open the lower cover cap (①) by using a coin. Turn the drain plug (②) to pull out the hose.


2. Unplug the drain plug (②), allowing the water to flow out. At this time use a vessel to prevent water flowing on to the floor. When water does not flow any more, turn the pump filter (③) open to the left.

3. Remove out any foreign material from the pump filter (③). After cleaning, turn the pump filter (③) clockwise and insert the drain plug (②) to the original place. close the lower cover cap.

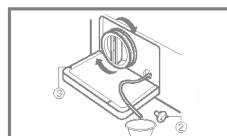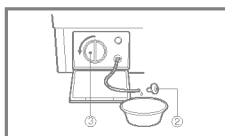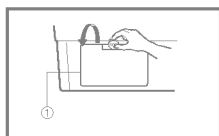


■ Dispenser drawer

- * After a while detergents and fabric softeners leave a deposit in the drawer.
- It should be cleaned from time to time with a jet of running water.
- If necessary it can be removed completely from the machine by pressing the catch downward and by pulling it out.
- To facilitate cleaning, the upper part of the fabric softener compartment can be removed.

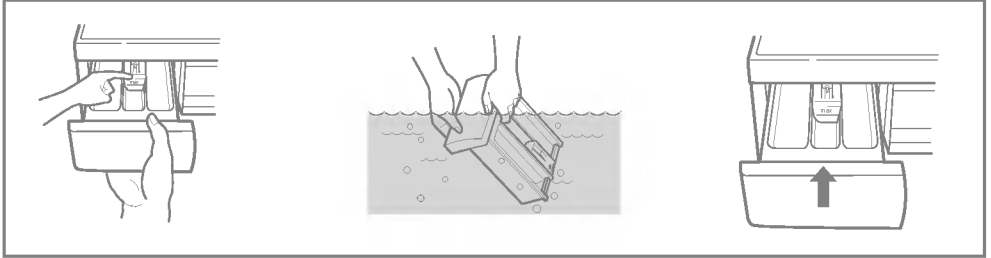

■ The drawer recess

- * Detergent can also accumulate inside the recess which should be cleaned occasionally with an old toothbrush.
- Once you have finished cleaning, replace the drawer and run a rinse cycle without laundry.

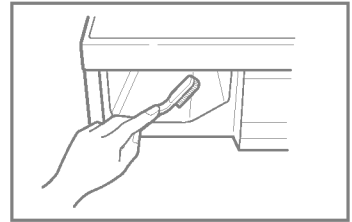

■ The washing drum

- If you live in a hard water area, limescale may continuously build up in places where it cannot be seen and thus not easily removed. Over time the build up of scale clogs appliances, and if it is not kept in check these may have to be replaced.
- Although the washing drum is made of Stainless steel, specks of rust can be caused by small metal articles (paper clips, safety pins) which have been left in the drum.
- The washing drum should be cleaned from time to time.
- If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use.
- * Descaler may contain chemicals that may damage part of your washing machine.
- * Remove any spots with a stainless steel cleaning agent.
- * Never use steel wool.

■ Cleaning your washer

1. Exterior

Proper care of your washer can extend its life.

The outside of the machine can be cleaned with warm water and a neutral non abrasive household detergent.

Immediately wipe off any spills. Wipe with damp cloth.

Try not to hit surface with sharp objects.

* IMPORTANT: Do not use methylated spirits, diluents or similar products.

2. Interior

Dry around the washer door opening, flexible gasket and door glass.

Run washer through a complete cycle using hot water.











Repeat process if necessary.

NO Remove hard water deposits using only cleaners labeled as washer safe.

* This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately
 When the machine does not function properly or does not function at all, check the following points before you contact your service provider.

Symptom	Possible Cause	Solution
Rattling and clanking noise	<ul style="list-style-type: none"> Foreign objects such as coins or safety pins maybe in drum or pump. 	<p>Stop washer and check drum and drain filter. If noise continues after washer is restarted, call your authorized service centre.</p>
Thumping sound	<ul style="list-style-type: none"> Heavy wash loads may produce a thumping sound. This is usually normal. 	<p>If sound continues, washer is probably out of balance. Stop and redistribute wash load.</p>
Vibrating noise	<ul style="list-style-type: none"> Have all the transit bolts and packing been removed? Are all the feet resting firmly on the ground? 	<p>If not removed during installation, refer to Installation guide for removing transit bolts. Wash load may be unevenly distributed in drum. Stop washer and rearrange wash load.</p>
Water leaks.	<ul style="list-style-type: none"> Fill hoses or drain hose are loose at tap or washer. House drain pipes are clogged. 	<p>Check and tighten hose connections. Unclog drain pipe. Contact plumber if necessary.</p>
Oversudsing		<p>Too much detergent or unsuitable detergent may cause excessive foaming which may result in water leaks.</p>
Water does not enter washer or it enters slowly	<ul style="list-style-type: none"> Water supply it not adequate in area. Water supply tap is not completely open. Water inlet hose(s) are kinked. The filter of the inlet hose(s) are clogged. 	<p>Check another tap in the house. Fully open tap. Straighten hose(s). Check the filter of the inlet hose(s).</p>
Water in the washer does not drain or drains slowly.	<ul style="list-style-type: none"> Drain hose is kinked or clogged. The drain filter is clogged. 	<p>Clean and straighten the drain hose. Clean the drain filter.</p>

Symptom	Possible Cause	Solution
Washer does not start	<ul style="list-style-type: none"> • Electrical power cord may not be plugged in or connection may be loose. • House fuse blown, circuit breaker tripped, or a power outage has occurred. • Water supply tap is not turned on. 	<p>Make sure plug fits tightly in wall outlet.</p> <p>Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician. Turn on water supply tap.</p>
Washer won't spin	<ul style="list-style-type: none"> * Check that the door is firmly shut. 	<p>Close the door and press the Start/Pause button. After pressing the Start/Pause button, it may take a few moments before the clothes washer begins to spin. The door must lock before spin can be achieved.</p>
Door does not open		<p>Once started, the door can not be opened for safety reasons. Wait one or two minutes before opening the door to give the electric locking mechanism time to release.</p>
Wash cycle time delayed		<p>The washing time may vary by the amount of laundry, water pressure, water temperature and other using conditions. If the imbalance is detected or if the suds removing program works, the wash time shall be increased.</p>

Symptom	Possible Cause	Solution
	<ul style="list-style-type: none"> • Water supply is not adequate in area • Water supply taps are not completely open. • Water inlet hose(s) are kinked. • The filter of the inlet hose(s) are clogged. 	<p>Check another tap in the house. Fully open tap. Straighten hose(s). Check the filter of the inlet hose(s).</p>
	<ul style="list-style-type: none"> • Drain hose is kinked or clogged. • The drain filter is clogged. 	<p>Clean and straighten the drain hose. Clean the drain filter.</p>
	<ul style="list-style-type: none"> • Load is too small. • Load is out of balance. • The appliance has an unbalance detection and correction system. If individual heavy articles are loaded (ex. bath mat, bath robe, etc.), this system may stop spinning or even interrupt the spin cycle altogether. • If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle. 	<p>Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning</p>
	 <ul style="list-style-type: none"> • Is the door opened? 	<p>Close the door. * If "dE" is not released, call for service.</p>
		<p>Unplug the power plug and call for service.</p>
	<ul style="list-style-type: none"> • Water overfills due to the faulty water valve. 	<p>Close the water tap. Unplug the power plug. Call for service.</p>
	<ul style="list-style-type: none"> • Water level sensor has malfunctioned. 	
	<ul style="list-style-type: none"> • Over load in motor. 	
	<ul style="list-style-type: none"> • Over load in motor. 	



洗衣機說明書

WD-14112(7)FD

多謝閣下選購 LG 全自動洗衣機。為確保閣下在安全的情況下安裝、使用及維修洗衣機，請細閱此說明書，並保留以便日後查閱。
請將洗衣機型號及產品編號記錄下來。

產品細節



■ 巨型滾桶

LG's 巨型滾桶比較其他洗衣機多洗約40%衣物，同時亦提供更佳洗衣效果。



 
■ 智能洗衣系統洗衣更經濟

智能洗衣系統能感應衣物數量及水溫，選擇適合水位及清洗時間，將水電消耗量減至最低。



■ 直接驅動系統

先進的無刷直流摩打，無須使用傳動帶及滑輪，能直接驅動滾桶轉動。




■ 兒童保險鎖

兒童保險鎖系統防止兒童在機器操作時接觸任何按鈕而改變清洗程式。



■ 低噪音速度控制系統

 此機能感應衣物數量及將衣物均勻擺放，減低衣物旋轉時的噪音。



■ 自動重開

如因電力供應問題而令洗衣機關掉，它能自動調節至停止時的位置重開繼續清洗。

目錄

警告	3
產品規格	4
安裝	5
洗衣前護理	11
加入清潔劑	12
功能	13
如何使用洗衣機	14
維修保養	21
解決問題指引	24

警告

— 使用洗衣機前請細閱此說明書



警告!

為確保閣下安全，必須依照說明書指示，以減低火警或爆炸的危險，或防止人命或財產損失。

重要安全指南

警告：為減低火警、觸電，或人身受損的危險，請依照以下基本預防措施：

- 切勿將洗衣機放在露天地方。
- 切勿擅自更改洗衣機裝置。
- 切勿更換或維修洗衣機任何部分。除用戶維修指南及修理指南內提供的建議外，切勿自行維修此機，維修時請確保閣下有足夠技巧進行。
- 確保洗衣機底或附近沒有可燃物體如紗布、紙張、碎布、化學物品等。
- 如操作此機時有小童在場，請加以看管。切勿讓小童把玩洗衣機各部分或其他電器。
- 切勿讓洗衣機門長期開啟，這會令小童緊握機門或爬進洗衣機內。
- 切勿接觸操作中的洗衣機，應等待滾桶完全停止轉動。
- 洗衣程序會令衣物纖維的防火能力減低。
- 為防止引起火警或爆炸，切勿清洗或弄乾曾利用易燃或爆炸性物品(如蠟、油、油漆、電油、去油劑、乾洗溶劑、石蠟等)處理過的衣物。
- 為防止火警或爆炸，請依照衣物生產商的清洗及護理指南。
- 切勿用力關機門，或在機門鎖上時強行開啟，這會引至機器損壞的。
- 為免觸電，清潔或維修洗衣機前，請先截斷電源。
- 洗衣機如已損壞、故障、安裝不妥、或機件殘缺(包括損壞的電線或插頭)，切勿嘗試啟動。

保留以下指南


接駁地線指南

此機必須接有地線。如機器出現故障，接有地線可以減少觸電危險。此機配備裝有接地導體的電線及接地插頭，插頭必須連接正規及接地的插座。

- 為防止接地插頭受損，切勿使用萬能插頭。
- 如閣下沒有正規插座，請聯絡技術員。

警告：接地導體接駁不正確會引起觸電，如有疑問，請聯絡技術員檢查閣下的電器是否接有地線。切勿更改供應商提供的插頭，如該插頭不適用於屋內的插座，請聯絡技術員安裝合適的插座。


產品規格

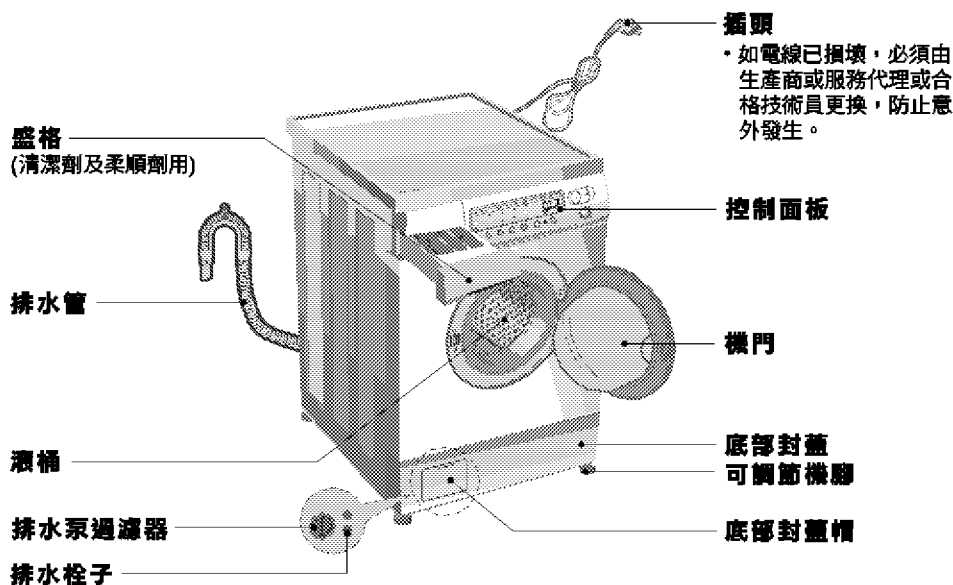

- 名稱 : 前置式洗衣機
- 電能供應 : 220-240V~, 50Hz
- 體積 : 600毫米(闊)x600毫米(深)x850毫米(高)
- 重量 : 65公斤
- 洗衣量 : 7公斤
- 最大耗電量 : 2100瓦
- 旋轉速度 : 400/800/1000/1200/1400
- 耗水量 : 75公升(10.7公升/公斤)
- 可容水壓 : 0.3-10kgf/cm²(30-1000kPa)

* 為提升產品質素，洗衣機外觀或規格可能稍作更改而無需另作聲明。

 ■ 配件



入水管(1件) 選擇性



扳鉗

安裝

切勿將洗衣機放在露天或溫度低於零度的地方。

將洗衣機接駁地線以符合法例要求。


如將洗衣機放在地毯上，切勿讓地毯阻塞機底空氣流通。

如在可能出現蟻蟻或其他蟲患的地方使用本產品，請在任何時間，均須確保洗衣機及四周保持清潔。本產品的保養，並不包括任何由蟻或其他害蟲造成的損毀。

■ 運輸螺栓


為防止搬運洗衣機時造成內部損害，此機裝有運輸螺栓。

■ 移除運輸螺栓

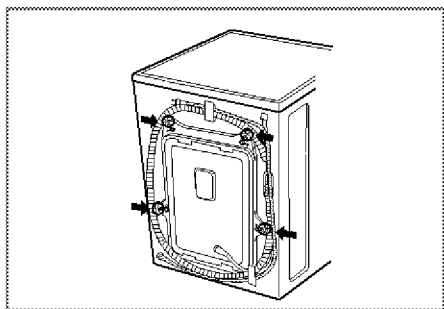


1. 為防止運輸時引起機器內部損壞，四個螺栓均被鎖上。使用洗衣機前，移除螺栓，只保留橡膠栓子。

• 如閣下不能將螺栓移除，會引起機身嚴重震動、噪音及故障。

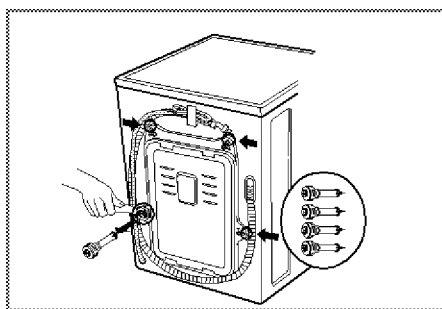


3. 將四個螺栓拿走，只保留橡膠栓子，只須將栓子輕輕扭曲便可。保留四個螺栓以便日後使用。

• 每次搬運洗衣機時，必須再次鎖上運輸螺栓。

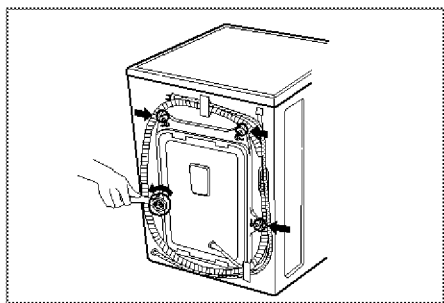


2. 利用扳鉗將螺栓鬆開。

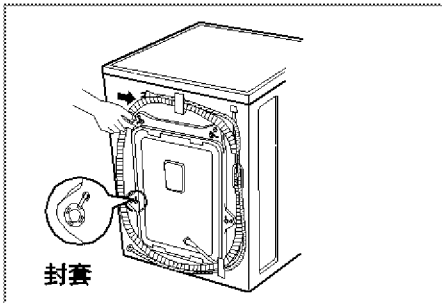

4. 利用我們提供的封套蓋著四個洞。

安裝

■ 安裝地點要求

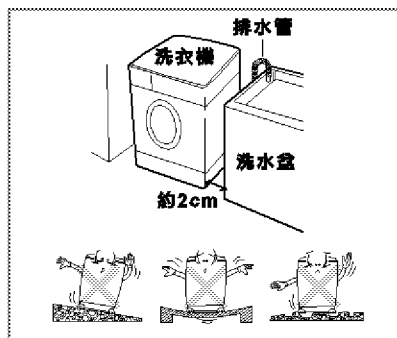

平地：

許可斜度為 1°

電力輸出處：


必須在洗衣機兩側1.5米範圍內，切勿接駁多於一件電器。

足夠空間：

供貼牆、貼門及地面的洗衣機型號參考。

(10cm：背部/ 2cm：右及左)

任何時候均不可將衣物擺放或儲存在洗衣機頂部，這會損壞機身或操縱裝置。

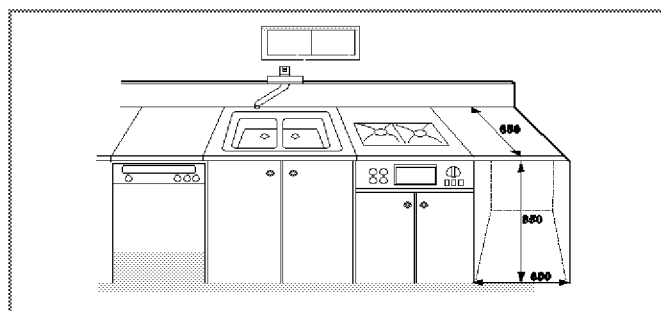

■ BS 插頭安全細節(適用於英國用戶)

重要

 
此插頭的電線是根據以下規則著色：

黃及綠：地線

藍：中線

啡：活線

此機必須接地



由於電線顏色未必與插頭上的終端相同，請依照以下指示進行：
黃及綠色電線必須接駁至刻有E字或⊕符號或鬆上黃綠或綠色的終端。

藍色電線必須接駁至刻有N字或鬆上黑色的終端。

啡色電線必須接駁至刻有L字或鬆上紅色的終端。

如使用13amp(BS1363)插頭，請使用13amp BS1362保險絲。


安裝

■ 接駁電源

1. 切勿使用伸延電線或萬能插頭。
2. 如電線已損壞，必須由生產商或其服務代理或合格技術員更換，以免發生危險。
3. 每次使用洗衣機後，必須將電源及水源關上。
4. 根據現行法例，閣下的洗衣機必須連接至接駁地線的插座上。
5. 洗衣機必須放在方便閣下接觸插頭的地方。
 - 必須由合資格人士，維修本洗衣機。由缺乏經驗的人士進行維修，或會造成人身損傷或令洗衣機出現嚴重故障，請聯絡當地的服務中心。
 - 切勿把洗衣機安放在溫度或會低於冰點的地方。結了冰的喉管或會因受壓而爆裂，而低於冰點的溫度，亦會降低電子控制組件的可靠性能。
 - 如在冬季或在低於冰點的溫度下搬運洗衣機，請先把洗衣機安放在室溫下數小時，方可開始操作。

■ 洗衣機須接駁使用新水管的水龍頭。

■ 接駁水源水管

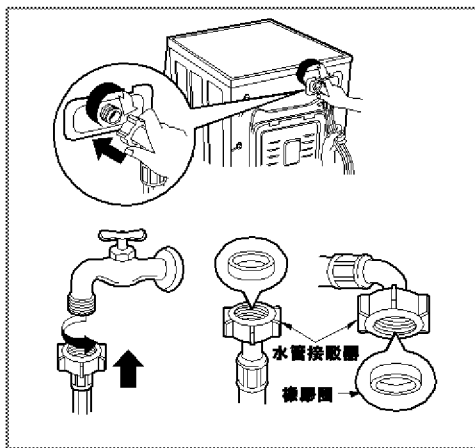

▶ 水壓必須在30kPa至1000kPa之間
(0.3~10kgf/cm²)

▶ 接駁入水管至活瓣時切勿讓活瓣鬆脫或移位。


▶ 如供水水壓超過1000kPa，請安裝減壓器。

- 為免漏水，我們提供兩個橡膠圈給閣下接駁水管用。
- 將水喉開至最大看看水管接駁是否妥當。
- 定期檢查水管情況，如有需要將它更換。
- 確保水管沒有打結及被壓。


安裝

■ 一般水喉及無螺紋螺絲入水管


1. 鬆開固定的螺絲接駁水喉。

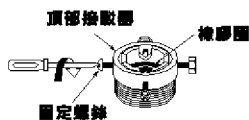

 2. 將接駁器向上推，直至橡膠圈緊貼水喉。將4顆螺絲鎖緊。




3. 將供水管垂直向上推，直至水管內的橡膠圈完全緊貼水喉，將水管向右扭緊。

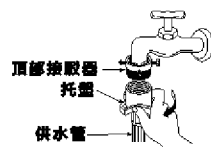


■ 一般水喉及無螺紋即合入水管

 
1. 鬆開頂部接駁器螺絲。




2. 將頂部接駁器向上推，直至橡膠圈緊貼水喉。將四顆螺絲鎖緊。

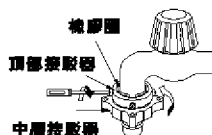

3. 將供水管接駁至中層接駁器，將托盤向下推。


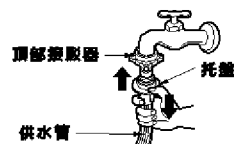


• 如水喉直徑較大請移除導入托盤。

 

• 將中層接駁器扭緊防止漏水。
• 確保橡膠圈在水管接駁器內。

• 要分開供水管及中層接駁器，只需關掉水喉，將托盤推下，拉下供水管便可。

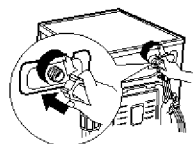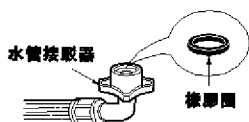

使用垂直水喉

垂直水喉



伸延水喉



方型水喉





• 閣下的洗衣機只能接駁冷水。
• 確保水管沒有打結或被壓。



安裝

本產品並不適合在航海或其他流動地方使用，如在車隊或飛機上使用。
如長時間置閒洗衣機(如假期時)，特別是附近地面並無去水通道(溝渠)，請先關掉龍頭。棄置舊洗衣機時，請先切斷主電線及毀壞插頭及弄壞門鎖，以免小孩被困在內。包裝物料(如膠膜或發泡膠)或會對小孩做成危險，它們或會引致窒息！請把包裝物料遠離小孩！

■ 安裝排水管

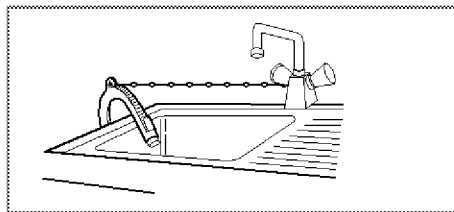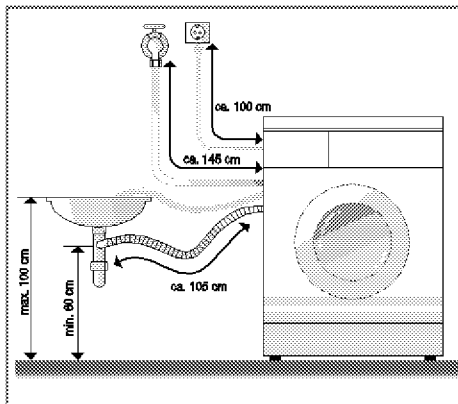

- 安裝排水管至洗手盤時，用繩將它繫緊。
- 繫緊排水管可防止漏水破壞地板。

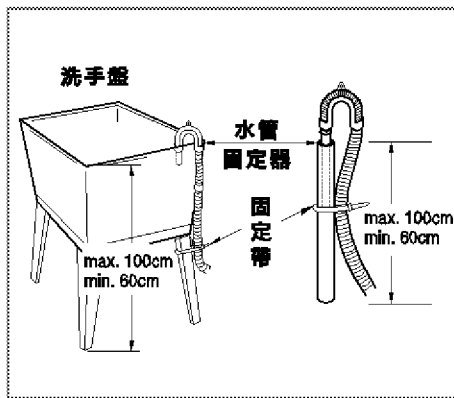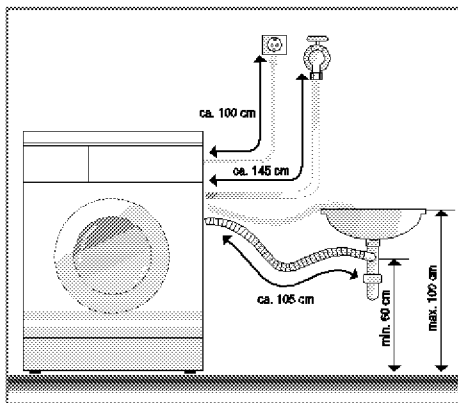


- 切勿將排水管放在離地100厘米的高度。
- 將排水管繫緊能避免漏水破壞地板。
- 如排水管過長，切勿將它塞進洗衣機，這會引起雜聲。


- 將排水管接駁至洗手盤時，用繩將它繫緊。
- 將排水管繫緊能避免漏水破壞地板。

安裝


■ 機身平衡

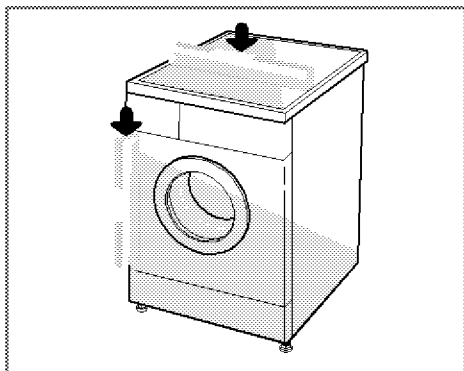

1. 調校機身防止過多噪音及震動。
將洗衣機安裝在平地上，最好放在房間的角落。

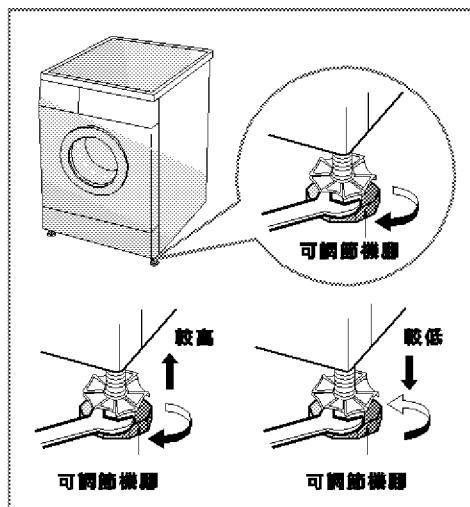

2. 如地面不平，調校可調節機腳。(切勿利用木塊等物件墊高)確保四隻機腳平穩安放在地上，檢查機身是否平衡。(利用心理水平尺)

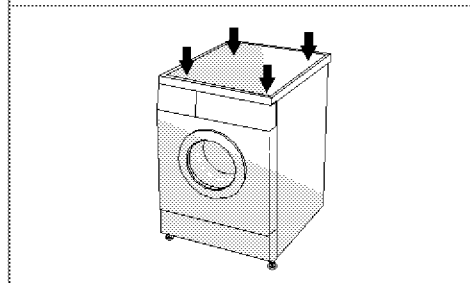

- * 對角檢查
將洗衣機頂板對角壓下，洗衣機應不會上下搖擺。(請檢查兩個對角)如機身出現搖晃，請再次調校機腳。

洗衣前護理

■ 洗衣前護理

1. 護理標識

查看閣下衣物的護理標識，上面印有衣物纖維類別及清洗方法。

2. 分類


為達到最佳效果，請在每次清洗過程中清洗同類型衣物。不同衣物清洗方法各有不同，包括水溫及旋轉速度。切記將深淺衣物分開清洗，防止白色衣物染色。在可能情況下，切勿同時清洗嚴重染污及輕微染污衣物。

污漬(嚴重，一般，輕微)
顏色(白色，淺色，深色)
毛頭(製造毛頭衣物，易黏毛頭衣物)


根據污漬嚴重程度分類。
將白色及顏色衣物分開。
將製造毛頭衣物及易黏毛頭衣物分開清洗。

3. 放入衣物前護理


■ 將大小衣物混合清洗，先放大件衣物，但大件衣物不能超過重洗衣量的一半。
切勿清洗一件衣物，這會引起衣物不平均，可加入一至兩件類似衣物。

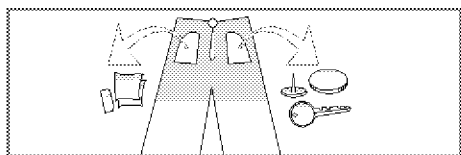

- 檢查所有袋口，確保沒有雜物，鐵釘、髮夾、火柴、原子筆、硬幣及鎖匙等物件均會對洗衣機及衣物造成損害。

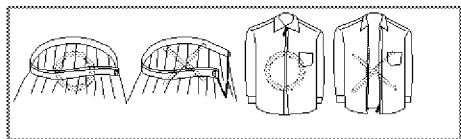

- 將拉鏈、扣子及繩繫好，防止衣物被劃破。

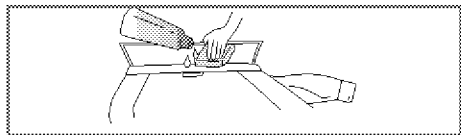


- 利用稀釋的清潔劑預先處理袖口及衣領，減低污漬程度。

加入清潔劑


■ 加入清潔劑及衣物柔順劑

1. 清潔劑盛格

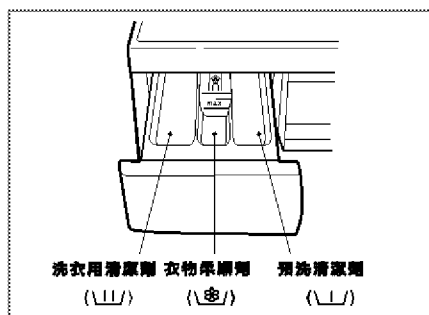

- 只供清洗用 \ /
- 預洗 + 清洗 \ / + \ /

2. 加入衣物柔順劑

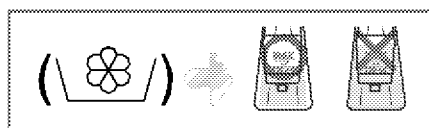

- 切勿超過可注入限量，過多衣物柔順劑會令衣物染上污漬。
- 切勿將衣物柔順劑放在盛格超過兩天。
(柔順劑會變硬)
- 柔順劑會在最後過水程式時自動加入。
- 注水時切勿打開清潔劑盛格。
- 切勿加入溶劑如苯。

注意 切勿將柔順劑直接倒在衣物上。

3. 清潔劑份量

- 應根據清潔劑生產商指示使用適量清潔劑。
- 使用過量清潔劑，會產生過多泡沫，影響清潔效果或加重發動機負擔。(引起故障)
- 使用適合前置式洗衣機之洗衣粉。
- 清潔劑使用會因水溫、水硬度、衣物大小及污染程度而改變，為保持最佳效果，防止過多泡沫產生。

* 忠告

- 最多衣物量：根據生產商建議。
- 部分衣物量：正常衣物量的3/4。
- 最少衣物量：最多衣物量的一半。

- 清潔劑在洗衣程式開始時注入。

功能

■ 根據衣物種類建議清洗方法

* 能源標籤數據根據棉質衣物在60°C水溫清洗，利用EN60456測試得出的結果。

程式	衣物種類	適合水溫 (選擇性)	洗衣程序 (選擇性)	最大 洗衣量	耗水量 (升)	耗電量 (kWh)	時間 (分鐘)
白色 衣物	先檢查衣物是否 適合機洗。 (白色棉質、亞麻 毛布及被單...)	95°C (60°C, 40°C)	清洗 + (預洗)	7.0kg	95	2.9	165
				5.0kg	88	2.4	165
				2.0kg	75	1.8	125
顏色 衣物	不褪色衣物 (恤 衫, 晚裝, 睡衣 ...)及微污白色 棉質衣物(內衣...)	40°C (冷水, 30°C,60°C)	清洗 + (預洗)	7.0kg	75	0.72	122
				5.0kg	65	0.7	122
				2.0kg	52	0.6	112
人造 纖維	人造纖維尼龍, 丙烯酸纖維, 聚脂纖維	40°C (冷水, 30°C,60°C)	清洗 + (預洗)	3.5kg	60	0.5	89
				2.0kg	48	0.4	
柔軟 衣物	柔軟易受損衣物 (絲, 窗簾...)	30°C (冷水,40°C)	清洗 + (預洗)	3.0kg	60	0.5	64
				1.0kg	48	0.3	
羊毛 衣物	可機洗純 羊毛衣物	30°C (冷水,40°C)	清洗	2.0kg	52	0.3	62
				1.0kg	48	0.2	
手洗 衣物	印有"手洗"標 籤的柔軟及羊 毛衣物	冷水 (30°C,40°C)	清洗	2.0kg	52	0.03	56
				1.0kg	48	0.01	
30分鐘 快洗	與棉質衣物及人造纖 維一樣	30°C (冷水,40°C)	清洗	5.0kg	48	0.3	30
				2.0kg	40	0.2	


* 預洗：如衣物嚴重污染，"預洗"程序能產生更佳洗衣效果。預洗程序適用於棉質衣物-經濟，棉質衣物及人造纖維洗衣程式。

* 水溫：根據衣物生產商的衣物保護標籤選擇適合的洗衣水溫。

* 彩漂：如需清除蛋白污漬(牛奶, 血, 朱古力...), 可選擇彩漂功能。

* NB. 清洗白色衣物、顏色衣物及人造纖維時, 如水溫高於60°C, 可選擇彩漂功能及經濟功能。

如何使用洗衣機

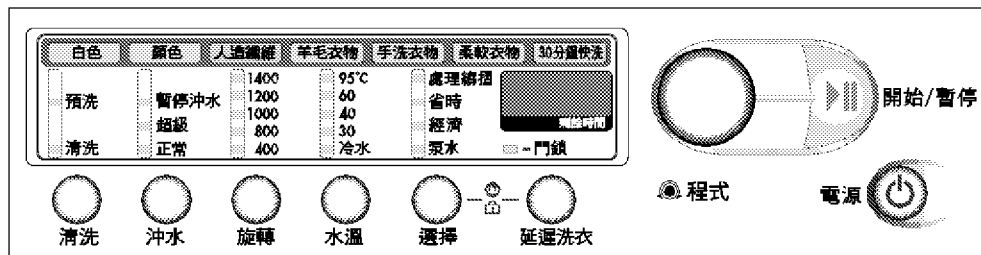

1. 原有設定程式

- 按電源 (⏻) 鍵開始。
- 按開始/暫停鍵。
- 開始時狀態
 - 清洗：只有清洗
 - 沖水：3次
 - 旋轉：每分鐘1400轉
 - 水溫：40°C
 - 程式：顏色

2. 自選程式

- 按電源 (⏻) 鍵開始。
- 按鍵選擇所需狀態。
選擇不同狀態可參考15至20頁。
- 按開始/暫停鍵。


3. 發聲/消聲

- 同時長按水溫及延遲洗衣鍵可設定發聲/消聲功能。
- 任何時候均可設定發聲/消聲功能，此功能亦會在電力出現故障時自動取消。
關機時發聲/消聲功能亦能操作。

4. 半衣物量自動調節

- 洗衣機裝有自動水位調整系統，清洗少量衣物時，此功能令閣下節省時間及金錢。
- 此系統令洗衣機能因應不同衣物量使用不同耗水量。

如何使用洗衣機

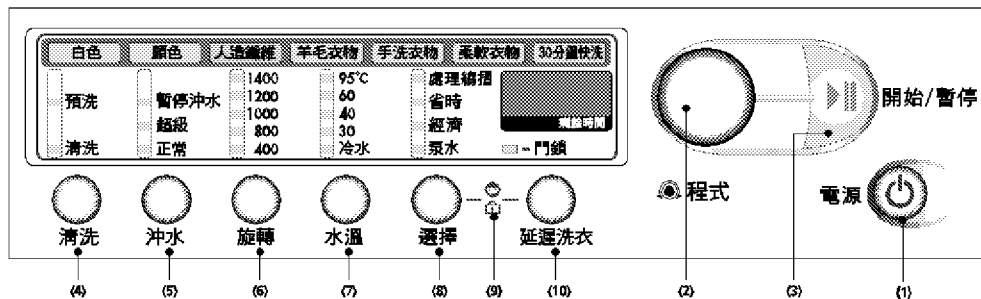

- (1) 按鈕：電源 (1) 按鈕：延遲洗衣
 (2) 旋鈕：程式 (2) 按鈕：水溫
 (3) 按鈕：開始/暫停 (3) 按鈕：選擇
 (4) 按鈕：清洗 (4) 按鈕：沖水
 (5) 按鈕：沖水 (5) 按鈕：旋轉
 (6) 按鈕：旋轉 (6) 按鈕：水溫
 (7) 按鈕：水溫 (7) 按鈕：延遲洗衣
 (8) 按鈕：選擇 (8) 兒童鎖
 (9) 兒童鎖 (9) 兒童鎖

電源



1. 電源

- 按電源 (⏻) 鍵開關洗衣機。
- 此鍵亦可作取消延遲洗衣用。

2. 原有程式

 
- 按下電源 (⏻) 鍵後，洗衣機會進行顏色衣物清洗程式。其他設定條件如下。
- 所以，如不用選擇其他洗衣程式，可按開始/暫停鍵進行洗衣程序。

原有程式

- 顏色衣物程式 / 清洗 / 正常沖水 / 1400rpm / 40°C

程式

- 此機共有7種不同程式，讓閣下根據不同衣物種類使用。
- 指示燈會亮起以顯示所選程式。



- 白色衣物
- 顏色衣物
- 人造纖維
- 柔軟衣物
- 羊毛衣物
- 手洗衣物
- 30分鐘快洗

1. 程式

- 按下開始/暫停鍵後，洗衣機會自動選擇棉質衣物-經濟程式。
- 轉動程式旋鈕，可按以下次序選擇所需程式："顏色衣物 - 人造纖維 - 羊毛衣物 - 手洗衣物 - 柔軟衣物 - 30分鐘快洗 - 白色衣物"。

2. 程序

- 白色衣物
- 顏色衣物
- 人造纖維
- 柔軟衣物
- 羊毛衣物
- 手洗衣物
- 30分鐘快洗

如何使用洗衣機

開始/暫停




1. 開始

- 按**開始/暫停**鍵開始洗衣程序。

2. 暫停

- 按"**開始/暫停**"鍵暫停洗衣程序。
- 按下暫停鍵後，洗衣機會在4分鐘後自動關掉。
- 注意：**選擇暫停後及在洗衣程序完結前1至2分鐘，機門並不能門啓。

清洗

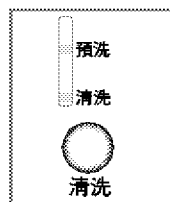

- 按**清洗**鍵選擇所需清洗模式。

- 清洗
- 預洗+清洗


1. 清洗

- 清洗程序適用於微污或一般污漬衣物。

2. 預洗+清洗

- 如衣物嚴重染污，可使用"**預洗+清洗**"程序。
- 預洗程序適用於**白色衣物/顏色衣物**及**人造纖維**程式。
- 燈號亮著表示該功能已被選。

沖水

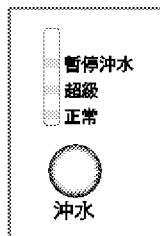

- 按**沖水**鍵選擇所需沖水模式。

- 正常
- 超級
- 正常+暫停沖水
- 超級+暫停沖水

1. 正常

- 白色衣物/顏色衣物/人造纖維**程式沖水3。
- 羊毛衣物/手洗衣物/30分鐘快洗/柔軟衣物**程式沖水2次。

2. 超級


- 正常+額外沖水1次
- 利用**超級**沖水程式可沖走衣物上殘留的污染或清潔劑。

3. 暫停沖水

- 如沖水後將衣物留在機內而不旋轉，可按**旋轉**鍵暫停沖水，防止衣物變皺。
- 選擇**暫停沖水**功能後，如需排水及旋乾，可按**開始/暫停**鍵取消**暫停沖水**功能，並選擇所需旋速或程式，再按**開始/暫停**鍵開始程式。
- 如只需排水，請選擇**不脫水**程式。
- 燈號亮著表示該功能已被選。

如何使用洗衣機

旋轉

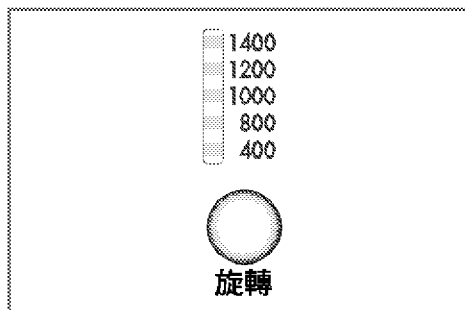

• 按旋轉鍵選擇所需旋速。


- 400
- 800
- 1000
- 1200
- 1400

1. 旋速選擇

- 按以下程式選擇所需旋速。
- 白色衣物 / 顏色衣物 / 30分鐘快洗
(不脫水) - 400 - 800 - 1000 -
1200 - 1400
- 人造纖維 / 羊毛衣物
(不脫水) - 400 - 800 - 1000
- 柔軟衣物 / 手洗衣物
(不脫水) - 400 - 800

如何使用洗衣機

水溫

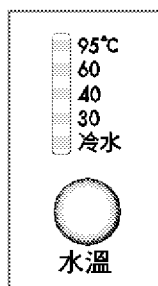


- 按水溫鍵選擇所需水溫。
- 冷水
- 30°C / 40°C / 60°C / 95°C

1. 水溫

- 按以下程式選擇所需水溫。
- 白色衣物
40°C - 60°C - 95°C
- 人造纖維 / 顏色衣物
冷水 - 30°C - 40°C - 60°C
- 柔軟衣物 / 羊毛衣物 / 手洗衣物 / 30分鐘快洗
冷水 - 30°C - 40°C

燈號亮著表示該功能已被選。
詳情請參考第13頁。

選擇

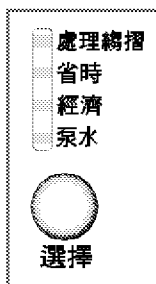

- 按選擇鍵可選擇不同功能。
- 處理縐摺
- 省時
- 經濟
- 泵水

1. 處理縐摺

- 若要防止衣物出現縐摺，請選擇此功能連脫水程式。

2. 省時

- 此功能可減時洗衣時間。
- 此功能不適用於30分鐘快洗程式。

3. 經濟

- 選擇經濟功能，水溫會降低，洗衣時間會較長，減少耗電量。
[清洗白色衣物、顏色衣物及人造纖維時，如水溫高於60°C，可選擇經濟功能。]

 
4. 泵水

- 若選擇了“泵水”設定，洗衣機在排水後，會停止操作。
- * 若在羊毛 / 纖細衣物和手洗衣物程式選擇了“泵水”程序，閣下可在沖洗過程，停止脫水操作。

亮燈即表示您已選擇了此功能

如何使用洗衣機

兒童鎖




選擇此功能，可防止兒童或老人操作洗衣機。

1. 兒童鎖

- 同時按清選擇鍵及延遲洗衣鍵便可設定兒童鎖。



 - 兒童鎖設定後，所有按鈕均不能操作。
- 如需取消兒童鎖系統，再次同時按選擇鍵及延遲洗衣鍵便可。




- 如需在兒童鎖生效時更改洗衣程式，

- 同時按選擇鍵及延遲洗衣鍵。
- 按開始/暫停鍵。
- 更改所需程式，再按開始/暫停鍵。



- 兒童鎖可隨時設定，並會在操作出現故障時取消。兒童鎖在關掉電源後亦能運作。

延遲洗衣

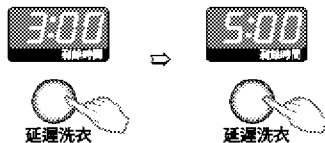

1. 延遲洗衣

開始"延遲洗衣"前請先預備好衣物。

- 開啟水喉。
- 放入衣物，關上機門。
- 放入清潔劑及衣物柔順劑在盛格內。

如何設定"延遲洗衣"時間

- 按電源(⏻)鍵。
- 轉動程式旋鈕選擇所需程式。
- 按延遲洗衣鍵設定所需時間。
- 按開始/暫停鍵。(":"閃動)

如延遲洗衣鍵按下，洗衣機會顯示"3:00"。最長順延時間為19小時，最短期間為3小時。

- 每次按鍵會將時間順延一小時。
- 按電源(⏻)鍵取消延遲洗衣功能。
- 延遲洗衣時間為即時至洗衣程式或選擇過程(清洗，沖水，旋乾)完結時的"預期時間"。

所順延的時間及實際所需洗衣時間會受不同供水情況及水溫影響。

如何使用洗衣機

顯示



1. 特別功能顯示

- 設定兒童鎖後，洗衣機會顯示 "CL" 字樣。
- 選擇延遲洗衣功能後，洗衣機會顯示直至完成所需程式的剩餘時間。

2. 自我判斷顯示

- 洗衣機如出現故障，會顯示故障類型。

"IE"：注水問題

"DE"：排水問題

"UE"：機身不平衡

"dE"：機門未關

"tE"：水溫問題

"FE"：注水過多

"PE"：水壓問題

"LE"：發動機負荷過重

"LE"：發動機負荷過重

如洗衣機顯示以上故障字樣，請參考第26頁的解決方法。

3. 洗衣程序完結

- 洗衣程序完結時，洗衣機的顯示板會顯示 "End" 字樣。

4. 剩餘時間


- 洗衣時，洗衣機會顯示剩餘所需時間。
- 生產商建議程式
 - 白色衣物：約2小時45分鐘
 - 顏色衣物：約2小時2分鐘
 - 人造纖維：約1小時29分鐘
 - 羊毛衣物：約1小時2分鐘
 - 手洗衣物：56分鐘
 - 柔軟衣物：約1小時4分鐘
 - 30分鐘快洗：30分鐘
- 洗衣時間會隨著衣物量、水壓、水溫及其他洗衣條件改變。
- 如衣物擺放不平均或去泡程式運作中，洗衣時間或會較長。(最多增加45分鐘。)

維修保養


* 清潔洗衣機內部時，請先將電源截斷，防止觸電危險。

■ 入水過濾器


- 如水不能進入清潔劑盛格，控制面板上會閃動著"IE"字樣。
- 如注入的水為硬水或含有少量石灰，入水過濾器或會淤塞，建議閣下經常清潔入水過濾器。

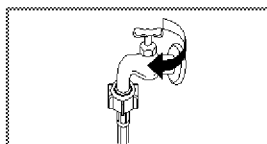


1. 關掉水喉。

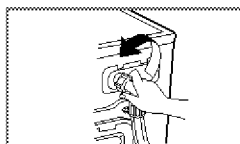

2. 鬆開入水管。

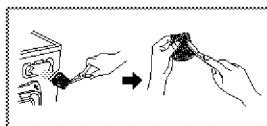

3. 利用硬短毛刷清潔過濾器。

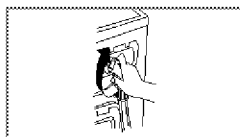

4. 將入水管扭緊。

■ 排水泵過濾器

* 排水過濾器收集衣物的毛頭及小型物件。經常檢查過濾器清潔，確保洗衣機操作順利。

▲ 警告

首先利用排水管排水，然後打開水泵過濾器清除阻礙物。
排水時小心水溫過熱。

1. 利用硬幣將機底封蓋帽




- ① 打開，扭動排水栓
- ② 將水管拉出。

2. 拿走排水栓子 ② 讓水

流出，這時利用器皿承著，防止水流在地面。待所有水排出後，向右扭開水泵過濾器 ③。

3. 拿出水泵過濾器 ③ 內


的異物，清理後順時針方向扭動水泵過濾器 ③，將排水栓子 ② 放回原處。關上機底封蓋帽。

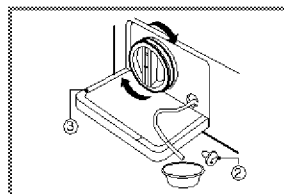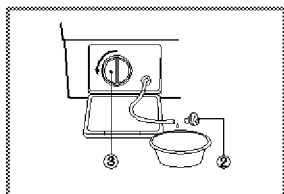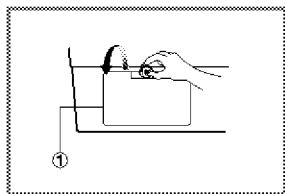

維修保養


■ 清潔劑盛格

- * 清潔劑及衣物柔順劑會累積在盛格內。
- 定期利用噴射式開水清潔。
- 如有需要，可將盛格按下拉出。
- 為方便清潔，衣物柔順劑格頂部可移除。

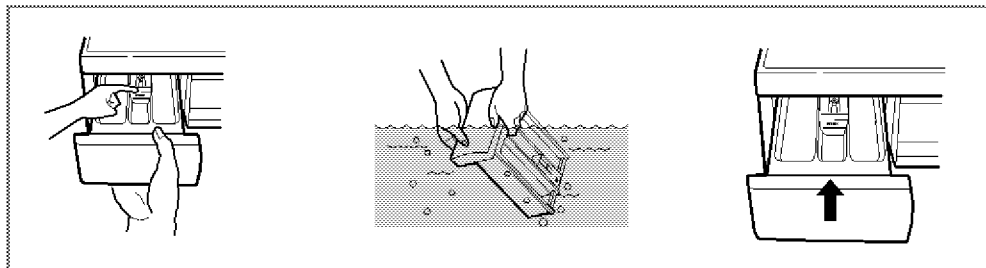

■ 清潔劑盛格窩

- * 清潔劑亦會積聚在盛格窩裡，請定期利用舊牙刷清潔。
- 清潔完畢後，放回盛格並進行一次沖水程序。

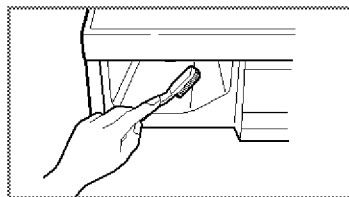

■ 洗衣滾桶

- 如閣下住在硬水區，石灰片會在隱蔽的地方積聚並難於清理。
積聚過多石灰片會阻塞洗衣機，如長期缺乏檢查會令滾桶需要更換。
- 雖然滾桶以不銹鋼製成，若滾桶內留有小型金屬物件(萬字夾，扣針)，仍會引起銹漬。
- 滾桶應經常清洗。
- 請使用適用於洗衣機的除污劑、染料或漂白劑。
- * 除污劑或含破壞洗衣機的成分。
- * 利用不銹鋼清潔劑清理污漬。
- * 切勿利用銅絲清潔。

維修保養

■ 清潔洗衣機

1. 外觀

小心保養閣下的洗衣機會令它更耐用。

洗衣機外殼可用暖水及中性不粗糙的家用清潔劑清潔。

利用微濕的布立即抹掉任何溢出的清潔劑。

小心勿讓鋒利物件撞擊洗衣機表面。

* **重要：**切勿使用燃料酒精、稀釋液或類似產品。

2. 內部

經常清潔機門開口、彈性密封墊及機門玻璃，確保洗衣時不會漏水。

利用熱水進行一次洗衣程序。

如有需要重覆以上程序一次。

注意 清理硬水殘積物時請利用適用於洗衣機清潔劑。

解決問題指引




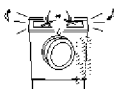



- * 此機配備自動安全功能，可以感應故障原因，及早作出反應。
如洗衣機不能正常或完全不能操作，聯絡技術員之前請檢查下列各項。

問題	可能成因	解決方法
尖利及叮噠聲	<ul style="list-style-type: none">滾桶或泵內可能有硬幣或扣針等異物。	停止洗衣並檢查滾桶及排水過濾器。如聲音持續，聯絡技術員。
重擊聲	<ul style="list-style-type: none">正常情況下，過多衣物會引起重擊聲。	如聲音持續，衣物擺放可能不平均，應停止洗衣並重新擺放衣物。
震動聲	<ul style="list-style-type: none">是否已將所有運輸螺栓及包裝紙移除？所有機腳是否穩放地面？	如安裝時沒有移除螺栓，參考安裝部份將螺栓拿走。 衣物擺放不平均。停止洗衣並重新擺放衣物。
漏水	<ul style="list-style-type: none">入水管或排水管接駁位鬆脫。排水管淤塞。	檢查並扭緊水管接駁位。 清除淤塞的水管，如有需要可聯絡通渠人員。
泡沫過多		使用過多或不合適的清潔劑？ 過多泡沫會引起漏水。
不能注水或注水速度慢	<ul style="list-style-type: none">供水不足。水喉未完全開啟入水管打結。入水管過濾器淤塞。	檢查屋內另一水喉。 完全開啟水喉。 使水管變直。 檢查入水管過濾器。
不能排水或排水速度慢	<ul style="list-style-type: none">排水管打結或淤塞。排水過濾器淤塞。	清理並將排水管變直。 清理排水過濾器。

解決問題指引

問題	可能成因	解決方法
洗衣機不能啟動	<ul style="list-style-type: none">• 沒有接駁插頭或接駁位已鬆。• 屋內保險絲燒毀，電流不能通過，或停電。• 水喉沒有扭開。	<p>確保插頭穩插插座。</p> <p>更換保險絲。切勿增加保險絲容量。 如因電力負荷過重，聯絡合格技師更正。</p> <p>扭開水喉。</p>
洗衣機不旋轉	<ul style="list-style-type: none">* 檢查機門是否關妥。	<p>關上機門並按開始/暫停鍵。按開始/暫停鍵後，洗衣機或需待數分鐘才能旋轉。洗衣機旋轉前必須將機門鎖上。</p>
不能開啟機門		<p>由於安全理由，開始洗衣程序後，機門不能開啟，請等候一至兩分鐘才開啟機門。</p>
洗衣程序時間順延		<p>洗衣時間會隨著衣物數量，水壓，水溫及其他條件影響。如洗衣機感應到衣物擺放不均或泡沫過多，洗衣時間亦會更長。</p>

解決問題指引

問題	可能成因	解決方法
	<ul style="list-style-type: none"> 供水不足。 水喉並不完全開啟。 入水管打結。 入水管過濾器淤塞。 	檢查屋內另一水喉。 完全開啟水喉 將水管變直。 檢查入水管過濾器。
	<ul style="list-style-type: none"> 排水管打結或淤塞。 排水過濾器淤塞。 	清理並將排水管變直。 清理排水過濾器。
	<ul style="list-style-type: none"> 太少衣物。 衣物擺放不均。 此機有衣物平衡感應及更正系統，機內如有大件衣物如浴室地氈、浴衣等，此系統或會令洗衣機停止轉動甚或擾亂轉動系統。 如衣物在完成洗衣程序後仍然很濕，可加入小型衣物作平衡，重新旋轉程式。 	加入一至兩件衣物幫助平衡。 重新擺放衣物。
	 <ul style="list-style-type: none"> 機門是否已關？ 	關上機門。 * 如機身仍有顯示 "dE" 字樣，可聯絡技術員。
		拔掉插頭並聯絡技術員。
	<ul style="list-style-type: none"> 如因損壞的活瓣引起注水過多，洗衣機會顯示 "FE" 字樣。 	關上水喉。 拔掉插頭。聯絡技術員。
	<ul style="list-style-type: none"> 水位感應器出現故障，洗衣機會出現 "PE" 字樣。 	
	<ul style="list-style-type: none"> 發動機負荷過重。 	
	<ul style="list-style-type: none"> 發動機負荷過重。 	



LG Electronics Inc.



LG Electronics Inc.