

Thank you for purchasing a high resolution monitor. It will give you high resolution performance and convenient reliable operation in a variety of video operating modes.

Features



- The **Studioworks 563N/563A** is a 15 inches (14.0 inches viewable) intelligent, microprocessor based monitor compatible with most analog RGB (Red, Green, Blue) display standards, including IBM PC®, PS/2®, Apple®, Macintosh®, Centris®, Quadra®, and Macintosh II family.
- The monitor provides crisp text and vivid color graphics with VGA, SVGA, XGA, and VESA Ergonomic modes (non-interlaced), and most Macintosh compatible color video cards when used with the appropriate adaptor. The monitor's wide compatibility makes it possible to upgrade video cards or software without purchasing a new monitor.
- Digitally controlled auto-scanning is done with the micro-processor for horizontal scan frequencies between 30 and 61kHz, and vertical scan frequencies between 50-120Hz.
- This monitor is capable of producing a maximum horizontal resolution of 1024 dots and a maximum vertical resolution of 768 lines.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- On Screen Display(OSD) adjustments in seven languages: English, Deutsch, Français, Español, Italiano, Português, Korean for ease of setup and screen optimization
- Plug and play capability if supported by your system.
- This monitor has DDC 2B function.*
- Compliant with the following regulated specifications :*
 - EPA ENERGY STAR
 - MPR II (Applies to **563N** only)

**For detailed information, please refer to the Reference Guide provided .*

- Turn off the equipment and all attached options.
- Carefully set the monitor face-down with the underside facing you.

Installation

1. Align the hooks on the tilt/swivel stand with the matching slots in the base of the monitor.
2. Insert the hooks into slots.
3. Slide the tilt/swivel stand toward the front of the monitor until the latches click into the locked position.

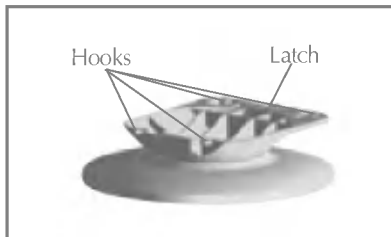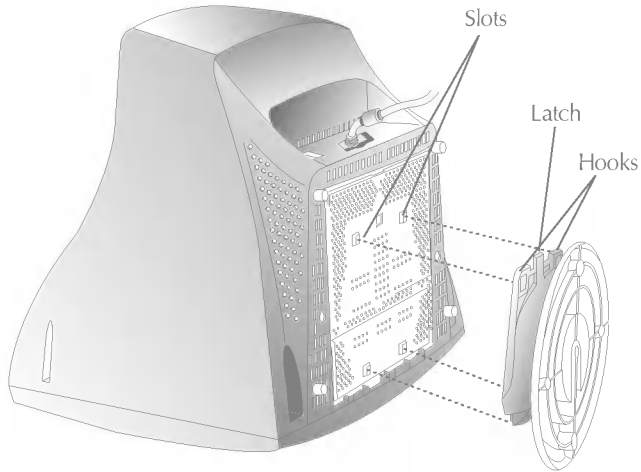


On the back of the monitor are two plug-in connections; one for the AC power cord, and the other for the signal cable from the video card.

- Power off both the monitor and PC.
- Connect the 15 pin VGA connector of the supplied signal cable to the output VGA video connector on the PC and the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
- Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows.

Connect the attached adapter block/signal cable to the video output on your MAC.


- One end of the AC power cord is connected into the AC power connector on the back of the monitor. The other end is plugged into a properly grounded three-prong AC outlet.
- Power ON the PC, then the monitor.
- If you see the **SELF DIAGNOSTICS** message, check the signal cable and connectors.
- After using the system, power OFF the monitor, then the PC.

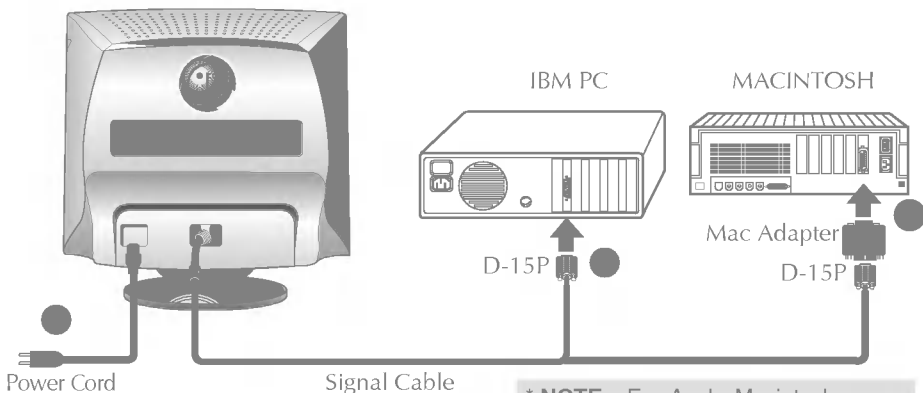


*** NOTE :** For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-sub VGA connector on the supplied cable to a 15 pin 2 row connector.

Location and Function of Controls


Front View

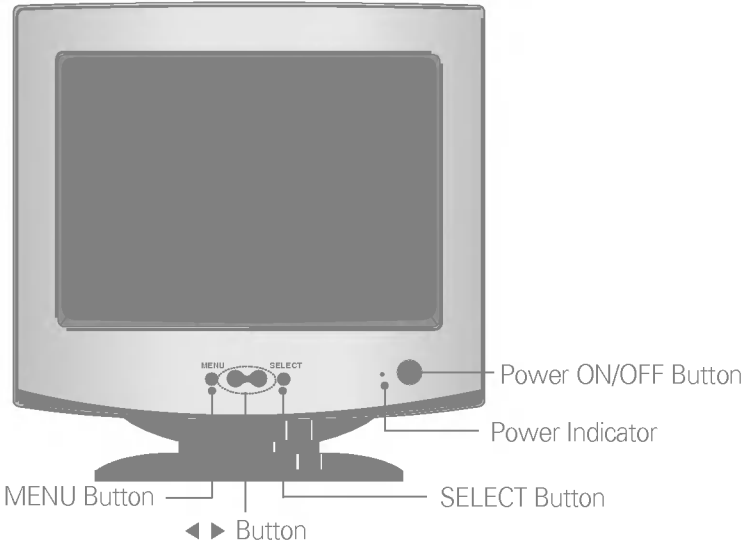



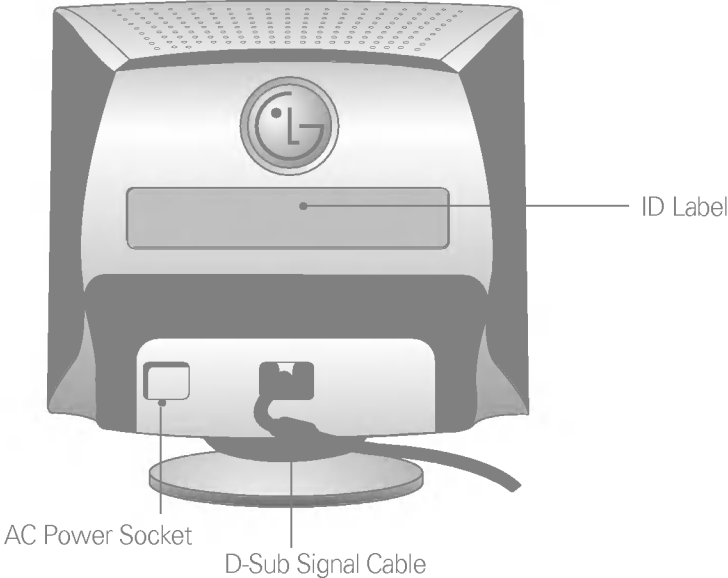


Rear View

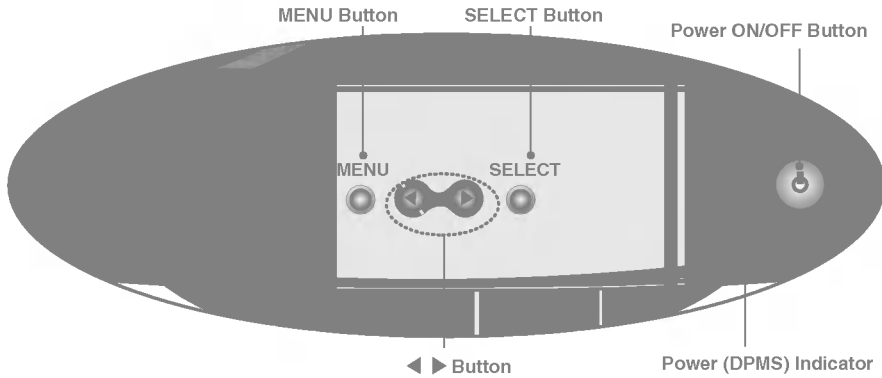

Front Panel Controls



Control	Function
 MENU Button	Use this button to enter or exit the on screen display.
 <math>\leftarrow \rightarrow</math> Button	Use these buttons to choose or adjust items in the on screen display.
 SELECT Button	Use this button to enter a selection in the on screen display.
 Power ON/OFF Button	Use this button to turn the monitor on or off.
 Power (DPMS) Indicator	This Indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/suspend/power off), this indicator color changes to amber.




On Screen Display (OSD) Control Adjustment

Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

- Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

To make adjustments in the On Screen Display, follow these steps:

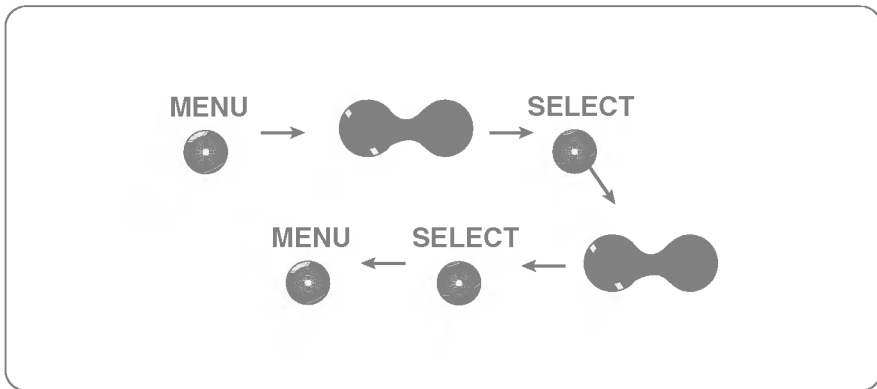


- 1** Press the **MENU Button**, then the main menu of the OSD appears.
- 2** To access a control, use the **◀** or **▶** **Buttons**. When the icon you want becomes highlighted, press the **SELECT Button**.
- 3** Use the **◀▶** **Buttons** to adjust the item to the desired level.
- 4** Accept the changes by pressing the **SELECT Button**.
- 5** Exit the OSD by Pressing the **MENU Button**.




You were introduced to the procedure of selection and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

 **CONTRAST**

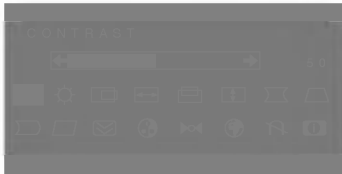


Adjust the display to the contrast desired.

 **BRIGHTNESS**

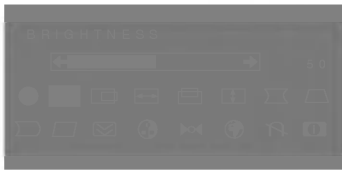


Used to adjust the brightness of the screen.

 **H POSITION**

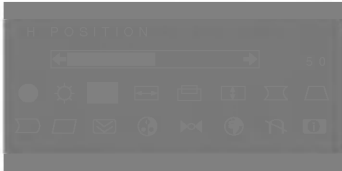


To move picture image left and right.
◀ Moves the screen image left.
▶ Moves the screen image right.

 **H SIZE**

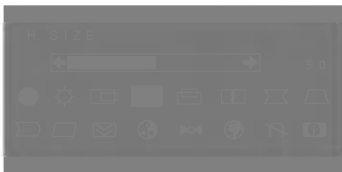

To adjust image width.
◀ Decreases the size of the screen image.
▶ Increases the size of the screen image.

 **V POSITION**

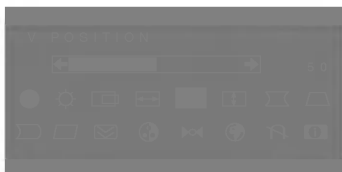


To move image up and down.
◀ Moves the screen image down.
▶ Moves the screen image up.



On Screen Display(OSD) Selection and Adjustment


V SIZE

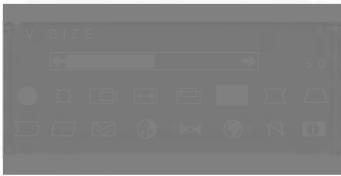

To adjust image height.

- ◀ Decreases the size of the screen image.
- ▶ Increases the size of the screen image.


PINCUSHION

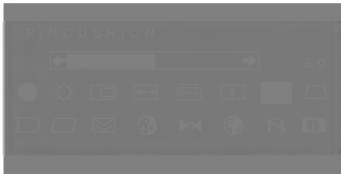

To correct the bowing in and out of the image.

- ◀ Curves the image's edges inwards.
- ▶ Curves the image's edges outwards.


TRAPEZOID

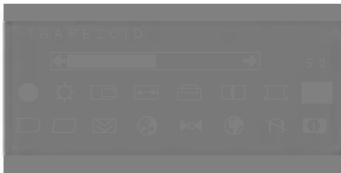

To correct geometric distortion.

- ◀ Makes the screen image narrower at the top.
- ▶ Makes the screen image wider at the top.


PIN BALANCE

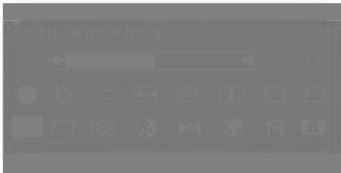

To correct the balance of both sides bowing.

- ◀ Curvature of the sides to the right.
- ▶ Curvature of the sides to the left.


PARALLELOGRAM

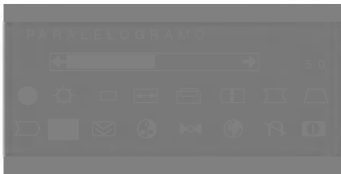

This control adjusts for a skewing of the screen image.


- ◀ Tilts the screen image leftward.
- ▶ Tilts the screen image rightward.

V MOIRE

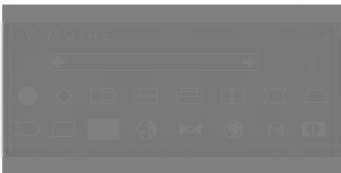


Reduce vertical moire when interference patterns of dark steady wavy lines appear on your screen. The moire adjustments may affect the focus of the screen.

COLOR

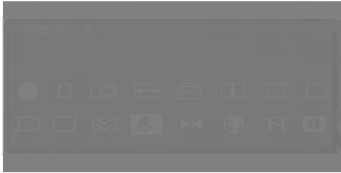

Select the desired color temperature (9300K, 6500K) or select user to set your own color levels(R/G/B).


- **9300** : Slightly bluish white.
- **6500** : Slightly reddish white.
-  : To set your own color levels. Allow for specific adjustments to Red, Green, Blue (R/G/B).





◀ Decreases the amount of color in the image.

▶ Increases the amount of color in the image.

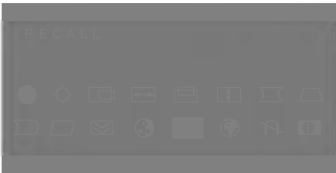◀◇ : To exit the COLOR OSD



RECALL



You can use this function when you want to go back to the screen display of the time you purchased the product after adjusting to modify it in the Preset Mode. When you are in the User mode, you can recall only , , ,  items. After using Recall, adjust the screen display again if necessary.

If you want more information on the Preset Mode, refer to A11 page.


LANGUAGE

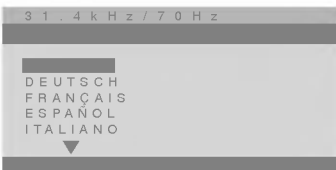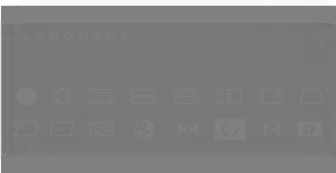

To choose the language in which the control names are displayed. OSD Menus are available in seven languages : **English, German, French, Spanish, Italian, Portuguese and Korean.**


On Screen Display(OSD) Selection and Adjustment

DEGAUSS

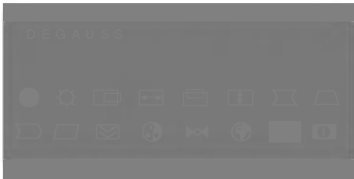

Used to demagnetize the picture to give a more accurate image and color.

INFORMATION

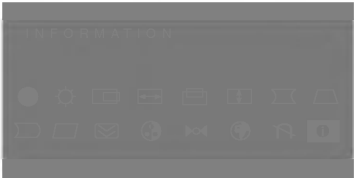

To inform users of preset and user mode data.

3 1 . 4 k H z / 7 0 H z

PRESET MODE

1	60.0kHz / 76Hz
2	31.4kHz / 61Hz
3	37.4kHz / 76Hz
4	43.2kHz / 86Hz
5	31.4kHz / 71Hz
6	46.8kHz / 76Hz



Video Memory Modes

The monitor has 16 memory locations for display modes, 7 of which are factory preset to popular video modes.

Display Modes (Resolution)

	Display Modes (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1	VESA 640 x 480	31.47	60
2	VESA 720 x 400	31.47	70
3	VESA 640 x 480	37.50	75
4	VESA 640 x 480	43.27	85
5	VESA 800 x 600	46.88	75
6	VESA 800 x 600	53.67	85
7	VESA 1024 x 768	60.02	75

User Modes

- Modes 8 - 16 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 8.

If you use up the 9 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 8.

Recalling Display Modes

- When your monitor detects a mode it has seen before, it automatically recalls the image settings you may have made the last time you used that mode.

You may, however, manually force a recall of each of the 7 preset modes by pressing the Recall button. All preset modes are automatically recalled as the monitor senses the incoming signal.

The ability to recall the preset modes is dependent on the signal coming from your PC's video card or system. If this signal does not match any of the factory modes, the monitor automatically sets itself to display the image.

Check the following before calling for service.

SELF DIAGNOSTICS message.

- The signal cable is not connected, or is loose. Check and secure the connection.

OUT OF FREQUENCY message appears.

- The frequency of the signal from the video card is outside the operating range of the monitor.

* Horizontal Frequency : 30-61kHz

* Vertical Frequency : 50-120Hz

Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

The power LED is illuminated amber.

- Display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

The image on the SCREEN is not centered, or too small, or not a rectangle shape.

- Image adjustment not been done yet in the current operating mode. Use the MENU, SELECT and ◀ ▶ buttons to set the image to your liking.

The monitor doesn't enter the power saving off mode (Amber).

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

An abnormal picture is displayed on the screen. For example, the upper part of the picture may be missing or dark.

- If using certain non-VESA Standard video card, an abnormal picture may be displayed. Try setting it to one of the factory preset modes, or selecting to a resolution and refresh rate within the specification limits of the monitor.

NOTE

- If the power indicator(LED) light is blinking amber, may result in abnormal condition of the monitor.
- Then press a power ON/OFF button on the front panel control and call your service technician for more information.



Picture Tube	15 inch (14.0 inches viewable)	
	90 degree deflection	
	0.28mm Dot pitch	
	Studioworks 563N: AGAS(Anti-Glare Anti-Static) coating Studioworks 563A: Glare	
Sync Input	Horizontal Freq.	30 - 61kHz (Automatic)
	Vertical Freq.	50 - 120Hz (Automatic)
	Input Form	Separate TTL, Positive/Negative
	Signal Input	15 pin D-Sub Connector
Video Input	Input Form	Separate, RGB Analog, 0.7Vp-p/75 ohm, Positive
	Resolution(max)	1024 x 768@75Hz
Power	Normal	≤ 74W
Consumption	Stand-by/Suspend	≤ 15W
	Power Off	≤ 5W
Dimensions (with tilt/swivel stand)	Width	35.6 cm / 14.02 inches
	Height	37.1 cm / 14.6 inches
	Depth	39.5 cm / 15.5 inches
AC 100-240V 50/60Hz 1.5A		
Net	11.7 kg (25.79 lbs)	
Operating Condition		
	Temperature	10 °C to 40 °C
	Humidity	10 % to 90 % non-Condensing
Storage Condition		
	Temperature	0 °C to 60 °C
	Humidity	5 % to 90 % non-Condensing

NOTE

- Information in this document is subject to change without notice and does not represent a commitment on the part of LG Electronics Inc.

