



MICRO HI-FI System

OWNER'S MANUAL

MODEL : LX-E330

(LX-E330A/D/X, LXS-E330)

LX-E530



(LX-E530A/D/X, LXS-E530)

Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change without
notice for improvement.



Precautions

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

Explanation Graphical Symbols:



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

TO REDUCE THE RISK OF FIRE OF ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

To avoid electrical shock, do not open the cabinet, Refer servicing to qualified personnel only.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Warning:

Do not install this equipment in a confined space such a book case or similar unit.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

WARNING: OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD STRÅLEN ÄR FARLIG.

Attention: Quand l'appareil est ouvert, ne pas s'exposer aux radiations invisibles du faisceau laser.

This label is located on the interior.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
CLASSE 1	PRODUIT LASER

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the exterior.



This product is manufactured to comply with the radio interference requirements of EEC DIRECTIVE 89/336/EEC, 93/68/EEC and 73/23/EEC.

Table of Contents

INTRODUCTION

Precautions	2
Table of Contents	3
Before Use	4
Safety Precautions	4
Notes on Discs	4
Notes on Remote Control	4
Notes on Tapes	4
Front Panel/Rear Panel	5
Remote Control	6
Display Window	6
Connections	7
Speaker System Connection	7
Antenna (Aerial) Connections	7

BEFORE OPERATION

Audio Adjustment	8-9
Setting the Voltage (OPTIONAL)	8
Setting the CLOCK	8
Volume Adjustment	8
Sound Quality Adjustment	8
Sleep Function	8
MUTE	8
SURROUND	8
XDSS (Extreme Dynamic Sound System)	8
Timer Function	9
Auxiliary Function	9
RDS Function - OPTIONAL	10
About RDS	10
Programme Search (PTY)	10




OPERATION

Presetting the radio stations	11
Listening to the radio	11
Tape Playback	12
Basic Playback	12
To Stop Play	12
Tape Counter Reset	12
To Play Rewind or Fast Forward	12
Recording	12
Basic Setting	12
Recording from Radio, CD or Auxiliary source	12
CD to Tape Synchronized Recording	12
CD Playback	13-14
To Load Disc	13
To open all disc tray	13
To Play all discs on the disc trays	13
To play a desired disc tray	13
To Pause Play	13
To Stop Play	13
To Skip a Track	13
To Search a Track	13
To Replace discs during Playback	13
To Repeat Play	14
To Program Play	14

REFERENCE

Troubleshooting	15
Specifications	

About the symbols for instructions

-  Indicates hazards likely to cause harm to the unit itself or other material damage.
-  Indicates special operating features of this unit.
-  Indicates tips and hints for making the task easier.

Before Use

Safety Precautions

Handling the unit

When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

To keep the surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

Cleaning the unit

 
To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents, such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

Notes on Discs

Handling discs

Do not touch the playback side of the disc.
Hold the disc by the edges so that fingerprints will not get on the surface.
Do not stick paper or tape on the disc.

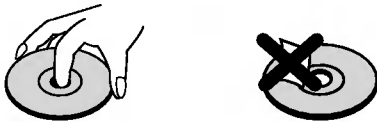

Storing discs

After playing, store the disc in its case.
Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.



Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for analog records.

 
Notes on Remote Control

Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor.
- **Angle:** About 30° in each direction of the front of the remote sensor.

Remote control battery installation

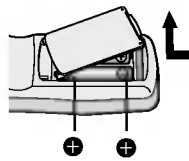

Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with $+$ and $-$ aligned correctly.

 
⚠ Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).


Notes on Tapes

Preventing record



Removing the tab(s) of the cassette (with a small screwdriver) will prevent accidental erasure.

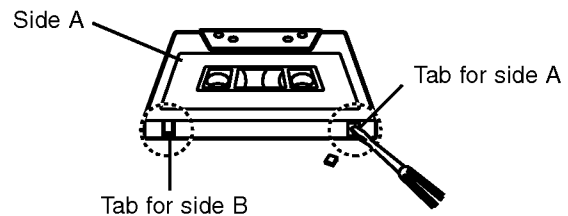

 To record again, cover the hole of the tab with adhesive tape.

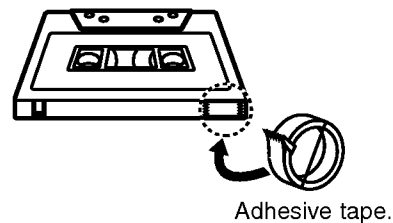


Front Panel/Rear Panel

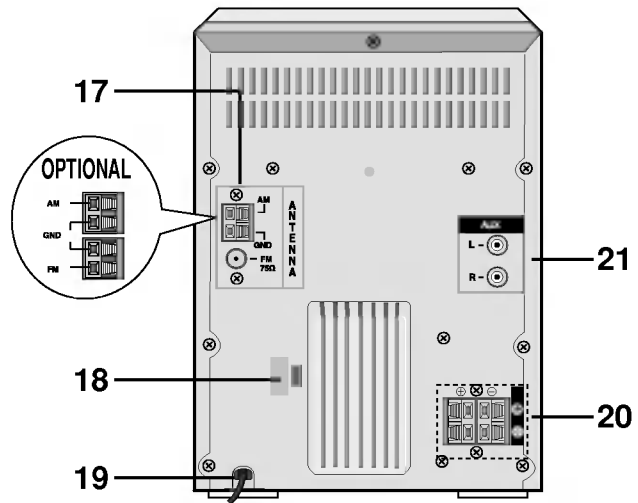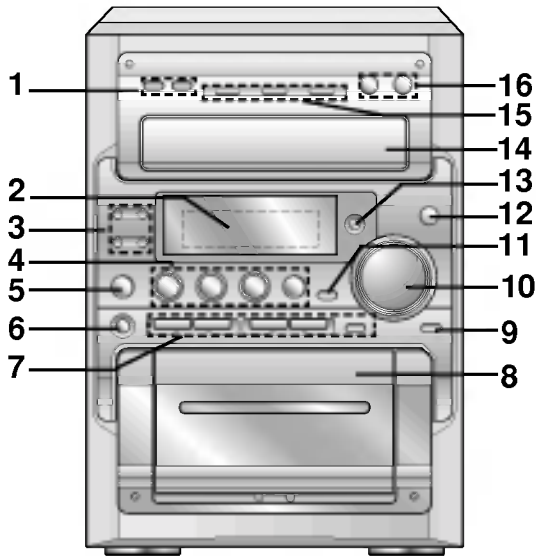  


- | | |
|--|--|
| <ol style="list-style-type: none"> 1. • CLOCK button
• TIMER button 2. DISPLAY WINDOW 3. • PROGRAM/MEMORY button
• EQUALIZER (EQ) button
• CD SYNC. button
• MODE / RIF button
• PLAY MODE button : OPTIONAL
• COUNTER RESET (COUNTER) : OPTIONAL 4. FUNCTION SELECT buttons
(TUNER/BAND, CD, TAPE, AUX) 5. POWER (STANDBY/ON) button 6. HEAD PHONE SOCKET (PHONES) - $\varnothing 3.5\text{mm}$ 7. • PRESET (∇/\blacktriangle) buttons
• REVERSE PLAY (\blacktriangleleft) button : OPTIONAL
• PLAY (\blacktriangleright) button
• TUNING (∇/\blacktriangle) button
• CD SKIP/SEARCH ($\blacktriangleleft\blacktriangleleft / \blacktriangleright\blacktriangleright$) buttons
• TAPE REWIND/FAST FORWARD ($\blacktriangleleft\blacktriangleleft$
/ $\blacktriangleright\blacktriangleright$) buttons
• STOP (\blacksquare)/CLEAR button 8. \blacktriangle PUSH EJECT position - DECK | <ol style="list-style-type: none"> 9. RECORD/RECORD PAUSE (\bullet / \parallel) button 10. VOLUME CONTROL KNOB 11. • RDS button : OPTIONAL
• SET button
• CD PAUSE (CD \parallel) button
• COUNTER RESET (COUNTER) button :
OPTIONAL 12. XDSS button 13. REMOTE SENSOR 14. DISC TRAY 15. DISC TRAY (DISC1, DISC2, DISC3) buttons 16. • CD OPEN/CLOSE (\blacktriangle OPEN/CLOSE) button
• ALL DISC TRAY OPEN (\blacktriangle EJECT ALL) button 17. ANTENNA TERMINAL 18. VOLTAGE SELECTOR SWITCH : OPTIONAL 19. POWER CORD 20. SPEAKER TERMINAL 21. AUXILIARY INPUT SOCKET |
|--|--|

 Remote Control

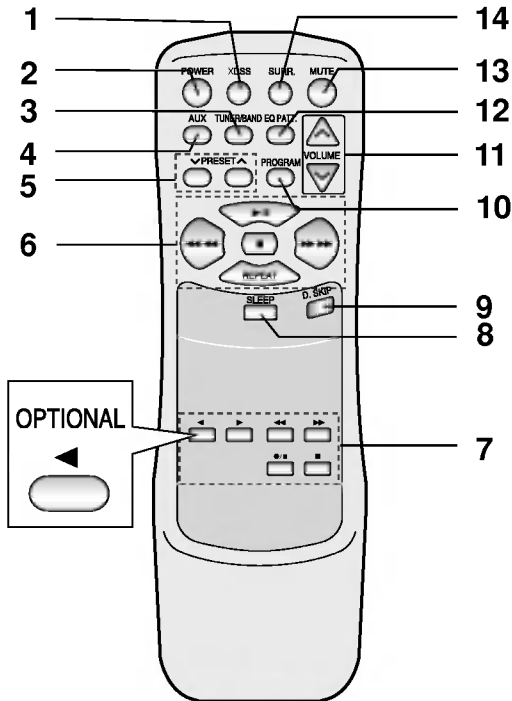

1. XDSS button
2. POWER button
3. TUNER/BAND button
4. AUX button
5. PRESET (V/Λ) buttons
6. CD FUNCTION buttons
 - PLAY/ PAUSE (▶/||) button
 - CD STOP (■) button
 - CD SKIP/SEARCH (◀◀◀◀ / ▶▶▶▶) button
 - REPEAT button
7. TAPE FUNCTION buttons
 - RECORD/ RECORD PAUSE (●/||) button
 - REVERSE PLAY (◀) button : OPTIONAL
 - FORWARD PLAY (▶) button
 - TAPE STOP button (■)
 - FAST FORWARD (▶▶) button
 - REWIND (◀◀) button
8. SLEEP button
9. DISC SKIP (D.SKIP) button
10. PROGRAM button
11. VOLUME CONTROL (V/Λ) button
12. EQUALIZER PATTERN (EQ PATT.) button
13. MUTE button
14. SURROUND (SURR.) button

 Display Window

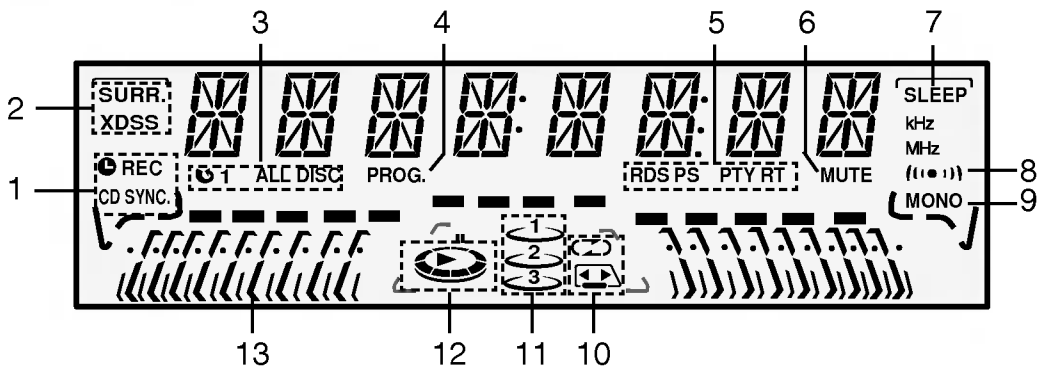


1. • TIMER/RECORD indicator
- CD SYNCHRO RECORDING indicator
2. • SURROUND indicator
- XDSS (Extreme Dynamic Sound System) indicator
3. CD REPEAT indicators
4. PROGRAM indicator
5. RDS indicators - OPTIONAL
6. MUTE indicator
7. SLEEP indicator
8. FM STEREO RECEIVING indicator
9. MONO indicator
10. • PLAY MODE indicator : OPTIONAL
- PLAY DIRECTION indicator
11. DISC TRAY indicators
12. PLAY/PAUSE indicator
13. • VOLUME indicator
- LEVEL METER indicator

Connections

Speaker System Connection

 Connect the speakers using the supplied speaker cords by matching the colors of the terminals and those of the cords. To obtain the best possible surround sound, adjust the speaker parameters (distance, level, etc.).

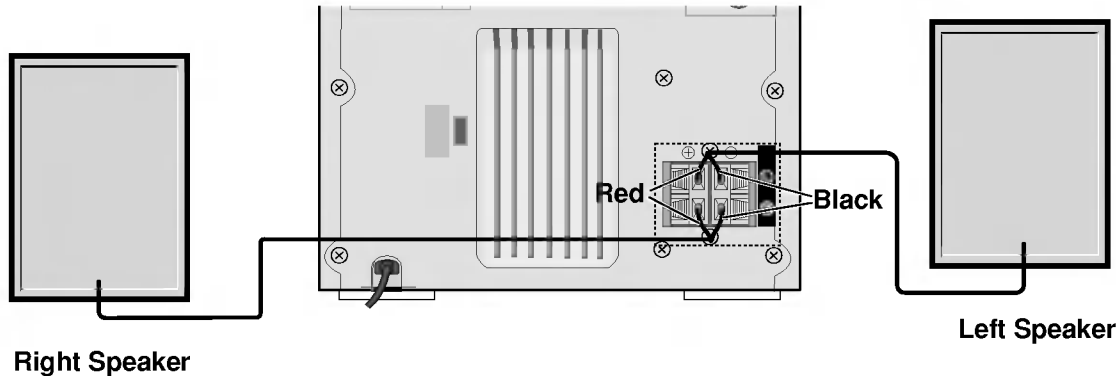


Notes

- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and – to –. If the cords are reversed, the sound will be distorted and will lack base.
- If you use front speakers with low maximum input rating, adjust the volume carefully to avoid excessive output on the speakers.
- Do not disassemble the front cover of supplied speaker.

Antenna (Aerial) Connections

 Connect the supplied FM/AM antennas for listening to the radio.

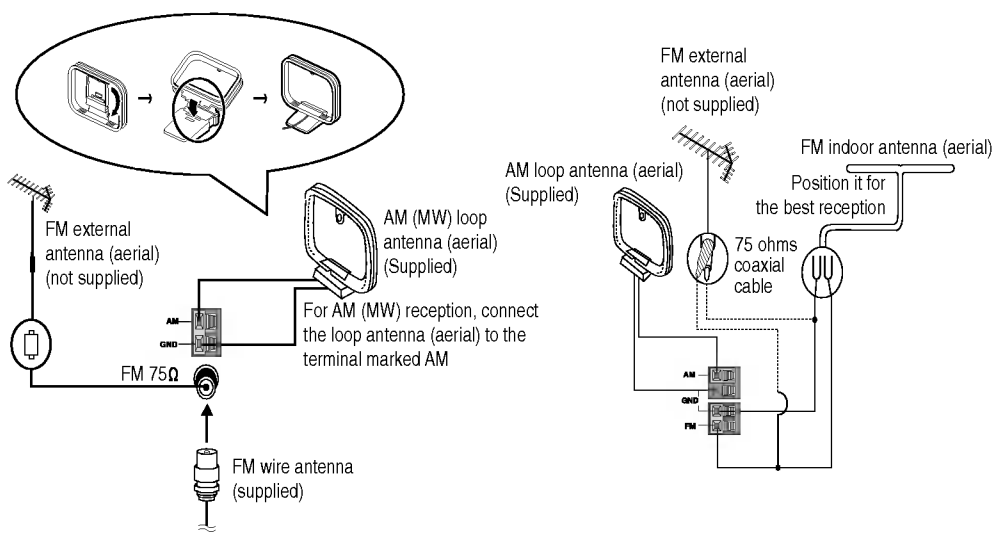

Notes



- To prevent noise pickup, keep the AM loop antenna away from the unit and other components.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

Audio Adjustment

Setting the voltage (OPTIONAL)

If your set is equipped with a voltage selector at the back side, be sure to set it to your local power supplied before connecting the AC power cord.

Setting the CLOCK

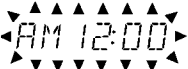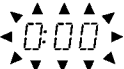- 1 Press CLOCK.**
(If the clock requires setting, press and hold **CLOCK** for more than 2 seconds.)
- The hours begin to blink.
- 2 Select a 24 hour cycle or 12 hour cycle by pressing PRESET (▼/▲).**
 (12HR) or  (24HR)
- 3 Press SET to confirm the selected hour cycle.**
- 4 Use PRESET (▼/▲) to set the correct hours.**
- 5 Press SET.**
- 6 Use PRESET (▼/▲) to set the correct minutes.**
- 7 Press SET and the correct time is shown on the display.**
- 8 Press CLOCK at any time to display the time for about 3 seconds.**

Volume Adjustment

- Turn **VOLUME CONTROL KNOB** clockwise to increase the sound level, or counterclockwise to decrease it.
- Press **VOLUME (∧)** to increase the sound level, or press the **VOLUME (∨)** to decrease it on the remote control.

Sound Quality Adjustment

- **To activate stereo sound**
You can choose between 4 fixed sound impressions. Select a desired sound mode by using **EQ PATT.** button on the remote control or **EQ** button on the front panel.
FLAT : linear frequency response
ROCK : more bass, more treble
POP : less bass, less treble
CLASSIC : for orchestral music
- **Headphone Socket**
Connect a stereo headphone plug (∅ 3.5mm) into the headphone jack.
The speakers are automatically disconnected when you plug in the headphones (not supplied).

Sleep Function

When the sleep timer is used, the power is automatically turned off after the specified time has elapsed.

- 1 To specify the time delay before the power is turned off, press SLEEP.**
In the display window you can see *SLEEP 90* for about 5 seconds. This means that the system turns off automatically after 90 minutes. Each time the button is pressed the time interval before it turns off is reduced by 10 minutes. i.e. 80...70... etc.
Select the desired time to turn off.
- 2 To check the remaining time until the power is turned off.**
While the sleep function is active press **SLEEP** briefly. The time remaining until it turns off is displayed for about 5 seconds.

Note

If you press **SLEEP** while the sleep time is displayed, the SLEEP time is reset.

To cancel the sleep timer mode

If you wish to stop the function, press the **SLEEP** button repeatedly until SLEEP 10 appears, and then press **SLEEP** once again while SLEEP 10 is displayed.

MUTE

Press **MUTE** to mute your unit.
You can mute your unit in order, for example, to answer the telephone, "MUTE" indicator blinks in the display window.

SURROUND

To activate surround mode

Press **SURROUND** to reinforce surround effect.

SURROUND OFF ↔ SURROUND ON

XDSS (Extreme Dynamic Sound System)

Press **XDSS** to reinforce treble and bass.

The "XDSS ON" or "XDSS OFF" indicator lights up.

To cancel it press **XDSS** again.

Audio Adjustment

Timer Function

The unit can set the clock function in power on/off state. With the TIMER function you can have the radio reception and recording, CD play, tape play or auxiliary source play and recording turned on and off at the time desired.

- 1** Press **CLOCK** to check the current time.

For your reference

If you don't set clock, timer function doesn't work.

- 2** Press **TIMER** to enter the timer setting mode. TUNER-CD-TAPE flashes in the display window in turn.

For your reference

If you want to correct the previous memorized TIMER setting, press and hold the TIMER button more than 2 seconds.

- The previous memorized timer on time and TIMER indicators appear in the display.

- 3** Press **SET** when the desired function is blinking.

- 4**
 - a.** When you select the **TUNER** function, 'PLAY' and 'REC' indicator blink in the display window alternately for about 3 seconds.

'PLAY' indicator : TUNER play only
'REC' indicator : TUNER play and recording

- b.** Select the previous memorized preset number with **PRESET (▼/▲)** and press **SET**.

- 'ON TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

- 2.** When you select the **CD** or **TAPE** function,
- 'ON TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

- 5** Set the hour to switch on by pressing **PRESET (▼/▲)**.

- 6** Press **SET** to confirm the hour to switch on.

- 7** Set the minute to switch on by pressing **PRESET (▼/▲)**.

- 8** Press **SET** to confirm the minute to switch on. 'OFF TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

- 9** Set the hour to switch off by pressing **PRESET (▼/▲)**.

- 10** Press **SET** to confirm the hour to switch off.

- 11** Set the minute to switch off by pressing **PRESET (▼/▲)**.

- 12** Press **SET**.

- 13** Adjust the volume level by pressing **PRESET (▼/▲)**.

- 14** Press **SET**.

"⊕" appears in the display window and the timer setting has been completed.

- 15** Switch the system off.
The selected function is automatically switched on and off at the time set.

To cancel or check the timer

Each time the TIMER button is pressed you can select the timer set or cancel. You can also check the timer setting status.

To activate or check the timer, press the **TIMER**

button so that "⊕" appears in the display window.

To cancel the TIMER, press the **TIMER** button so that

"⊕" disappears in the display window.

Auxiliary Function

- 1** Connect an auxiliary device i.e. TV or VCR to the rear mounted AUX phone sockets.
- 2** Press **AUX**.

Note

You can also record from the auxiliary input source, see Recording Section.

RDS Function - OPTIONAL

About RDS

This unit is equipped with RDS (Radio Data System), which brings a wide range of information from FM radio. RDS is a system for transmitting station call signs or network information, a description of station programme type text message about the station or specifics of musical selection and the correct time.

RDS Tuning

When a FM station containing RDS data is tuned in, the unit will automatically display the station's call sign and the RDS indicator will light in the Display Window as well as indicators for the programme type recognition (PTY), Radio Text (RT), Clock Time (CT) and RDS services programme (PS) if transmitted by the station.

RDS Display Options

The RDS system is capable of transmitting a wide variety of information in addition to the initial call sign that appears when a station is first tuned. In normal RDS operation the display will indicate the station name, broadcast network or call letters. Pressing **RDS** on the front panel enables you to cycle through the various data types in the sequence:

(PS → FREQUENCY → PTY → RT → CT)

- **PTY (Programme type recognition)**- The programme type is shown on the display window.
- **RT (Radio text recognition)**- The radio station's name is displayed on the display window.
- **CT (Time controlled by the channel)**- Enable the unit to receive the actual time and show it on the display window.
- **PS (Programme Service name)**- The programme title is displayed on the display window.

Notes

- Some RDS stations may not choose to include some of these additional features. If the data required for the selected mode is not being transmitted, the Display Window will show a **PTY NONE, RT NONE, CT NONE, PS NONE** message.

Programme Search (PTY)

A major benefit of RDS is its ability to encode broadcasts with Programme Type (PTY) codes that indicate the type of material being broadcast. The following list shows the abbreviations used to indicate each PTY along with an explanation of the PTY.

NEWS	News
AFFAIRS	Current Affairs
INFO	Information
SPORT	Sports
EDUCATE	Educational
DRAMA	Drama
CULTURE	Culture
SCIENCE	Science
VARIED	Varied Speech Programme
POP M	Popular Music
ROCK M	Rock Music
EASY M	Easy Listening Music
LIGHT M	Classical Music
CLASSICS	Serious Classical Music
OTHER M	Other Music
WEATHER	Weather Information
FINANCE	Financial Programmes
CHILDREN	Children's Programmes
SOCIAL	Social Affairs Programmes
RELIGION	Religious Broadcasts
PHONE IN	Phone-In Programmes
TRAVEL	Travel and Touring
LEISURE	Leisure and Hobby
JAZZ	Jazz Music
COUNTRY	Country Music
NATION M	National Music
OLDIES	Oldies Music
FOLK M	Folk Music
DOCUMENT	Documentary Programmes
TEST	Station Alarm Test Message
ALARM 1	Emergency Broadcast Information

You may search for a specific Programme Type (PTY) by following these steps:

- 1 Press TUNER/BAND to select FM mode.**
- 2 Select a desired station by pressing TUNING (▼/▲).**
When the RDS transmission is received, the display shows the program service name (PS) after RDS indicator appears.
- 3 Press the RDS to select PTY mode.**
- 4 To search for a different PTY, press the PRESET (▼/▲) while the last PTY in use is still displayed to scroll through the list of available PTY types.**
- 5 When the PTY is selected, press the ◀◀◀ / ▶▶▶ within 5 seconds.**
The unit will go into an automatic search mode and attempt to find the next station with acceptable signal strength that matches the desired PTY type.

Presetting the radio stations

You can preset 30 stations for FM and AM. Before tuning, make sure that you have turned down the volume to the minimum.

- 1** Press **TUNER/BAND** to select the frequency (AM or FM) you want.
Every time you press this button, AM and FM changes alternately.
- 2** Press **TUNING (▼/▲)** on the front panel until the frequency indication starts to change.

Notes

• Automatic Tuning

Press **TUNING (▼/▲)** for more than 0.5 seconds.
- Scanning stops when the unit tunes in a station.

• Manual Tuning

Press **TUNING (▼/▲)** briefly and repeatedly.

- 3** Press **PROGRAM/MEMORY** on the front panel or **PROGRAM** on the remote control.
A preset number will flash in the display window.
- 4** Press **PRESET (▼/▲)** (or **PRESET (▼/▲)** on the remote control) to select the preset number you want.

- 5** Press **PROGRAM/MEMORY** on the front panel or **PROGRAM** on the remote control.
- The station is stored.

- 6** Repeat steps 2 to 5 to store other stations.

To clear all the memorized stations

Press and hold **PROGRAM/MEMORY** on the front panel for about two seconds, "CLEAR" appears on the display window and then press **CLEAR**, the stations are cleared.

For your reference

If all stations have already been entered, FULL message will appear in the display window for a moment and then a preset number will blink. To change the preset number, follow the steps 4-5.

To recall presets

Press and hold **PRESET (▼/▲)** (or **PRESET (▼/▲)** on the remote control) until the desired preset number appears or press it repeatedly.

Listening to the radio

- 1** Press **TUNER/BAND** to select the frequency (AM or FM) you want.
Every time you press this button, AM and FM changes alternately.
The last received station is tuned in.
- 2** Press **PRESET (▼/▲)** (or **PRESET (▼/▲)** on the remote control) repeatedly to select the preset station you want.
- Each time you press the button, the unit tunes in one preset station at a time.
- 3** Adjust the volume by rotating **VOLUME CONTROL KNOB** (or pressing **VOLUME (▼/▲)** on the remote control) repeatedly.

To listen to non-preset radio stations

- Use manual or automatic tuning in step 2.
- For automatic tuning, press and hold **TUNING (▼/▲)** on the front panel.

To turn off the radio

Press **POWER** to turn the unit off or select another function mode (CD, TAPE or AUX).

For your reference

- **If an FM program is noisy**
Press **MODE/RIF** so that "MONO" appears on the display window. There will be no stereo effect, but the reception will be improved. Press **MODE/RIF** again to restore the stereo effect.
- **To improve reception**
Repose the supplied antennas.

Notes

- Use **MODE/RIF** (Radio Interference Filter) function to switch to mono reception if stereo reception is distorted by noise.
- When recording the MW(AM) or LW broadcast, beat noises may occur. If it does, press **MODE/RIF** once.

Tape Playback

You can use only normal tape.

Basic Playback

- 1 Press **TAPE** to select tape function.
(“NO TAPE” appears in the display window.)
- 2 Open cassette deck by pushing
▲ **PUSH EJECT** position.
- 3 Insert a cassette with the tape side to the
bottom and then close deck.
- 4 Press **PLAY** (▶ or ◀: OPTIONAL).

To Stop Play

Press **STOP** (■) during playback.

Tape Counter Reset

Press **COUNTER RESET**(COUNTER) during
playback.

Playing time appears “TP - 0000” in display window.

To Play Rewind or Fast Forward

After pressing |◀◀ ◀◀ / ▶▶ ▶▶| on the front panel
or ◀◀ / ▶▶ on the remote control during playback,
or stop, press **PLAY**(▶) at the point you want.

AUTO STOP DECK

After auto stop deck plays only front side, the unit stops
automatically.

AUTO REVERSE DECK:OPTIONAL

You can select direction of the cassette you want by
pressing **PLAY MODE**.

Pressing	Display	Function
Once	⇒	After the cassette plays front or reverse (backward play) side, stops automatically.
Twice	⇒⇐	After the cassette plays front and reverse side, stops automatically.
Three times	(⇒⇐)	After the cassette plays six times repeatedly front and reverse side, stops automatically.

Recording

Wind the tape to the point recording starts. (Use only normal tapes.)

Basic Setting

- 1 Select the function (CD, TUNER/BAND or AUX)
you want to record.
- 2 Open the cassette deck and insert a blank
cassette into the cassette compartment.
To set the recording direction :OPTIONAL
Press **PLAY MODE** repeatedly to set the
recording direction.

Recording from Radio, CD or Auxiliary source

- 1 Press ●/|| on the front panel or the remote
control and then select the CD, TUNER or AUX
function.
“REC” flashes and holds the cassette in pause
mode.
- 2 Press ●/|| or **PLAY**(▶) on the front panel or
the remote control.
The recording begins.

To pause recording

Press ●/|| during recording.
- “REC” flashes in display window.

To stop recording

Press **TAPE STOP**(■).

CD to Tape Synchronized Recording

The CD synchro recording function dubs a complete CD
and programmed titles automatically into a cassette.

- 1 Press **CD SYNC**. in stop mode.
“REC” flashes and “CD SYNC” displays in the dis-
play window.
- 2 The synchronized recording is started
automatically after about 8 seconds.

Notes

- If you wish to record from the desired track, select the
desired track with **CD SKIP/SEARCH** (◀◀◀◀/
▶▶▶▶) before commencing CD synchro recording.
- The function change is not possible during recording.

CD Playback

To Load Disc

- 1** Press CD to select CD mode.
- 2** Press one of the DISC TRAY (DISC1, DISC2, DISC3) button to open the desired disc tray. The selected disc tray number blinks in the display window.
- 3** Press CD OPEN/CLOSE (▲ OPEN/CLOSE) button while the selected disc tray number blinks in the display window. The selected disc tray slides out.
- 4** Load a disc with the label side facing up.
- 5** Press CD OPEN/CLOSE (▲ OPEN/CLOSE) to close the disc tray.

To open all disc tray

Press ALL DISC TRAY OPEN (▲ EJECT ALL) button to open all disc tray during playback or stop. "OPEN ALL" blinks in the display window. (You can check a disc in the disc tray.)

To Play all discs on the disc trays

Press PLAY (▶) on the front panel or CD PLAY/PAUSE (▶/||) on the remote control.

- All the available discs will play once, then stop.
- During playback, the selected disc tray, track number and elapsed playing time of the current track will appear in the display window.

To play a desired disc tray

Press a desired DISC TRAY (DISC1, DISC2, or DISC3) button during playback or stop, then press ▶ (front panel) or ▶/|| (remote control) while the disc tray number blinks.

Notes

- To ensure good system performance, wait until the disc trays completely read the disc(s) before proceeding.
- The CD changer is only able to read the status of the current selected disc tray.

To Pause Play

Press CD PAUSE (CD||) on the front panel or CD PLAY/PAUSE (▶/||) on the remote control during playback.

Press this button again it to resume play.

To Stop Play

Press STOP(■)/CLEAR on the front panel or CD STOP(■) on the remote control during playback.

To Skip a Track

- Press ▶▶▶▶ button to go to the next track.
- When ◀◀◀◀ button is pressed once midway through a track, the player returns to the start of that track. When it is pressed again, a track is skipped each time the button is pressed.

To Search a Track

After pressing and holding ◀◀◀◀ / ▶▶▶▶ button on the remote control during playback, then release at the point you want.

To Replace discs during Playback

You are able to replace or load in disc into the other two disc trays without interrupting current playback. While playback, press the CD OPEN/CLOSE (▲ OPEN /CLOSE) button of the inactive disc tray (refer to "To load Disc").

Notes


- If you press CD OPEN/CLOSE (▲ OPEN/CLOSE) button of the active disc tray, the disc will stop playing and the disc tray will slide out.
- Once the disc tray is opened, it will be deselected.
- Do not place more than one compact disc on one disc tray at the same time.
- Do not push the CD door to close CD door, as you may damage the unit.

CD Playback

To Repeat Play


To play one track repeatedly

Press **REPEAT** once during playback.

- “ 1” appears in the display window.


To play one disc repeatedly

Press **REPEAT** again during playback.

- “ 1 DISC” appears in the display window.

To play all tracks on all discs repeatedly

 

Press **REPEAT** once more during playback.

- “ ALL DISC” appears in the display window.

To cancel repeat play







- Press **REPEAT** several times until repeat indicator disappear.

Program repeat play

- Press **REPEAT** once during program play.
 - “ 1” appears in the display window.
(One track repeat)
- Press **REPEAT** again during program play.
 - “ 1 DISC” appears in the display window.(All program repeat)

To Program Play

You can arrange the order of the tracks on the discs and create your own program. The program can contain up to 20 tracks.


- 1** Press **PROGRAM/MEMORY** on the front panel or **PROGRAM** on the remote control on the stop mode.
- 2** Press **DISC TRAY** (**DISC1**, **DISC2** or **DISC3**) to select the disc.
- 3** Press **CD SKIP/ SEARCH**   /   on the front panel or on the remote control to select the track.
- 4** Press **PROGRAM/MEMORY** on the front panel or **PROGRAM** on the remote control.
- 5** Repeat steps 1~4.
- 6** Press **PLAY**() on the front panel or **CD PLAY/ PAUSE** () on the remote control.
“PROGRAM PLAY” will be displayed.

To check program contents

Press **PROGRAM/MEMORY** (or **PROGRAM** on the remote control) on the stop mode.

- The disc, track and program number will be displayed.

To clear program contents

Press **PROGRAM/MEMORY** (or **PROGRAM** on the remote control) on the stop mode. And then press **CLEAR** on the front panel or **CD STOP**() on the remote control.

To add program contents

1. Press **PROGRAM/MEMORY** (or **PROGRAM** on the remote control) repeatedly on the program stop mode until “Disc Number” blinks.
2. Repeat 2~5.

To modify program contents

1. Press the **PROGRAM/MEMORY** (or **PROGRAM** on the remote control) to display program number you want to modify.
2. Repeat 2~4.

Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	<ul style="list-style-type: none"> The power cord is disconnected. 	<ul style="list-style-type: none"> Plug the power cord into the wall outlet securely.
No sound.	<ul style="list-style-type: none"> The audio cables are not connected securely. 	<ul style="list-style-type: none"> Connect the audio cable into the jacks securely.
	<ul style="list-style-type: none"> The power of the external source equipment is switched off. 	<ul style="list-style-type: none"> Turn on the equipment connected with the audio cable.
	<ul style="list-style-type: none"> The speaker cable is set to the wrong position. 	<ul style="list-style-type: none"> Set the speaker cable to the correct position, then turn on the unit again by pressing POWER.
The unit does not start playback.	<ul style="list-style-type: none"> No disc or tape is inserted. 	<ul style="list-style-type: none"> Insert a disc or tape.
	<ul style="list-style-type: none"> An unplayable disc or tape is inserted. 	<ul style="list-style-type: none"> Insert a playable disc or tape.
	<ul style="list-style-type: none"> The disc is placed upside down. 	<ul style="list-style-type: none"> Place the disc with the playback side down.
	<ul style="list-style-type: none"> The disc is not placed within the guide. 	<ul style="list-style-type: none"> Place the disc on the disc tray correctly inside the guide.
	<ul style="list-style-type: none"> The disc is dirty. 	<ul style="list-style-type: none"> Clean the disc.
The remote control does not work properly.	<ul style="list-style-type: none"> The remote control is not pointed at the remote sensor of the unit. 	<ul style="list-style-type: none"> Point the remote control at the remote sensor of the unit.
	<ul style="list-style-type: none"> The remote control is too far from the unit. 	<ul style="list-style-type: none"> Operate the remote control within about 23 ft (7 m).
	<ul style="list-style-type: none"> There is an obstacle in the path of the remote control and the unit. 	<ul style="list-style-type: none"> Remove the obstacle.
	<ul style="list-style-type: none"> The batteries in the remote control are exhausted. 	<ul style="list-style-type: none"> Replace the batteries with new ones.

Specifications

SECTION		MODEL	LX-E330A/D/X	LX-E530A/D/X
[General]	Power supply	Refer to the back panel of the unit.		
	Power consumption	65 W	95 W	
	Mass	6.5 kg	7.5 kg	
	External dimensions (W x H x D)	200 x 270 x 333.5 mm		
[CD]	Frequency response	40 - 18000 Hz		
	Signal-to-noise ratio	70 dB		
	Dynamic range	70 dB		
[Tuner]	FM	Tuning Range	87.5 - 108.0 MHz or 65 - 74 MHz, 87.5 - 108.0 MHz	
		Intermediate Frequency	10.7 MHz	
		Signal to Noise Ratio	60/55 dB	
		Frequency Response	60-10000 Hz	
	AM (MW)	Tuning Range	522 - 1611 kHz or 530 - 1610 kHz	
		Intermediate Frequency	450 kHz	
		Signal to Noise Ratio	35 dB	
		Frequency Response	100 - 1800 Hz	
[Amp]	Output Power	27 W + 27 W	45 W + 45 W	
	T.H.D	0.15 %		
	Frequency Response	40 - 25000 Hz		
	Signal-to-noise ratio	80 dB		
[TAPE]	Tape Speed	4.75 cm/sec		
	Wow Flutter	0.25 % (MTT -111, JIS-WTD)		
	F.F/REW Time	120 sec (C-60)		
	Frequency Response	250 - 8000Hz		
	Signal to Noise Ratio	43 dB		
	Channel Separation	50 dB(P/B)/45dB(R/P)		
	Erase Ratio	55 dB (MTT-5511)		
[Speakers]		LXS-E330	LXS-E530	
	Type	2 Way 2 Speaker		2 Way 2 Speaker
	Impedance	6 Ω		6 Ω
	Frequency Response	60 - 18000 Hz		60 - 18000 Hz
	Sound Pressure Level	87 dB/W (1m)		87 dB/W (1m)
	Rated Input Power	30 W		50 W
	Max. Input Power	60 W		100 W
	Net Dimensions (W x H x D)	200 X 326 X 185 mm		200 X 326 X 228 mm
Net Weight	2.31 kg		2.92 kg	

* Designs and specifications are subject to change without notice.