



# REFRIGERATOR- FREEZER

OWNER'S MANUAL

**GN-262/GR-262/GN-272**

 
**GN-292/GR-292/GN-302**

PLEASE  
READ THIS OWNER'S MANUAL THOROUGHLY  
BEFORE OPERATING AND KEEP IT HANDY  
FOR REFERENCE AT ALL TIMES.

---

# CONTENTS

<b>INSTALLATION</b> .....	<b>3</b>
<b>FEATURECHART</b> .....	<b>4</b>
<b>OPERATION</b> .....	<b>5-7</b>
Starting	
TemperatureControl	
IceMaking	
ChilledCompar tment	
Defrosting	
Deodorizer(Optional)	
<b>SUGGESTIONSONFOODSTORAGE</b> .....	<b>8</b>
<b>CLEANING</b> .....	<b>9</b>
<b>GENERALINFORMATION</b> .....	<b>9</b>
<b>LAMPREPLACEMENT</b> .....	<b>10</b>
<b>IMPORTANTWARNINGS</b> .....	<b>10</b>
<b>BEFORECALLINGFORSERVICE</b> .....	<b>11</b>

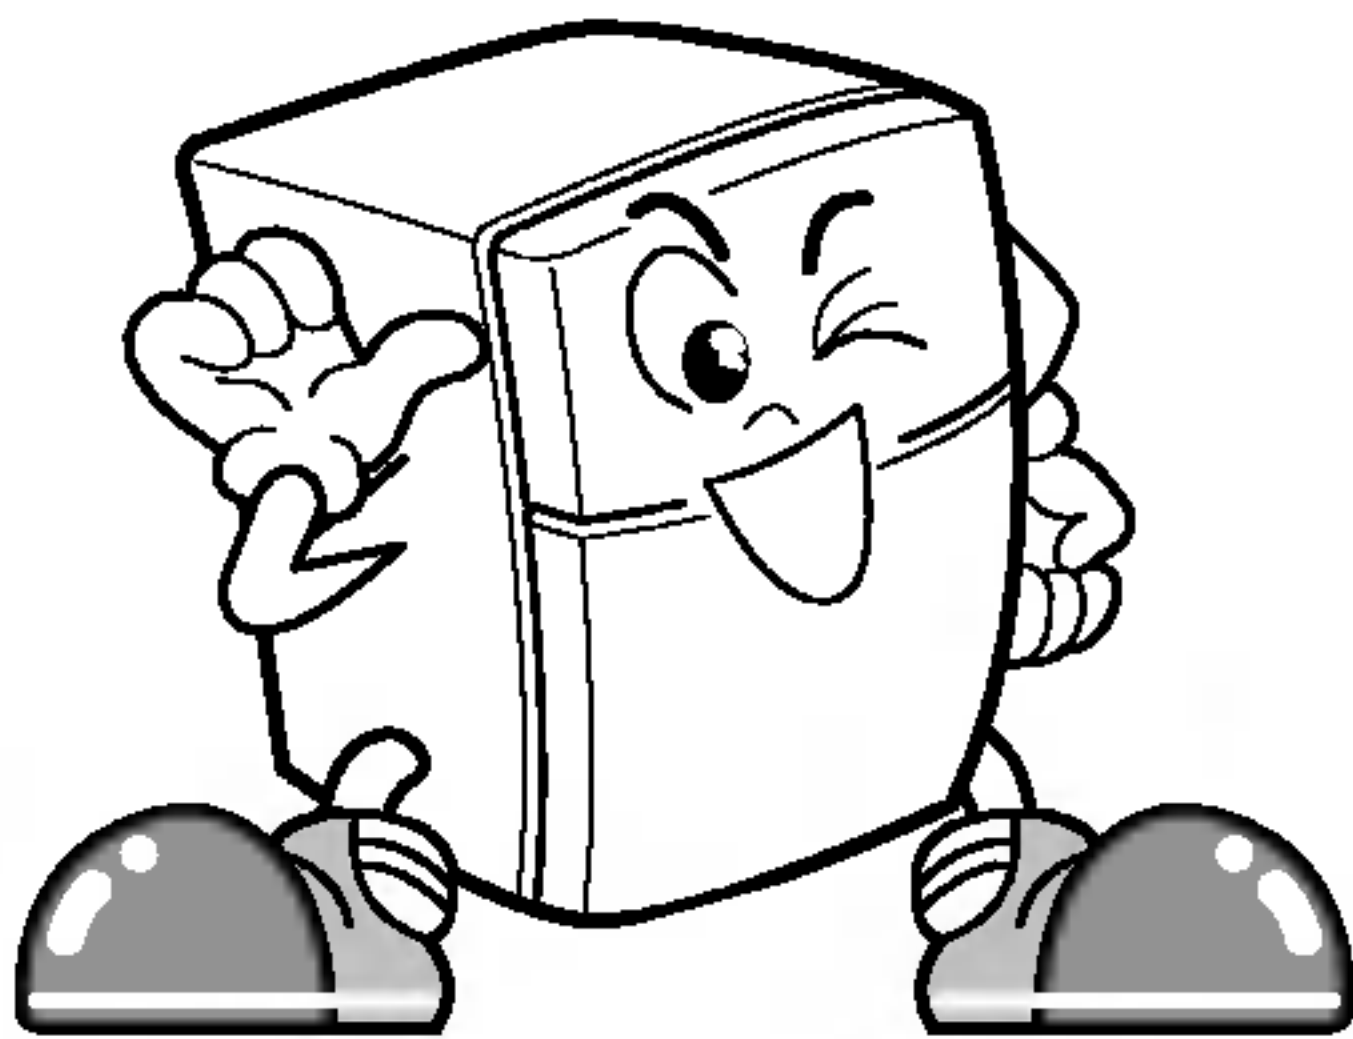

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE AND UTILIZES THE LATEST TECHNOLOGY.



WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH ITS PERFORMANCE AND RELIABILITY.

BEFORE USING YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION, AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

## INSTALLATION
  
### SELECT A GOOD LOCATION

1. Place your refrigerator where it is easy to use.
2. Avoid placing the refrigerator near heat sources, direct sunlight or moisture.
3. Air must circulate properly around your refrigerator to ensure efficient operation. If your refrigerator is placed in a recessed area in the wall, allow at least 10 inches (25 cm) or greater clearance above the refrigerator and 2 inches (5 cm) or more from the wall. The refrigerator should be elevated 1 inch (2.5 cm) from the floor, especially if the floor is carpeted.

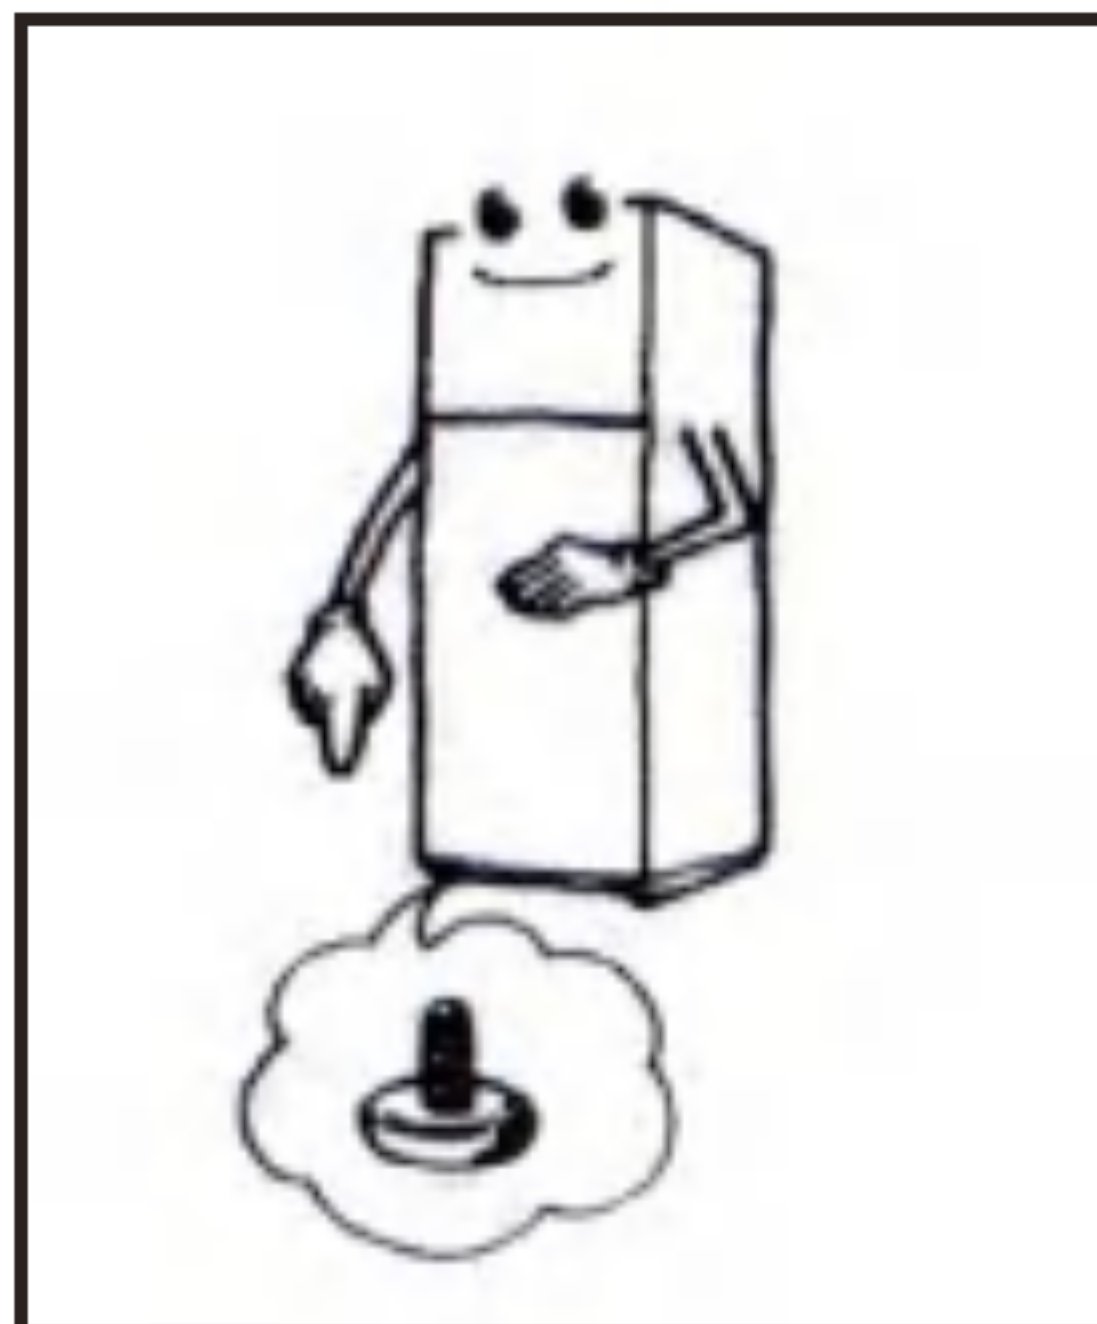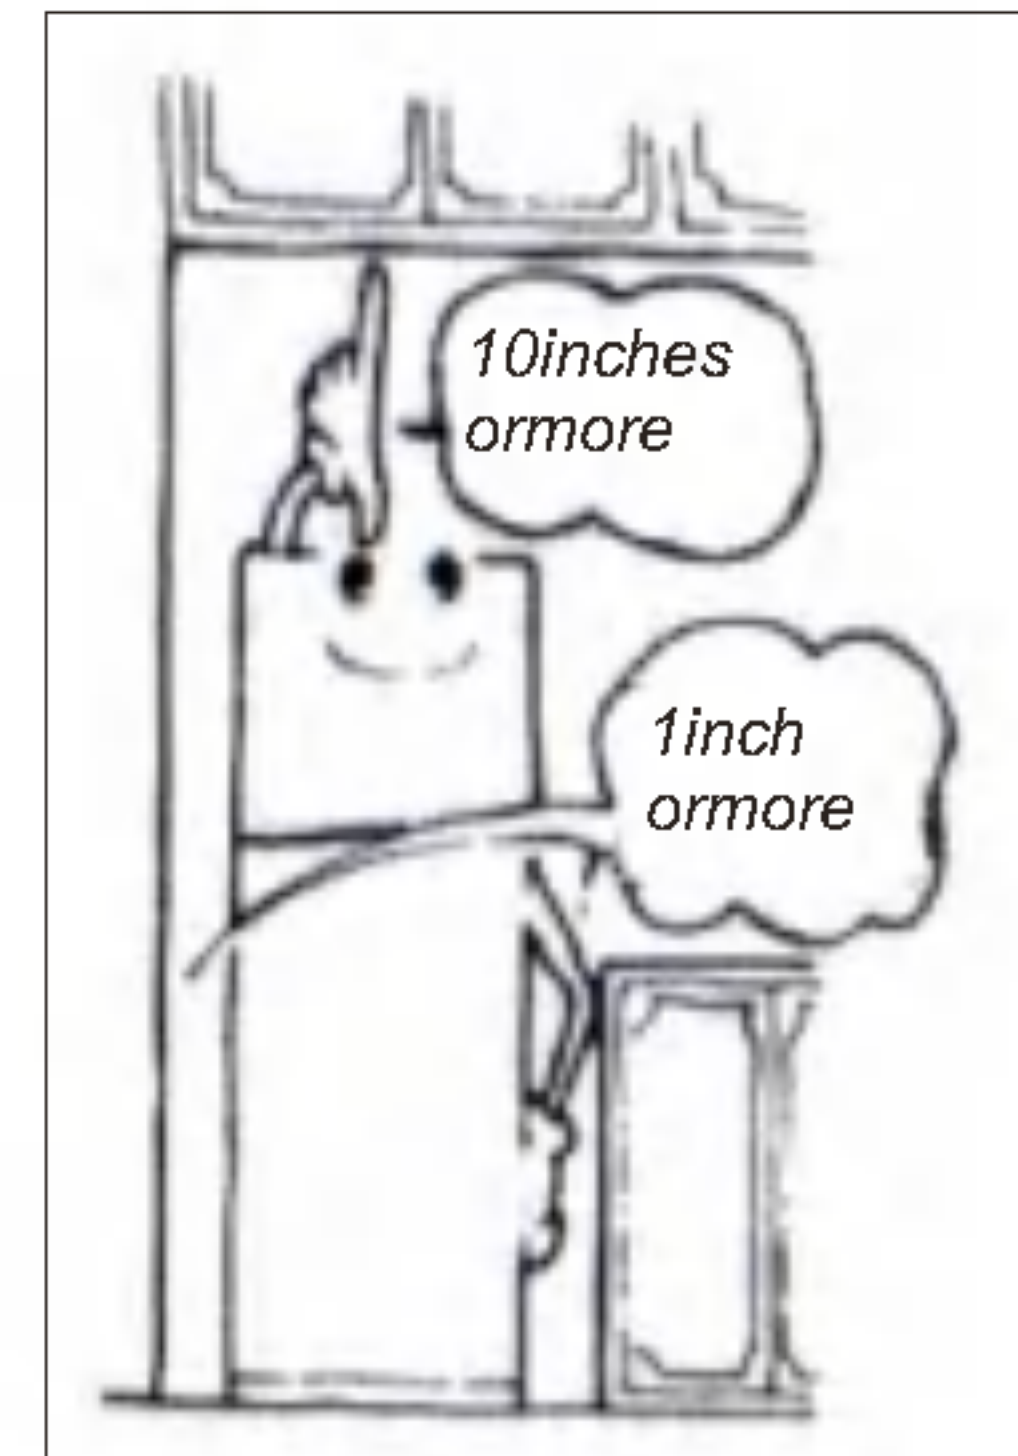

4. To avoid vibrations, the refrigerator must be level. If necessary, adjust the levelling screw(s) to compensate for unevenness of the floor. To close the doors easily, the front should be slightly higher than the rear. Levelling screw(s) can be turned easily by tipping the cabinet slightly. Turn the levelling screw(s) clockwise to raise the refrigerator, counterclockwise to lower it.

### NEXT

1. Wipe off all dust accumulated during shipping and clean your refrigerator thoroughly.
2. Install accessories such as the ice cube box, evaporating tray cover, etc., in their proper places. They are packed together to prevent possible damage during shipping.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to use, let the refrigerator run for 2-3 hours. Check the flow of cold air in the freezer compartment to ensure proper cooling has taken place. Your refrigerator is now ready to use.

# FEATURE CHART

## FREEZER COMPARTMENT

Twisting Ice Server (Option)  
or General Purpose Making

Freezer Temperature  
Control Knob

## REFRIGERATOR COMPARTMENT

Chilled Compartment

 
Refrigerator Temperature  
Electronic Control

Lamp

Deodorizer  
(Optional)

Vegetable Drawer  
Used to keep fruits  
and vegetables, etc.  
fresh and crisp.

Cover Lower  
(Optional)

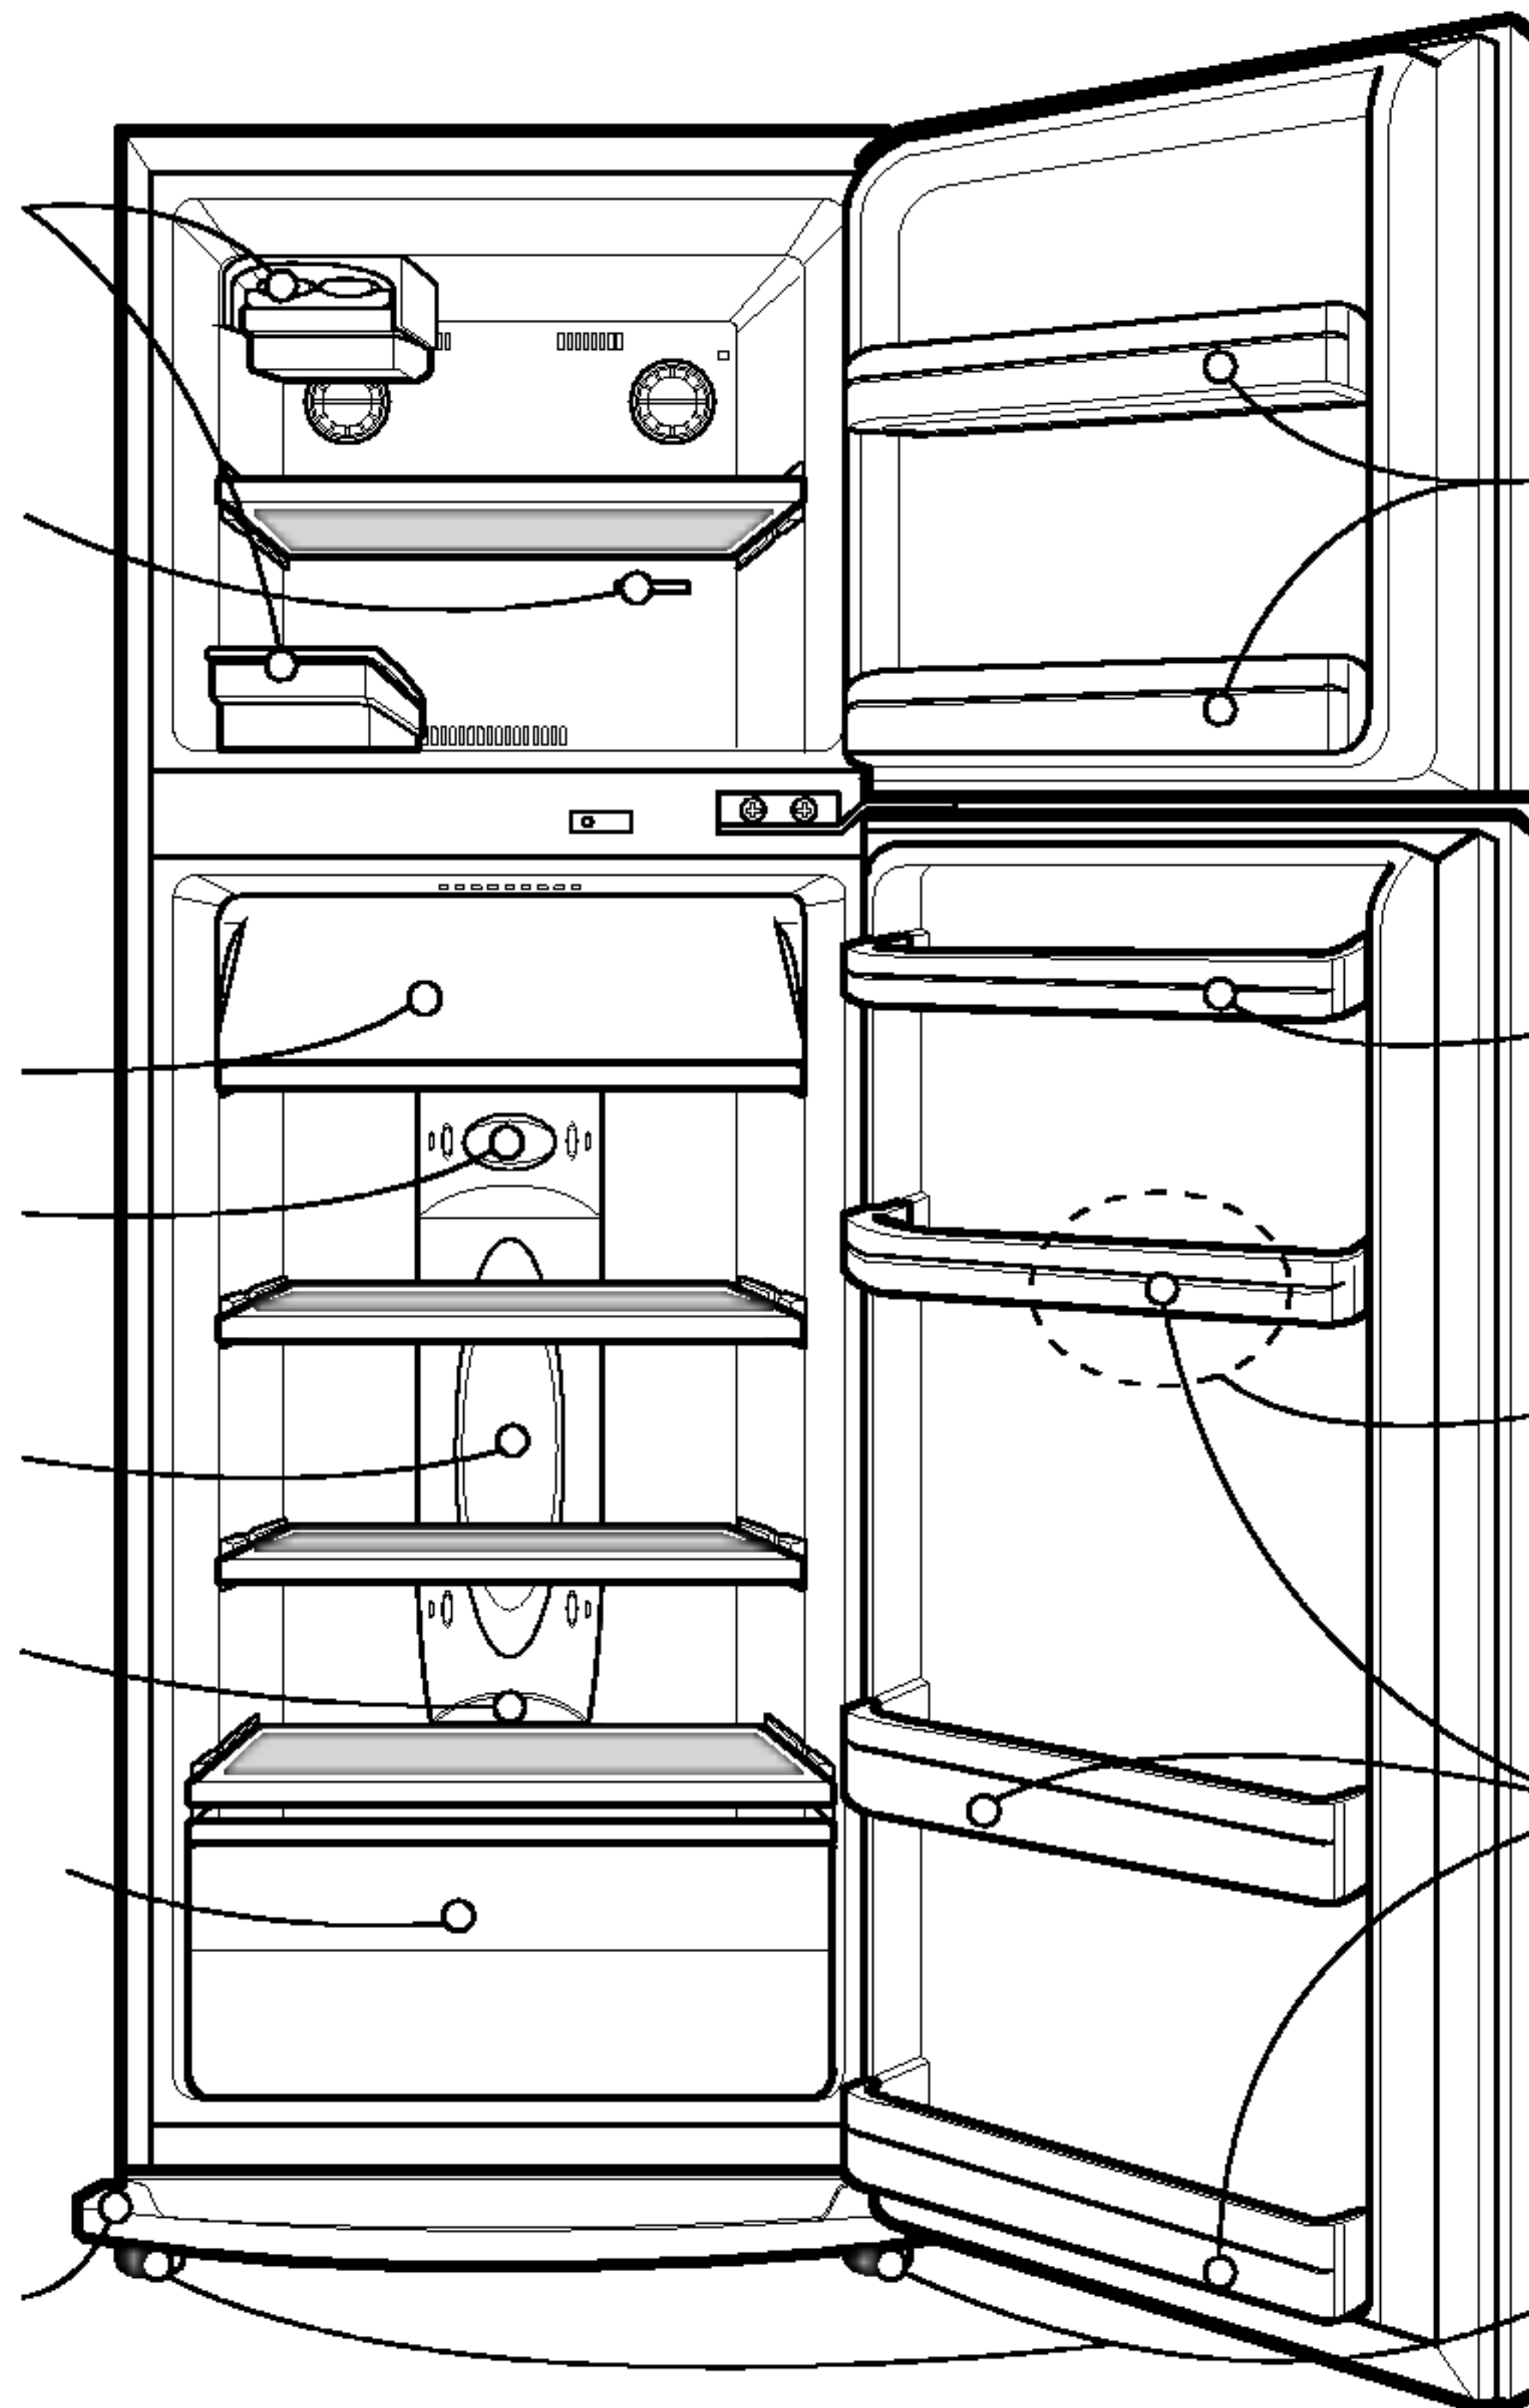

Freezer Door Rack

Egg Storage Rack

(GR-2920 only)

Refrigerator Door Rack

Leveling Screws

**NOTE**

All parts shown may not be included with the very model.

# OPERATION

 
## STARTING

When your refrigerator is first installed, allow it 2-3 hours to stabilize to normal operating temperatures prior to filling with fresh foods.

If operation is interrupted, wait 5 minutes before restarting.

## TEMPERATURE CONTROL

### REFRIGERATOR

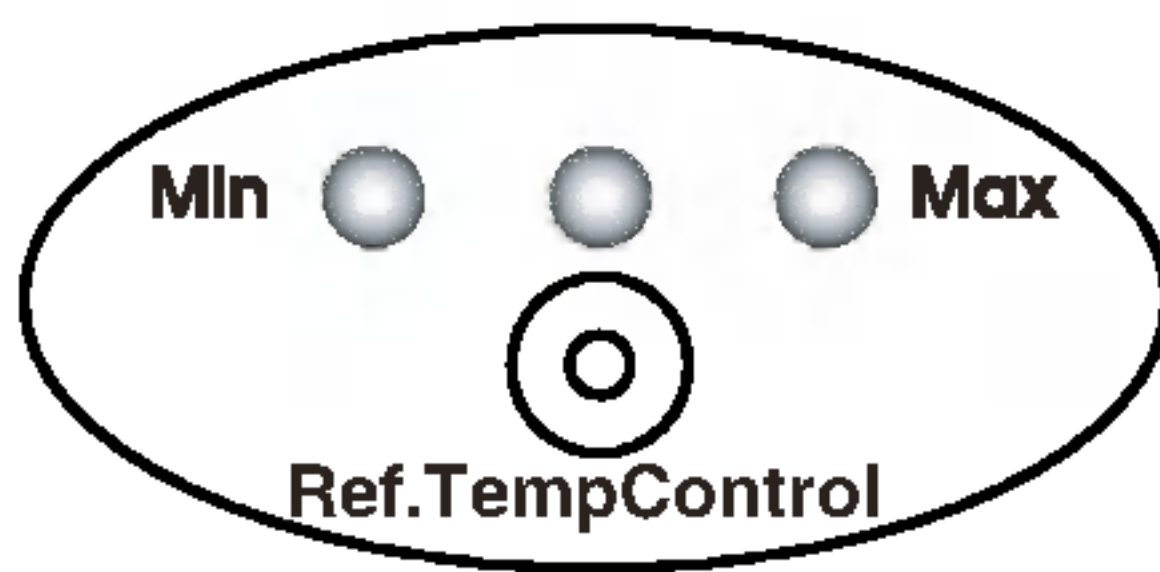

The default setting of the temperature control button for the refrigerator compartment is **NORMAL**.

 
You can set the refrigerator temperature using the **Refrigerator Temperature Control**.

Whenever pressing the button, the **LED** emits light.


The temperature of the compartment is higher as the **LED** luminesces from **MIN** to **MAX**.

You can select the desired set point in five (5) steps between minimum and maximum.

For economic electricity, set the **LED** to the **MIN** position.

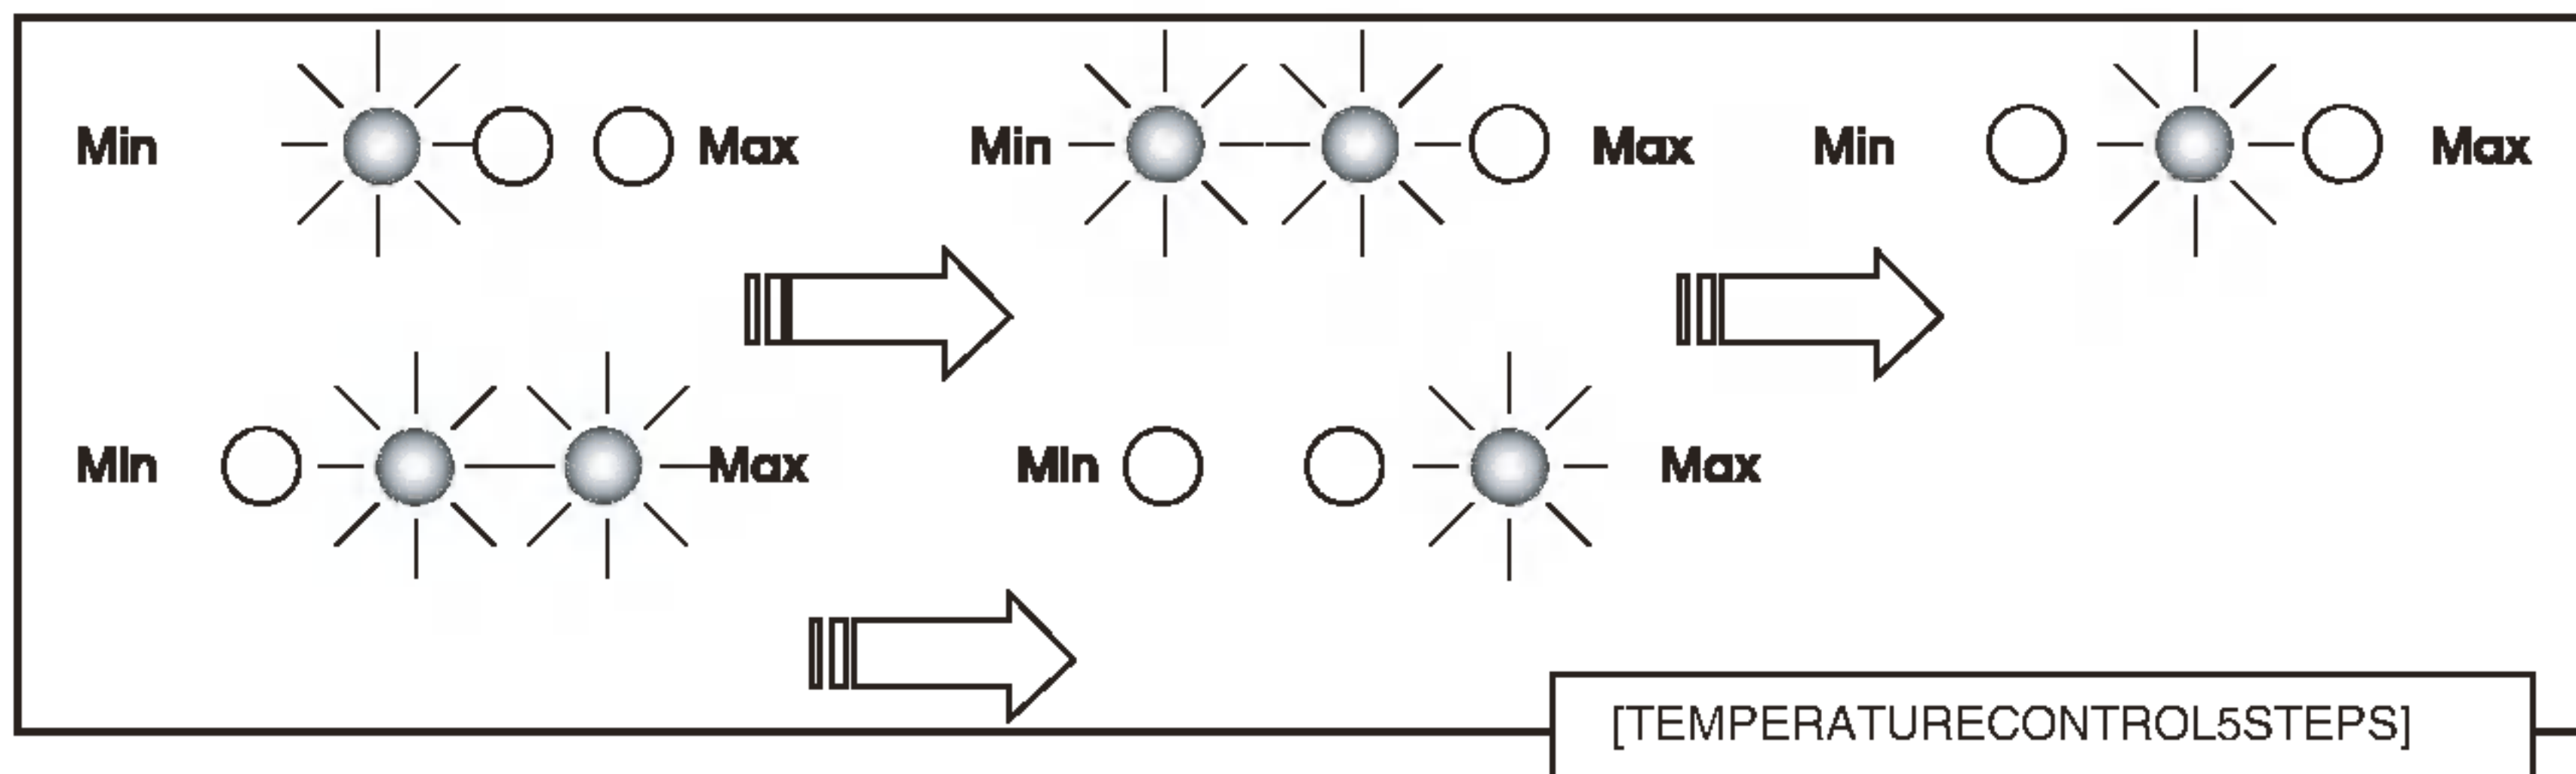

### FREEZER

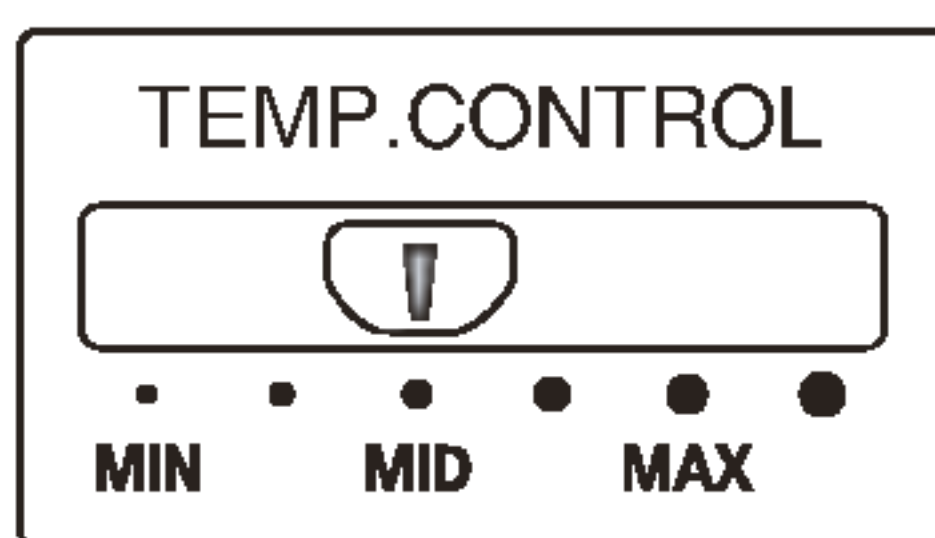 

The default setting of the temperature control knob for the freezer compartment is the **MID** point.

For colder temperatures, adjust the control knob to **MAX**, and for warmer temperatures, adjust the control knob to **MIN** position.


# OPERATION
 
## ICEMAKING


Determine which type ice-making system you have.

### General Type

To make ice cubes, fill the tray with water and place it on the ice cube box. Then insert the ice cube box in the freezer compartment.

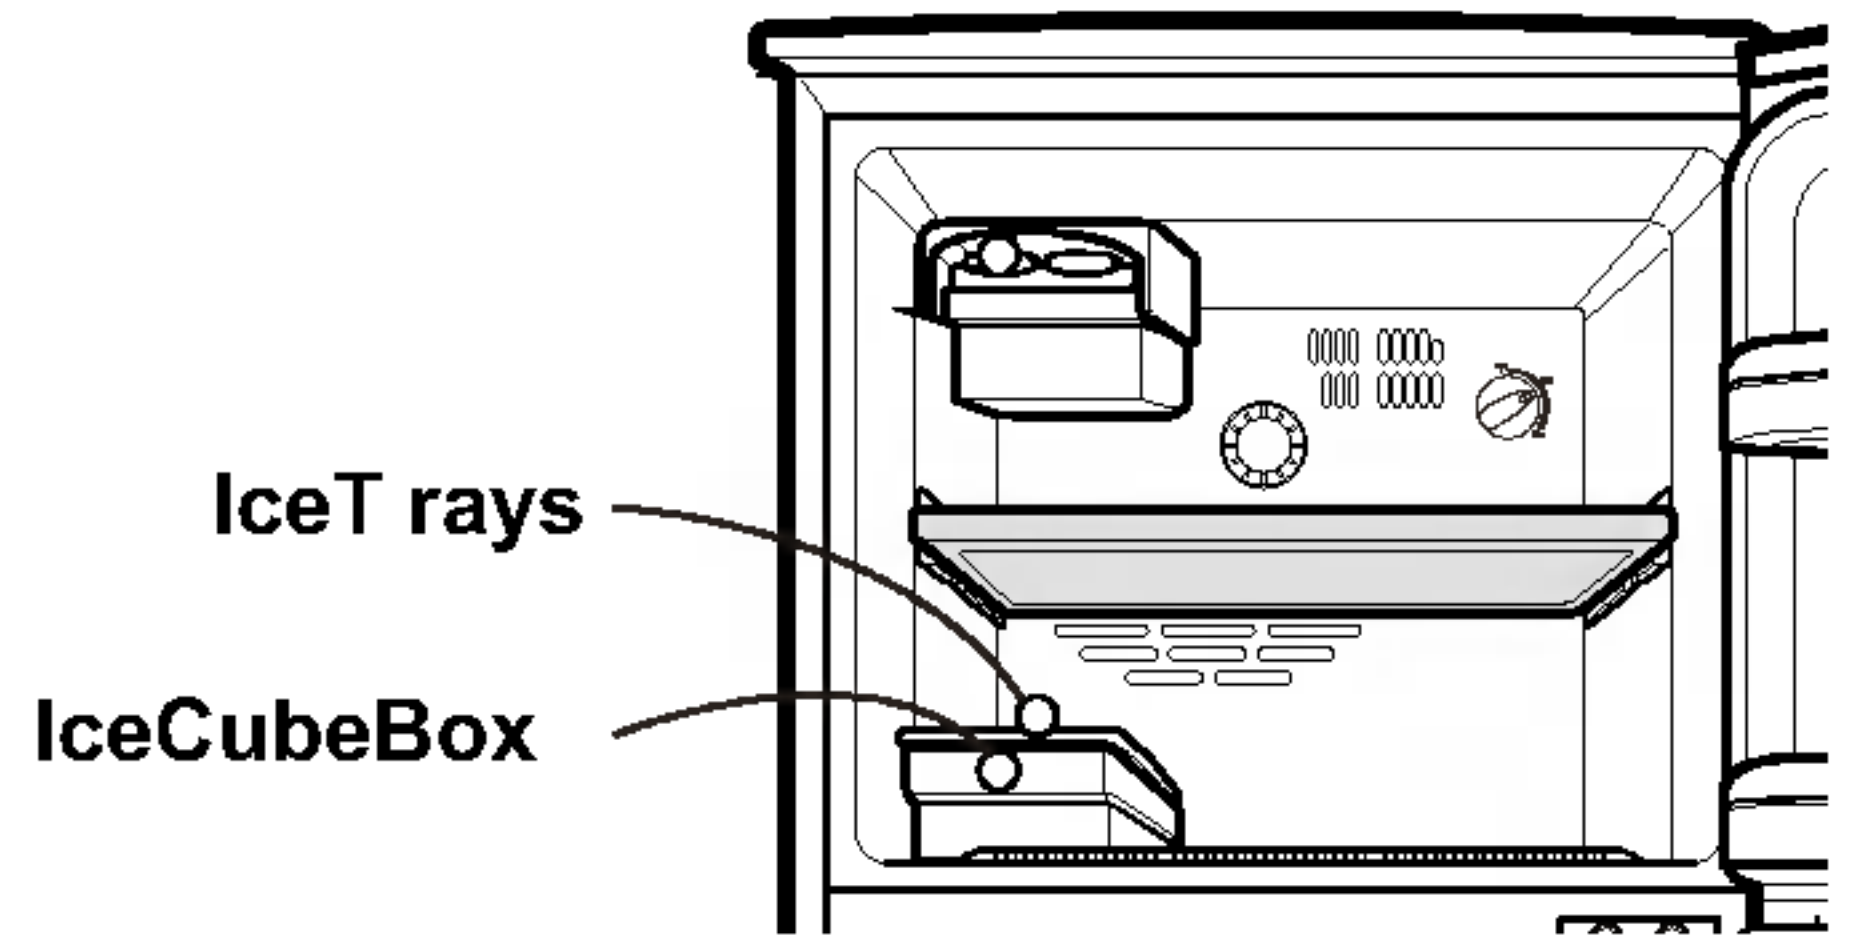


 To remove ice cubes, hold the tray and twist gently.

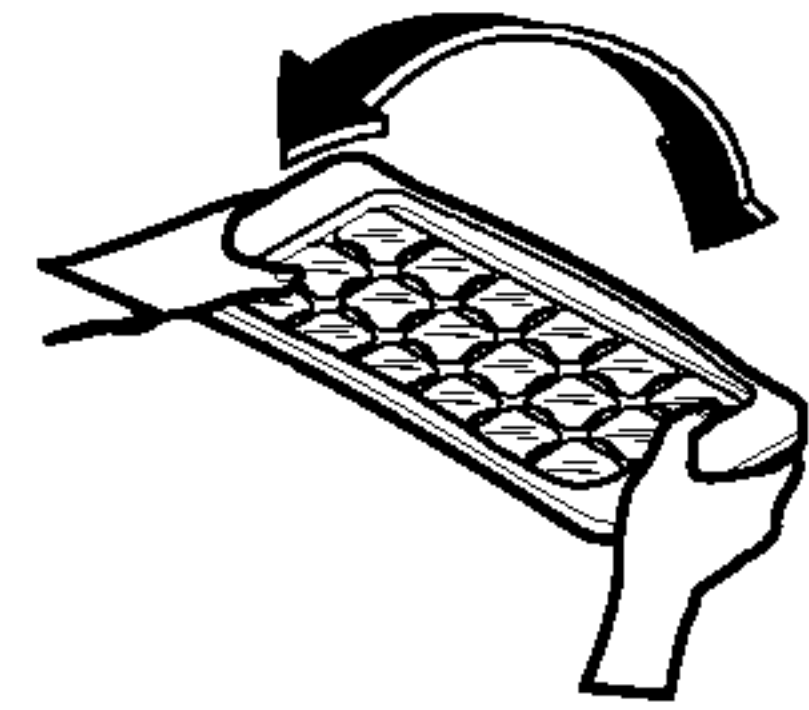


### Twisting Ice Serve Type

 
To make ice cubes, fill the tray with water and insert it in its position.

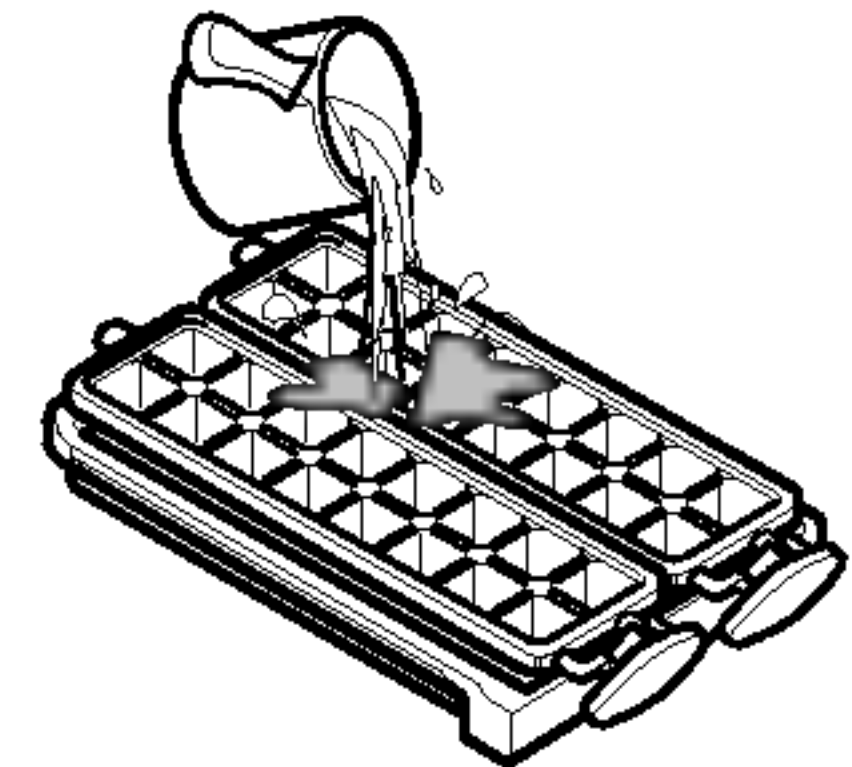

 To remove ice cubes, hold the knob of the tray and turn gently. Then, ice cubes drop in the ice cube box.

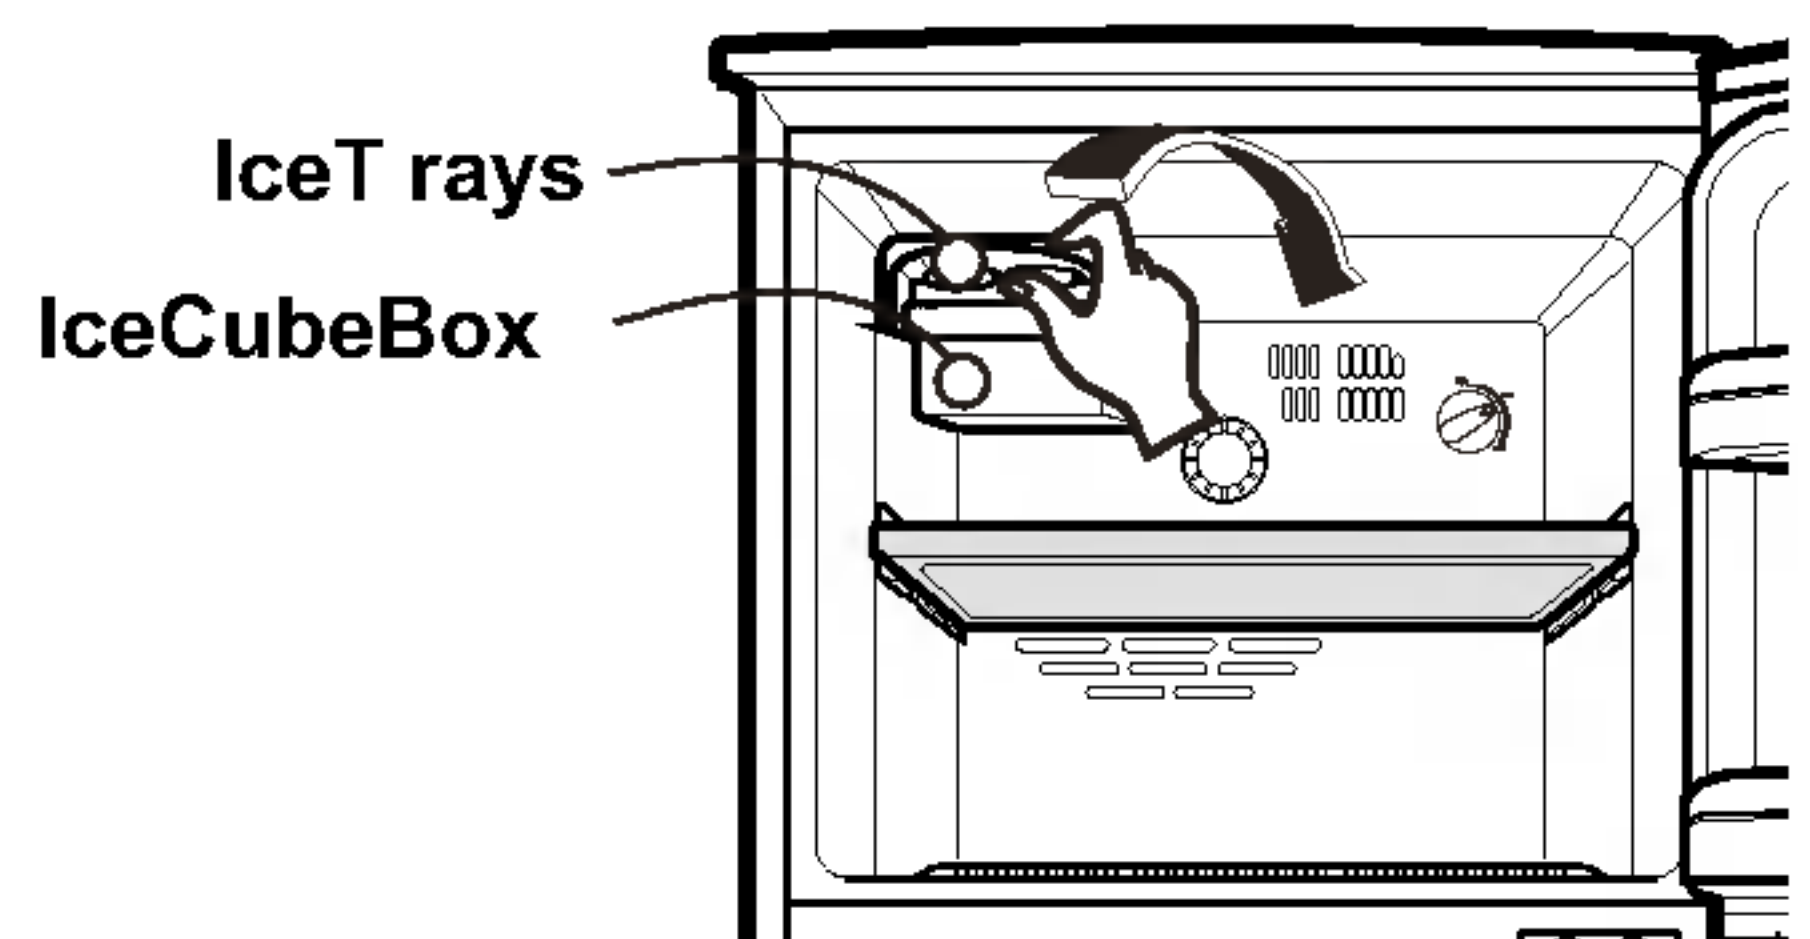

 You can remove the Twisting Ice Serve to make the freezer compartment larger.

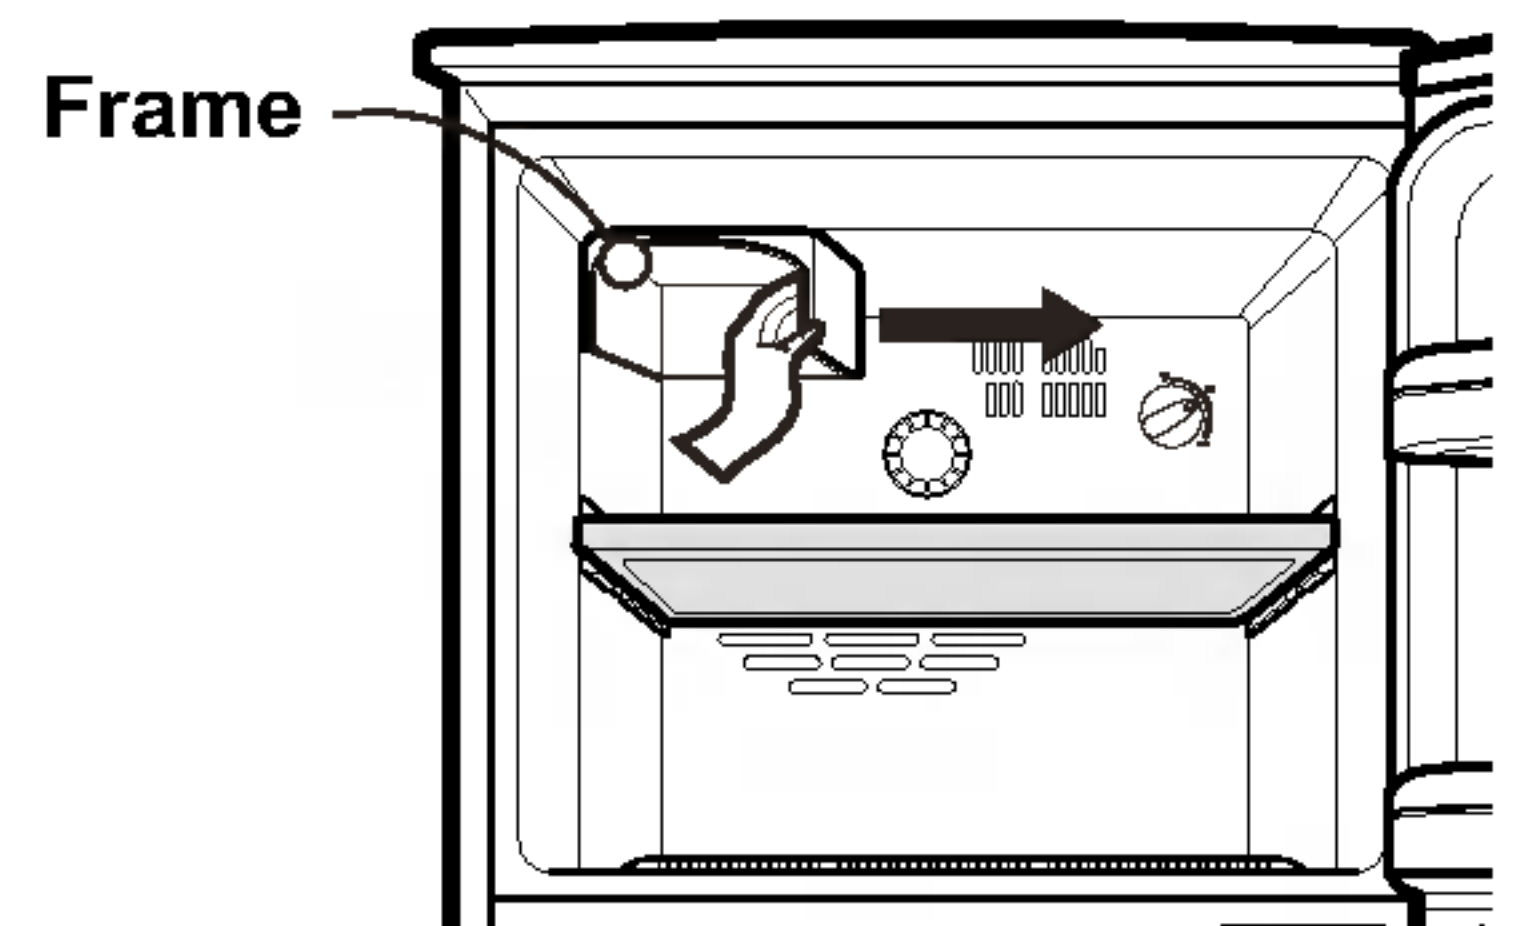


You should remove the Ice Trays and Ice Cube Box first, then pull the frame out toward the right side.

# OPERATION
 
## CHILLED COMPARTMENT

When the door is opened, the warmer air doesn't influence the fresh meat. You can keep food fresher in it.

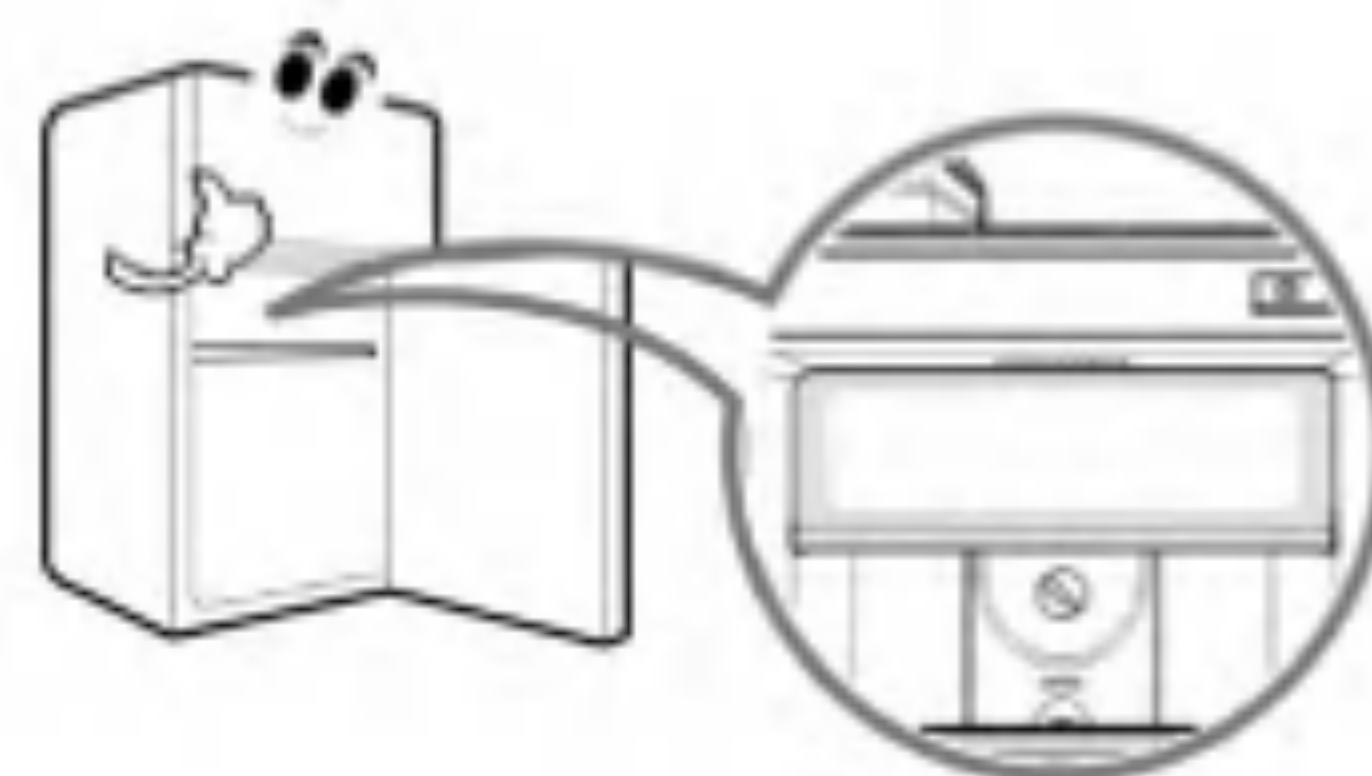

## DEFROSTING

Defrosting takes place automatically.

The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.

## DEODORIZER (OPTIONAL)

 
 
By using a catalyst, deodorizing performance is guaranteed.

Unpleasant odor of food in the fresh food compartment is deodorized with no harm to you and the food.

### How to use

Do not prick the deodorizer with a sharp tip because the deodorizing catalyst may be damaged.

When storing food with a strong odor, wrap it or store it in a container with a lid because the odor may be passed to other foods.

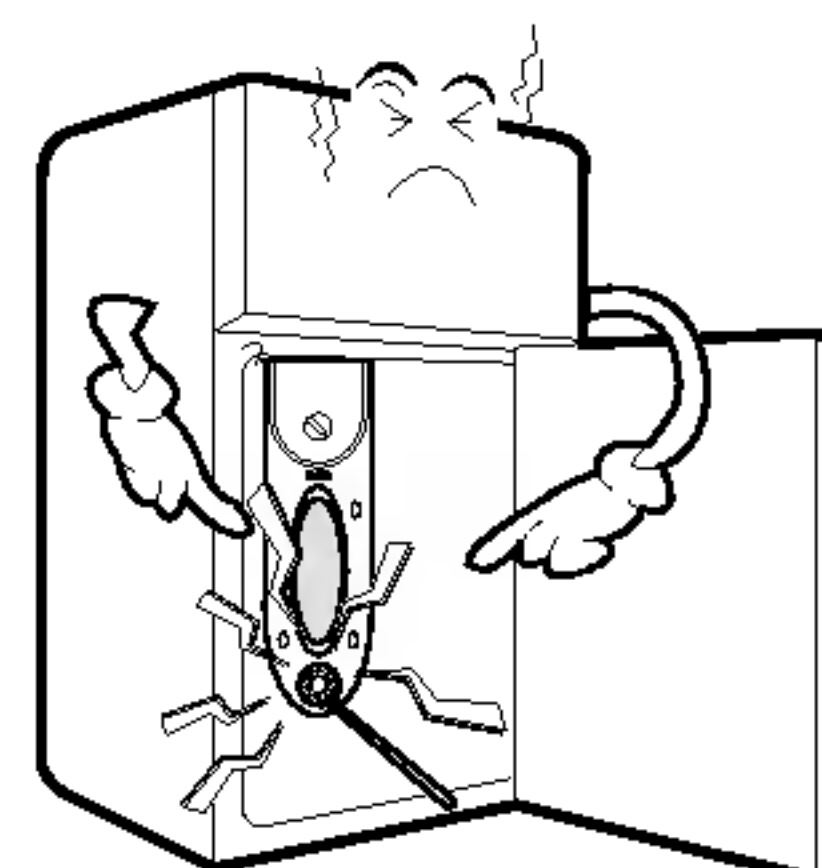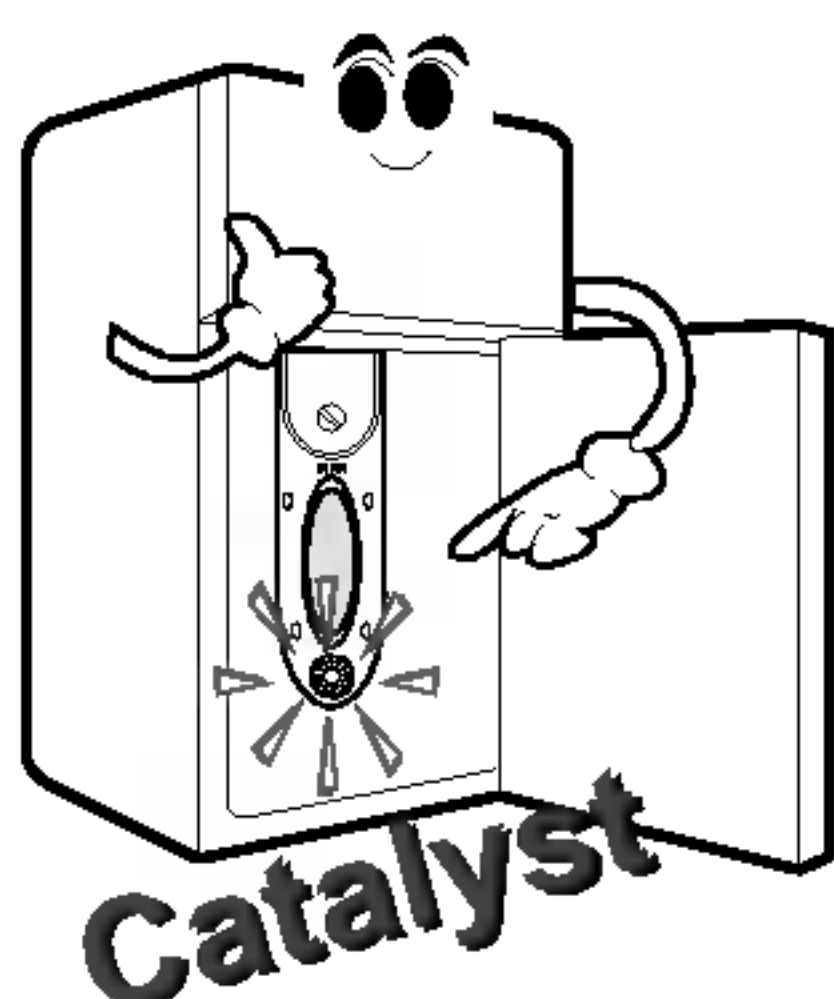

# SUGGESTION ON FOOD STORAGE

## STORING FOOD

Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.

Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.

Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food and lead to higher electric bills!

When storing, cover food with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating and helps food to keep its taste and nutrients.

Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperature even.

Do not open the door frequently. Opening the door lets warm air enter the refrigerator, causing temperature to rise.

## FREEZER COMPARTMENT

Do not store bottles in the freezer compartment - they may break when frozen.

Do not refreeze food that has been thawed. This deteriorates taste and nutrition.

When storing frozen food like ice cream or long periods, place it on the freezer shelf, not in the door rack.

## REFRIGERATOR COMPARTMENT

 
Avoid placing moist food deep inside refrigerator shelves, it could freeze upon direct contact with chilled air.

Always clean food prior to refrigeration. Vegetables and fruit should be washed and wiped, and packaged food should be wiped clean to prevent adjacent food from spoiling.

When storing eggs in their storage rack, ensure that they are fresh. Always store them in a upright position, which keeps them fresh longer.



# CLEANING

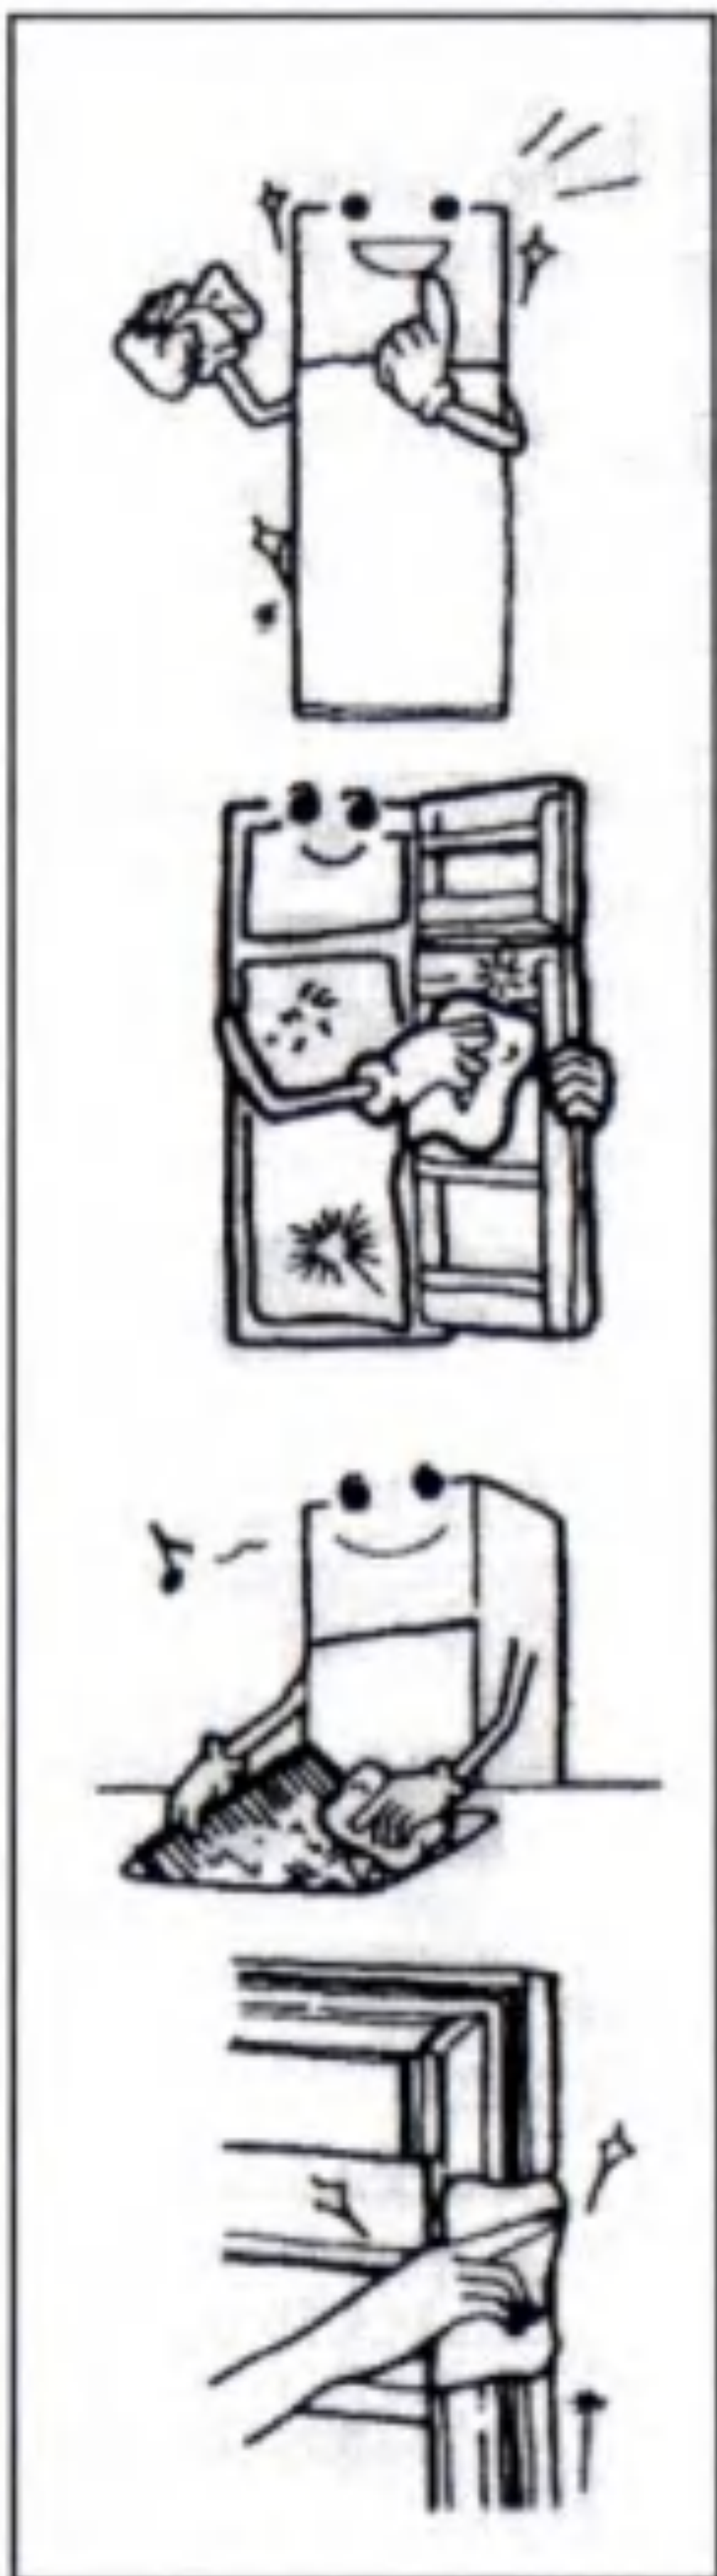

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners, or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

**EXTERIOR-** Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and dry.

**INTERIOR-** Regular cleaning of the interior and interior parts is recommended. If you have the No Frost model which defrosts automatically, leave both doors open for a few hours to allow the defrosting process. Disconnect the power supply, and remove food and all compartments, shelves, storage trays, etc. Wash all compartments with a baking soda solution. Rinse and dry.

**INTERIOR PARTS-** Wash compartments, shelves, door racks, storage trays, and magnetic door seals etc. with the baking soda solution or a mild detergent.

## WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.). Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing an electric shock. Do not use flammable or toxic cleaning liquids.

# GENERAL INFORMATION



## VACATION TIME

During a vacation, you will probably find it best to leave the refrigerator in operation. Place frozen items in the freezer for longer life. When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

## POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

## DRY ICE WARNING

When using dry ice, provide adequate ventilation. Dry ice is frozen carbon dioxide ( $\text{CO}_2$ ). When it vaporizes, it can displace oxygen, causing dizziness, light-headedness, unconsciousness, and death by suffocation. Open a window and do not breathe the vapors.

## IF YOU MOVE

If you move, empty the refrigerator (freezer) completely and wash with a mild solution of baking soda and water. (2 TBSPs soda to 1 quart water). Be sure the soda is completely dissolved to avoid scratching the inside of the refrigerator (freezer). Secure any loose items, such as racks, bins, ice trays, etc. Do not try to move a loaded refrigerator.

 
## ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation.

Don't be alarmed.


This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent sweating on the outer cabinet wall.

Anti-Condensation Pipe

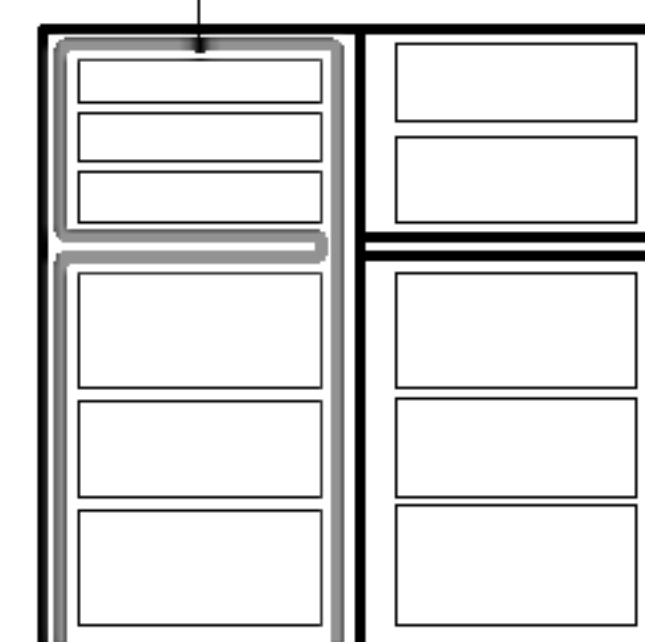

# LAMP REPLACEMENT

 1. Unplug the power cord from the outlet.
2. Remove refrigerator shelves.
3. To remove the lamp cover, insert a slotted screwdriver into the one of the holes on the lamp cover and pull it outwards.
4. Turn the lamp cover counterclockwise.
5. Assemble in reverse order of disassembly.  
Replacement bulb must be the same specification as original.

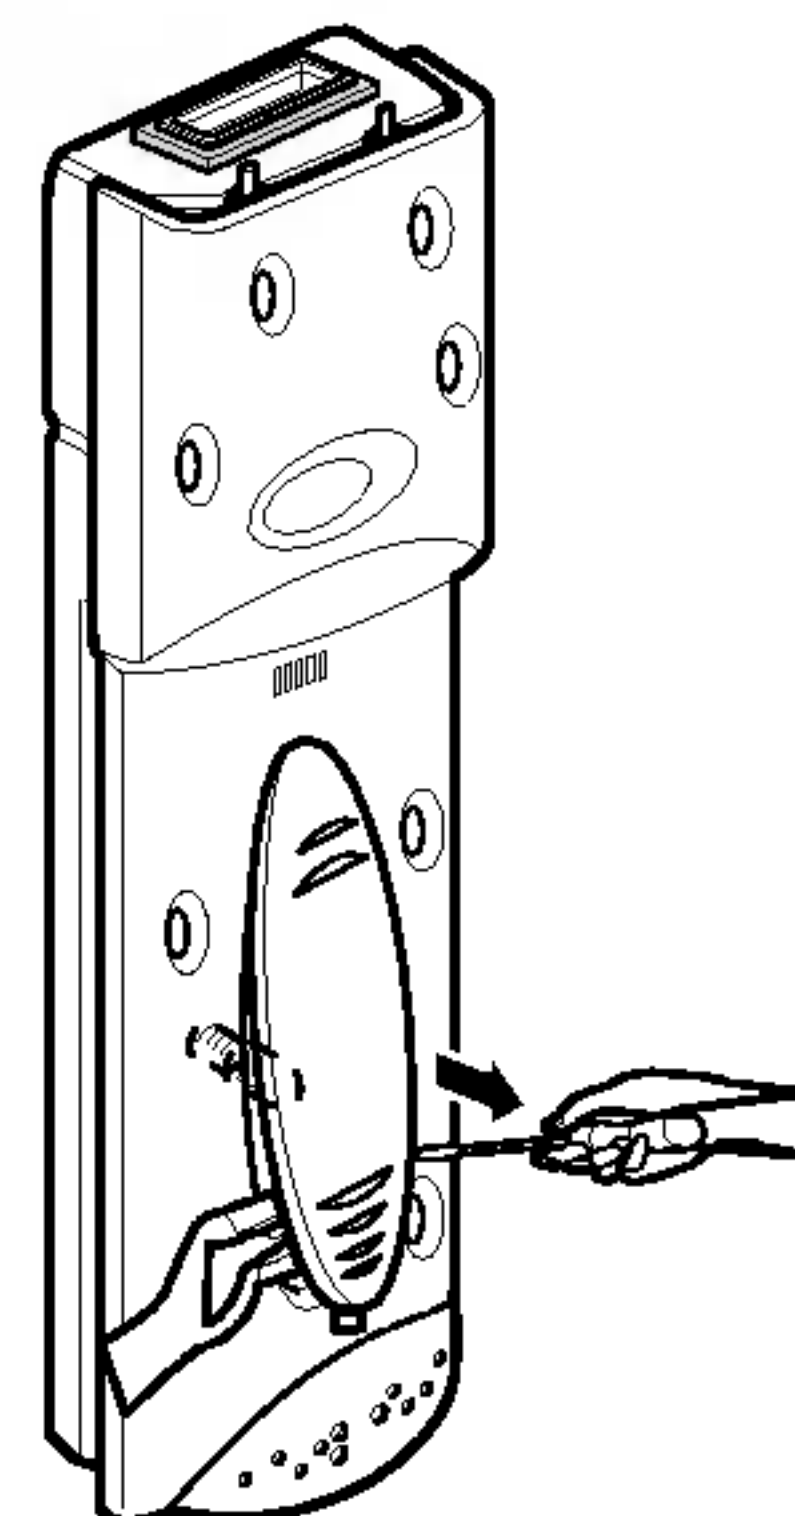

# IMPORTANT WARNINGS

## DON'T USE AN EXTENSION CORD

Use this appliance on a dedicated circuit; that is, one outlet that is on its own circuit. Overloading a circuit causes slow voltage, malfunction, possible damage to other equipment, and possible fire hazard. Check your local electrical code or consult a qualified electrician if you have questions.

## ACCESSIBILITY SUPPLY PLUG

These refrigerator-freezers should be positioned so that the supply plug is accessible for quick disconnection if a fire should occur.

## SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or a qualified person or dealer to avoid a hazard.

## VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove all magnets, latches, and other items from the refrigerator. If you use the appliance, it is not safe to use until it is harmless.

## ABOUT GROUNDING (EARTHING)

 
Intentional grounding (earthing) reduces the risk of electric shock by providing a safe path for the electric current. In order to prevent possible electric shock, this appliance must be grounded.

Improper grounding can result in an electric shock. Consult a qualified electrician or service person for grounding instructions and do not attempt to ground the appliance unless you are completely sure you understand the instructions and are properly grounded.

This appliance must be grounded (earthed).

**DON'T WAIT! DO IT NOW!**

Do not store flammable materials, explosives, or chemicals in the refrigerator.

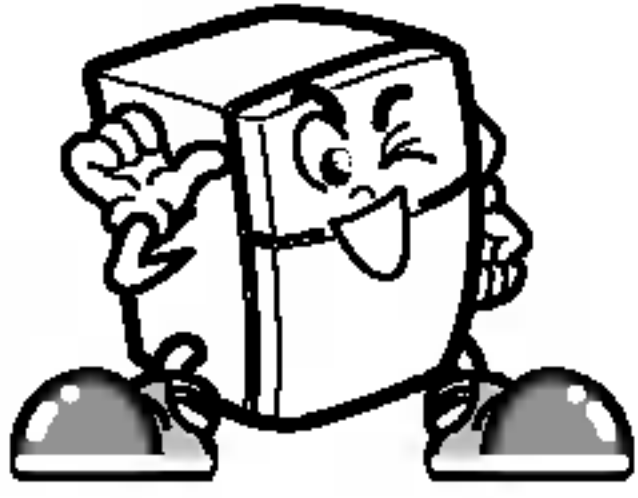

# BEFORE CALLING FOR SERVICE



SERVICE CALLS CAN OFTEN BE AVOIDED!  
IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST:

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	Has a house fuse blown or circuit breaker tripped? Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	Temperature control not set on proper position. Appliance is placed close to wall or heat source. Warm weather - frequent door openings. Door left open for a long time. Large amount of food stored in the refrigerator.
ABNORMAL NOISE(S)	Refrigerator is installed in a weak or uneven place, or leveling screws need adjusting. Unnecessary objects placed behind the refrigerator.
REFRIGERATOR HAS ODOR	Food with strong odor should be tightly covered or wrapped. Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	Not unusual during periods of high humidity. Doors may have been left ajar.