



DLP PROJECTION TV OWNER'S MANUAL

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this
information to your dealer when you require service.

Model number :
Serial number :



Contents

Installation	3
Location and function of controls	4
Remote control handset	
Battery installation	
Front panel / Rear panel	
Basic operation	8
On and off / Programme selection	
Volume adjustment	
Quick view / Mute function	
On screen language selection (option)	
On screen menus	9
Menu selection	
STATION MENU	10
Auto programme tuning	
Manual programme tuning	
Fine Tuning / Programme edit	
Favourite Programme	
Calling the programme table	
PICTURE MENU	15
PSM(Picture Status Memory)	
XD (Excellent Digital)	
CSM (Color Status Memory)	
Manual Colour Temperature Control (User option)	
sRGB (RGB[PC], HDMI[PC] mode only)	
ACM (Active Color Management)	
Manual Picture Control (User option)	
SOUND MENU	19
SSM (Sound Status Memory) / BBE	
AVL (Auto Volume Leveler) / Balance adjustment	
Equalizer (option) / Sound output selection	
Stereo/Dual reception / NICAM reception	
TIME MENU	23
Clock / On/Off Timer	
Auto sleep / Sleep timer	
SPECIAL MENU	25
Child Lock / XD Demo	
SCREEN MENU	26
Auto Configuration (RGB [PC] mode only)	
Manual Configuration (RGB [PC])	
Setting Picture Format / Cinema	
NR (Noise Reduction)	
Initializing (Reset to original factory value)	
PIP/DW MENU	30
Main Picture Source Selection	
Picture in picture (PIP) function	31
On and off / Input mode selection for sub picture	
Swapping between main and sub pictures	
Programme selection for sub picture	
Sub picture size / Sub picture position change	
Adjusting PIP Transparency (PIP mode only)	
Teletext (option)	33
Switch on/off / SIMPLE text	
TOP text (option) / FASTEXT	
Special teletext functions	
Connection of PC	36
PC in socket	
Connection of external equipment	37
Aerial socket / Audio/Video input sockets (option)	
S-Video / Audio input sockets (option)	
Monitor output sockets / DVD input sockets	
DTV input sockets / HDMI	
Troubleshooting check list	43

Installation

Power

This set operates on an AC mains supply, the voltage is as indicated on the label on the back cover. Never apply DC power to the set. In the event of thunderstorms or powercuts, please pull out the aerial and mains plugs.

Warning

To prevent fire or shock hazard, do not expose the set to rain or moisture. Do not place anything containing liquid on top of the set, this may cause a fire or could give an electric shock.

Service

Never remove the back cover of the set as this can expose you to very high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

Aerial

Connect the aerial cable to the socket marked 75Ω on the back cover. For the best reception an outdoor aerial should be used.

Location

Position your set so that no bright light or sunlight falls directly onto the screen. Care should be taken not to expose the set to any unnecessary vibration, moisture, dust or heat. Also ensure that the set is placed in a position to allow a free flow of air. Do not cover the ventilation openings on the back cover.


Avoid having a fixed image remain on the screen for a long period of time. Typically a frozen still picture from a VCR, 4:3 picture format or if a CH label is present; the fixed image may remain visible on the screen.

Location and function of controls

All the functions can be controlled with the remote control handset. Some functions can also be adjusted with the buttons on the front panel of the set.

Remote control handset

Before you use the remote control handset, please install the batteries. See the next page.

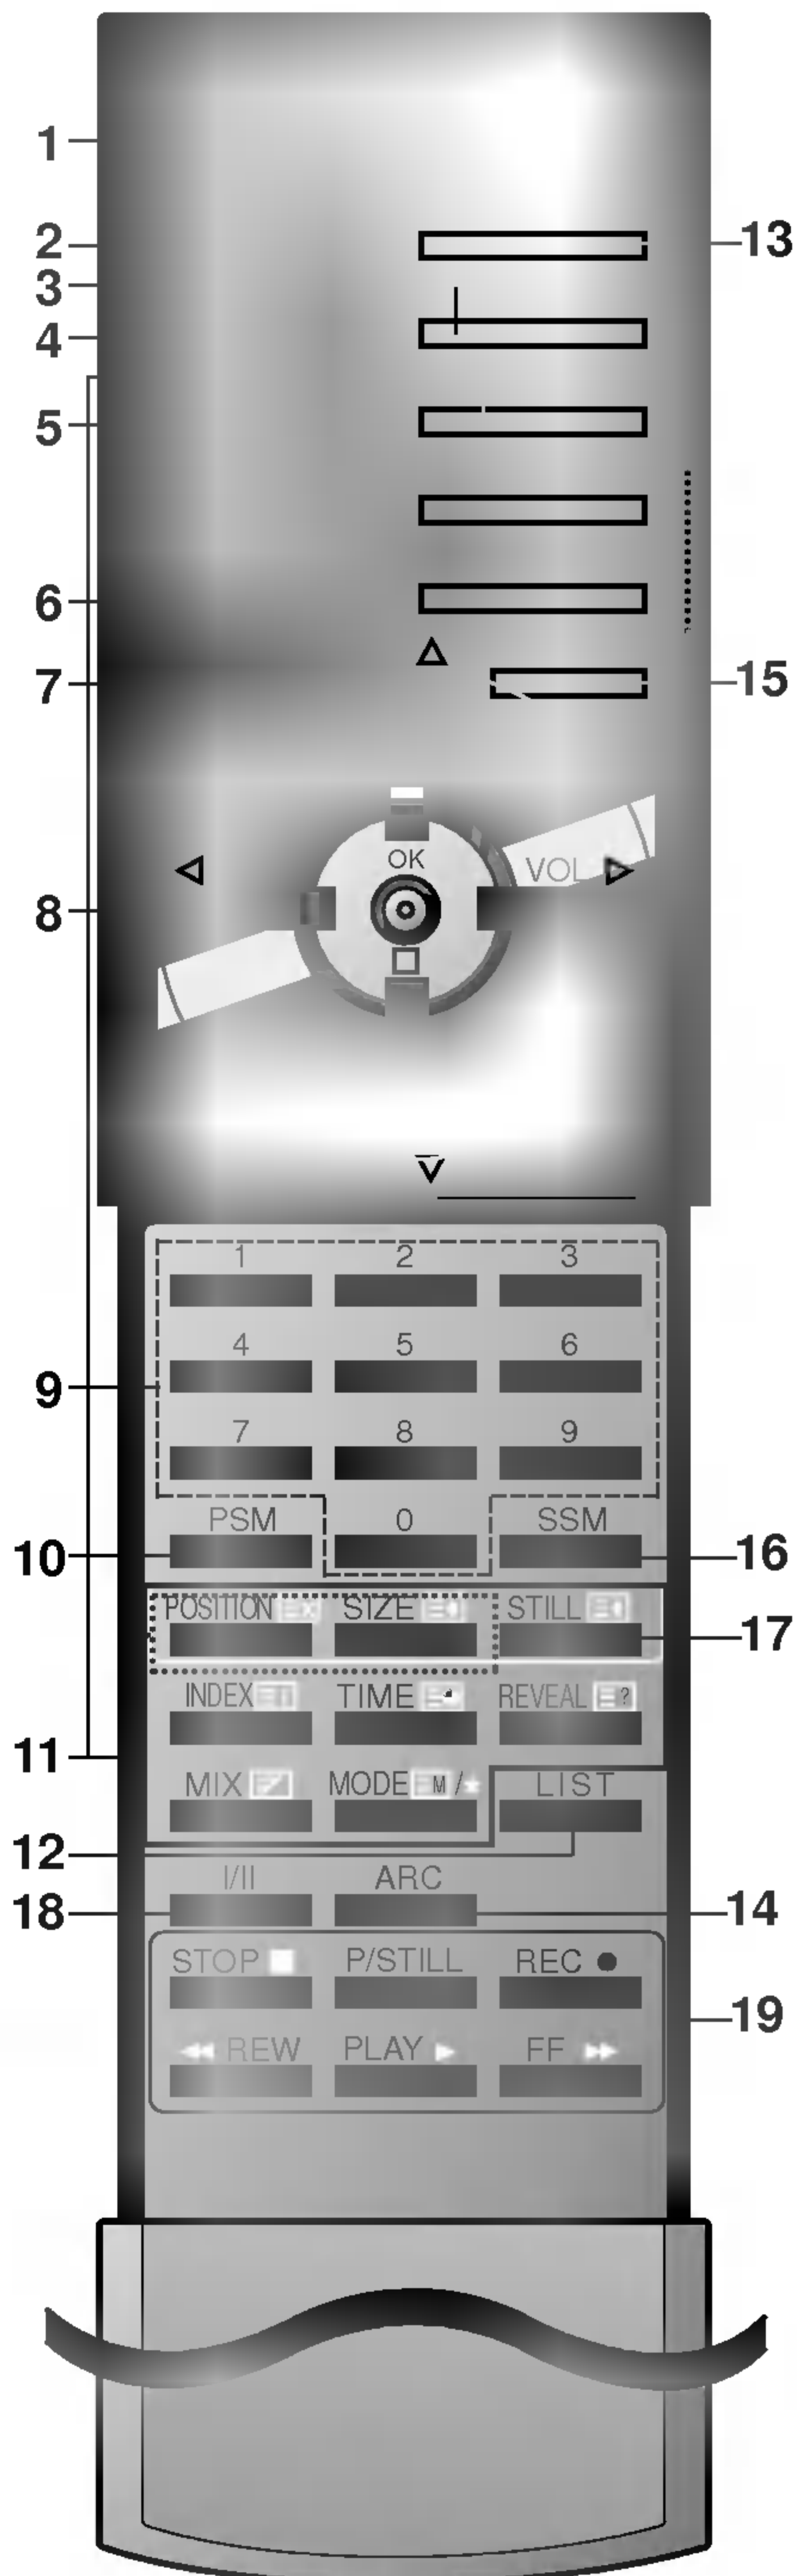

(With TELETEXT)

1. **POWER**
switches the set on from standby or off to standby.
2. **MULTIMEDIA**
selects **Component 1/2, RGB or HDMI** modes.
3. **SLEEP**
sets the sleep timer.
4. **MUTE**
switches the sound on or off.
5. **PIP BUTTONS**
PIP
switches the sub picture on or off.
PR +/-
selects a programme for the sub picture.
SWAP
alternates between main and sub picture.
INPUT
selects the input mode for the sub picture.
SIZE
adjusts the sub picture size.
POSITION
Moves the sub picture to ▲ / ▼ or ◀ / ▶ direction.
6. **SWAP**
returns to the previously viewed programme.
selects a favorite programme.
7. **MENU**
selects a menu.
8. ▲ / ▼ (**Programme Up/Down**)
selects a programme or a menu item.
switches the set on from standby.
◀ / ▶ (**Volume Down/Up**)
adjusts the volume.
adjusts menu settings.
OK
accepts your selection or displays the current mode.
9. **NUMBER BUTTONS**
switches the set on from standby or directly select a number.
10. **PSM (Picture Status Memory)**
recalls your preferred picture setting.
11. **TELETEXT BUTTONS (option)**
These buttons are used for teletext.
For further details, see the 'Teletext' section.
12. **LIST**
displays the programme table.

Location and function of controls

13. TV/AV

selects the remote operating mode.
switches the set on from standby.

14. ARC (Aspect Ratio Control)

changes the picture format.

15. CANCEL/EXIT

Clears all on-screen displays and returns to TV viewing from any menu.

16. SSM (Sound Status Memory)

recalls your preferred sound setting.

17. STILL

freezes motion of the picture.

18. I/II

selects the language during dual language broadcast.
selects the sound output.


19. VCR BUTTONS

control a video cassette recorder.


Note : In teletext mode, the **PR + / -**, **SWAP** and **INPUT** buttons are used for teletext function.

Battery installation

The remote control handset is powered by two AAA type batteries. To load the batteries, turn the remote control handset over and open the battery compartment. Install two batteries as indicated by the polarity symbols (⊕ and ⊖) marked inside the compartment.

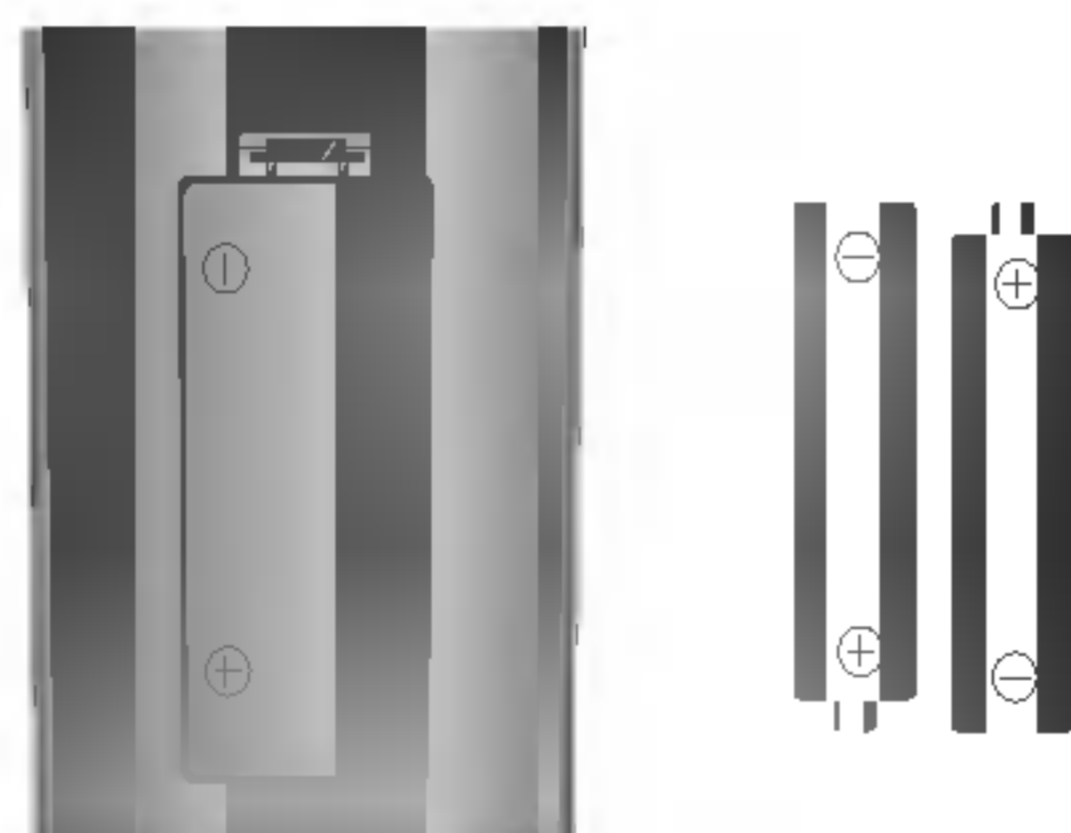

Note : To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.

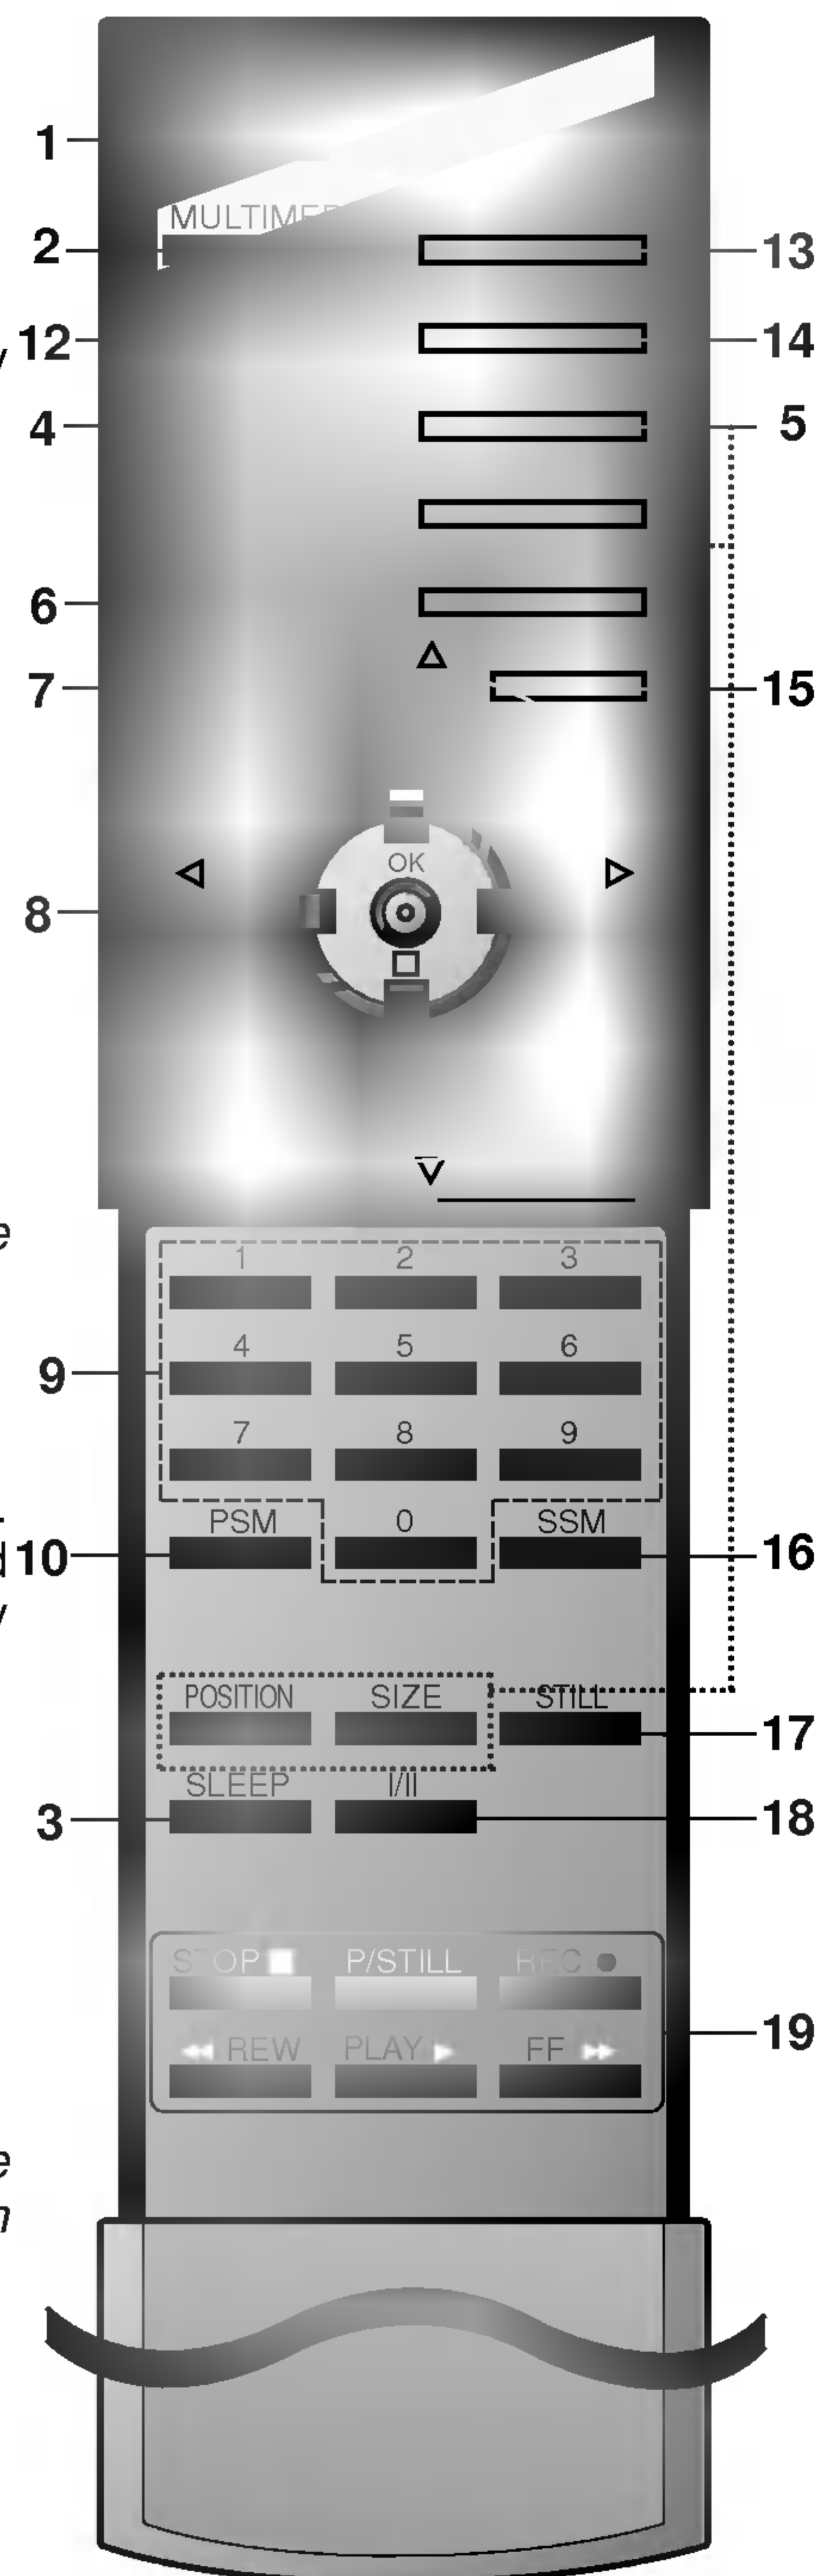


(Without TELETEXT)

Location and function of controls

Front panel

Lamp indicator, operation indicator, and temperature indicator, located side the front panel controls reveal the operating status of the DLP(Digital Light Processing) projection TV.

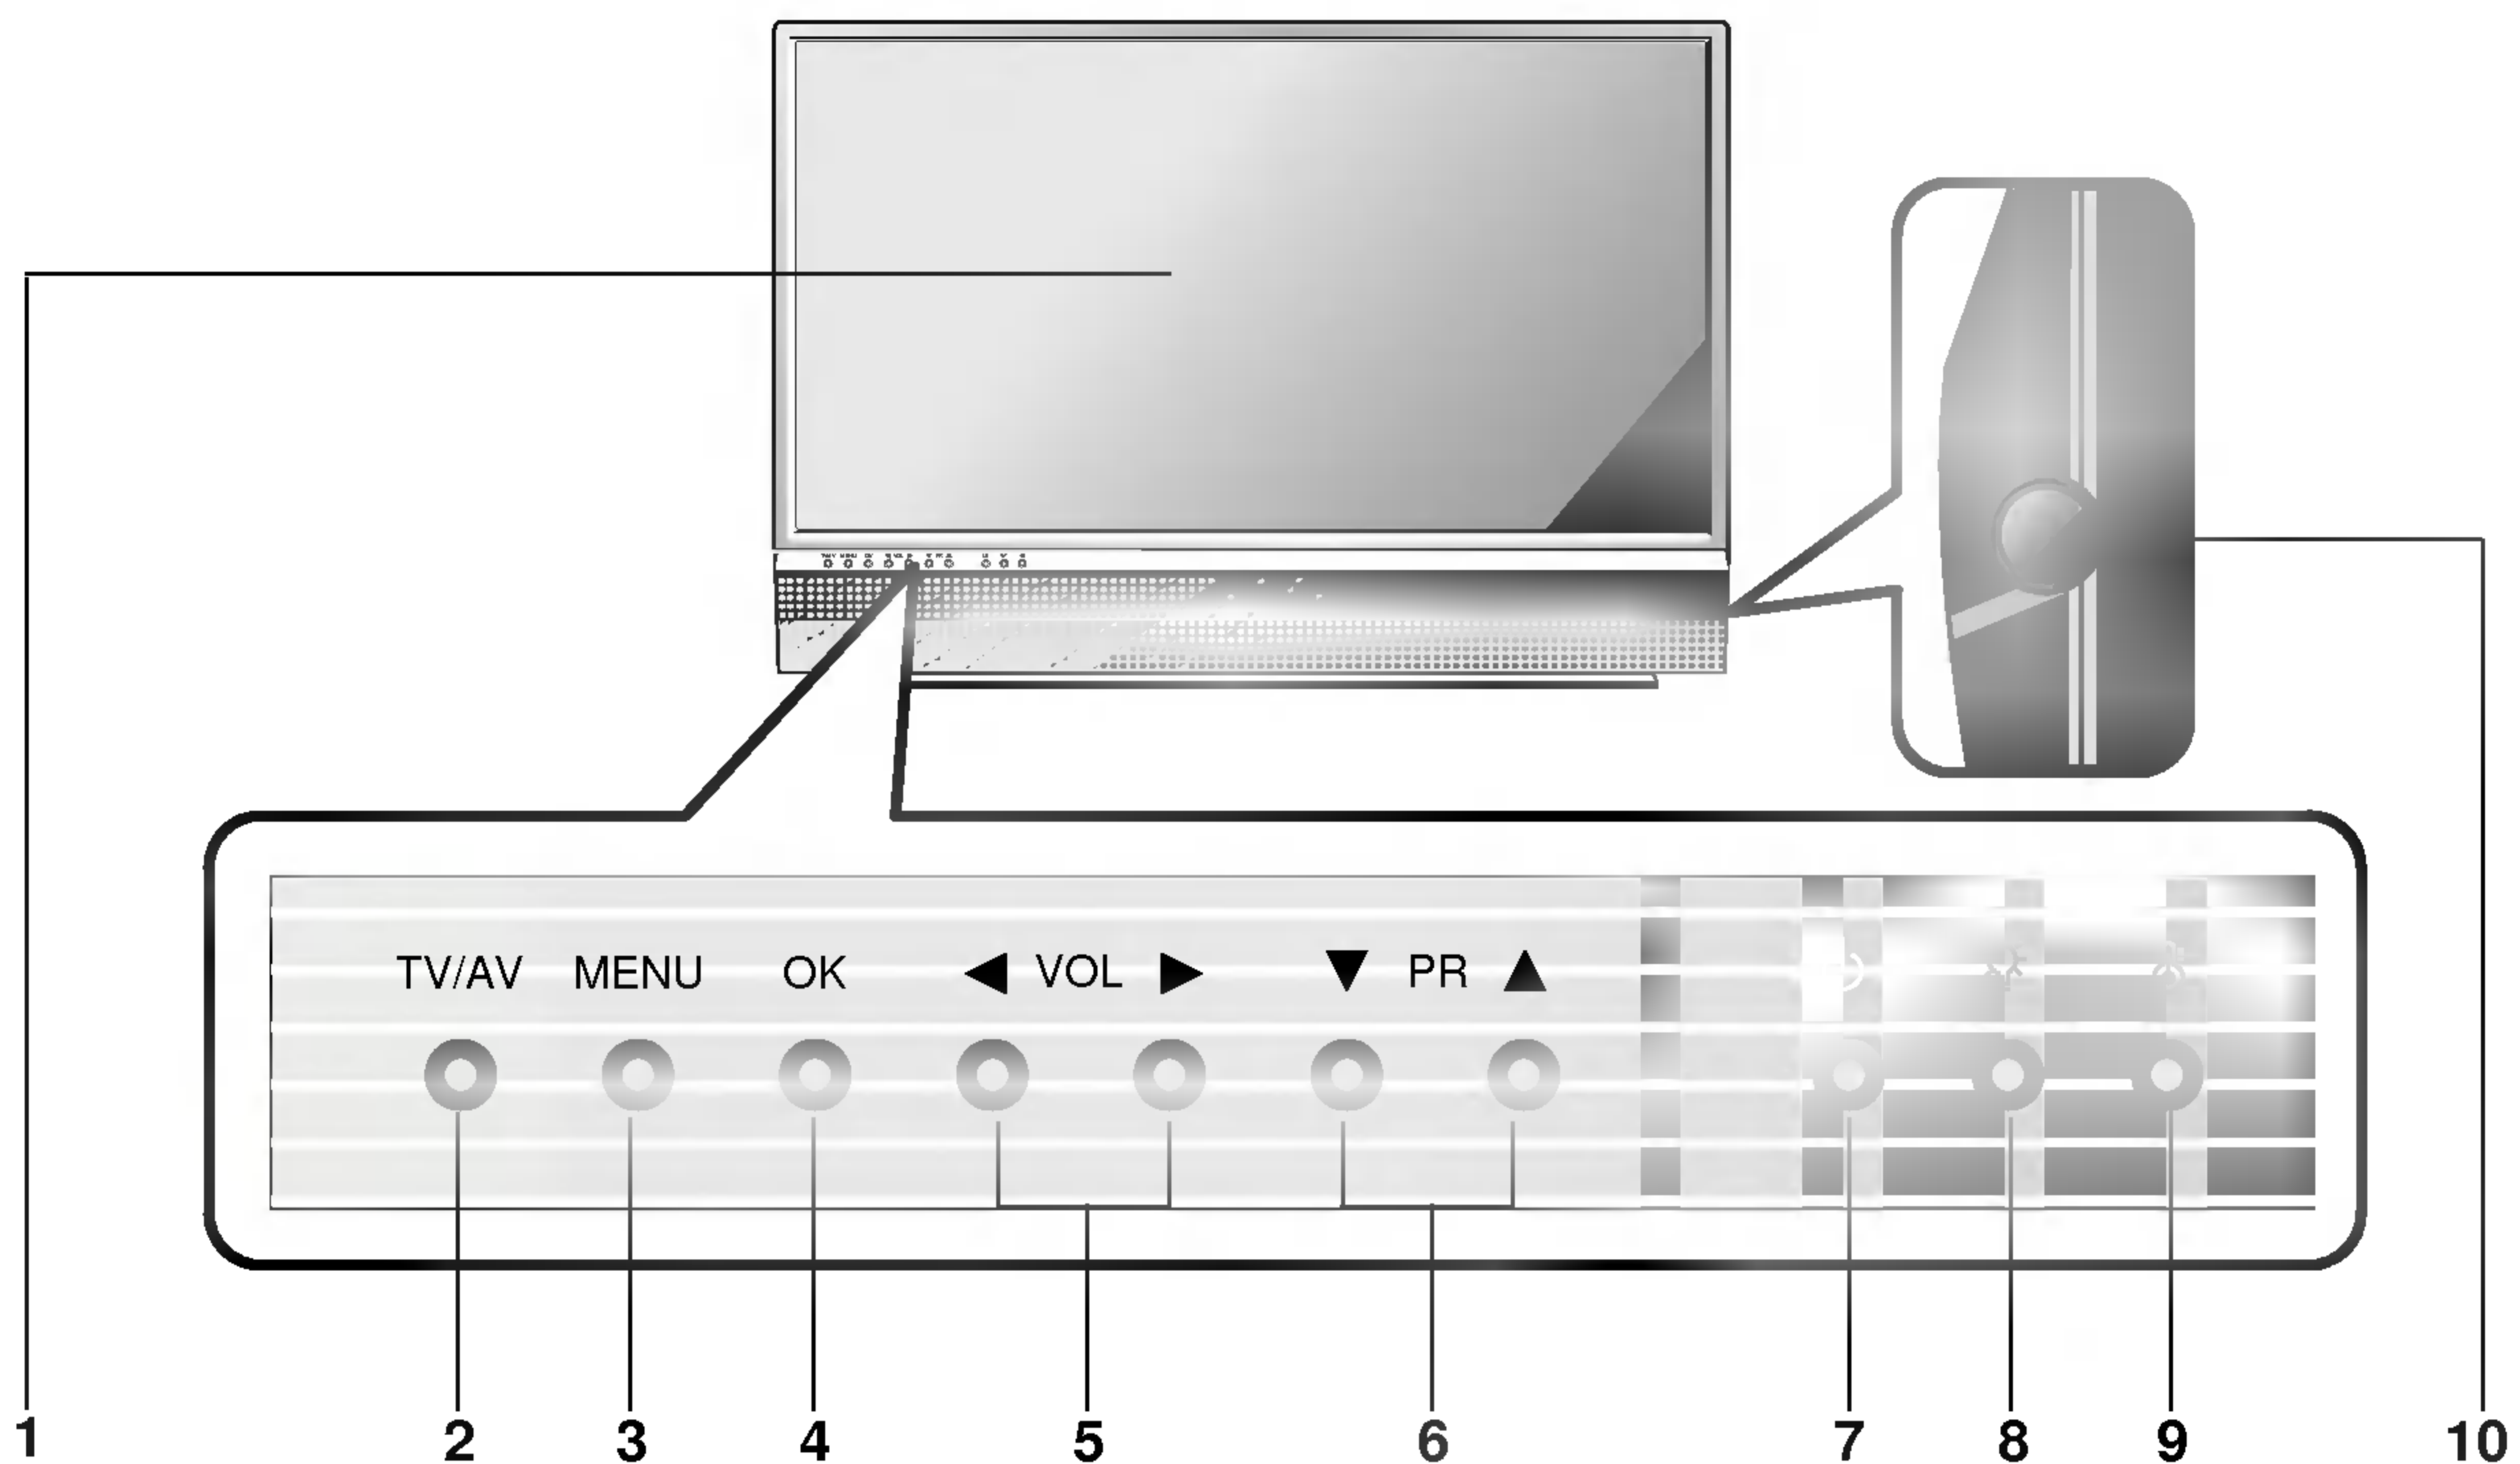

1. REMOTE CONTROL SENSOR

2. TV/AV

selects the remote operating mode.
switches the set on from standby.

3. MENU

selects a menu.

4. OK

accepts your selection or displays the current mode.

5. ◀ / ▶ (Volume Down/Up)

adjusts the volume.
adjusts menu settings.

6. ▲ / ▼ (Programme Up/Down)

selects a programme or a menu item.
switches the set on from standby.

7. OPERATION INDICATOR (Refer to p.7)

8. LAMP INDICATOR (Refer to p.7)

9. TEMPERATURE INDICATOR (Refer to p.7)


10. MAIN POWER (ON/OFF)

switches the set on or off.

Note : There might be a faint white trace on the center of the screen according to the position. This is normal and is a characteristic of the screen.

Location and function of controls

Rear panel

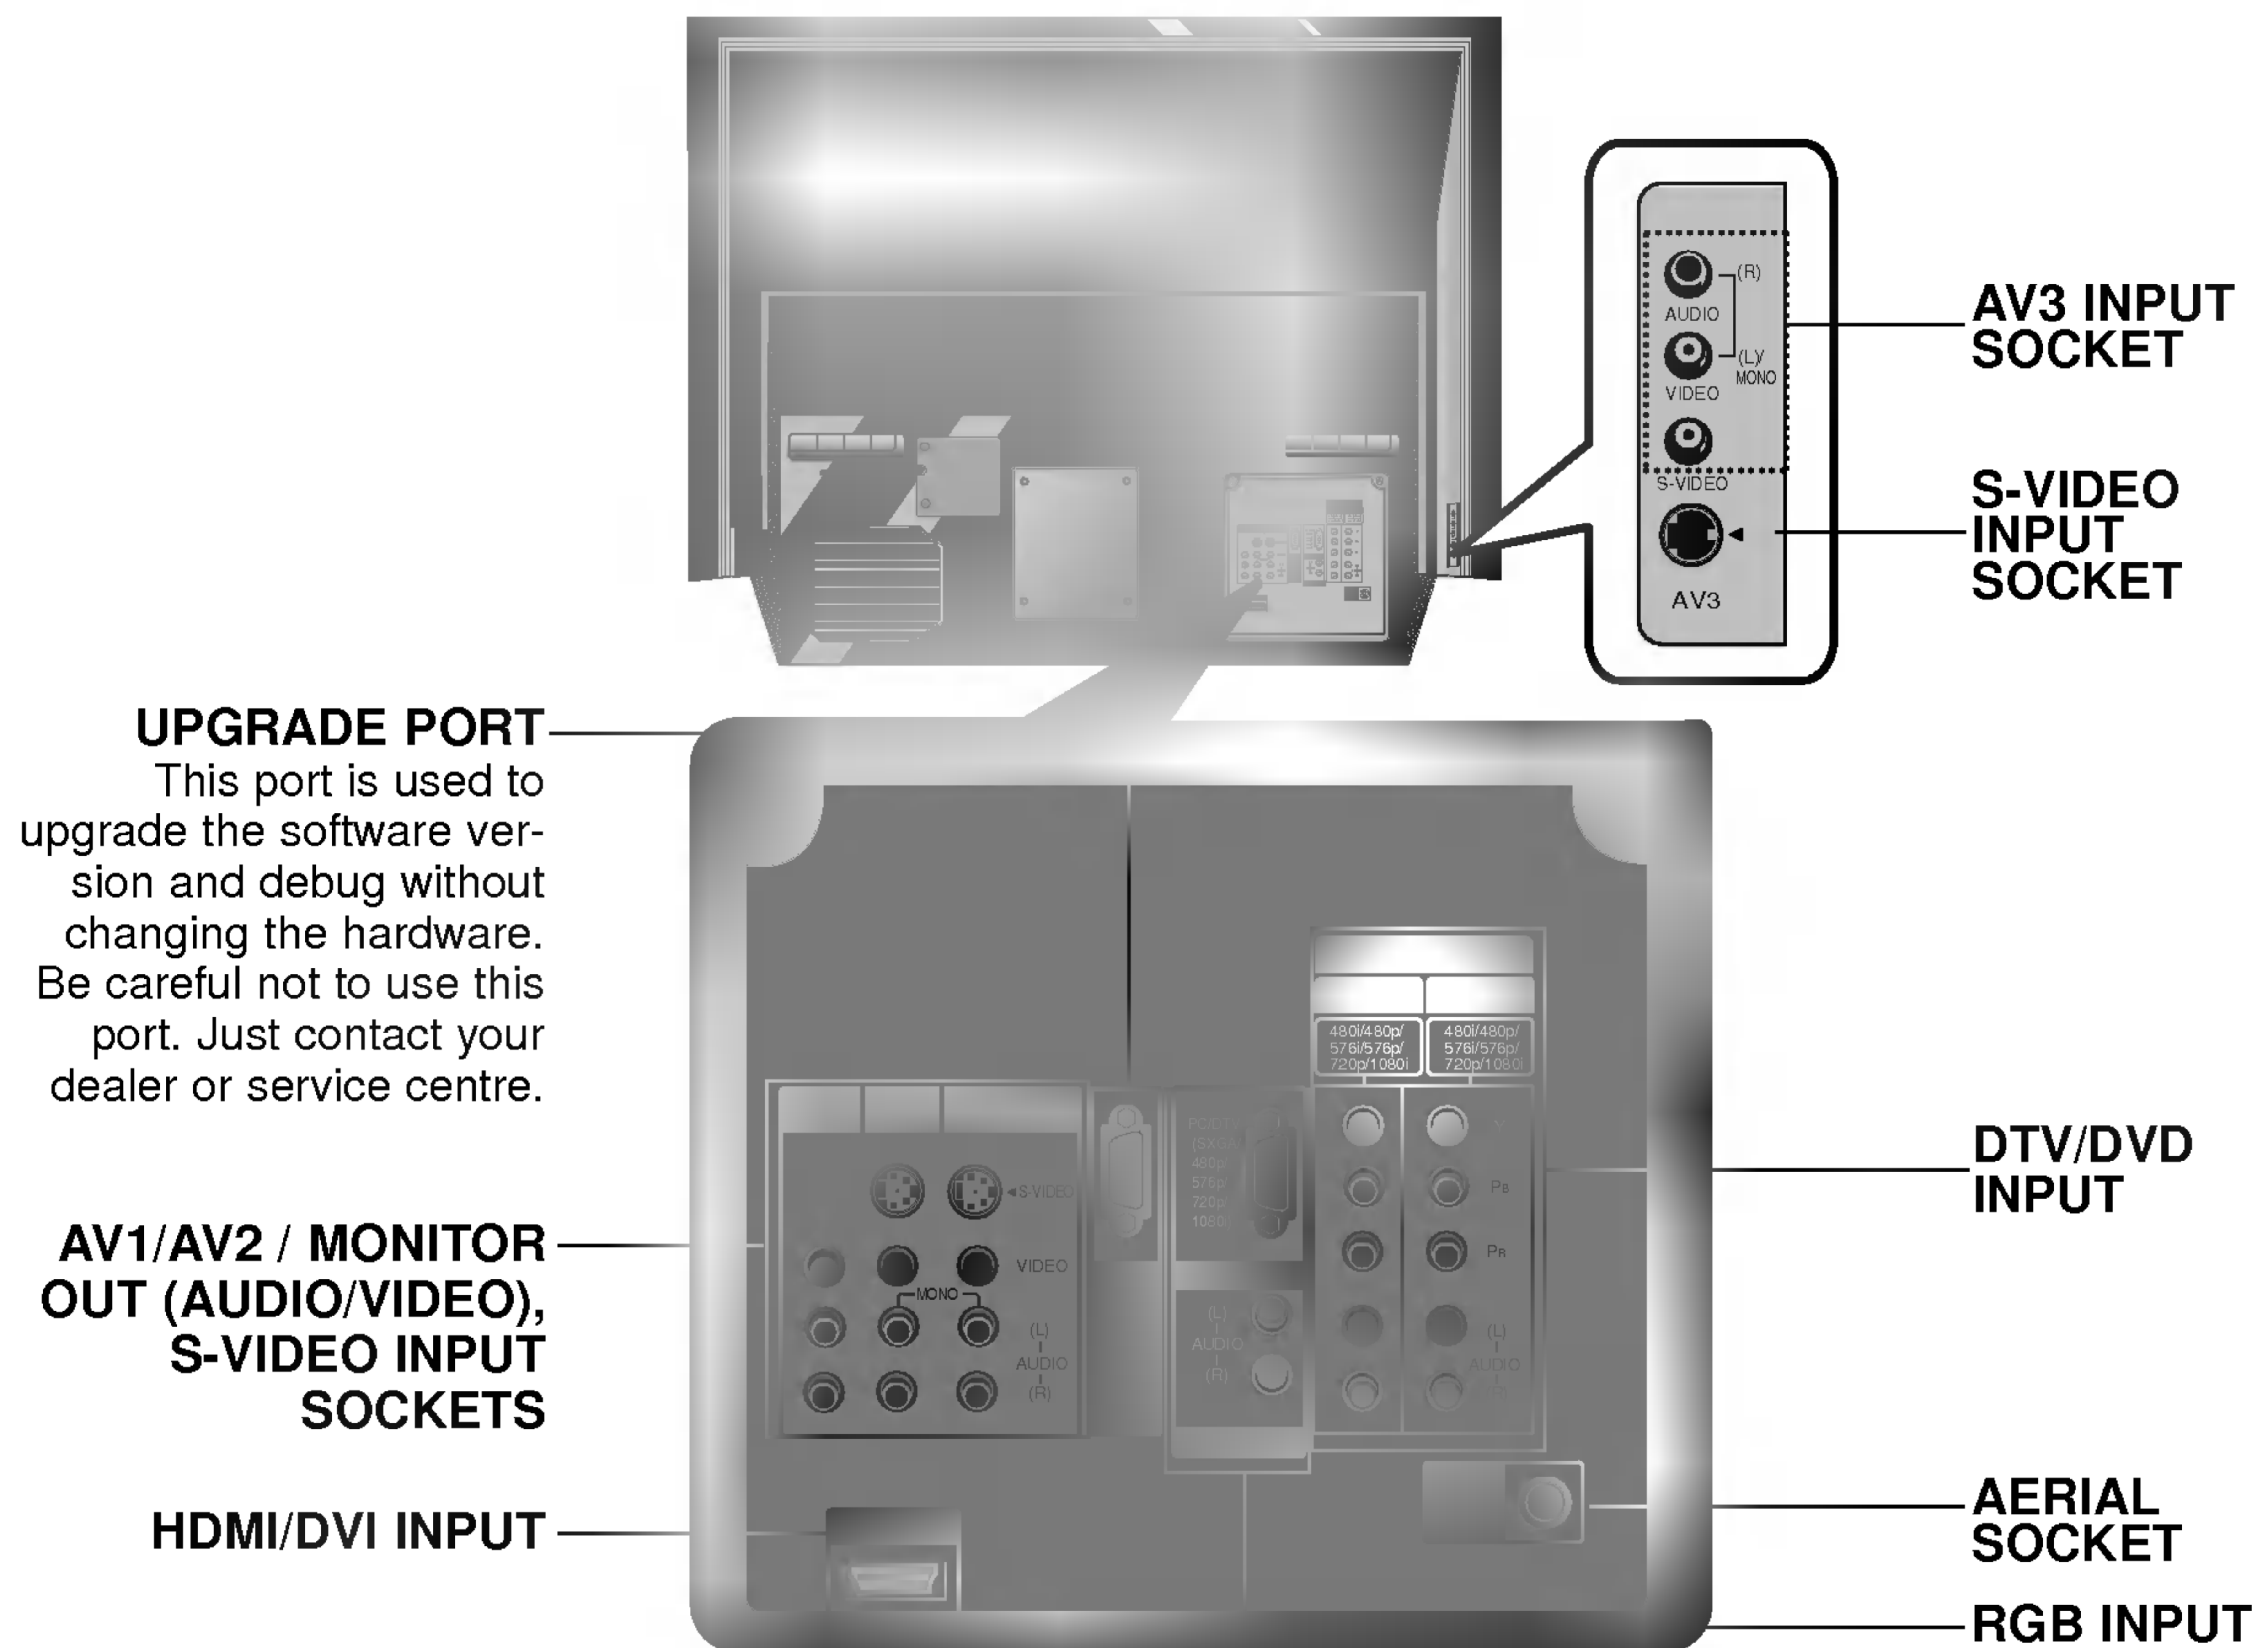

•Status Indicators

Operation Indicator	Off	Power cord is not connected or power switch is off
	Red	Power Cord is connected, unit is on standby.
	Green	On
	Orange (flashing)	Preparing operation in standby.
Lamp Indicator	Orange	Projection lamp is reaching the end of its life and needs to be replaced with a new lamp.
	Red (flashing)	There is a problem with the lamp or around it. Contact an authorized service center.
	Red	Lamp life over.
	Green (flashing)	The lamp cover is not closed.
Temperature Indicator	Red	The set has shut down due to overheating. After viewing the phrase "Thermal High Error"
	Red (flashing)	The set has shut down, check the cooling fan.
	Orange	Thermal warning.


Basic Operation

On and off

1. Before turning the set on, be sure that the main power switch on the set is pushed on.
When the main switch is pushed on, the LED will be lit up red. This mode is Stand-by.
2. If the set is in stand-by mode, press the **POWER**, **▲ / ▼**, **TV/AV**, **MULTIMEDIA** or **NUMBER** button on the remote control handset to turn it on fully. The LED will blink orange for a while and then lit up green when the power is successfully on.
3. To turn the set off, press the power button on the remote control handset. The set reverts to the stand-by mode.

Note :

- a. The lamp cooling fan will continue to spin for approximately 120 seconds after the power is turned off by the remote control handset.
- b. Normally, don't push off the main power switch. Instead, use the remote control to turn the power off.
- c. When the set is turned on again immediately after turning off, it takes around 20 to 40 seconds for sufficient cooling.
- d. When the power is switched off using the main power switch on the set, the internal cooling system also stops operating. Therefore, power-on by main power switch takes around 30 to 50 seconds for sufficient cooling.
- e. **Forced Power-Off** : When the set decides itself that the circumstance is not proper for operation, the set will go to the stand-by mode automatically. Please retry to turn on the set after a short period of time.
- f. When the set is switched on, there might be a strange sound from the set.

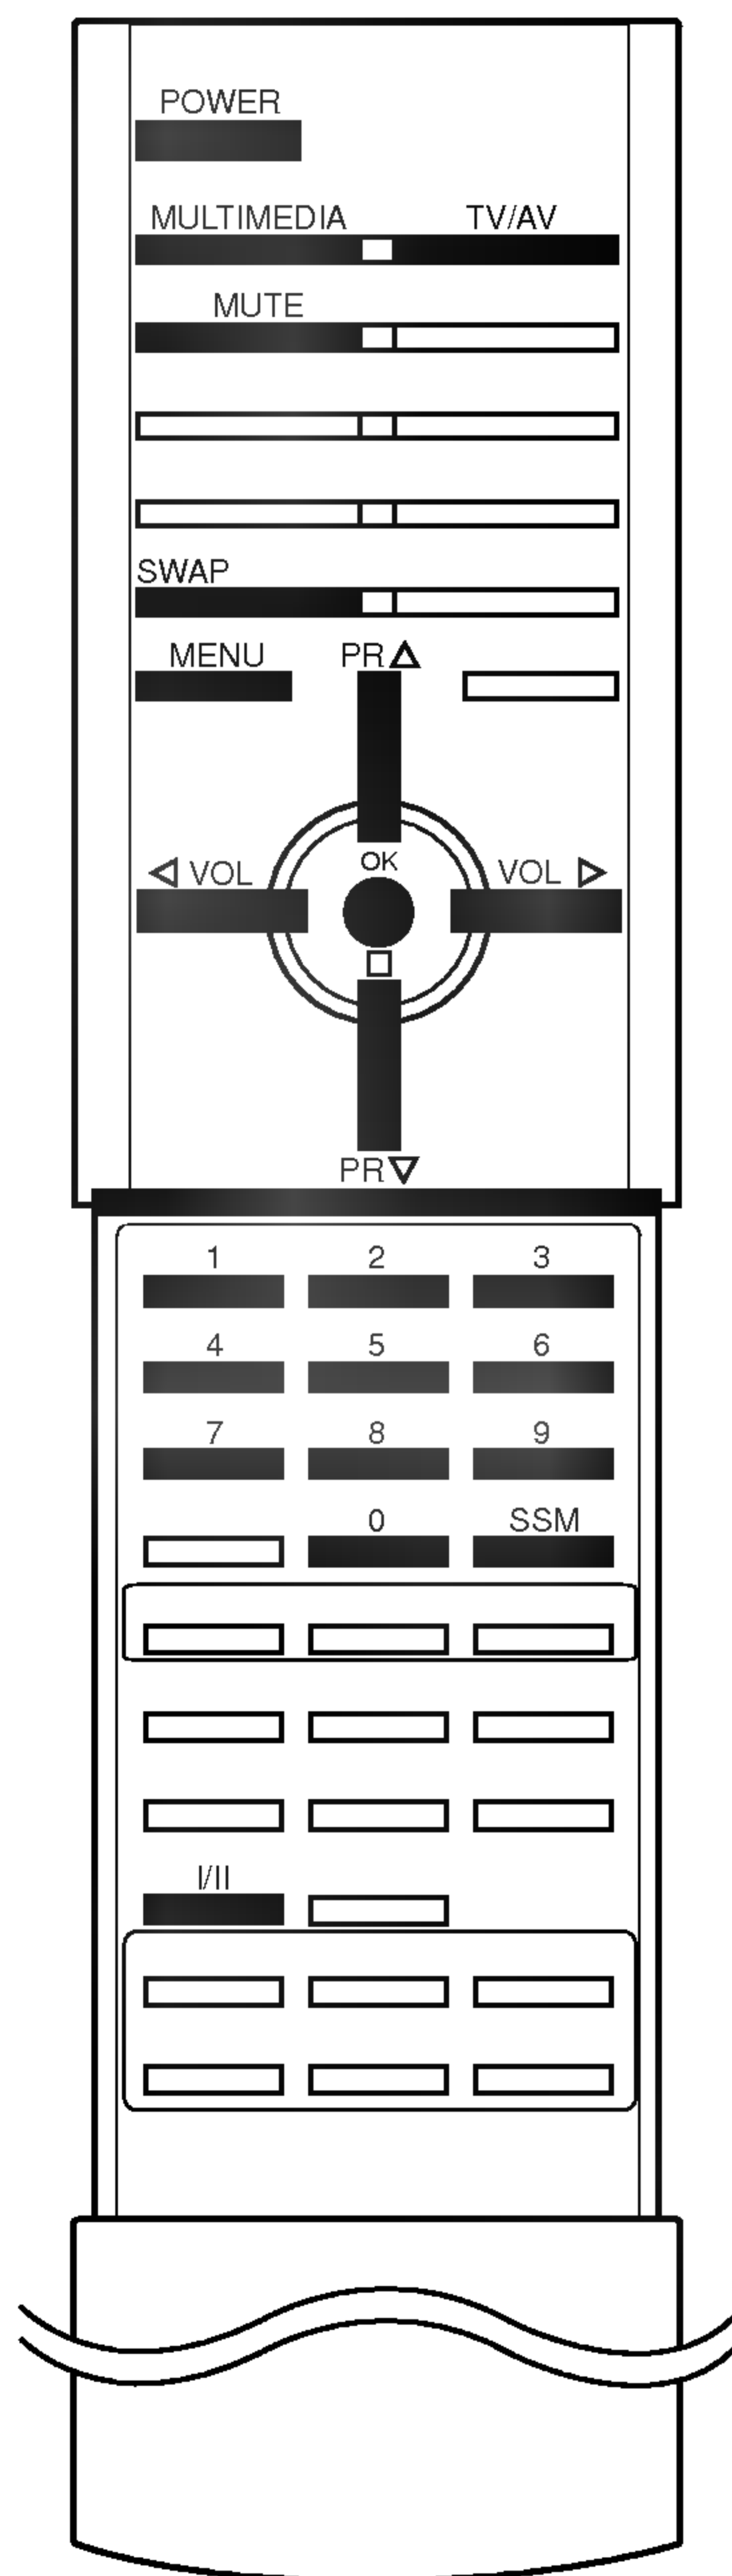

Programme selection

You can select a programme number with the **▲ / ▼** or **NUMBER** buttons.

Volume adjustment

Press the **◀ / ▶** button to adjust the volume.

Quick view

Press the **SWAP** button to view the last programme you were watching.

Note : This function works only when **Favourite programme** is set to **Off**. Otherwise each press of this button will select a stored favourite programme.

Mute function

Press the **MUTE** button. The sound is switched off and the display **Mute** appears.

You can cancel it by pressing the **MUTE**, **◀ / ▶**, **SSM**, **I/II** button.

On screen language selection (option)

The menu can be displayed on the screen in desired language. First select your language.

1. Press the **MENU** button and then **▲ / ▼** button to select the **SPECIAL** menu.
 2. Press the **▶** button and then the **▲ / ▼** button to select **Language**.
 3. Press the **▶** button and then the **▲ / ▼** button to select your desired language.
 4. Press the **OK** or **◀** button.
All the on screen displays will appear in the selected language.
 5. Repeatedly press the **MENU** button to return to normal TV viewing.
-

On Screen Menus


The dialogue between you and your set takes place on screen with an operator menu. The buttons required for the operating steps are also displayed.

Menu selection

1. Press the **MENU** button and then ▲ / ▼ button to display each menu.
2. Press the ► button and then the ▲ / ▼ button to select a menu item.
3. Repeatedly press the **MENU** button to return to normal TV viewing.

Note :

- a. On some models, the **Language** will not be display.

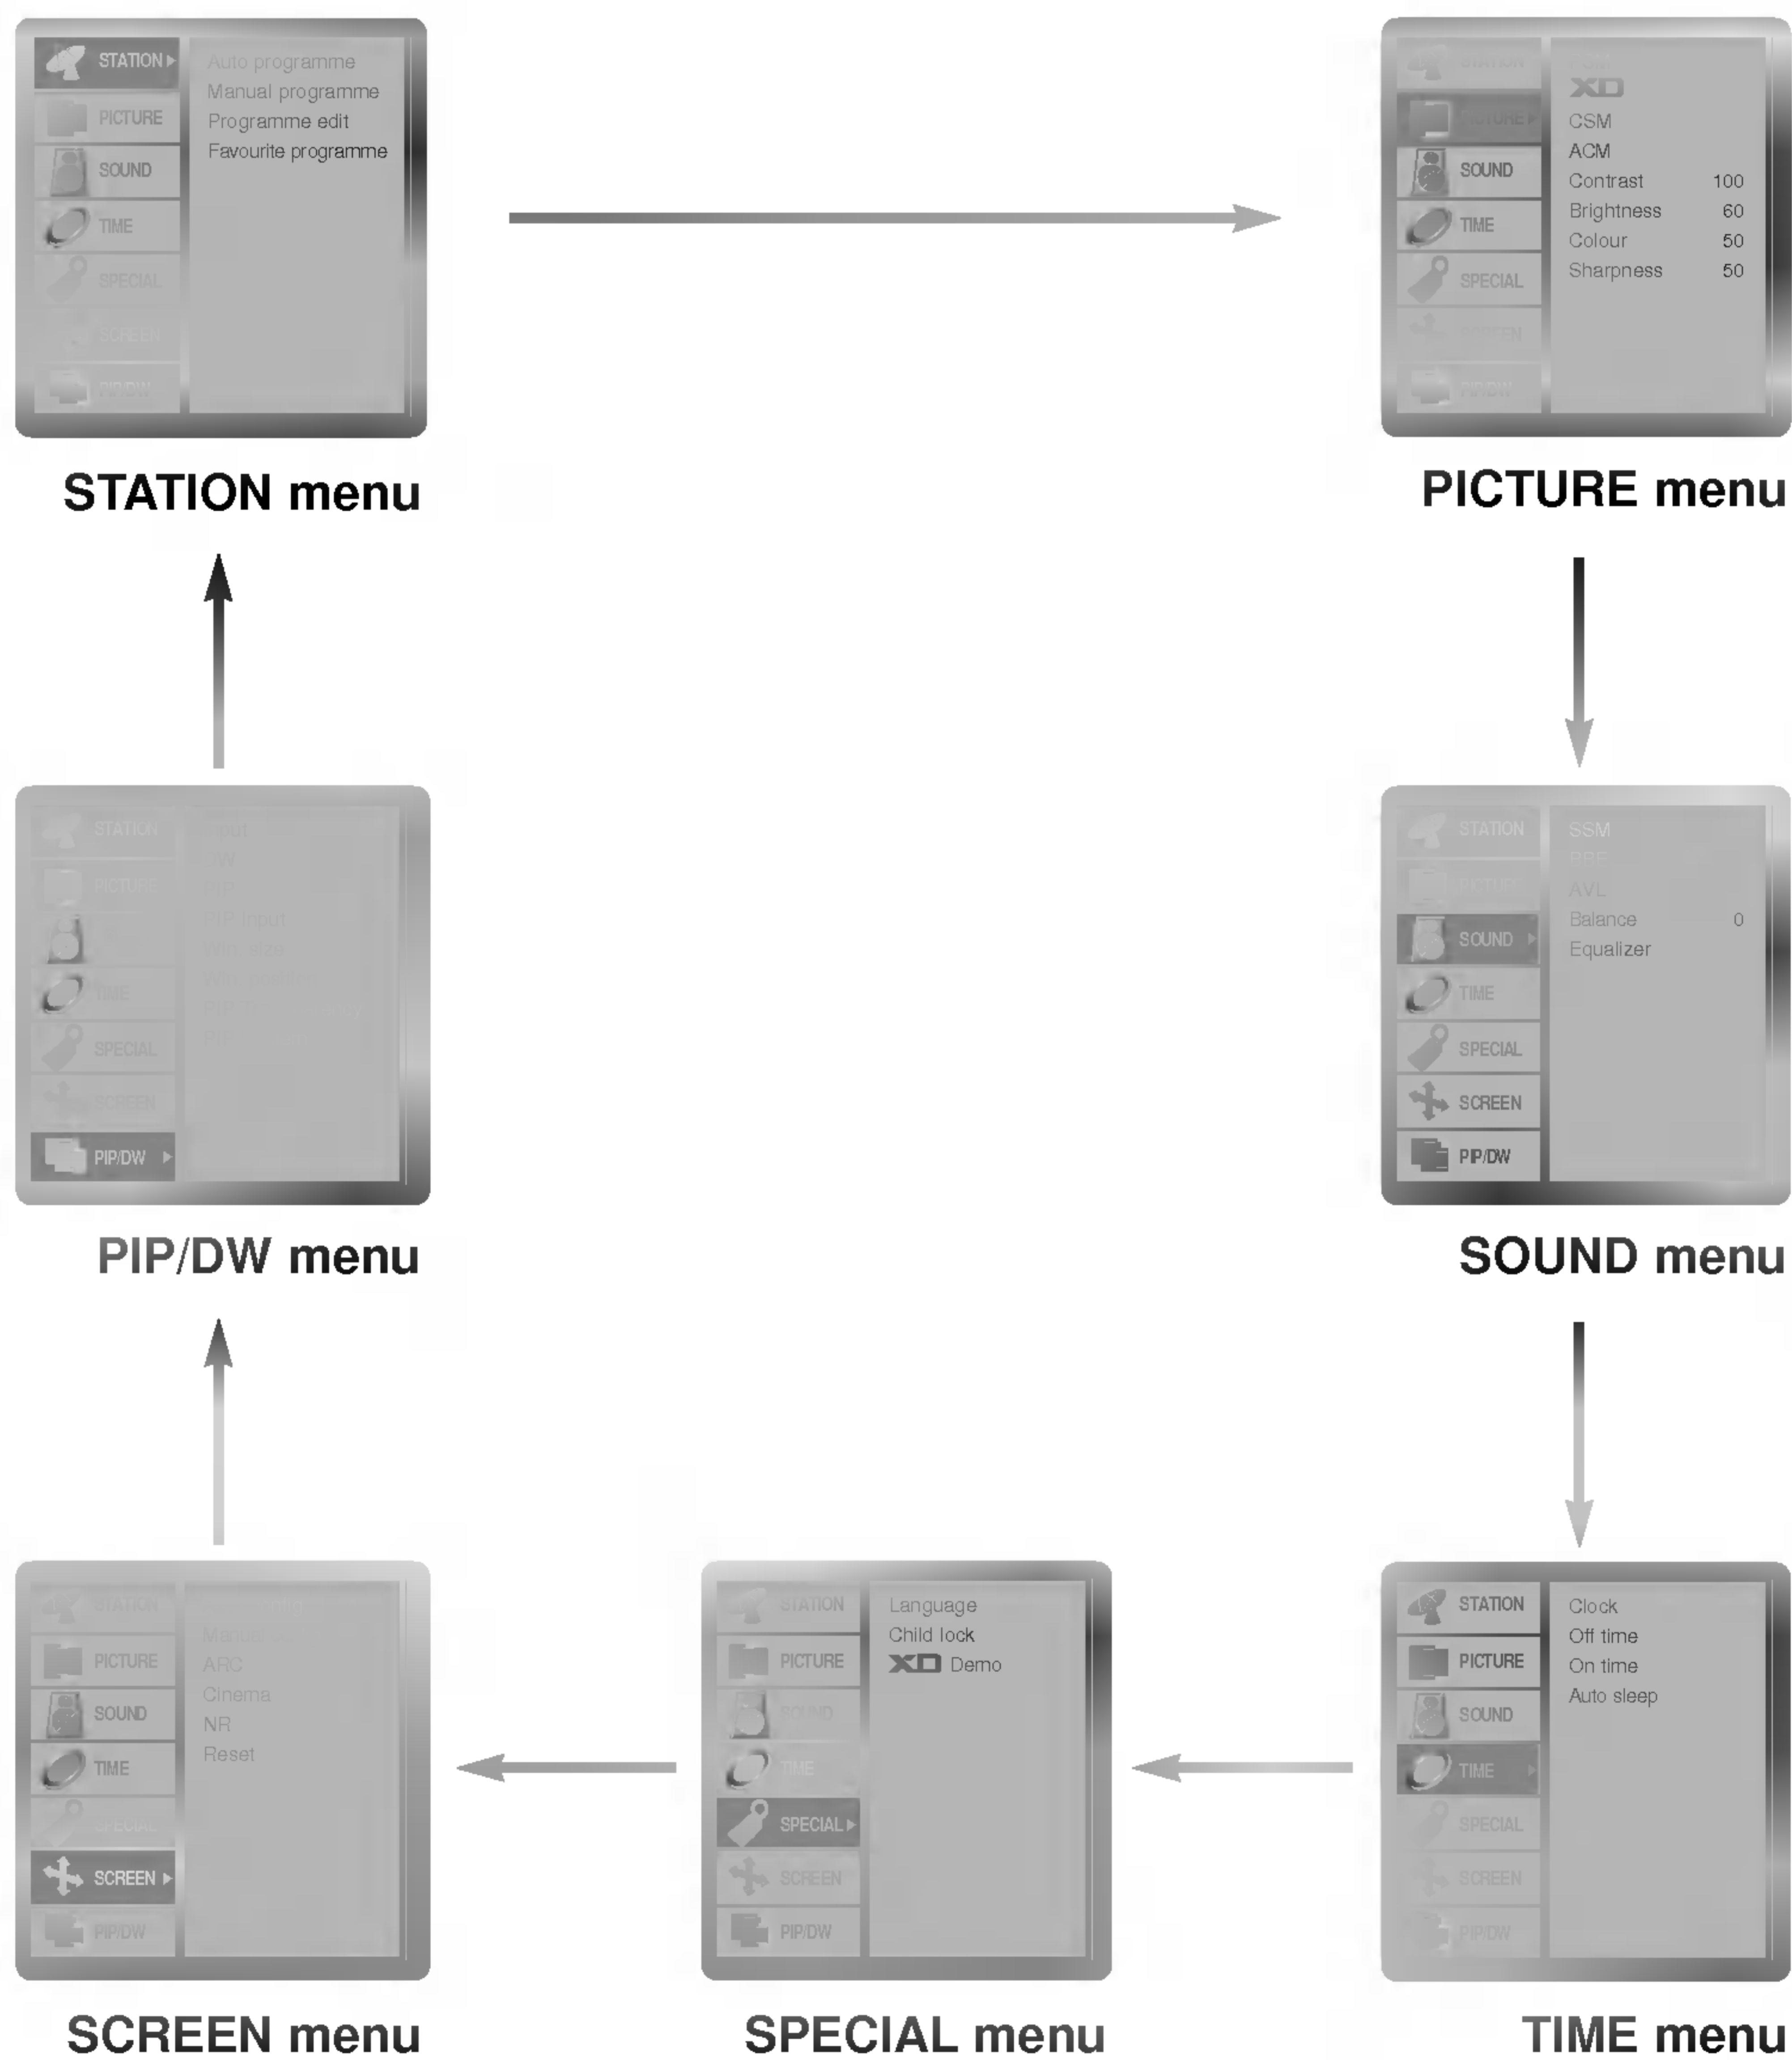

STATION MENU



Up to 100 TV stations can be stored in this set by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the ▲ / ▼ or NUMBER buttons to scan the stations you programmed.



Stations can be tuned using automatic or manual modes.

Note : In some models up to 200 TV stations can be stored.

Auto programme tuning

All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

1. Press the **MENU** button and then ▲ / ▼ button to select the **STATION** menu.
2. Press the ► button and then ▲ / ▼ button to select **Auto programme**.
3. Press the ► button to select **System**. Select a TV system with the ◀ / ▶ button;

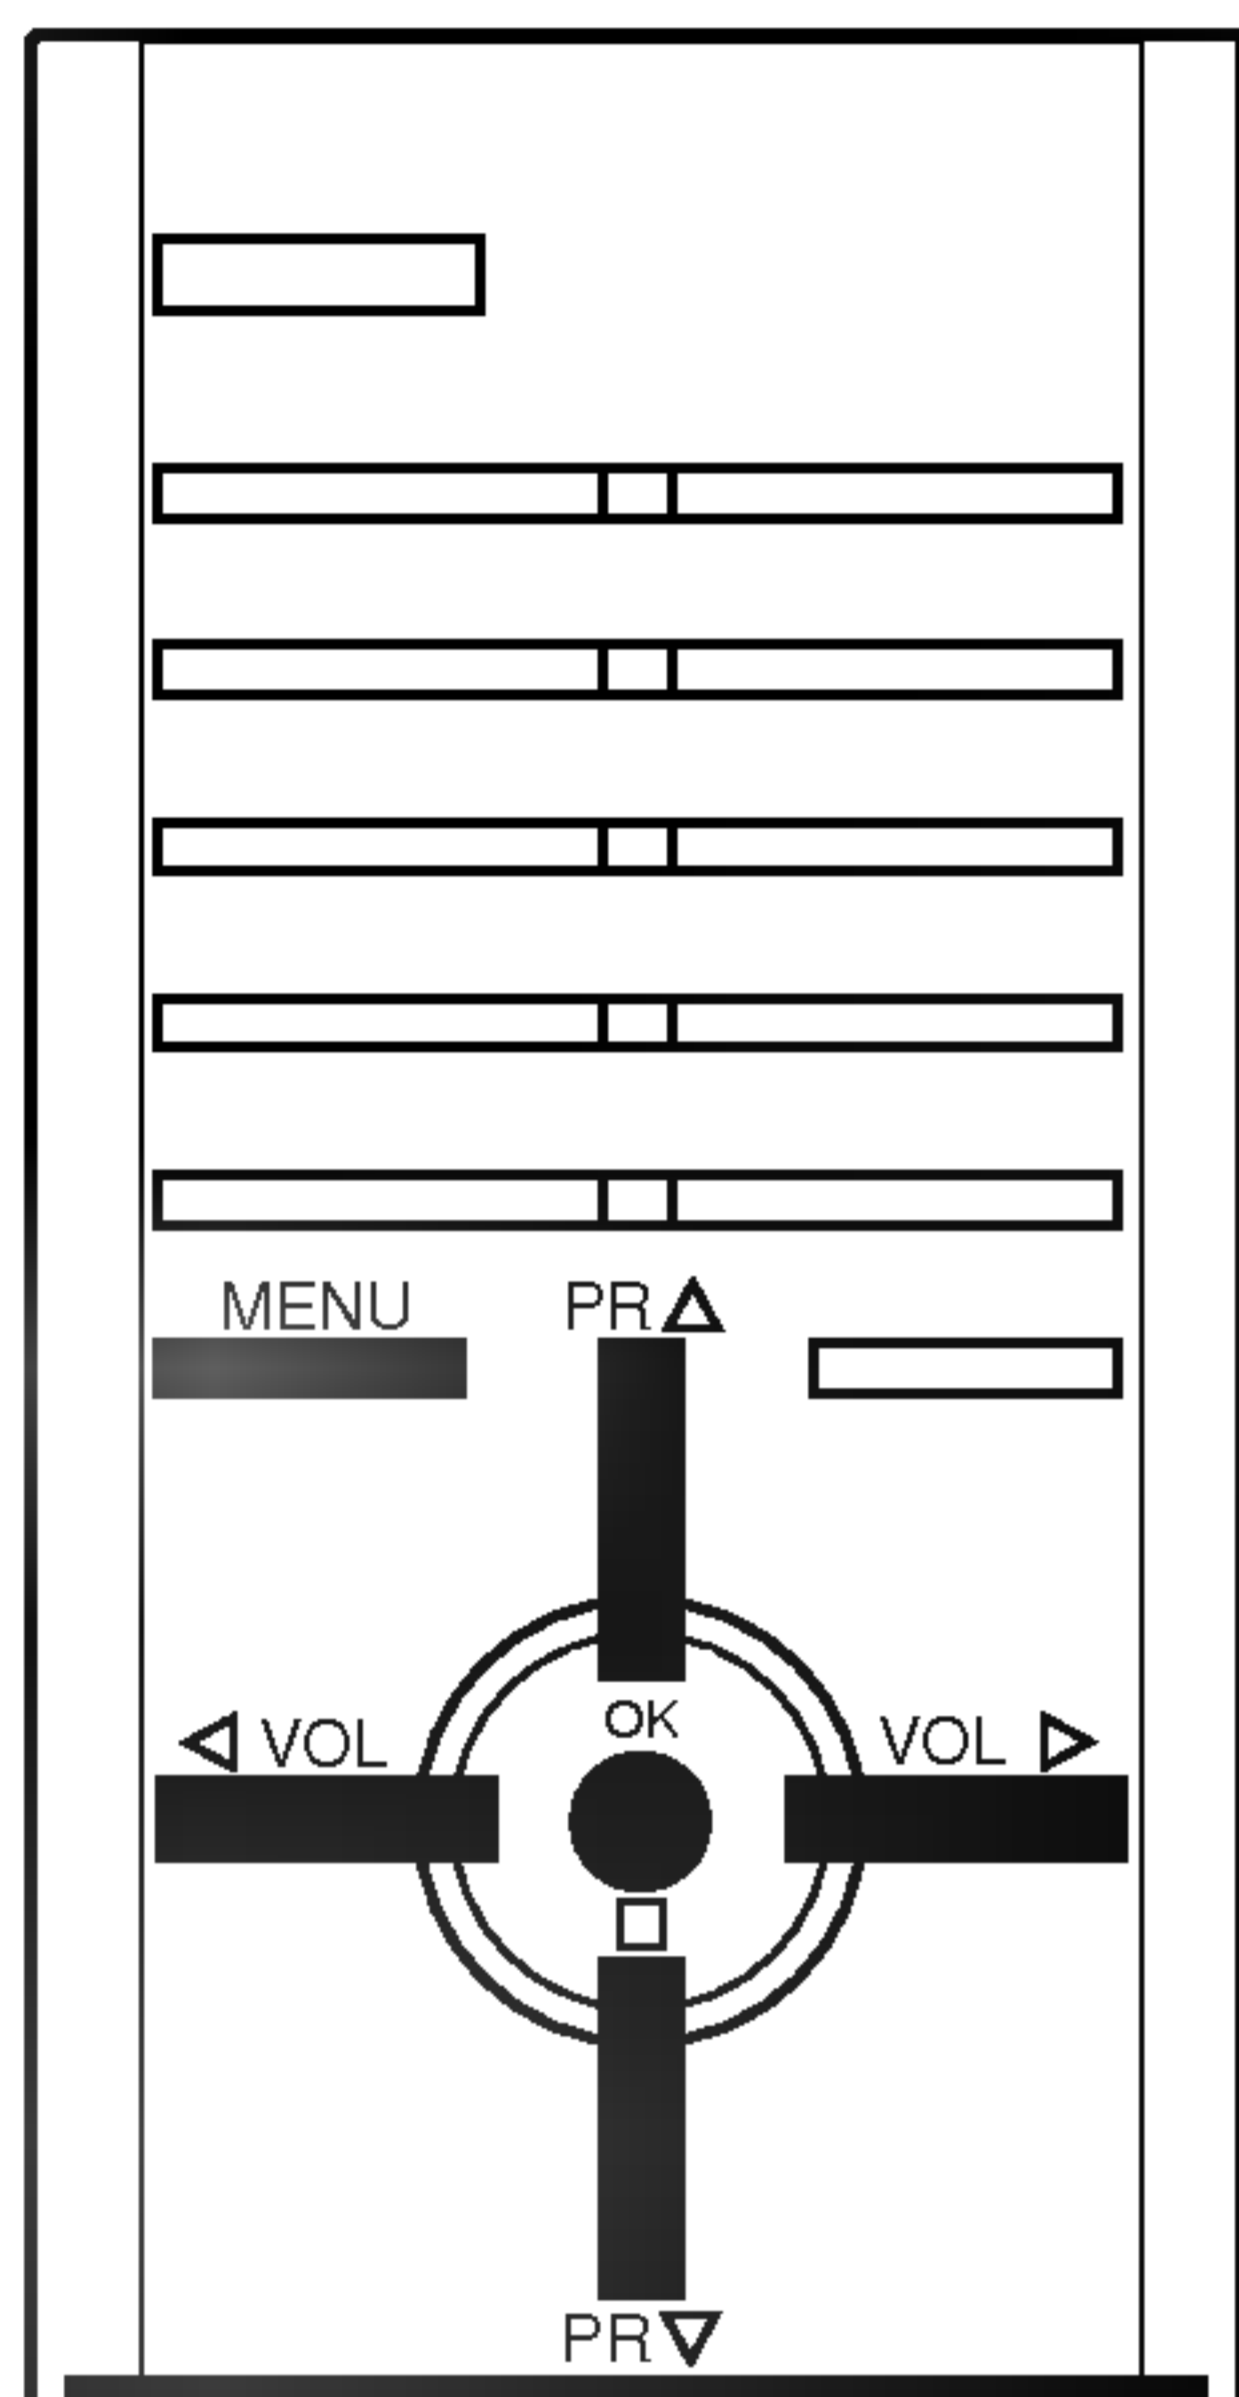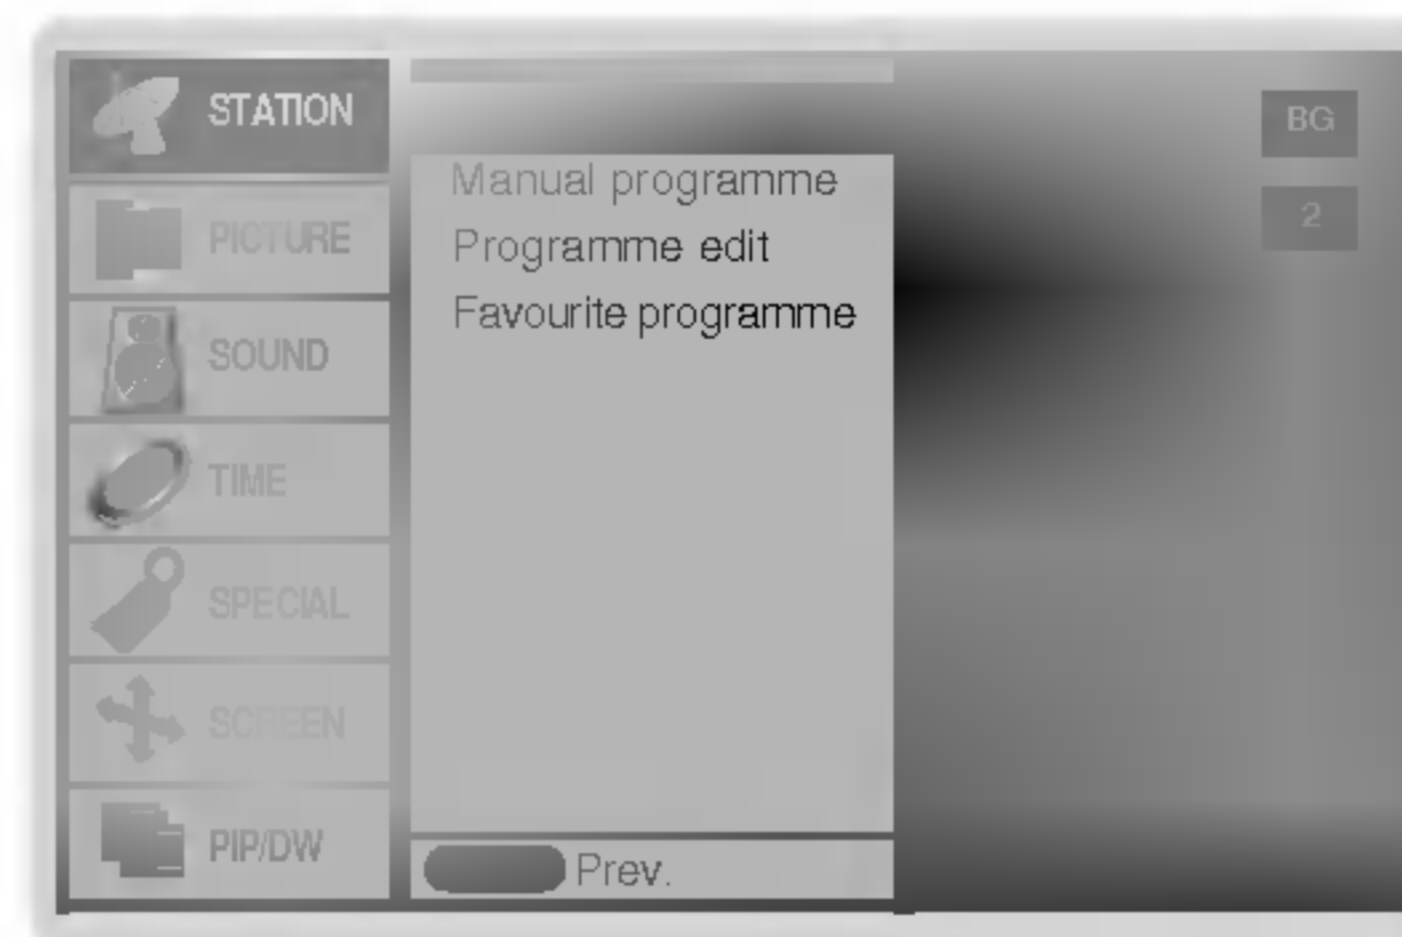

BG : (Asia/New Zealand/M.East/Africa/Australia)

I : (Hong Kong/South Africa)

DK : (East Europe/China/Africa/CIS)

M : (USA/Korea/Philippines) (option)


4. Press the ▼ button to select **Storage from**. Select the beginning programme number with the ◀ / ▶ button or NUMBER buttons on the **Storage from** menu.
5. Press the ▼ button to select **Start**.
6. Press the ► button to begin auto programming. All receivable stations are stored.



To stop auto programming, press the **MENU** button.

When auto programming is completed, the **Programme edit** menu appears on the screen. See the 'Programme edit' section to edit the stored programme.

7. Repeatedly press the **MENU** button to return to normal TV viewing.

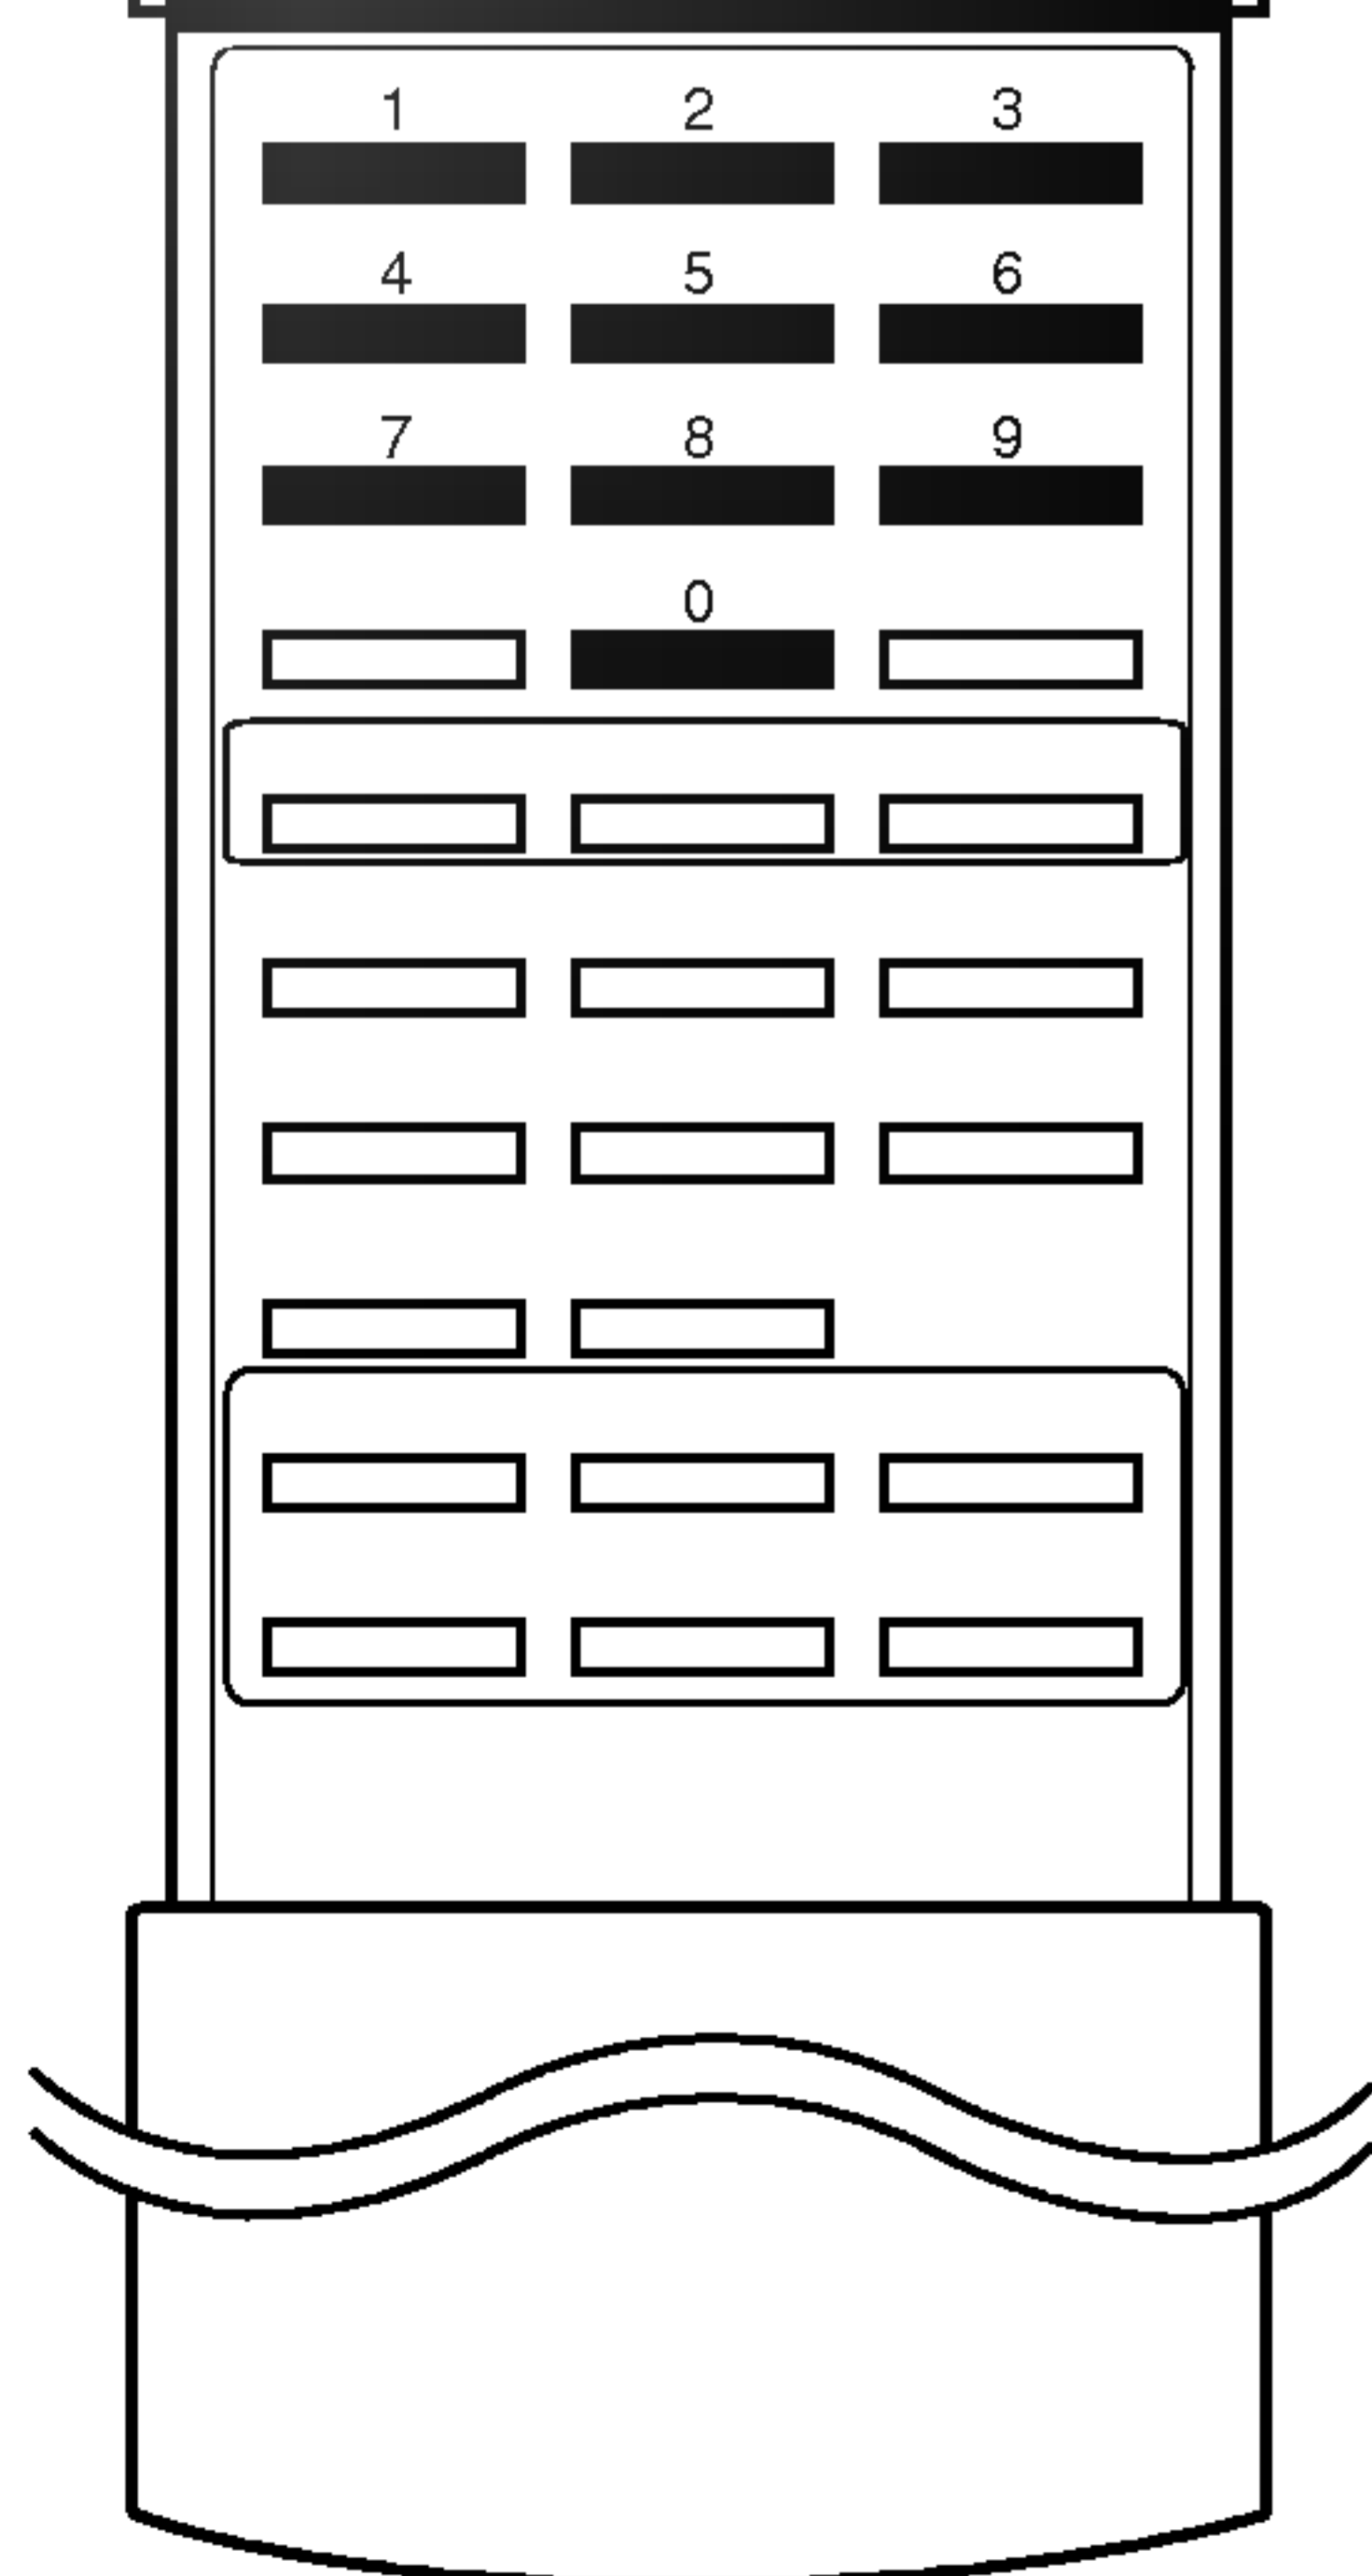

STATION MENU


Manual programme tuning

Manual programme lets you manually tune and arrange the stations in whatever order you desire. Also you can assign a station name with five characters to each programme number.

1. Press the **MENU** button and then ▲ / ▼ button to select the **STATION** menu.
2. Press the ► button and then ▲ / ▼ button to select **Manual programme**.



3. Press the ► button to select **Storage**. Select the beginning programme number with the ◀ / ▶ button or NUMBER buttons on the **Storage** menu.
4. Press the ▼ button to select **System**. Select a TV system with the ◀ / ▶ button;
 - BG** : (Asia/New Zealand/M.East/Africa/Australia)
 - I** : (Hong Kong/South Africa)
 - DK** : (East Europe/China/Africa/CIS)
 - M** : (USA/Korea/Philippines) (option)
5. Press the ▼ button to select **Band**. Press the ◀ / ▶ button to select **V/UHF** or **Cable** as required.
6. Press the ▼ button to select **Channel**. Select the desired channel number with the ◀ / ▶ button or NUMBER buttons. If possible, select the channel number(VHF : 1 to 75, Cable : 2 to 44) directly with the number buttons.
7. Press the ▼ button to select **Search**. Press the ◀ / ▶ button to commence searching. If a station is found the search will stop.
8. Press the **OK** button to store it.
9. To store another station, repeat steps 3 to 8.
10. Repeatedly press the **MENU** button to return to normal TV viewing.

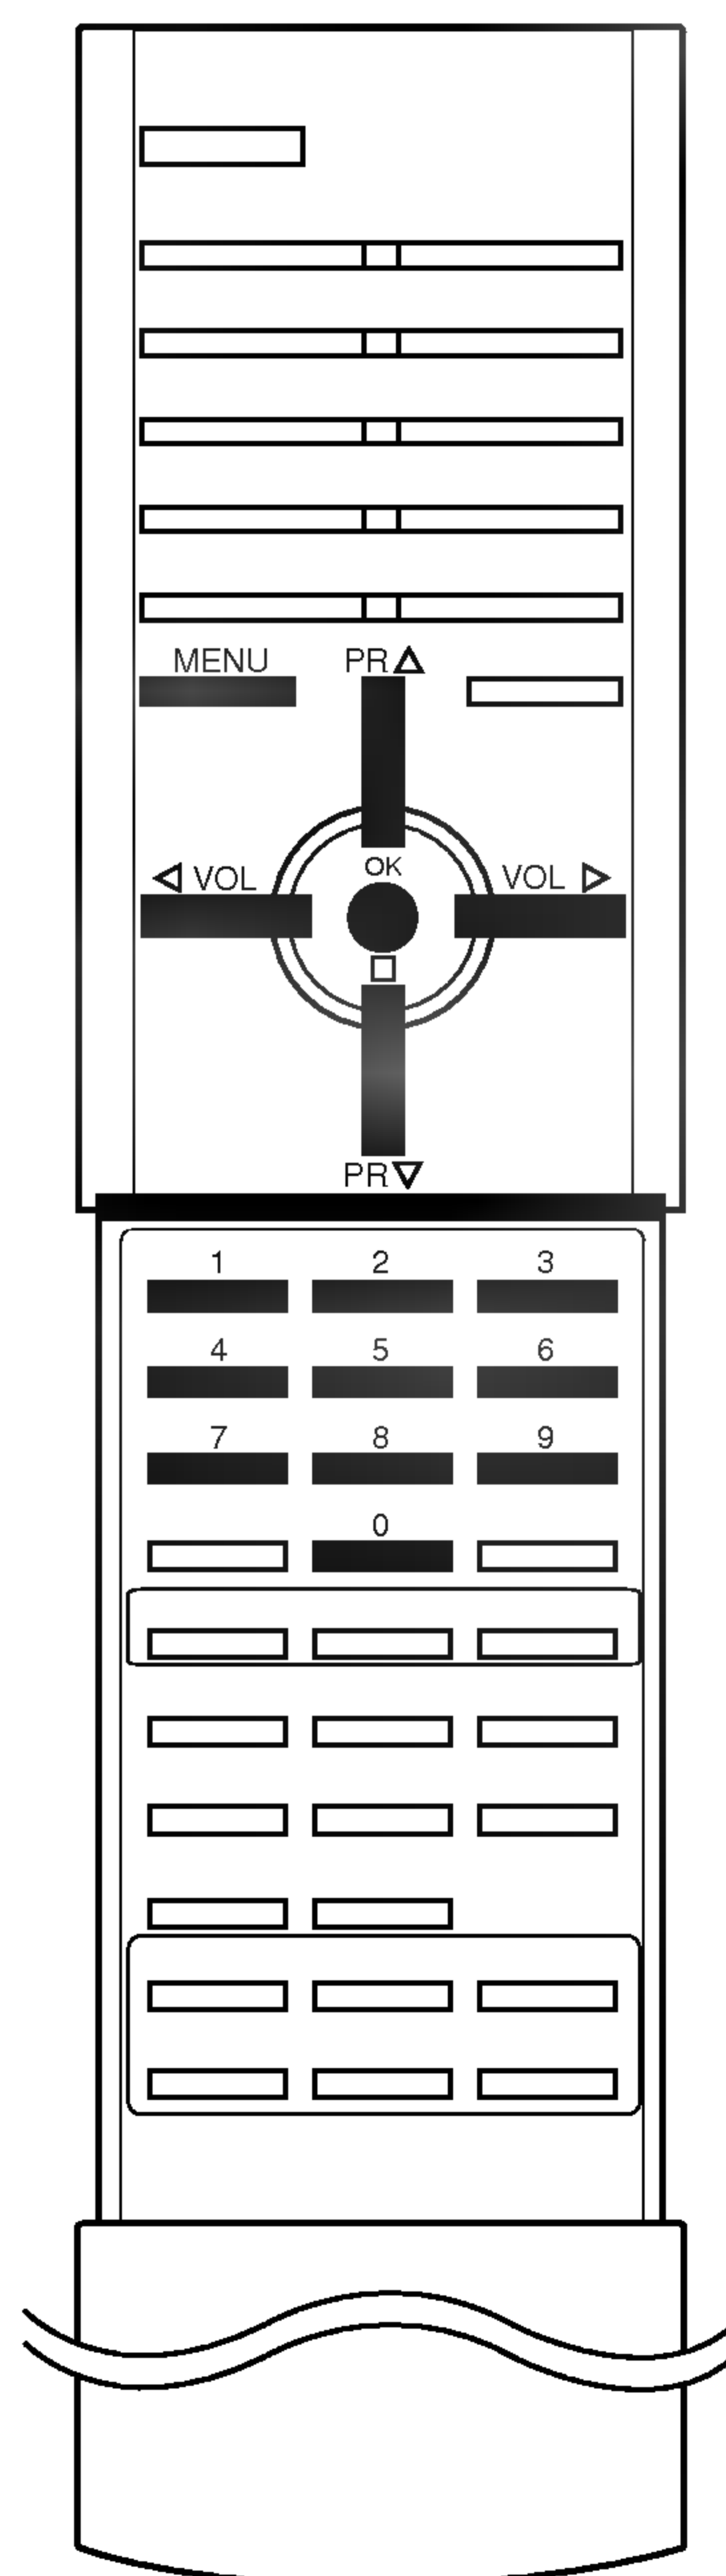


STATION MENU



Assigning a station name

1. Repeat the 'Manual programme tuning' steps 1 to 2.
2. Press the ▼ button to select **Name**.
3. Press the ► button. You can use a blank, +, -, the numeric **0** to **9** and the alphabet **A** to **Z**.
With the ▼ button you can select in the opposite direction.
4. Select the next position by pressing the ► button and then take your choice of the second character, and so on.
5. Press the **OK** button.
6. Repeatedly press the **MENU** button to return to normal TV viewing.

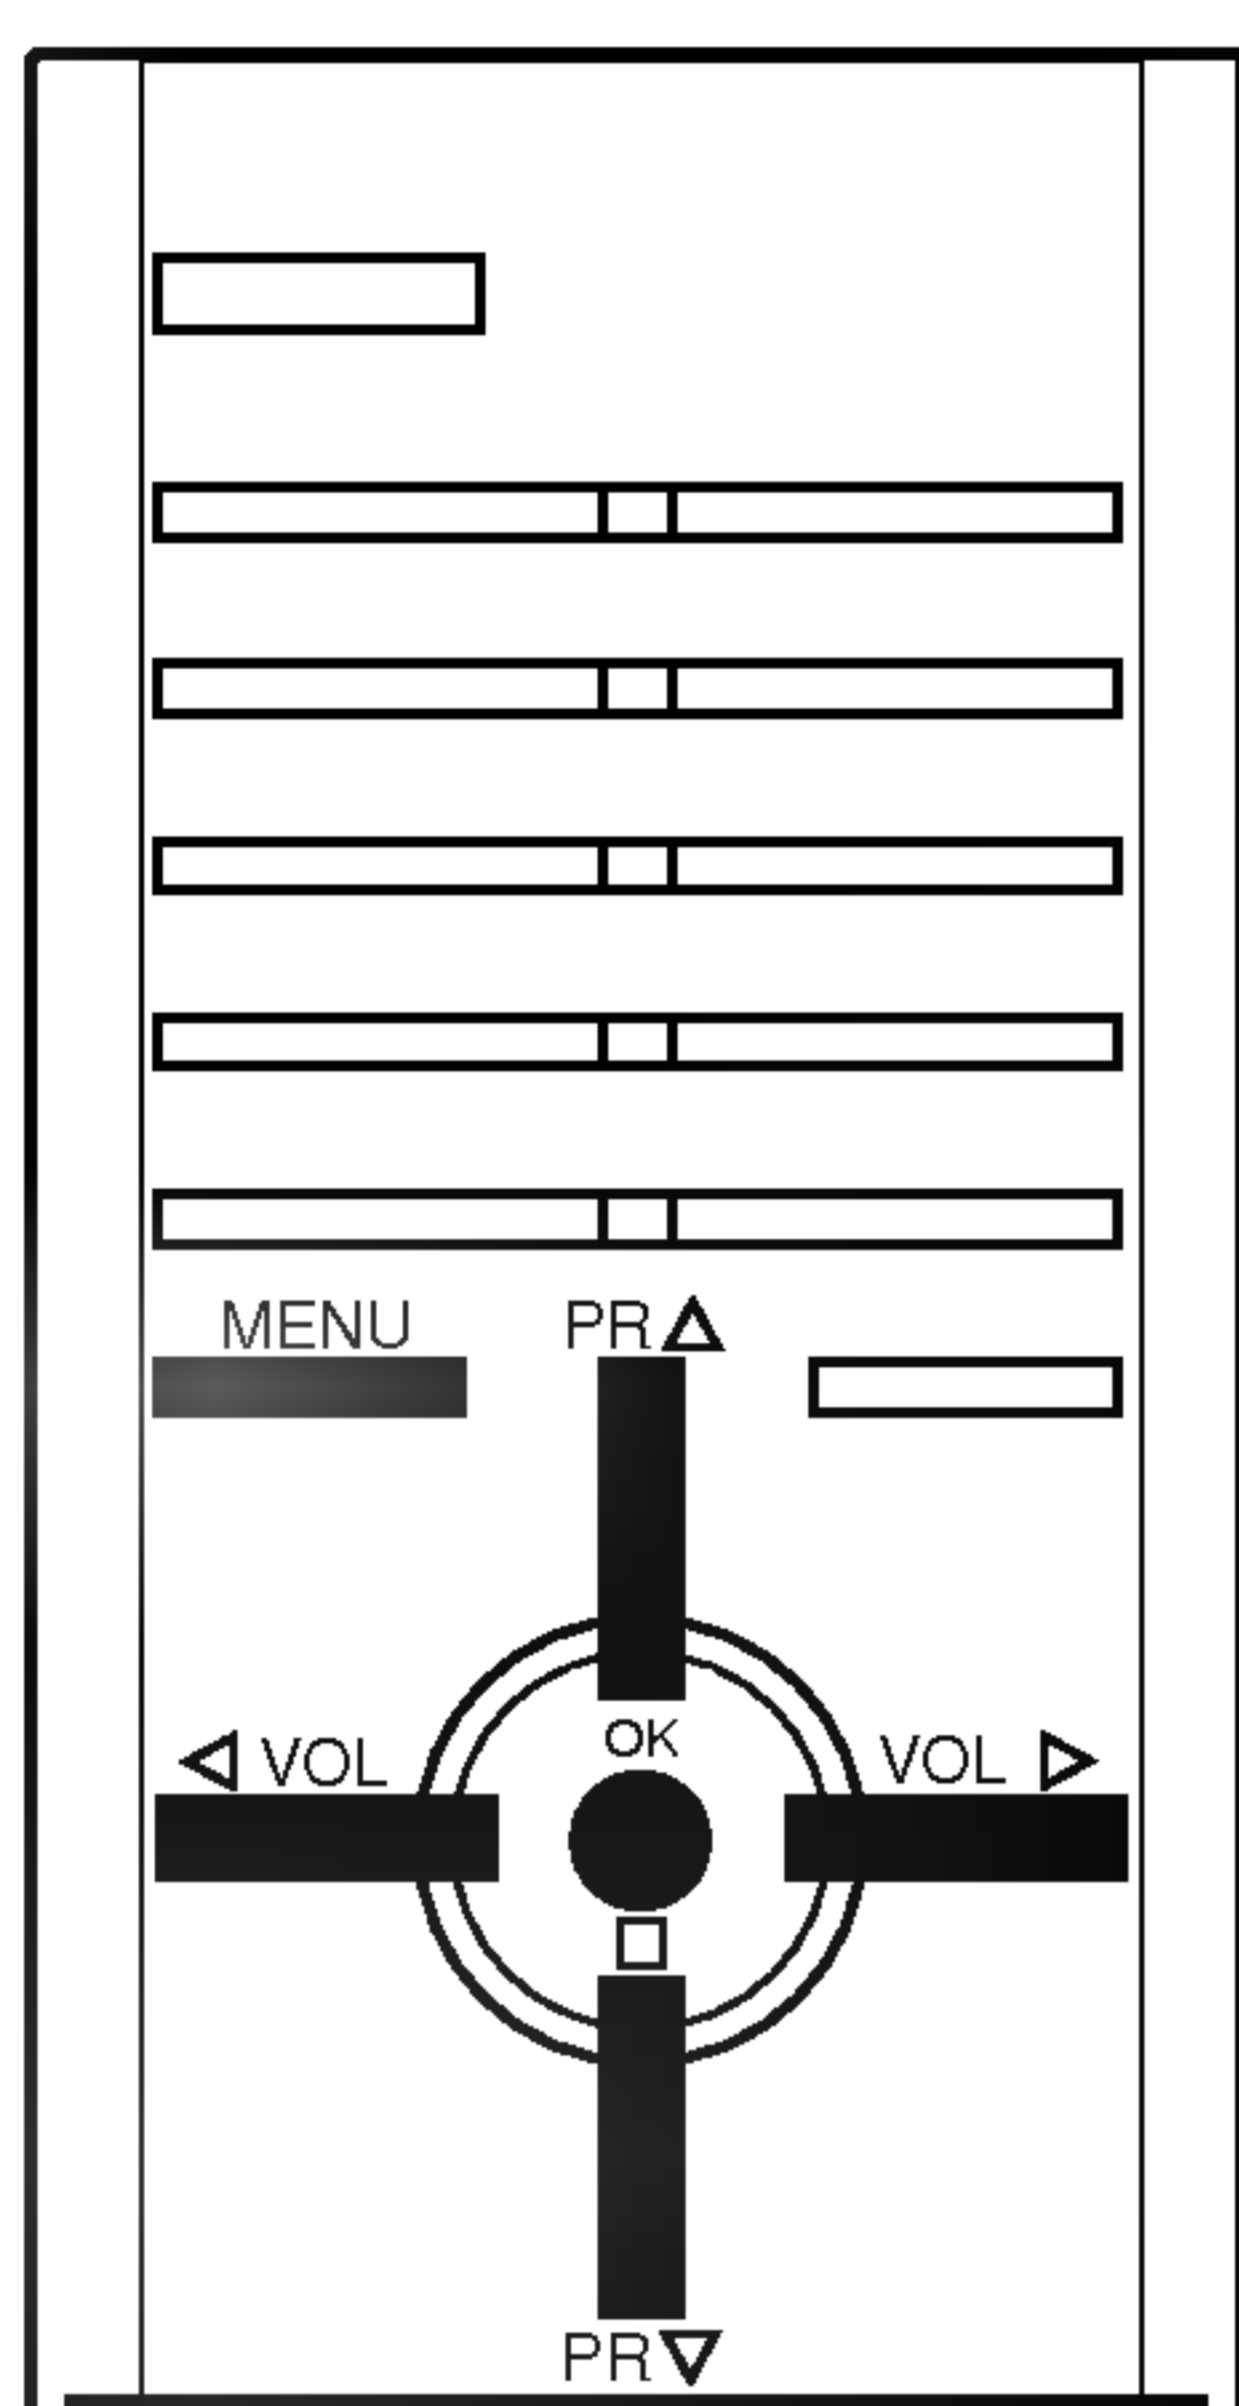

Booster (option)

In some models, **Booster** is an optional function. Only a set with **Booster** can perform this function.


If the reception is poor at the fringe area of TV signal, select **Booster** to **On**. When the picture condition is good, do not select **Booster** to **On**.

1. Repeat the 'Manual programme tuning' steps 1 to 2.
2. Press the ▼ button to select **Booster**.
3. Press the ◀ / ▶ button to select **On** or **Off**.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

Fine tuning

Normally fine tuning is only necessary if reception is poor.

1. Repeat the 'Manual programme tuning' steps 1 to 2.
2. Press the ▼ button to select **Fine**.

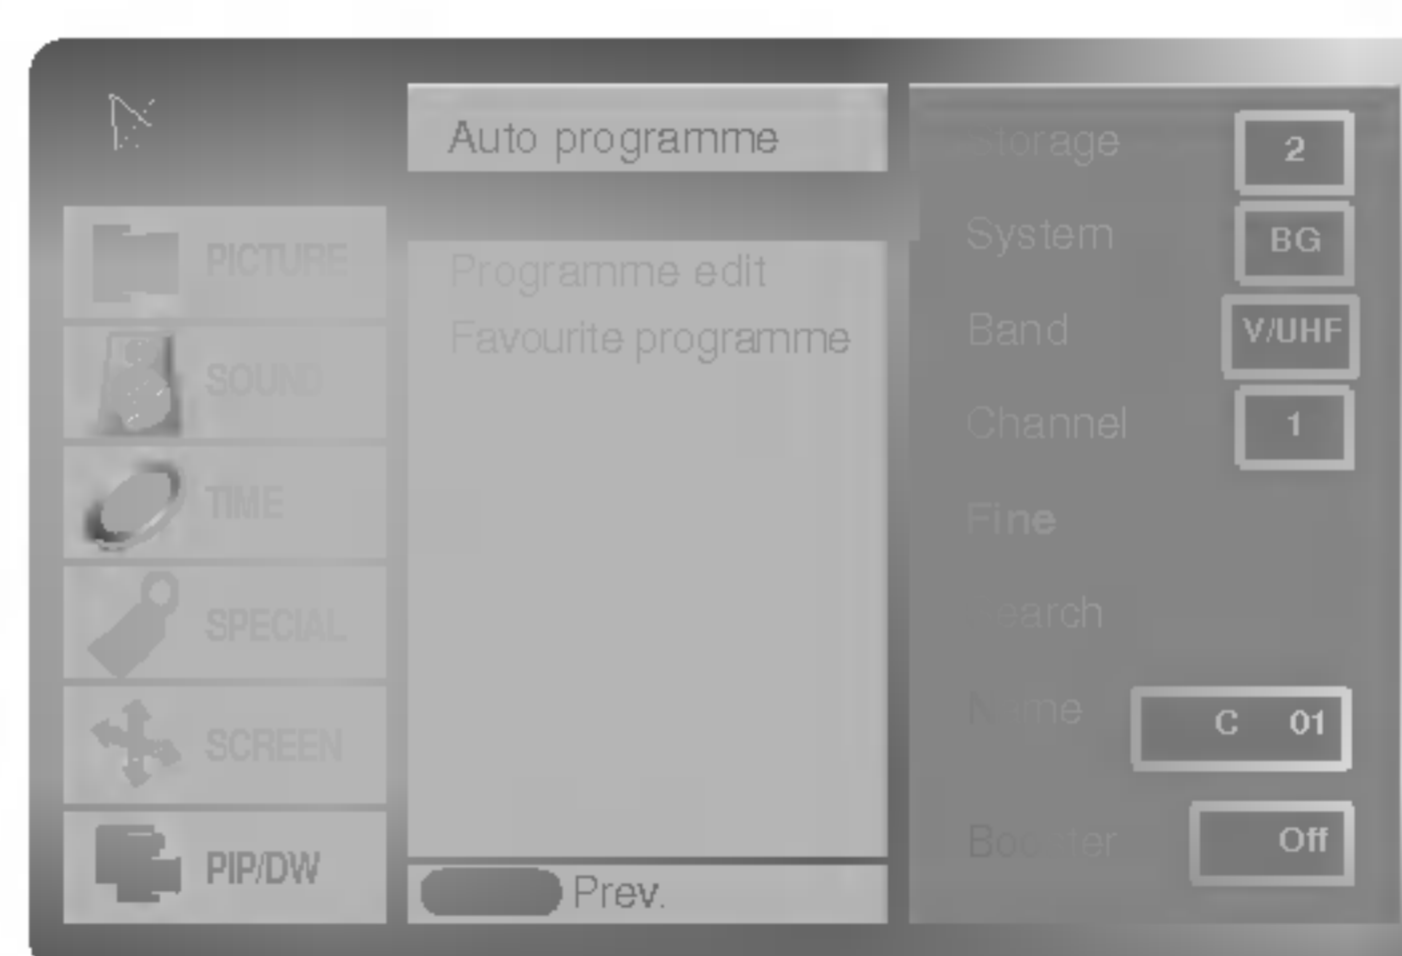

3. Press the ◀ / ▶ button to fine tune for the best picture and sound.
4. Press the **OK** button.
The finely tuned programme will be indicated by yellow number during programme selection.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

STATION MENU

Programme edit

This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or copy a blank station data into the selected programme number.

1. Press the **MENU** button and then **▲ / ▼** button to select the **STATION** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Programme edit**.
3. Press the **▶** button to display the **Programme edit** menu.



Deleting a programme

1. Select a programme to be deleted with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **RED** button twice.
The selected programme is deleted, all the following programmes are shifted up one position.

Copying a programme

1. Select a programme to be copied with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **GREEN** button.
3. Move the programme to the desired programme number with the **▲ / ▼** or **◀ / ▶** button.
4. Press the **GREEN** button again to move the programme.
All the following programmes are shifted down one position.

Moving a programme


1. Select a programme to be moved with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **YELLOW** button.
3. Move the programme to the desired programme number with the **▲ / ▼** or **◀ / ▶** button.
4. Press the **YELLOW** button again to release this function.

Skipping a programme number

1. Select a programme number to be skipped with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **BLUE** button. The skipped programme turns to blue.
3. Press the **BLUE** button again to release the skipped programme.

When a programme number is skipped it means that you will be unable to select it using the **▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.

Repeatedly press the **MENU** button to return to normal TV viewing.

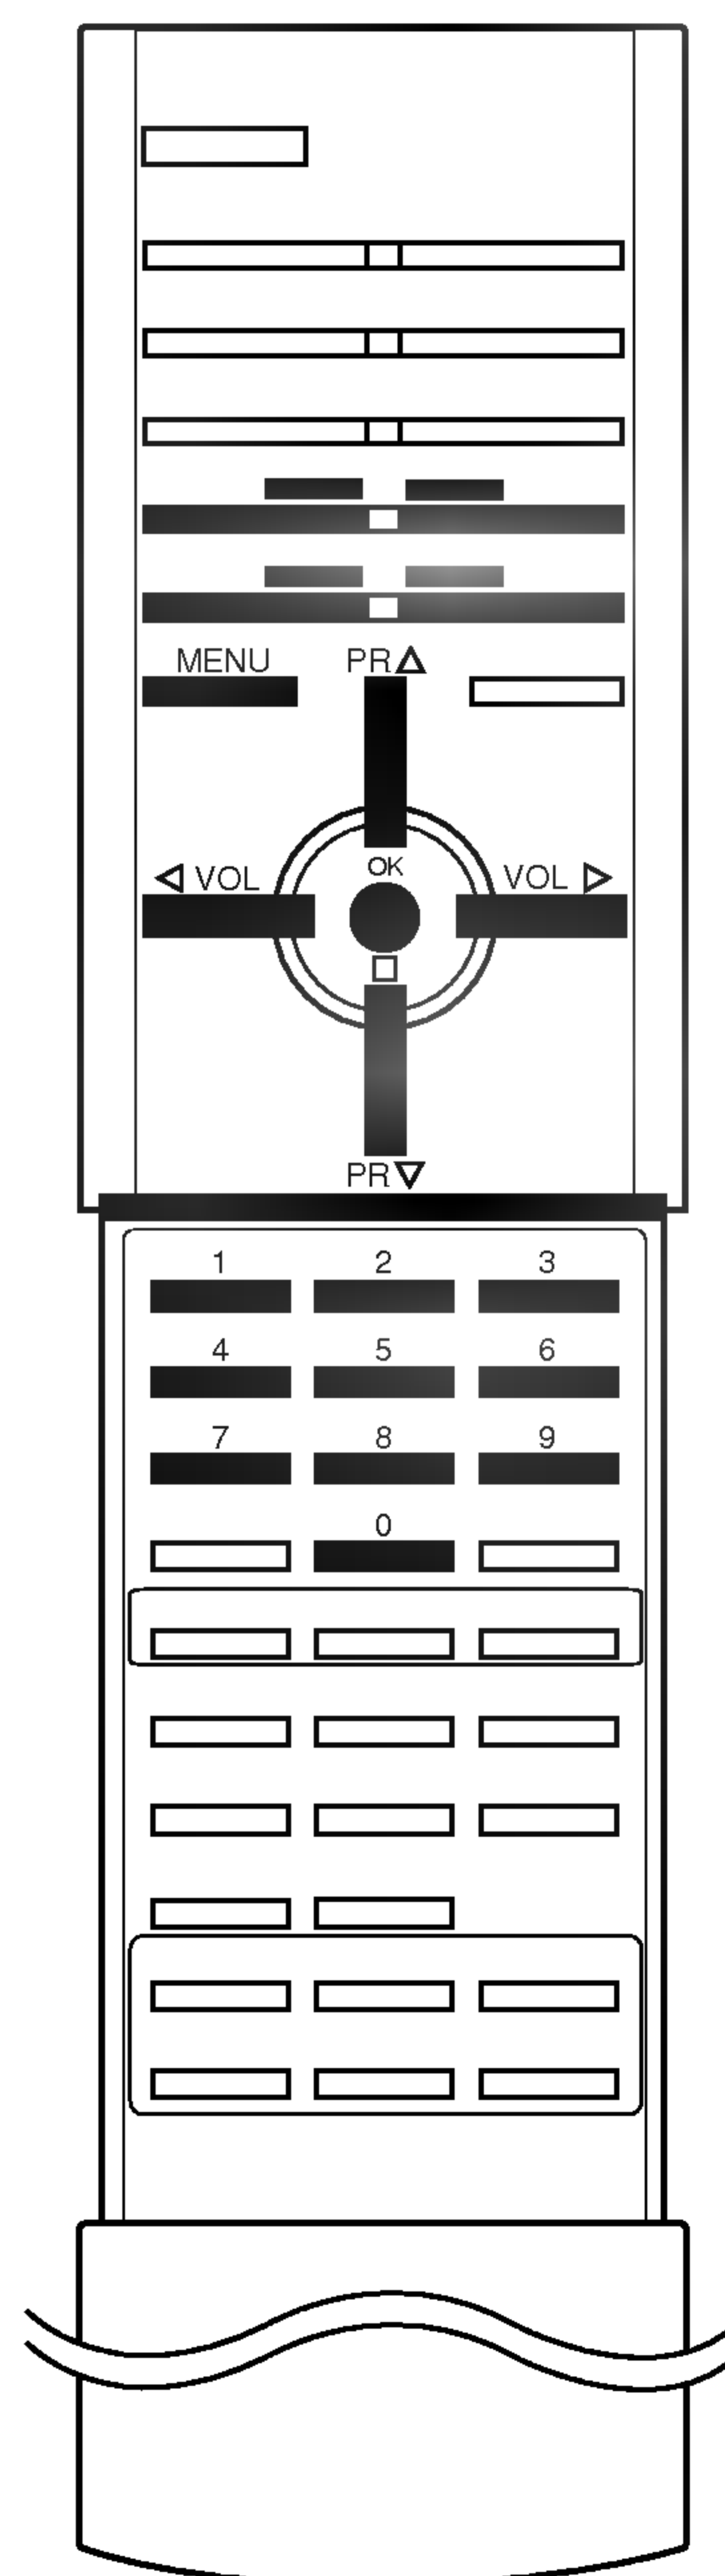


STATION MENU



Favourite Programme

This function lets you select your favourite programmes directly.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **STATION** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Favourite programme**.
3. Press the **▶** button to display the **Favourite programme** menu.

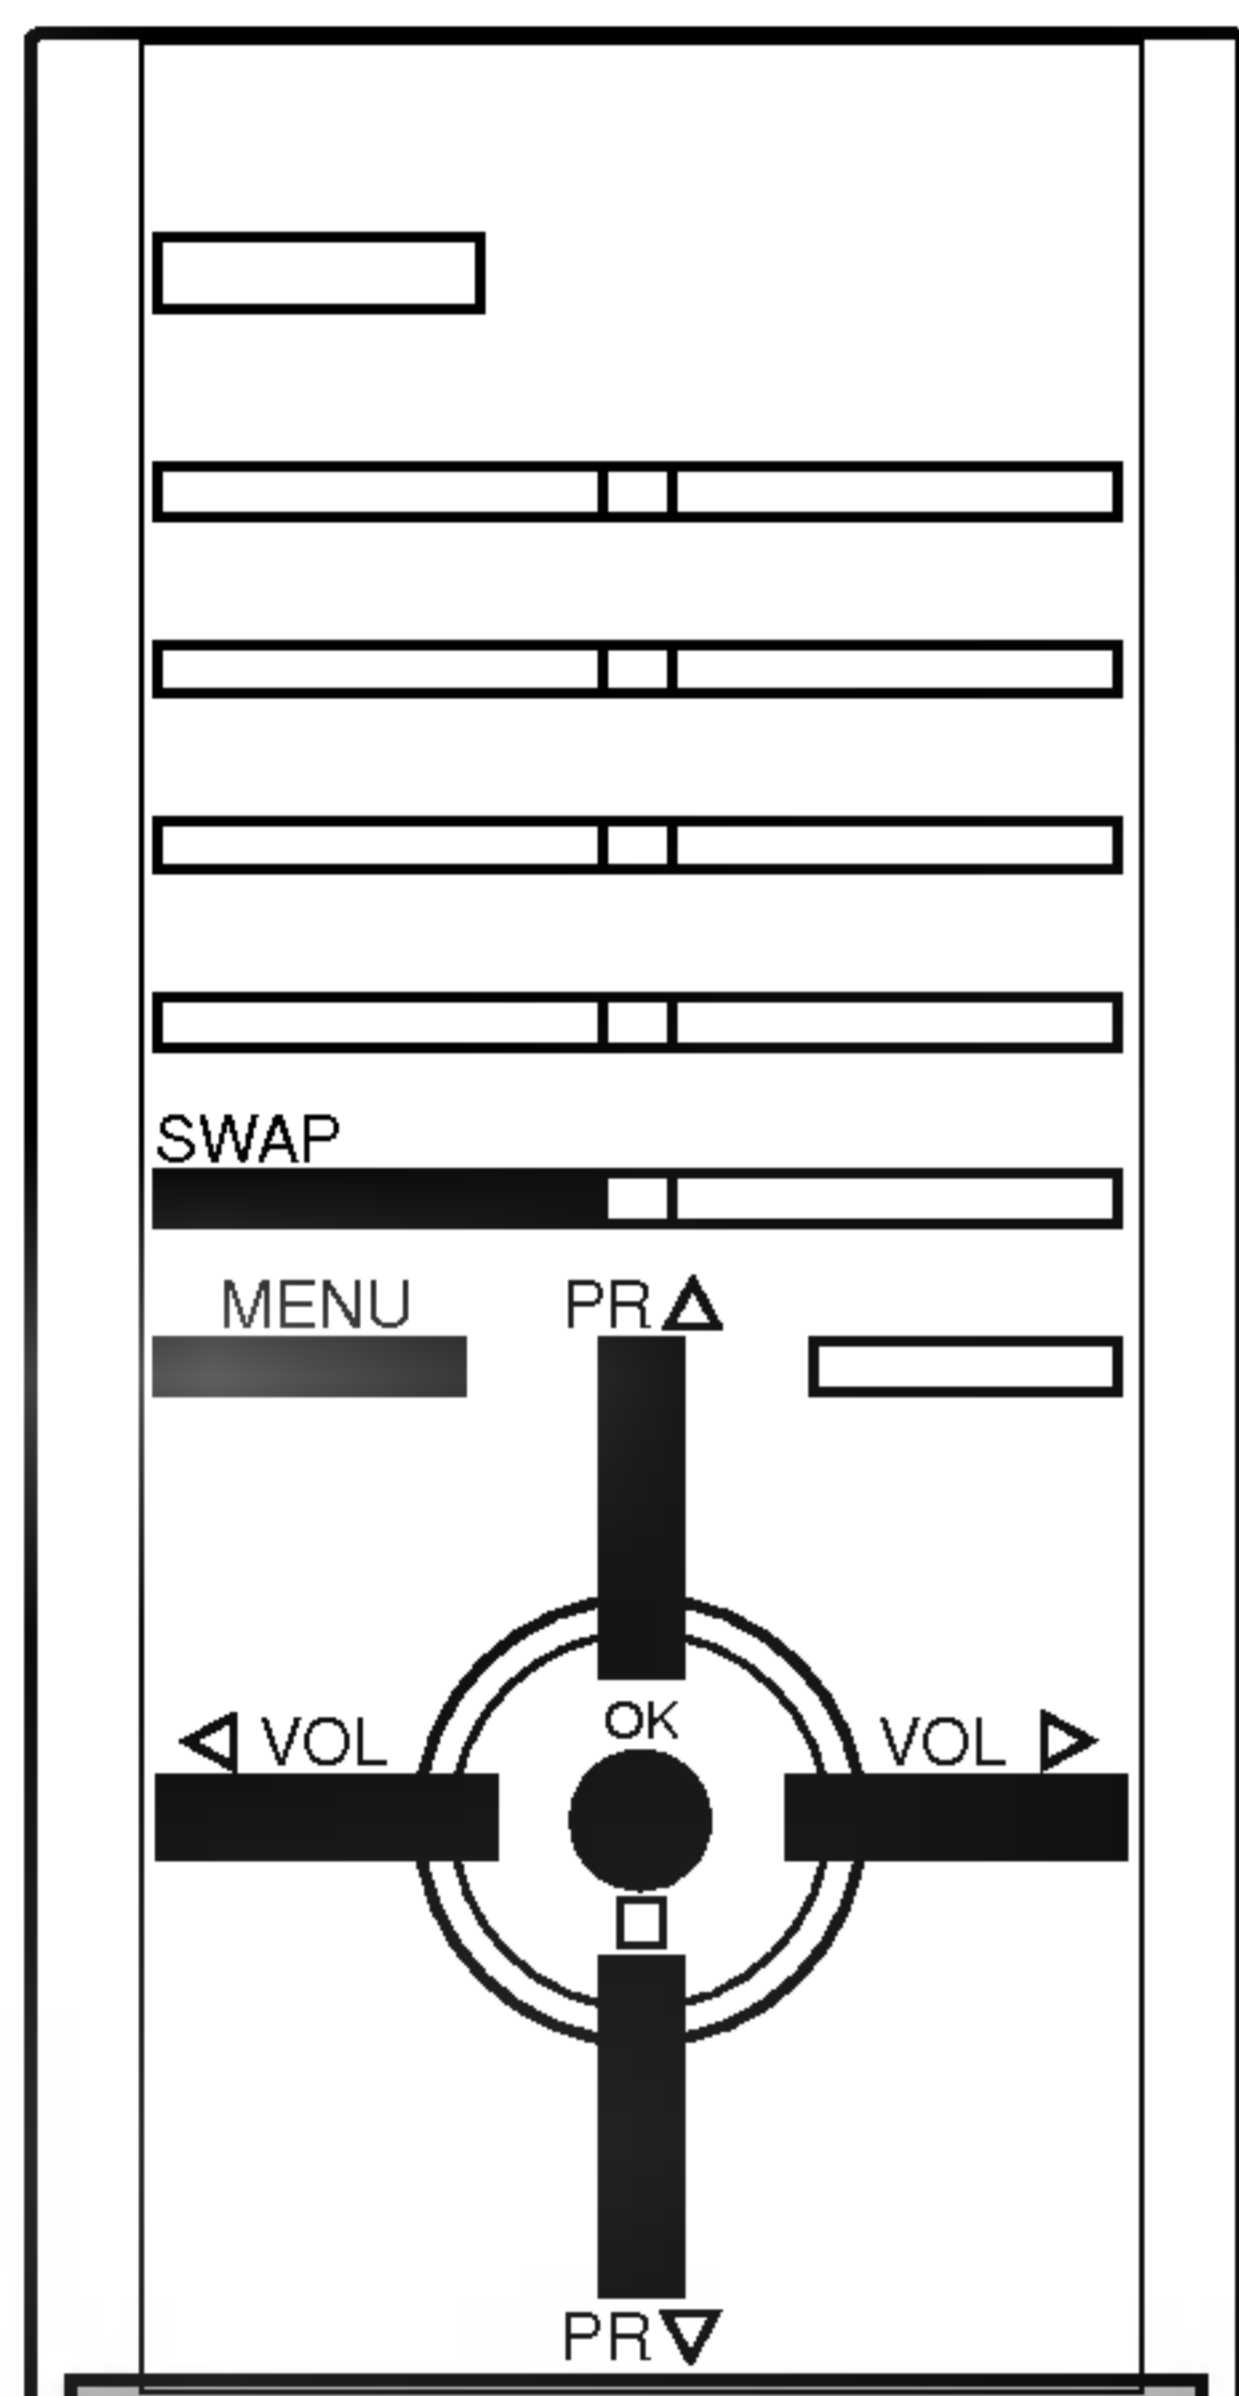

4. Press the **▲ / ▼** button to select **On**.
5. Press the **▶** button and then **▲ / ▼** button to select -- -----.
6. Select a desired programme with the **◀ / ▶** button or **NUMBER** buttons. Any number under 10 is entered with a numeric '0' (or '00') in front of it, i.e. '05' (or '005') for 5.
7. To store another programme, repeat steps 5 to 6. You can store up to 8 programmes.
8. Press the **OK** button.
9. Repeatedly press the **MENU** button to return to normal TV viewing.

Repeatedly press the **SWAP** button to select stored favorite programmes.

Calling the programme table

You can check the programmes stored in the memory by displaying the programme table.

Displaying programme table

Press the **LIST** button to display the Programme table menu. The programme table appears on the screen.



Note :

- a. You may find some blue highlighted programmes shown. They have been set up in the programme edit mode.
- b. Some programmes with the channel number shown in the programme table indicate there is no station name assigned.

Selecting a programme in the programme table


Select a programme with the **▲ / ▼** or **◀ / ▶** button. The set switches to the chosen programme number.

Paging through a programme table

There are 10 (or 20) programme table pages which contain 100 (or 200) programmes.

Pressing the **▲ / ▼** or **◀ / ▶** button repeatedly turns the pages.

Press the **LIST** button to return to normal TV viewing.

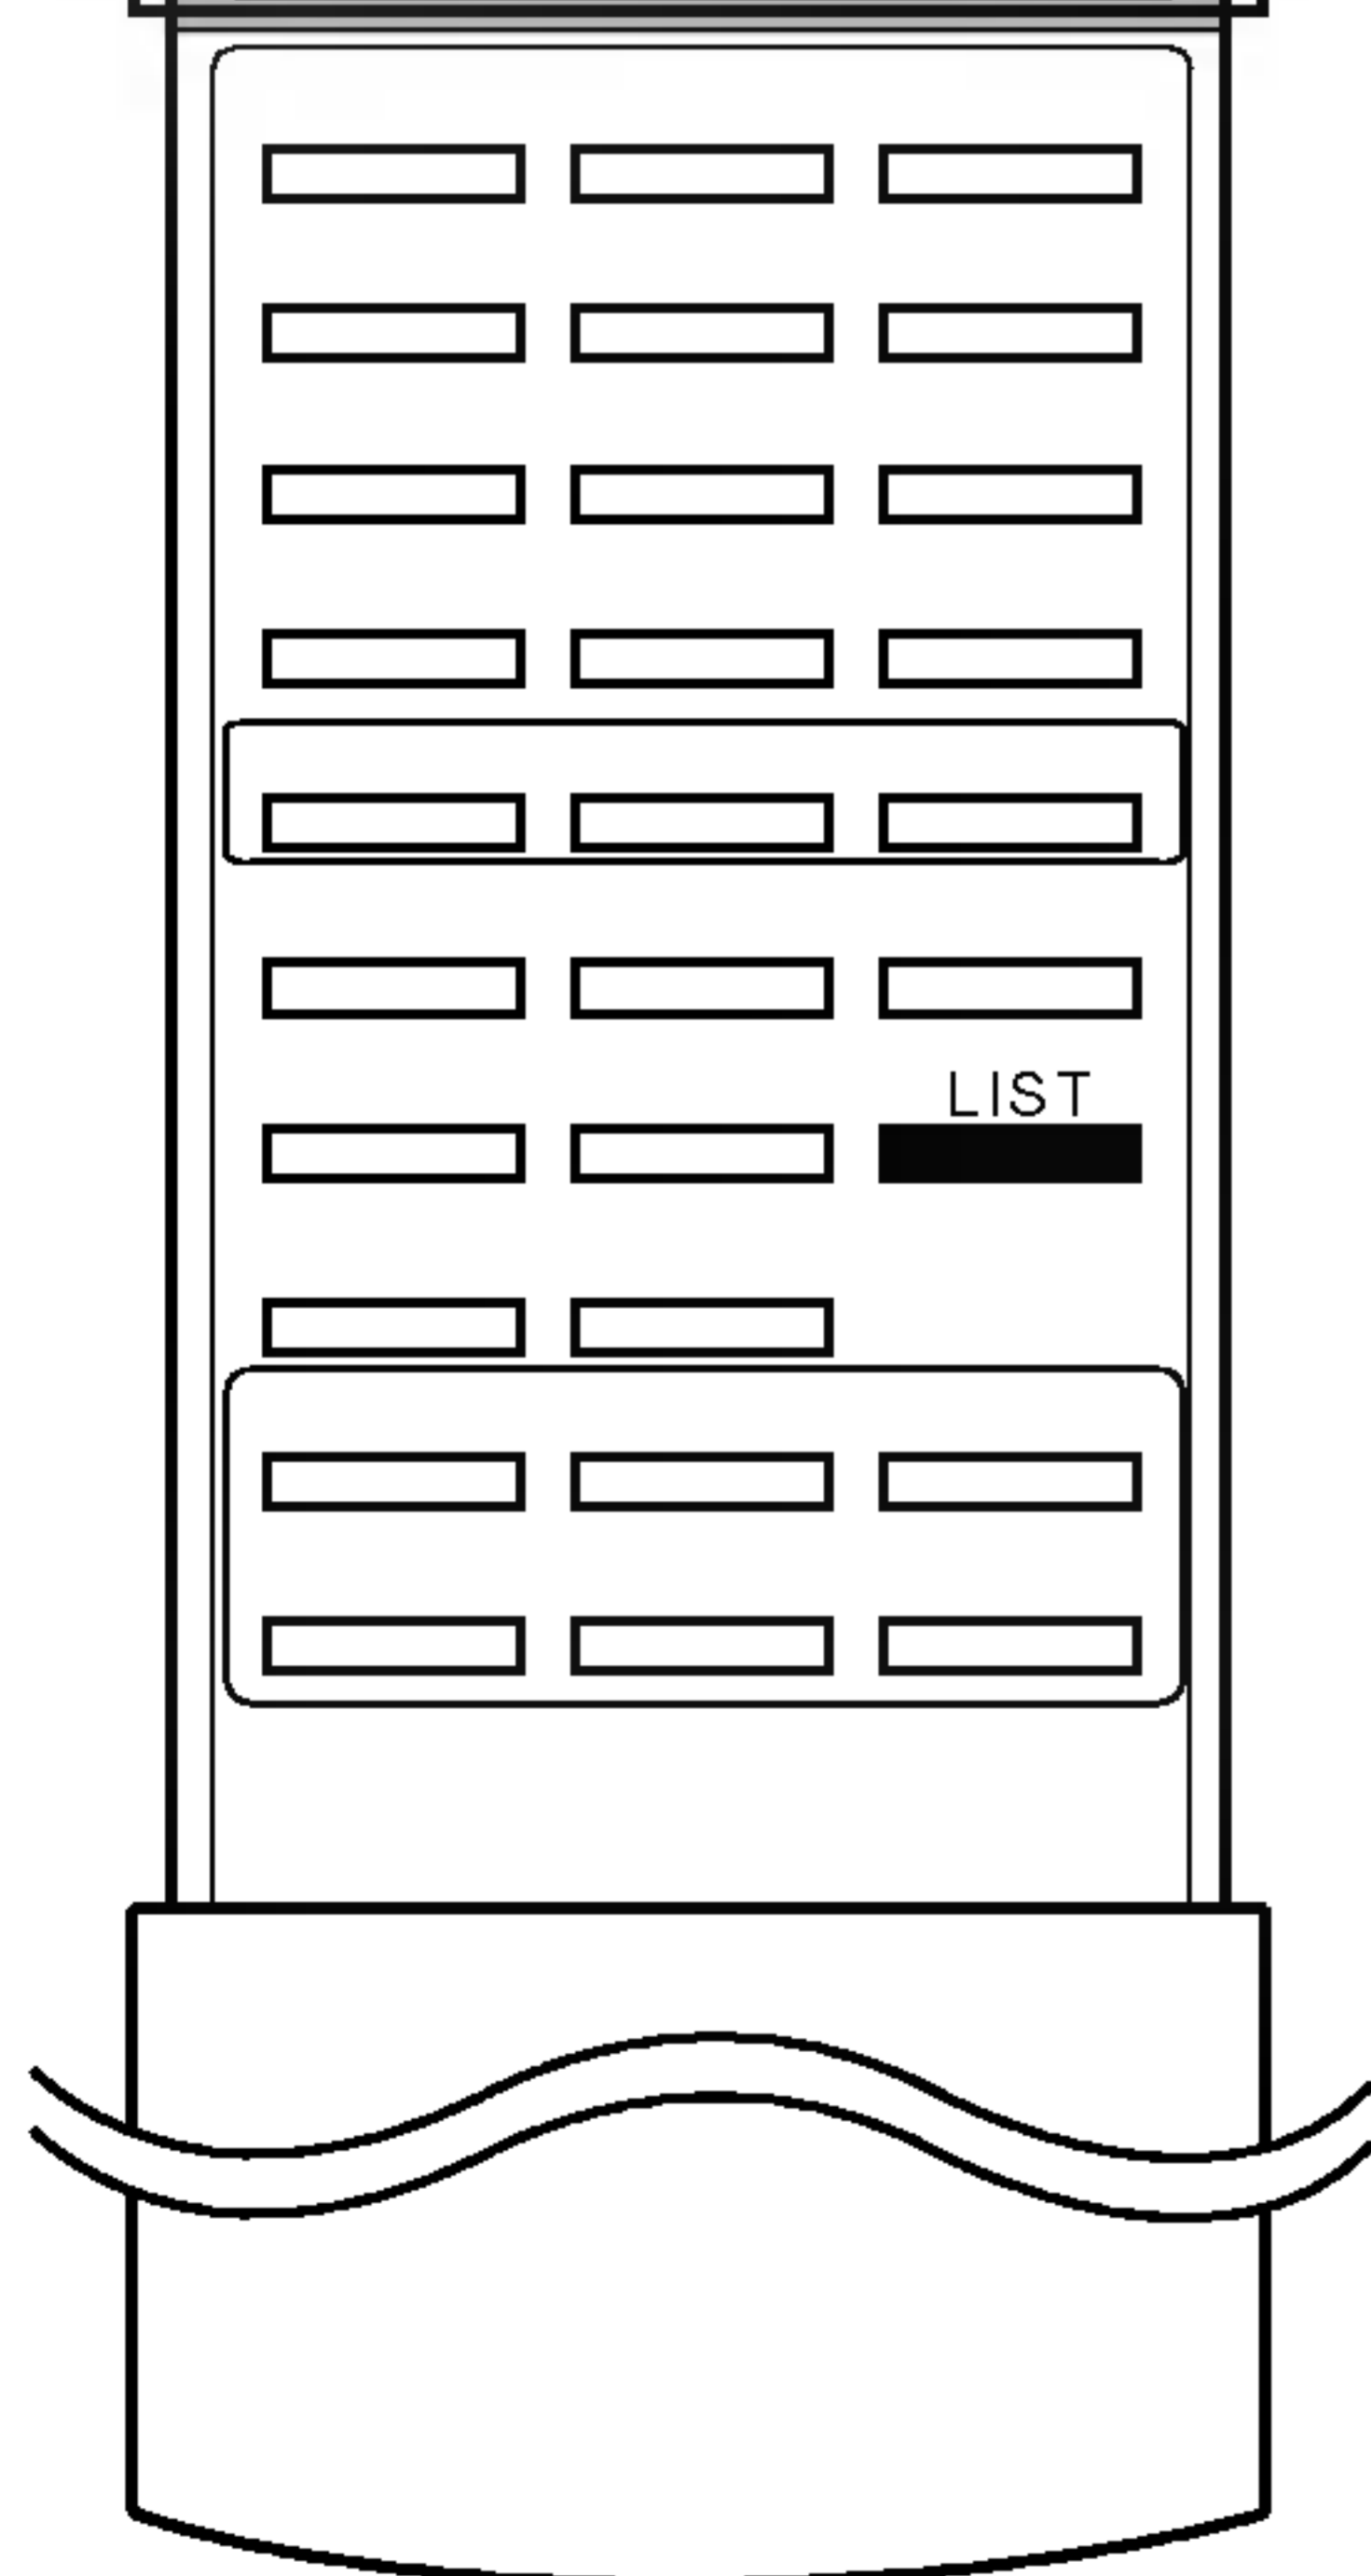

PICTURE MENU

PSM (Picture Status Memory)

1. Press the **MENU** button and then ▲ / ▼ button to select the PICTURE menu.
2. Press the ► button and then ▲ / ▼ button to select **PSM**.



3. Press the ► button and then ▲ / ▼ button to select a picture setting on the **PSM** pull-down menu.
4. Press the **OK** or ◀ button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

To recall your preferred setting, press the **PSM** button until the desired picture (**Dynamic**, **Standard**, **Mild** or **User**) appears. The picture **Dynamic**, **Standard** and **Mild** are programmed for good picture reproduction at the factory and cannot be changed.


XD (Excellent Digital)

- You can enjoy the vivid and high-definition picture with Digital Reality processor technology.
- When selecting picture options (**Dynamic**, **Standard** and **Mild**) in PICTURE menu, **XD** is automatically changed to **On**.
- It's not available to use this function in RGB[PC], HDMI[PC] mode.

1. Press the **MENU** button and then ▲ / ▼ button to select the PICTURE menu.
2. Press the ► button and then ▲ / ▼ button to select **XD**.




3. Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
4. Press the **OK** or ◀ button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

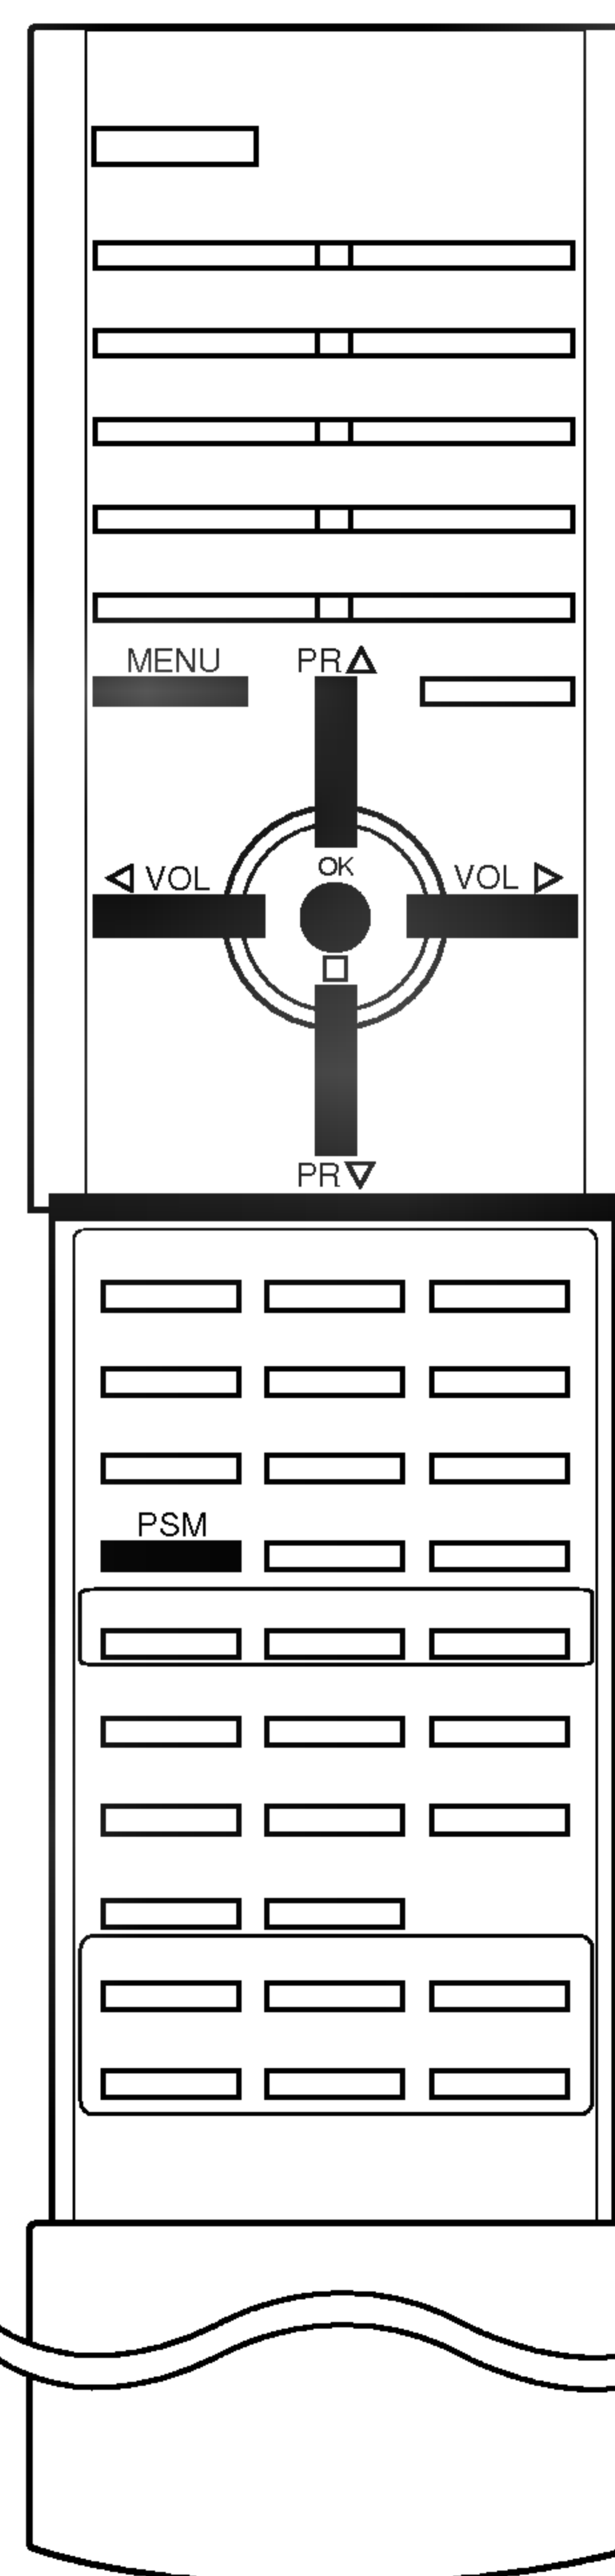

PICTURE MENU

CSM (Color Status Memory)

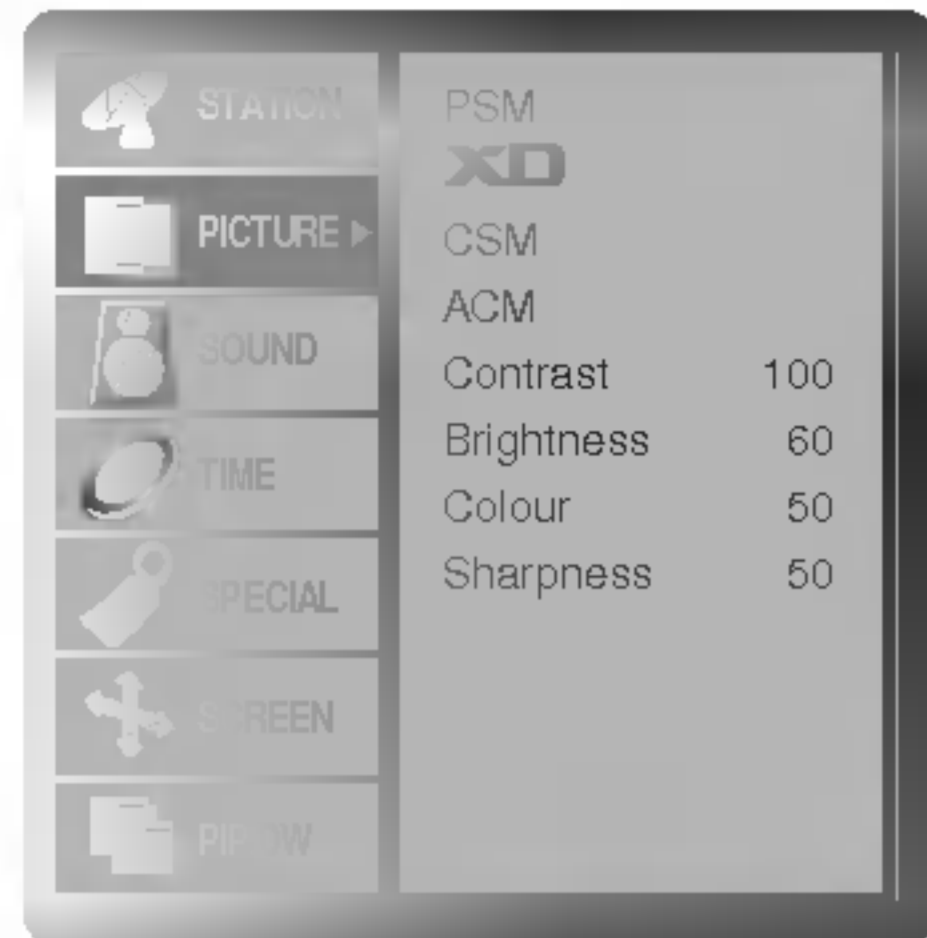

- When selecting picture options (**Dynamic**, **Standard** and **Mild**) in PICTURE menu, **CSM** is automatically changed to **Normal**.
- It's not available to use this function in **sRGB On** mode.


1. Press the **MENU** button and then **▲ / ▼** button to select the PICTURE menu.
2. Press the **▶** button and then **▲ / ▼** button to select **CSM**.




3. Press the **▶** button and then use **▲ / ▼** button to select the desired colour temperature.
4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

Manual Colour Temperature Control (User option)

1. Press the **MENU** button and then **▲ / ▼** button to select the PICTURE menu.
2. Press the **▶** button and then **▲ / ▼** button to select **CSM**.

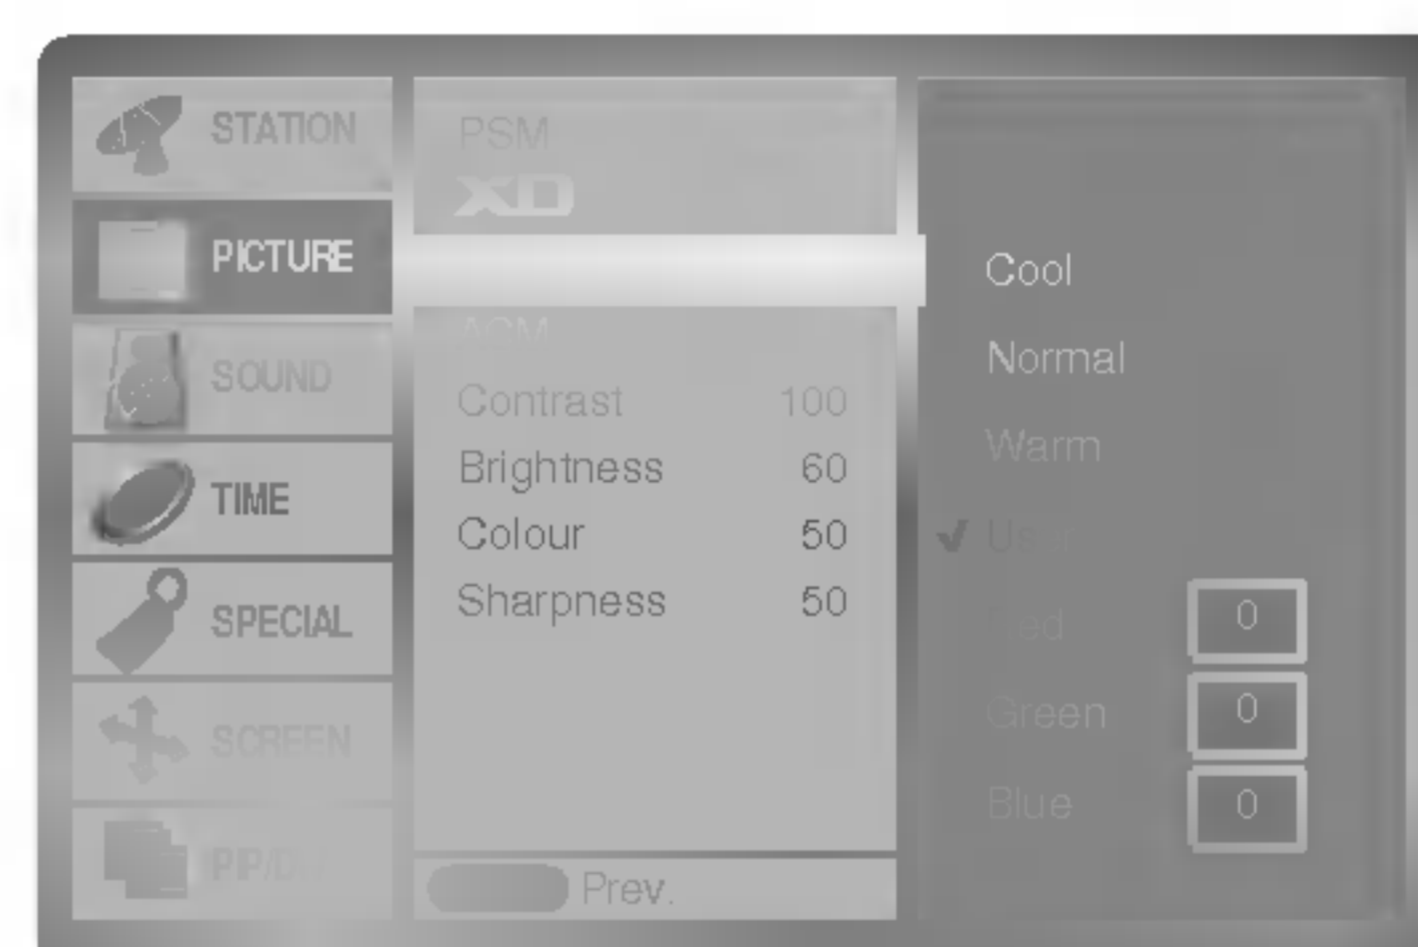

3. Press the **▶** button and then **▲ / ▼** button to select **User**.
4. Press the **▶** button and then **◀ / ▶** button to make appropriate adjustments.
The adjustment range of **Red**, **Green** and **Blue** is -30~+30.
5. Press the **OK** button.
6. Repeatedly press the **MENU** button to return to normal TV viewing.


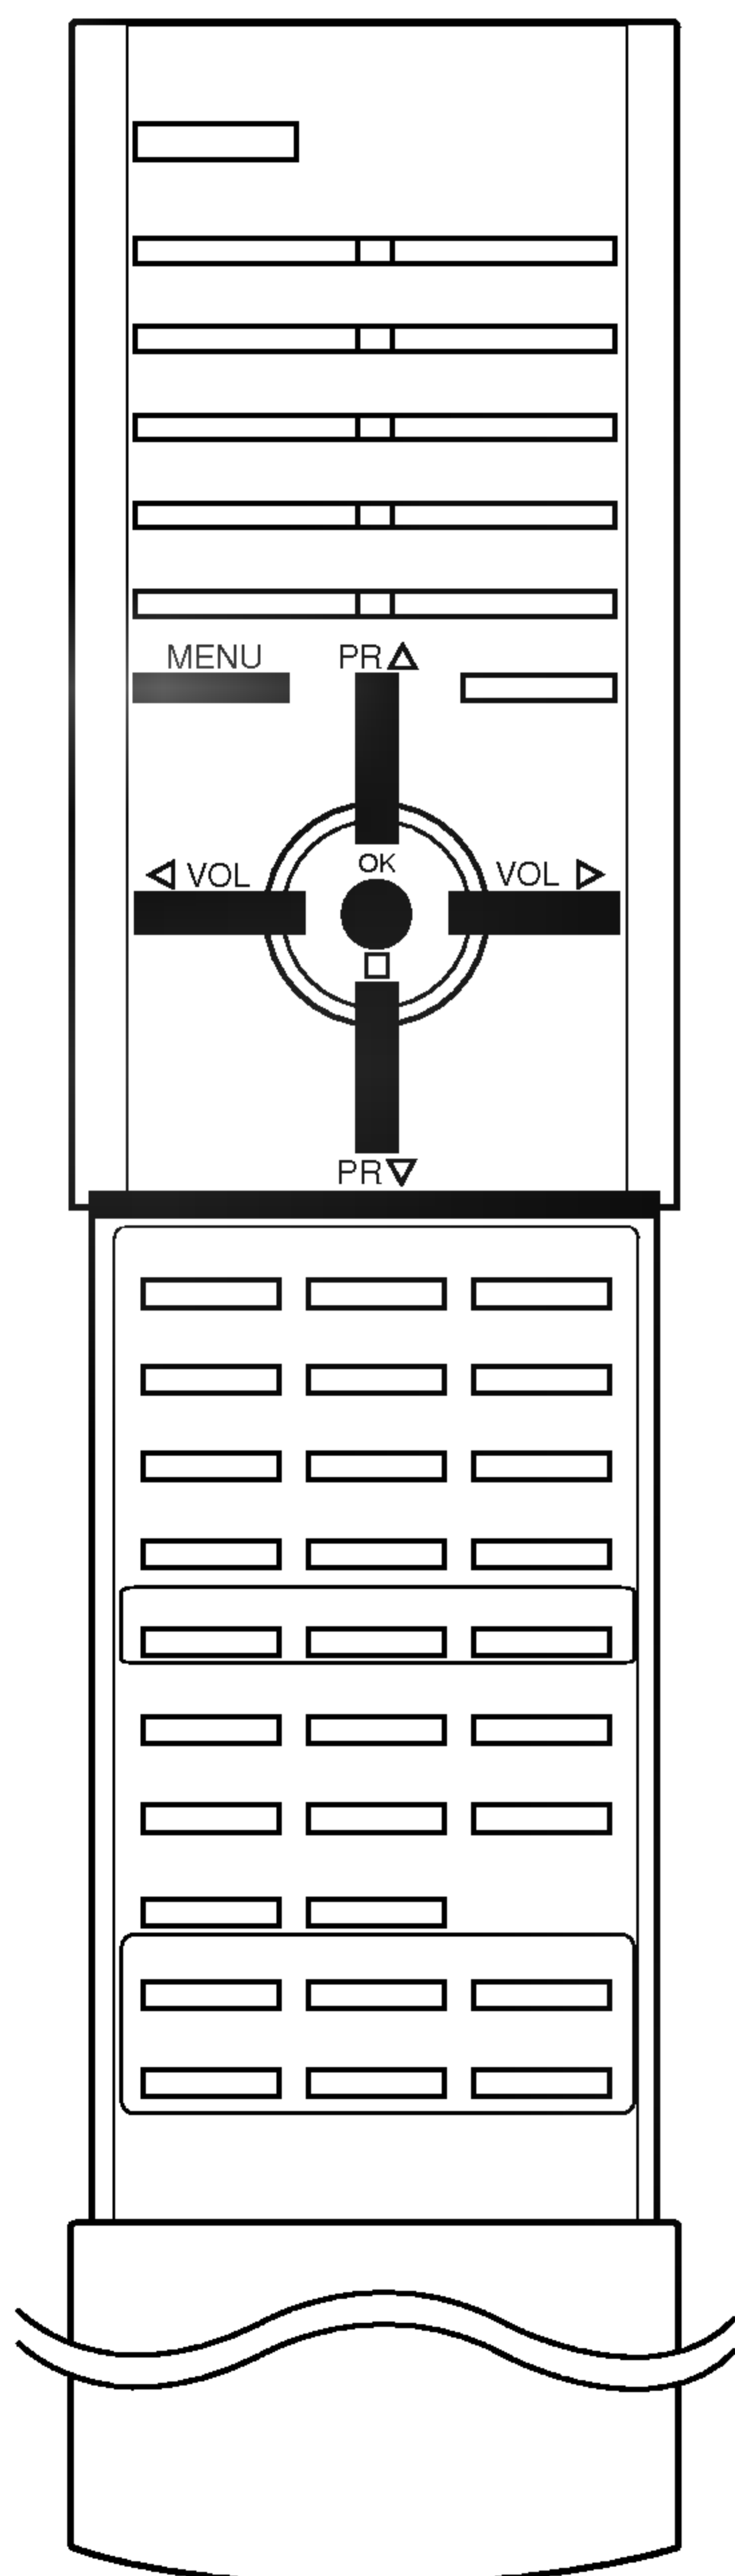


PICTURE MENU

sRGB (RGB[PC], HDMI[PC] mode only)

- When the set was connected to external equipment with sRGB function, It's adjusted a colour difference to display the equal image each other.

1. Press the **MENU** button and then ▲ / ▼ button to select the PICTURE menu.
2. Press the ► button and then ▲ / ▼ button to select **sRGB**.
3. Press the ► button and then ▲ / ▼ button to select **On** or **Off**.

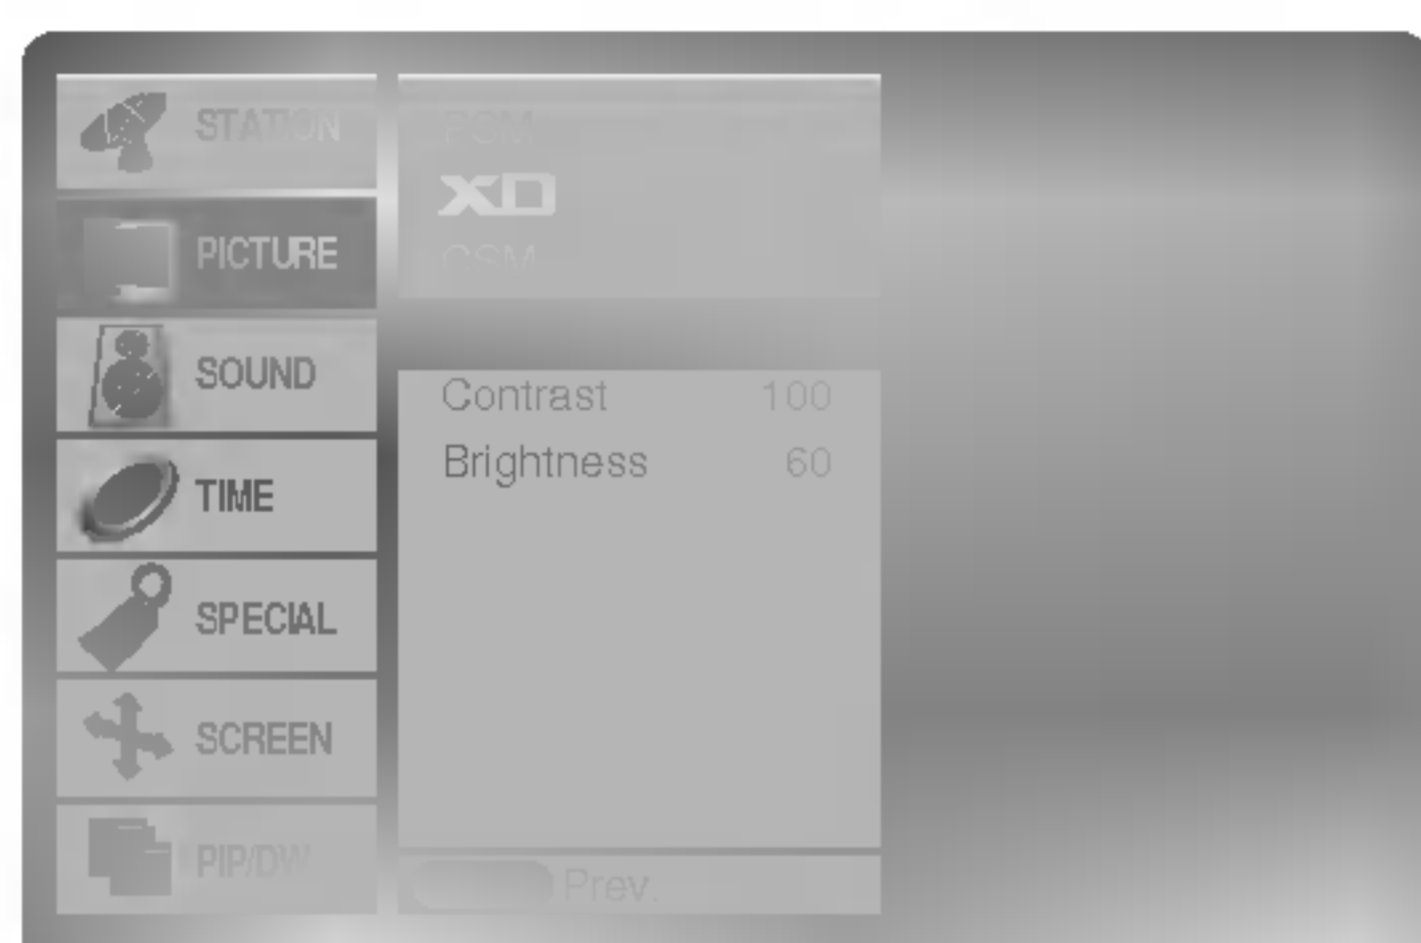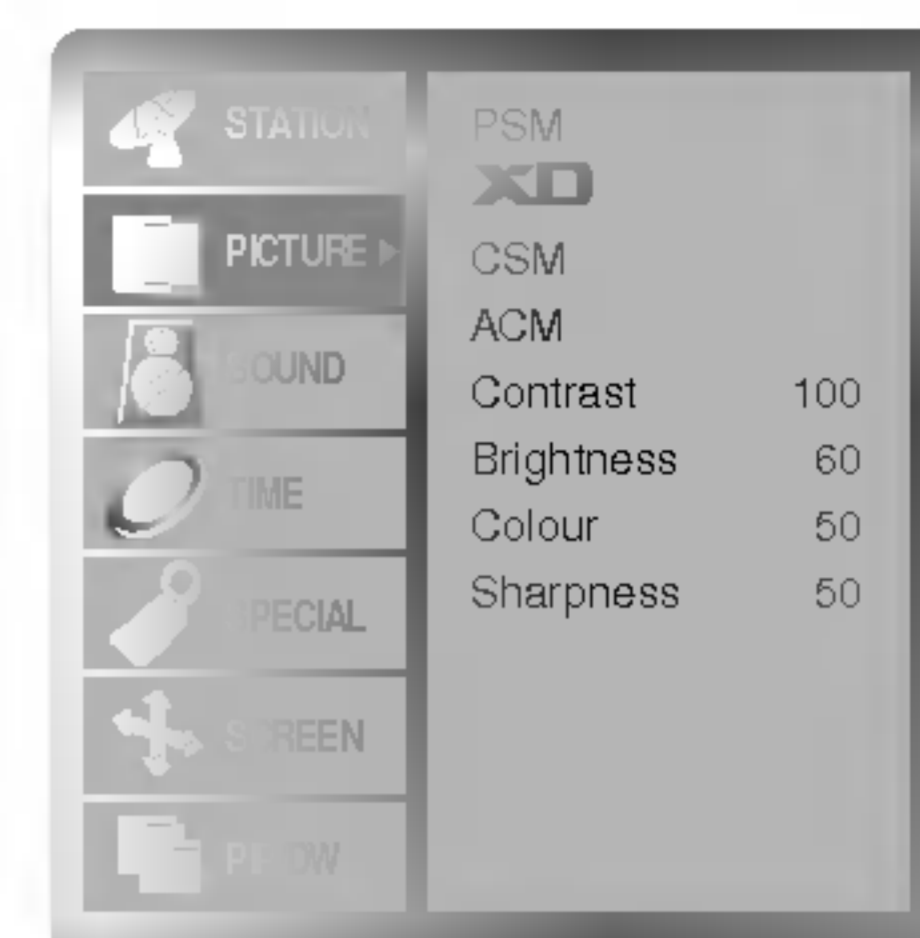

4. Press the **OK** or ◀ button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

ACM (Active Color Management)

- Adjust the **ACM** to select the desired skin colour option.
- This function works in the following mode: TV, AV1, AV2, AV3, COMPONENT [480i, 480p, 576i, 576p, 720p, 1080i], HDMI DTV [480p, 570p, 720p, 1080i].
- It's not available to use this function in **XD Off** mode.


1. Press the **MENU** button and then use ▲ / ▼ button to select the PICTURE menu.
2. Press the ► button and then use ▲ / ▼ button to select **ACM**.
3. Press the ► button and then use ◀ / ▶ button to make appropriate adjustments.



appropriate adjustments.

The adjustment range of **ACM** is 0 ~ 3.

4. Press the **OK** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

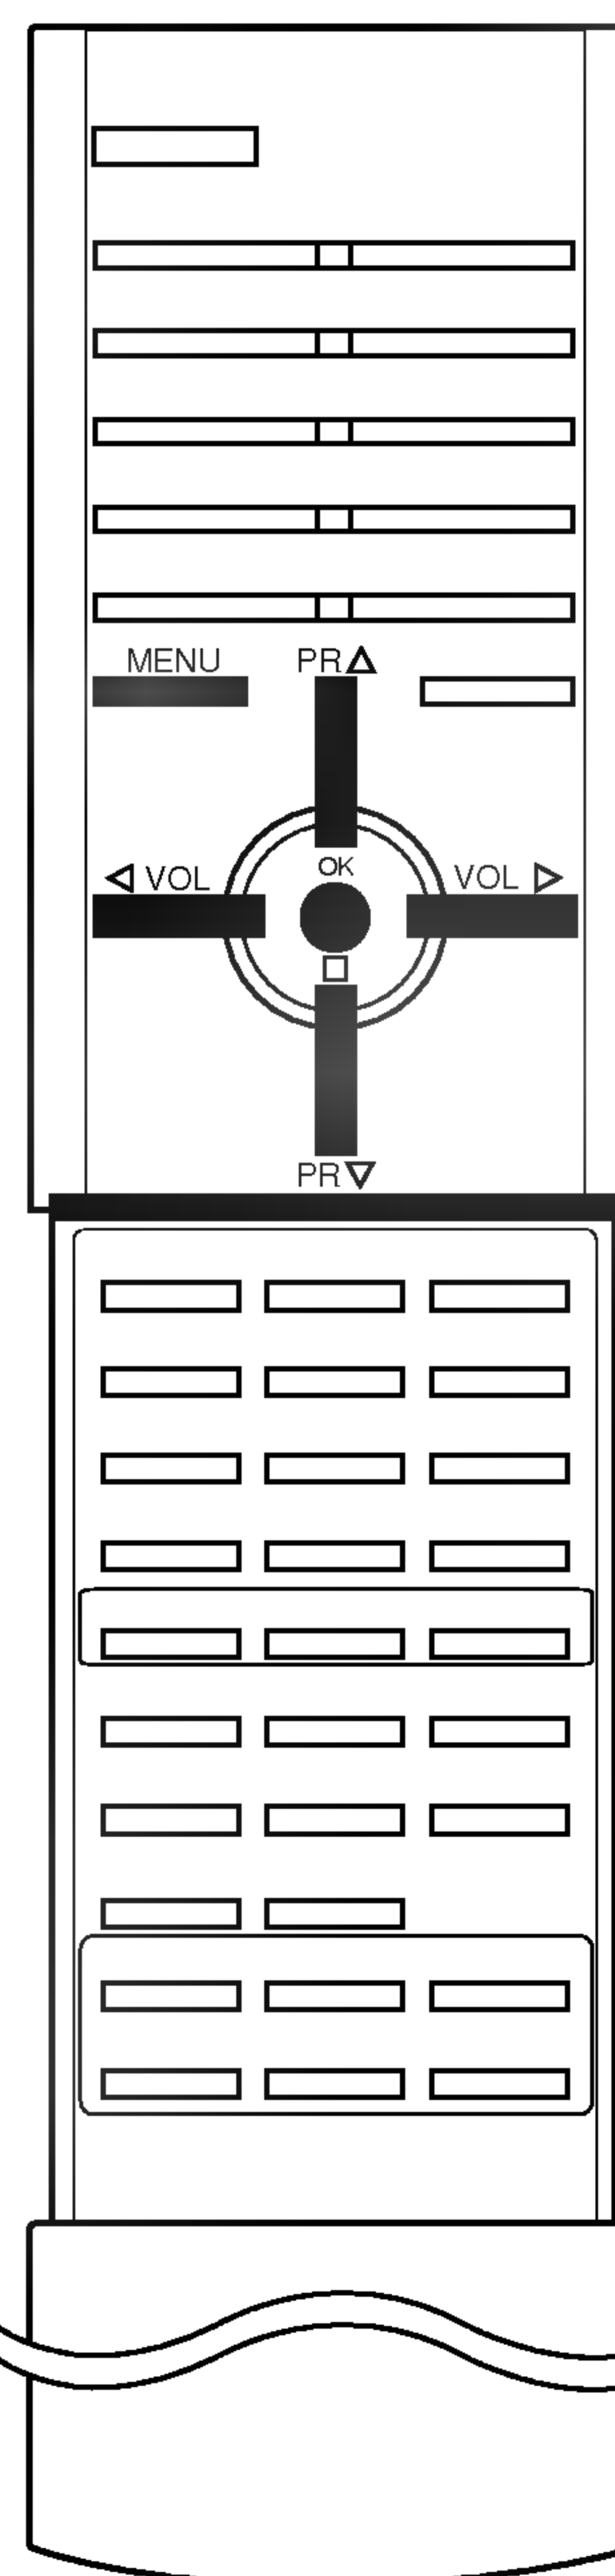


PICTURE MENU

Manual Picture Control (User option)




You can adjust picture contrast, brightness, colour, sharpness and tint (NTSC input only) to the levels you prefer. In the broadcasting system PAL/SECAM, the picture item Tint doesn't work.

1. Press the **MENU** button and then ▲ / ▼ button to select the PICTURE menu.
2. Press the ► button and then ▲ / ▼ button to select the desired picture item.

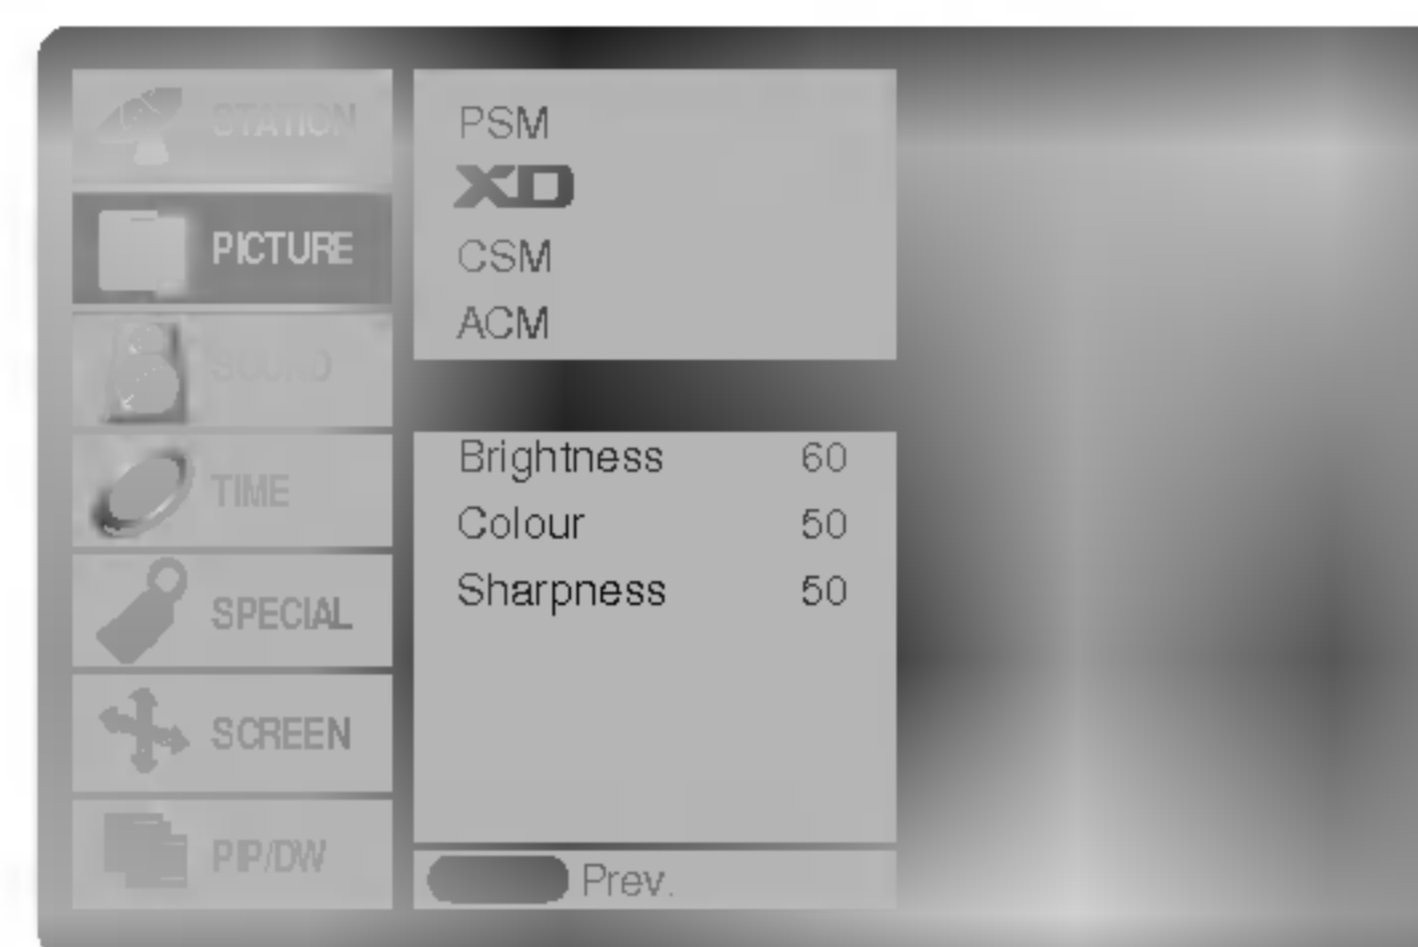

3. Press the ► button and then ◀ / ▶ button to make appropriate adjustments, then it will be stored for the picture User.
4. Press the **OK** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

Note : The adjustment for PICTURE menu (contrast, brightness, colour, sharpness and tint) affect both the main and sub picture in PIP or Twin Picture mode.

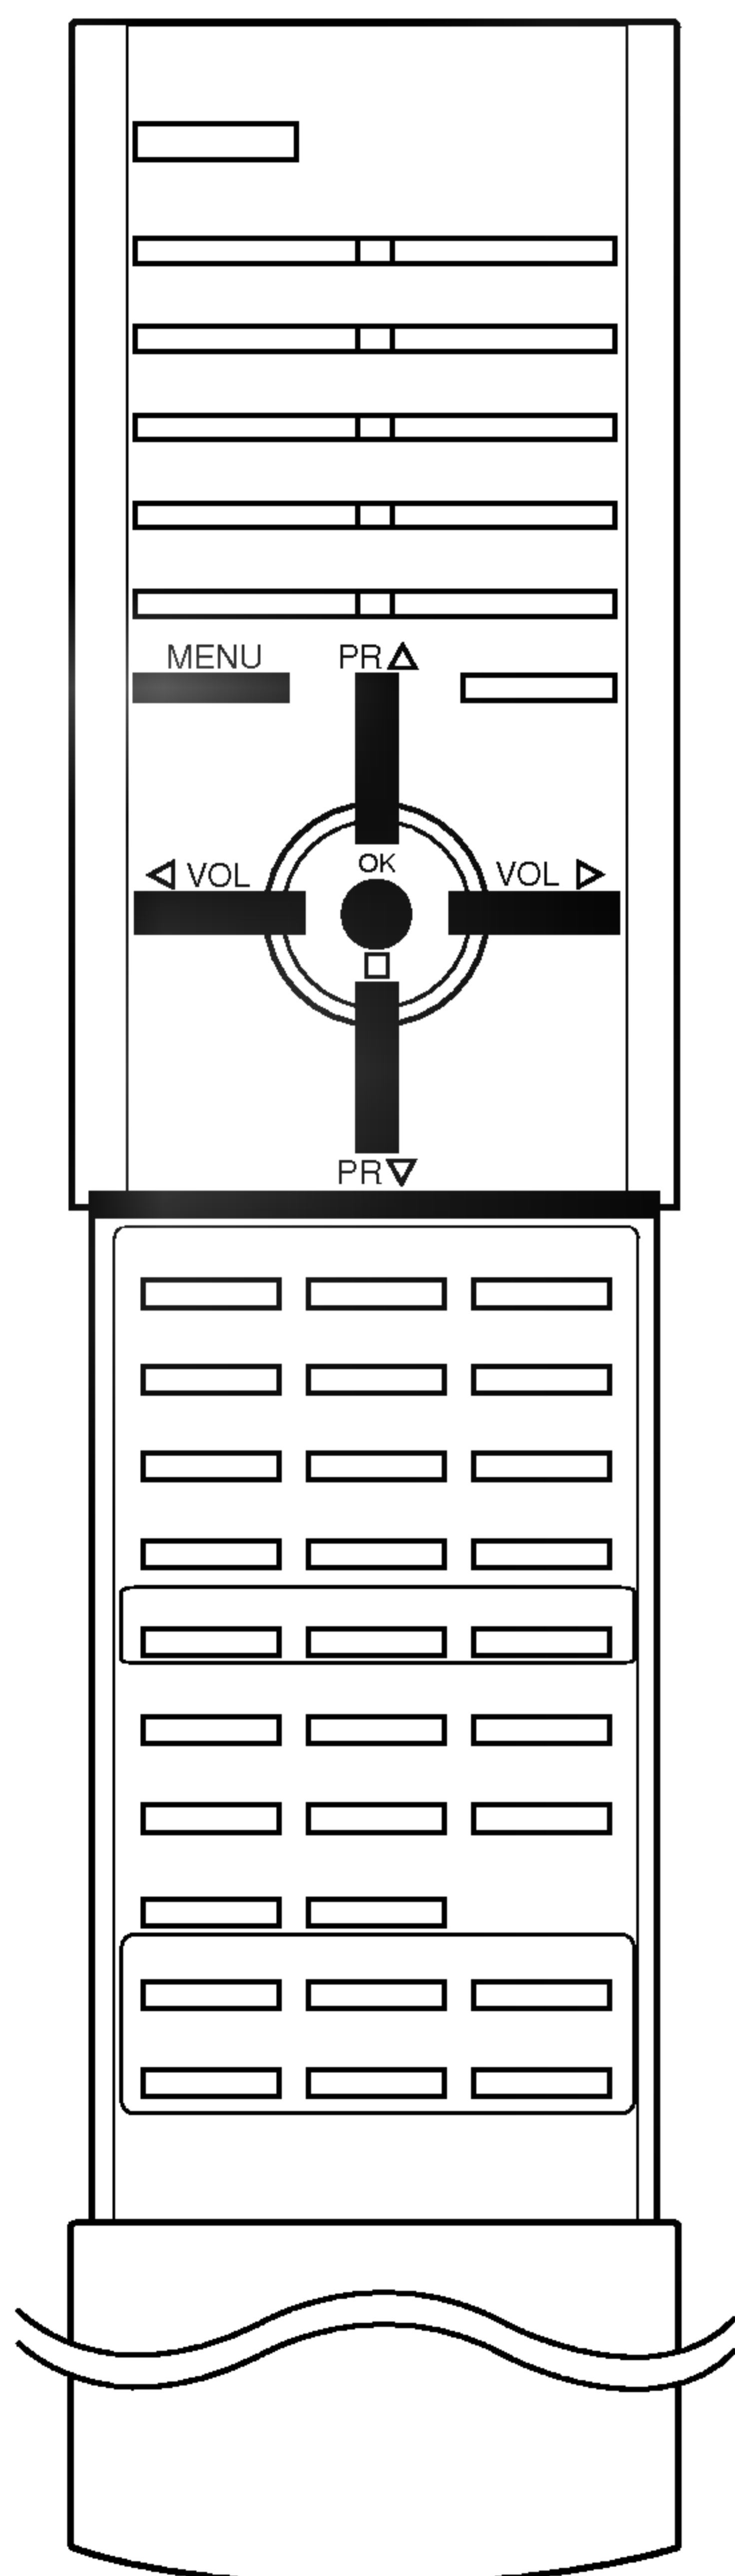


SOUND MENU

SSM (Sound Status Memory)

This function lets you enjoy the best sound without any special adjustment because the set automatically selects the appropriate sound option based on the program content.

When adjusting sound options equalizer manually, SSM is automatically changed to **User**.

1. Press the **MENU** button and then **▲** / **▼** button to select the **SOUND** menu.
2. Press the **▶** button and then **▲** / **▼** button to select **SSM**.

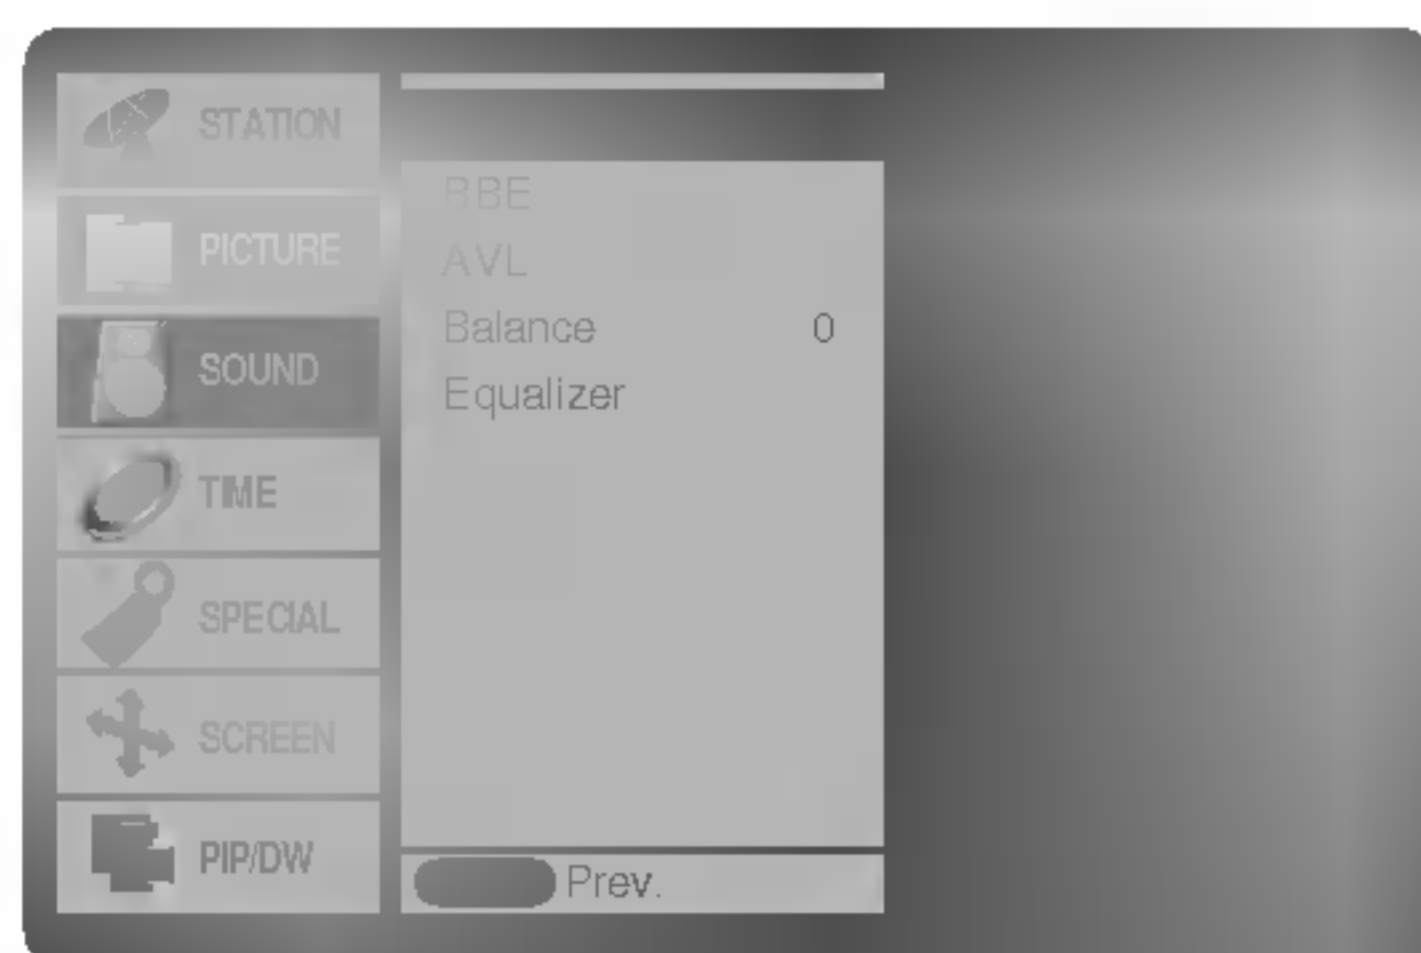

3. Press the **▶** button and then **▲** / **▼** button to select a sound setting on the **SSM** pull-down menu.
4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

To recall your preferred setting, press the **SSM** button until the desired sound (**SRS TSXT**, **Flat**, **Music**, **Movie**, **Speech** or **User**) appears. The sound **SRS TSXT**, **Flat**, **Music**, **Movie** and **Speech** are programmed for good sound reproduction at the factory and cannot be changed.

Note :


- a. If you press the **SSM** button after making appropriate adjustment on the **Equalizer** sub menu, the display **User** automatically appears even though you have already set a factory pre-set setting; **SRS TSXT**, **Flat**, **Music**, **Movie** or **Speech**.
- b. Equalizer isn't suitable to use **SRS TSXT**.

- **SRS** is a trademark of SRS Labs, Inc.
- TruSurround XT technology is incorporated under license from SRS Labs, Inc.



BBE

- BBE High Definition Sound restores clarity and presence for better speech intelligibility and musical realism.
- It's not available to use this function in **SRS TSXT** mode.

1. Press the **MENU** button and then **▲** / **▼** button to select the **SOUND** menu.
2. Press the **▶** button and then **▲** / **▼** button to select **BBE**.

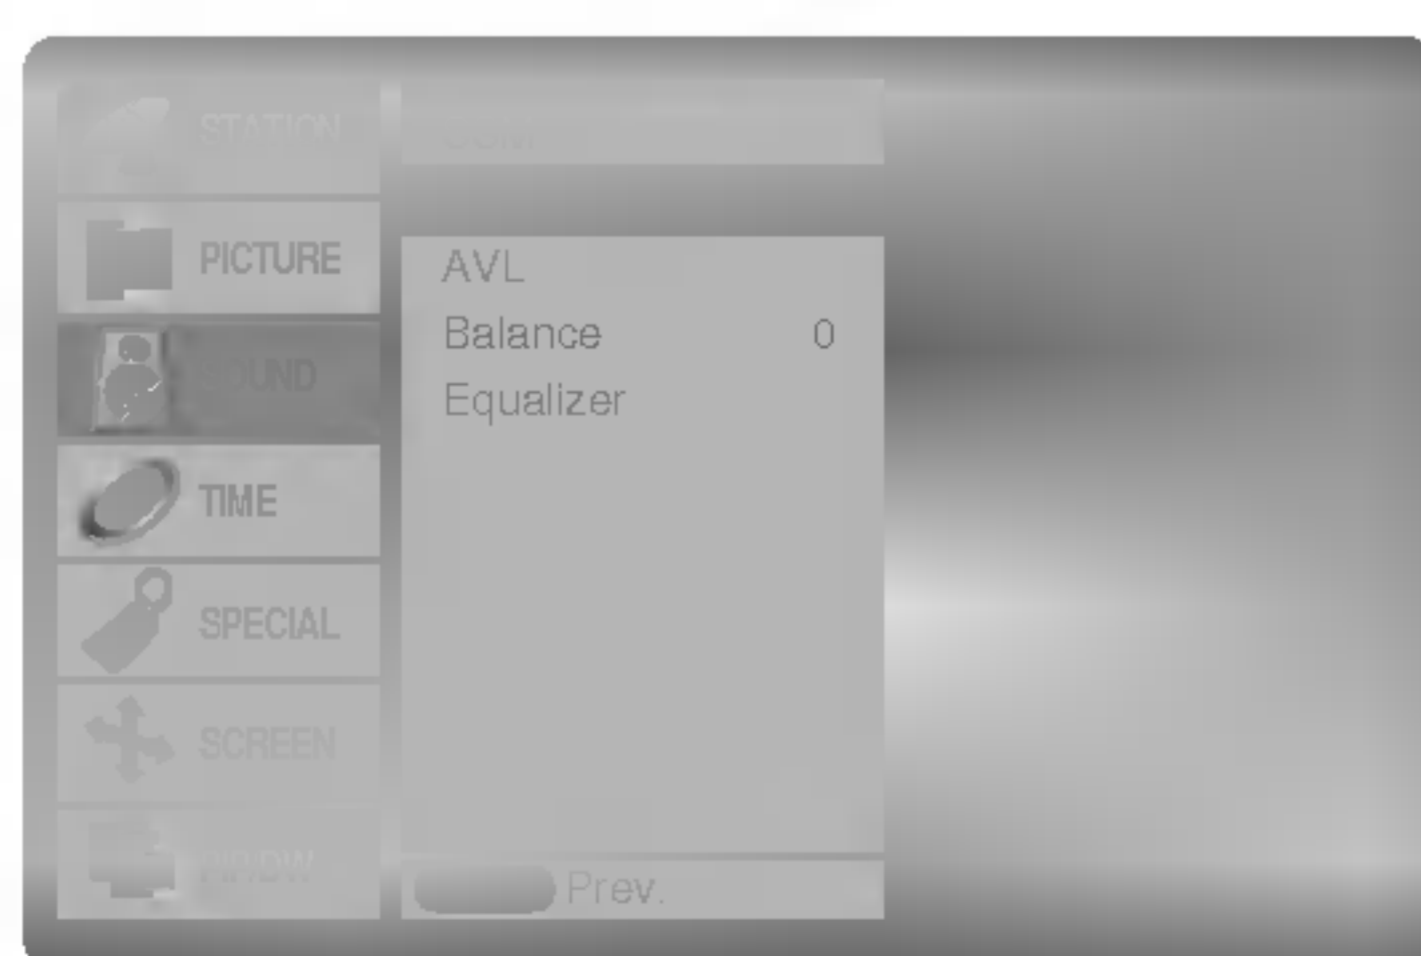

3. Press the **▶** button and then **▲** / **▼** button to select **On** or **Off**.
4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

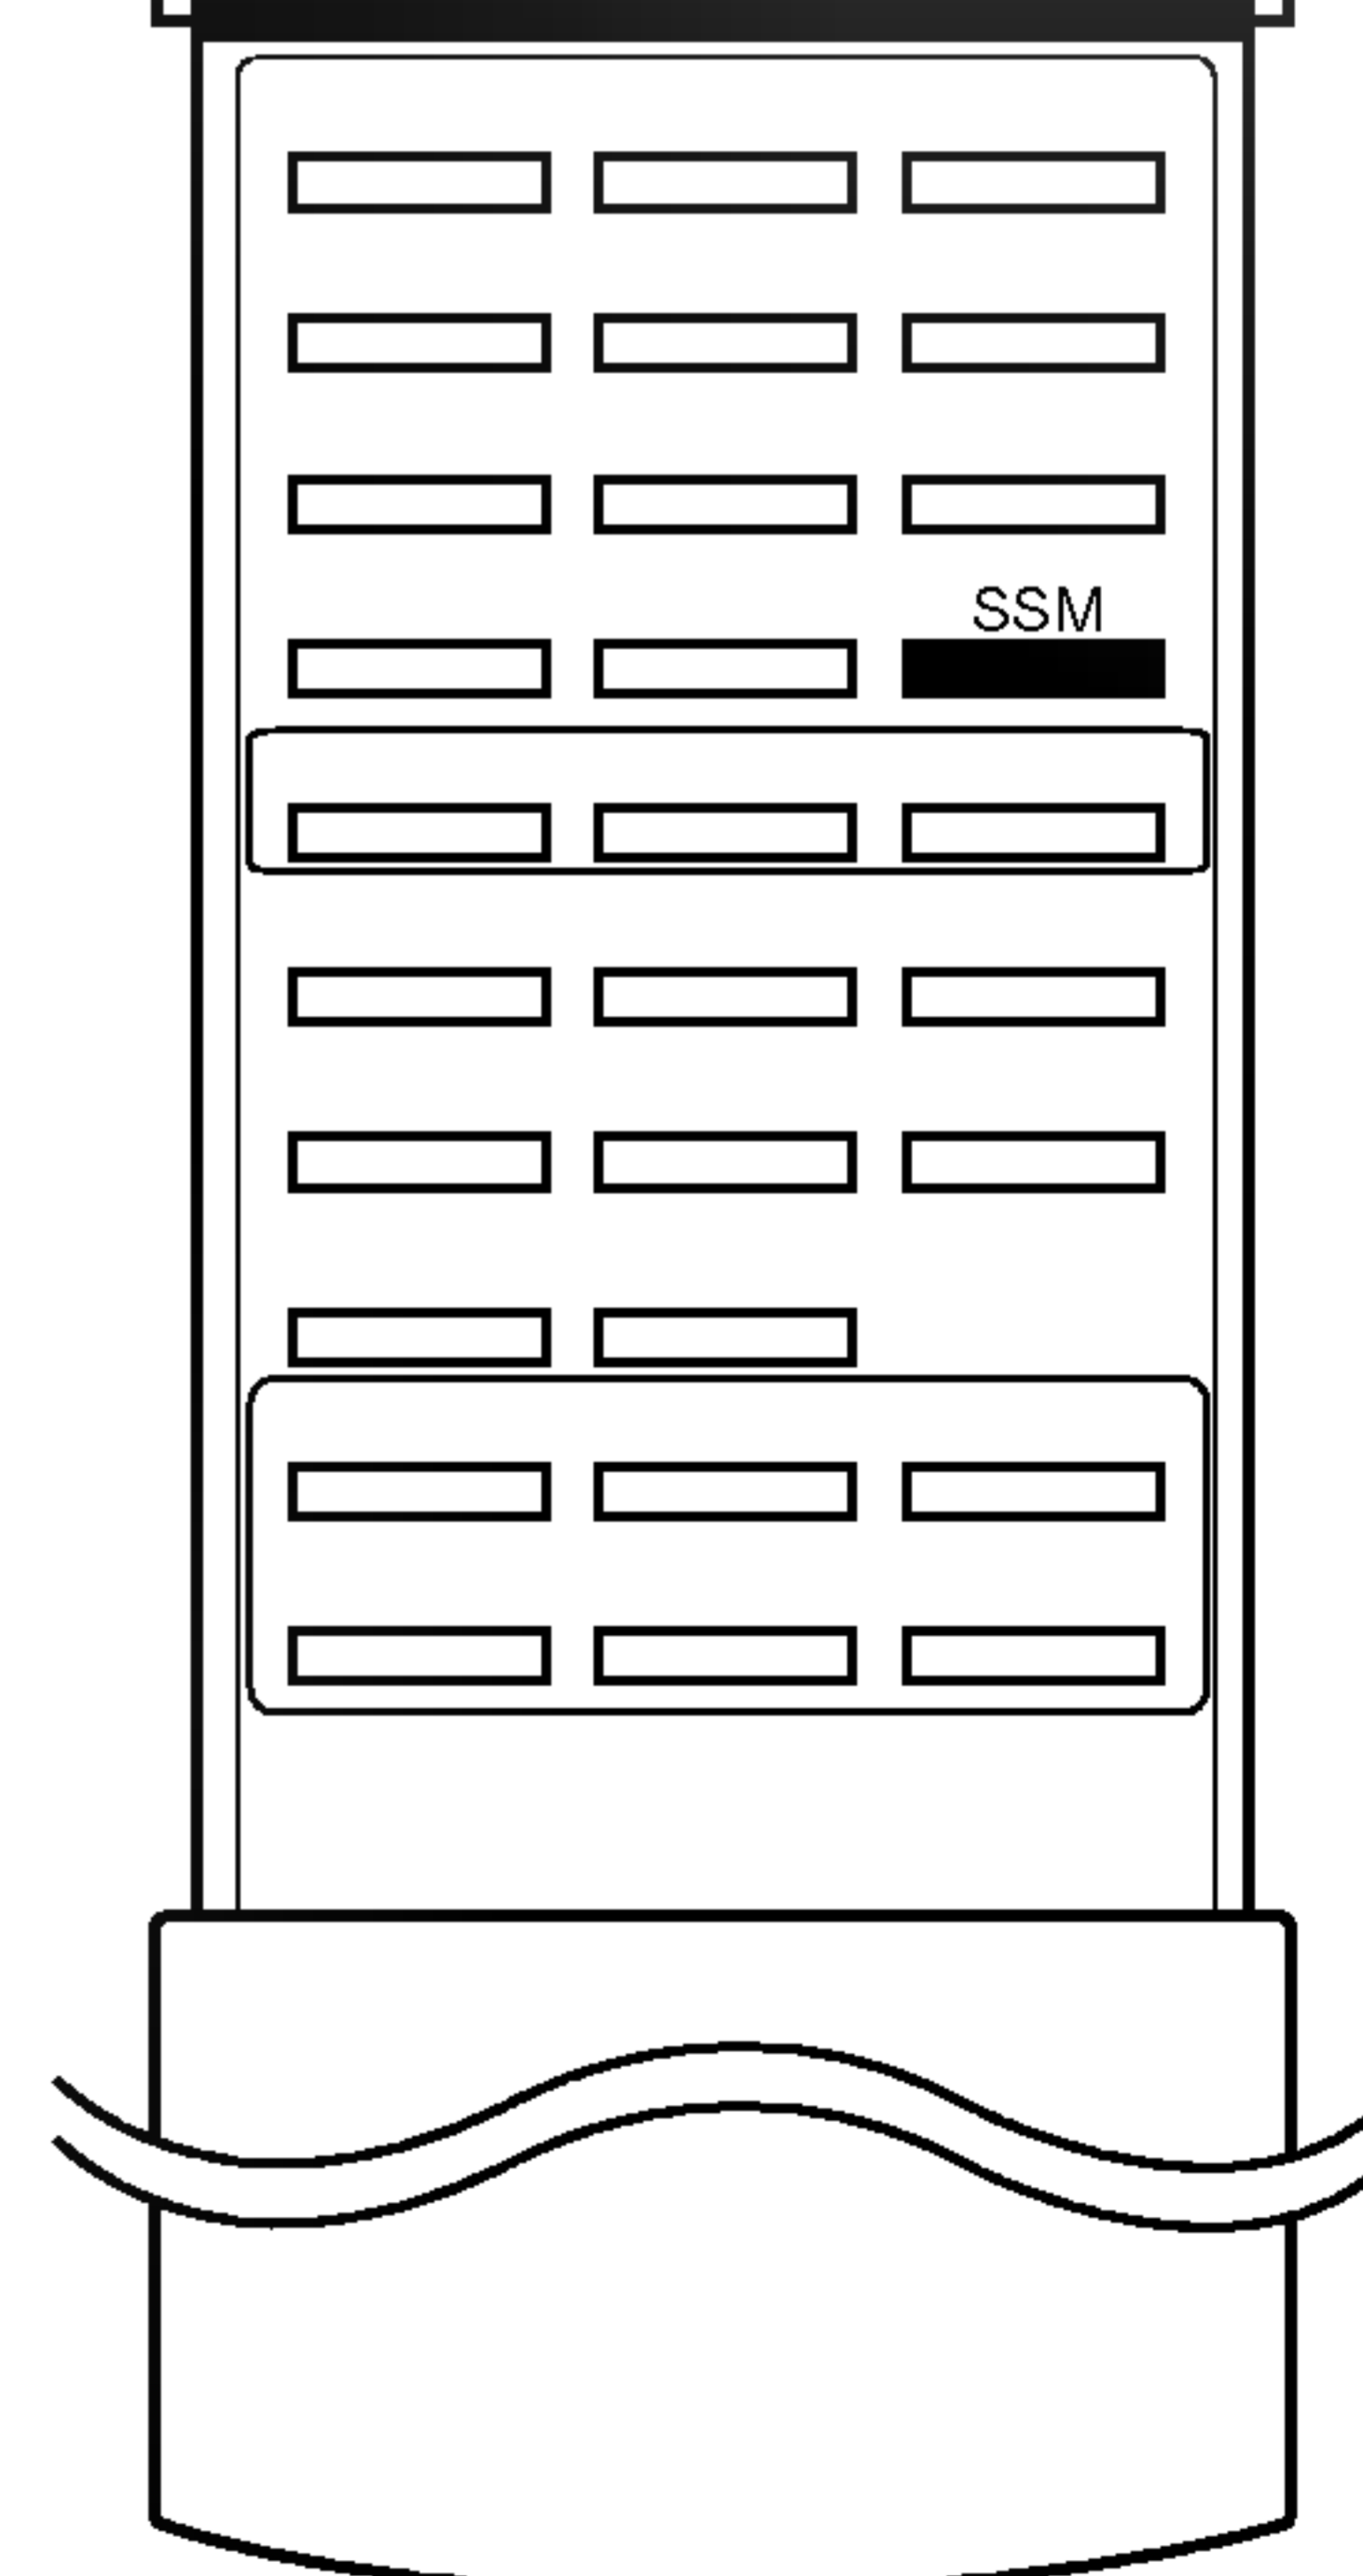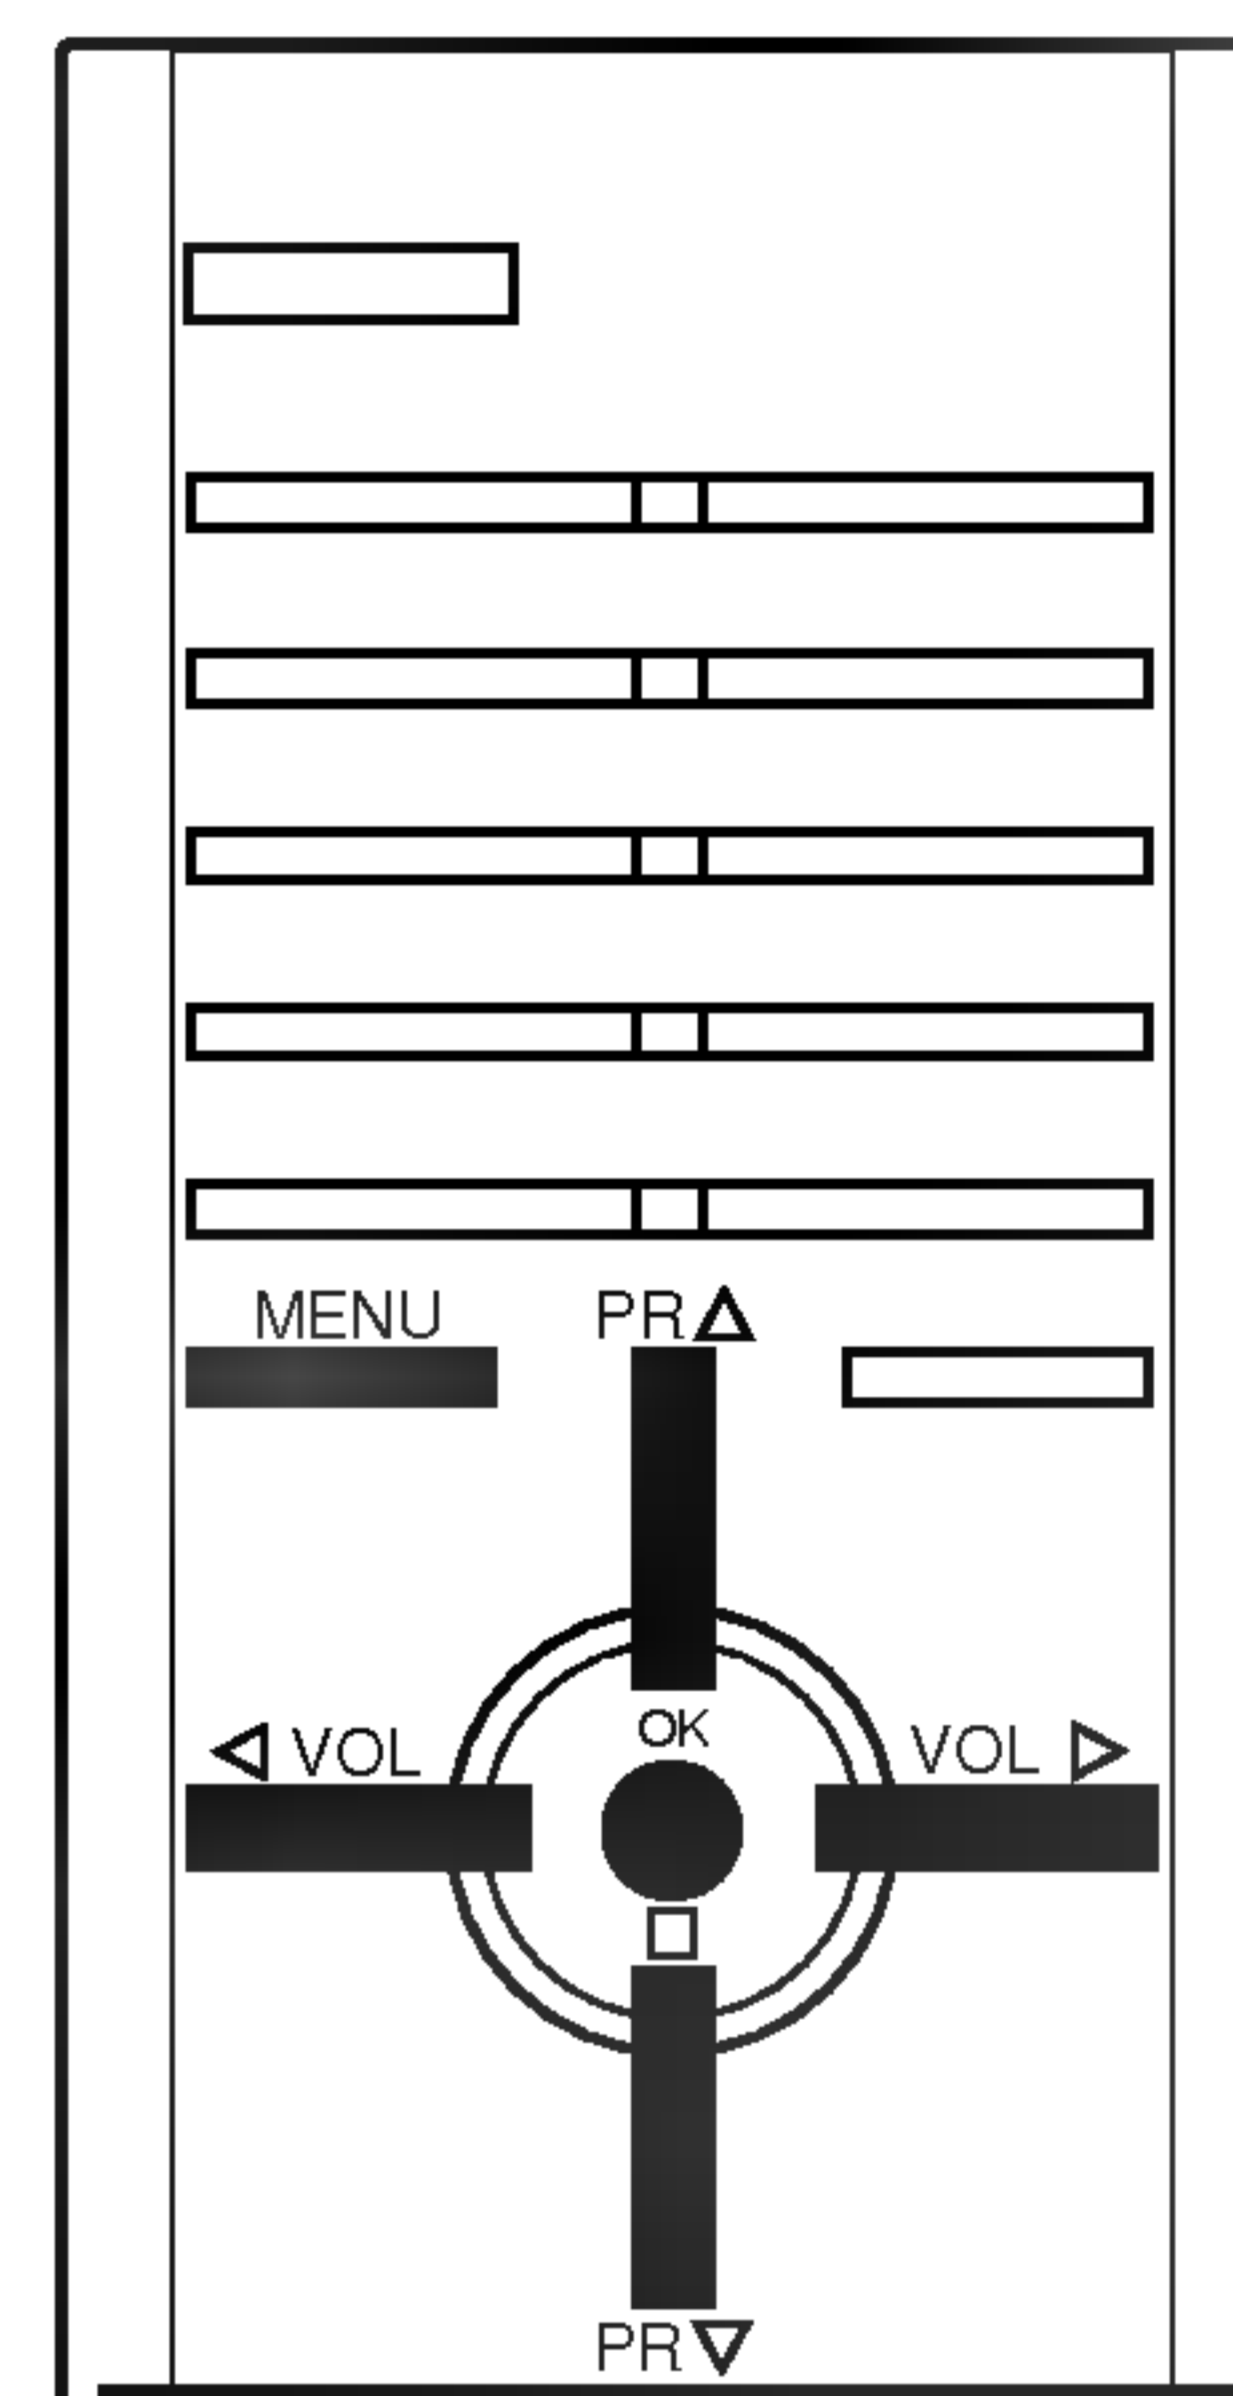


SOUND MENU

AVL (Auto Volume Leveler)



If you select **AVL On**, the set automatically keeps on an equal volume level even if you change programmes.

1. Press the **MENU** button and then **▲ / ▼** button to select the **SOUND** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **AVL**.

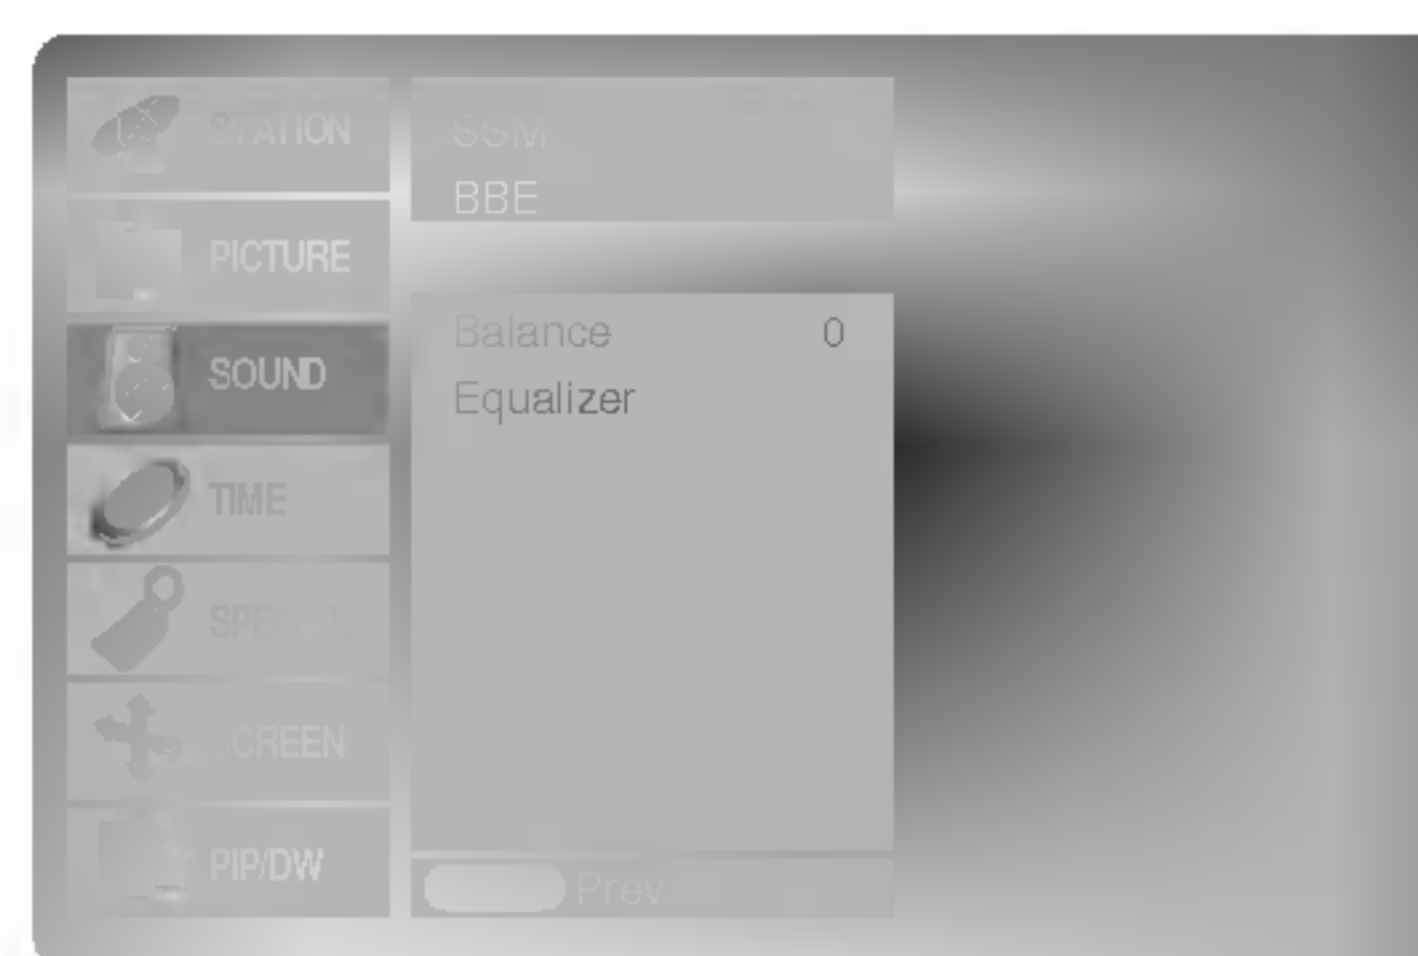

3. Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.
4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.


Balance adjustment

You can adjust balance.

1. Press the **MENU** button and then **▲ / ▼** button to select the **SOUND** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Balance**.



3. Press the **▶** button.
4. Make desired adjustment with the **◀ / ▶** button on the Balance pull-down menu.
5. Press the **OK** button.
6. Repeatedly press the **MENU** button to return to normal TV viewing.

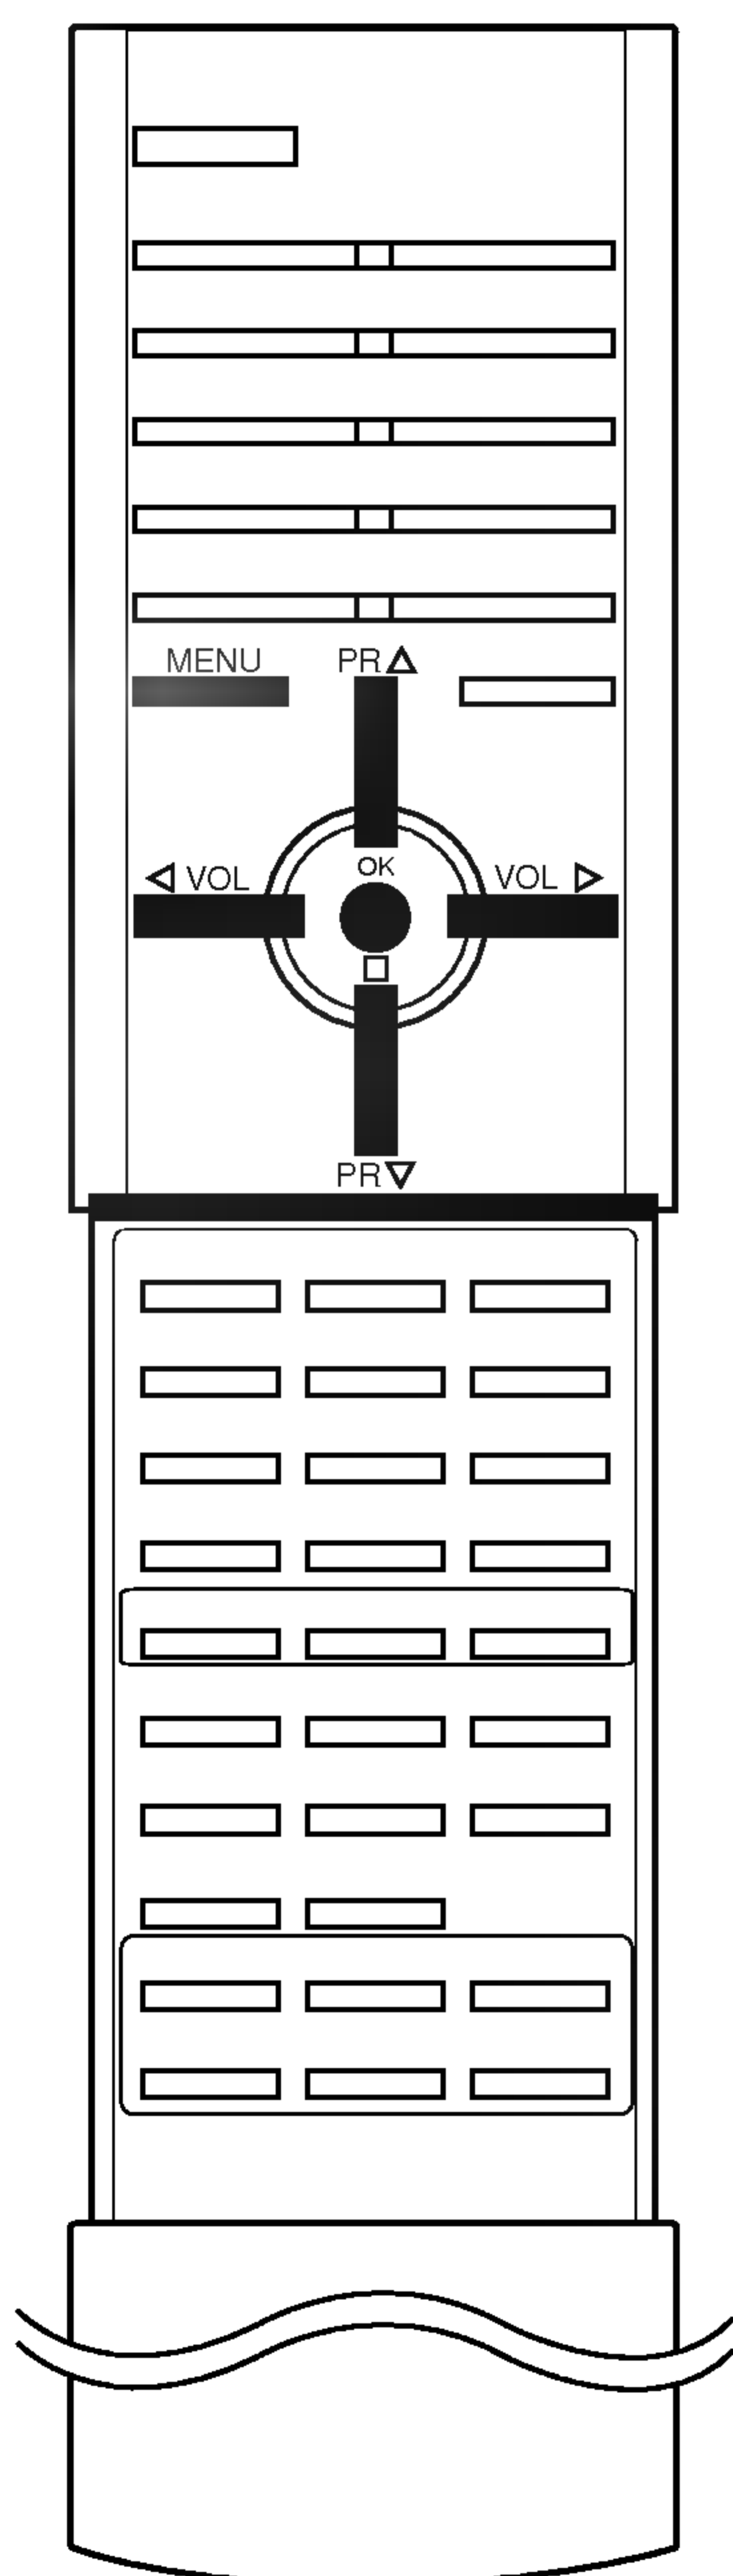

SOUND MENU

Equalizer (option)

1. Press the **MENU** button and then **▲** / **▼** button to select the **SOUND** menu.
2. Press the **▶** button and then **▲** / **▼** button to select **Equalizer**.
3. Press the **▶** button in **Equalizer** to display the **Equalizer** sub menu.




4. Select a sound band by pressing the **▲** / **▼** button.
5. Make appropriate sound level with the **◀** / **▶** button.
6. Press the **OK** button.
7. Repeatedly press the **MENU** button to return to normal TV viewing.

Sound output selection

In AV mode, you can select output sound for the left and right loudspeakers.

Repeatedly press the **I/II** button to select the sound output.


- L+R** : Audio signal from audio L input is sent to the left loud speaker and audio signal from audio R input is sent to the right loud speaker.
- L+L** : Audio signal from audio L input is sent to left and right loudspeakers.
- R+R** : Audio signal from audio R input is sent to left and right loudspeakers.

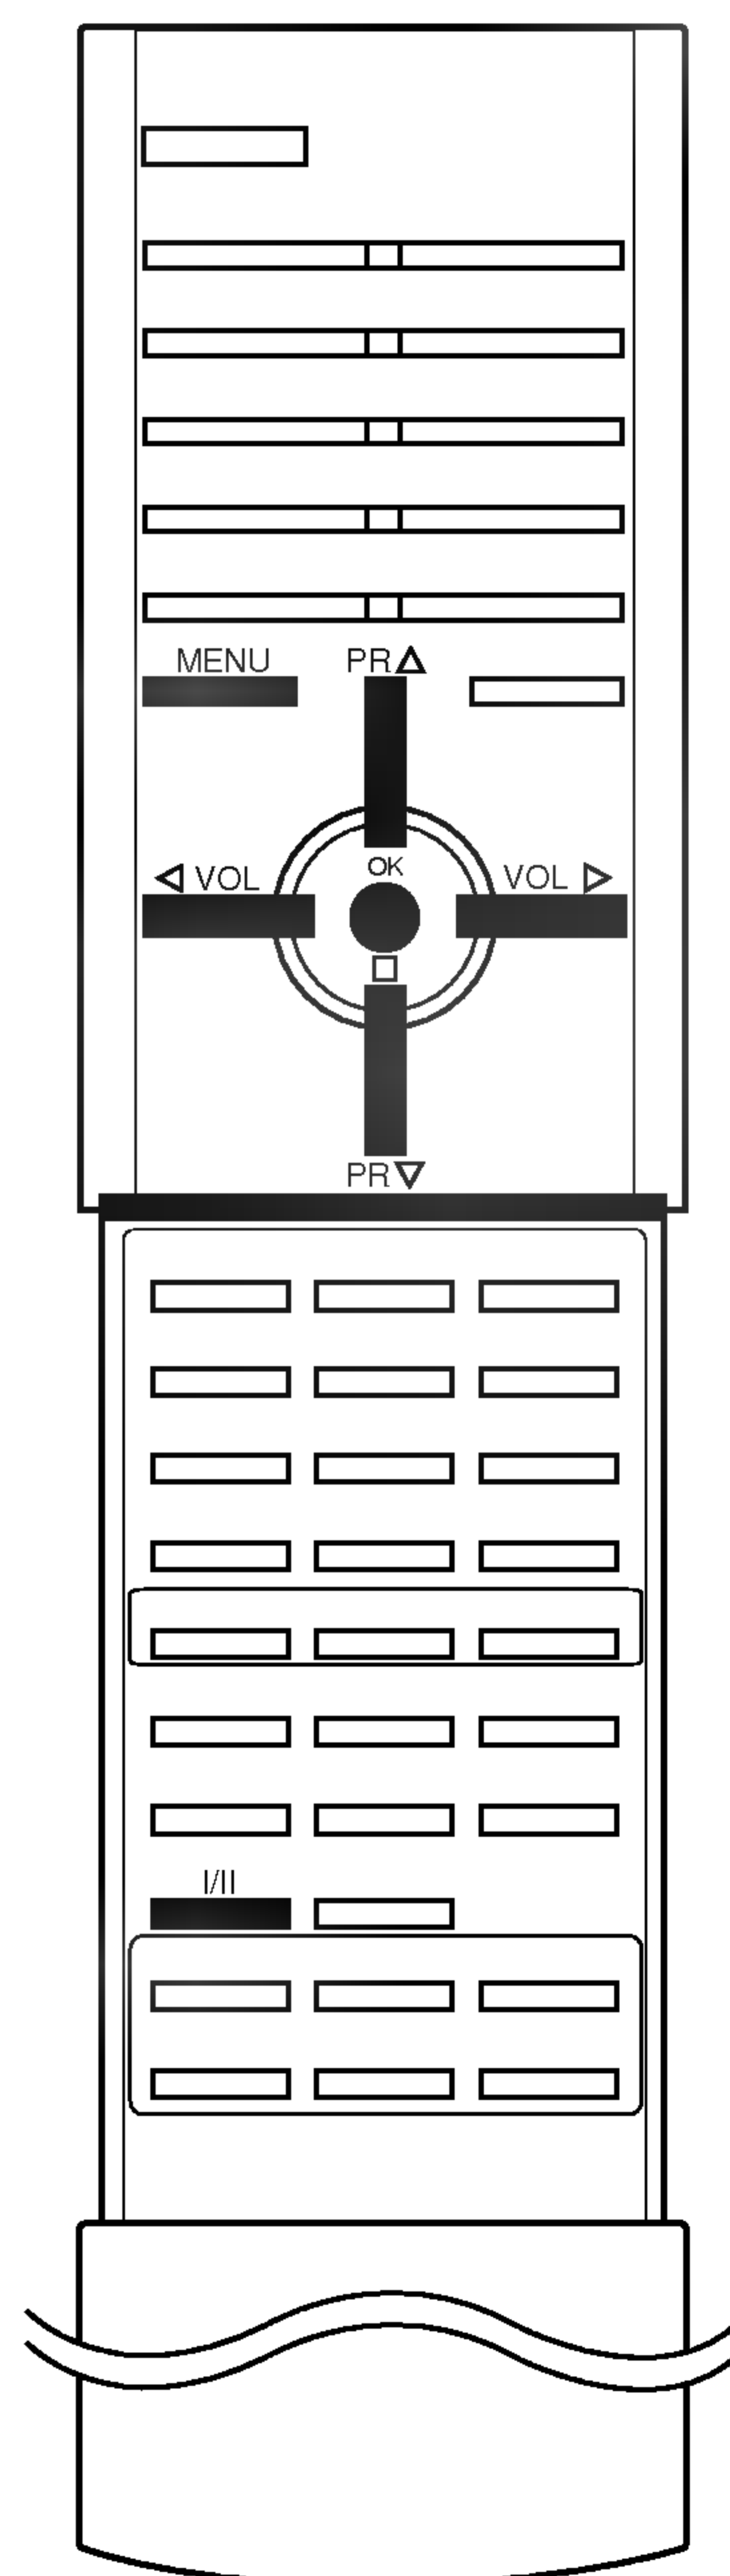

SOUND MENU

Stereo/Dual reception

When a programme is selected, the sound information for the station appears after the programme number and station name disappear.

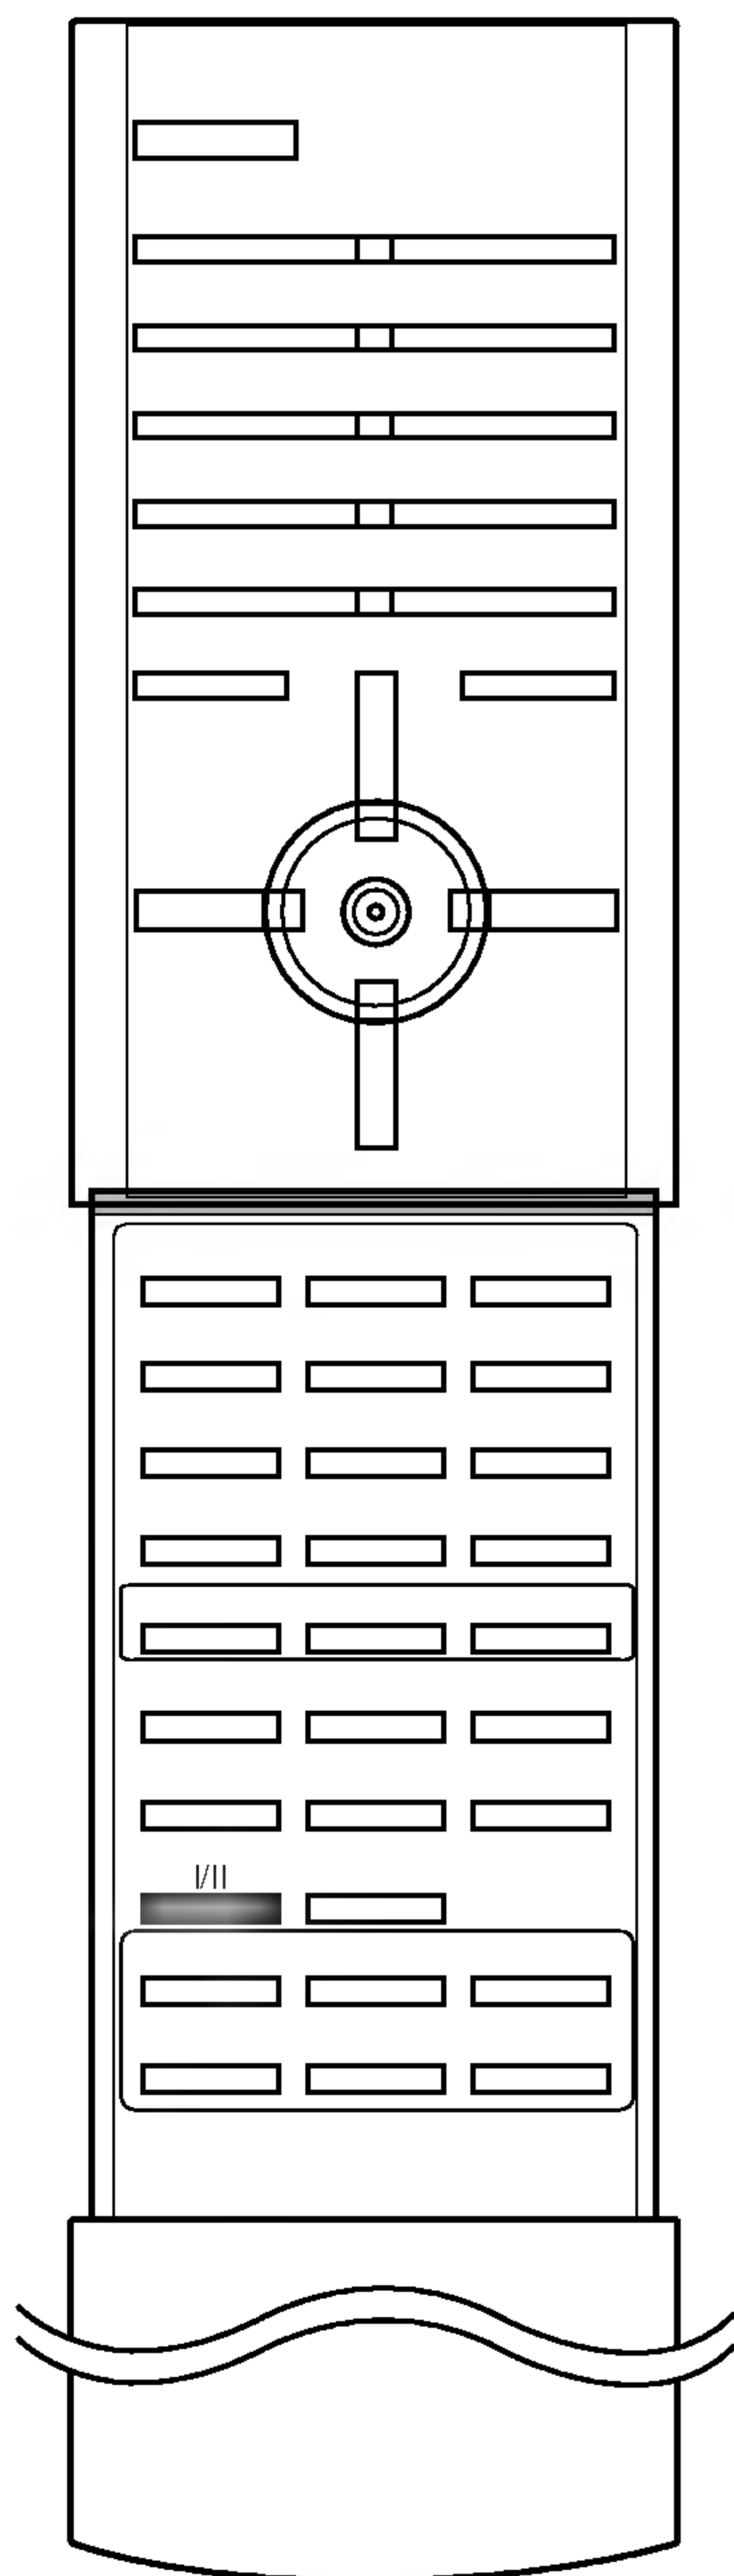

Broadcast	On Screen Display
Mono	MONO
Stereo	STEREO
Dual	DUAL I

Mono sound selection

In stereo reception if the stereo signal is weak, you can switch to mono by pressing the **I/II** button twice. In mono reception the depth of sound is improved. To switch back to stereo, press the **I/II** button twice again.

Language selection for dual language broadcast

If a programme received in two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the **I/II** button repeatedly.

DUAL I sends the primary broadcast language to the loudspeakers.

DUAL II sends the secondary broadcast language to the loudspeakers.

DUAL I+II sends a separate language to each loudspeaker.

NICAM reception

If your set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Sound Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the **I/II** button repeatedly.

1. When NICAM mono is received, you can select **NICAM MONO** or FM MONO.
2. When NICAM stereo is received, you can select **NICAM STEREO** or FM MONO. If the stereo signal is weak, switch to FM mono.
3. When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**.

TIME MENU

Clock

You must set the time correctly before using on/off time function.

1. Press the **MENU** button and then ▲ / ▼ button to select the TIME menu.
2. Press the ► button and then ▲ / ▼ button to select **Clock**.




3. Press the ► button and then use ▲ / ▼ button to adjust the hour.
4. Press the ► button and then use ▲ / ▼ button to adjust the minute.
5. Press the **OK** button.
6. Repeatedly press the **MENU** button to return to normal TV viewing.

On/Off Timer


Timer function operates only if current time has been already set. Off Timer function overrides on Timer function if they are set to the same time.

The TV must be in standby mode for the On Timer to work.

1. Press the **MENU** button and then ▲ / ▼ button to select the TIME menu.
2. Press the ► button and then use ▲ / ▼ button to select **Off Time** or **On Time**.

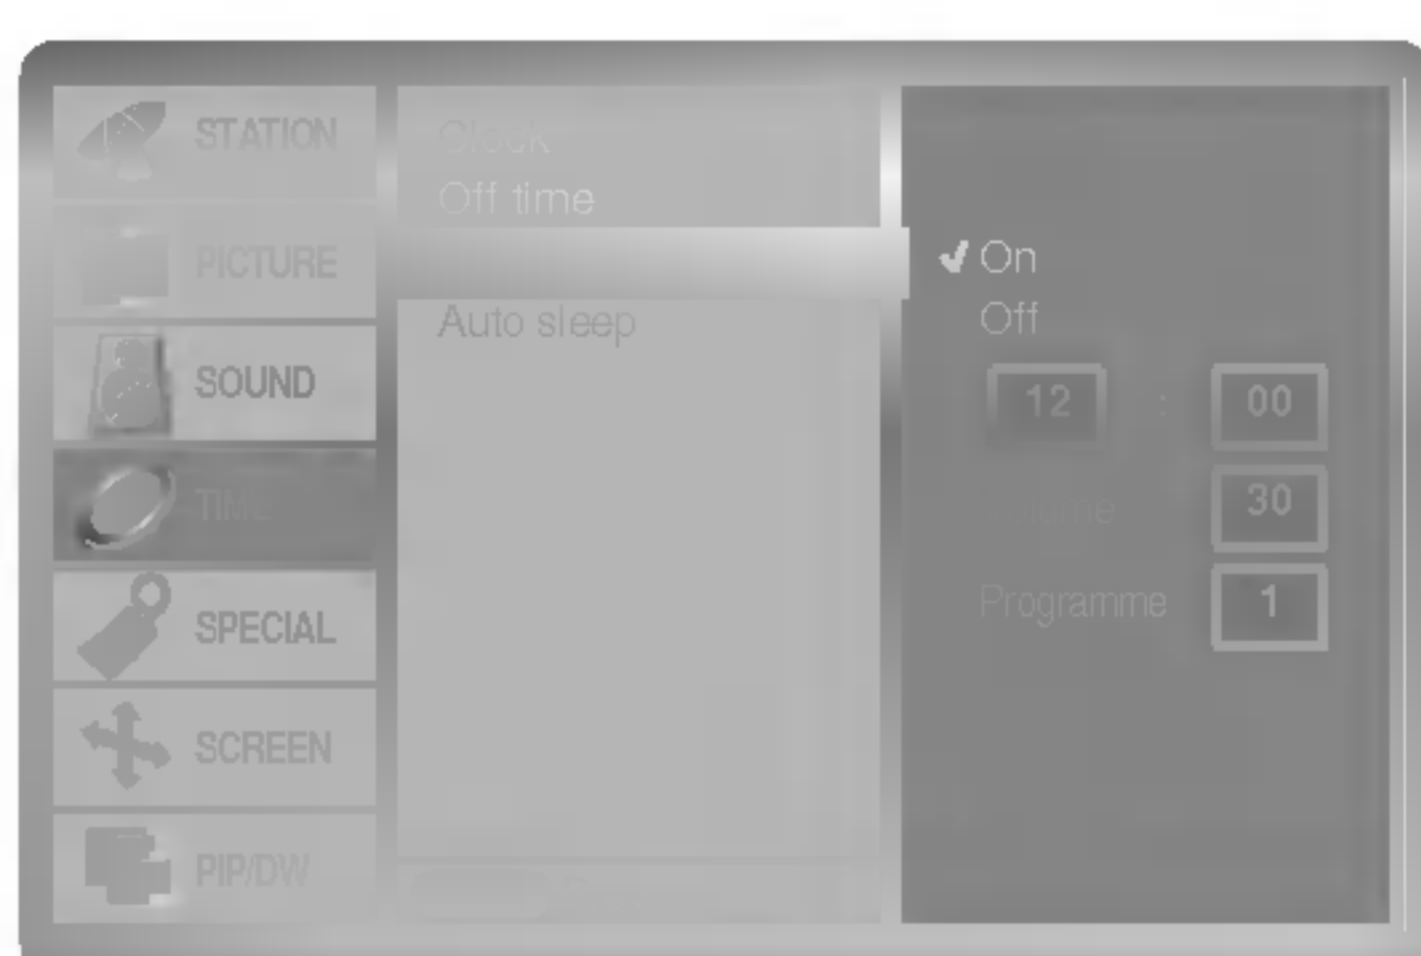

3. Press the ► button and then use ▲ / ▼ button to select **On**.
4. Press the ► button and then use ▲ / ▼ button to adjust the hour.
5. Press the ► button and then use ▲ / ▼ button to adjust the minute.
6. **Only On Time function**; Press the ► button and then use ▲ / ▼ button to adjust volume level and programme number.
7. Press the **OK** button.
8. Repeatedly press the **MENU** button to return to normal TV viewing.

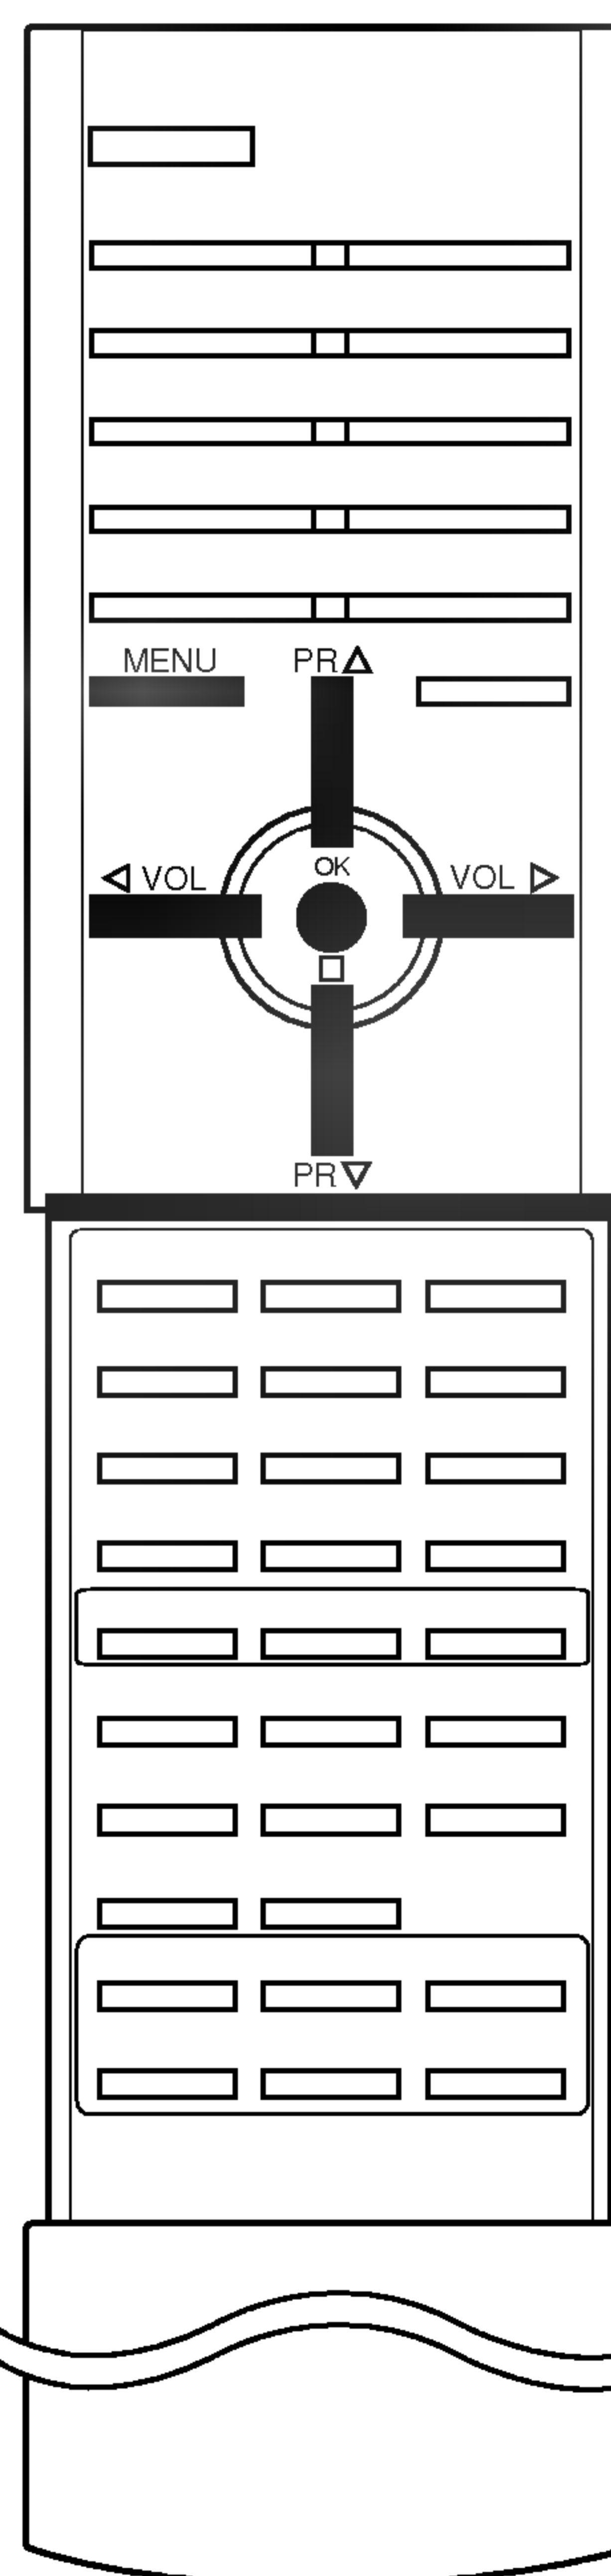

TIME MENU




Auto sleep

If there is no input signal, the TV turn off automatically after 10 minutes.

1. Press the **MENU** button and then **▲** / **▼** button to select the **TIME** menu.
2. Press the **▶** button and then **▲** / **▼** button to select **Auto sleep**.



3. Press the **▶** button and then **▲** / **▼** button to select **On** or **Off**.
4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

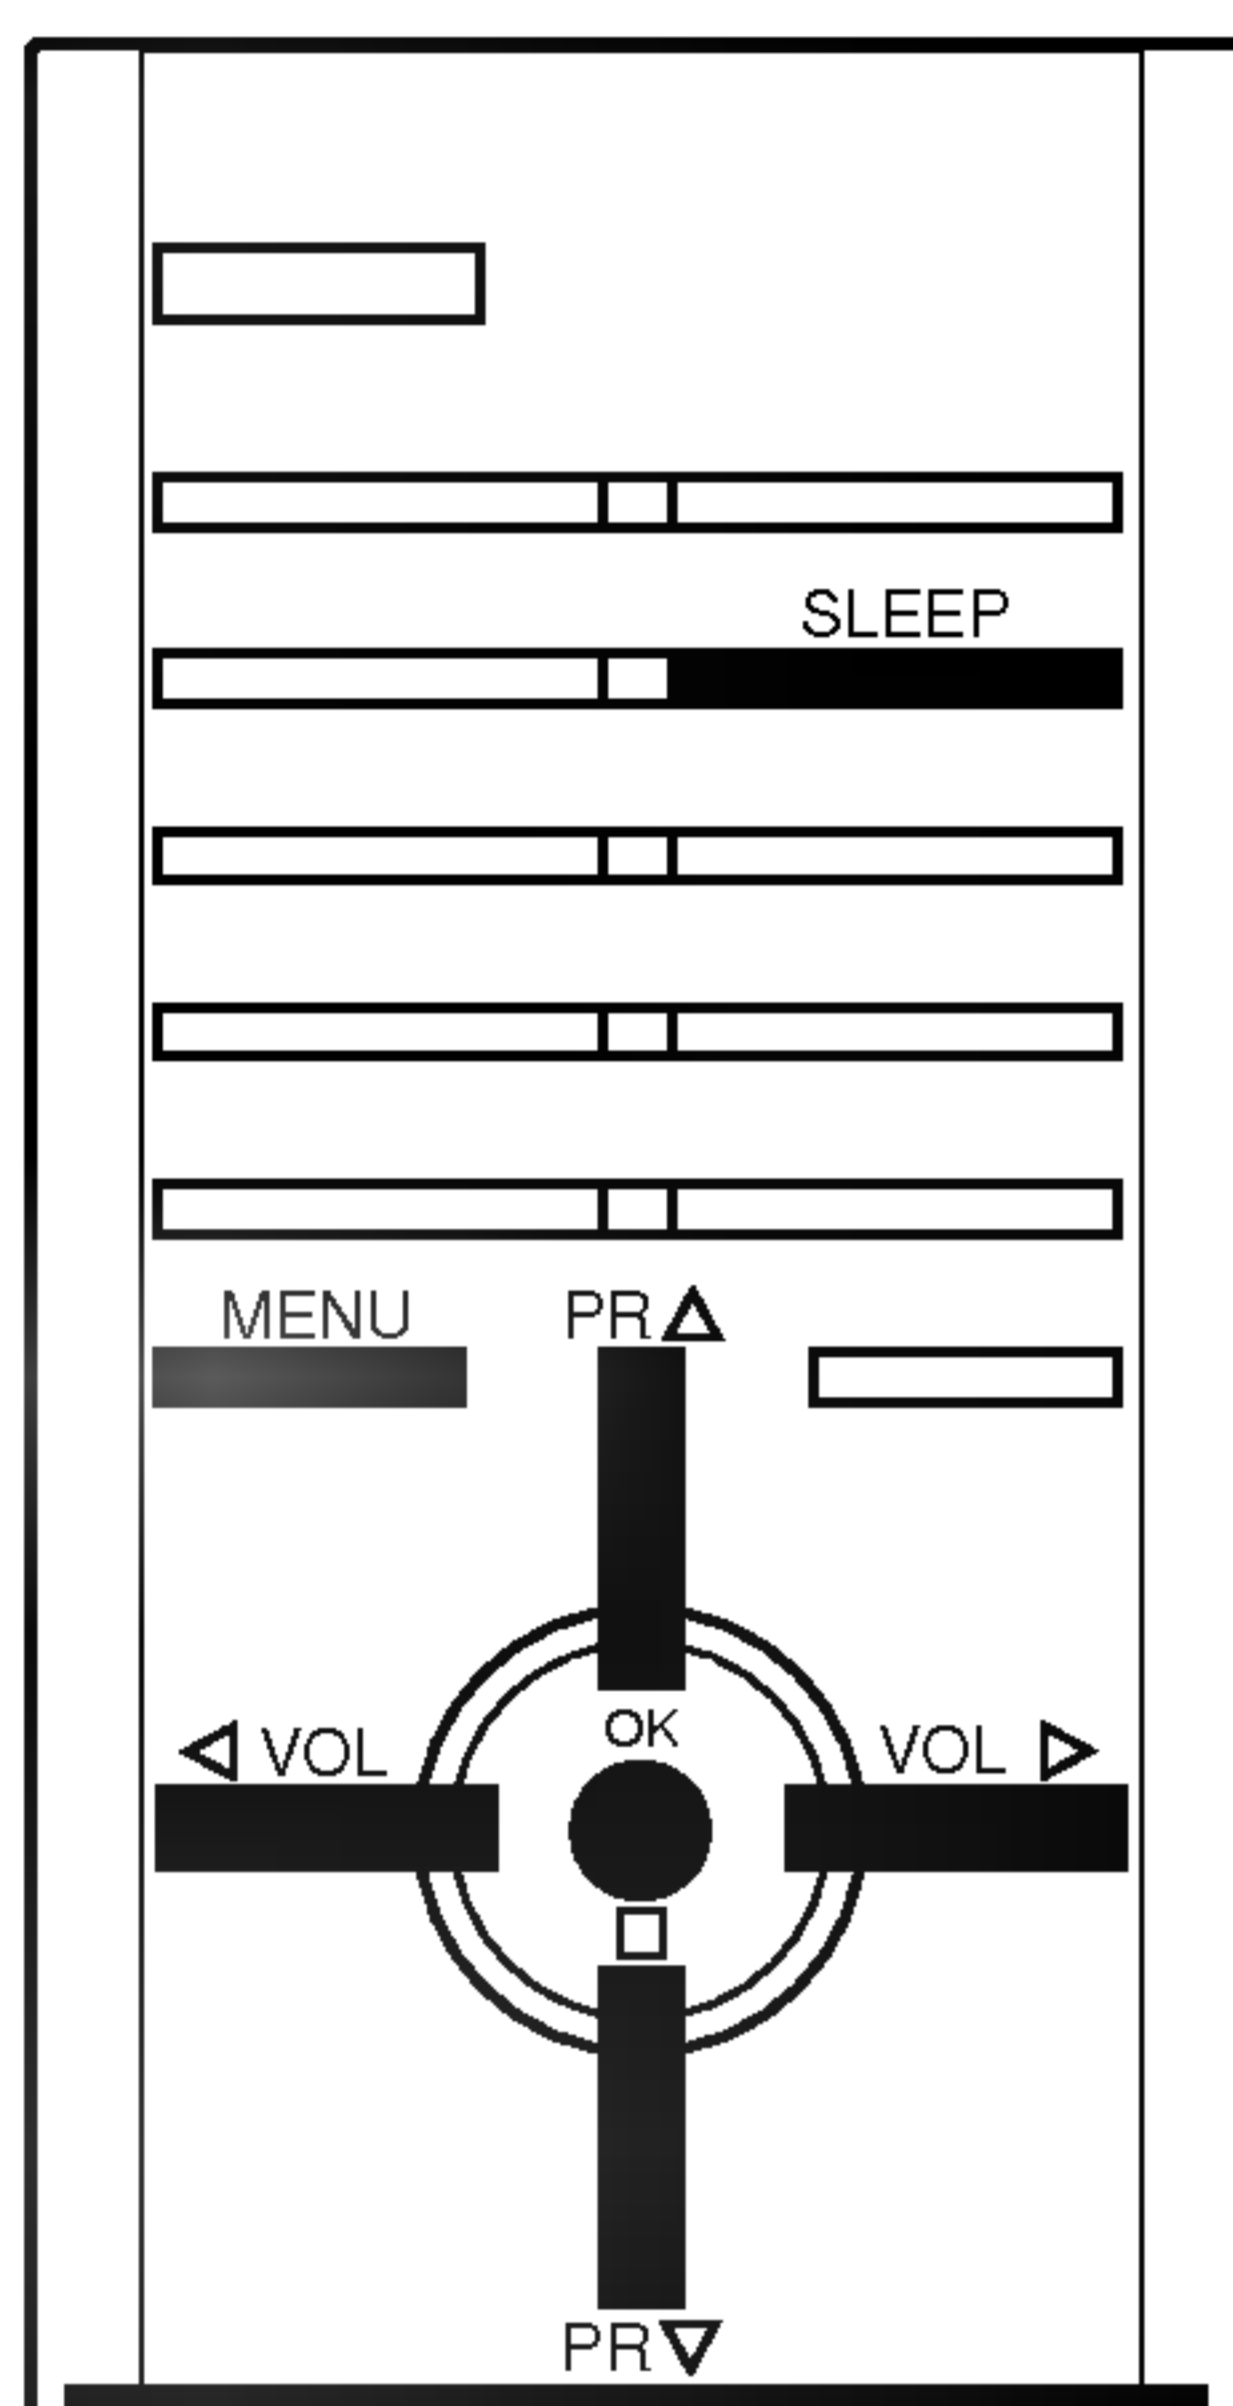

Sleep Timer

Sleep timer turns the set off at the preset time.

Press the **SLEEP** button to select the number of minutes. The display **L^{zz} --- Min** will appear on the screen, followed by **10, 20, 30, 60, 90, 120, 180** and **240** minutes. The timer begins to count down from the number of minutes selected.

Note :


- a. To check the remaining sleep time, press the **SLEEP** button once.
- b. To cancel the sleep time, repeatedly press the **SLEEP** button until the display **L^{zz} --- Min** appears.
- c. If you turn the set off after setting the sleep timer, the setting will be erased.

SPECIAL MENU

Child Lock

The TV can be set so that the remote control handset is needed to control it. This feature can be used to prevent unauthorized viewing.

1. Press the **MENU** button and then ▲ / ▼ button to select the **SPECIAL** menu.
2. Press the ► button and then ▲ / ▼ button to select **Child lock**.

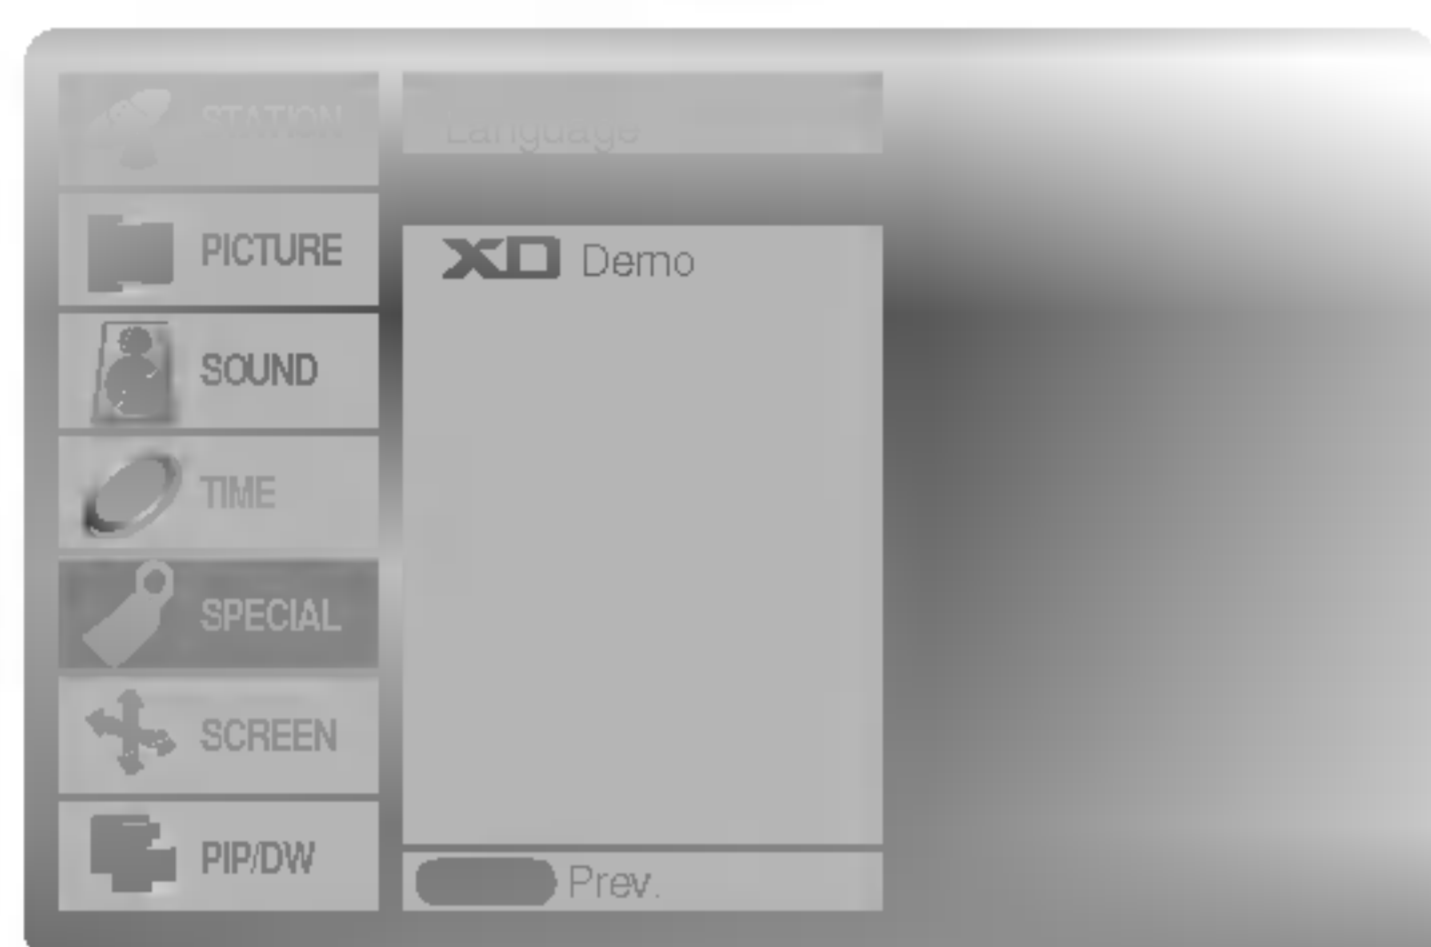


3. Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
4. Press the **OK** or ◀ button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

With the lock on, the display **Child lock On** appears on the screen if any button on the front panel is pressed while viewing the TV.



XD Demo

Use it to see the difference between XD demo on and XD Demo off. It's not available to use this function in RGB[PC], HDMI[PC] mode.

1. Press the **MENU** button and then ▲ / ▼ button to select the **SPECIAL** menu.
2. Press the ► button and then ▲ / ▼ button to select **XD Demo**.

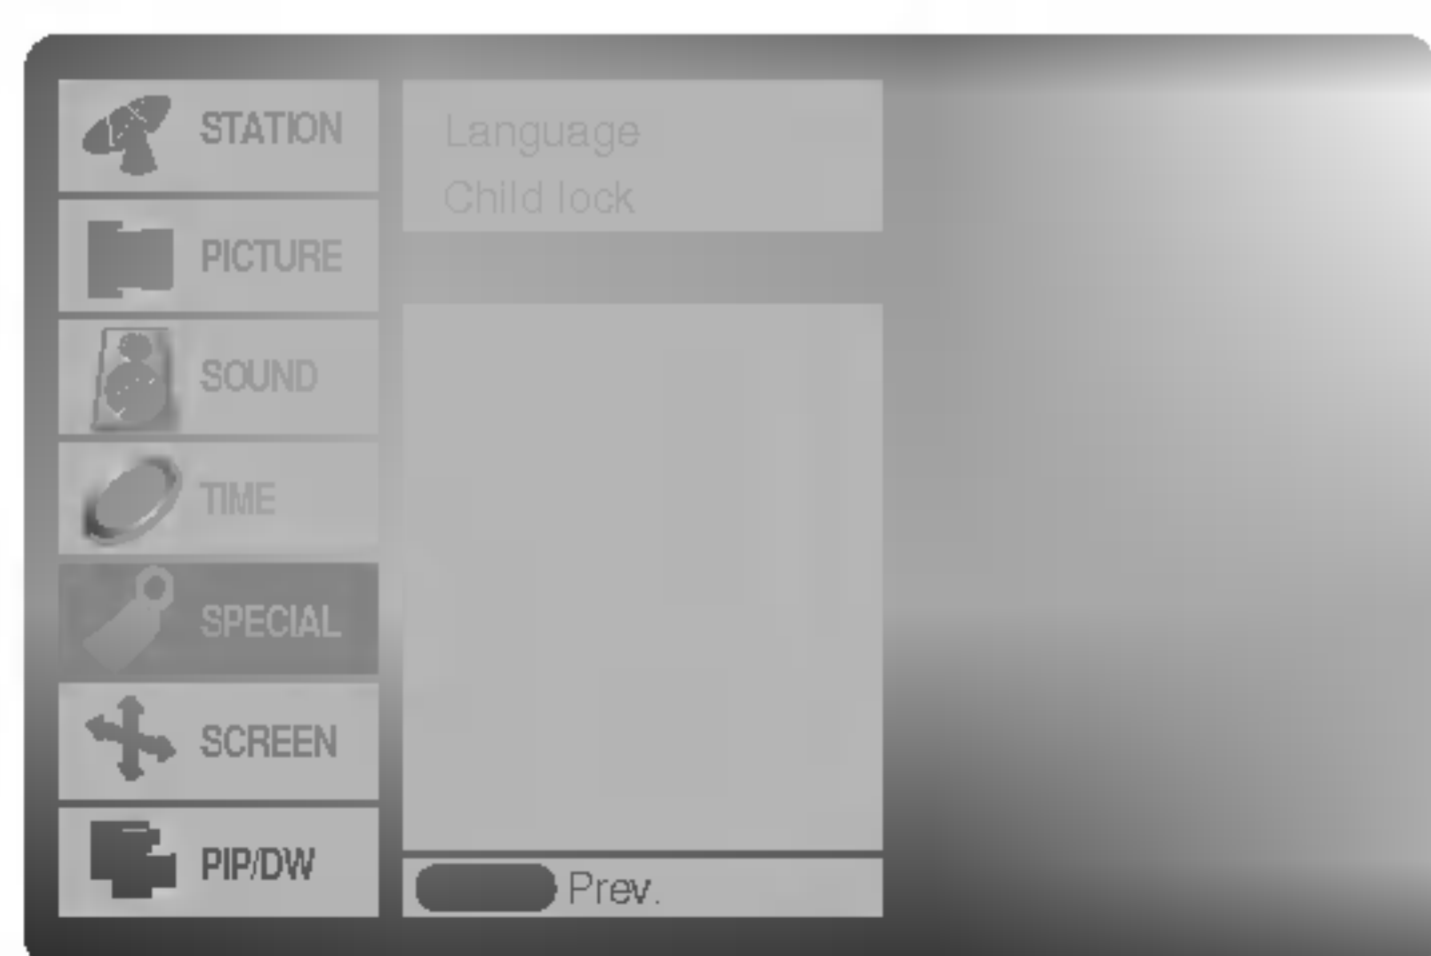

3. Press the ► button to begin **XD Demo**.
4. To stop **XD Demo**, press the **CANCEL/EXIT** button.

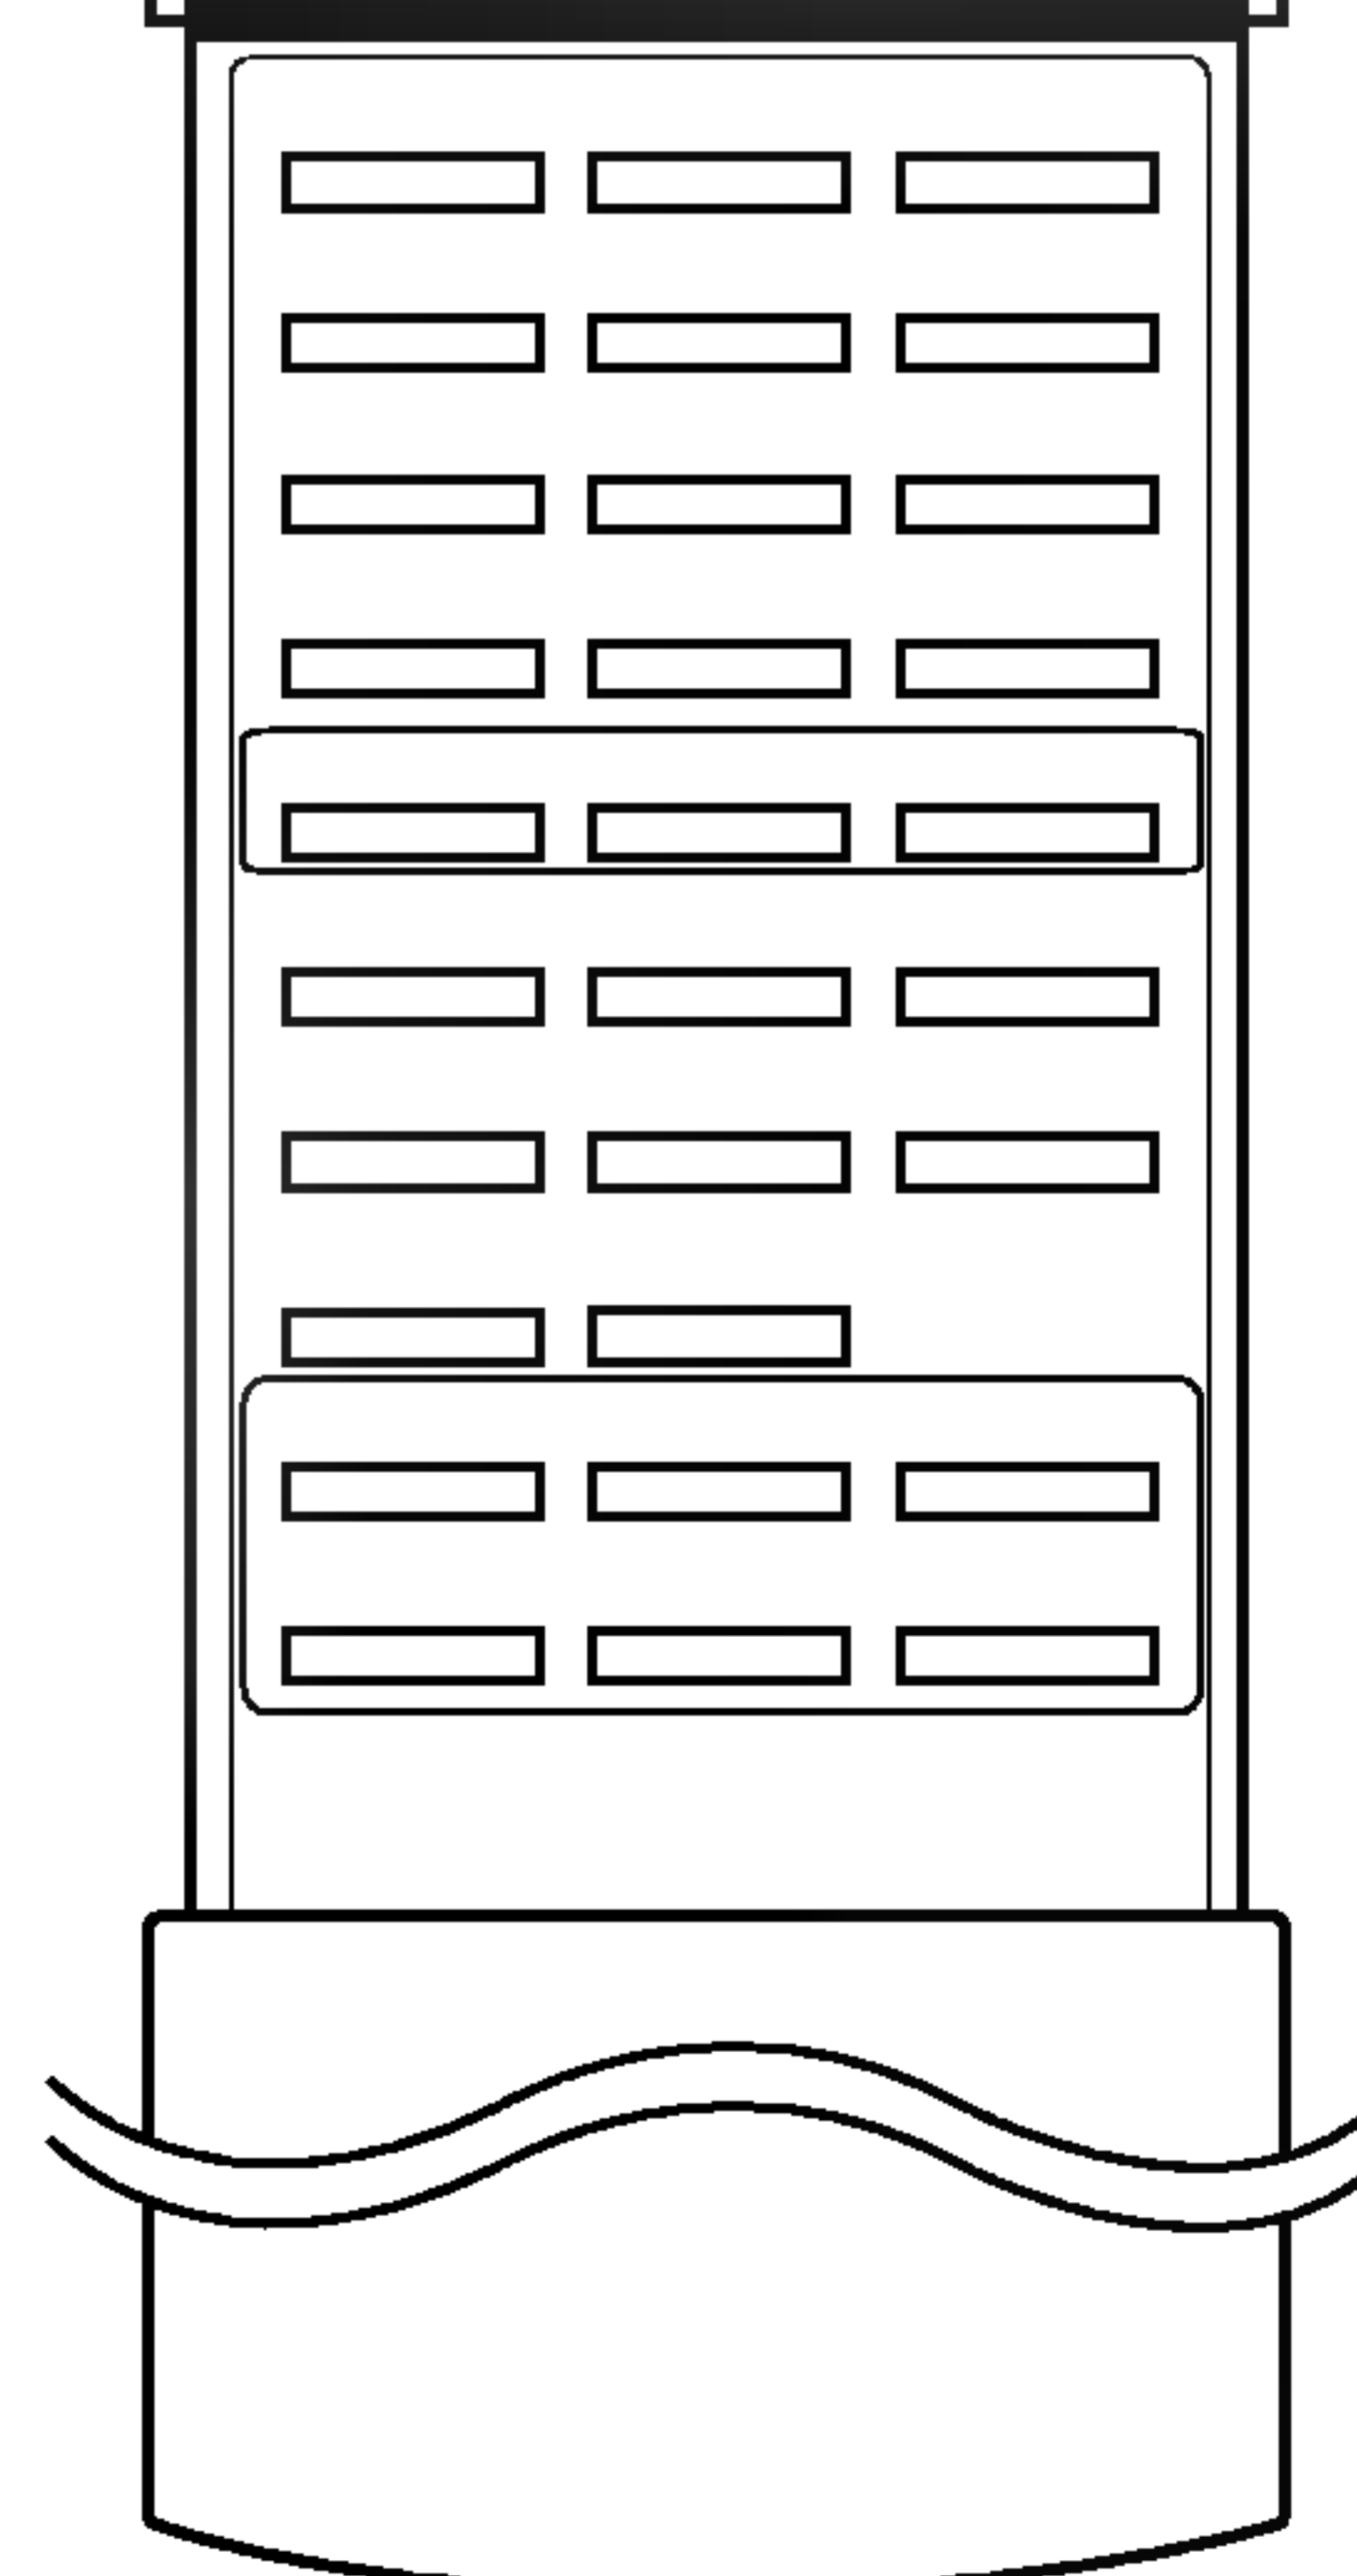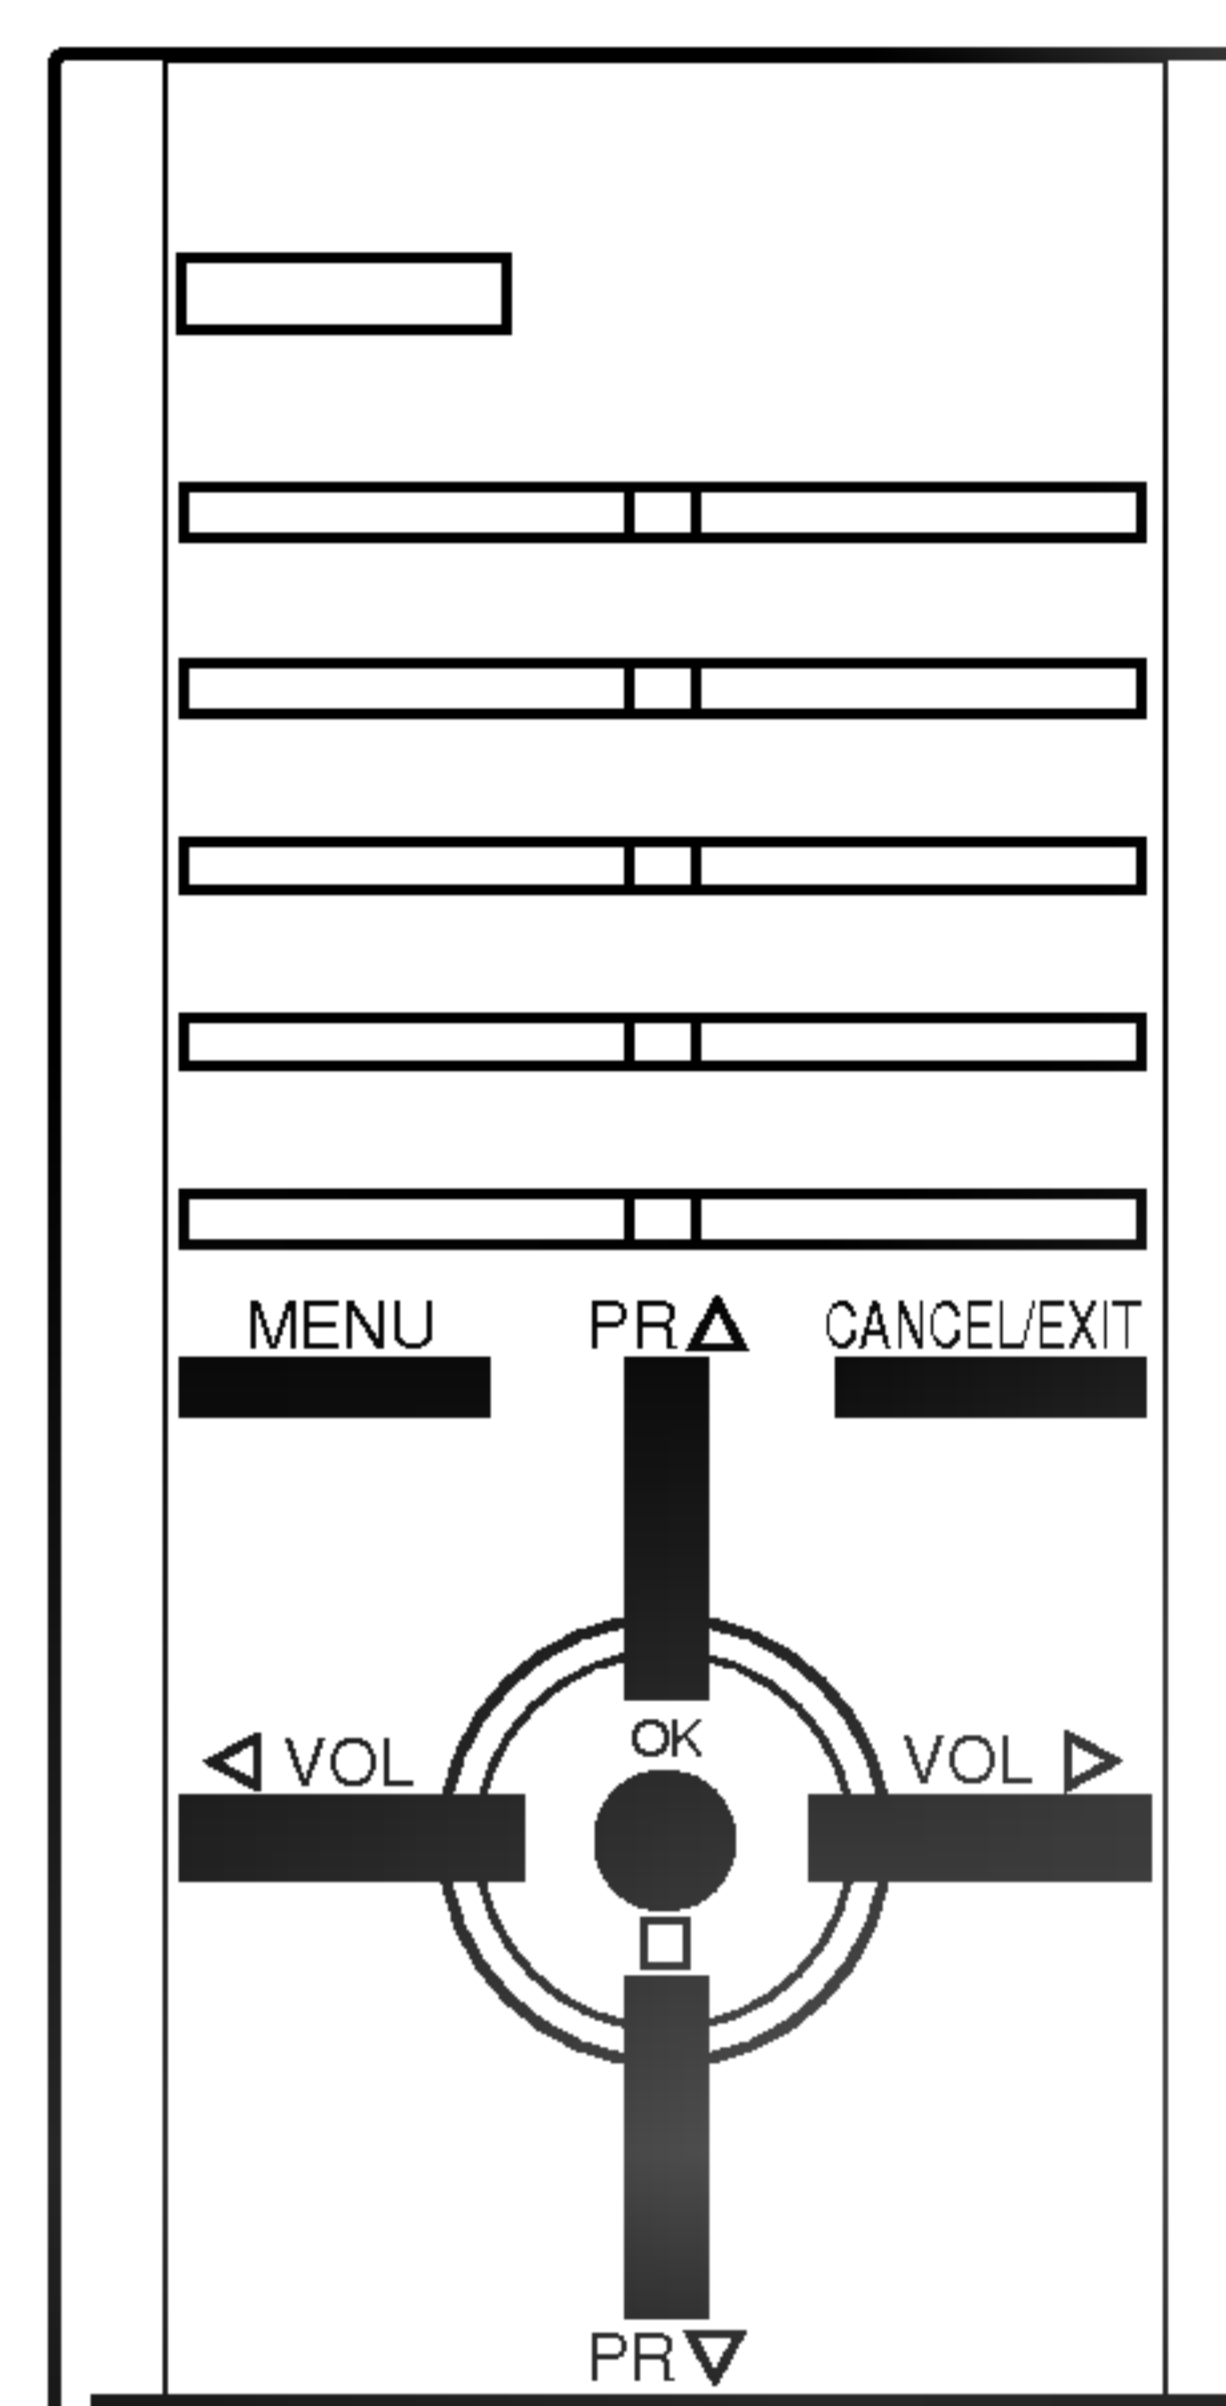



SCREEN MENU



Auto Configuration (RGB [PC] mode only)

Automatically adjusts picture position and minimizes image shaking.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **SCREEN** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Auto config.**

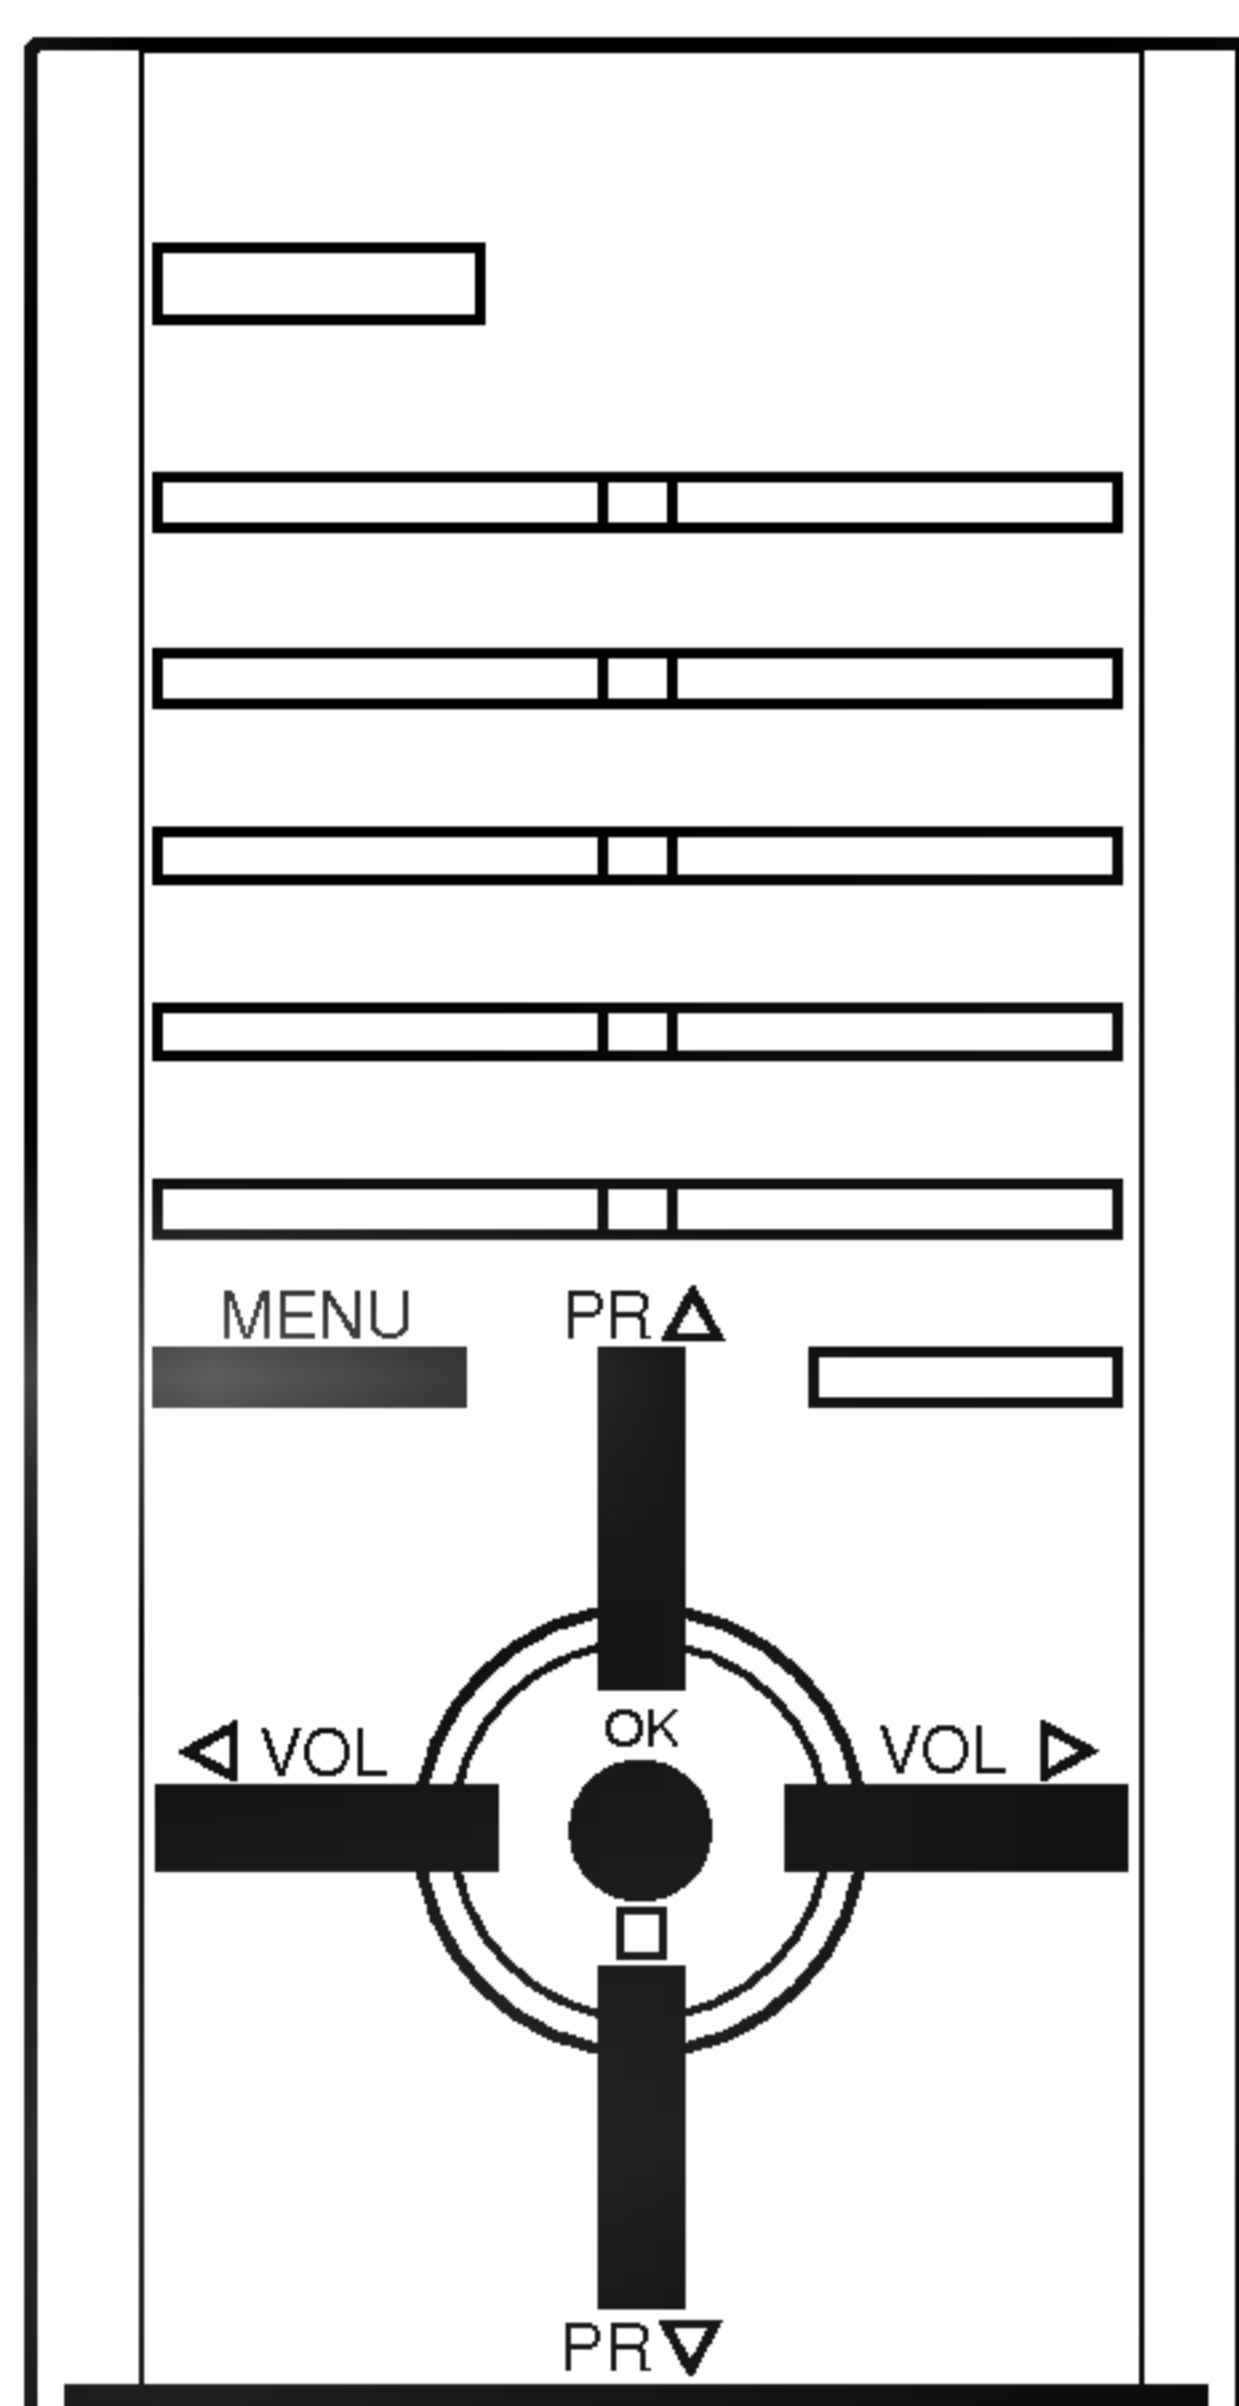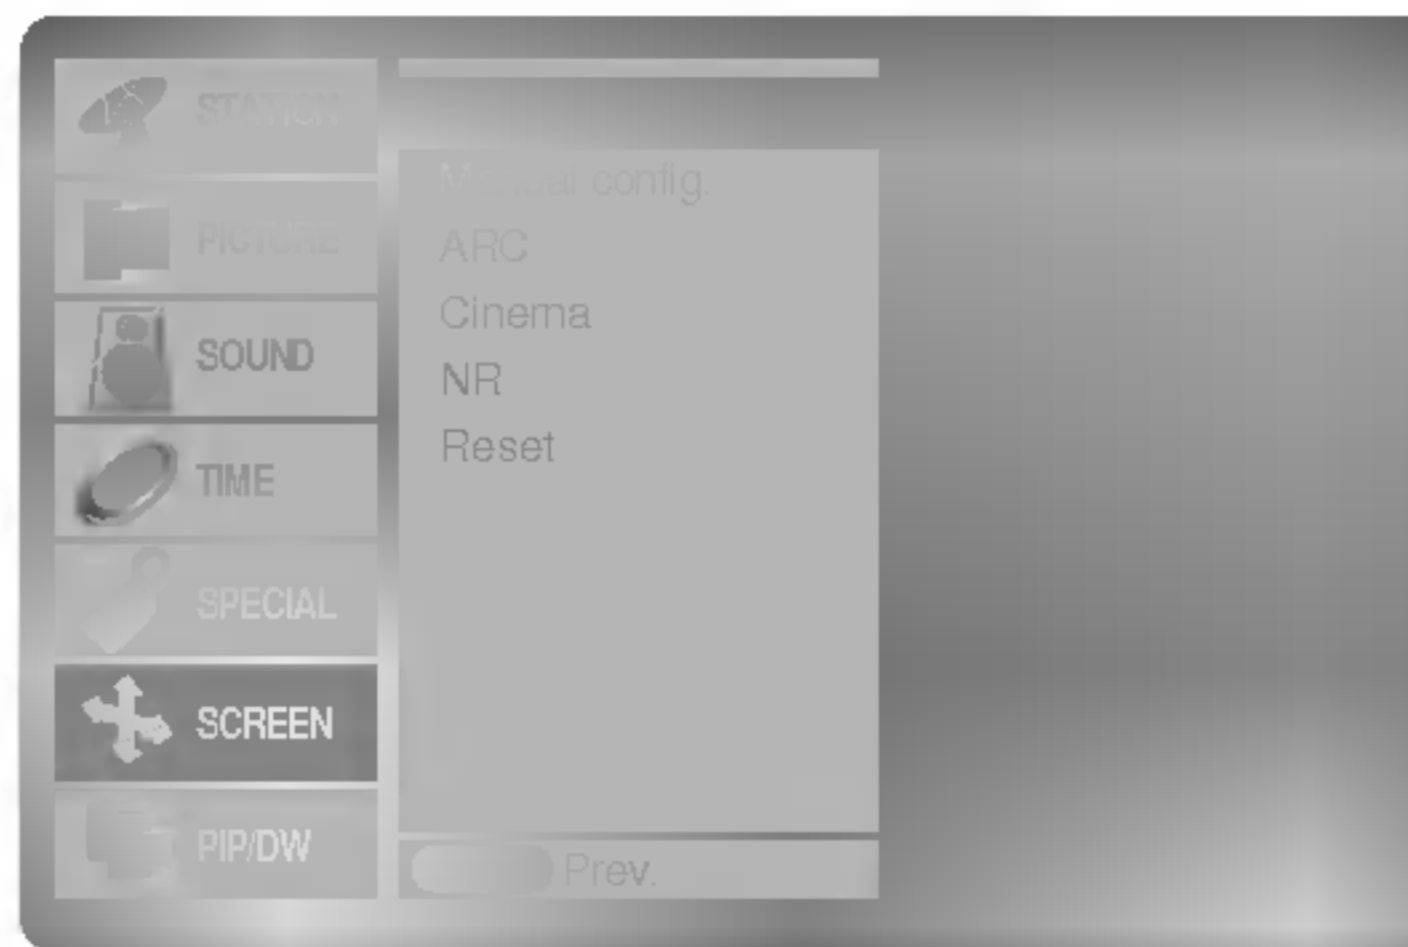

3. Press the **▶** button to start **Auto config.**
When **Auto config.** has finished, **Ok** will be shown on screen.
If the position of the image is still not correct, try Auto adjustment again.
4. If picture needs to be adjusted more after Auto adjustment in RGB (PC), you can adjust the **Manual config.**
5. Repeatedly press the **MENU** button to return to normal TV viewing.


Note :

- a. Although the image is still not correct, your set is functioning properly but needs further adjustment.
- b. The **Auto config.** functions don't need to be run for HDMI mode.

Manual Configuration (RGB [PC] mode only)

If the picture isn't clear after auto adjustment and especially that characters are still trembling, adjust the picture phase manually. To correct the screen size, adjust **H Size / V Size**.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **SCREEN** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Manual config.**

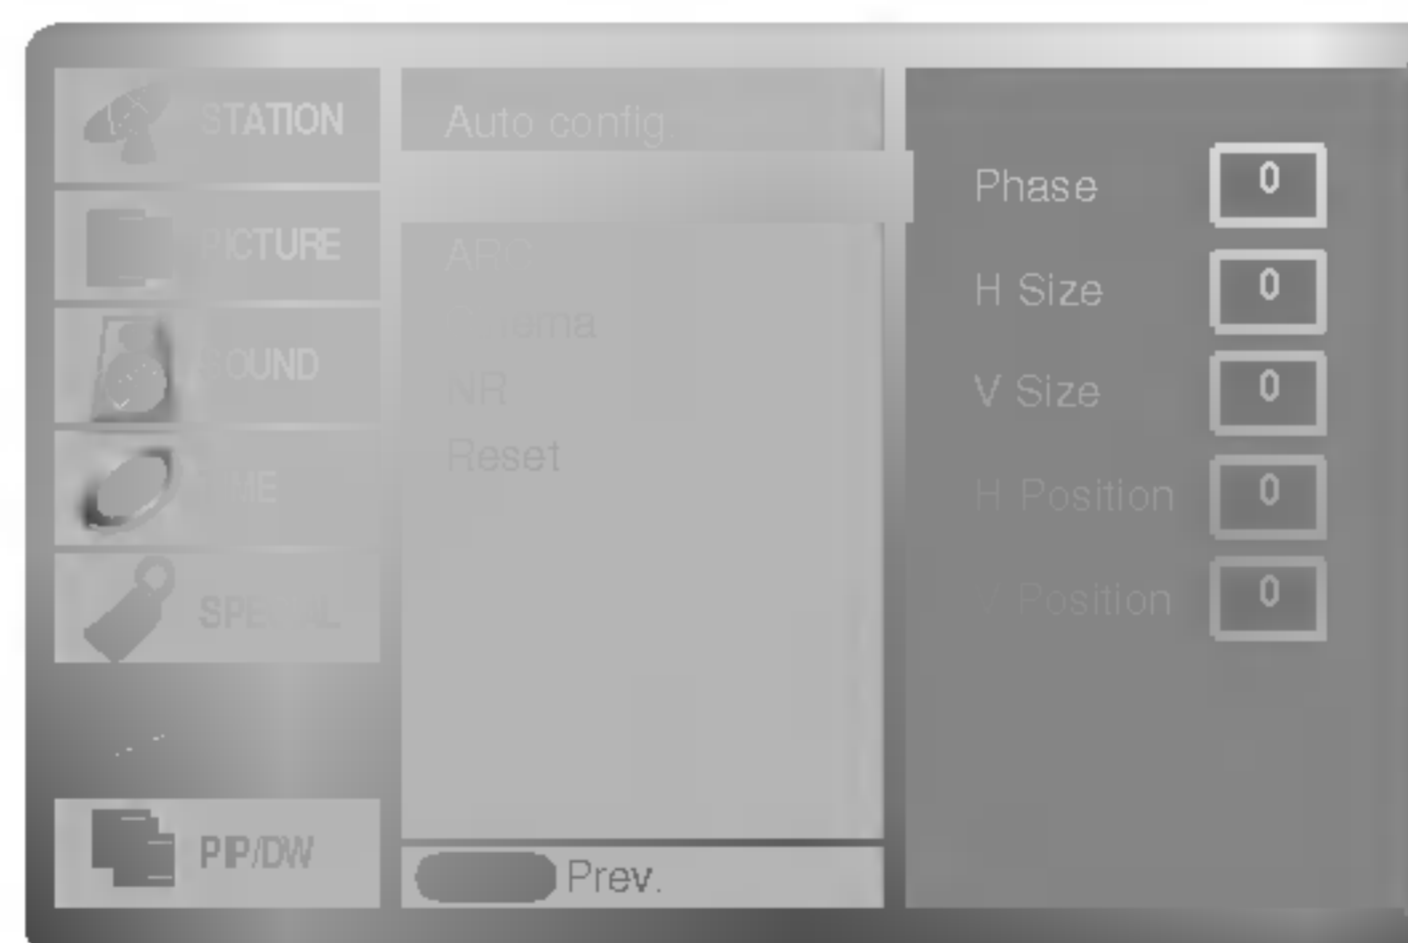

3. Press the **▶** button and then **▲ / ▼** button to select **Phase, H Size, V Size, H Position** or **V Position**.
4. Press the **◀ / ▶** button to make appropriate adjustments.
5. Repeatedly press the **MENU** button to return to normal TV viewing.


Note : It's not available to use H-Position, V-Position function in COMPONENT 480i/576i mode.

SCREEN MENU

Setting Picture Format

You can watch the screen in various picture formats ; **Spectacle**, **Full** (option), **Original**, **4:3**, **16:9** (Wide), **14:9** and **Zoom**.

1. Press the **MENU** button and then use ▲ / ▼ button to select the **SCREEN** menu.
2. Press the ► button and then use ▲ / ▼ button to select **ARC**.

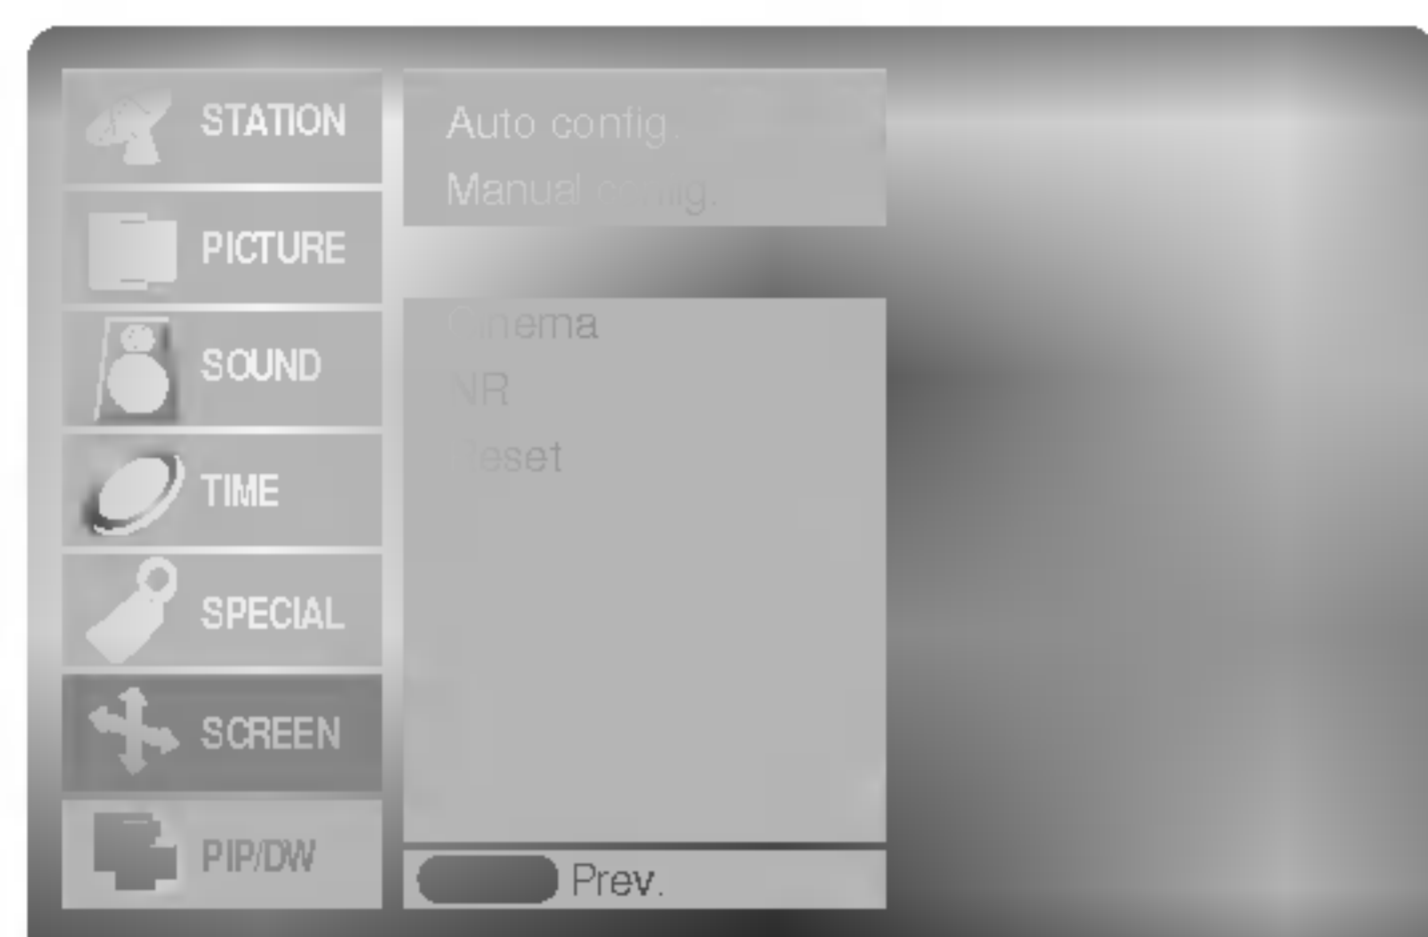

3. Press the ► button and then use ▲ / ▼ button to select **Spectacle**, **Full** (option), **Original**, **4:3**, **16:9**, **14:9** or **Zoom**.

Spectacle

When your TV receives the wide screen signal, following selection will lead you to adjust the picture horizontally, in a linear proportion, to fill the entire screen.

Full (option)

When your TV receives the wide screen signal, following selection will lead you to adjust the picture horizontally or vertically, in a linear proportion, to fill the entire screen fully.

Original

When your TV receives the wide screen signal, it will be automatically changed to the picture format to be sent.

4:3

Following selection will lead you to view a picture with an original 4:3 aspect ratio, with black bars appearing at both the left and right sides.

16:9 (Wide)

Following selection will lead you to adjust the picture horizontally, in a linear proportion, to fill the entire screen (useful for viewing 4:3 formatted DVDs).

14:9


You can enjoy the picture format of 14:9 or general TV programme through the 14:9 mode. The screen 14:9 is viewed just like that the screen 4:3 is magnified to the left / right.

Zoom


Following selection will lead you to view the picture without any alternation, while filling the entire screen. However, the top and bottom portions of the picture will be cropped.

4. Repeatedly press the **MENU** button to return to normal TV viewing.

Note : You can only select **4:3** and **16:9** (Wide) in RGB and HDMI.

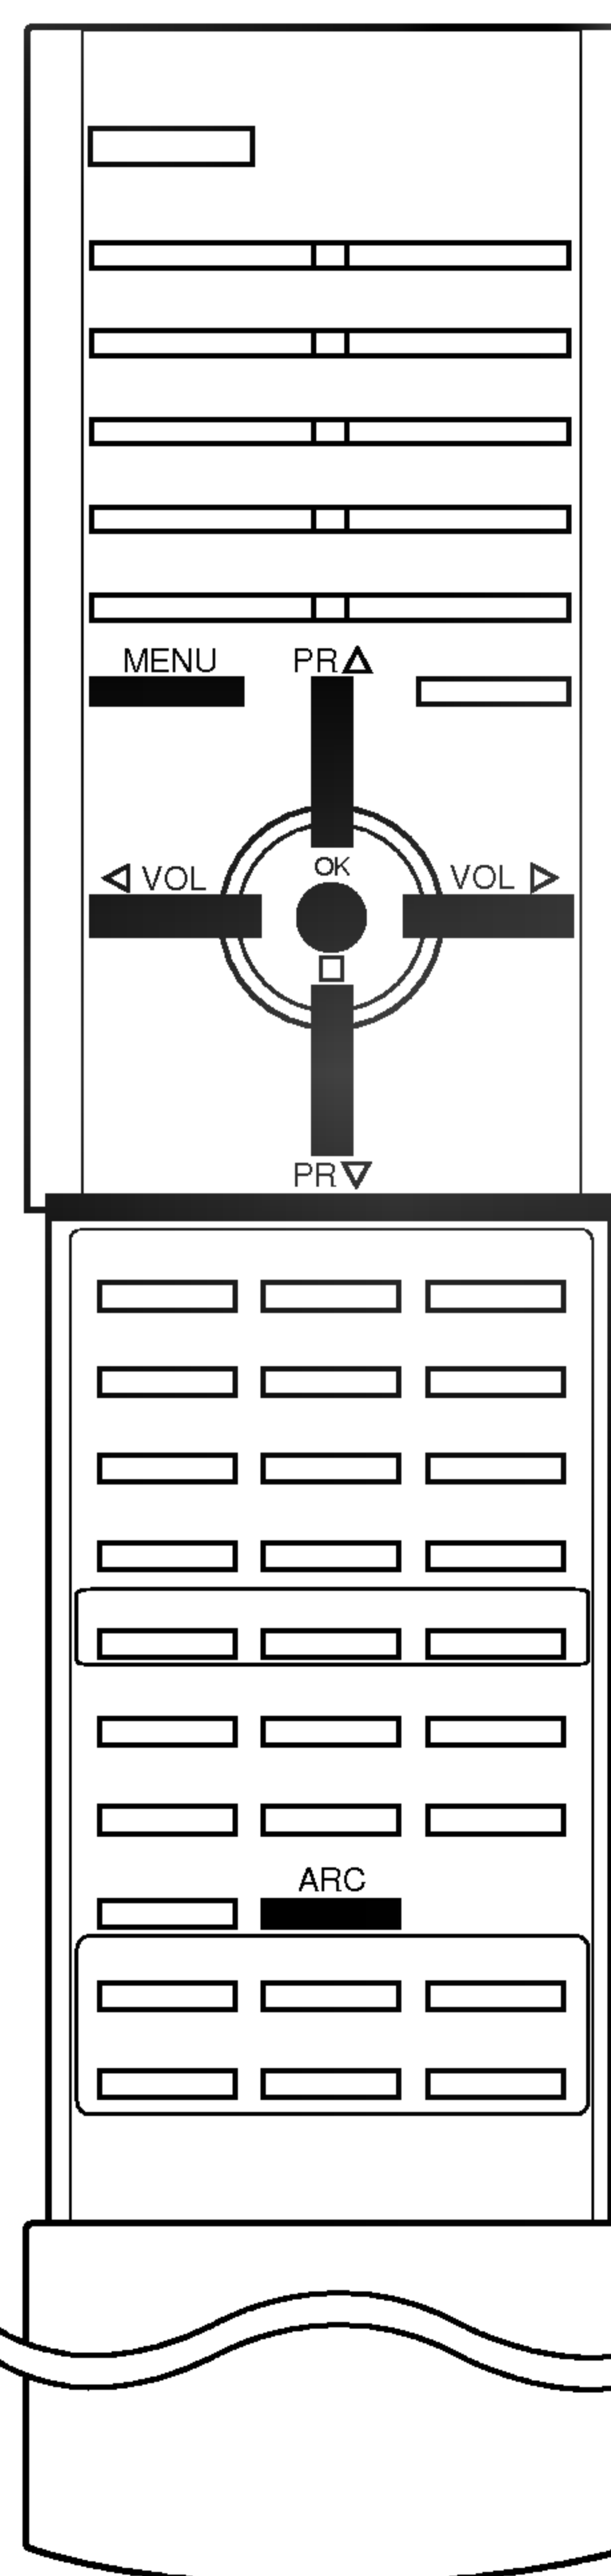

SCREEN MENU


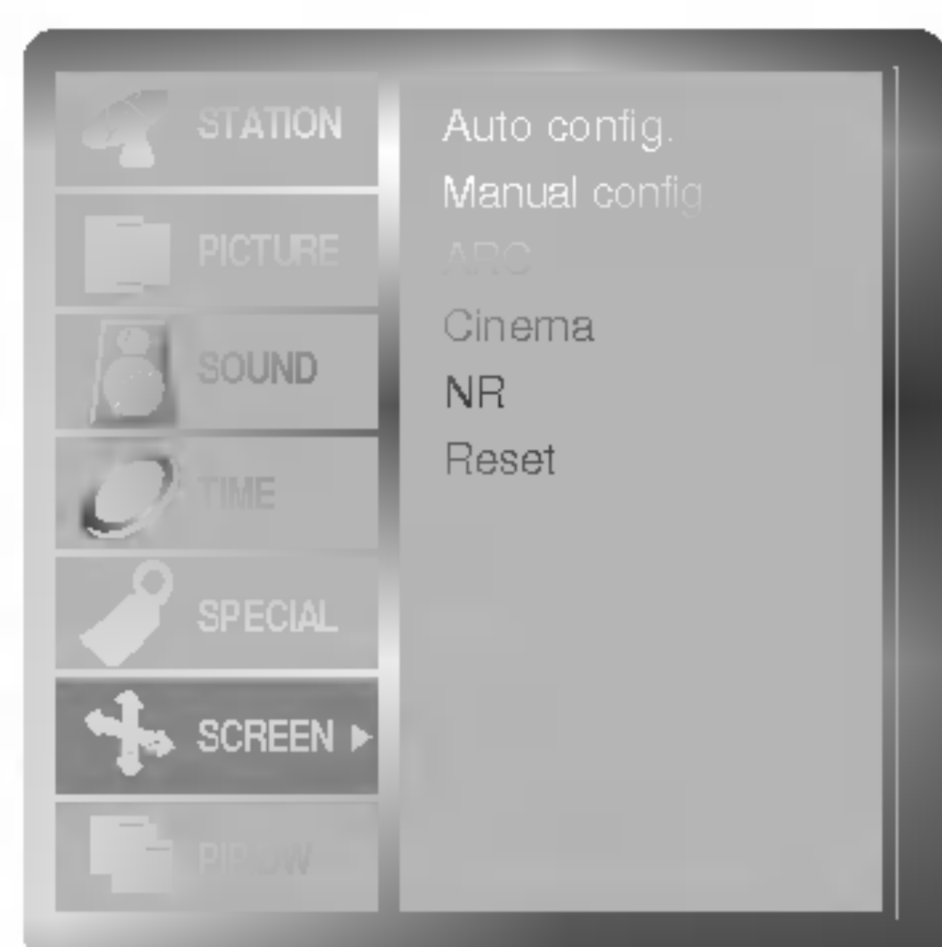


Cinema

When you watch the movie, this function adjusts the set to the best picture appearance.

This function works in the following mode : TV, AV1, AV2, AV3 or COMPONENT 480i/576i.



1. Press the **MENU** button and then ▲ / ▼ button to select the **SCREEN** menu.
2. Press the ► button and then ▲ / ▼ button to select **Cinema**.

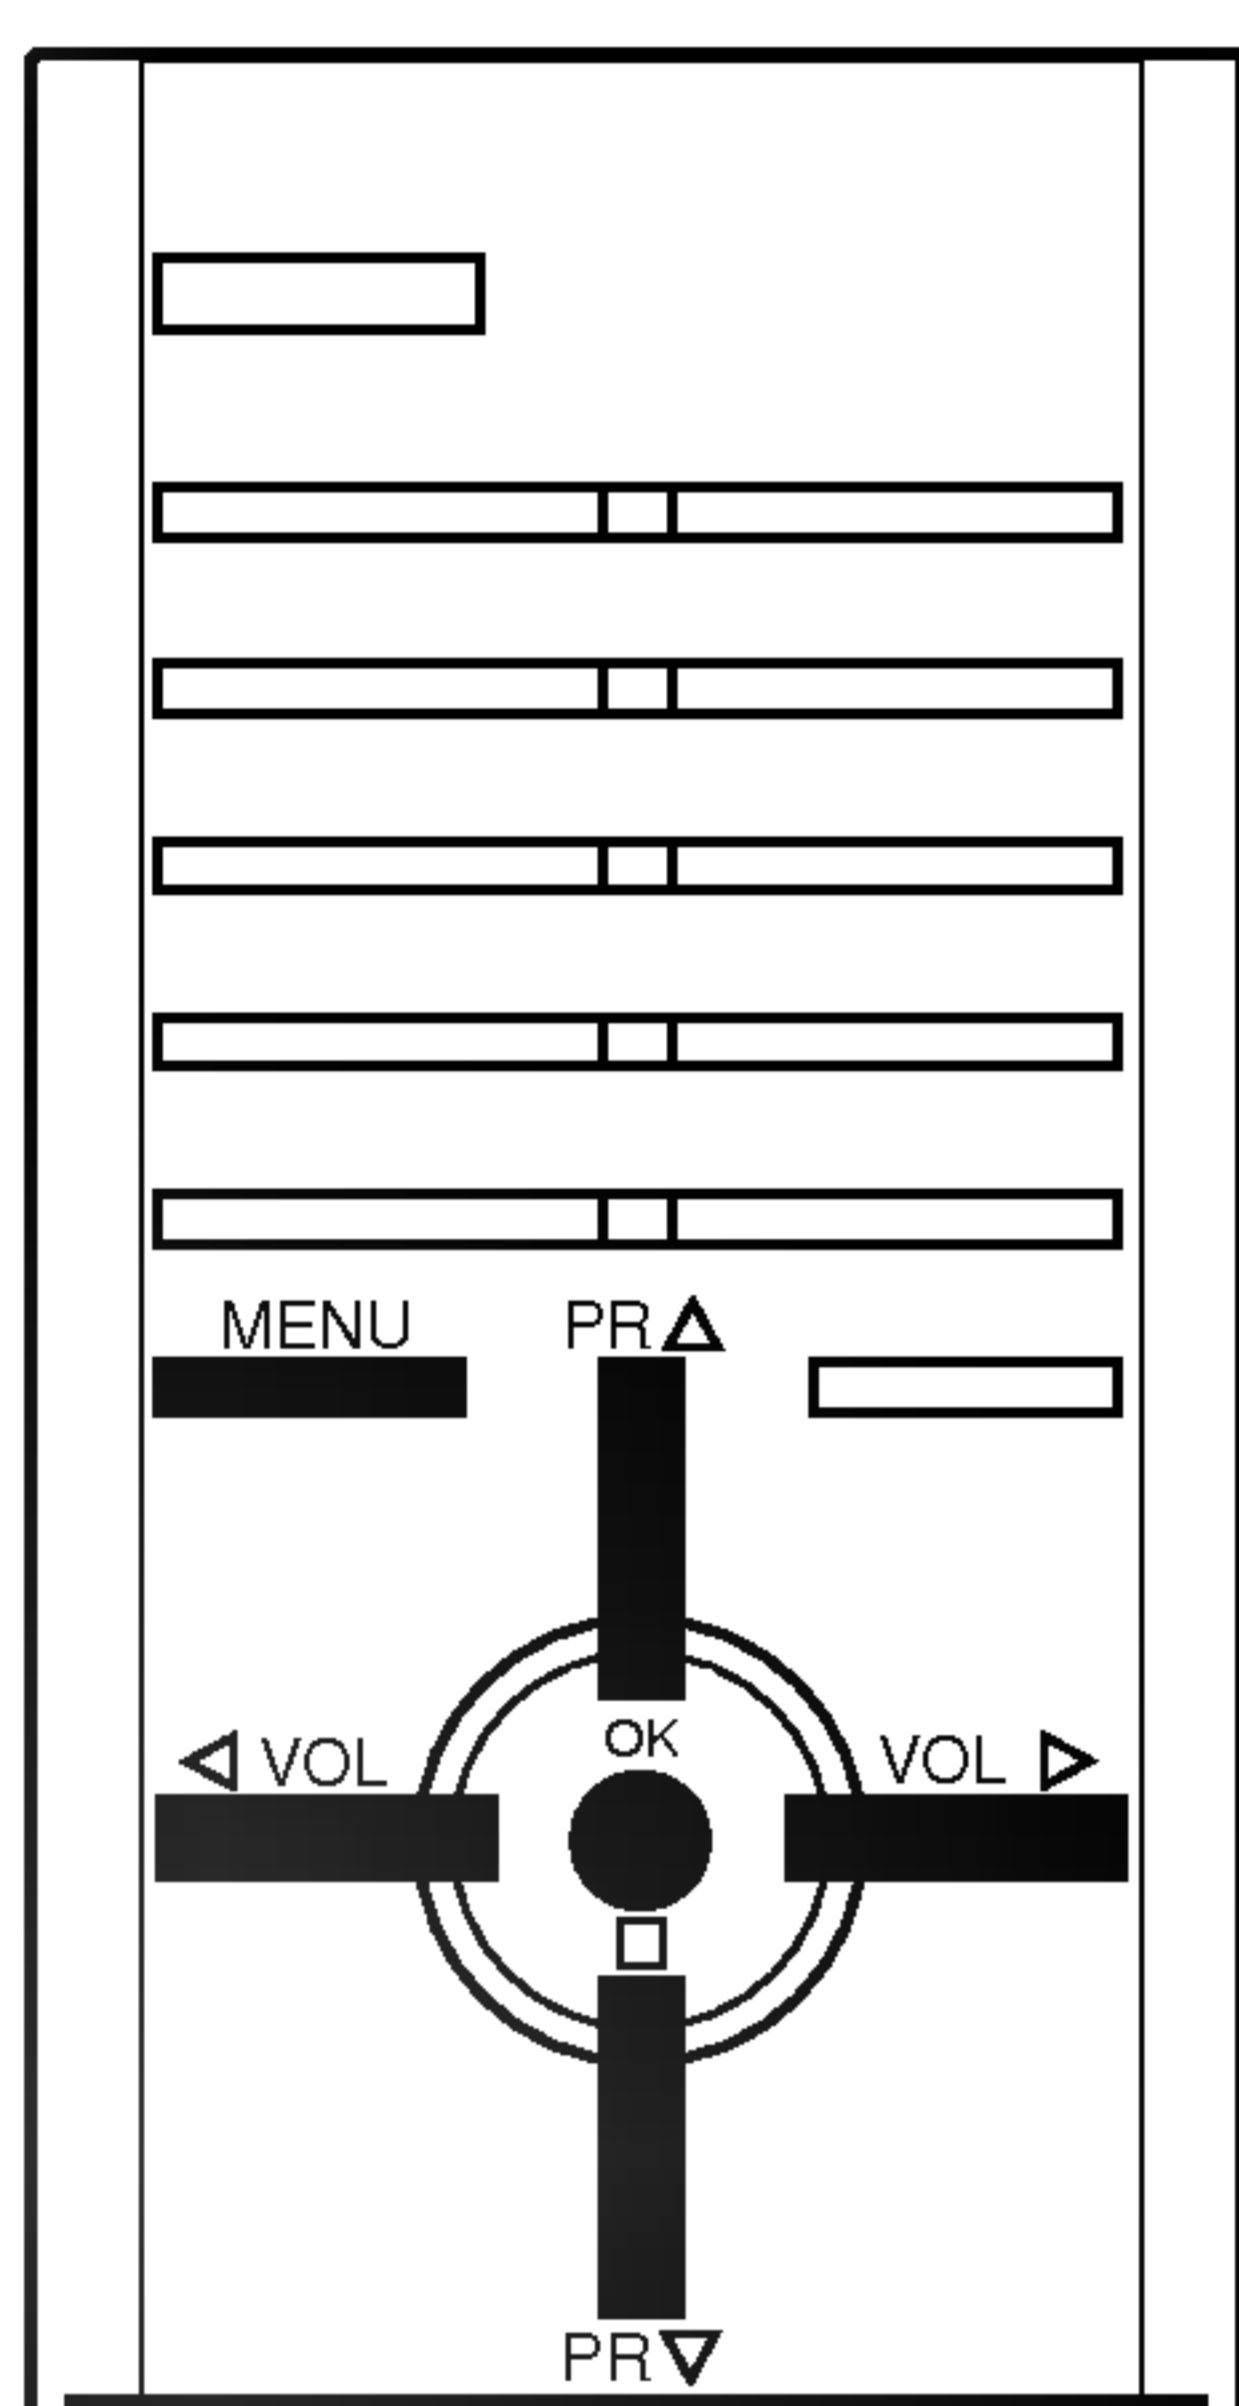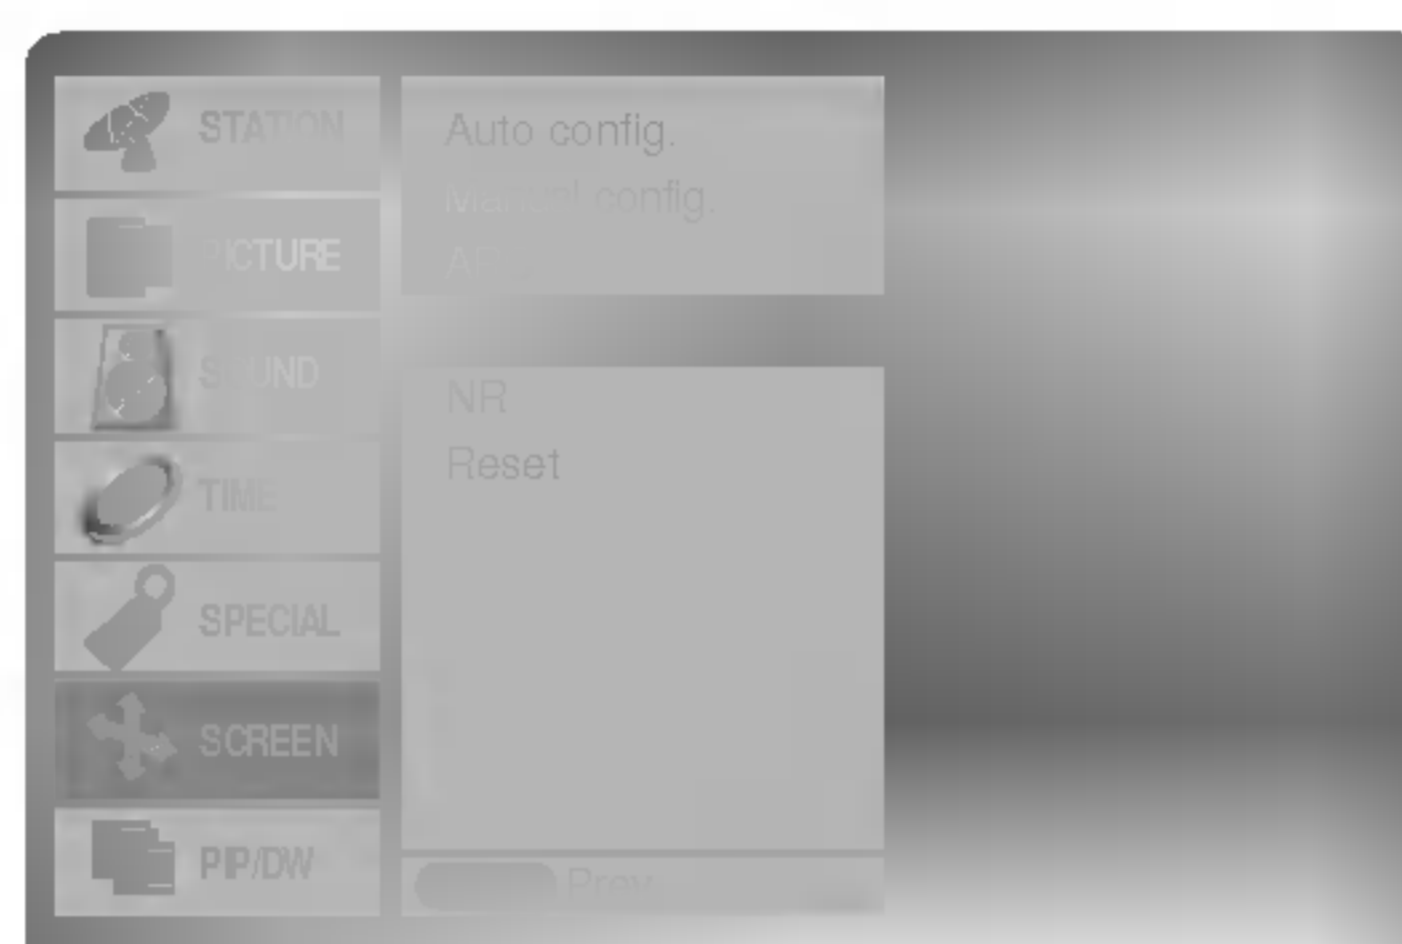

3. Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
4. Press the **OK** or ◀ button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

NR (Noise Reduction)

1. Press the **MENU** button and then ▲ / ▼ button to select the **SCREEN** menu.
2. Press the ► button and then ▲ / ▼ button to select **NR**.

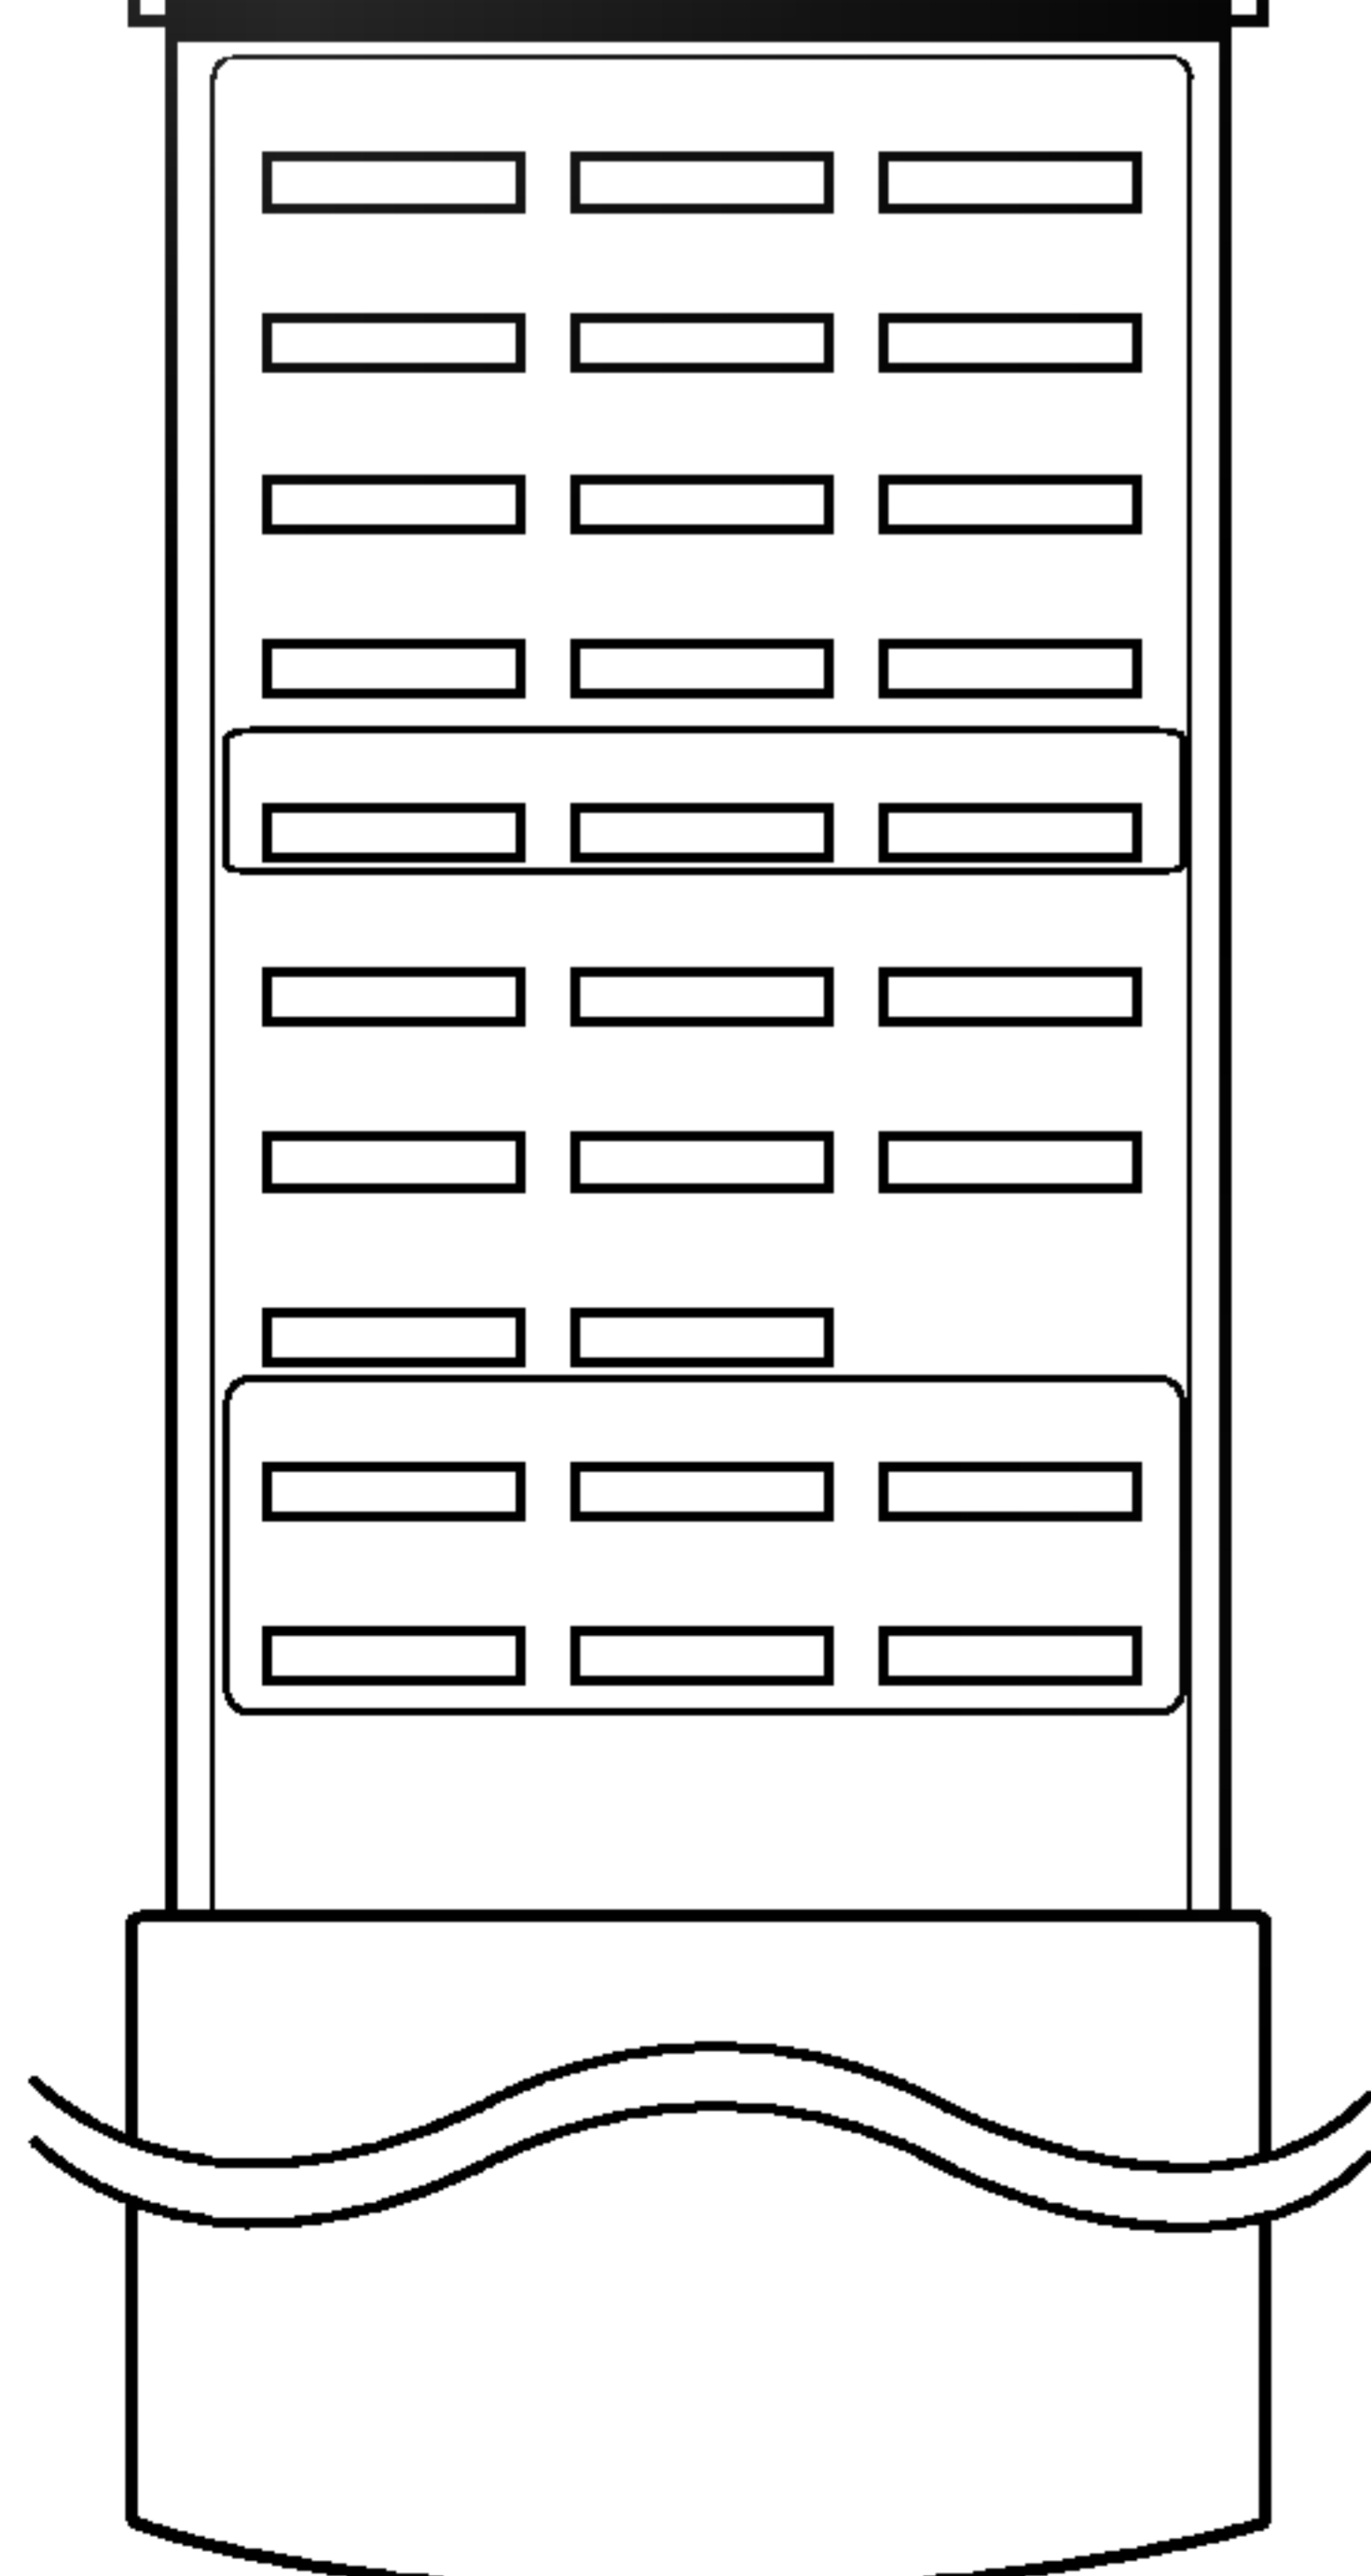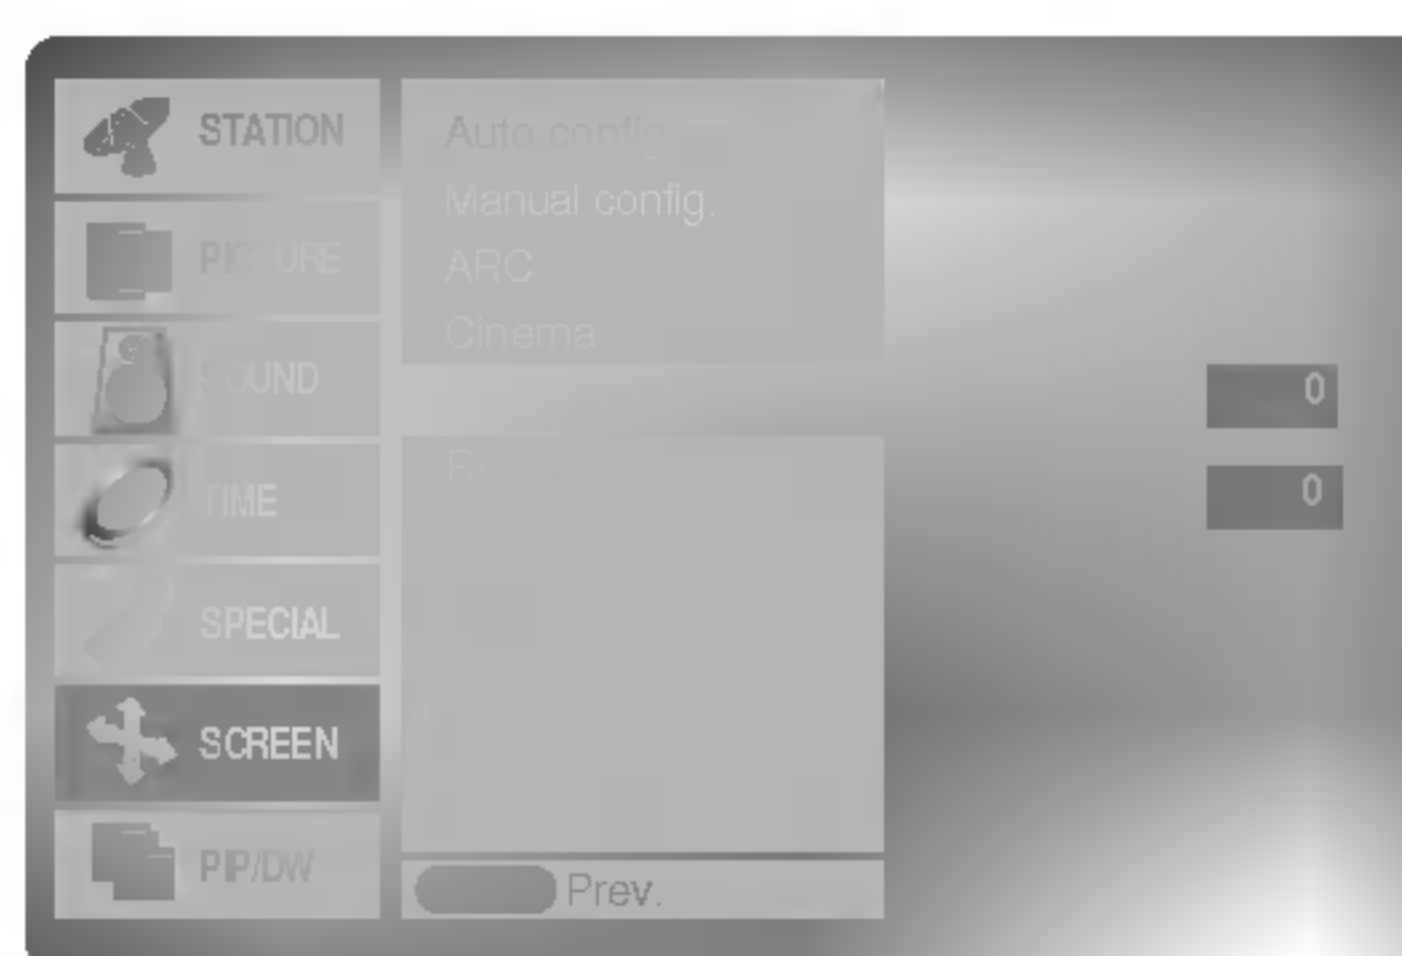

3. Press the ► button and then use ▲ / ▼ button to select **3D NR** or **MPEG NR**.
4. Press the ◀ / ► button to make appropriate adjustments.
The adjustment range of **3D NR** is 0 ~ 2.
The adjustment range of **MPEG NR** is 0 ~ 15.
5. Press the **OK** button.
6. Repeatedly press the **MENU** button to return to normal TV viewing.


Note : It's available to use 3D NR function in TV, AV1, AV2, AV3 or COMPONENT (480i/576i) mode.

SCREEN MENU

Initializing (Reset to original factory value)


This function operates in current mode.
To initialize the adjusted value.

1. Press the **MENU** button and then ▲ / ▼ button to select the **SCREEN** menu.
2. Press the ► button and then ▲ / ▼ button to select **Reset**.

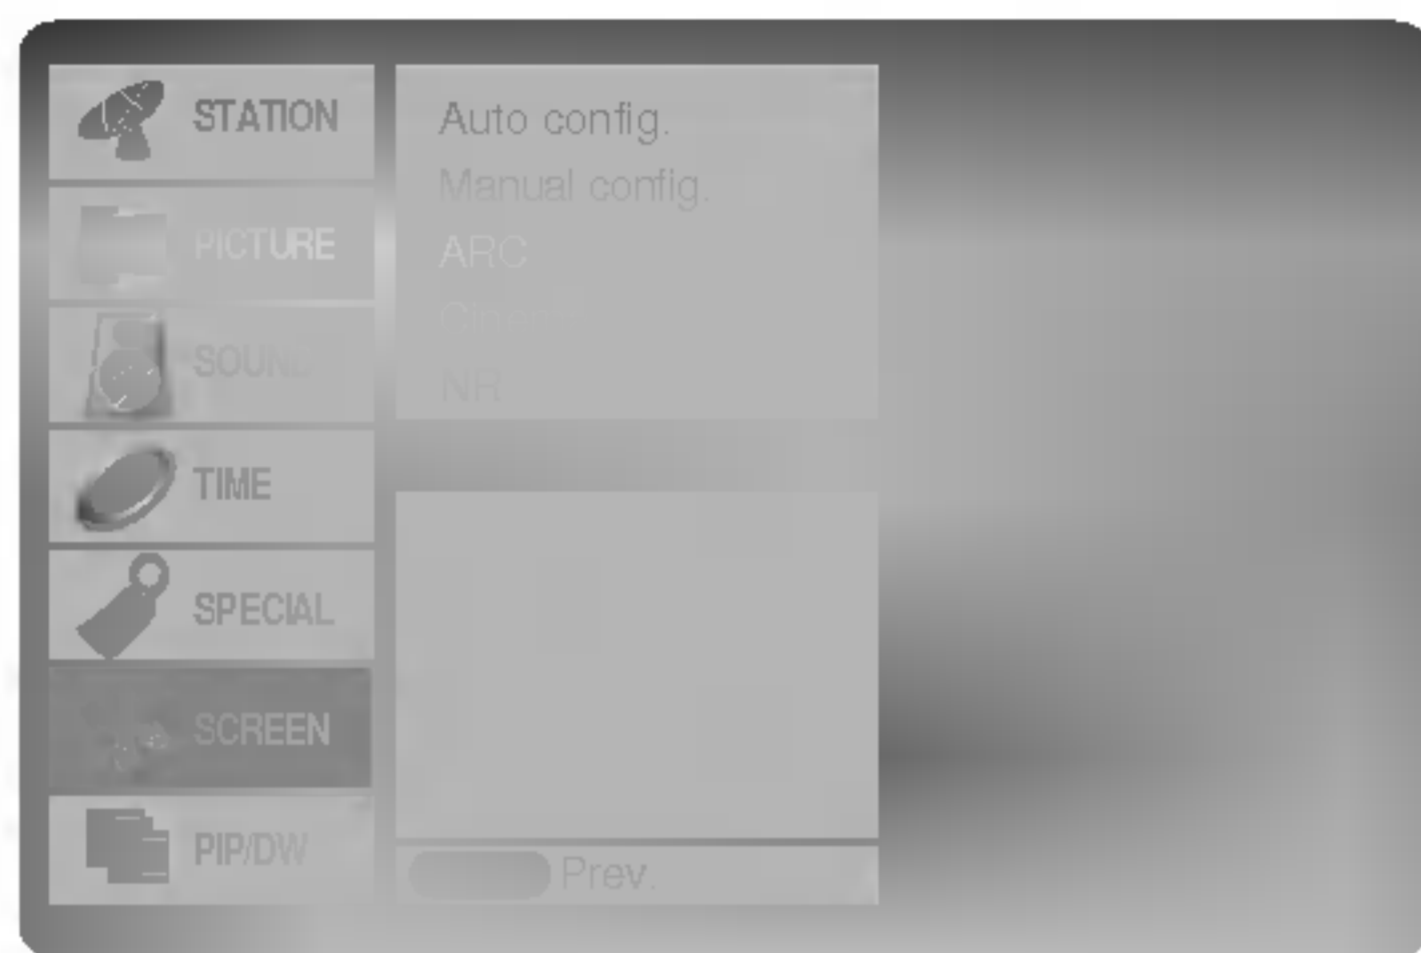


3. Press the ► button.

You can initialize Position, PIP size, PIP position, PIP Transparency, Clock, Phase, H-POS, V-POS and sub picture size of twin picture.

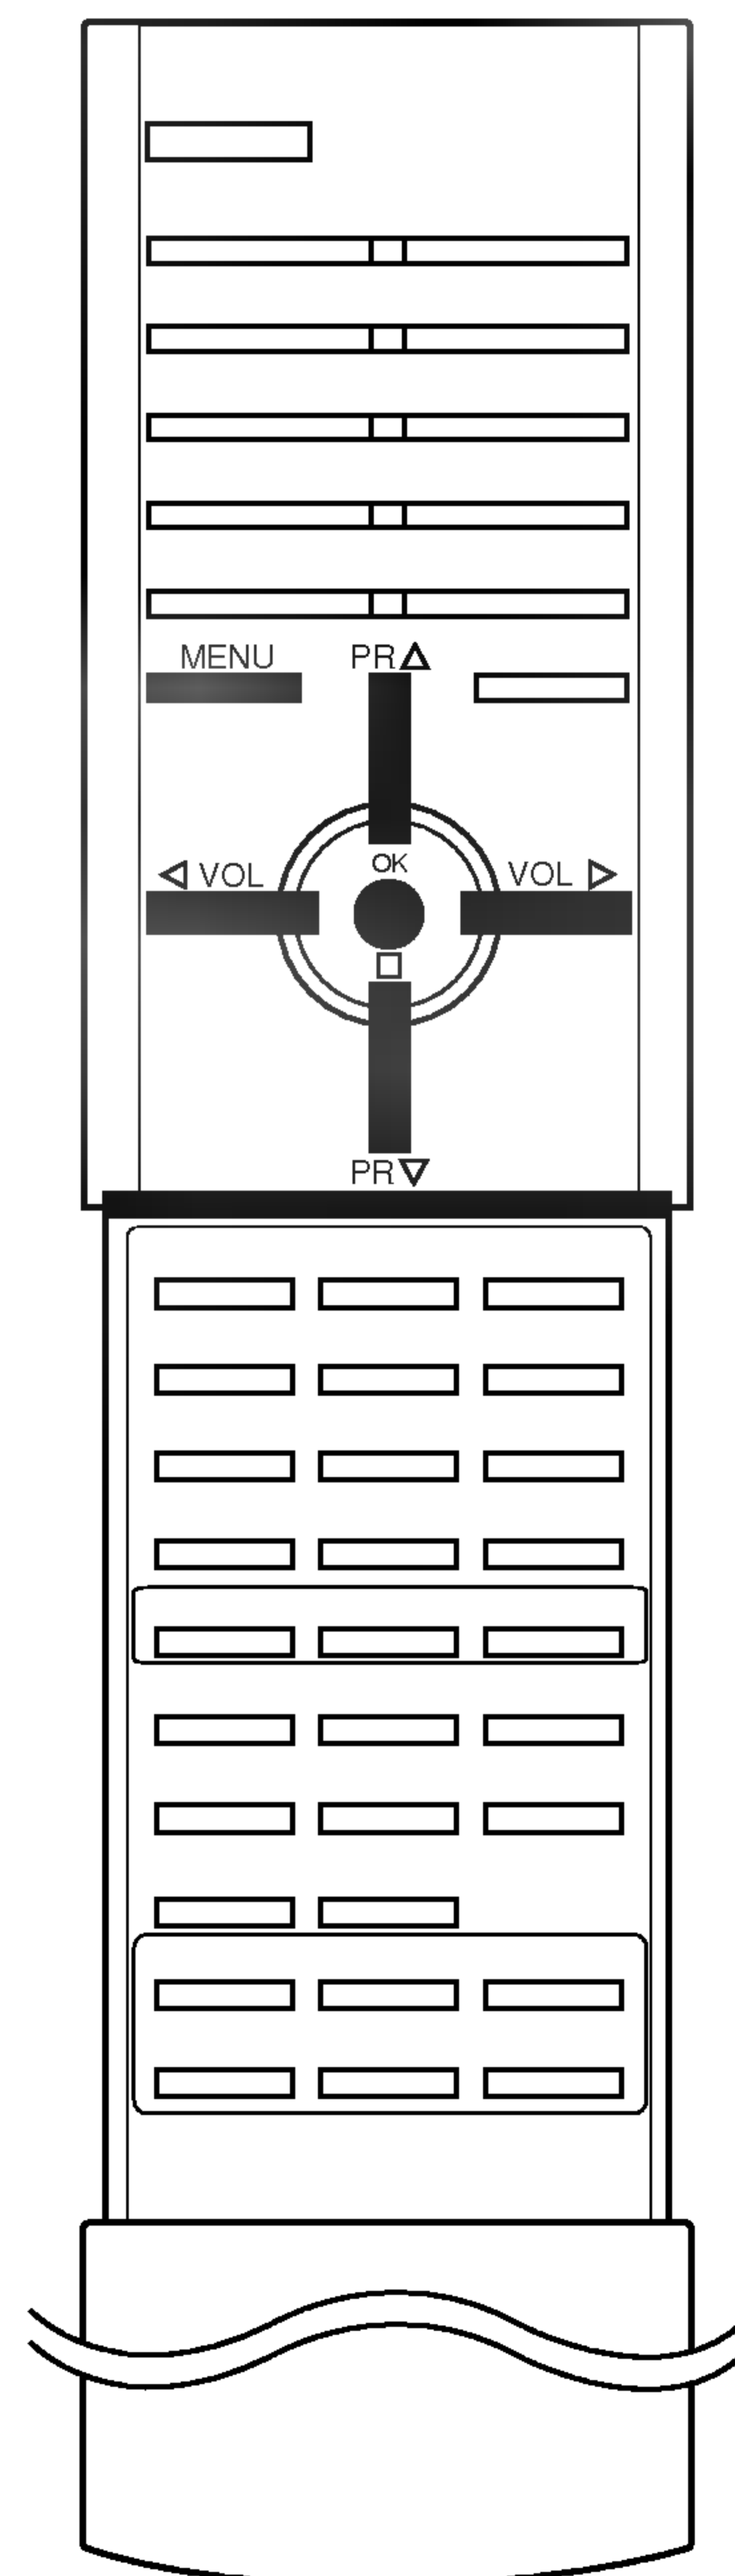

PIP/DW MENU


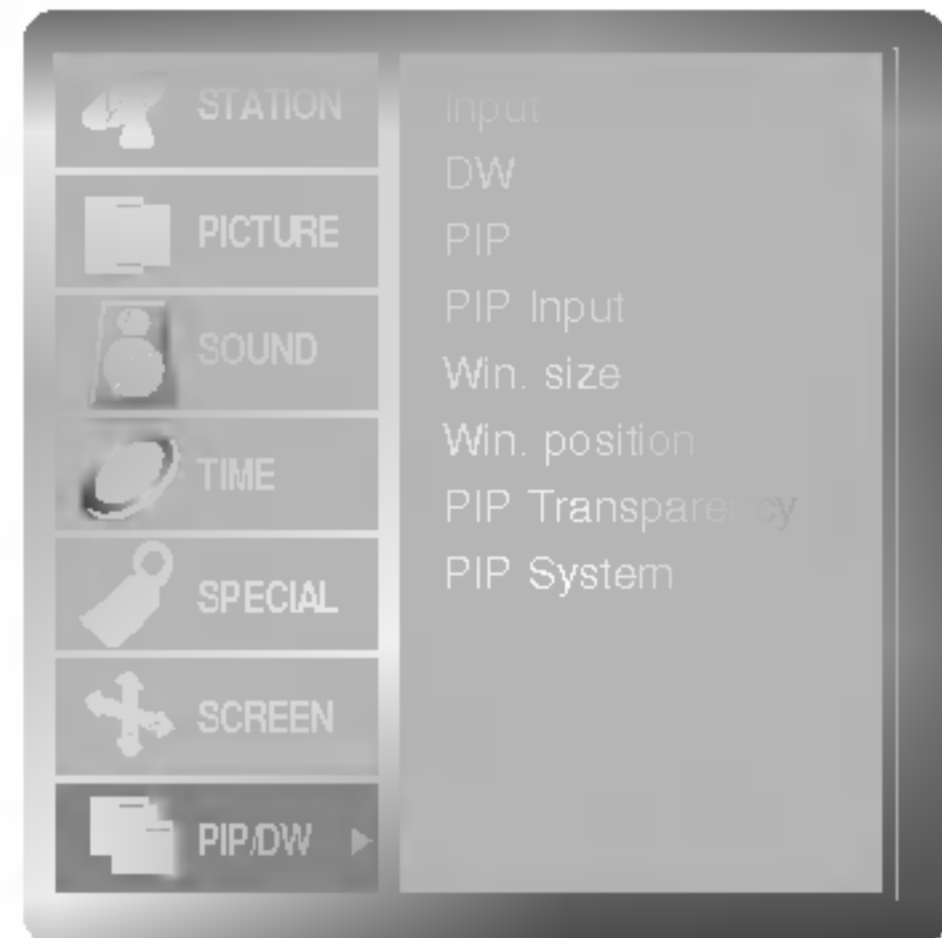


Main Picture Source Selection

Inputs can be set for TV, AV1, AV2, AV3, Component1, Component2 or RGB, HDMI mode. AV mode is used when a video cassette recorder (VCR), or other equipment is connected to the set.

Note : When a VCR is connected via the aerial socket the set is used in TV mode. See the 'Connection of external equipment' section.

1. Press the **MENU** button and then **▲ / ▼** button to select the PIP/DW menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Input**.
3. Press the **▶** button and then **▲ / ▼** button to select **TV, AV1, AV2, AV3, Component1, Component2** or **RGB, HDMI**.

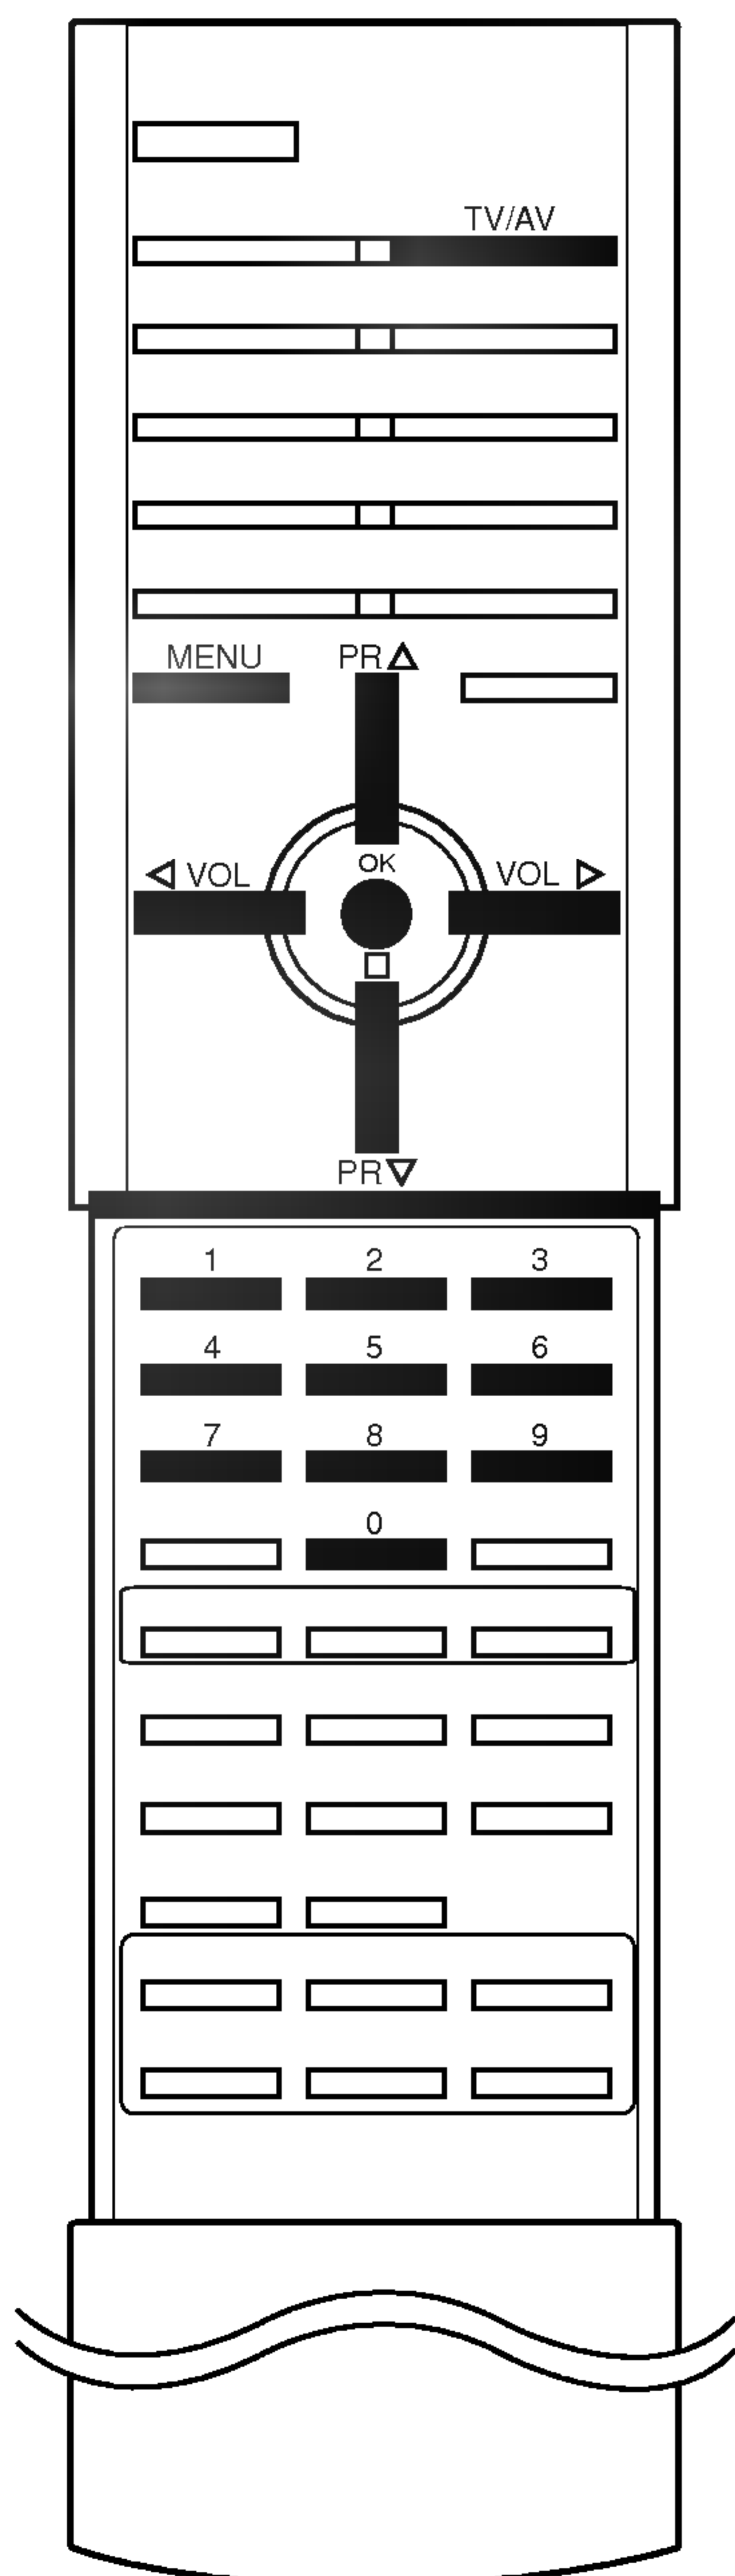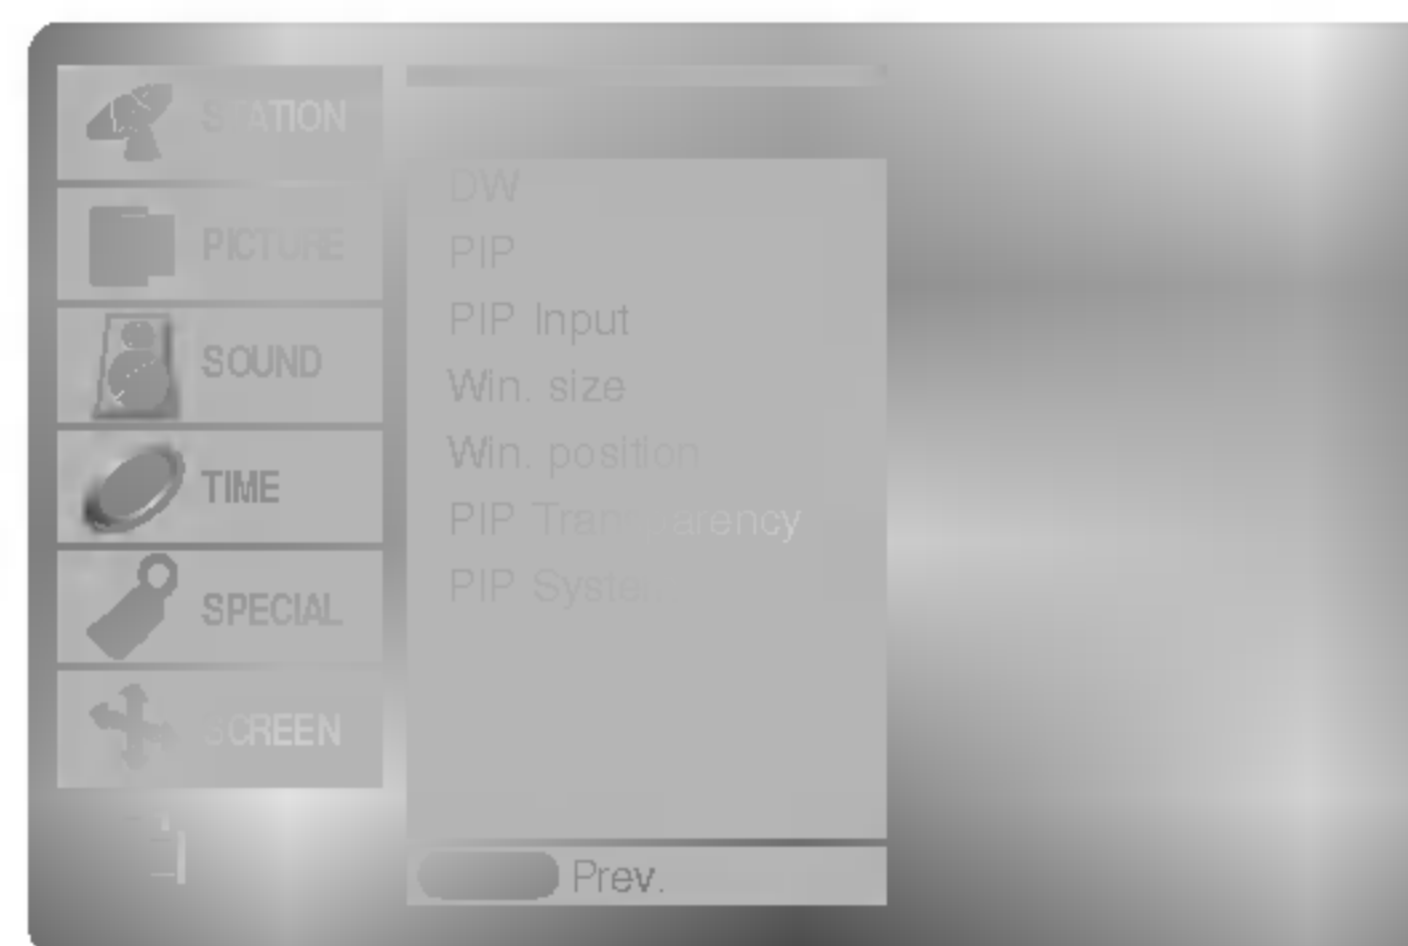

- AV1 : VCR connected to the **AV1 INPUT** sockets of the set
- AV2 : VCR connected to the **AV2 INPUT** sockets of the set
- AV3 : VCR connected to the **AV3 INPUT** sockets of the set
- Component1/2 : DVD connected to the **DTV/DVD INPUT** sockets on the back of set
- RGB : PC connected to the **RGB INPUT** sockets on the back of set
- HDMI : DTV/DVD INPUT connected to the **HDMI INPUT** sockets on the back of set

4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

Alternatively you can select the TV, AV, Component or RGB, HDMI mode by pressing the **TV/AV** button.

In AV, Component or RGB, HDMI mode, to return to TV mode, press the **▲ / ▼** or **NUMBER** buttons.

Picture In Picture (PIP) Function

Option :


PIP (Picture In Picture) displays a picture within a picture.

On and off

Press the **PIP** button to switch on the sub picture.

Press **CANCEL/EXIT** button to switch it off.

Each press of **PIP** button changes the screen display as shown below.

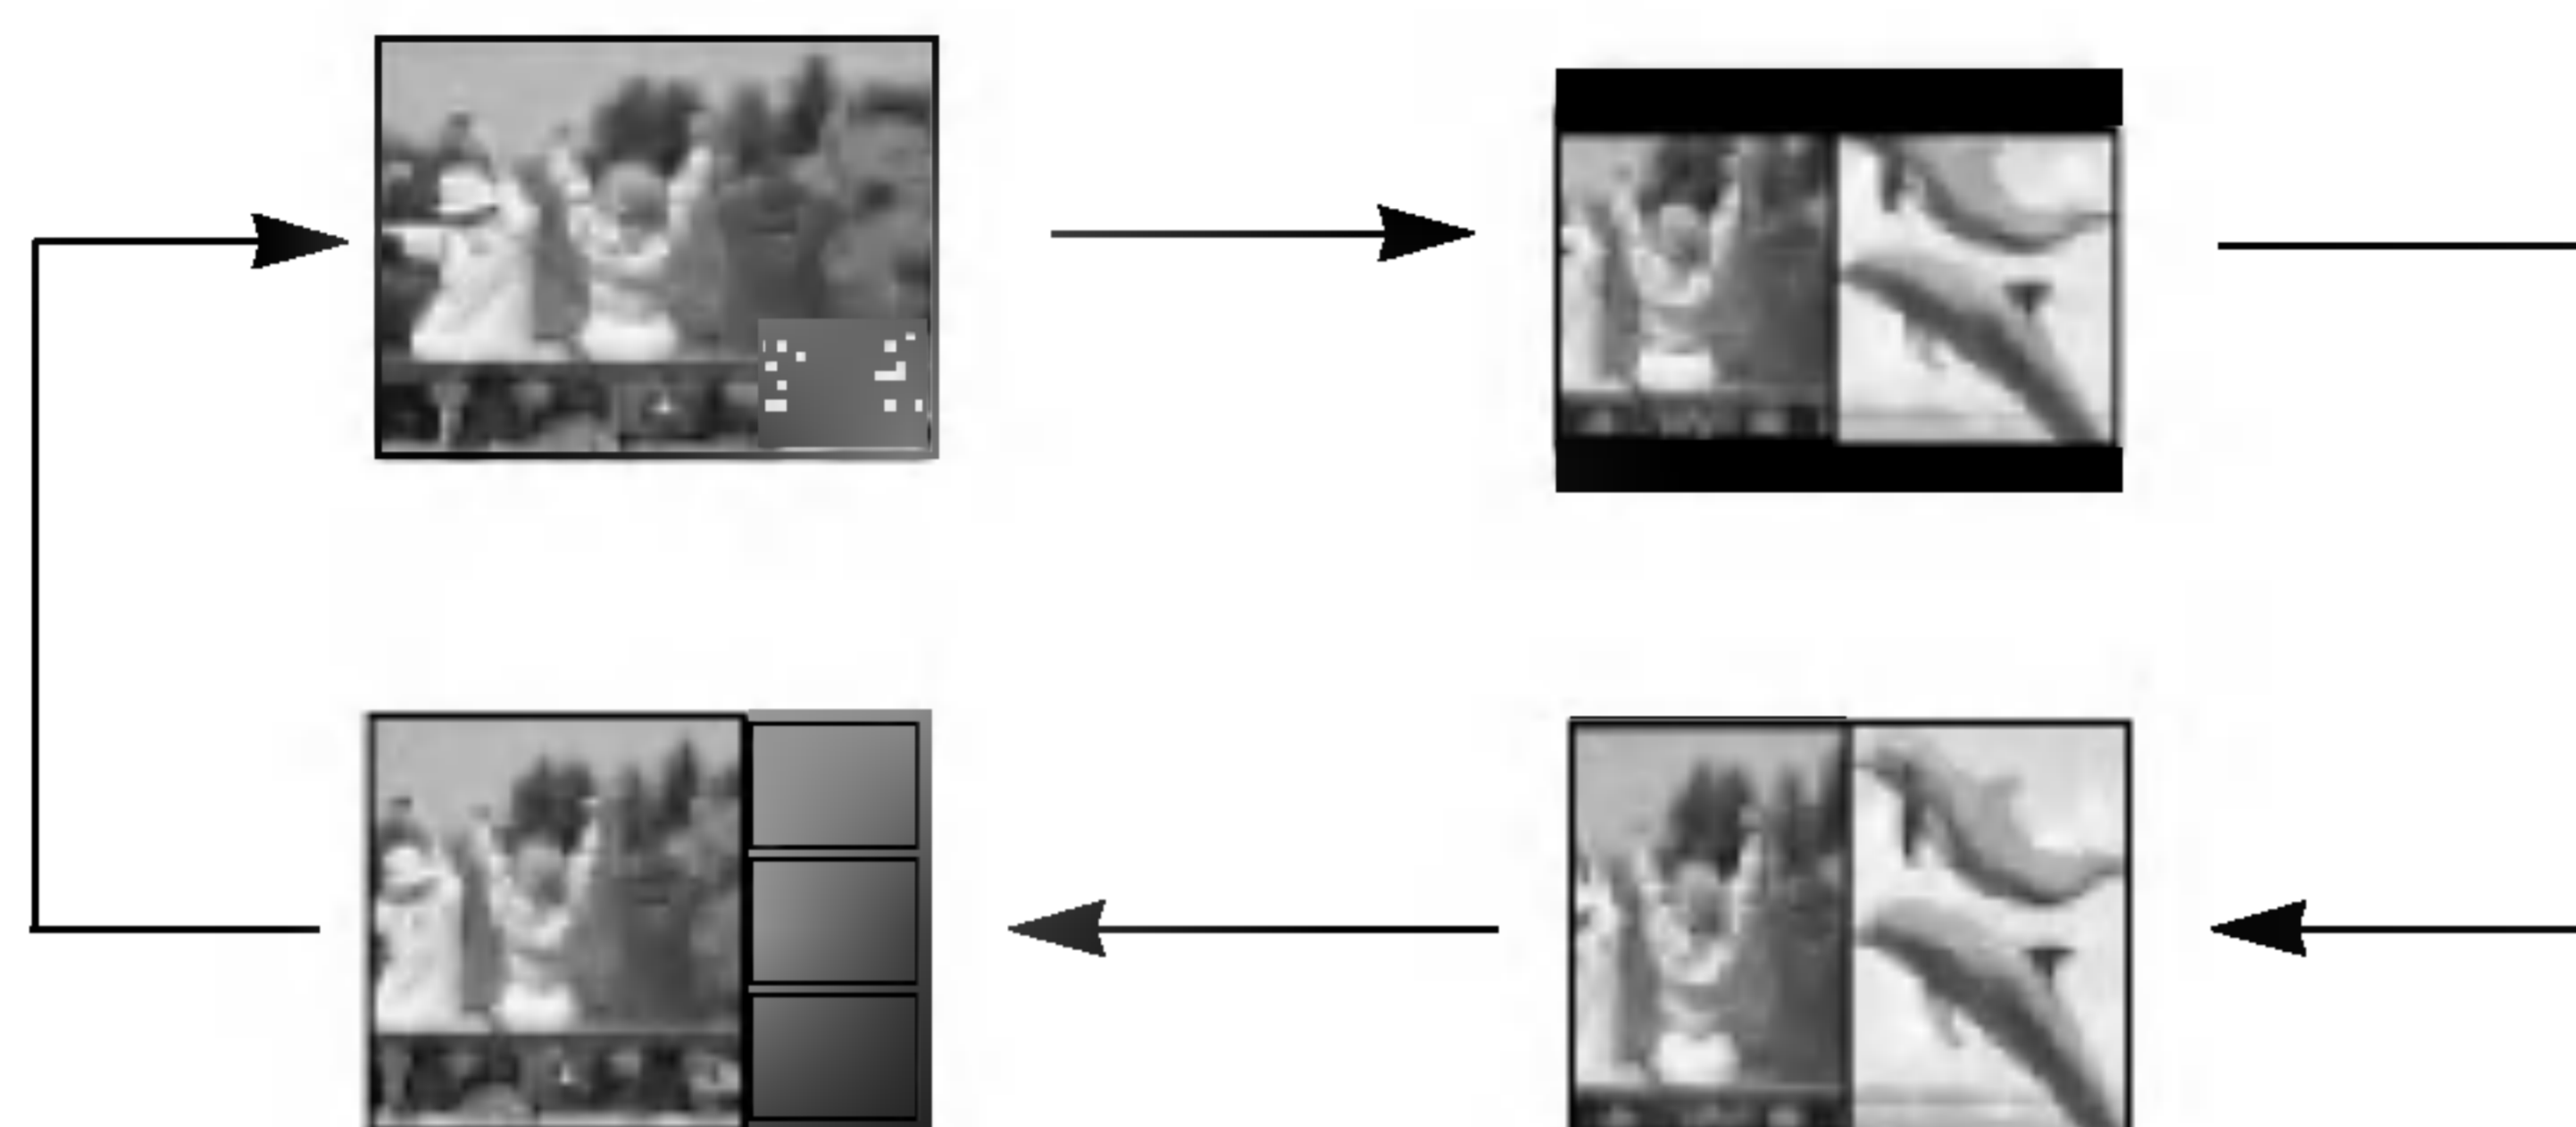


Note : When the sub picture size is 1/2 of the main picture, the picture quality might get poor.

Input mode selection for sub picture

Press the **INPUT** button to select the input mode for the sub picture.

Each time this button is pressed, each input mode for the sub picture is displayed as shown below.

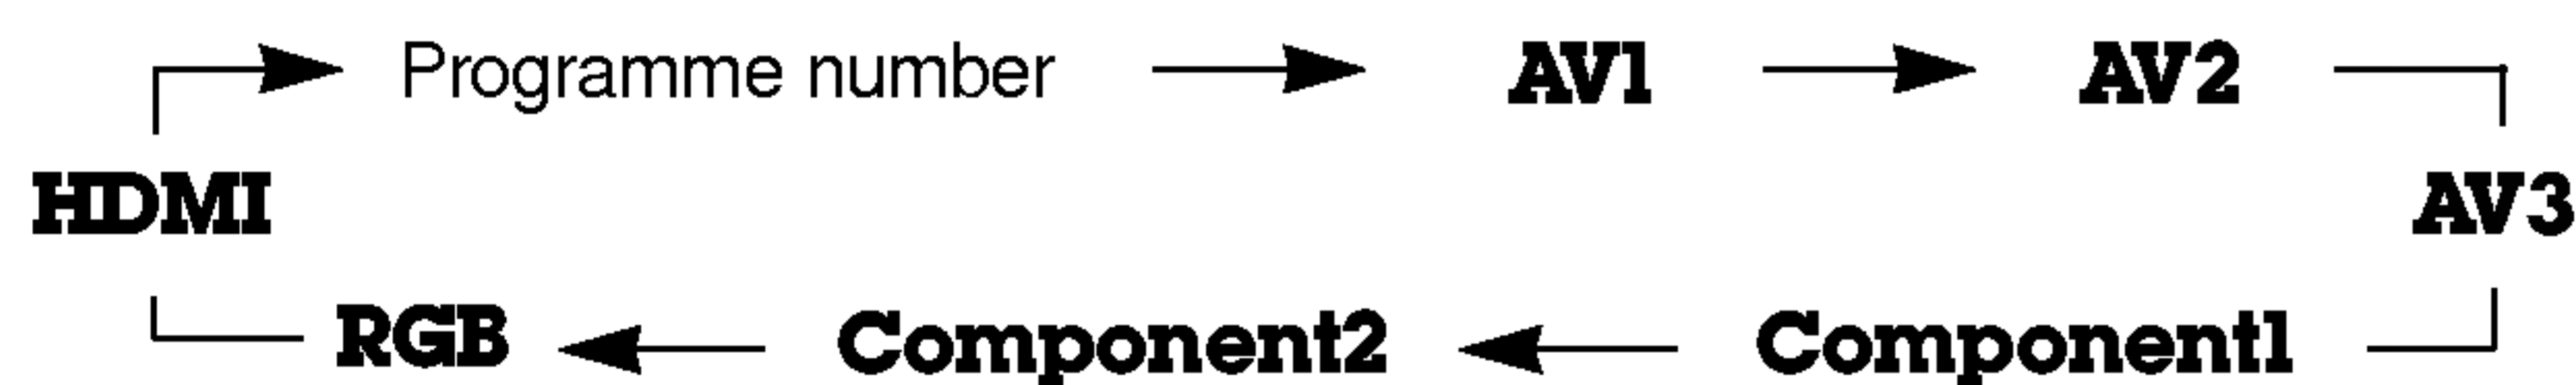

Note :

- When the PIP function is switched on, you can also adjust it in the PIP/DW menu.
- In some models, when the sub picture quality get poor in AV modes for sub picture, select Auto, PAL, SECAM or NTSC in PIP System menu.


Swapping between main and sub pictures

Press the **SWAP** button to exchange the main and sub pictures.

Note : When the main picture is TV or AV modes, the swapping is available.

Programme selection for sub picture

The sub picture programme selection is available when the sub picture is TV mode. Press the **PR +/-** buttons to select a programme for the sub picture.

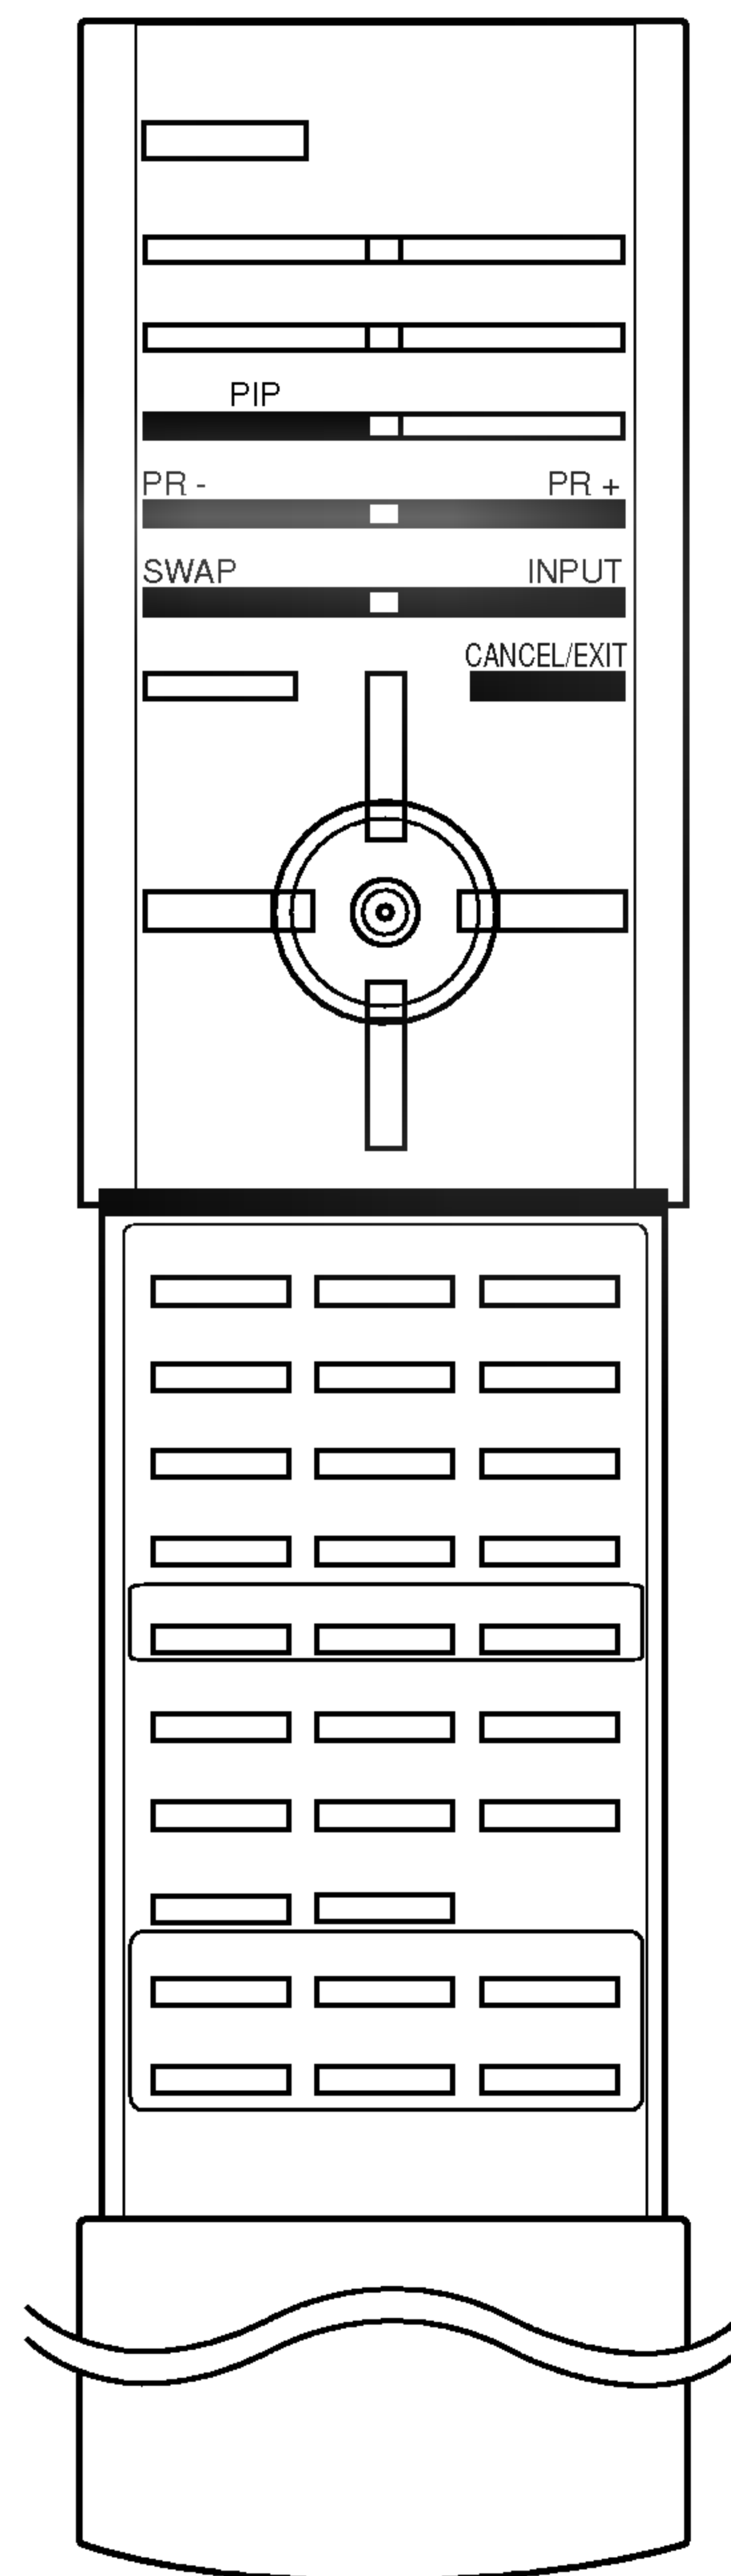

Picture In Picture (PIP) Function

Sub picture size

Press the **SIZE** button and then ◀ / ▶ button to adjust the sub picture size.

With **SIZE** button in DW1, DW2 modes, main and sub picture is adjusted simultaneously. With **SIZE** button in PIP mode, sub picture is adjusted.


Sub picture position change

Press the **POSITION** button.

Repeatedly press the ▲ / ▼ or ◀ / ▶ button until desired position is achieved. The sub picture moves up/down or left/right.

Adjusting PIP Transparency (PIP mode only)

1. Press the **MENU** button and then ▲ / ▼ button to select the PIP/DW menu.
2. Press the ▶ button and then ▲ / ▼ button to select **PIP Transparency**.
3. Press the ▶ button and then ◀ / ▶ button to adjust PIP transparency.
The adjustment range of **PIP Transparency** is 0 ~ 10.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

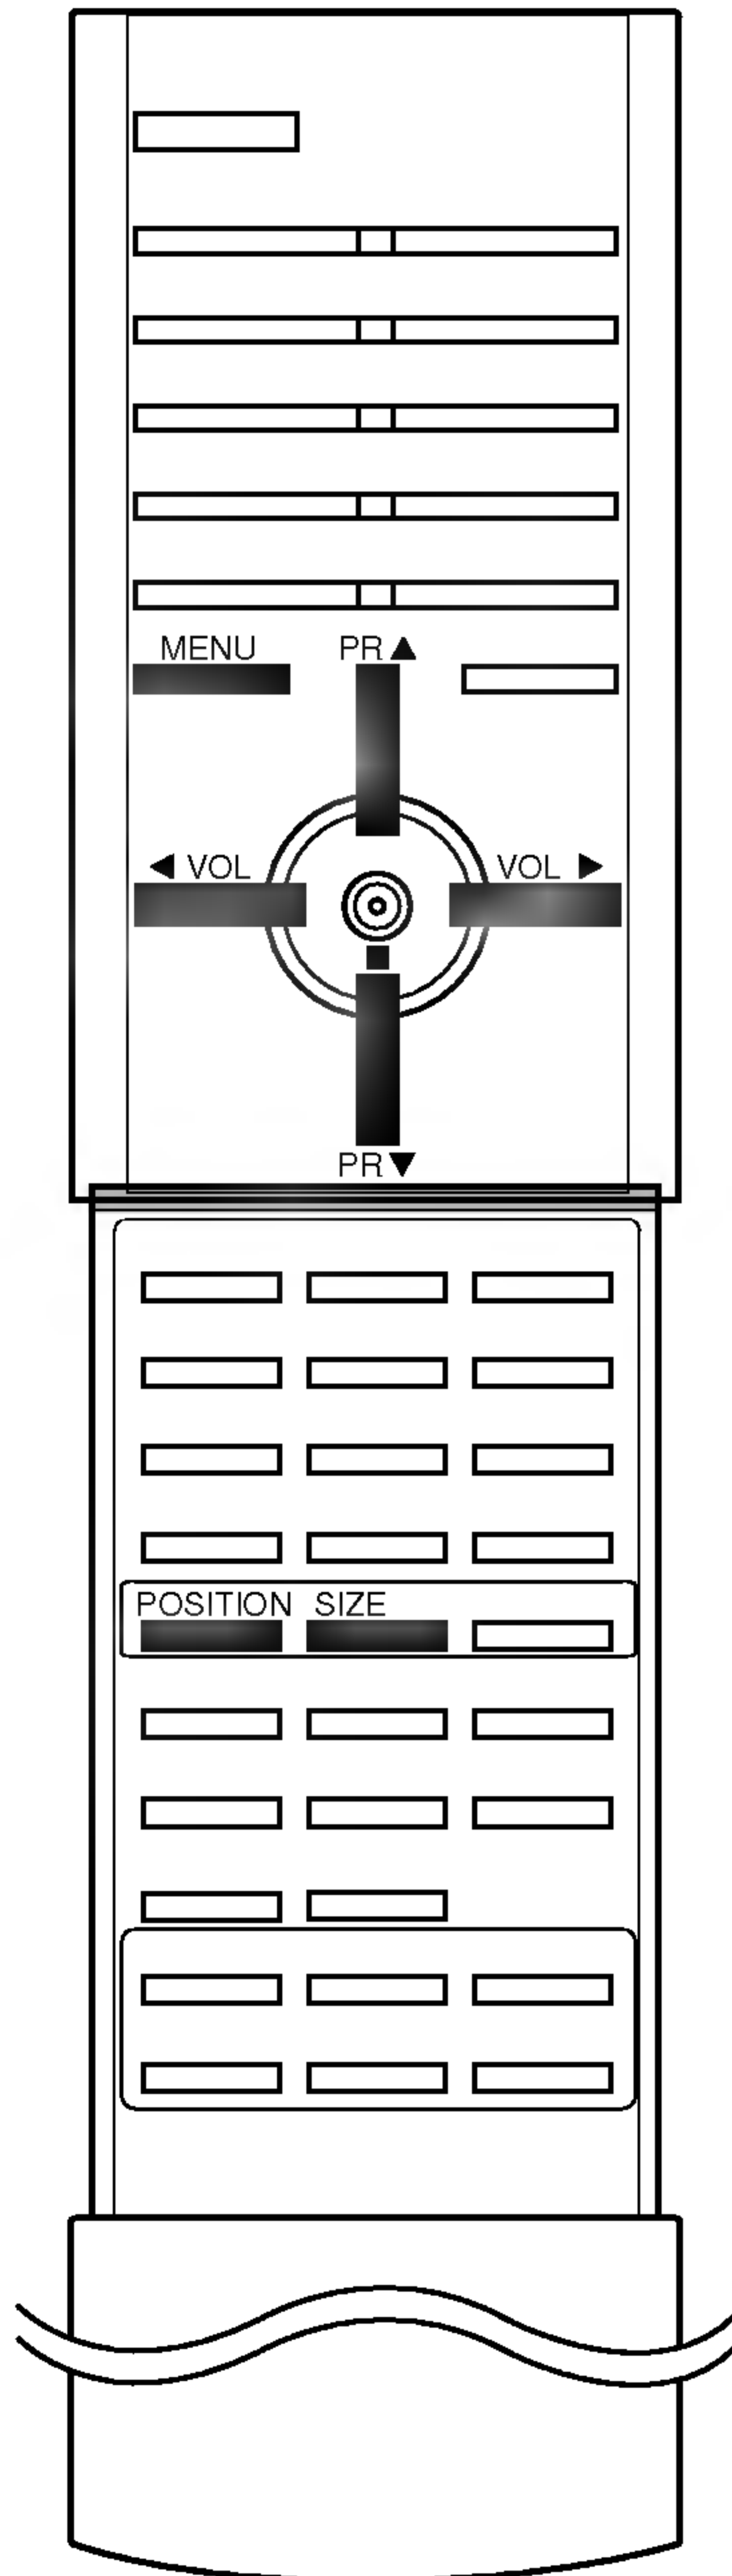

Teletext (option)

Teletext (or TOP text) is an optional function, therefore only a set with the teletext system can receive the teletext broadcast.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

Switch on/off

Press the **TEXT** button to switch to teletext.

If TV and text picture are displayed half and half of the screen, press the **TEXT** button again to display text picture fully.

The initial page or last page appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

Press the **TEXT** button to switch off teletext. The previous mode reappears.

SIMPLE text

Page selection


1. Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
2. The **▲ / ▼** button can be used to select the preceding or following page.

Programming a colour button in LIST mode

If the TV is in SIMPLE text, TOP text or FASTEXT mode, press the **MEM** button to switch to LIST mode.

Four teletext page numbers of your choice can be colour coded and easily selected by pressing the corresponding coloured button on the remote control handset.


1. Press a coloured button.
2. Using the **NUMBER** buttons, select the page you wish to programme.
3. Press the **OK** button. The selected page is stored as the selected page number, blinking once to confirm this. From now on, you can select this page with the same coloured button.
4. The three other coloured buttons are programmed in this way.

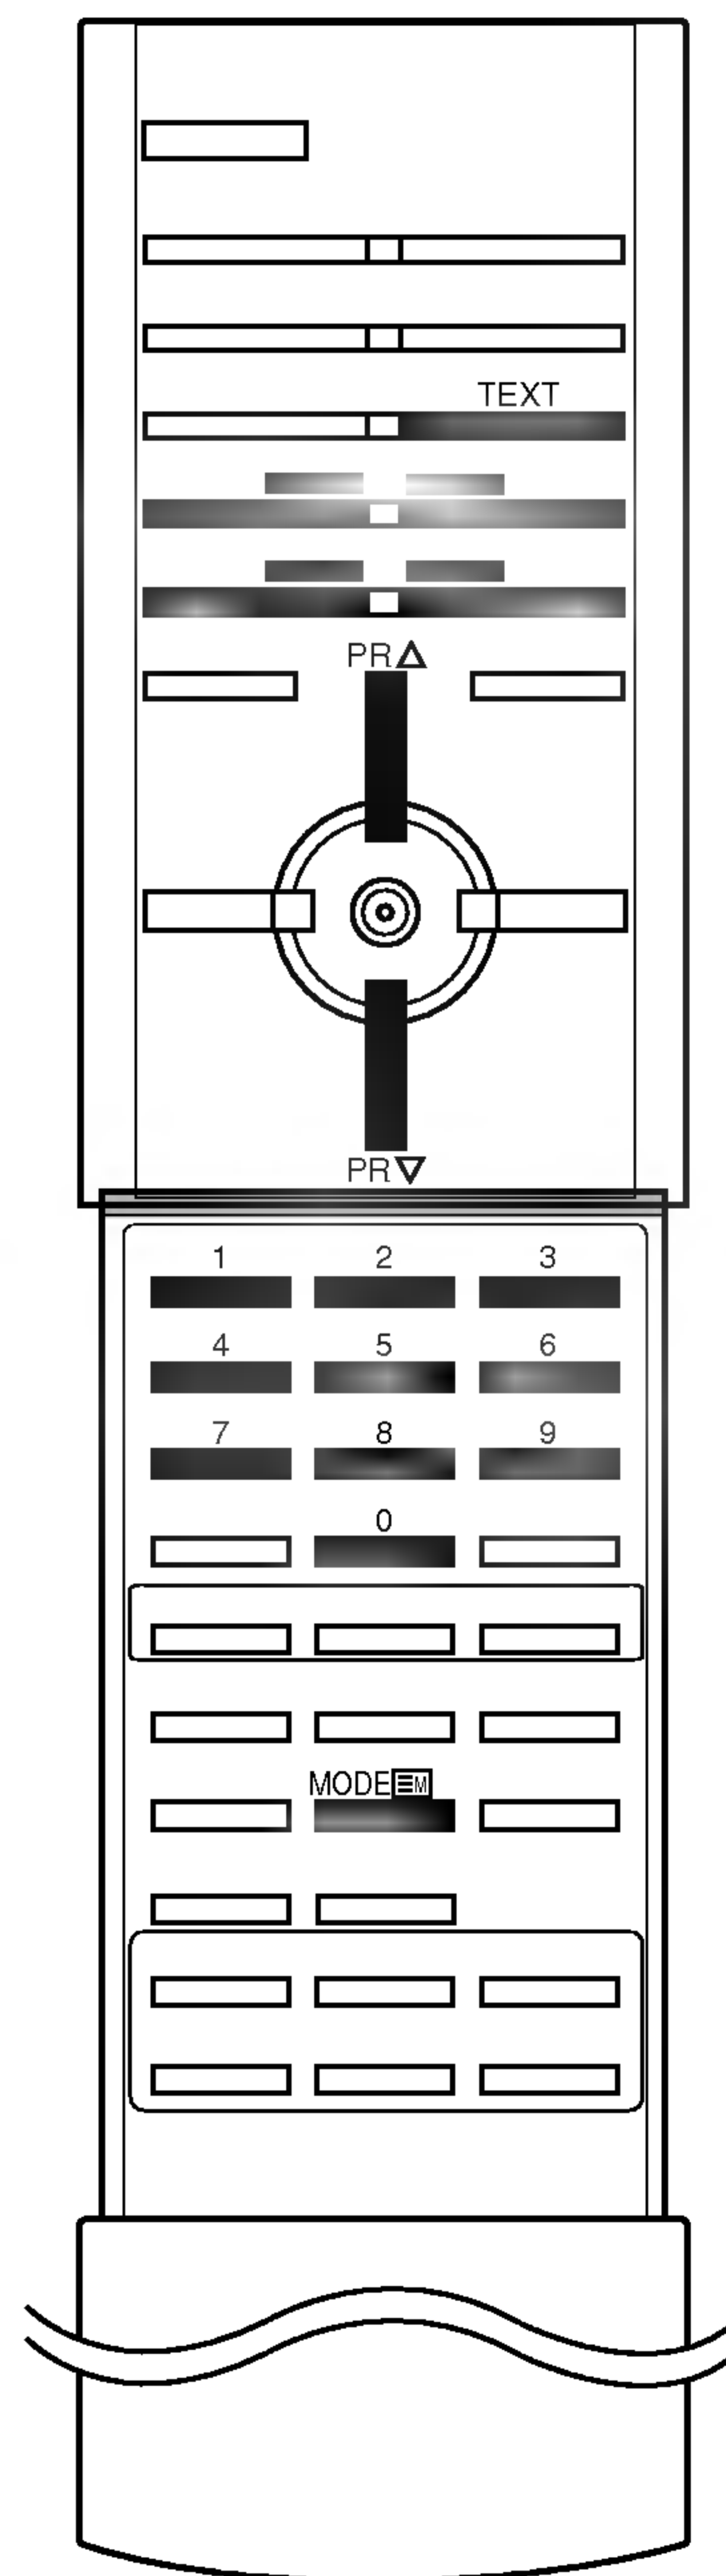

Teletext (option)

TOP text (option)

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

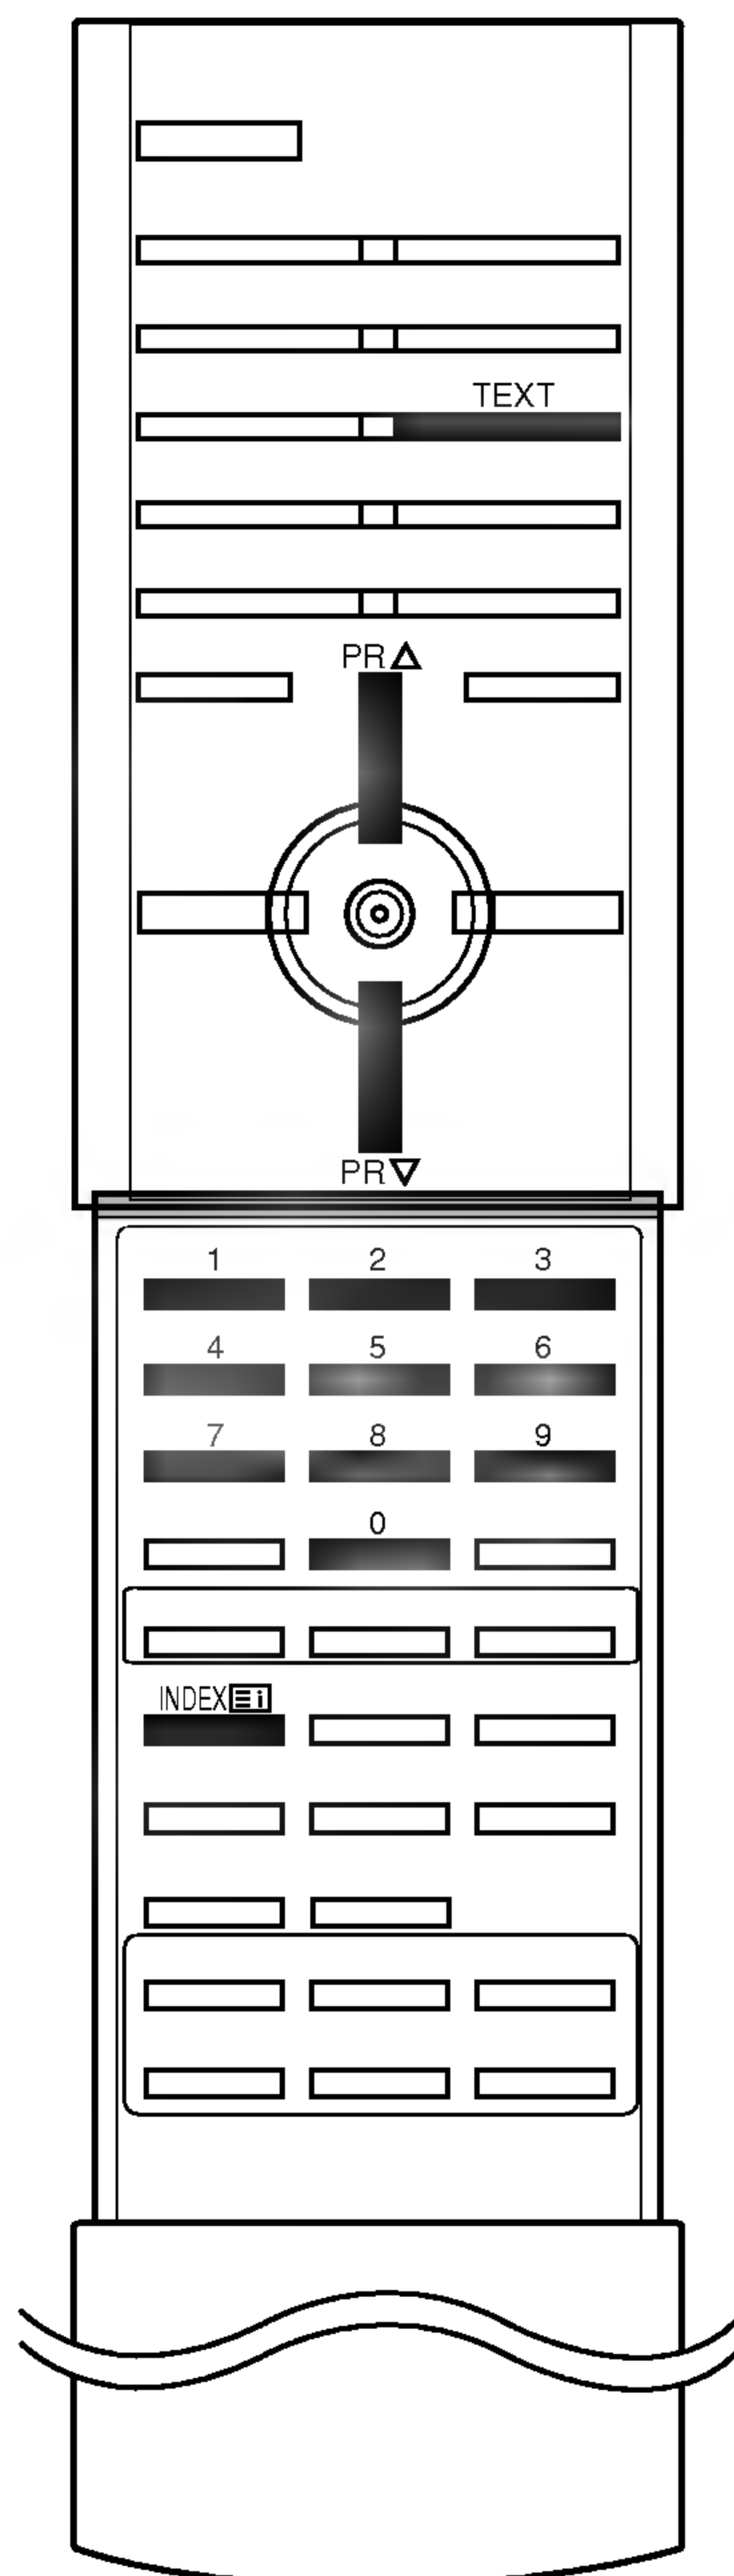

Block / group / page selection

1. With the blue button you can progress from block to block.
2. Use the yellow button to proceed to the next group with automatic overflow to the next block.
3. With the green button you can proceed to the next existing page with automatic overflow to the next group. Alternatively the ▲ button can be used.
4. The red button permits to return to previous selection. Alternatively the ▼ can be used.


Direct page selection

Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

Page selection

1. Press the  button to select the index page.
2. You can select the pages which are colour coded along the bottom line with the same coloured buttons.
3. Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
4. The ▲ / ▼ button can be used to select the preceding or following page.

Teletext (option)

Special teletext functions



REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.

Press this button again to remove the information from the display.



SIZE

Selects double height text.



Press this button to enlarge the top half of the page.

Press this button again to enlarge the bottom half of the page.

Press this button again to return to the normal display.



UPDATE

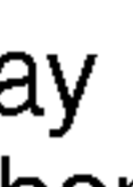Displays the TV picture on the screen while waiting for the new teletext page. The display  will appear at the top left hand corner of the screen. When the updated page is available then display  will change to the page number.

Press this button to view the updated teletext page.



HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited.

To continue press this button again.



MIX

Displays the teletext pages superimposed on the TV picture.

To switch the TV picture off press this button again.

Note : When TV and text picture are displayed half and half of the screen, MIX function is not available.




TIME


This button has two functions:

a) When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display.

b) In teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/ GREEN ▲ / ▼ or NUMBER buttons. Press this button again to exit this function.

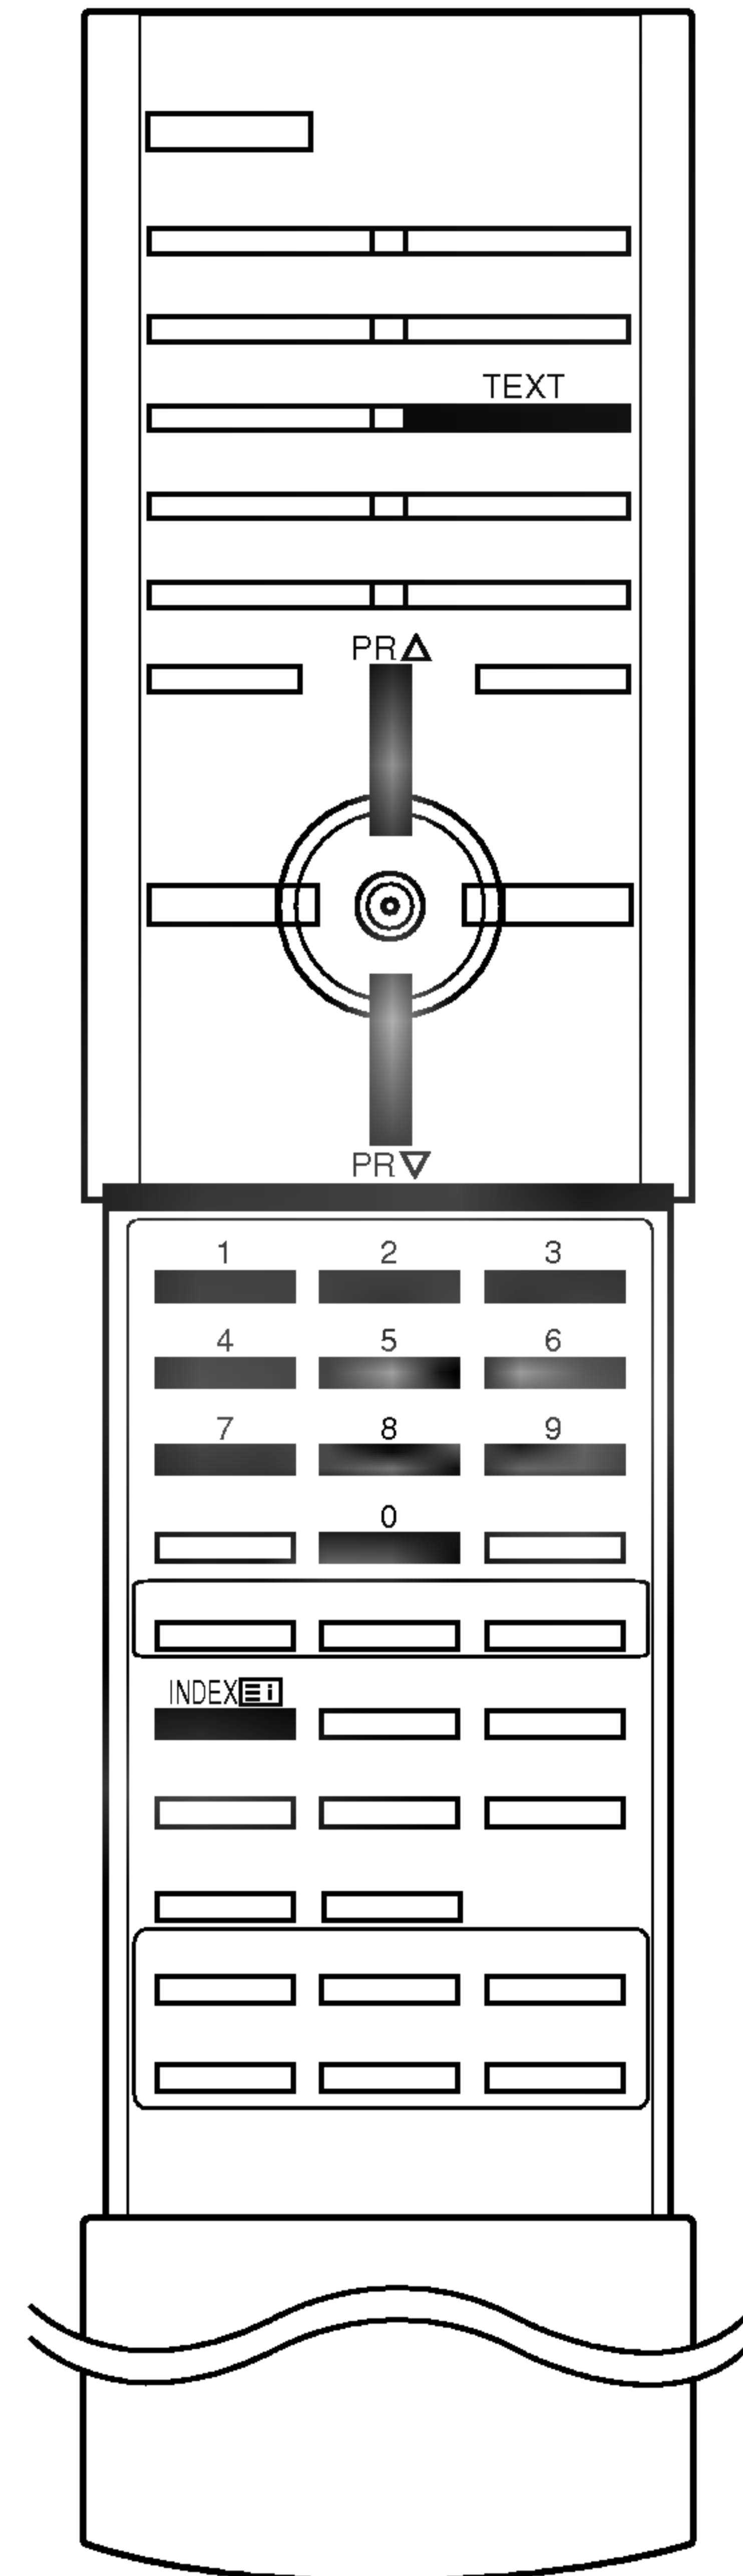

Connection of PC

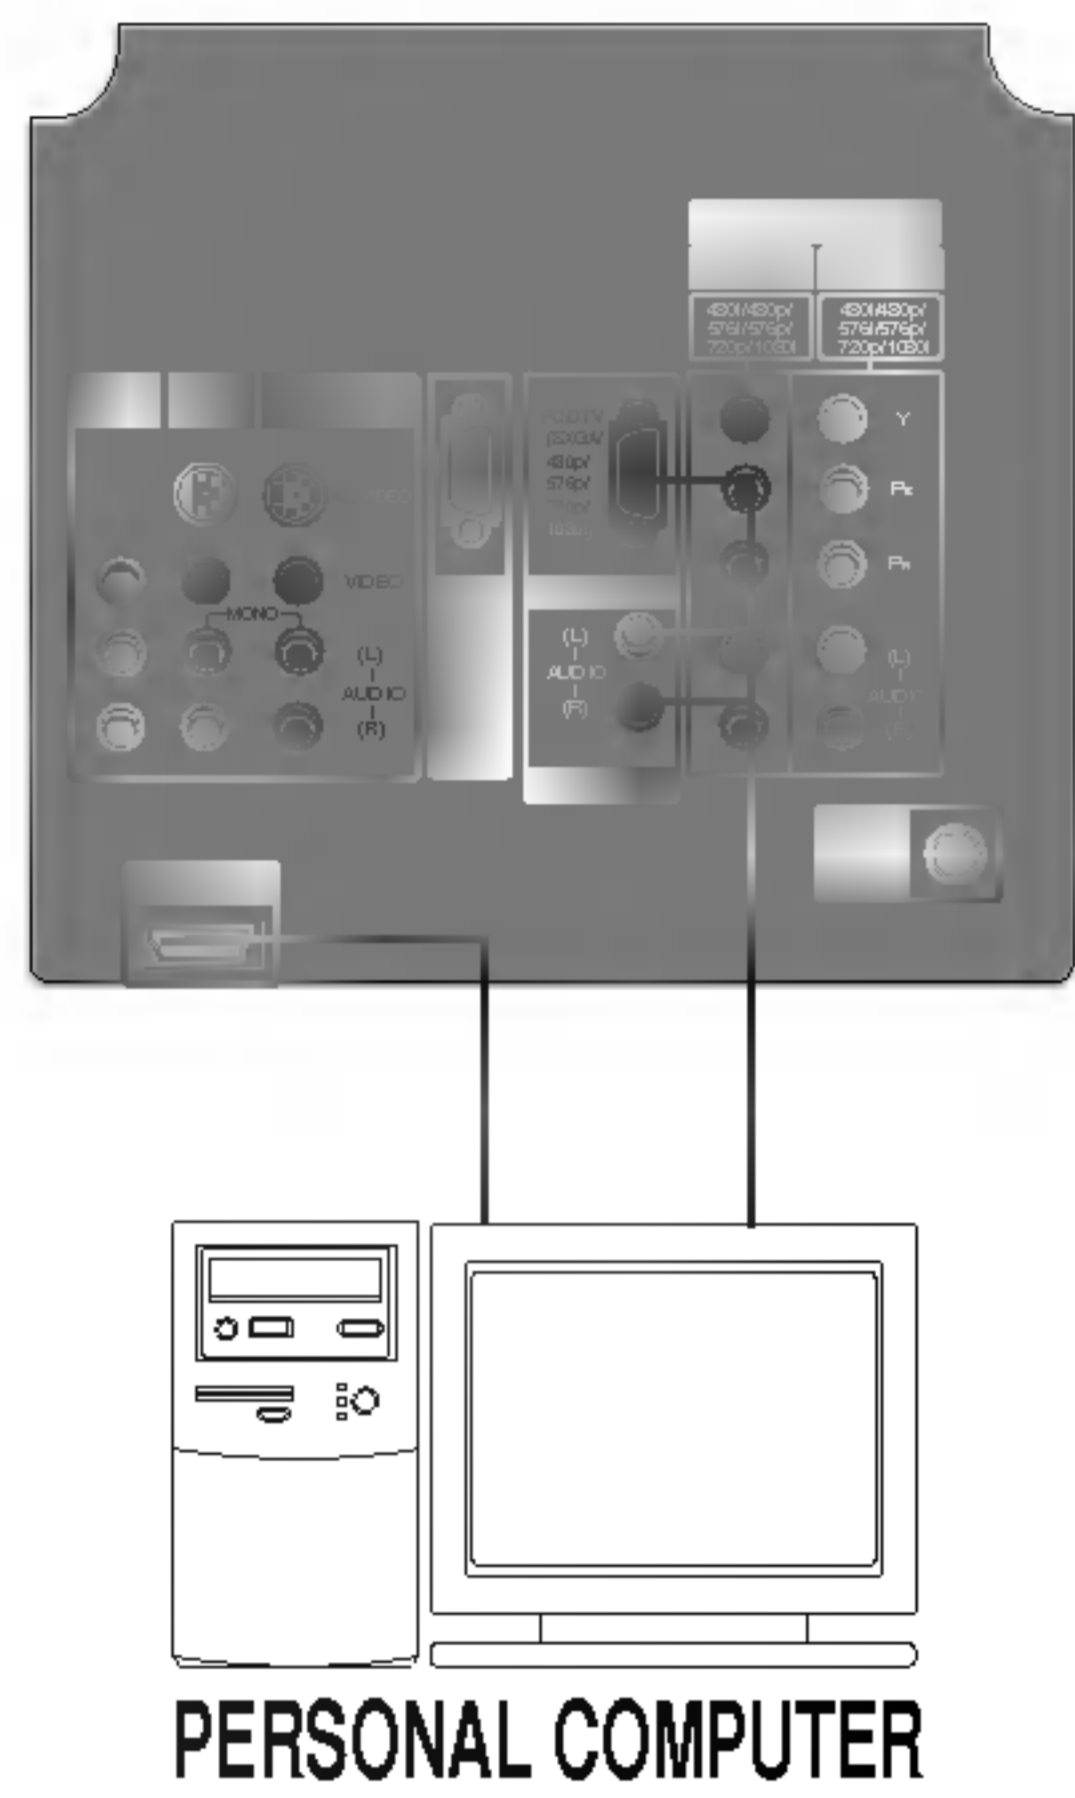

PC in socket

1. Connect the signal cable from the monitor output socket of the PERSONAL COMPUTER to the PC input socket of the set.
2. Connect the audio cable from the PC to the **RGB INPUT AUDIO** sockets on the back of the set.
3. Press the **TV/AV** or **MULTIMEDIA** button to select **RGB** or **HDMI**.
4. Switch on the PC, and the PC screen appears on the set. The set can be operated as the PC monitor.

Note :

- a. Connect PC to the PC input sockets of the set after changing the resolution of PC.
- b. If you want to watch the PC monitor only, switch off the set with the **POWER** button on the remote control handset. (If you switch off the set with the **ON/OFF** button on the set, the screen of the PC isn't displayed.)

Displayable Monitor Specification

MODE	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)
EGA	640X350	37.9	85
VGA	640X480	31.5	60
		37.9	72
		37.5	75
		43.3	85
SVGA	800X600	35.1	56
		37.9	60
		48.1	72
		46.9	75
XGA	1024X768	53.7	85
		48.4	60
		56.5	70
SXGA	1280x1024	60.0	75
		68.7	85
		64.0	60

(Synchronization input form : separate)

Connection of external equipment

You can connect additional equipment, such as VCRs, camcorders etc. to your set.

Here shown may be somewhat different from your set.

Aerial socket

1. Connect the RF out socket of the VCR to the aerial socket on the back of the set.
2. Connect the aerial cable to the RF aerial in socket of the VCR.
3. Store the VCR channel on a desired programme number using the 'Manual programme tuning' section.
4. Select the programme number where the VCR channel is stored.
5. Press the **PLAY** button on the VCR.

Audio/Video input sockets (option)

1. Connect the audio/video out sockets of the VCR to audio/video in sockets of the set.
2. Press the **TV/AV** button to select **AV1**, **AV2** or **AV3**.
3. Press the **PLAY** button on the VCR.
The VCR playback picture appears on the screen.

Note : If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** socket of the set.

S-Video / Audio input sockets (option)





When connecting an VCR to the S-VIDEO socket, the picture quality will be further improved.

1. Connect the S-video socket of the VCR to the **S-VIDEO** socket of the set.
2. Connect the audio cable from the VCR to the AUDIO sockets of the **AV1**, **AV2** or **AV3**.
3. Select **AV1**, **AV2** or **AV3** by pressing the **TV/AV** button repeatedly.
4. Press the **PLAY** button on the VCR.
The VCR playback picture appears on the screen.

Note : If both **S-VIDEO** and **VIDEO** sockets have been connected to the VCR simultaneously, only the **S-VIDEO** can be received.

Monitor output sockets

Connect the audio/video in sockets of the other TV or monitor to **MONITOR OUTPUT** sockets of the set.

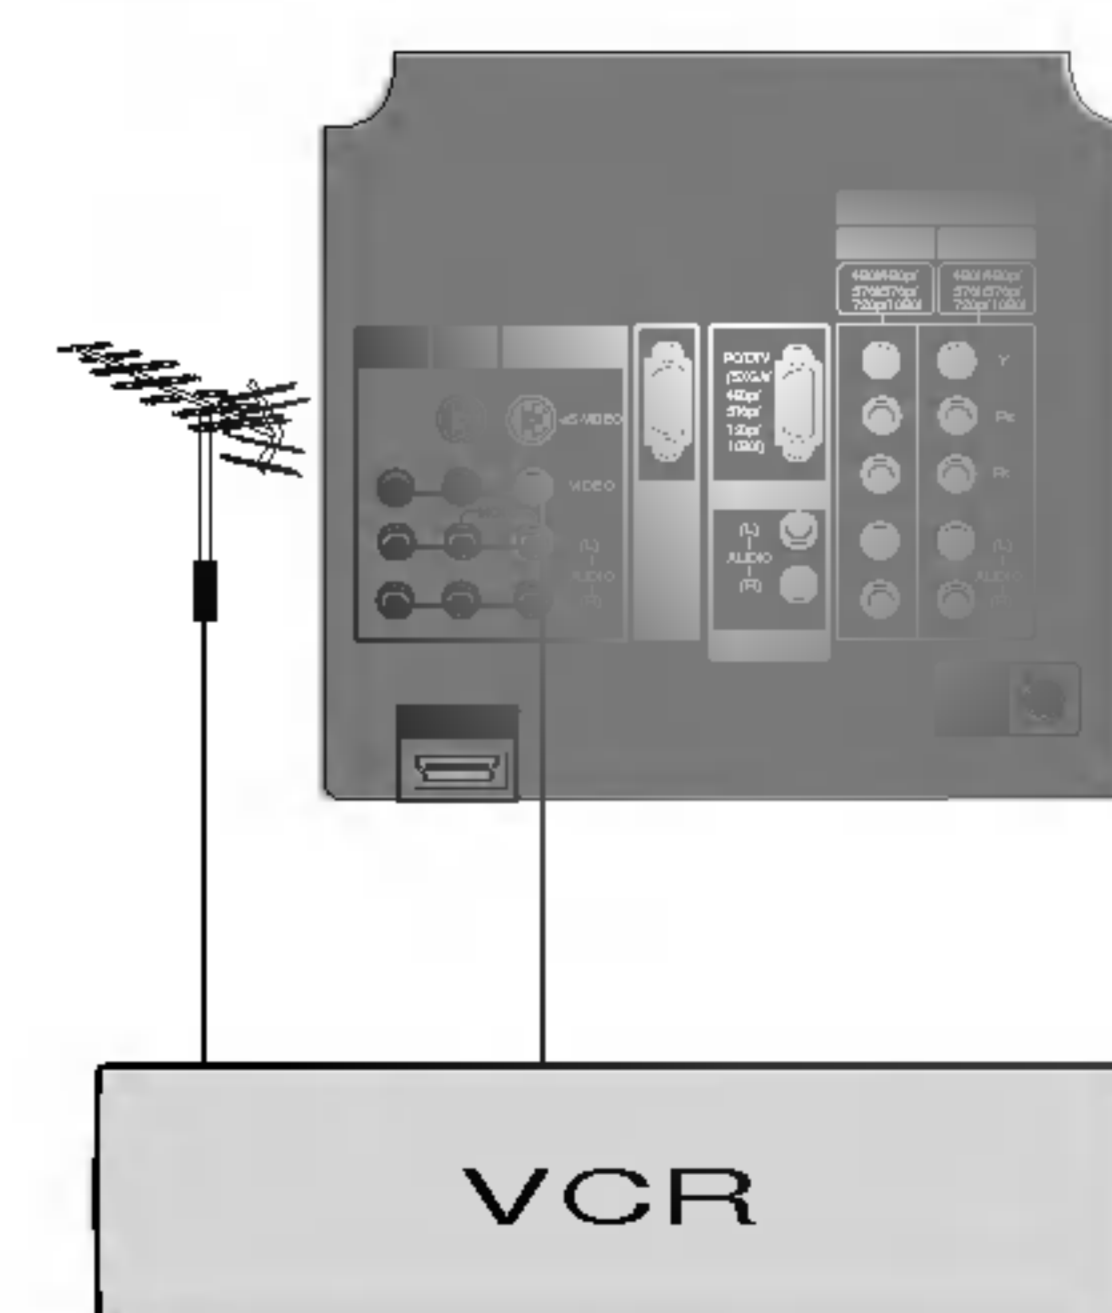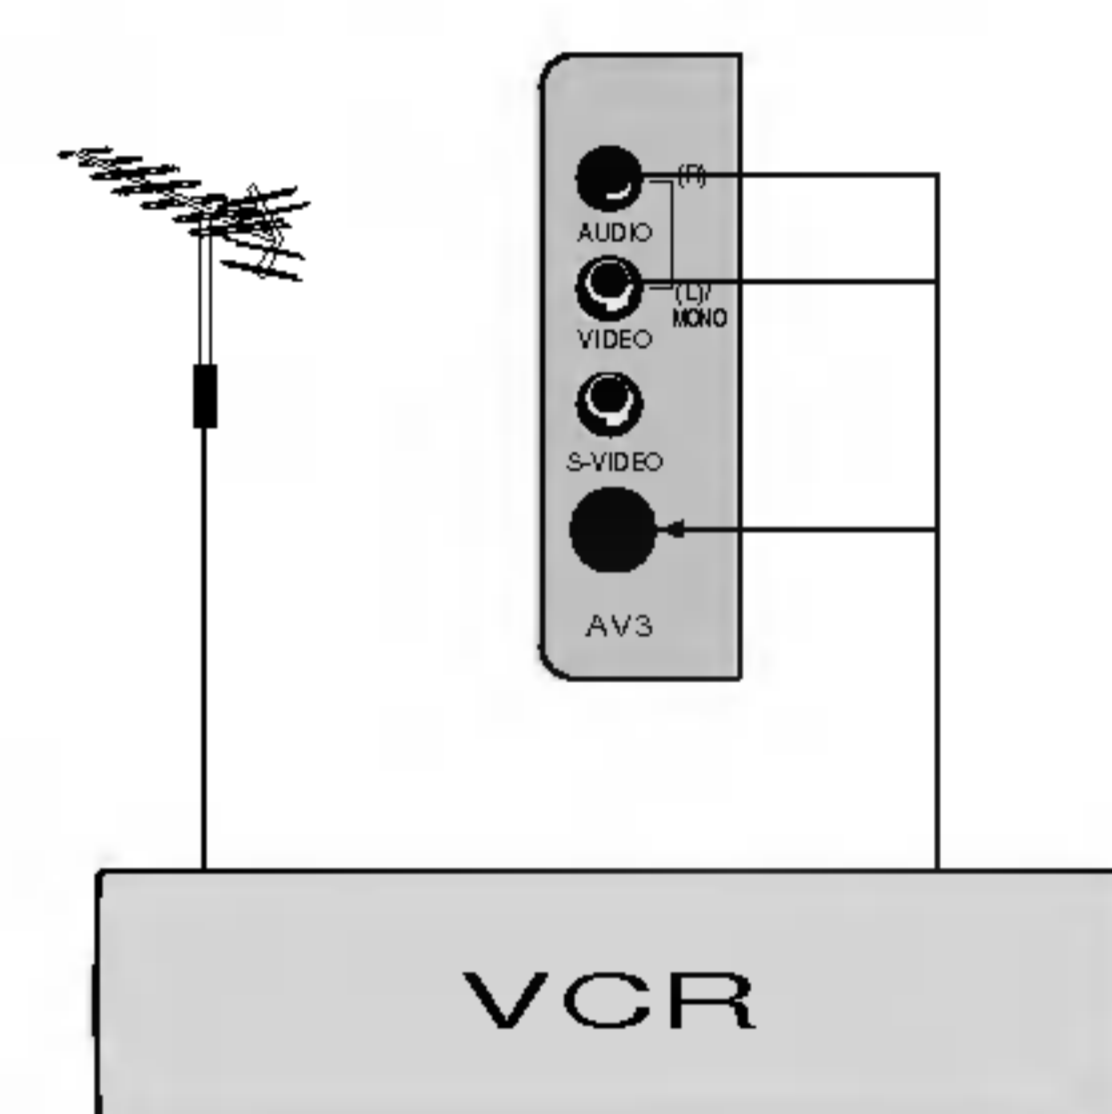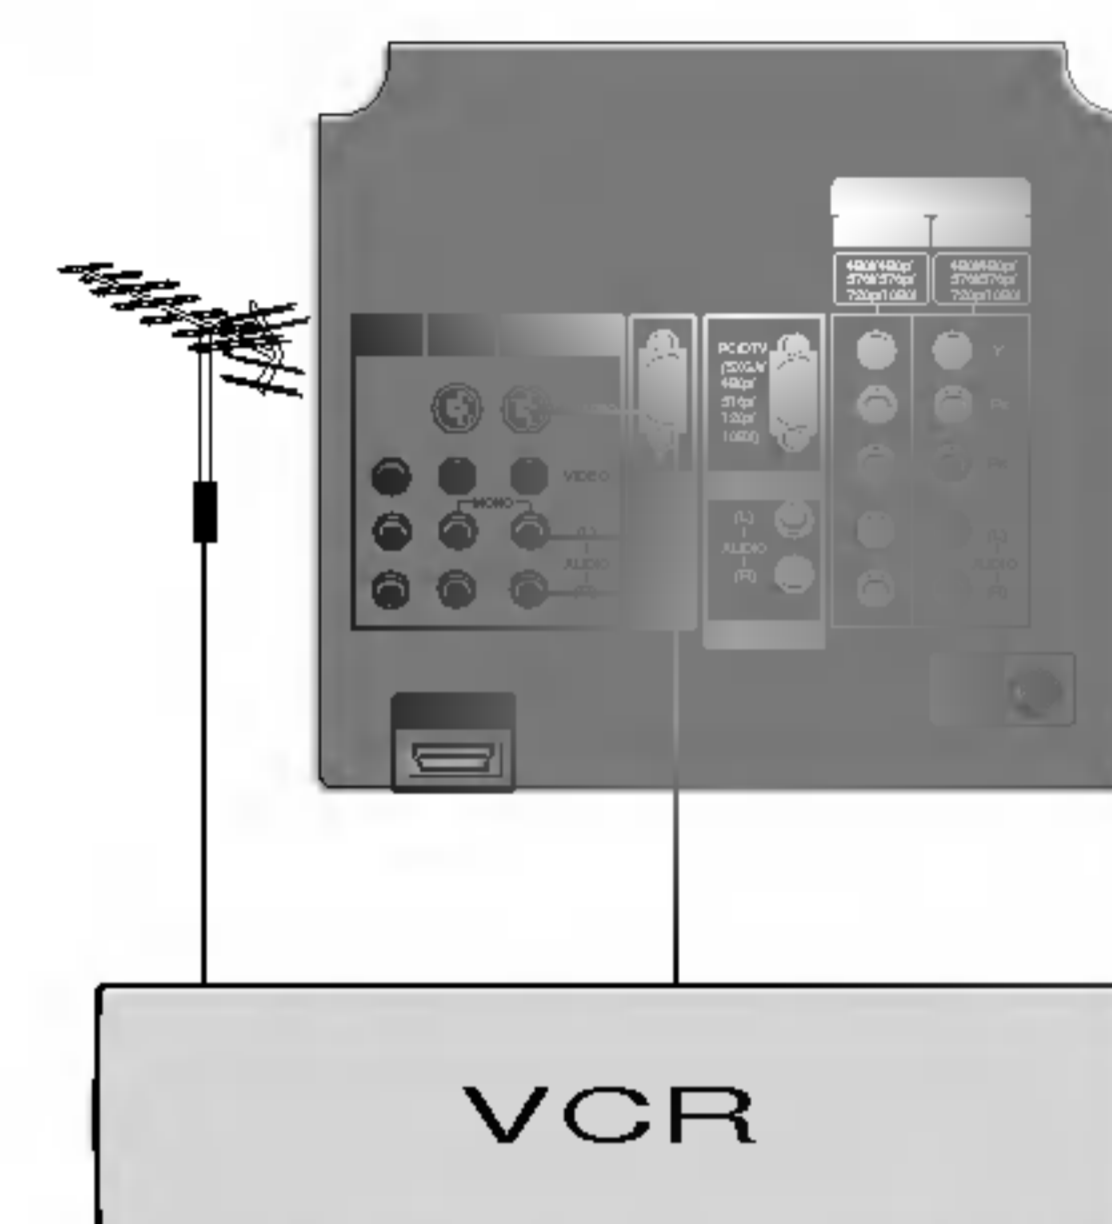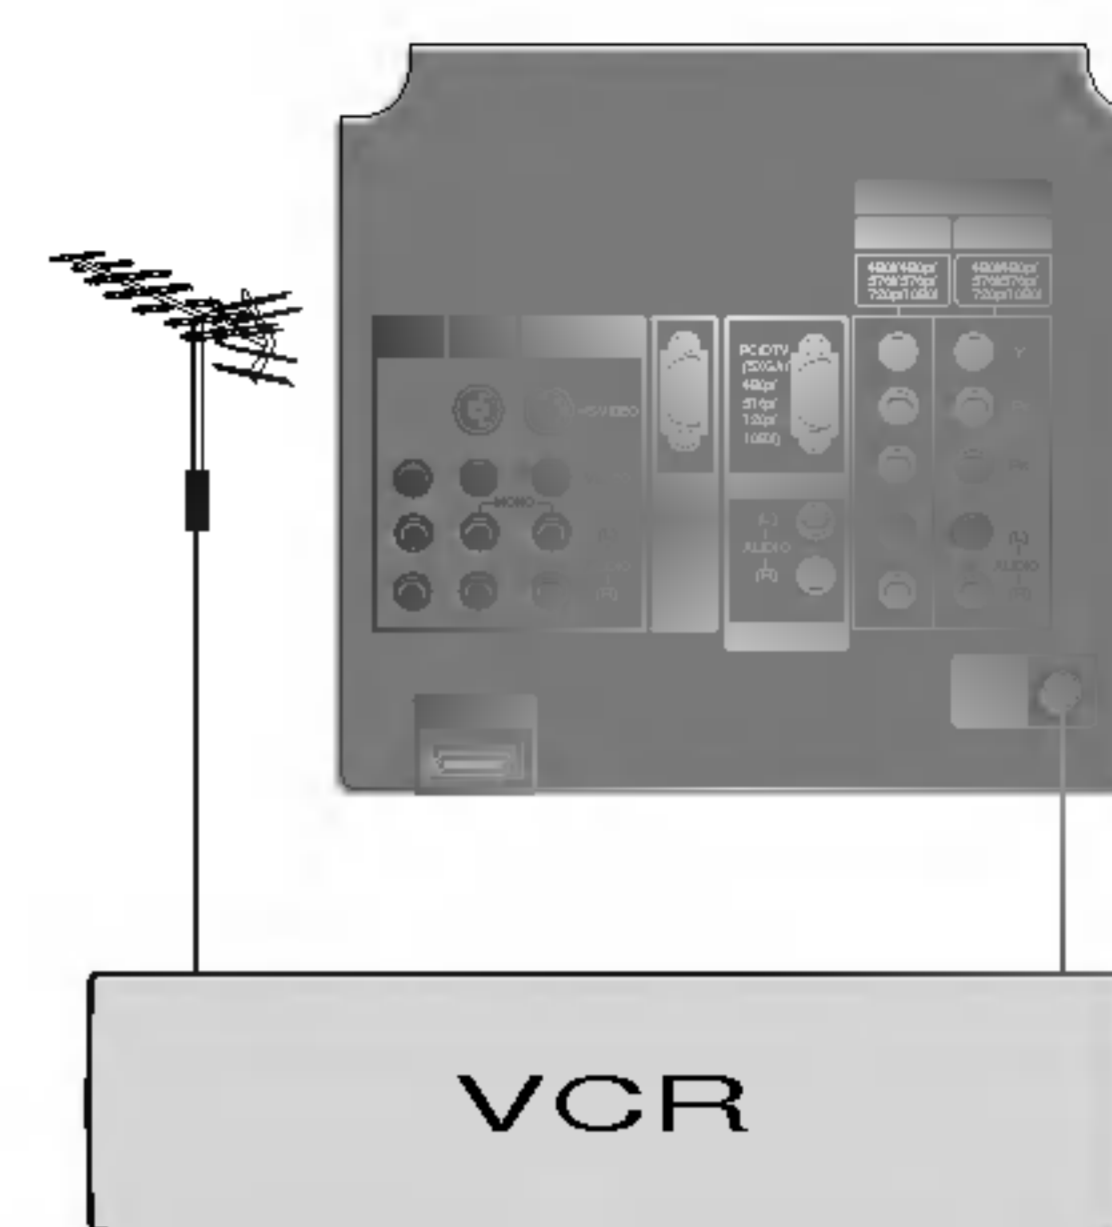


Connection of external equipment

DVD input sockets




1. Connect the DVD output sockets (Y Cb Cr, Y Pb Pr, Y B-Y R-Y or Y P_B P_R) of the DVD to the **DTV/DVD** sockets (Y P_B P_R) of the set.
2. Connect the audio cable from the DVD to **COMPONENT** sockets of the set.
3. Press the **TV/AV** or **MULTIMEDIA** button to select **Component 1** or **Component 2**.
4. Press the **PLAY** button on the DVD.
The DVD playback picture appears on the screen.

DTV input sockets

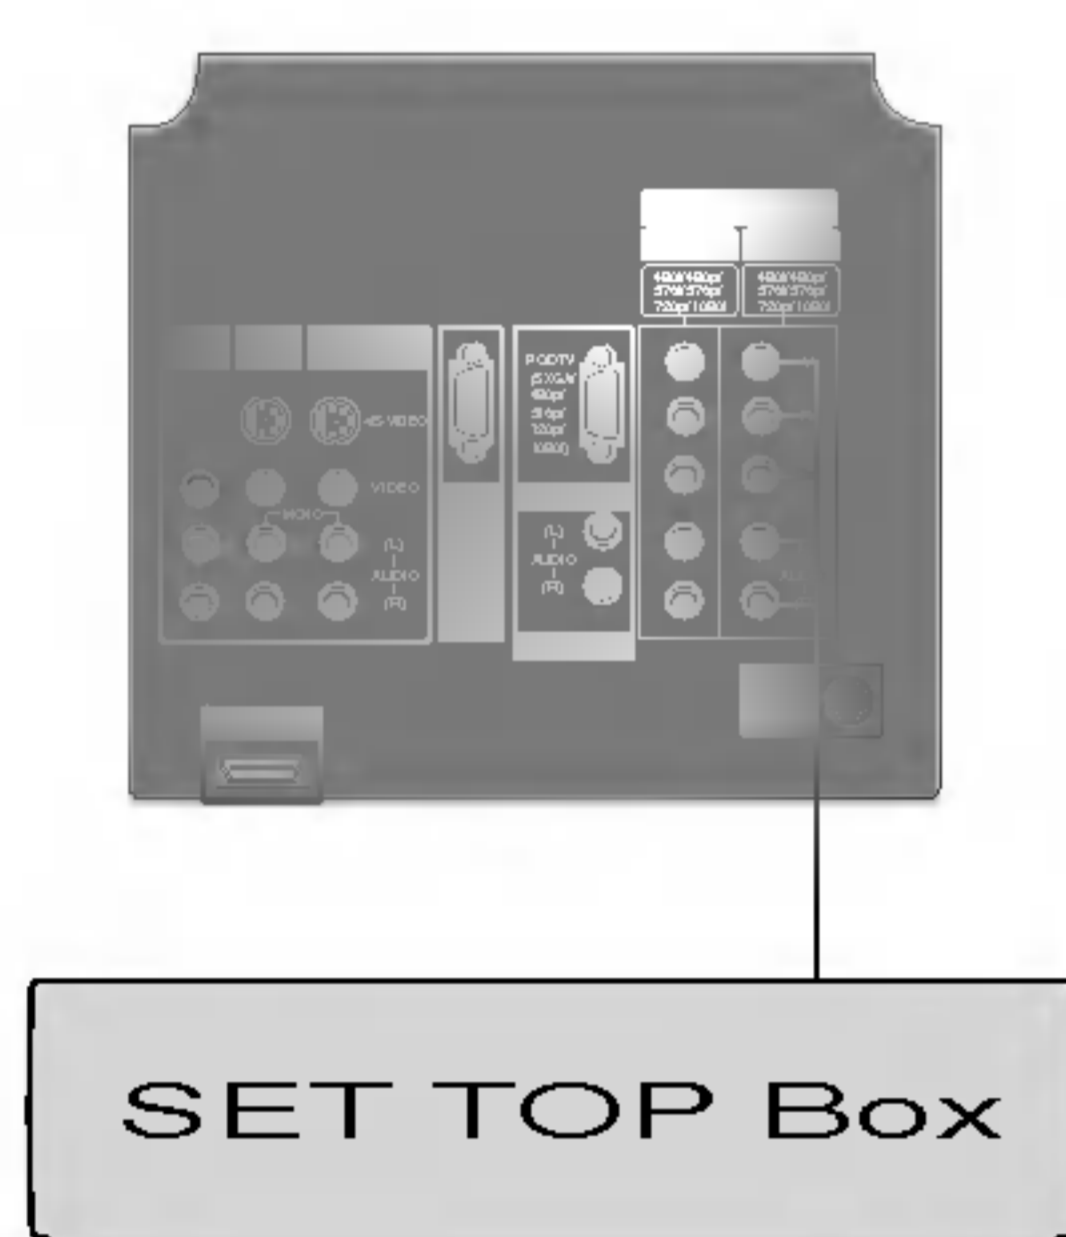

1. Connect the SET TOP inputs to the **DTV/DVD** sockets (Y P_B P_R) of the set. (or, connect the SET TOP with the D-Sub output socket to **RGB INPUT** socket on the set and audio cable of the HD-SET TOP to the AUDIO sockets of **RGB/DVI INPUT**.)
2. Connect the audio cable from the SET TOP to the **DTV/DVD AUDIO** sockets of the set.
3. Press the **TV/AV** or **MULTIMEDIA** button to select **Component 1**, **Component 2**, **RGB** or **HDMI**.

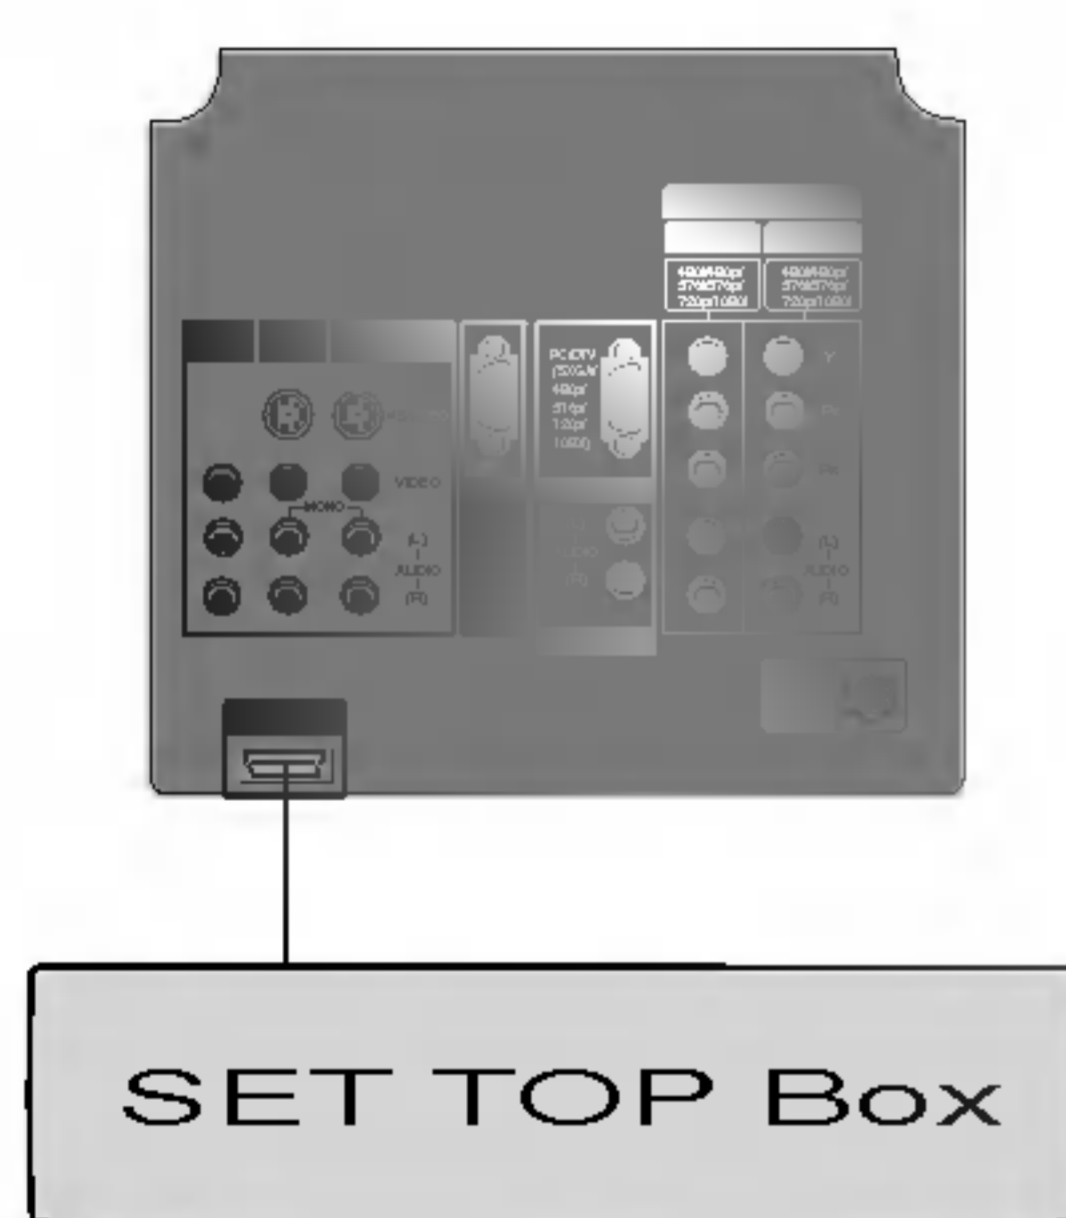




- HDMI™, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing.
- This set can receive the High-Definition Multimedia Interface (HDMI) or Input of Digital Visual Interface(DVI).
- This set supports HDCP (High-bandwidth Digital Contents Protection) Protocol for the set (480p, 720p, 1080i) modes.
- When you Connect with HDMI/DVI Source Devices (DVD Player or Set Top Box or PC) supporting Auto HDMI/DVI function, automatically, support Plug & Play and then set the HDMI/DVI Source Devices (640 x 480p) (or 50PX4R series: 1280 x 720p). After reading in HDMI/DVI Source Devices using Display Data Channel(DDC) Protocol, EDID stored in the set is used. If HDMI/DVI Source Devices not supported Auto HDMI/DVI is been, the Resolution is set, manually.
- To get the best picture quality, adjust the DVD Player or Set Top Box output resolution to 1280 x 720p.
- To get the best picture quality, adjust the PC graphics card to 1024 x 768, 60Hz.
- When Source Devices have DVI Output Connector, you must connect audio with separated cable.(Refer to **<How to connect>**)

How to connect


1. When Source Devices (DVD Player or Set Top Box) support HDMI.
 - If Source Devices have HDMI Output Connector, Source Devices connect to the set with HDMI Cable .(not supplied with the product).
 - If Source Devices support Auto HDMI, automatically, Source Devices divert output resolution in 1280 x 720p. But if not, resolution divert Manually Setting for reference Manual of Source Devices.
 - To get the best picture quality, adjust the DVD Player or Set Top Box output resolution to 1280 x 720p.
 - Because HDMI sends Digital Video and Audio with one cable, need not especial Audio Cable for using HDMI Cable.
2. When Source Devices (DVD Player or Set Top Box) supports DVI.
 - If Source Devices have DVI Output Connector, Source Devices connect to the set with HDMI to DVI Cable (not supplied with the product).
 - If Source Devices support Auto DVI, automatically, Source Devices divert output resolution in 1280 x 720p. But if not, resolution divert Manually Setting for reference Manual of Source Devices.
 - To get the best picture quality, adjust the DVD Player or Set Top Box output resolution to 1280 x 720p.
 - In this case, Audio use other cable. When Source Devices have Analog Audio Output Connector, RGB/DVI Audio Input of the set connect to Audio Cable (not supplied with the product). And then you can listen to normal Audio.
3. When PC supports DVI.
 - If PC have DVI Output Connector, Source Devices connect to the set with HDMI to DVI Cable (not supplied with the product).
 - To get the best picture quality, adjust the PC graphics card to 1024 x 768, 60Hz.
 - Use the the set's HDMI/DVI (VIDEO) for video connections, depending on your PC connector.
 - If the graphics card on the PC does not output analog RGB and DVI simultaneously, connect only one of either RGB Input or HDMI/DVI Input to display the PC on the set.
 - If he graphics card on the PC does output analog RGB and DVI simultaneously, the set to either RGB Input or HDMI/DVI Input; (the other mode is set to Plug and Play automatically by the set.)
 - Then, make the corresponding audio connections. If using a sound card, adjust the PC sound as required.
 - In this case, Audio use other cable. When PC (or sound card of PC) have Analog Audio Output Connector, RGB/DVI Audio Input of the set connect to Analog Audio Cable (not supplied with the product). And then you can listen to normal Audio.

Reference

Cable sample

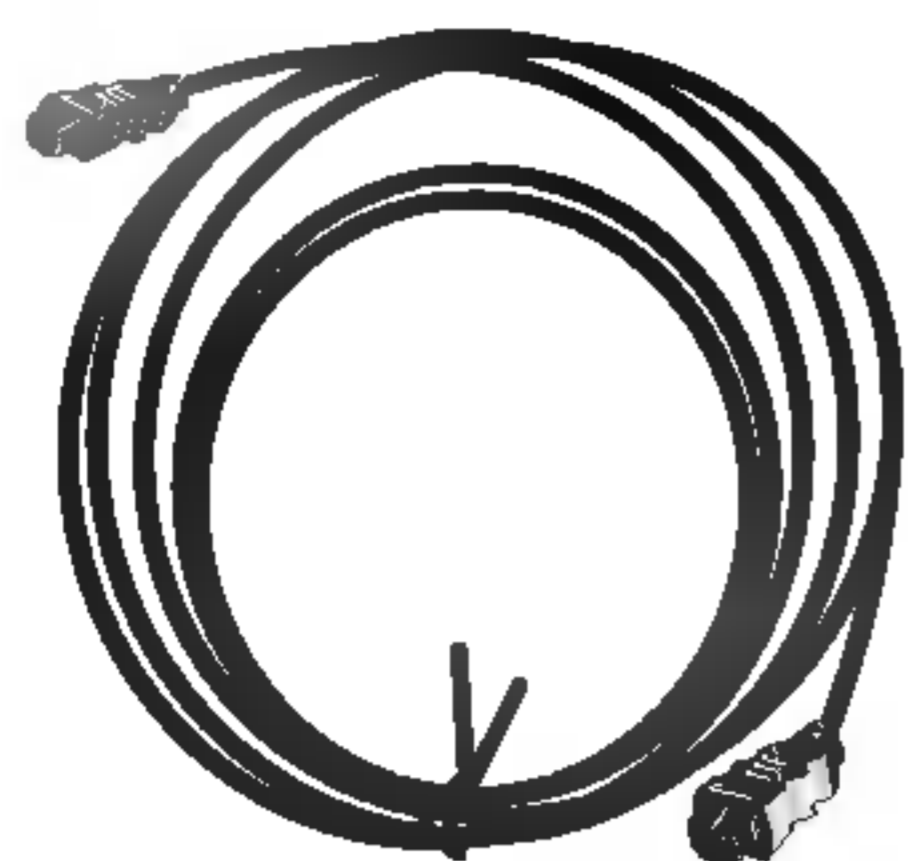

HDMI Cable
(not supplied with the product)

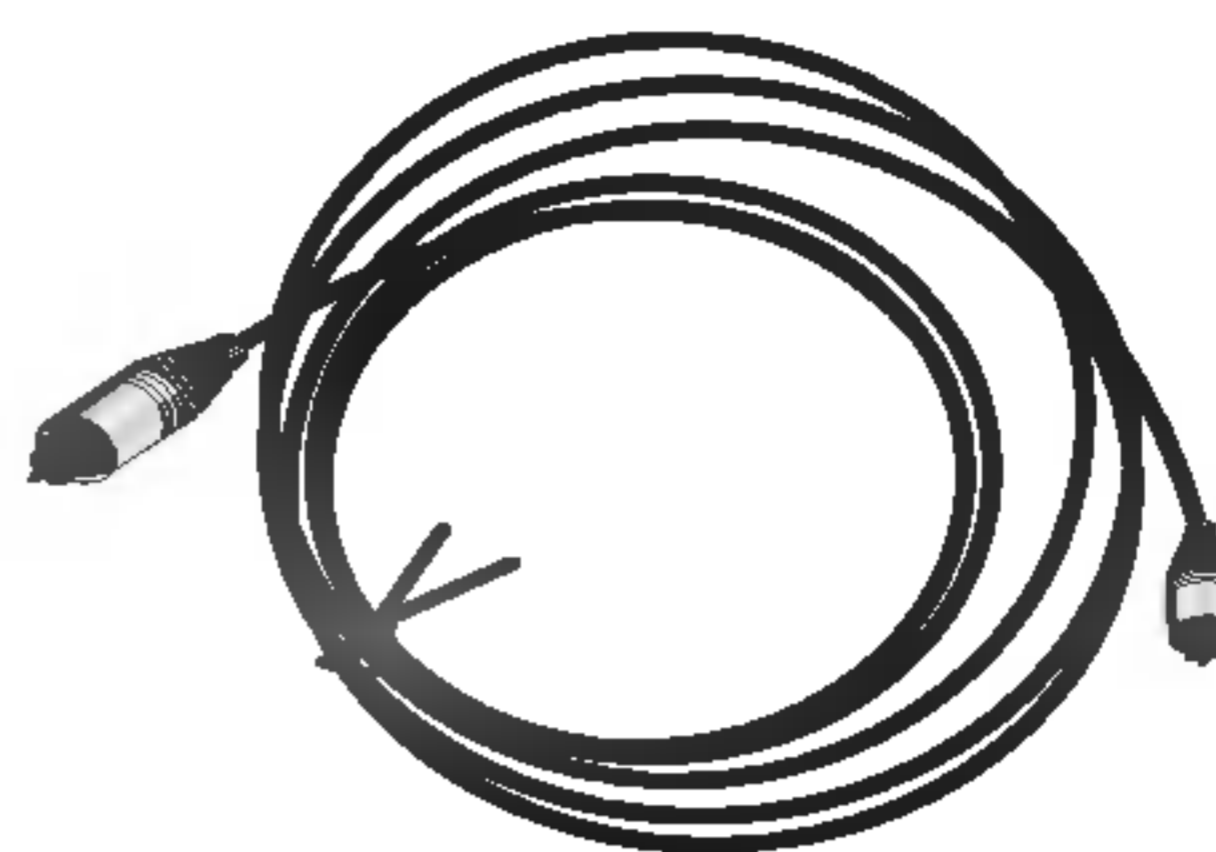

Analog Audio Cable (RCA type)
(not supplied with the product)



HDMI to DVI Cable
(not supplied with the product)



Analog Audio Cable (Stereo to RCA type)
(not supplied with the product)

How to use

1. Connect the HDMI/DVI Source Devices(DVD Player or Set Top Box or PC) and the set.
2. Turn on the display by pressing the POWER button on the set and HDMI/DVI Source Devices remote control.
3. Select HDMI/DVI Input source in Main Input option of PIP/DW menu.
4. Check the image on your set. There may be noise associated with the resolution, vertical pattern, contrast or brightness in HDMI/DVI Source Devices. If noise is present, change the HDMI/DVI Source Devices to another resolution, change the refresh rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphics card can not be changed, change the PC graphics card or consult the manufacturer of the PC graphics card.

Notes:

- Depending on the graphics card, DOS mode may not work if you use a HDMI to DVI Cable.
- Avoid keeping a fixed image on the set screen for a long period of time. The fixed image may become permanently imprinted on the screen. Use the Orbiter screen saver when possible.
- When Source Devices connected HDMI/DVI Input, output PC Resolution(VGA, SVGA, XGA), Position, Size may not fit to Screen. As shown in the lower picture, press the **MENU** button to adjust the screen Position of the set and contact a PC graphics card service center.
- When Source Devices connected HDMI/DVI Input output the set Resolution(480p, 720p, 1080i), the set Display fit EIA/CEA-861-B Specification to Screen. If not, refer to the Manual of HDMI/DVI Source Devices or contact your service center.
- In case HDMI/DVI Source Devices is not connected Cable or poor cable connection, "No Signal" OSD display in HDMI/DVI Input. And In case of Video Resolution not supported the set output in HDMI/DVI Source Devices, "No Signal" OSD display. Refer to the Manual of HDMI/DVI Source Devices or contact your service center.

Note

Note

Troubleshooting check list

Symptoms

No picture, no sound

Sound OK, poor picture

Picture OK, poor sound

Picture blurred

Lines or streaks in picture

Poor reception on some channels



No colour

Poor colour

Remote control does not work

Poor brightness

Strange sound from inside the monitor

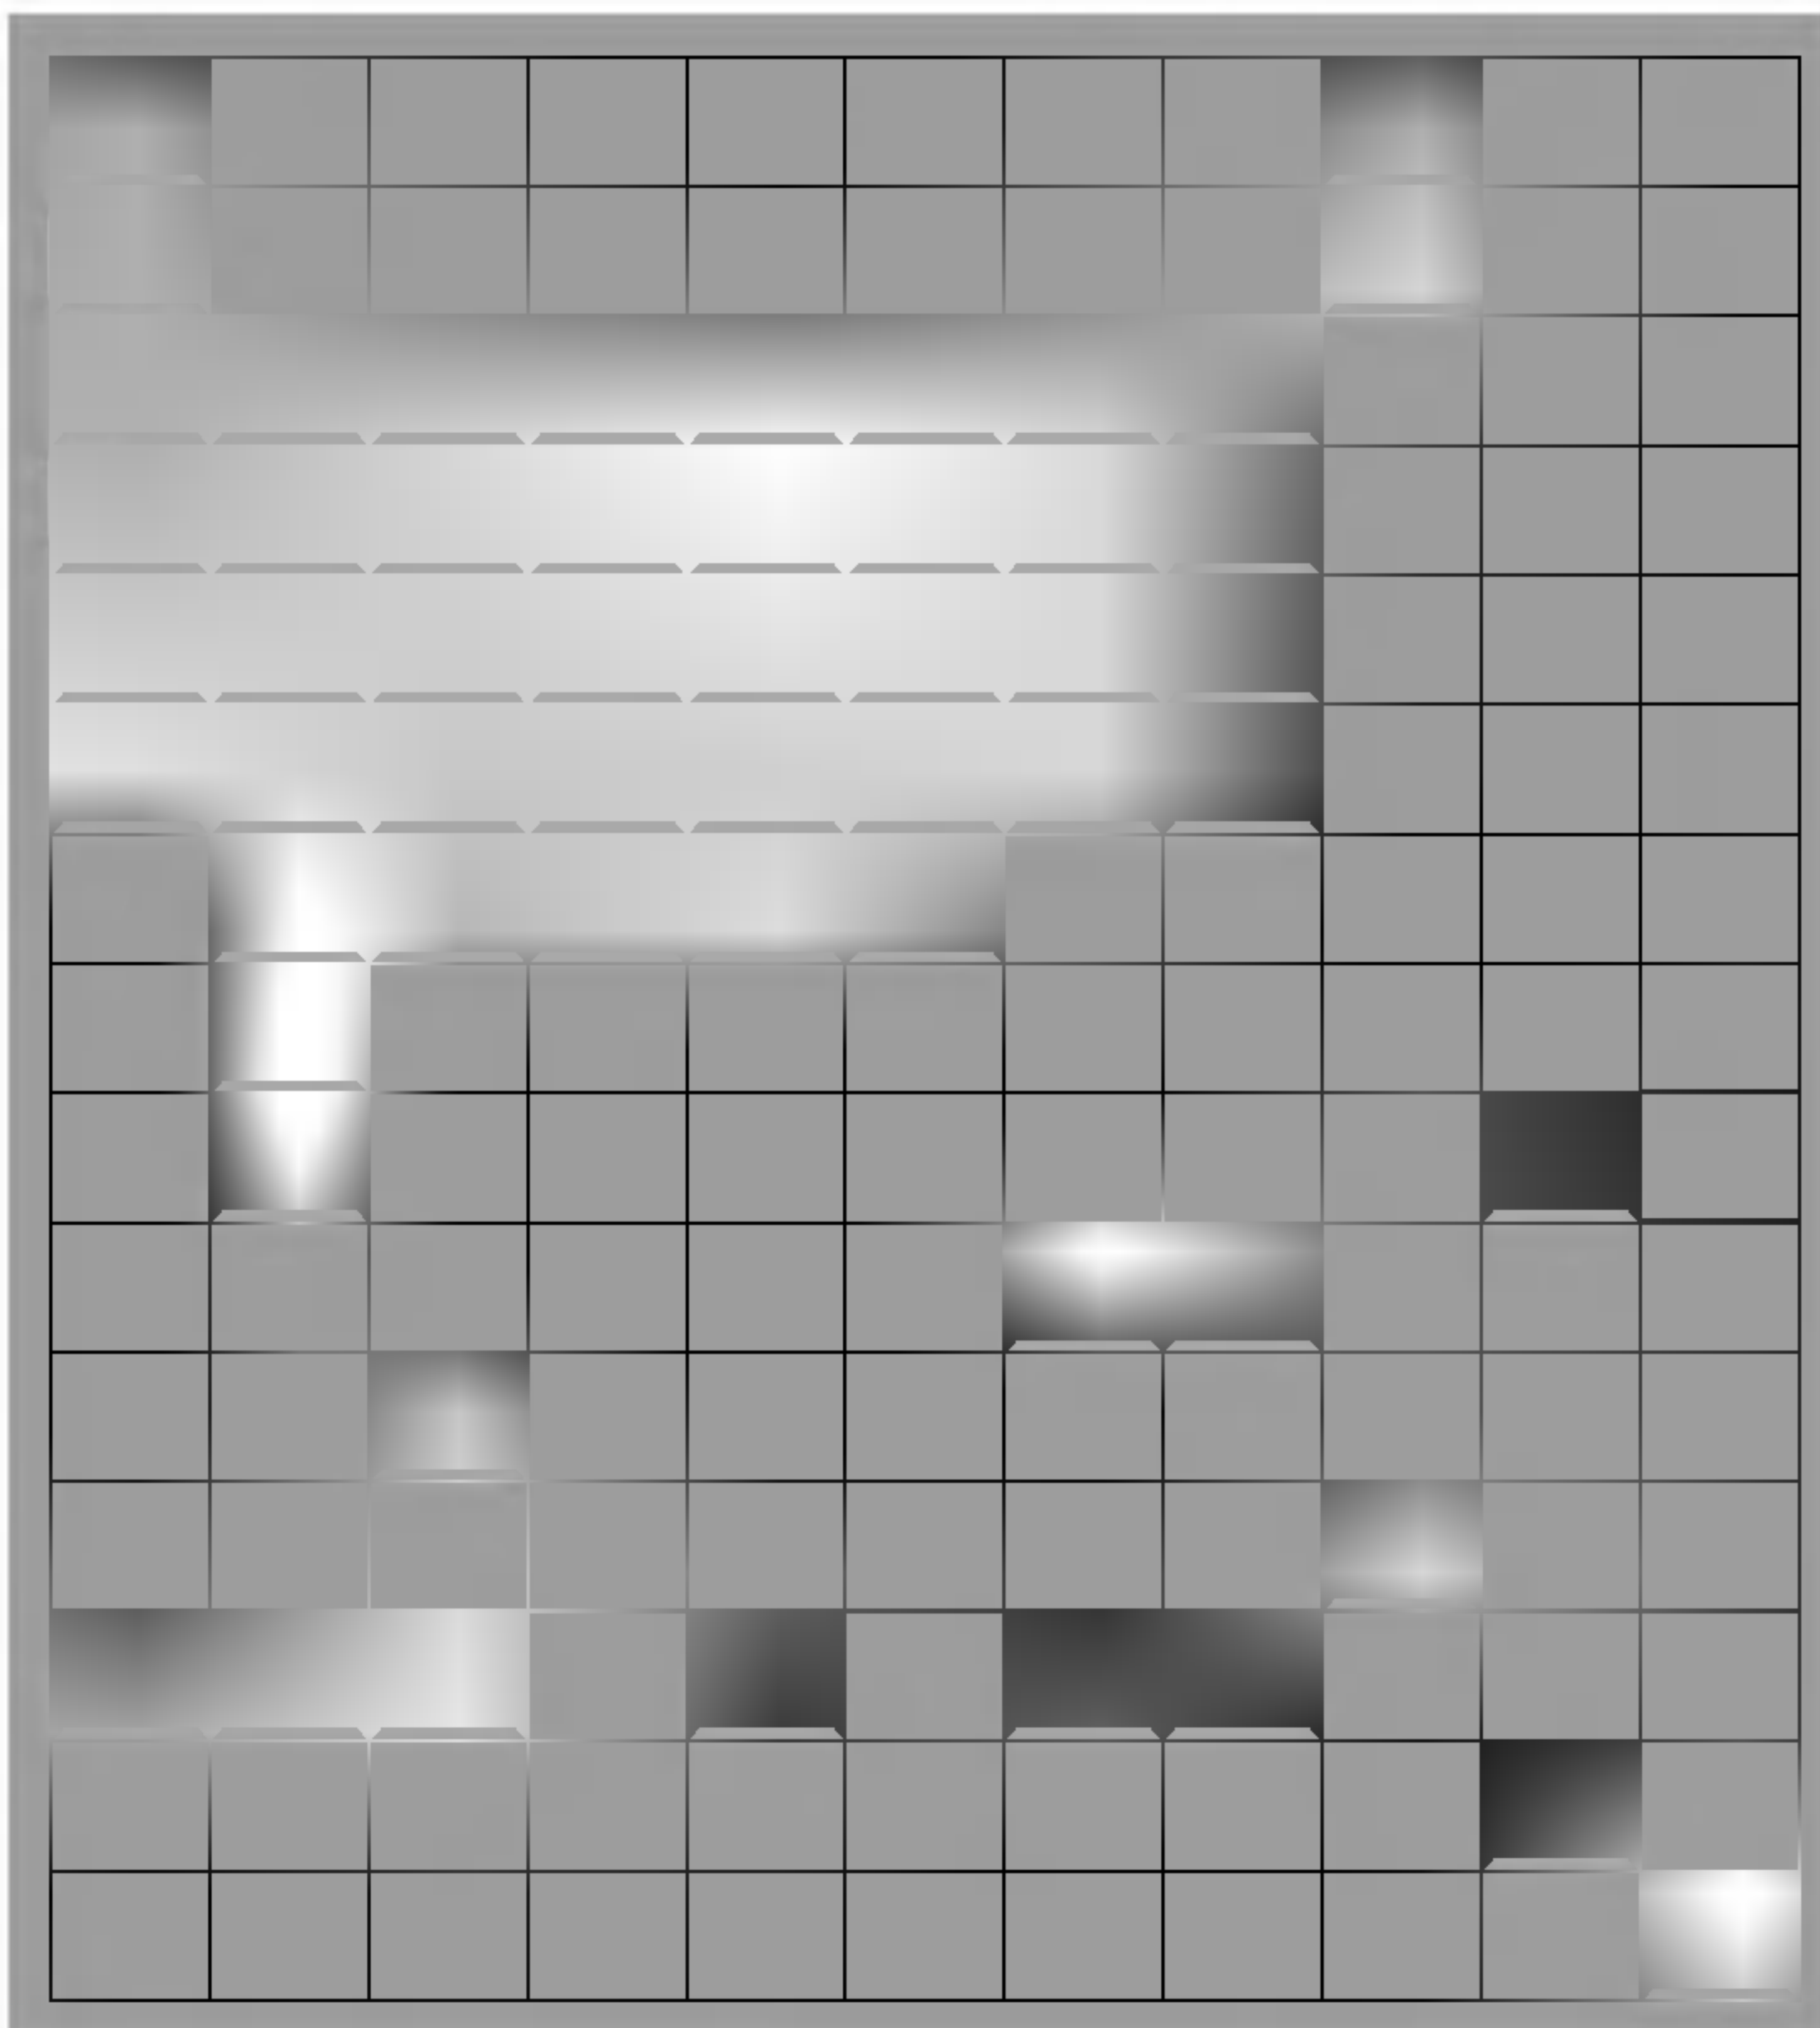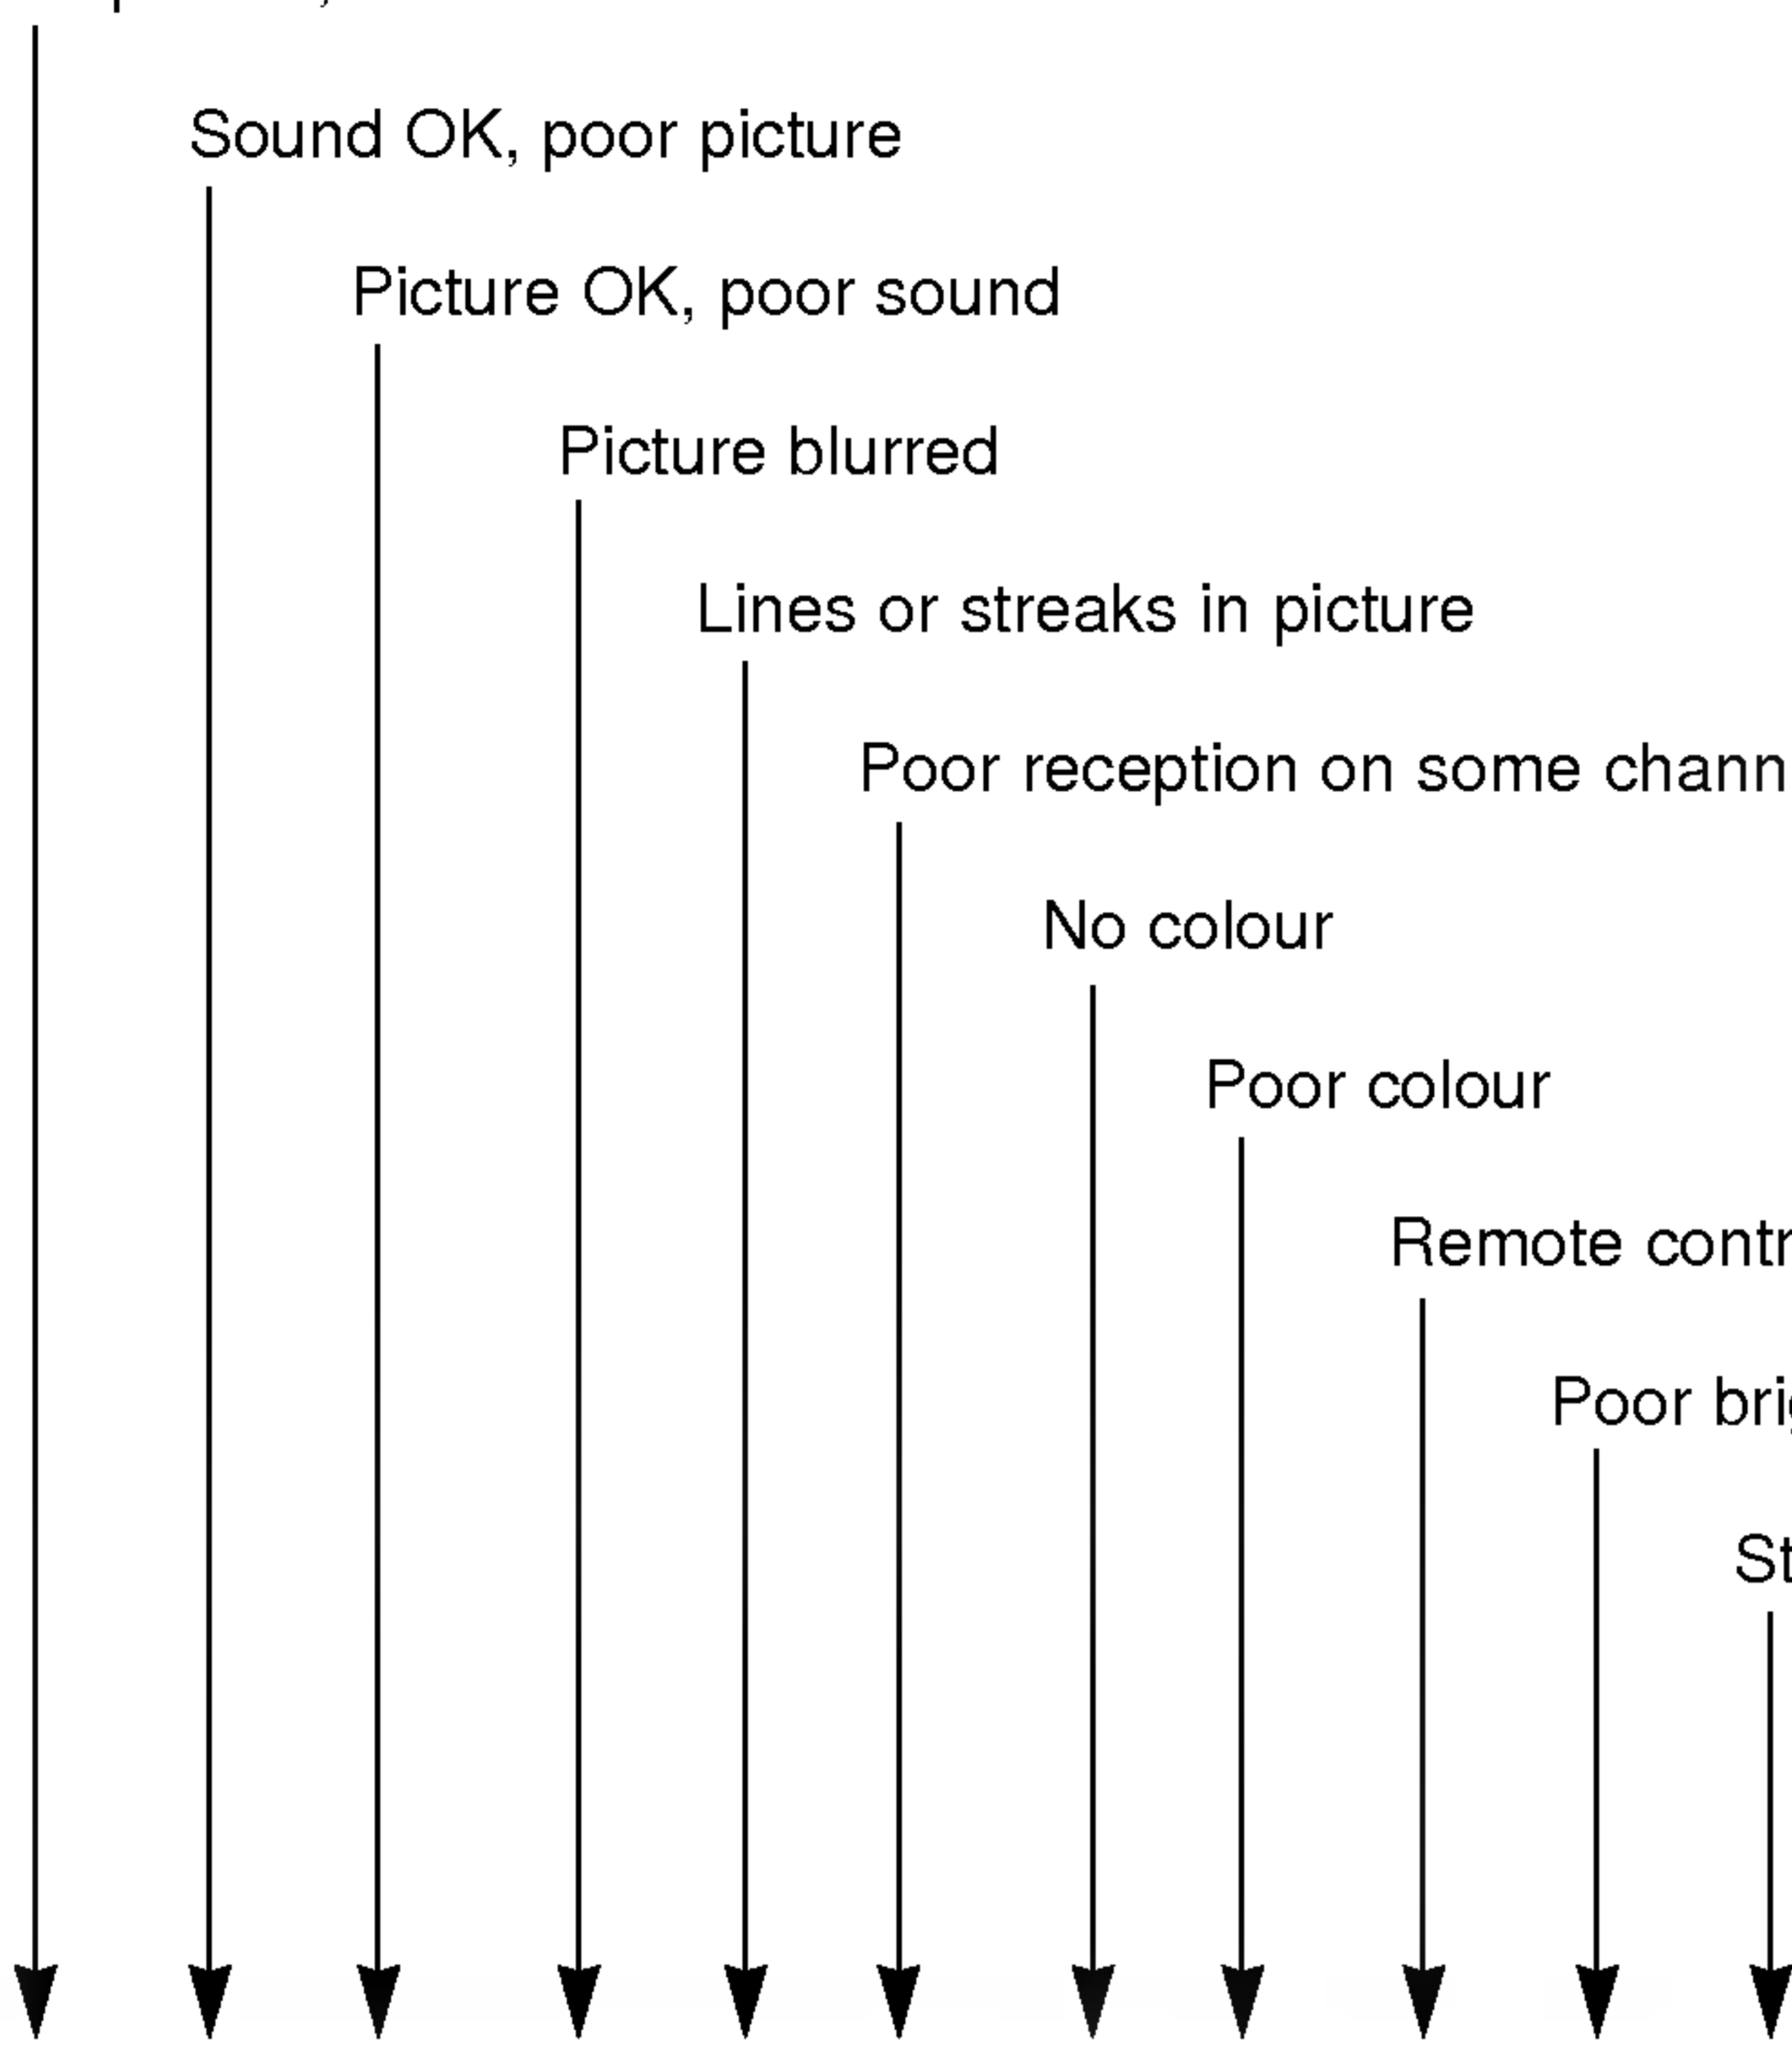

Check these items and try to adjust these

The mains plug-(plugged in and switched on)

Is the TV switched on?

Try another channel (weak signal)

Check aerial (plugged into TV?)

Check aerial (broken lead?)

Check aerial

Check for local interference

Adjust contrast

Adjust brightness

Adjust colour

Adjust volume

Check the batteries in remote control

Check Audio/Video sockets (VCR only)

Contact LG service provider(s)

A change in ambient humidity or temperature may result in an unusual noise at the time of switching off or on of the monitor and does not indicate a fault with the monitor

