

Important Precautions

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential e shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and servicing.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnection device. Ensure that the socket-outlet is easily accessible after installation.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Display.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury :

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- During a lightning storm or when the display is to be left unattended for an extended period of time, unplug it from the wall outlet.



On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the display on a bed, sofa, rug, etc.
- Place the display in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the display near or over a radiator or heat source.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

If possible, use the recommended resolution to obtain the best image quality for your LCD display. If used under any mode except the recommended resolution, some scaled or processed images may appear on the screen. However, this is characteristic of the fixed-resolution LCD panel.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.

On Repacking

 
- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

Connecting the Display

- Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.


Connecting the stand base

1. Align the hooks on the stand base with the matching slots in the base of the monitor.
2. Insert the hooks into slots.

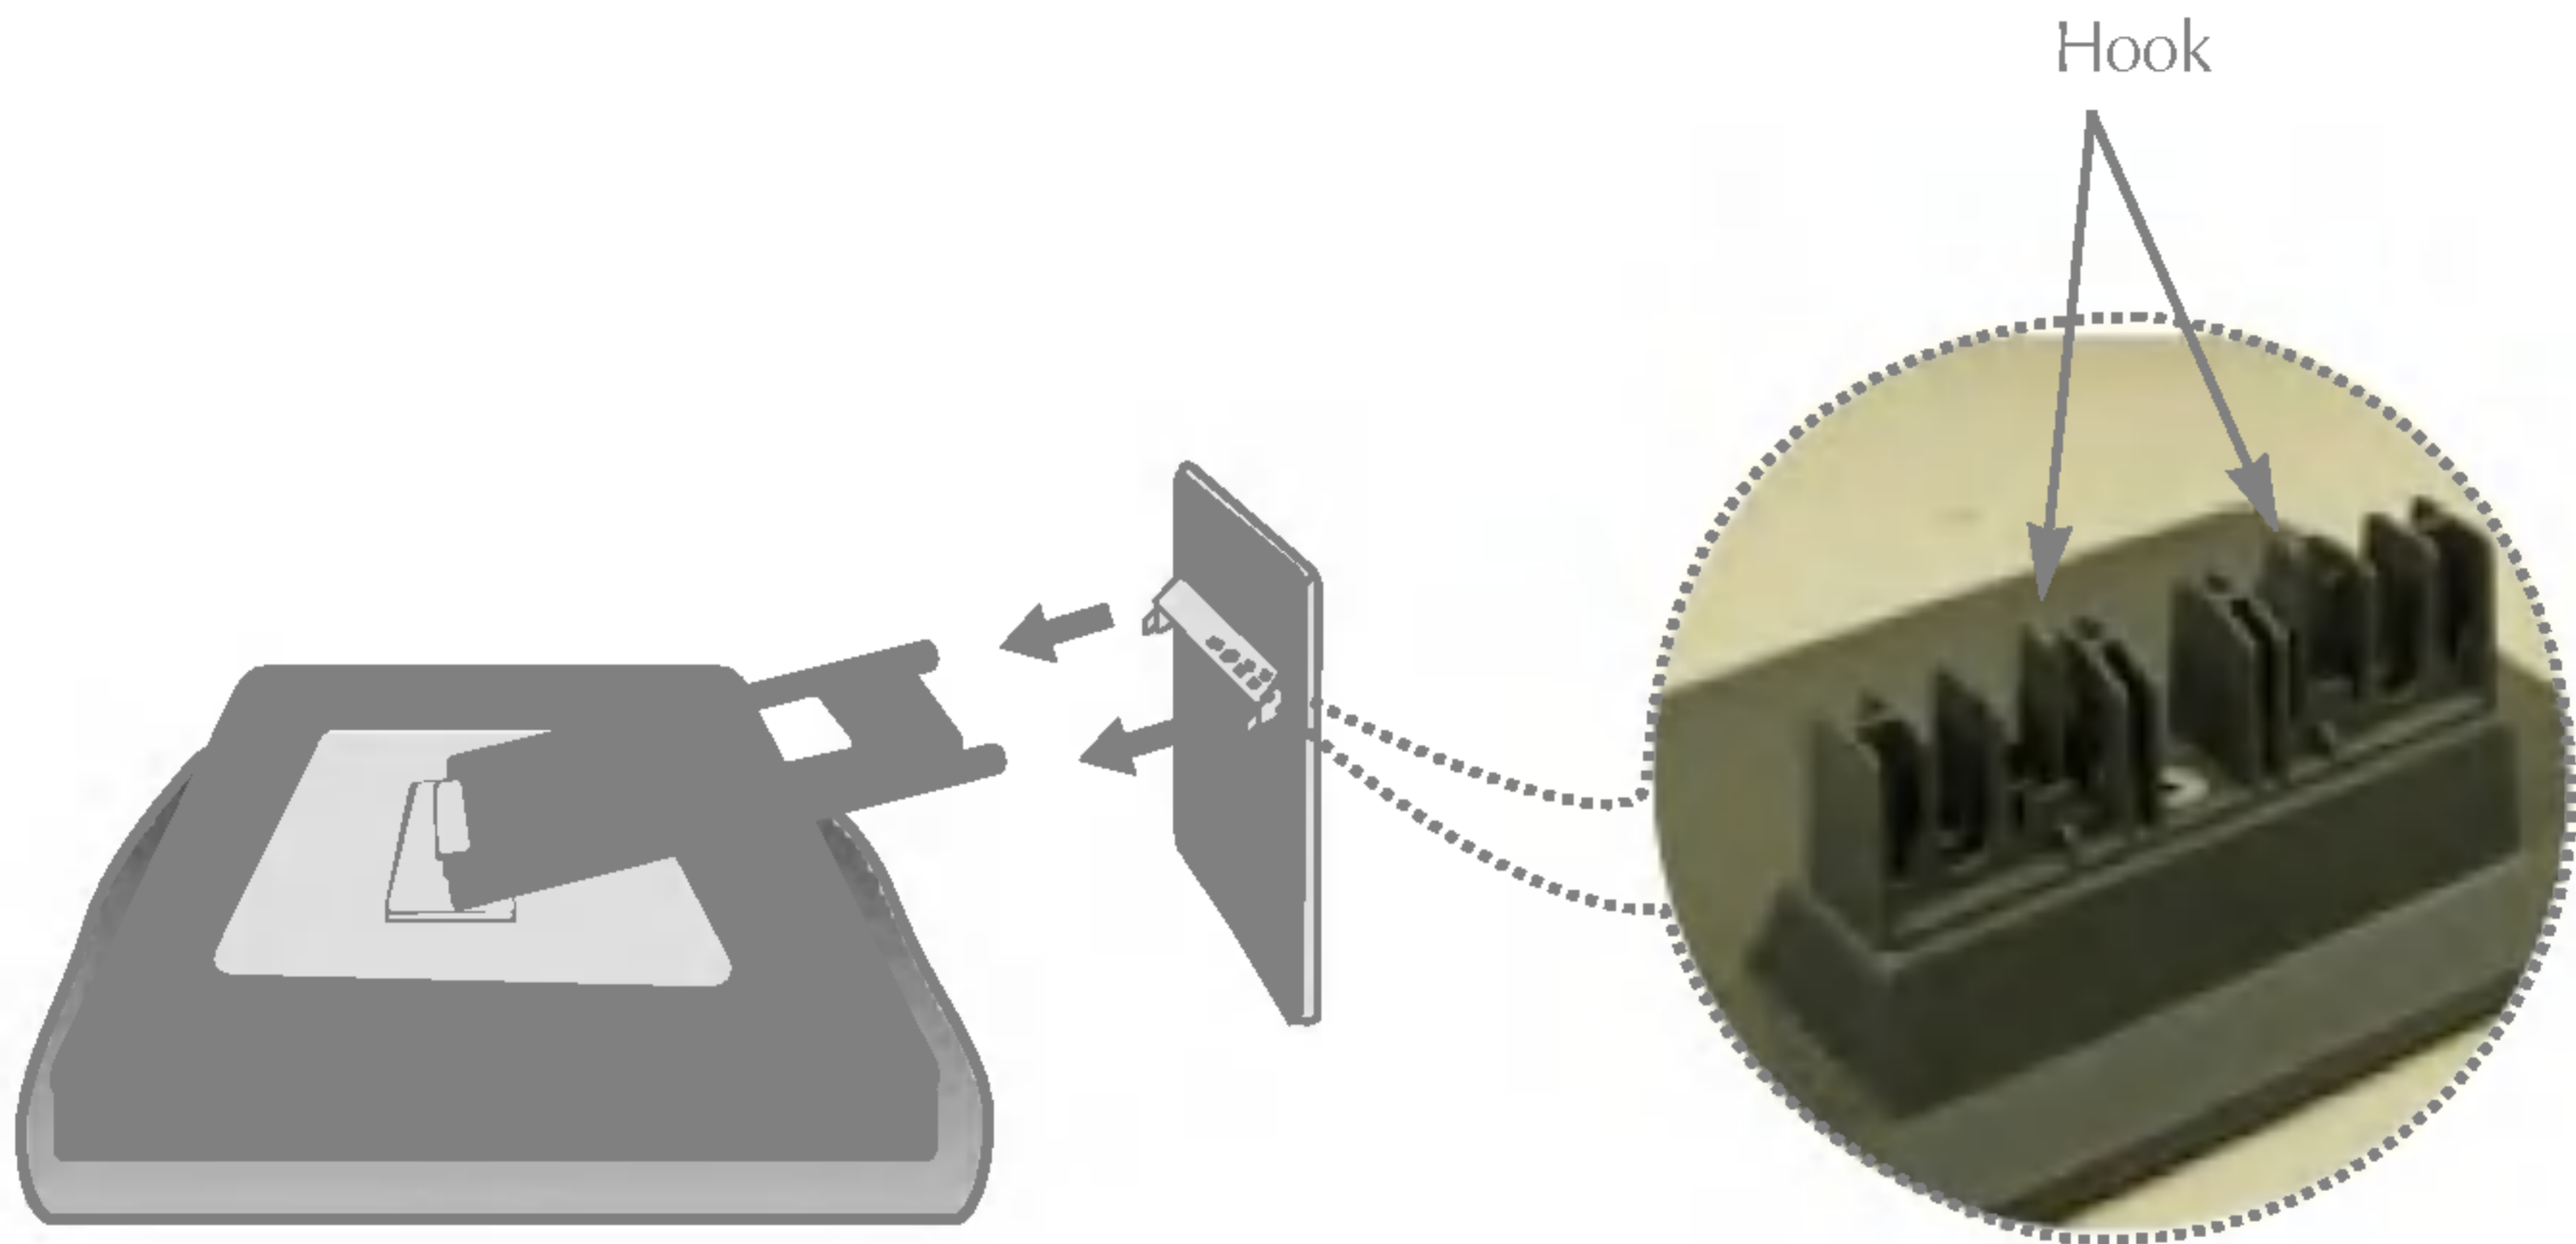

Important

- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.
- **To Remove the Stand Base**
 - Do not force to remove the Stand Base, but remove the screws on the back first for your safety.
 - Once you connect the stand base, try not to disconnect it.
- Do not carry the product upside down holding only the stand base. The product may fall and get damaged or injure your foot.

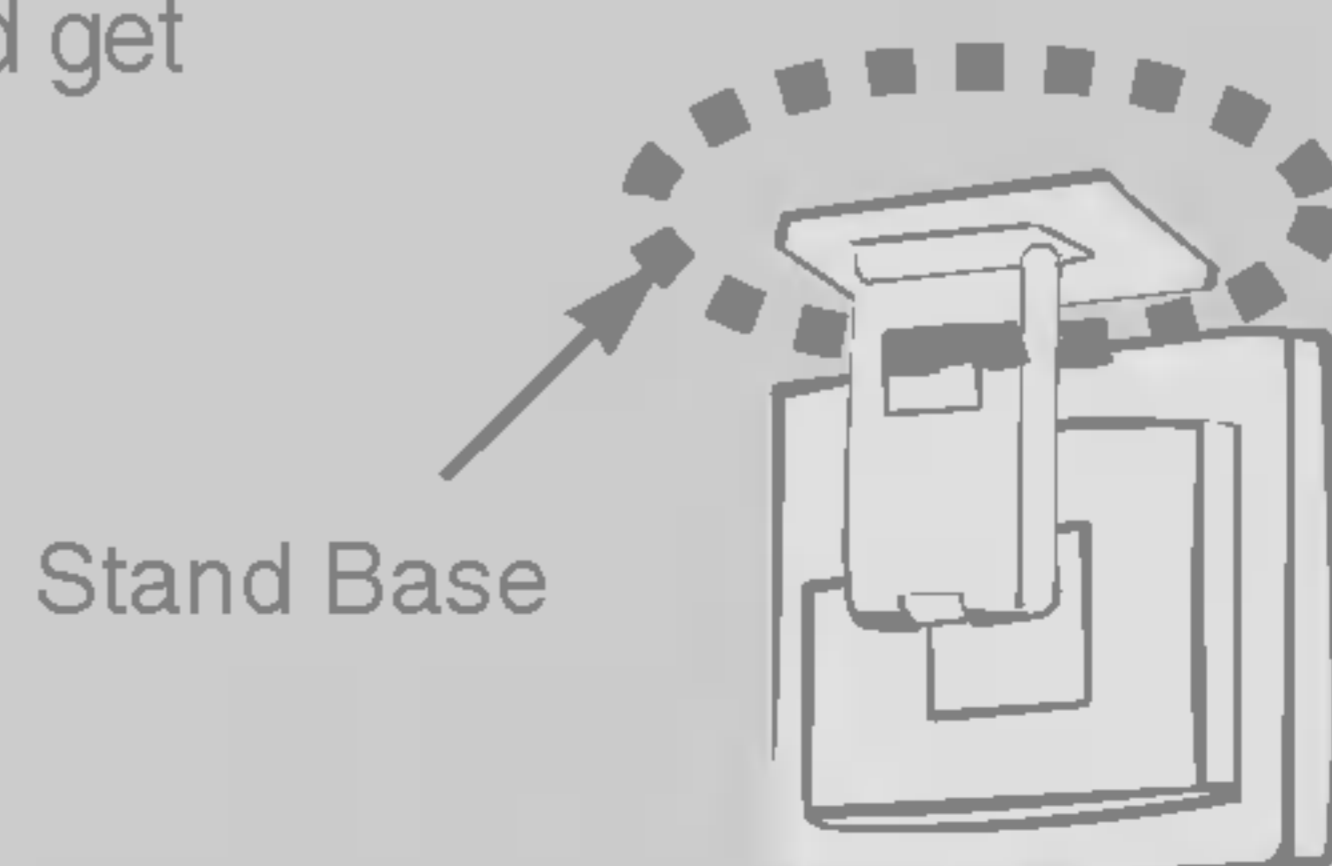 



Connecting the Display

Using the Computer


1. Connect the signal cable. When attached, tighten the thumbscrews to secure the connection.
2. Connect the power cord into a proper power outlet that is easily accessible and close to the display.

NOTE

  - This is a simplified representation of the rear view.
- This rear view represents a general model; your display may differ from the view as shown.

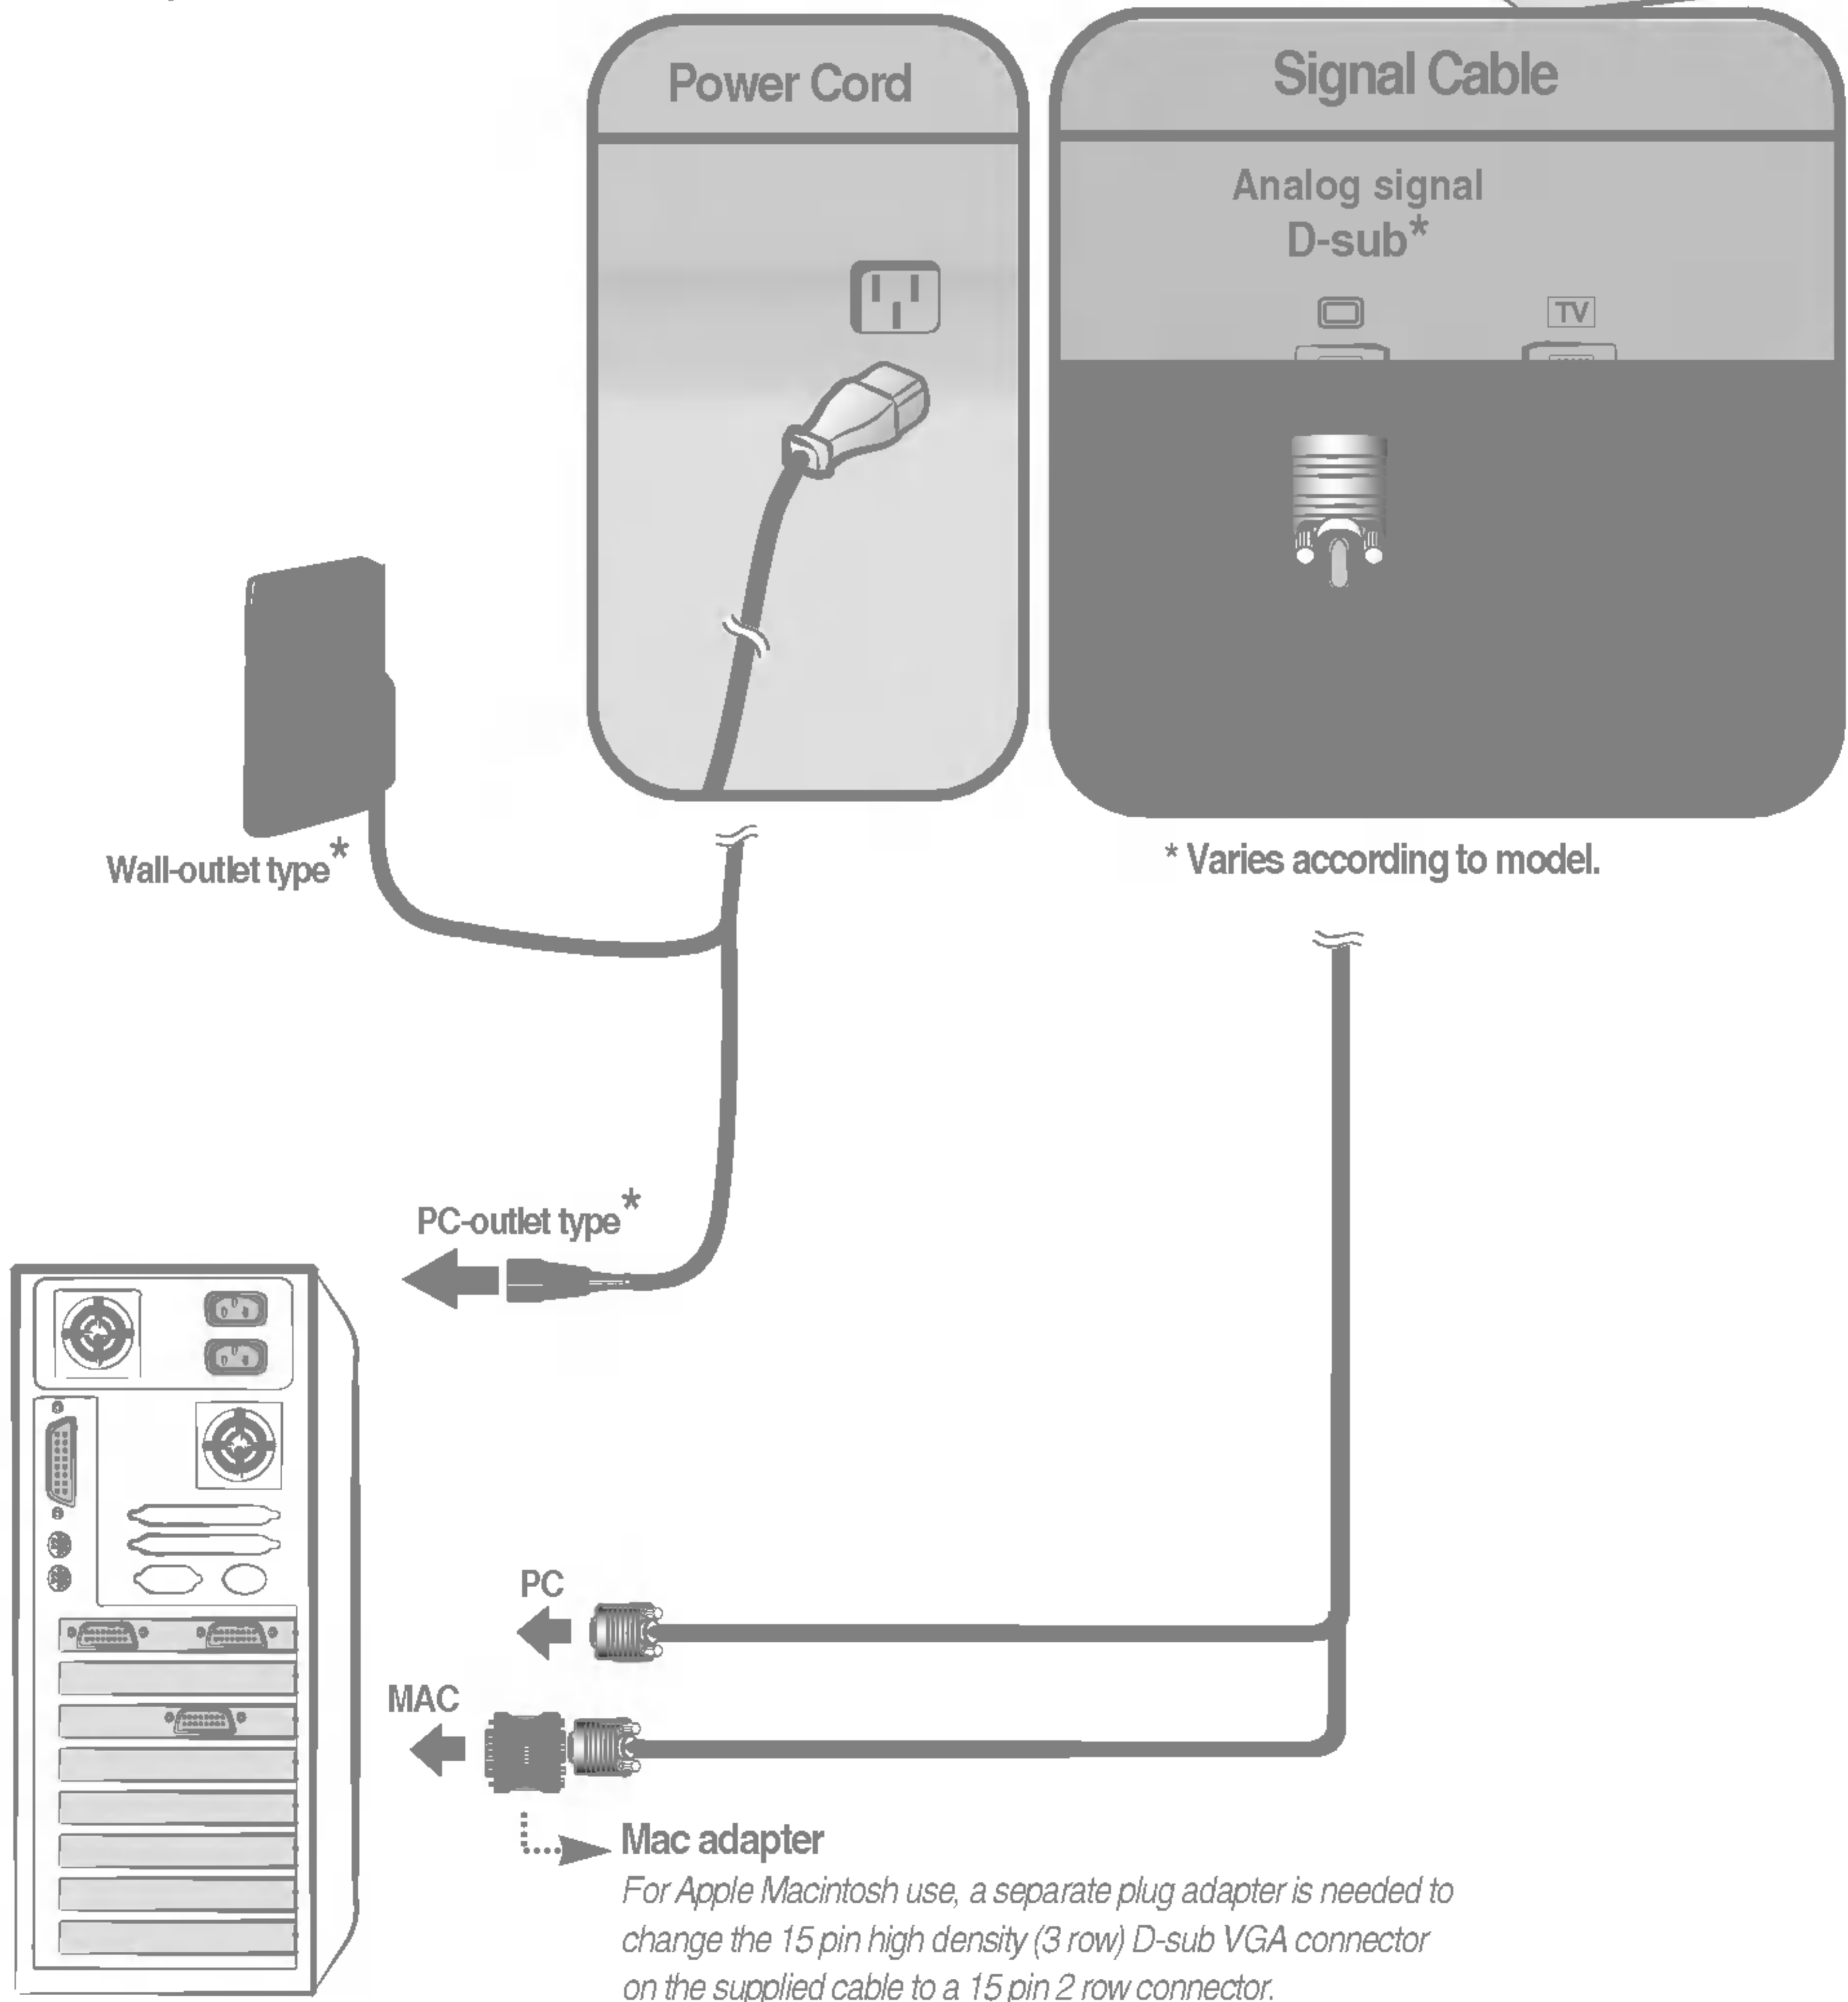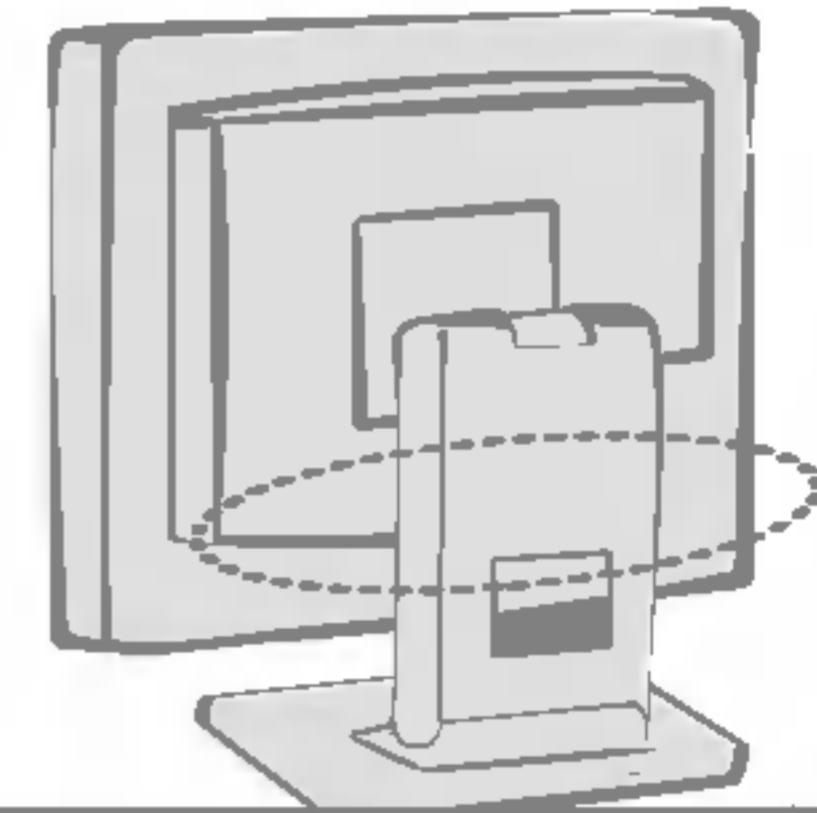

Side Jacks

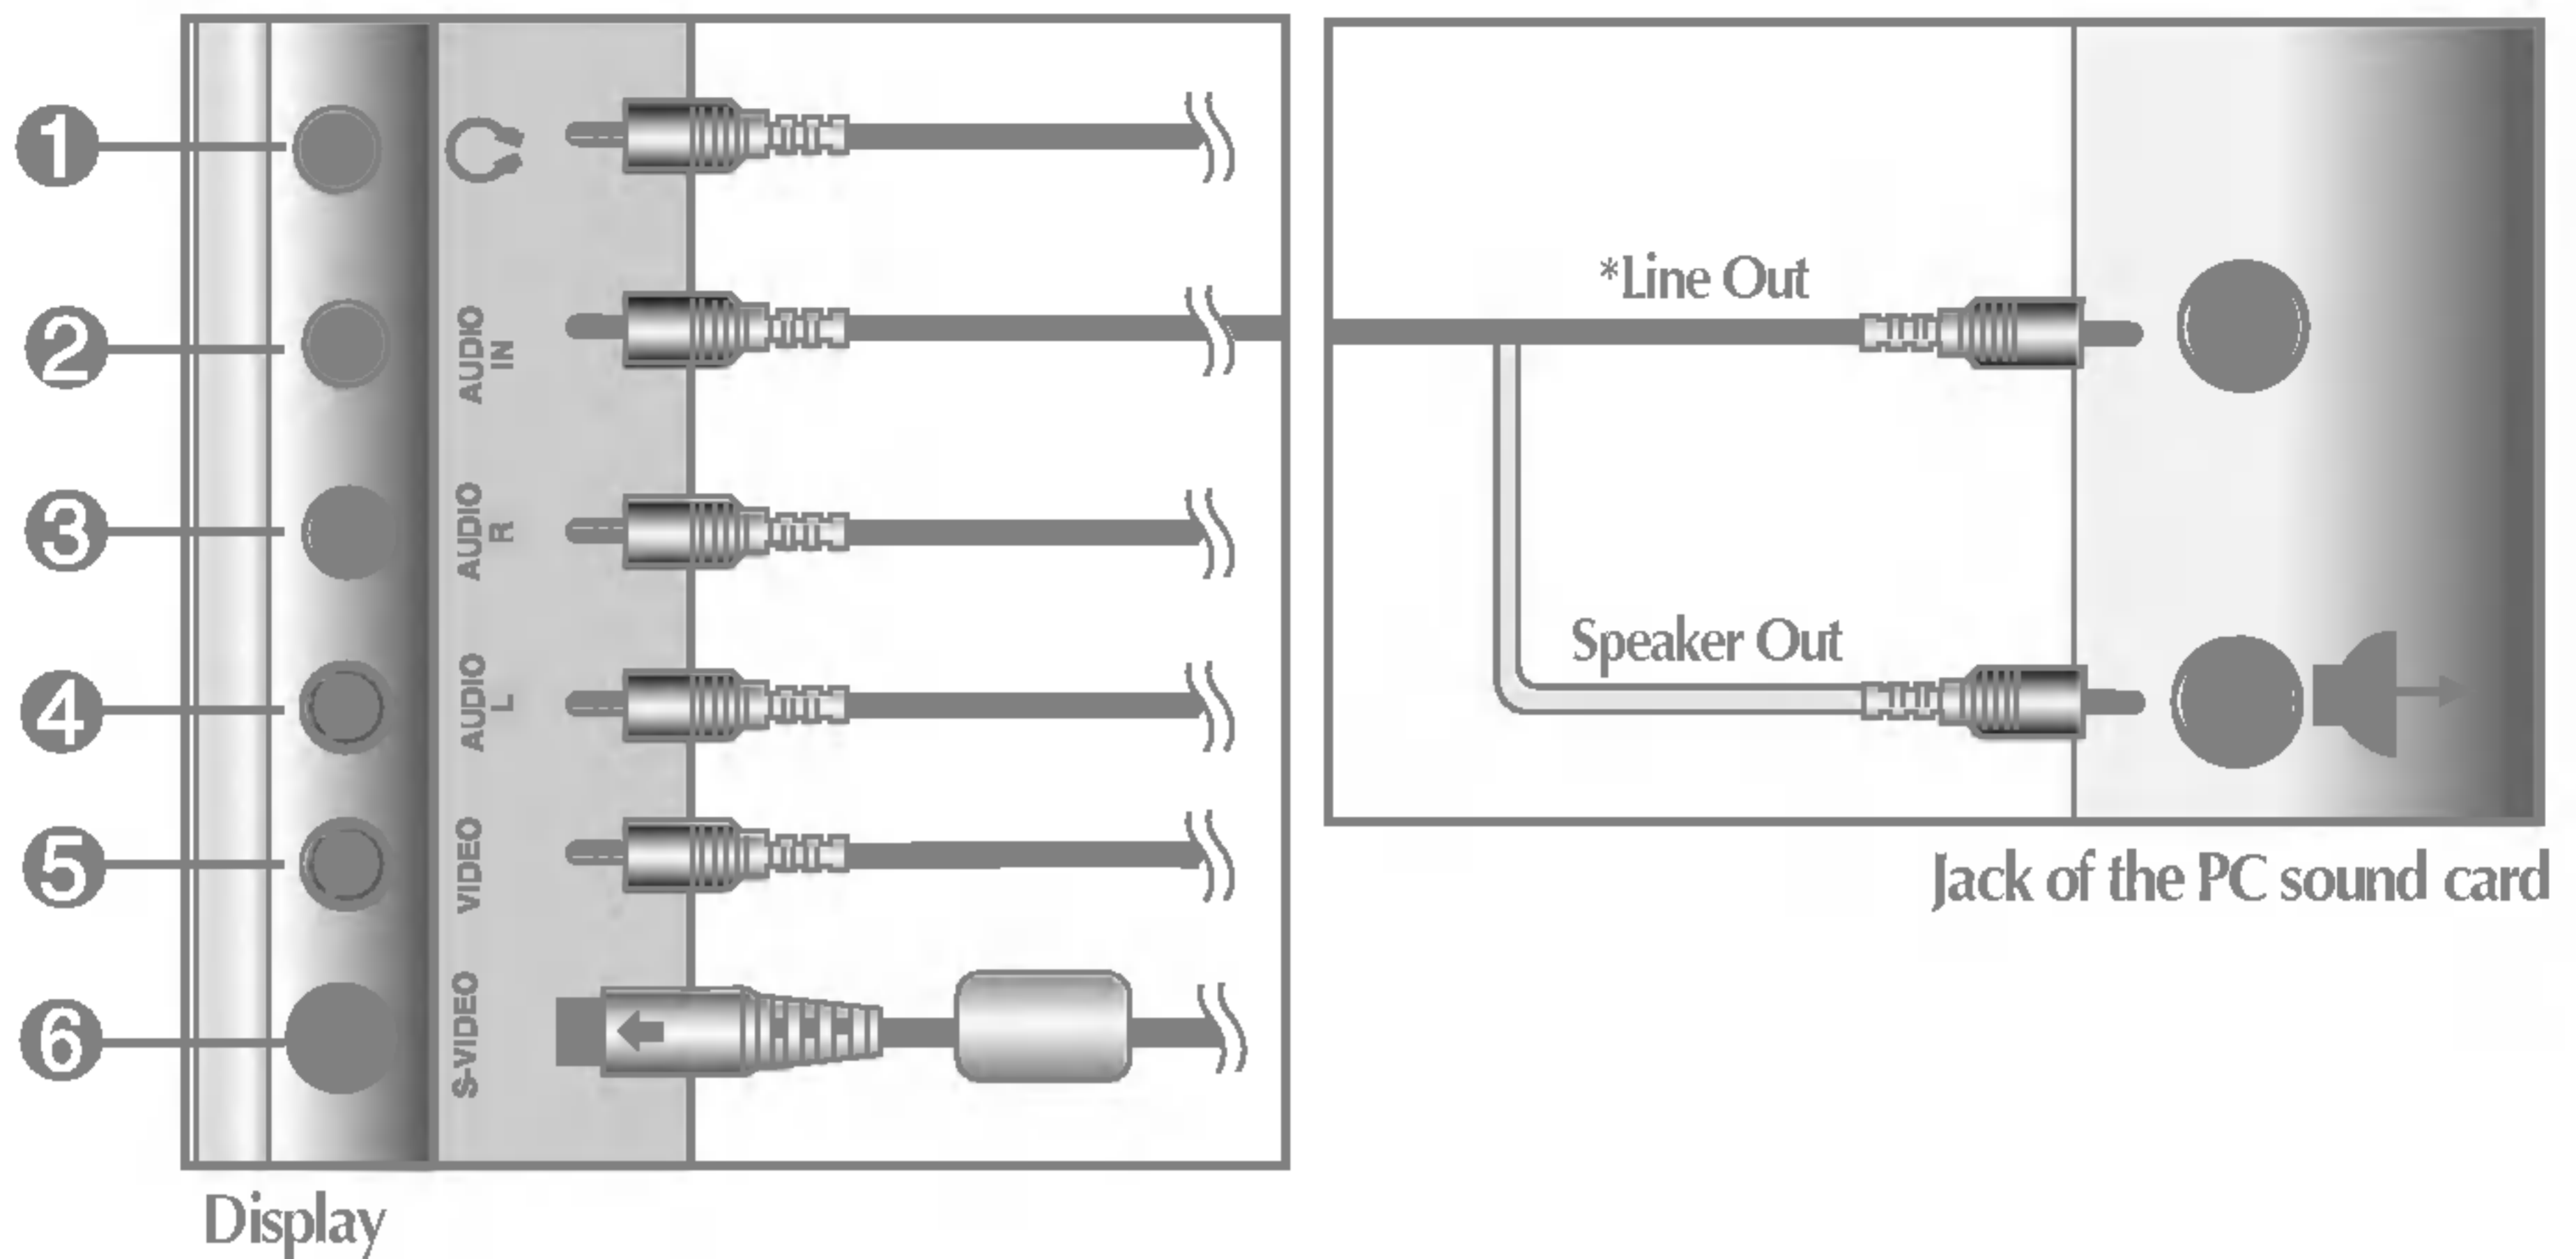 

① Headphone/Earphone Input

Automatically mutes the speaker volume when the headphones are plugged in.

② Audio Input

Connects to the *LINE OUT jack of the PC sound card.

*LINE OUT

A terminal used to connect to the speaker including a built-in amplifier (Amp). Make sure that the connecting terminal of the PC sound card is checked before connecting. If the Audio Out of PC sound card has only Speaker Out, reduce the PC volume.

If the Audio Out of the PC sound card supports both Speaker Out and Line Out, convert to Line Out using the card jumper of the program (Refer to the Sound Card Manual).

③ VCR/DVD Audio(R) Input

Connects to the Audio(R) jack of the VCR/DVD.

④ VCR/DVD Audio(L) Input

Connects to the Audio(L) jack of the VCR/DVD.

 
⑤ VCR/DVD Video Input

Connects to the Video jack of the VCR/DVD.

⑥ VCR/DVD S-Video Input

Connects to the S-Video jack of the VCR/DVD.

Front Panel Controls

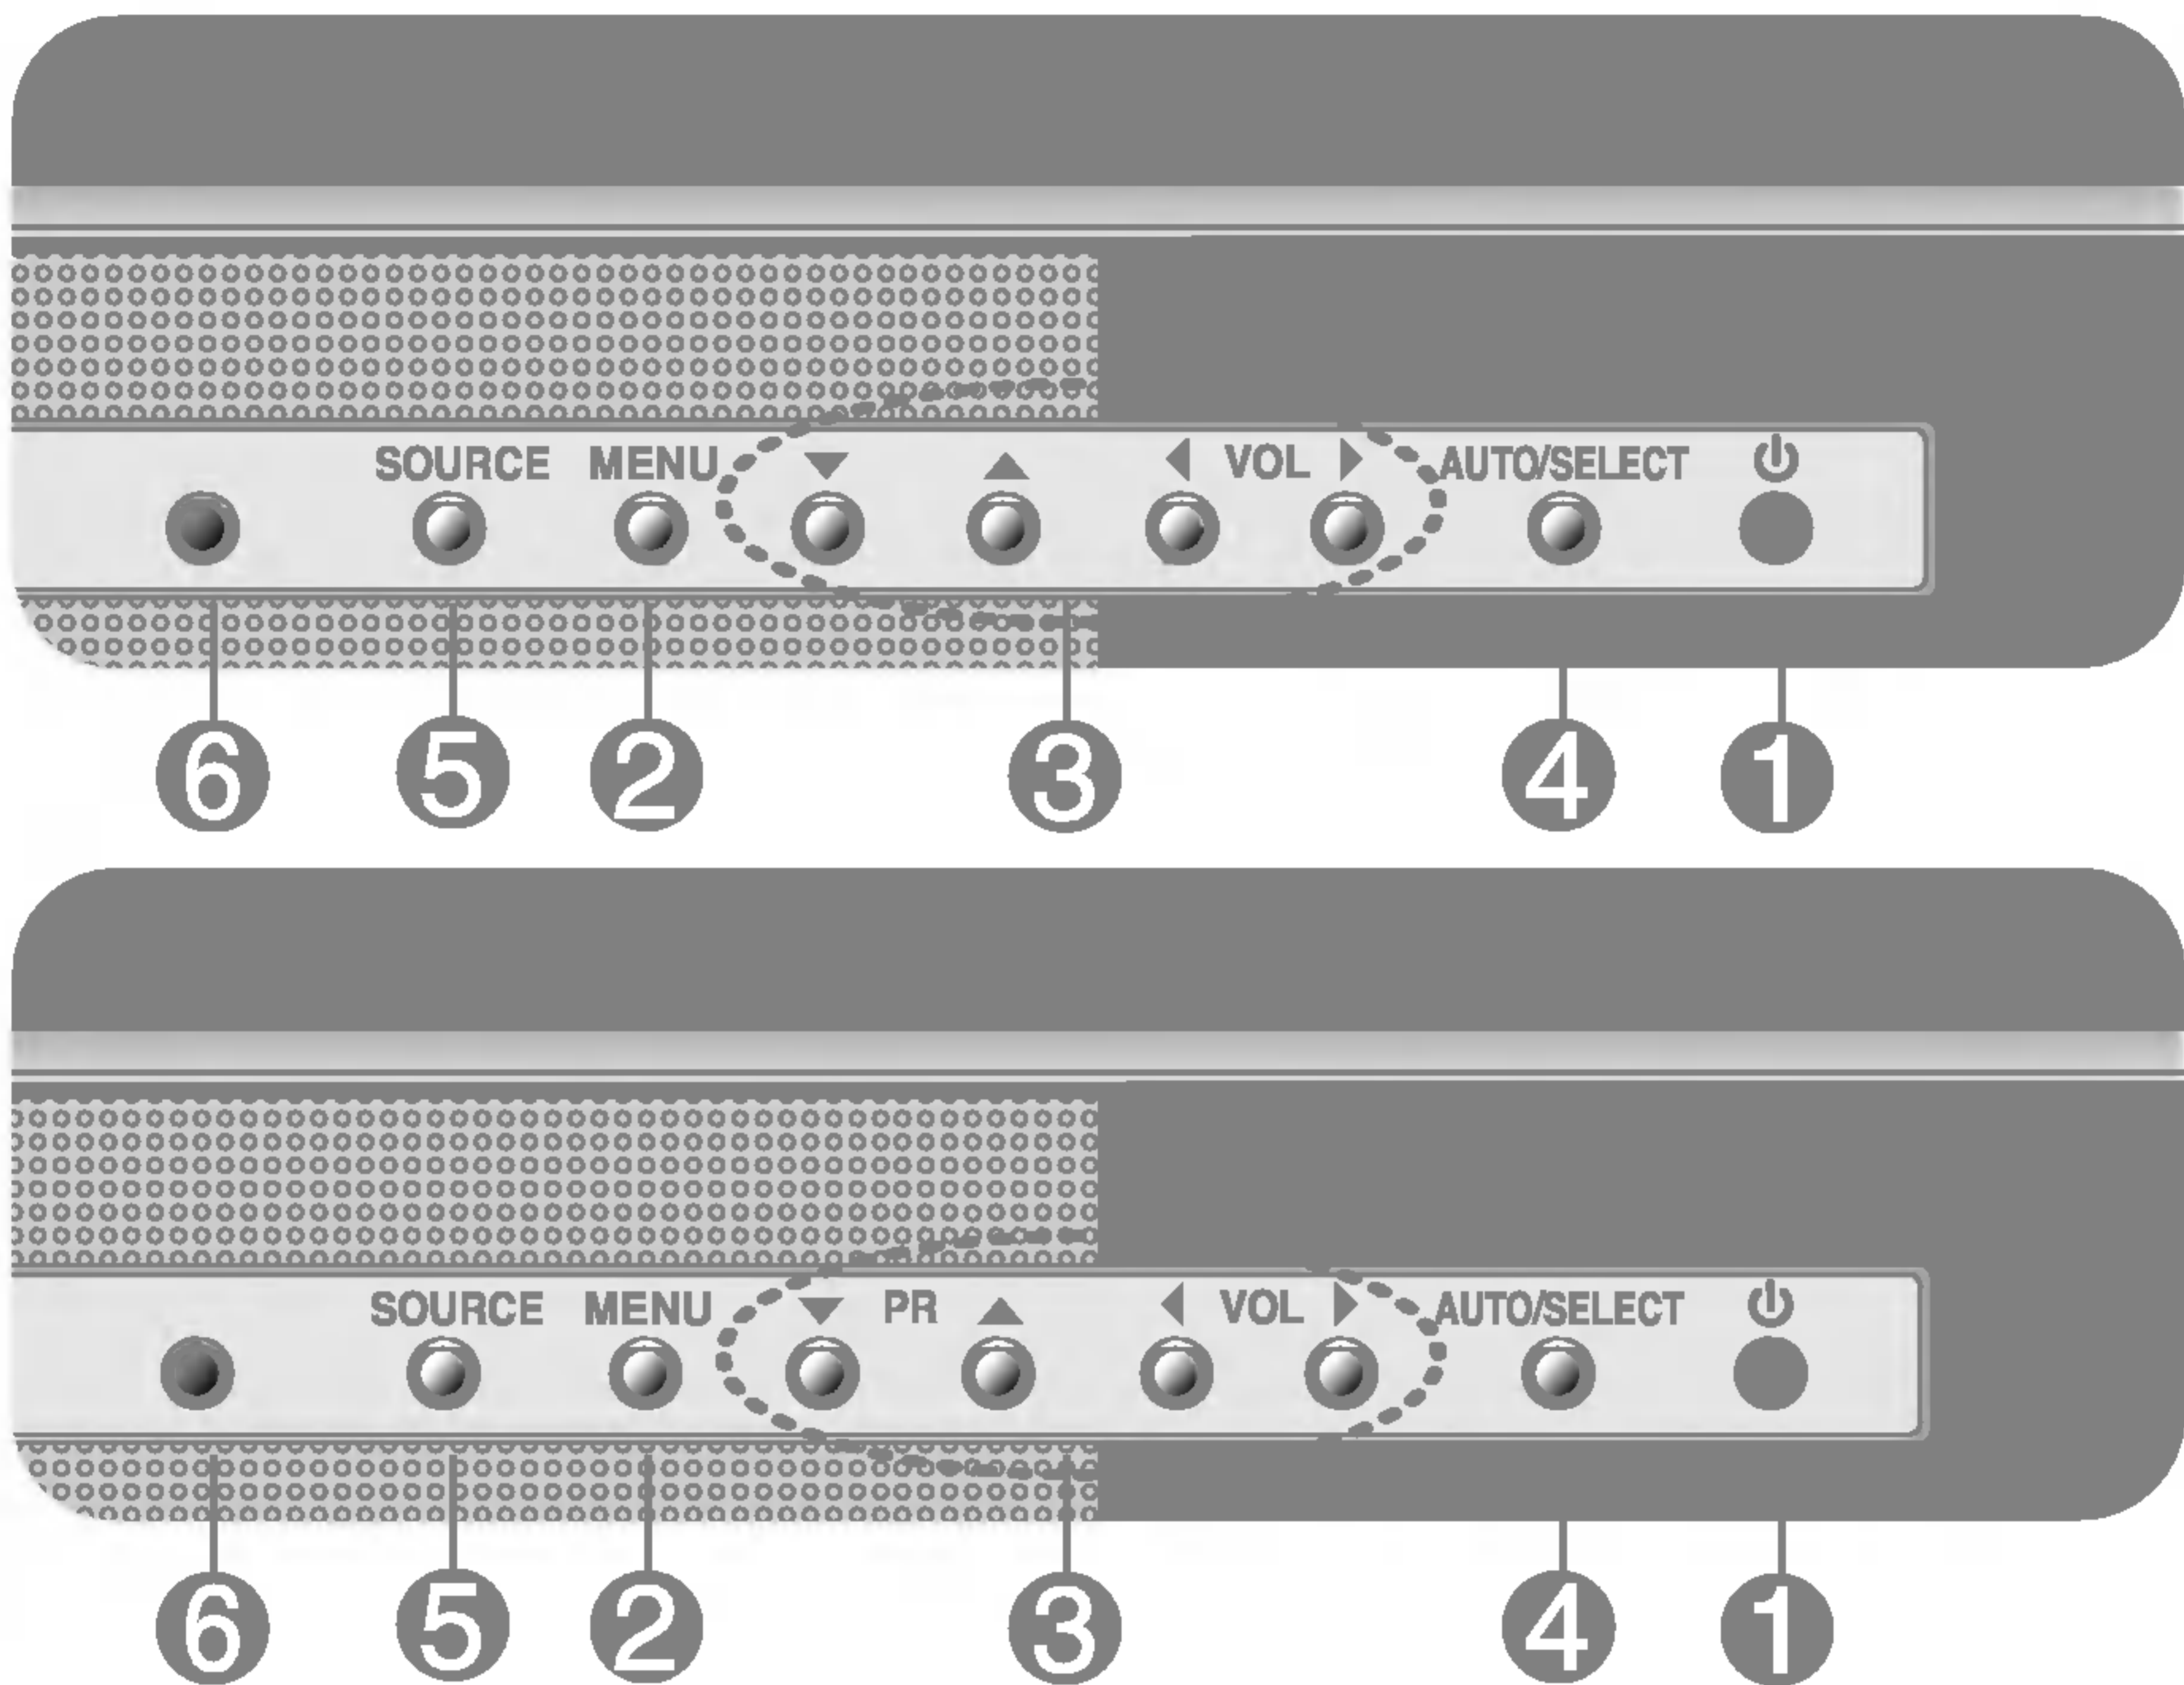

1	Power Button	Use this button to turn the display on or off.
	Power (DPMS) Indicator	This Indicator lights up green when the display operates normally. If the display is in DPM (Energy Saving) mode, this indicator color changes to amber.
2	MENU Button	Use this button to enter or exit the On Screen Display.
3	▼▲◀▶ Buttons	Use these buttons to choose or adjust items in the On Screen Display.
4	AUTO/SELECT Button	Use this button to enter a selection in the On Screen Display.
6	Remote Control Sensor	



3



Use these buttons to go up and down the channel when the TV source is available.



VOLUME: ◀ ▶

Use these buttons to decrease or increase the volume level.

4

AUTO adjustment function

When adjusting your display settings, always press the **AUTO/SELECT** button before entering the On Screen Display(OSD). This will automatically adjust your display image to the ideal settings for the current screen resolution size (display mode).

The best display mode is **1024x768**.

5

Source Selection:

SOURCE → ▼▲ → **AUTO/SELECT**


Use this button to select an input signal.

- PC (DSUB) : 15-pin D-sub analog signal
- V1 (CVBS) : Composite video
- V2 (SVHS) : S video
- TV: TV

Screen Adjustment

Making adjustments to the image size, position and operating parameters of the display is quick and easy with the On Screen Display Control system. A short example is given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

 To make adjustments in the On Screen Display, follow these steps:

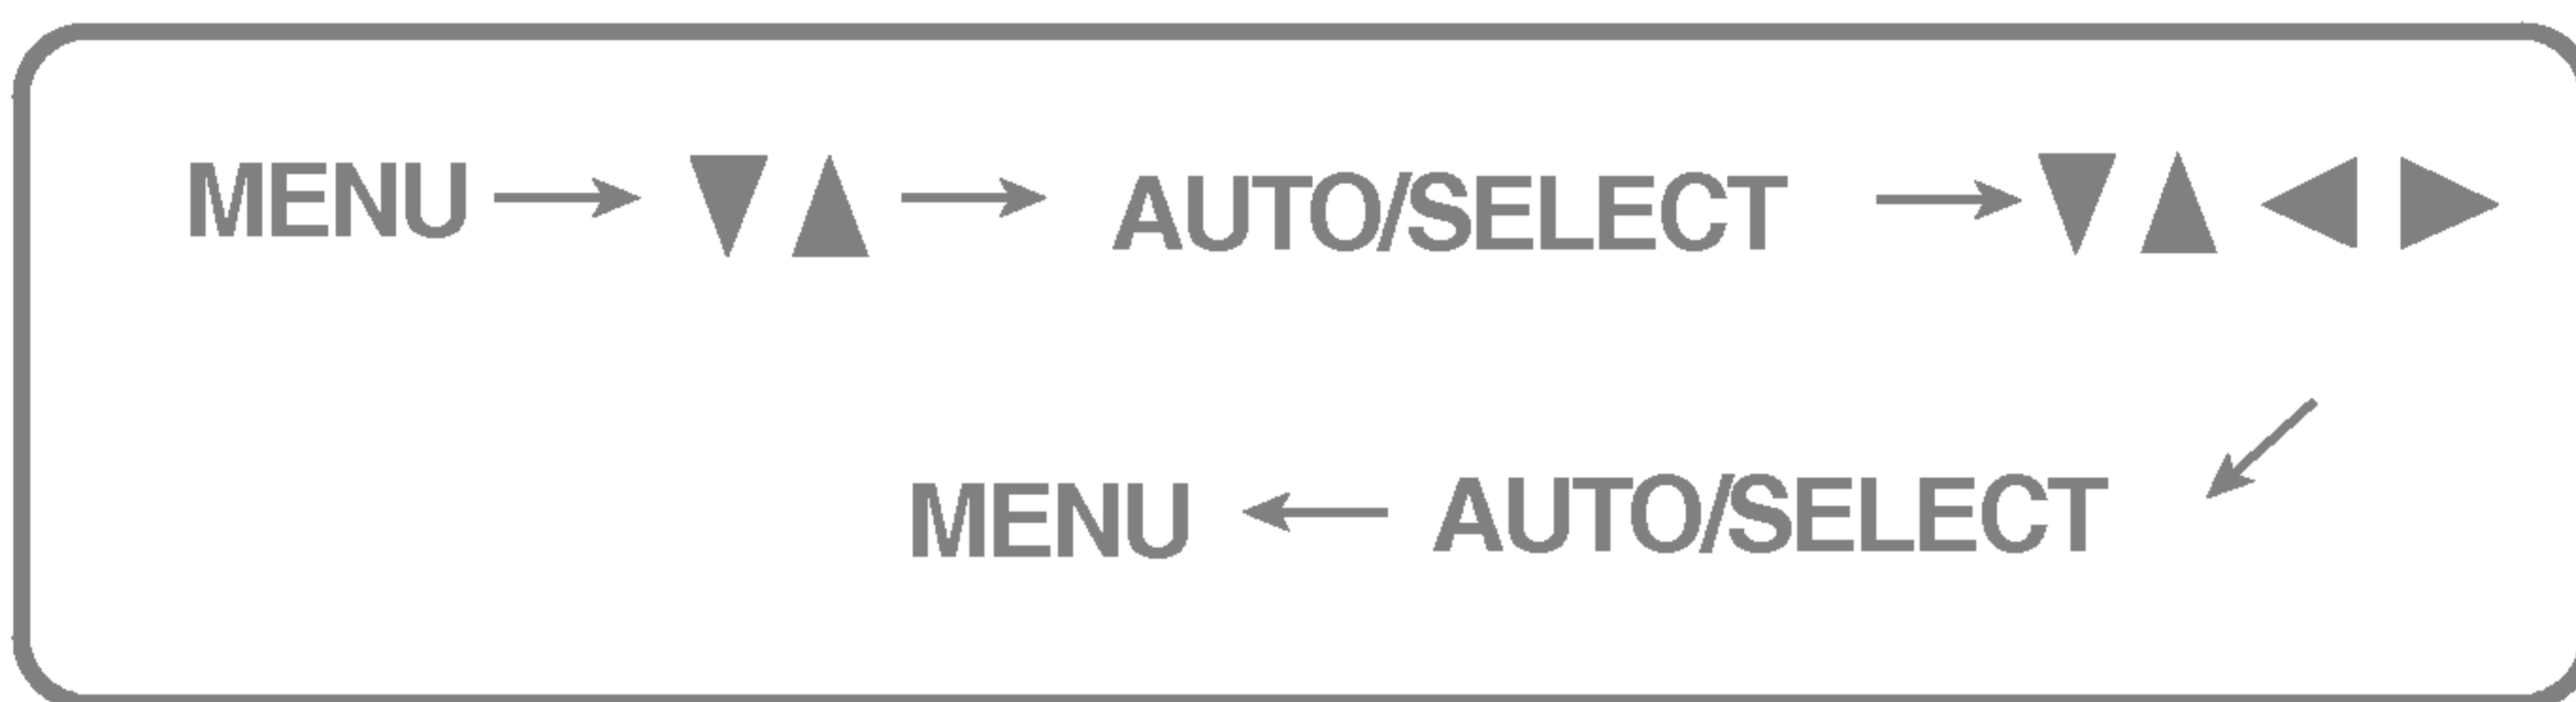

- 1** Press the **MENU Button**, then the main menu of the OSD appears.
- 2** To access a control, use the **▼** or **▲** **Buttons**. When the icon you want becomes highlighted, press the **AUTO/SELECT Button**.
- 3** Use the **▼▲◀▶** **Buttons** to adjust the item to the desired level.
- 4** Accept the changes by pressing the **AUTO/SELECT Button**.
- 5** Exit the OSD by Pressing the **MENU Button**.

On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

Using the computer				
BRIGHTNESS CONTRAST	BRIGHTNESS		●	To adjust the brightness and contrast of the screen
	CONTRAST		●	
COLOR	PRESET	9300K	●	To customize the color of the screen
		6500K	●	
	R/G/B(User Color)		●	
POSITION	V POSITION		●	To adjust the position of the screen
	H POSITION		●	
TRACKING	AUTO		●	To improve the clarity and stability of the screen
	CLOCK		●	
	PHASE		●	
AUDIO	VOLUME		●	To adjust the audio function
	MUTE		●	
	BASS		●	
	TREBLE		●	
	BALANCE		●	
	AVL		●	
SETUP	LANGUAGE		●	To customize the screen status for a user's operating environment
	OSD POSITION		●	
PIP	PIP ON/OFF		●	To adjust the PIP of the screen
	PIP SOURCE		●	
	PIP SIZE		●	
	PIP SOUND		●	
	PIP POSITION		●	
	TRANSPARENCY		●	
● : Adjustable				



Channel VCR/DVD/TV				
Main menu	Sub menu	V	T	Reference
STATION	AUTO PR.		●	To select the TV channel settings and adjust the channel quality.
	MANUAL PR.		●	
	PR. EDIT		●	
VIDEO	CONTRAST	●	●	To improve the clarity and stability of the screen
	BRIGHTNESS	●	●	
	SHARPNESS	●	●	
	COLOR	●	●	
	RESET*	●	●	
AUDIO	VOLUME	●	●	To adjust the audio function
	MUTE	●	●	
	BASS	●	●	
	TREBLE	●	●	
	BALANCE	●	●	
	AVL	●	●	
SETUP	LANGUAGE	●	●	To customize the screen status for a user's operating environment
	OSD POSITION	●	●	

● : Adjustable V : VCR/DVD T : TV

NOTE

- The order of icons may differ depending on the model (A9~A16).
- * This function is available for designated models only.

 


On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.

To adjust the screen when using the computer

To adjust the brightness and contrast of the screen

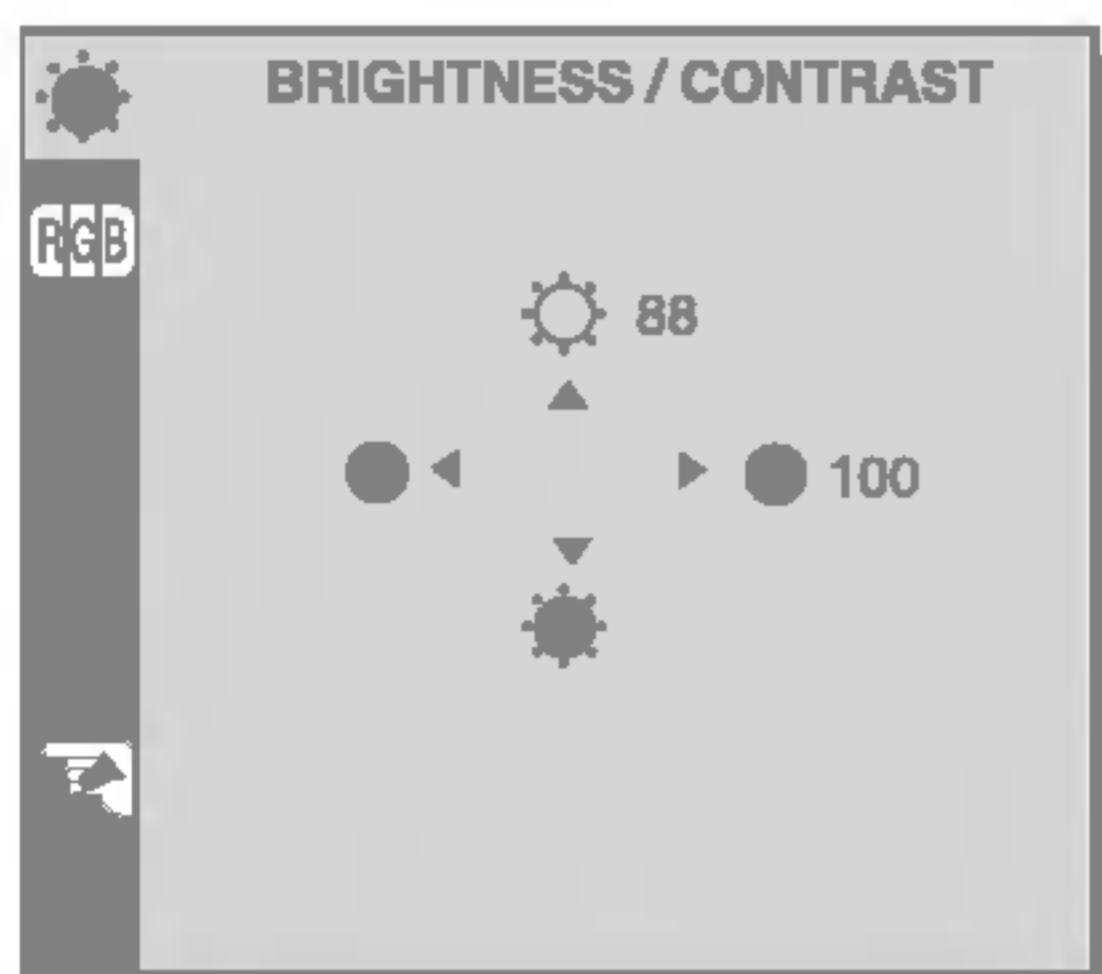

BRIGHTNESS

 
To adjust the brightness of the screen.



CONTRAST

To adjust the contrast of the screen.

To adjust the color of the screen

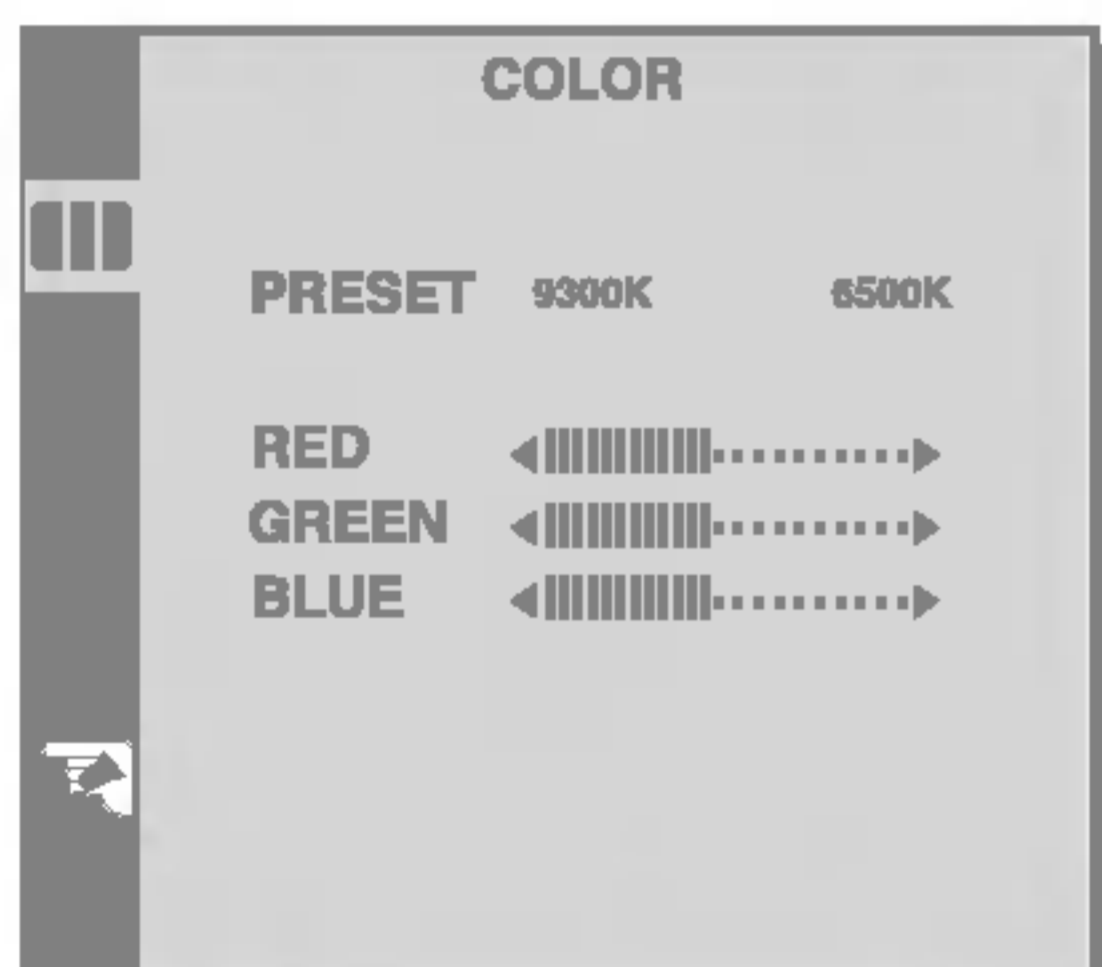

PRESET 9300K/6500K

Select the screen color.

- 9300K: Slightly bluish white.
- 6500K: Slightly reddish white.

RED GREEN BLUE

Set your own color levels.

To adjust the position of the screen



Vertical Position

 
To move image up and down.



Horizontal Position

To move image left and right.



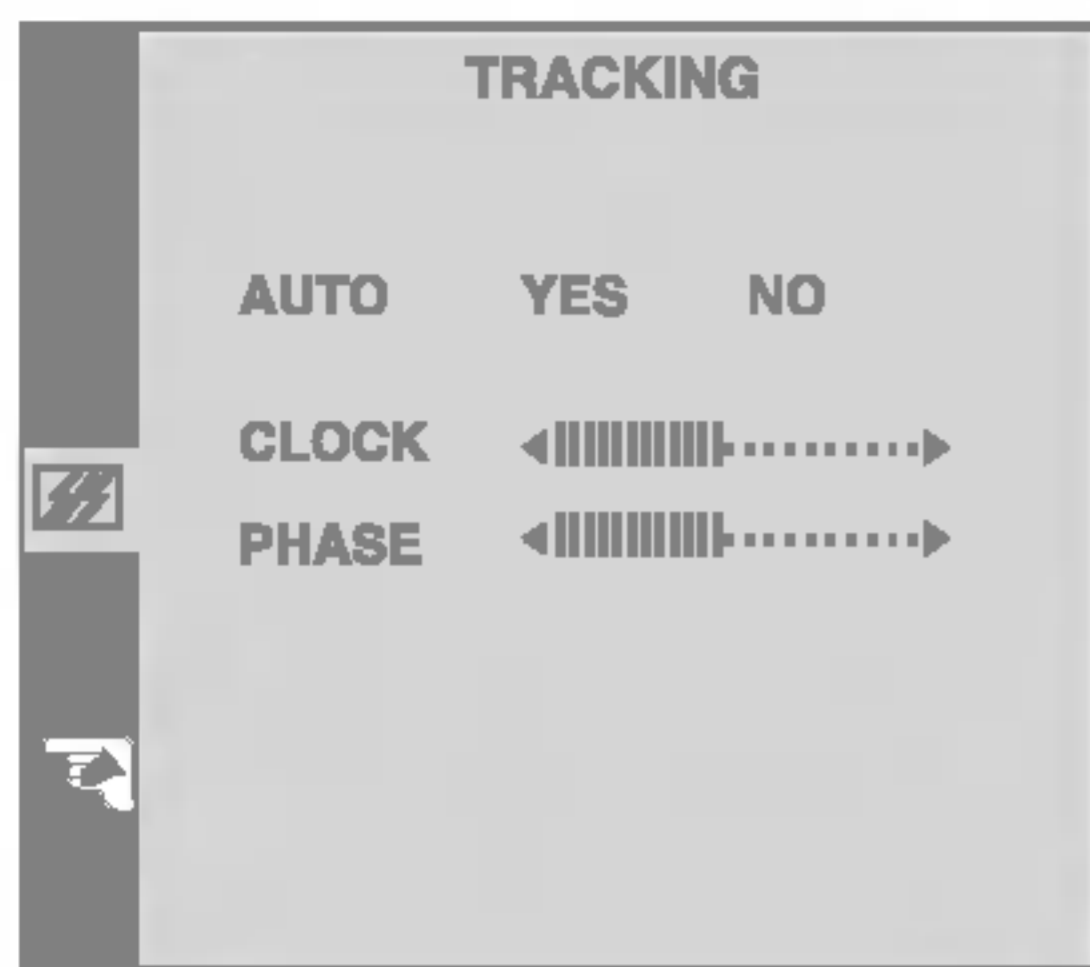

AUTO

 
This function is suitable for analog signal input only. This button is for the automatic adjustment of the screen position, clock and phase.

CLOCK

To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.

PHASE

To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.

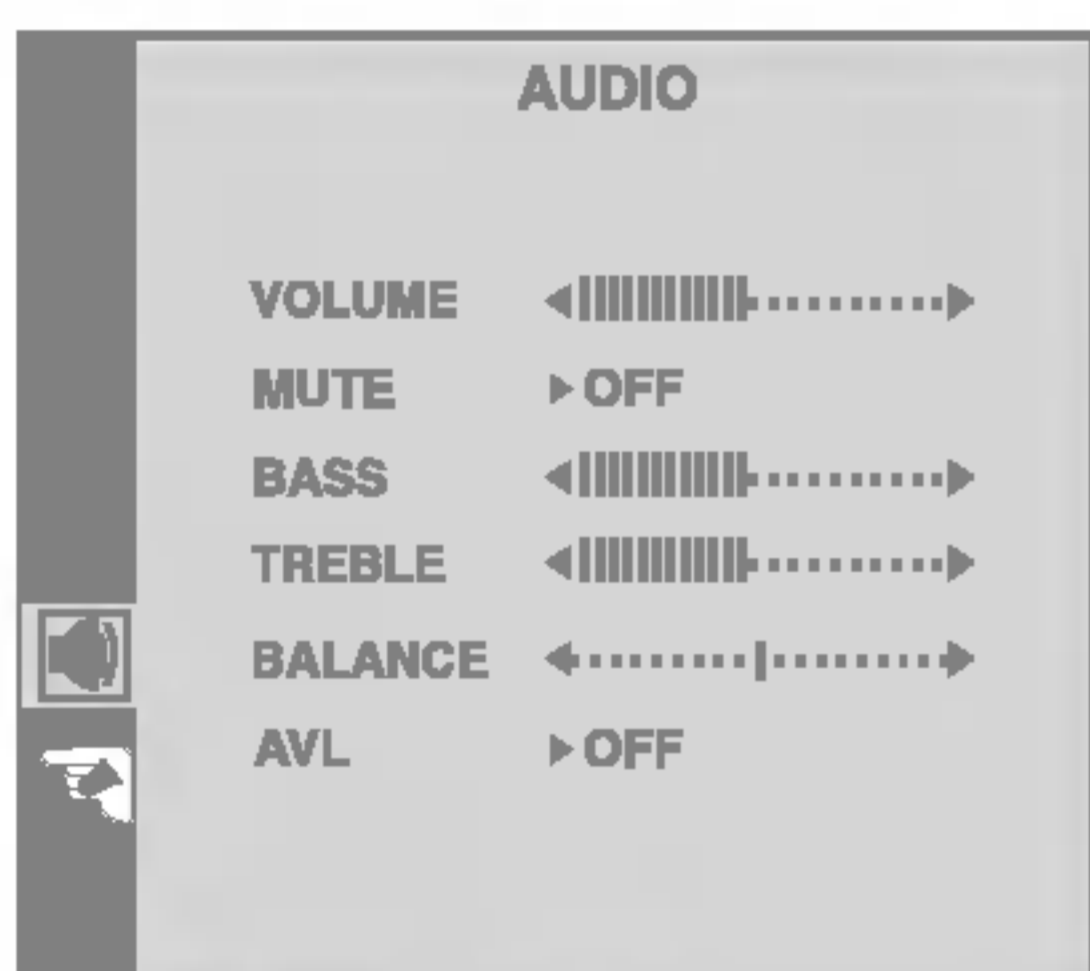

VOLUME

To decrease or increase volume level.

MUTE

Used to select mute on (means sound off) and mute off (means sound on).

BASS

To raises or lowers Bass level.

TREBLE

 
To raises or lowers Treble level.

BALANCE

To adjust the balance level.

AVL

To adjust uneven sound volumes across all channels or signals automatically to the most appropriate level. To use this feature, select ON.

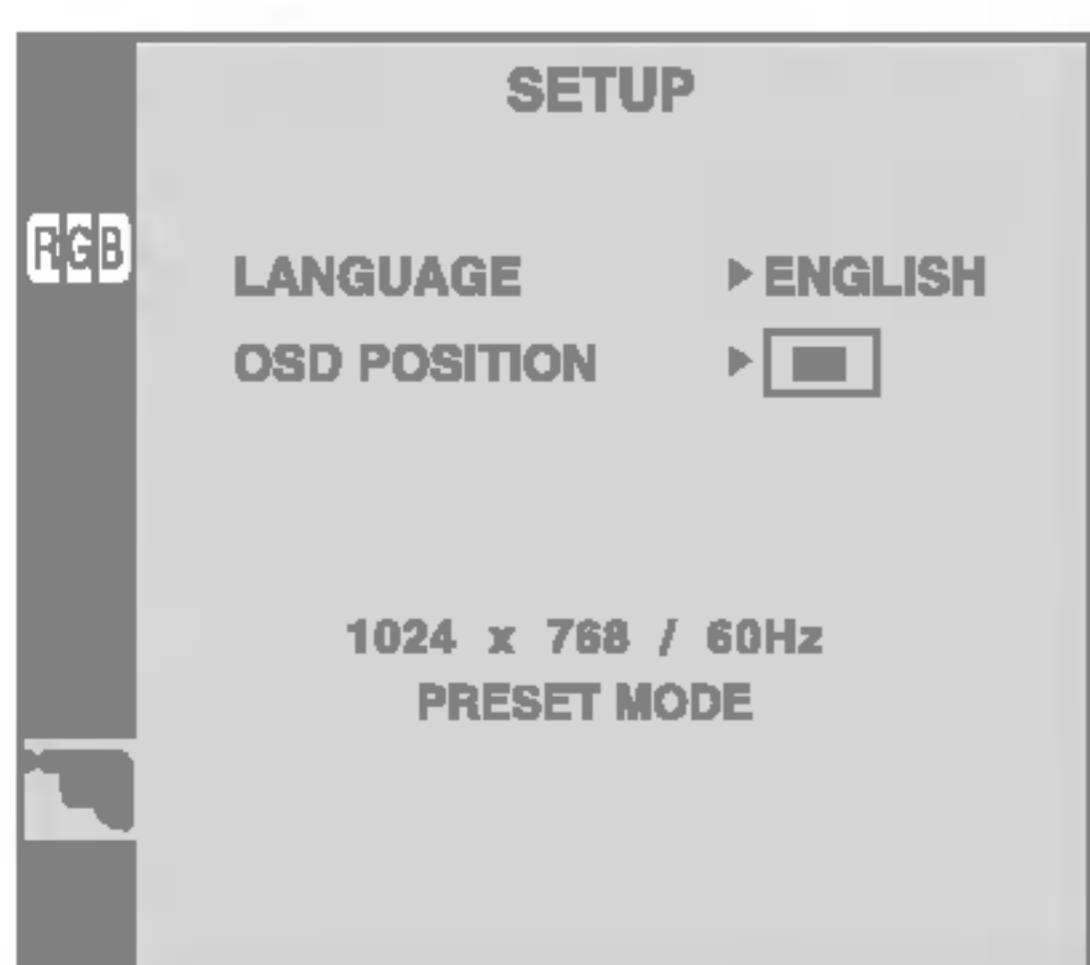



LANGUAGE

To choose the language in which the control names are displayed.

OSD POSITION

  To adjust position of the OSD window on the screen.



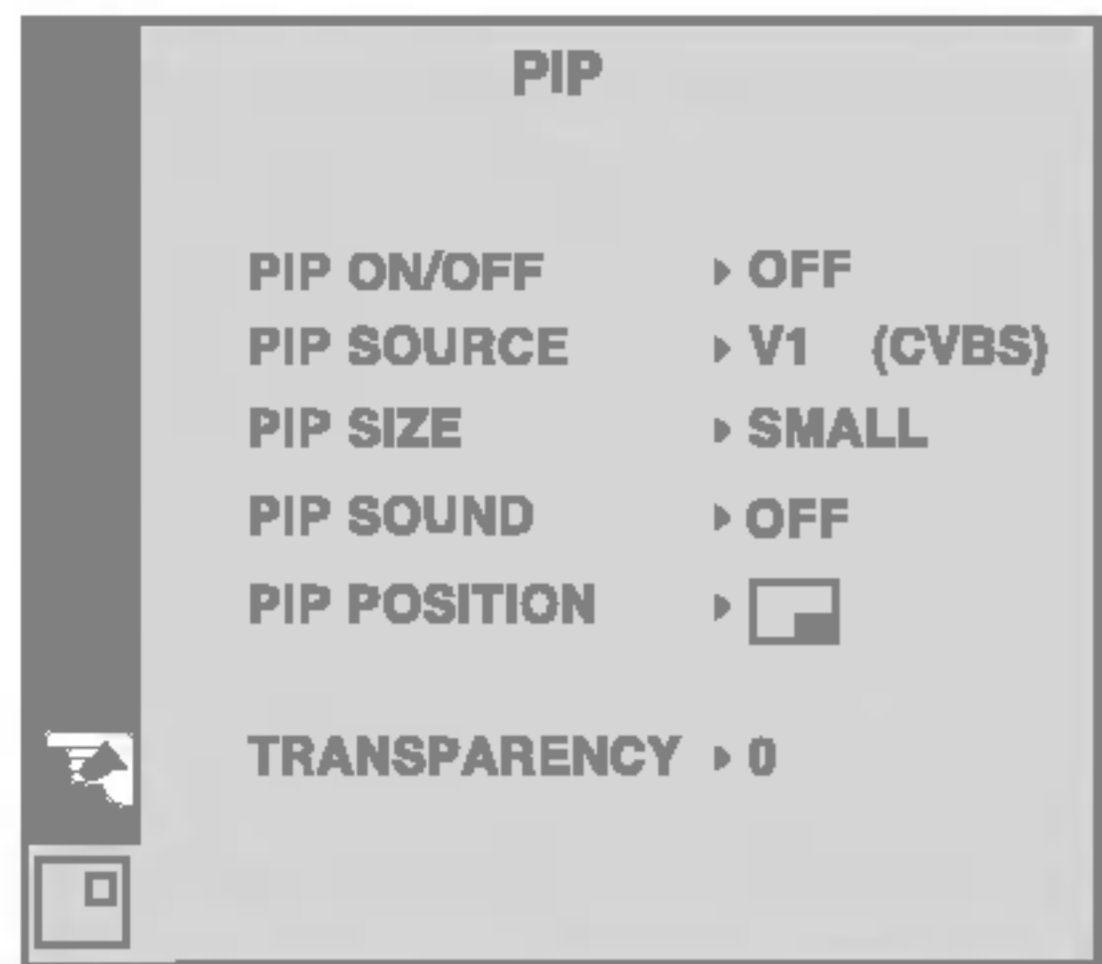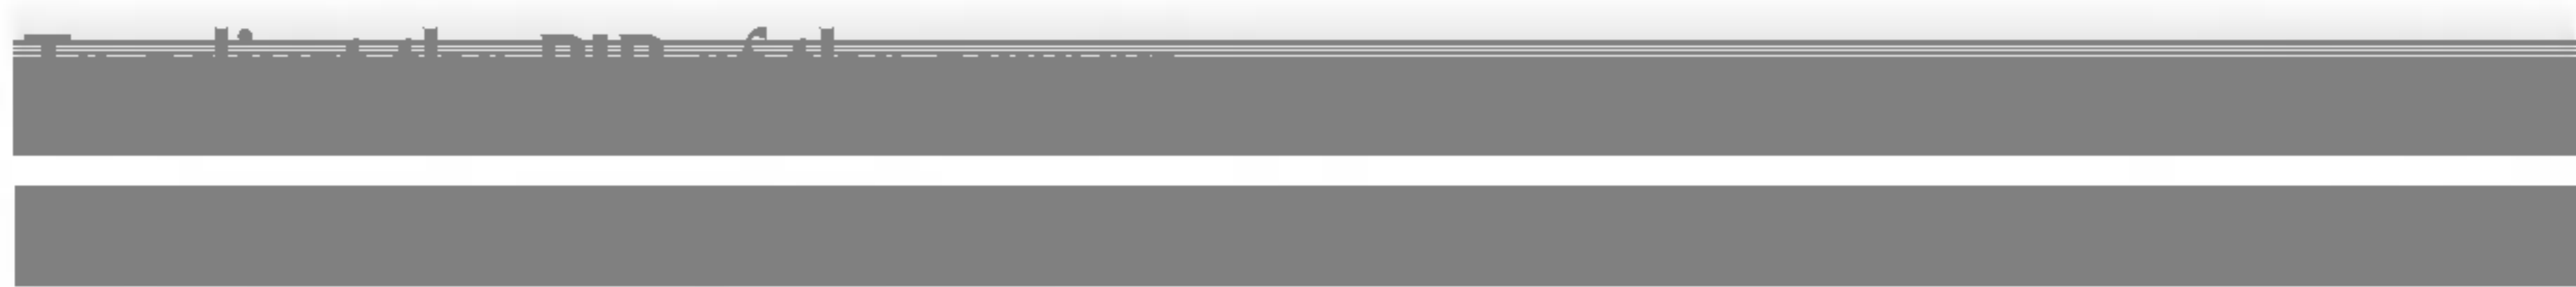

This PIP (Picture-in-Picture) function allows the image from the TV, VCR or DVD to be displayed on a sub-screen while you are using a computer.

PIP ON/OFF To select the sub-screen on/off.

PIP SOURCE To select an input signal for PIP.

PIP SIZE To adjust the size of the PIP screen: SMALL/LARGE

 
PIP SOUND To turn the PIP sound on/off.

PIP POSITION To adjust the position of PIP screen.

TRANSPARENCY To adjust the transparency of the PIP menu screen.



To adjust the screen when using the VCR/DVD/TV

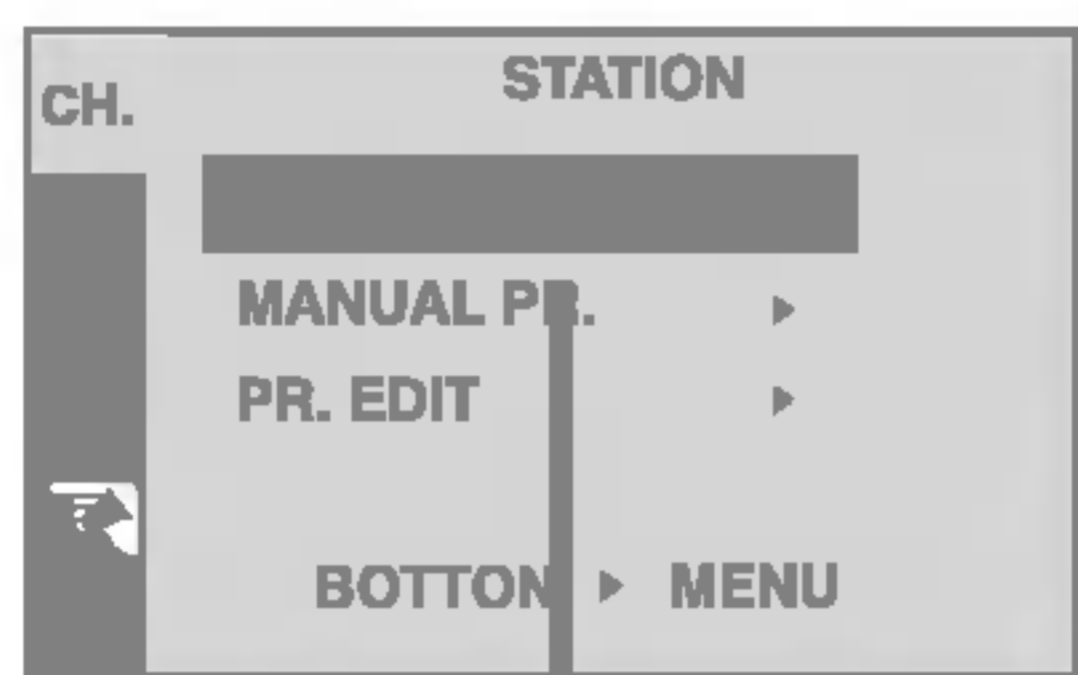


SYSTEM Press the ◀ ▶ buttons to select the TV system of the country or part of the world from where you want to receive the TV channels.




STORAGE FROM To select a channel number or enter the channel number with the number buttons from where you want to start searching for new channels. If e.g. you want to keep the channels 1 to 10 stored earlier, enter channel number 11. Your TV search for new channels from number 11 onwards.

 AUTO PR. Select the **ON** to start automatic programming. all available TV channels are searched for and stored automatically. To stop auto programming, press the **AUTO/SELECT** button(or **OK** button on the remote control). When auto programming is completed, the programme list menu appears.

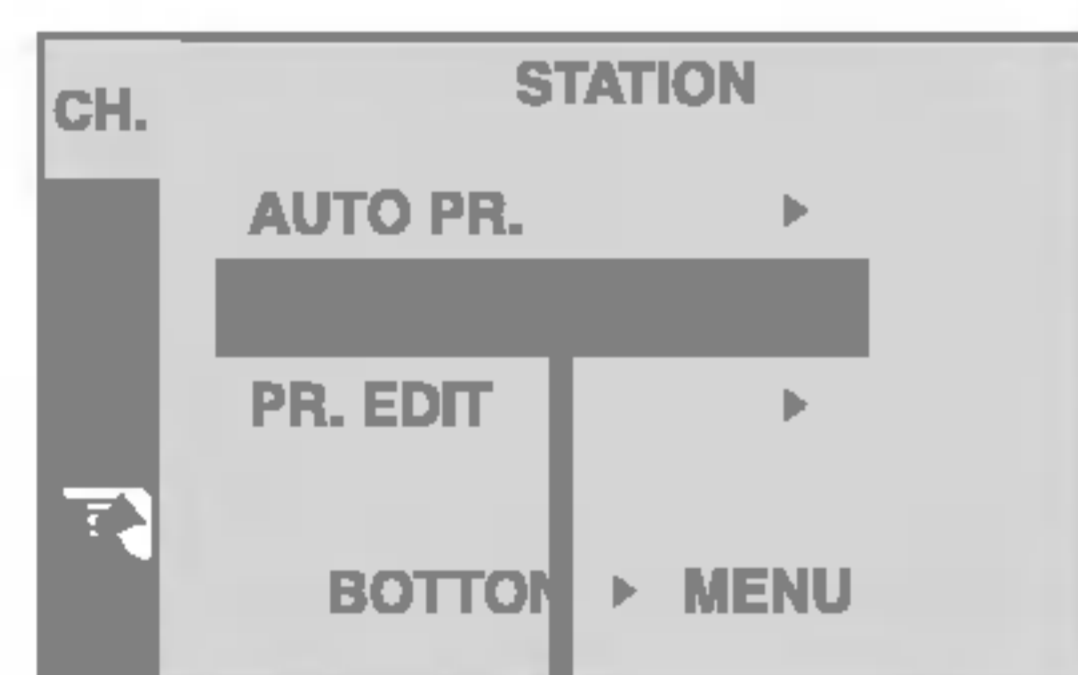

 SYSTEM Press the ◀ ▶ buttons to select the TV system of the country or part of the world from where you want to receive the TV channels.

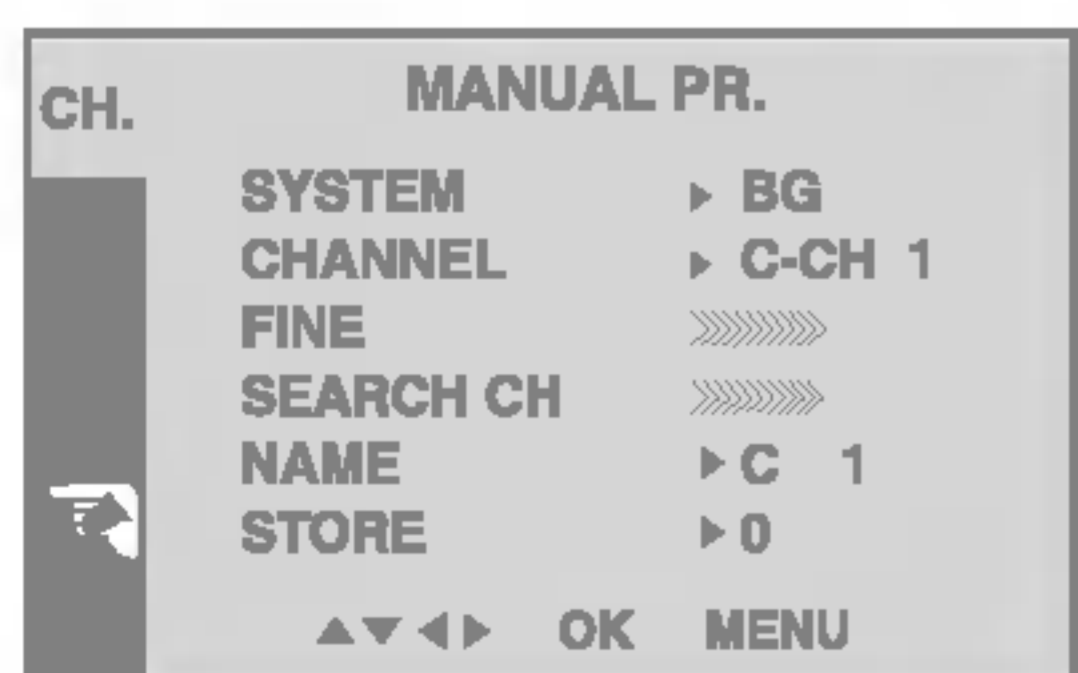

CHANNEL Press the ▶ button to select C-CH for aerial channels or S-CH for cable channels. If you know the C-(01~69) or S-channel number(01~47), enter it directly with the digit buttons 0 to 9.

FINE In case of poor reception, you can improve the reception by fine tuning. Use the ◀ ▶ buttons to fine tune for the best picture and sound.

SEARCH CH Press the ◀ ▶ buttons to start searching. If a channel is found the search will stop.

 


NAME

To see the assigned channel name. It is possible to change the name stored in the memory or to assign a name to a TV channel which has not yet been entered. A name with up to 5 letters or numbers can be given to the programme numbers 0 to 99. Press the ◀ ▶ buttons to move cursor to be changed. -> Press the ▼ ▲ buttons to select a character. (space, number 0~9, and alphabet A~Z) -> Press the **AUTO/SELECT** button (or **OK** button on the remote control).

STORE

If the channel is the one required, press the ▼ button to select store. Press the ◀ ▶ buttons to select a channel number or enter the channel number with the digit buttons. Press the **AUTO/SELECT** button (or **OK** button on the remote control) to store the TV channel.

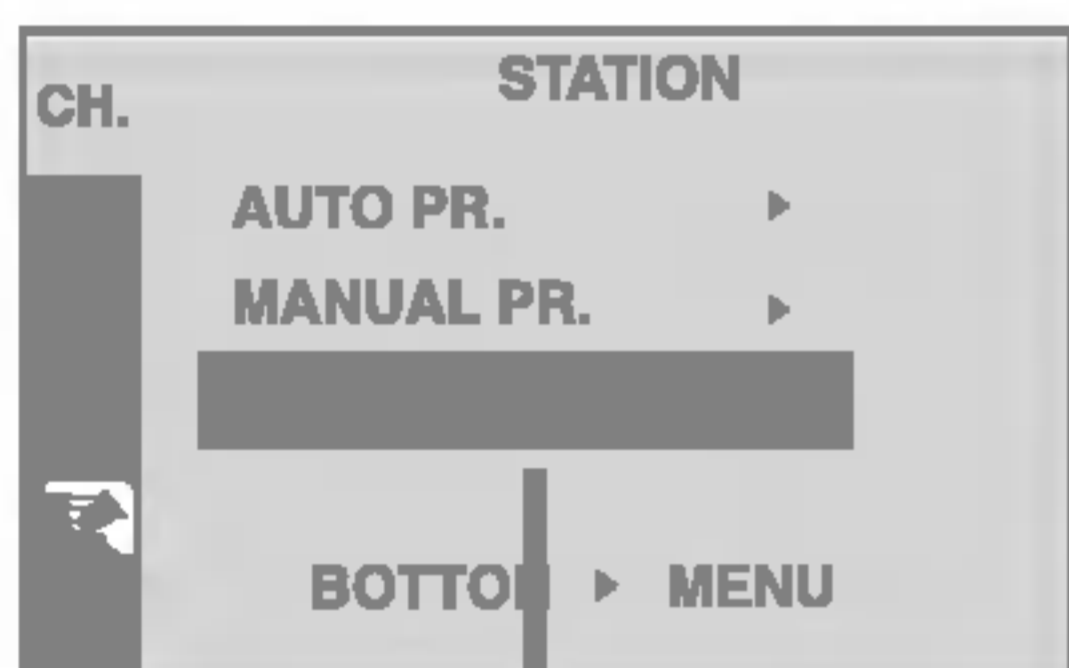

PR. EDIT

DELETE: Press the ▼ ▲ ◀ ▶ buttons to select a TV channel to be deleted. -> Press the red key on the remote control twice. -> The selected TV channel number is deleted, all the following channels are shifted up one position.

0	+ 9	5	-----
1	1 9	6	2 +L
2	4 9	7	0 9
3	-----	8	1 9
4	7 9	9	4 9

■ DELETE ■ COPY
■ MOVE ■ SKIP

COPY: Press the ▼ ▲ ◀ ▶ buttons to select a TV channel to be copied. -> Press the green key on the remote control. All the following channel numbers are shifted down one position.

MOVE: Press the ▼ ▲ ◀ ▶ buttons to select a channel number to be moved. -> Press the yellow key on the remote control. -> Press the ▼ ▲ ◀ ▶ buttons to move the TV channel to the desired channel number. -> Press the yellow key again to release this function.

SKIP: Press the ▼ ▲ ◀ ▶ buttons to select a channel number to be skipped. -> Press the blue key on the remote control. The skipped TV channel is displayed in blue. -> Press the blue key again.



CONTRAST To adjust the contrast of the screen.

BRIGHTNESS To adjust the brightness of the screen.

SHARPNESS To adjust the clearness of the screen.

COLOR To adjust the color to desired level.

RESET* Return to factory default settings. If you don't want to reset the monitor use the ◀ ▶ buttons to select 'OFF' and then press the **AUTO/SELECT** button. This function is available only in Video menu.



VOLUME To decrease or increase volume level.

MUTE Used to select mute on (means sound off) and mute off (means sound on).

BASS To decrease or increase bass level.

TREBLE To decrease or increase treble level.

BALANCE To adjust the balance level.

AVL To adjust uneven sound volumes across all channels or signals automatically to the most appropriate level. To use this feature, select ON.





LANGUAGE To choose the language in which the control names are displayed.

OSD POSITION To adjust position of the OSD window on the screen.



Check the following before calling for service.

<p>● Is the power cord of the display connected?</p>	<ul style="list-style-type: none">• Check and see if the power cord is connected properly to the power outlet.
<p>● Is the power indicator light on?</p>	<ul style="list-style-type: none">• Press the Power button.
<p>● Is the power on and the power indicator green?</p>	<ul style="list-style-type: none">• Adjust the brightness and the contrast.
<p>● Is the power indicator amber?</p>	<ul style="list-style-type: none">• If the display is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.• Make sure if the power is on.• Try to turn on the PC.
<p>● Do you see an "OUT OF RANGE" message on the screen?</p>	<ul style="list-style-type: none">• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.
<p>● Do you see a "CHECK SIGNAL CABLE " message on the screen?</p>	<ul style="list-style-type: none">• This message appears when the signal cable between your PC and your display is not connected. Check the signal cable and try again.



Display Troubleshooting	
<ul style="list-style-type: none">● Display Position is incorrect.	<ul style="list-style-type: none">• Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.• Check Control Panel --> Display --> Settings and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
<ul style="list-style-type: none">● On the screen background, vertical bars or stripes are visible.	<ul style="list-style-type: none">• Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the vertical bars or stripes using the CLOCK icon in the on screen display.
<ul style="list-style-type: none">● Any horizontal noise appearing in any image or characters are not clearly portrayed.	<ul style="list-style-type: none">• Press the AUTO/SELECT button to automatically adjust your display image to the ideal setting. If the results are unsatisfactory, decrease the horizontal bars using the PHASE icon in the on screen display.• Check Control Panel --> Display --> Settings and adjust the display to the recommended resolution or adjust the display image to the ideal setting. Set the color setting higher than 24 bits (true color).
<ul style="list-style-type: none">● The screen color is mono or abnormal.	<ul style="list-style-type: none">• Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.• Make sure the video card is properly inserted in the slot.• Set the color setting higher than 24 bits (true color) at Control Panel - Settings.
<ul style="list-style-type: none">● The screen blinks.	<ul style="list-style-type: none">• Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.• Make sure the power voltage is high enough, It has to be higher than AC100-240V 50/60Hz.



<ul style="list-style-type: none"> ● Have you installed the display driver? ● Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message? 	<ul style="list-style-type: none"> • Be sure to install the display driver from the display driver CD (or diskette) that comes with your display. Or, you can also download the driver from our web site: http://www.lge.com. • Make sure to check if the video card supports Plug&Play function.

<ul style="list-style-type: none"> ● No sound. ● Sound is too high pitched or too low pitched. ● Sound level is too low. 	<ul style="list-style-type: none"> • Check if the audio cable is correctly connected. • Check the volume level. • Adjust the TREBLE to an appropriate level. • Adjust the BASS to an appropriate level. • Check the volume level.

<ul style="list-style-type: none"> ● TV signal is not received. 	<ul style="list-style-type: none"> • Check the channel system and make sure you chose the correct channel system. • Check the AUTO PR. function to automatically search the available channels. • Check and see if the TV adapter is properly connected between your display and antenna cable.

Specifications

Display	15 inches (38.1cm) Flat Panel Active matrix-TFT LCD Anti-Glare coating 15 inches viewable 0.3 mm pixel pitch	
Sync Input	Horizontal Freq.	30 - 63kHz (Automatic)
	Vertical Freq.	56 - 75Hz (Automatic)
	Input Form	Separate TTL, Positive/Negative
Video Input	Signal Input	15 pin D-Sub Connector
	Input Form	RGB Analog (0.7Vp-p/75ohm)
Resolution	Max	VESA 1024 x 768@75Hz
	Recommend	VESA 1024 x 768@60Hz
Plug&Play	DDC 2B	
Audio Signal	Input	PC : 700mVrms
		TV:100%modulation
		Video : 400mVrms
	Audio output and its ratio	1W + 1W (left+right)/10%
	Speaker Impedance	8Ω
Power	Normal	: 36W
Consumption	Stand-by/Suspend	≤ 5W
	DPMS Off	≤ 5W
Dimensions & Weight (with tilt stand)	Width	36.02 cm / 14.18 inches
	Height	35.98 cm / 14.17 inches
	Depth	15.30 cm / 6.02 inches
	Net	4.15 kg (9.15 lbs)
	Tilt	-5°~30°
	AC 100-240V 50/60Hz 0.6A	
	Operating Conditions	
	Temperature	10°C to 35 °C
	Humidity	10 % to 80 % non-Condensing
	Storage Conditions	
	Temperature	-20°C to 60 °C
	Humidity	5 % to 95 % non-Condensing
	Attached(<input type="checkbox"/>), Detached (<input type="checkbox"/>)	
	Attached(<input type="checkbox"/>), Detached (<input type="checkbox"/>)	
	Wall-outlet type or PC-outlet type	
	TCO99	



Preset Modes (Resolution)


1	VGA	640 x 350	31.468	70
2	VGA	720 x 400	31.468	70
3	VGA	640 x 480	31.469	60
4	VESA	640 x 480	35.000	66.67
5	VESA	640 x 480	37.861	72.8
6	VESA	640 x 480	37.500	75
7	VESA	800 x 600	35.156	56.25
8	VESA	800 x 600	37.879	60
9	VESA	800 x 600	48.077	72
10	VESA	800 x 600	46.875	75
11	MAC	832 x 624	49.725	75
*12	VESA	1024 x 768	48.363	60
13	VESA	1024 x 768	56.476	70
14	VESA	1024 x 768	60.023	75

*Recommended

Unlike CRT monitors, which require a high refresh rate to minimize flickering, TFT technology is inherently flicker-free. If possible, configure your computer for 1024 x 768 addressability at 60Hz vertical refresh rate.

VESA wall mounting

 Connected to another object (stand type and wall-mounted type. This monitor accepts a VESA-compliant mounting interface pad.)

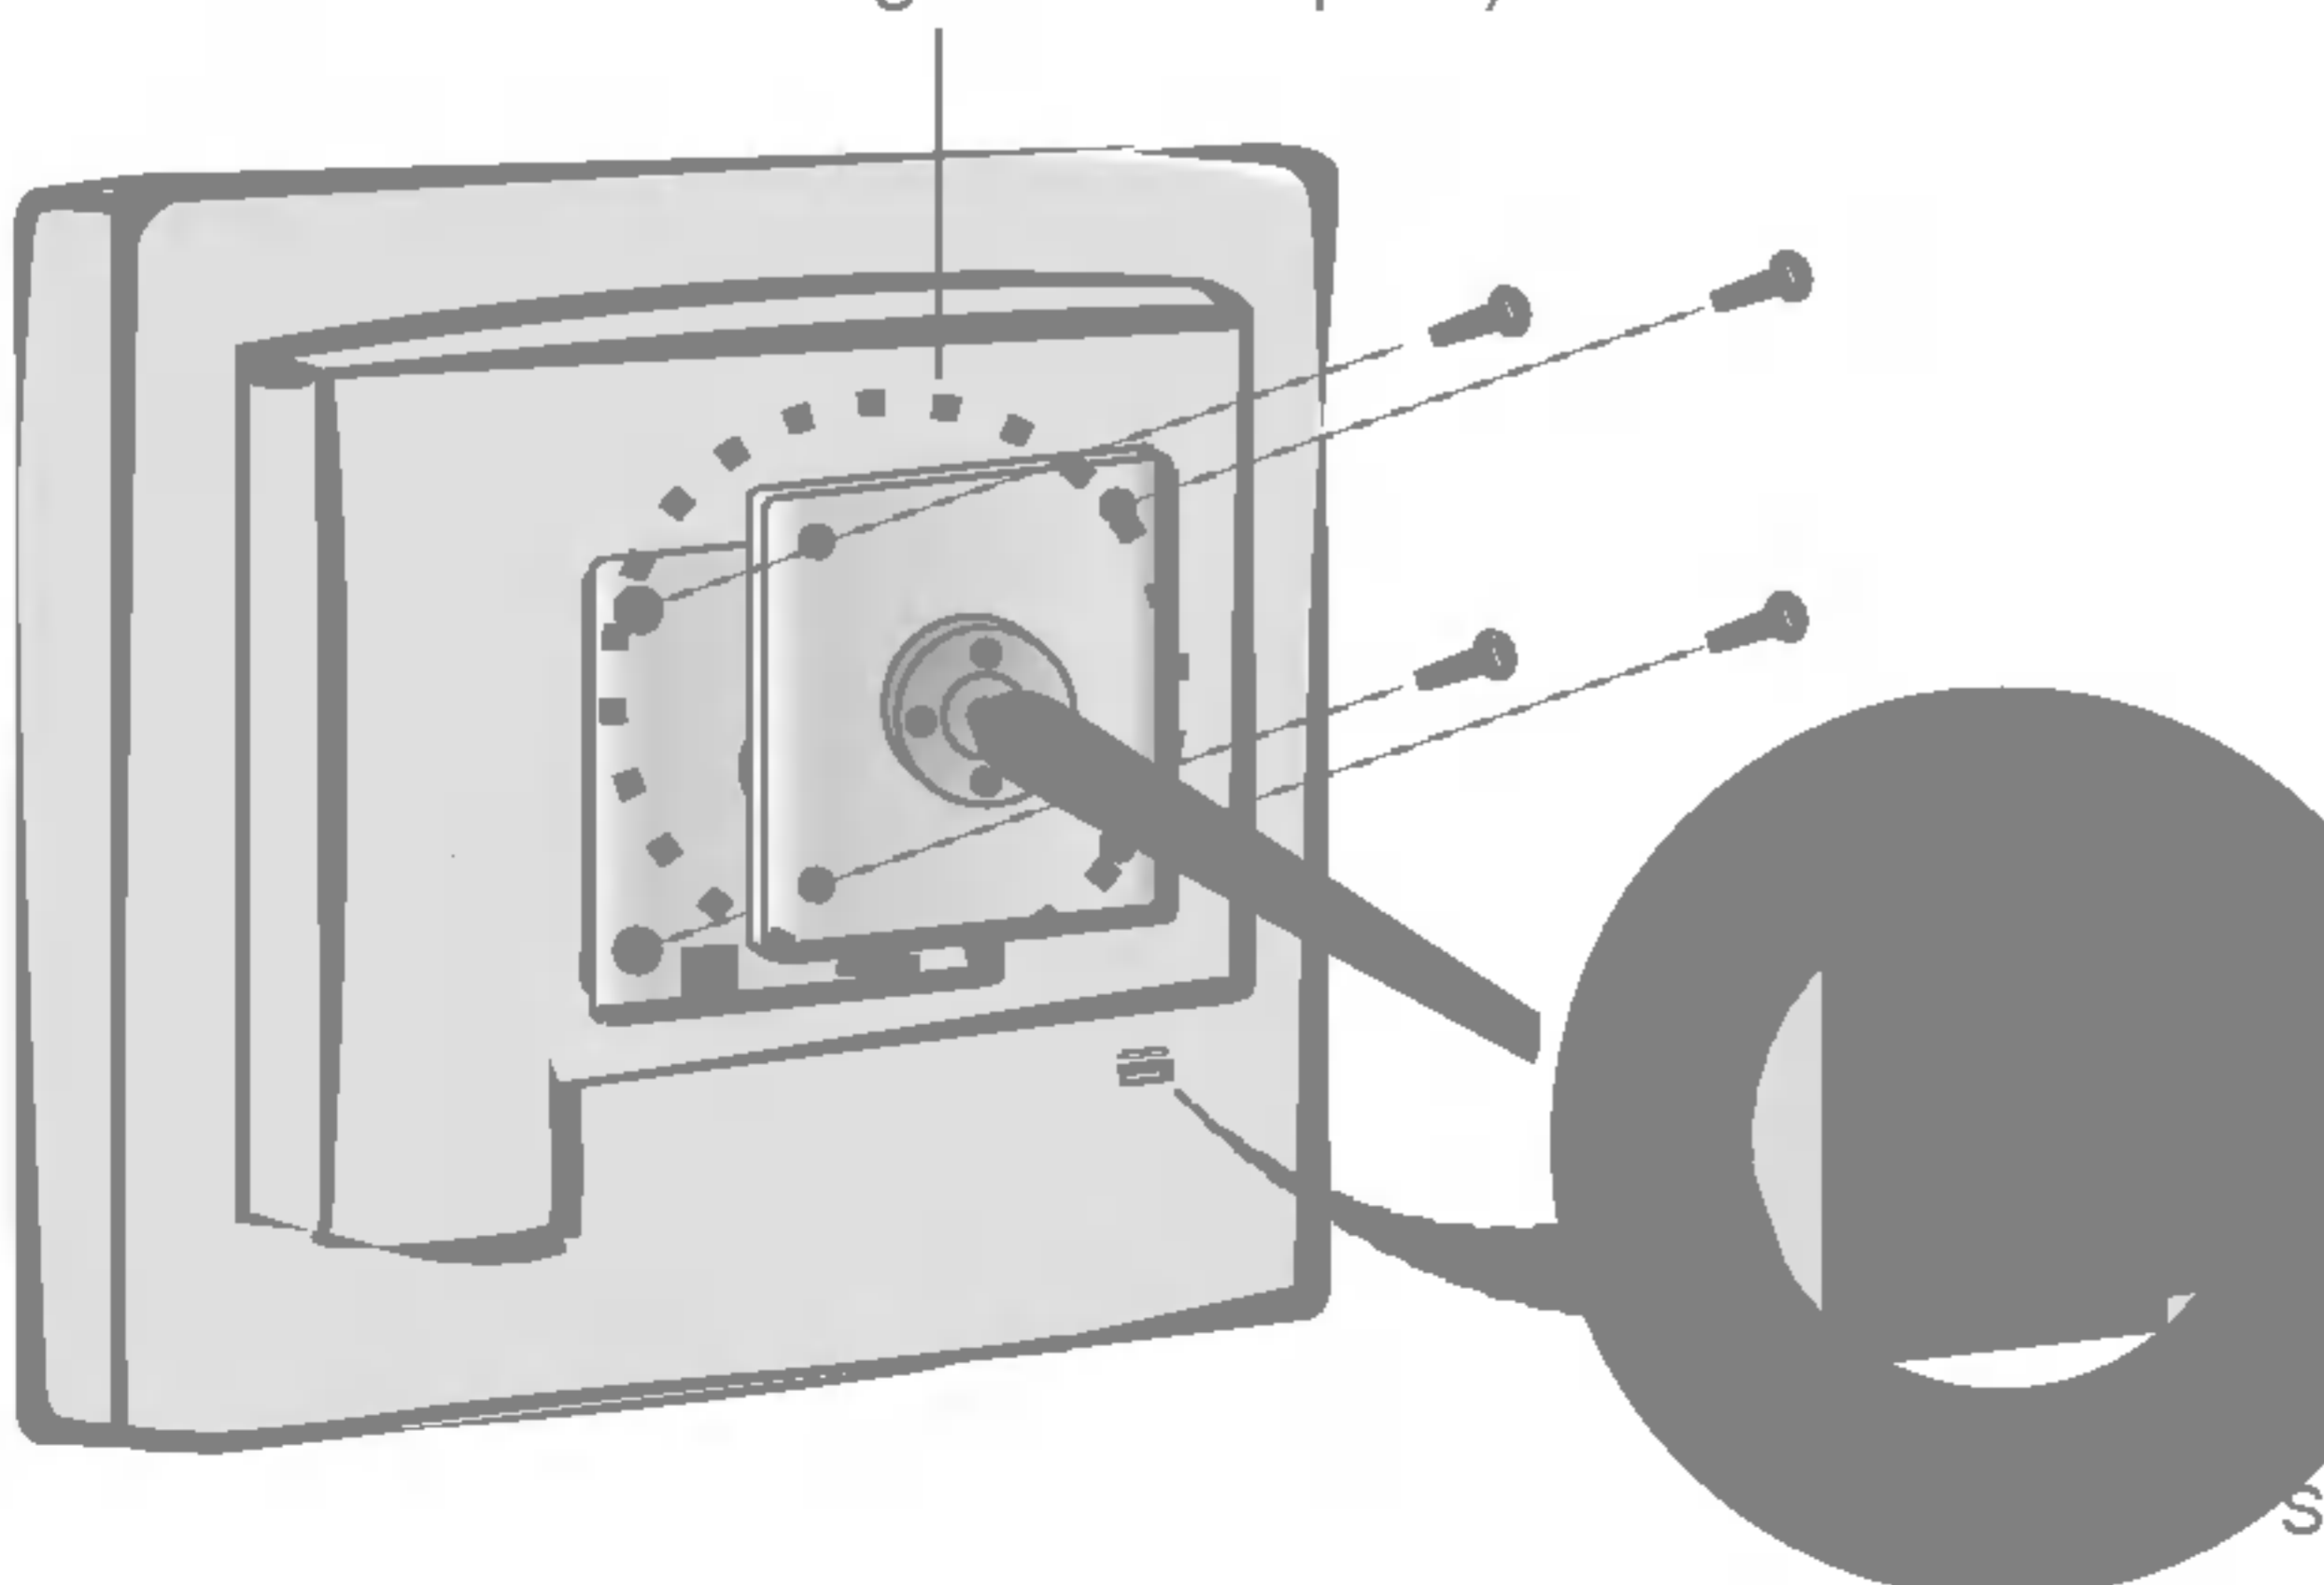


Kensington Security Slot- optional
 Connected to a locking
 cable that can be purchased
 separately at most computer
 stores

Using the Remote Control

For detailed instructions of each button on the remote control, refer to the appropriate pages of this manual.

 Remote Control

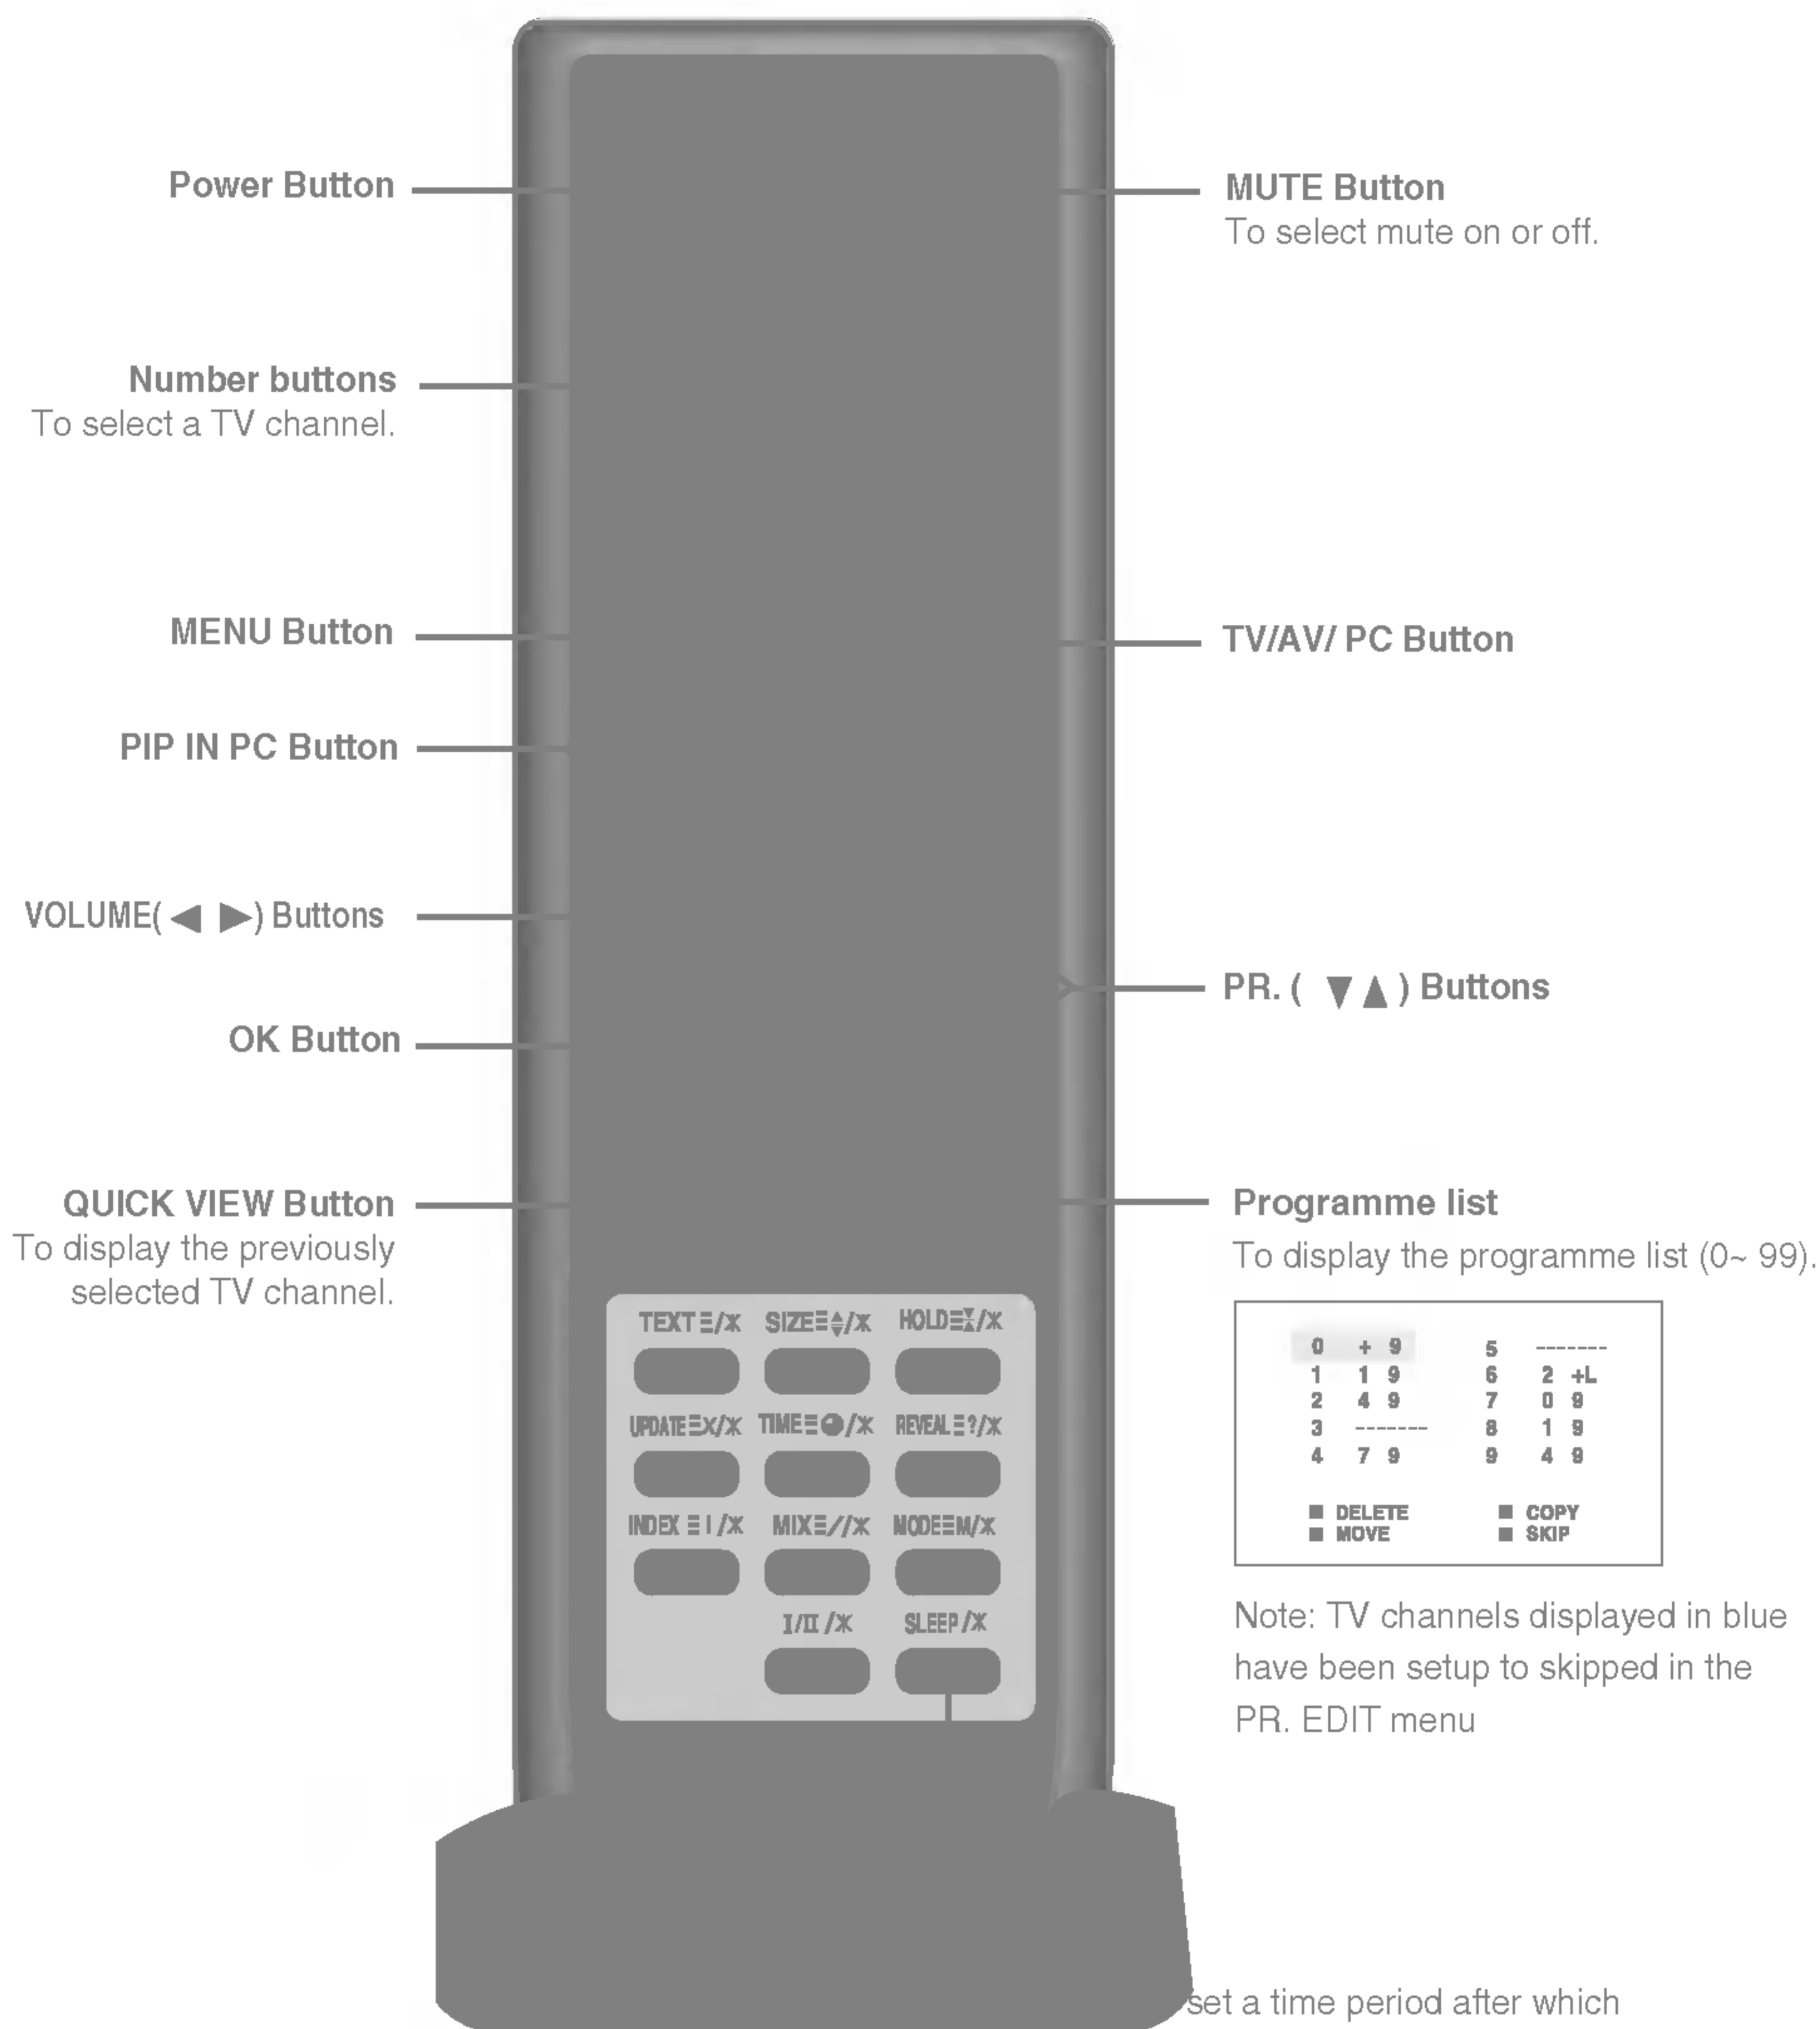

set a time period after which the TV should switch itself to standby. Press the key repeatedly to select the number of minutes. The counter runs from 10, 20, 30 to 120 minutes.



 
Remote Control

I/II : Bilingual choice and sound mode selection

Press this button

- to switch from **Stereo** to **Mono** sound in case of stereo transmission, or from **Nicam Stereo** to **Nicam Mono**, in case of digital transmission.
- to switch from **Nicam Dual I** to **Nicam Dual II** or **Nicam Dual I-II** in case of Nicam Dual transmission.
- to choose between **Dual I**, **Dual II** or **Dual I-II** in case of bilingual transmission :
Dual I sends the primary broadcast language to the loudspeakers ;
Dual II sends the secondary broadcast language to the loudspeakers ;
Dual I-II sends a separate language to each loudspeakers.

- **NOTE** : In case of weak stereo sound signals, with stereo or Nicam stereo transmission, select mono reception.

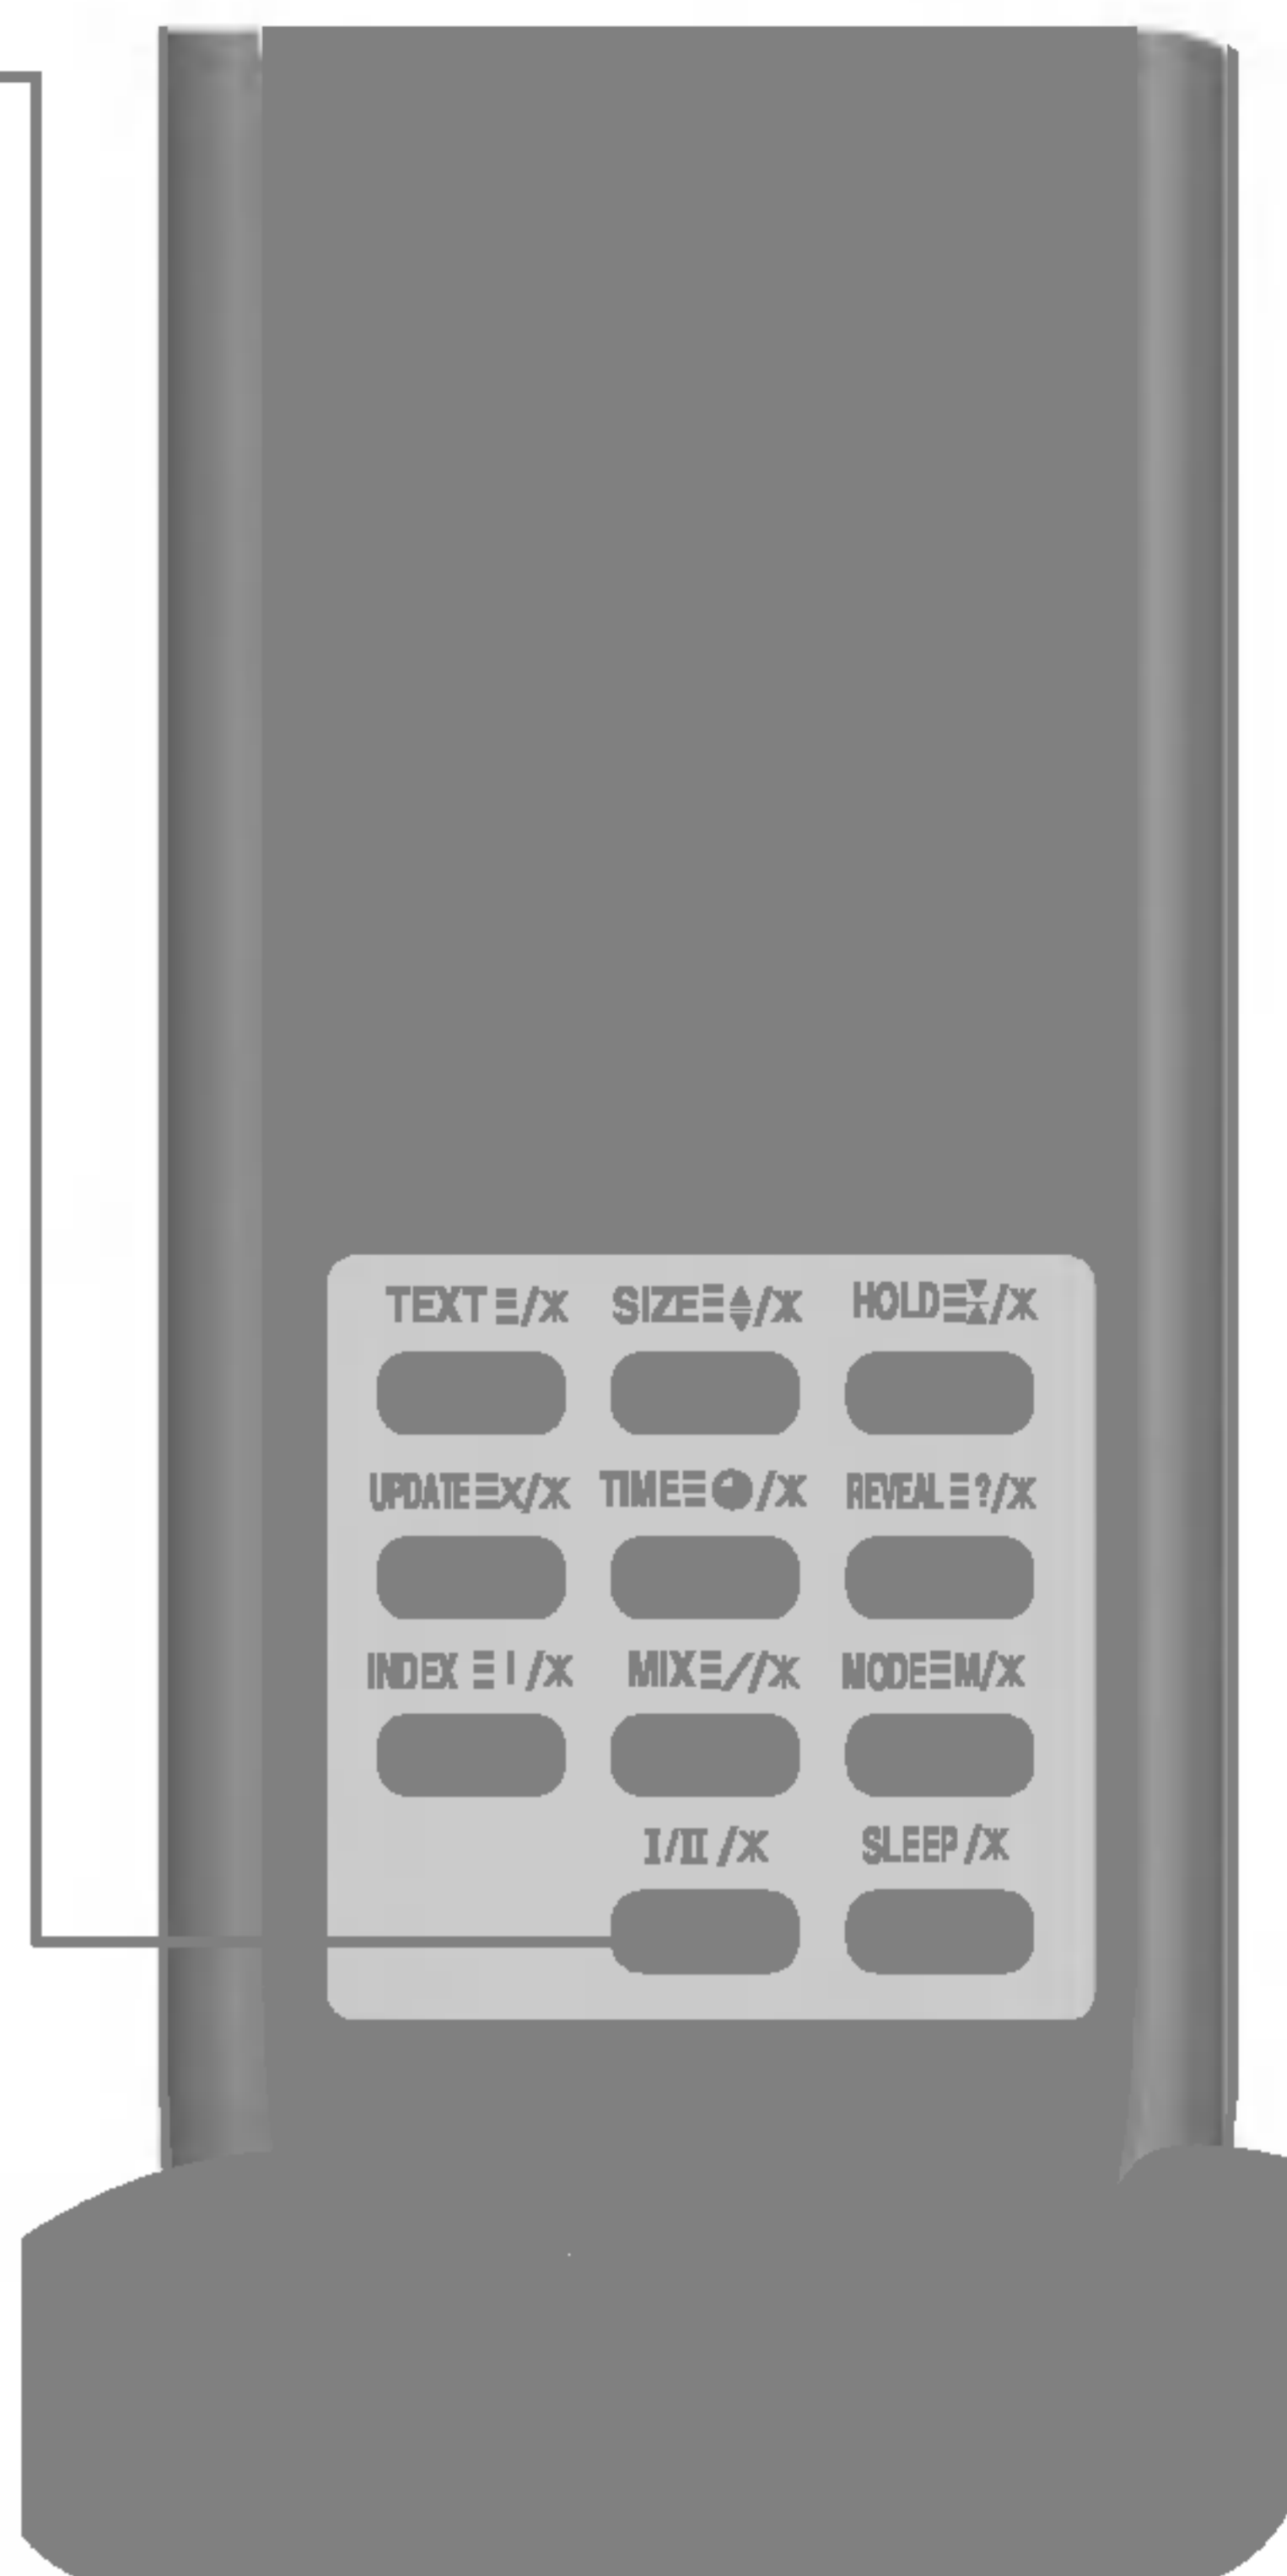

Remote Control - Using the Teletext function



1 TEXT

: To select the teletext on or off. The main index page or the last selected page appears on the screen together with an information headline and an option line at the bottom of the screen.

2 SIZE

: Press the button repeatedly to display the upper part, the lower part and then to return to the normal page size. When the upper part is displayed, you can scroll the text, line by line using the ▼▲ buttons.

3 HOLD

: Press the button to stop the automatically rotating of the subpages. Press the button again to continue the automatic rotating again.

4 UPDATE

: Press the button to appear the TV programme. At the top of screen indicates that you are still in the teletext mode. Before interrupting teletext, you may select a page number. When the page has been found, the information line appears briefly on your screen. Press the button again to reappear teletext.

5 TIME

: When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/GREEN, ▼▲ or NUMBER buttons. Press again to exit this function.

6 REVEAL

: Press the button to reveal/conceal the hidden information, such as solutions to riddles and puzzles. Press this button again to remove the information from the display.

7 INDEX

: To display the main index.

8 MIX

: Display the teletext pages superimposed on the TV picture. To switch the TV picture off press this button again.



 
Insert the batteries into the remote control to operate the monitor.

Preparing the Remote Control

1. Open the battery cover.
2. Insert batteries (AAA size).

Make sure to match the + and - on the batteries to the marks inside the battery compartment.

3. Close the cover.

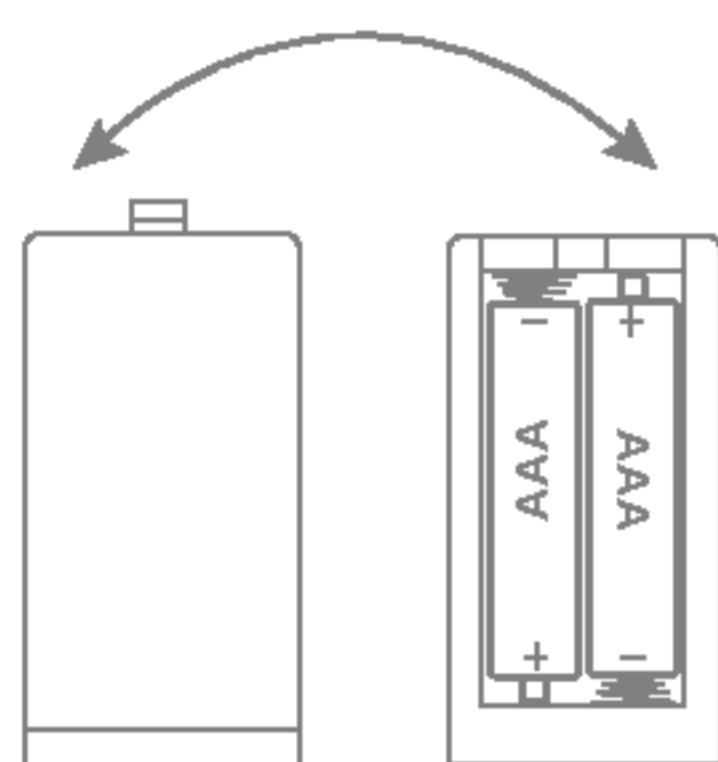


Note

- Do not insert the batteries into the remote control in the wrong direction.
- Do not charge, heat, open, or short-circuit the batteries. Also do not throw the batteries into the fire.
- Do not use different types of batteries together, nor mix old and new batteries.

This section shows you how to use the remote control.

Operating with the Remote Control

 Point the remote control at the remote sensor and press the buttons.

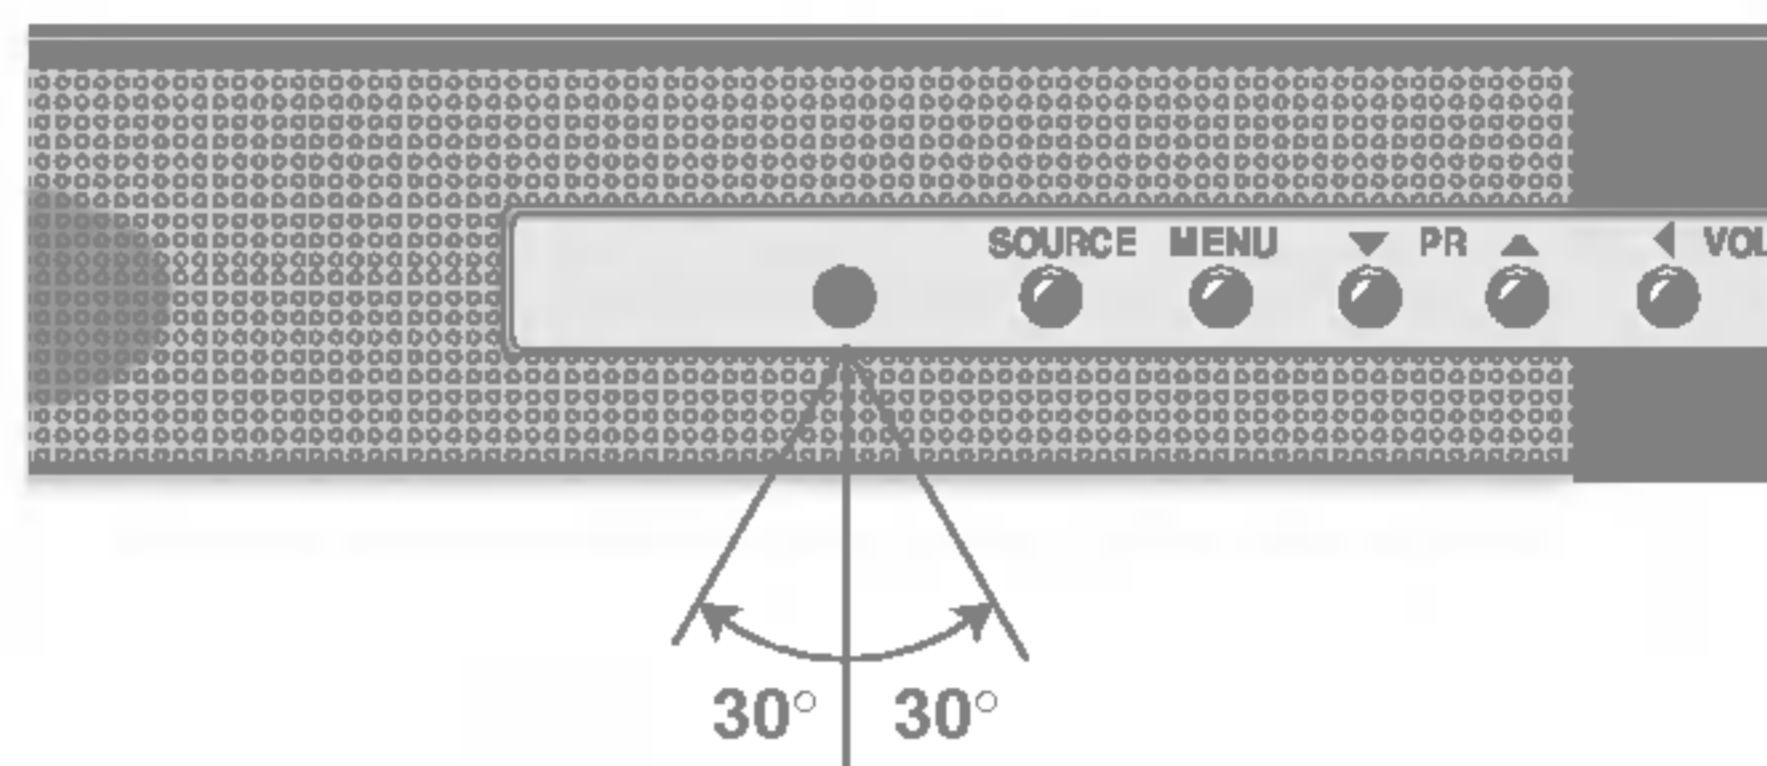

Within about 23ft (about 7m)



Distance : About 23 ft (7 m) from the front of the remote sensor.
Angle : About 30° in each direction of the front of the remote sensor.

 
Do not expose the sensor of remote control in the monitor to a strong light source such as direct sunlight or illumination. If so, may not be able to operate the monitor with the remote control.

Note

- Do not drop the remote control or handle it roughly.
- Do not leave the remote control in extremely hot or humid conditions.
- Do not expose the remote control to water or anything wet.

Connecting the VCR/DVD

1. Connect the each audio/video output jack of the VCR/DVD to the corresponding input port as shown on the Display.
If you connect the S-Video input port to external equipment, you can have an improved definition image.

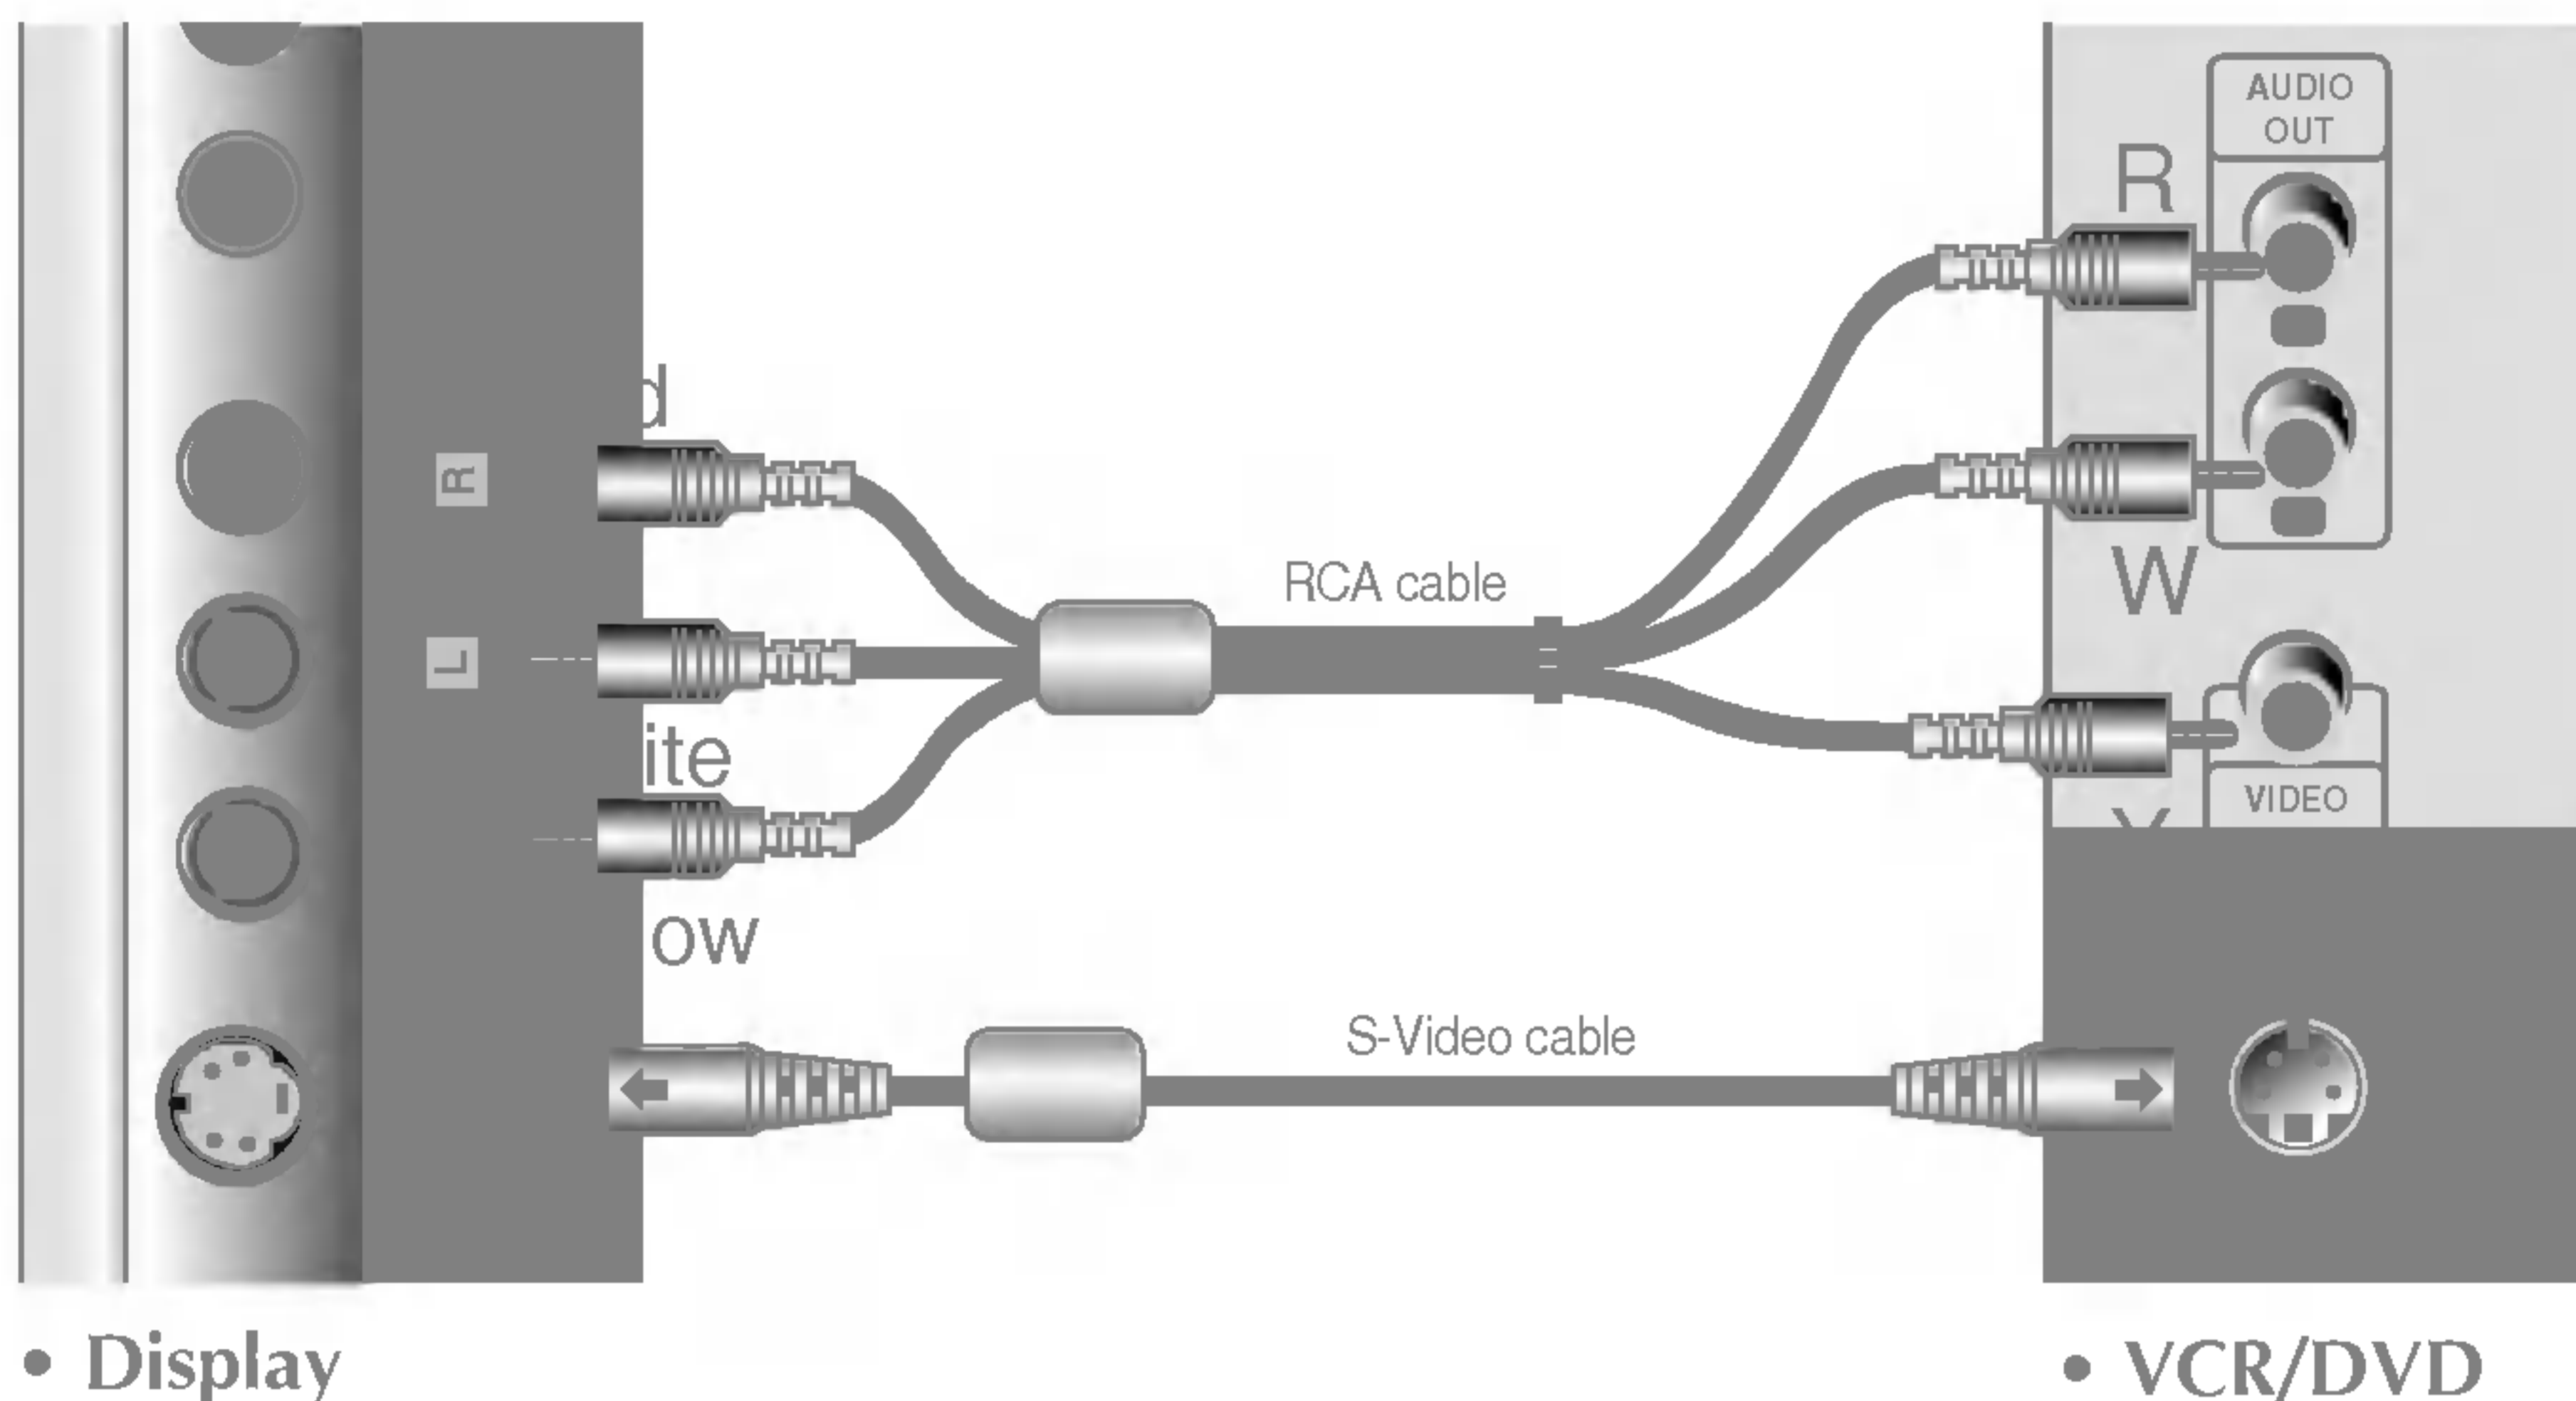

2. Select an input signal.



SOURCE → ▼▲ → **AUTO/SELECT**

Press the **SOURCE** button on the front panel of the display to select an input.

- V1(CVBS): Composite video
- V2(SVHS): S video



Watching TV- Optional

- Before setting up the monitor, ensure that the power to the monitor, the computer system, and other attached devices is turned off.

 
1. As you see in the picture, connect the TV tuner pack to the monitor and use your hand or a screwdriver to fasten the thumbscrews. And then connect the antenna to the TV tuner pack.

(a) TV tuner pack (Optional):


L1510T model includes TV tuner pack.

For L1510A models, TV tuner can be purchased as an option from the LGE monitor dealers.

2. Connect the power cord into a proper power outlet that is easily accessible and close to the display

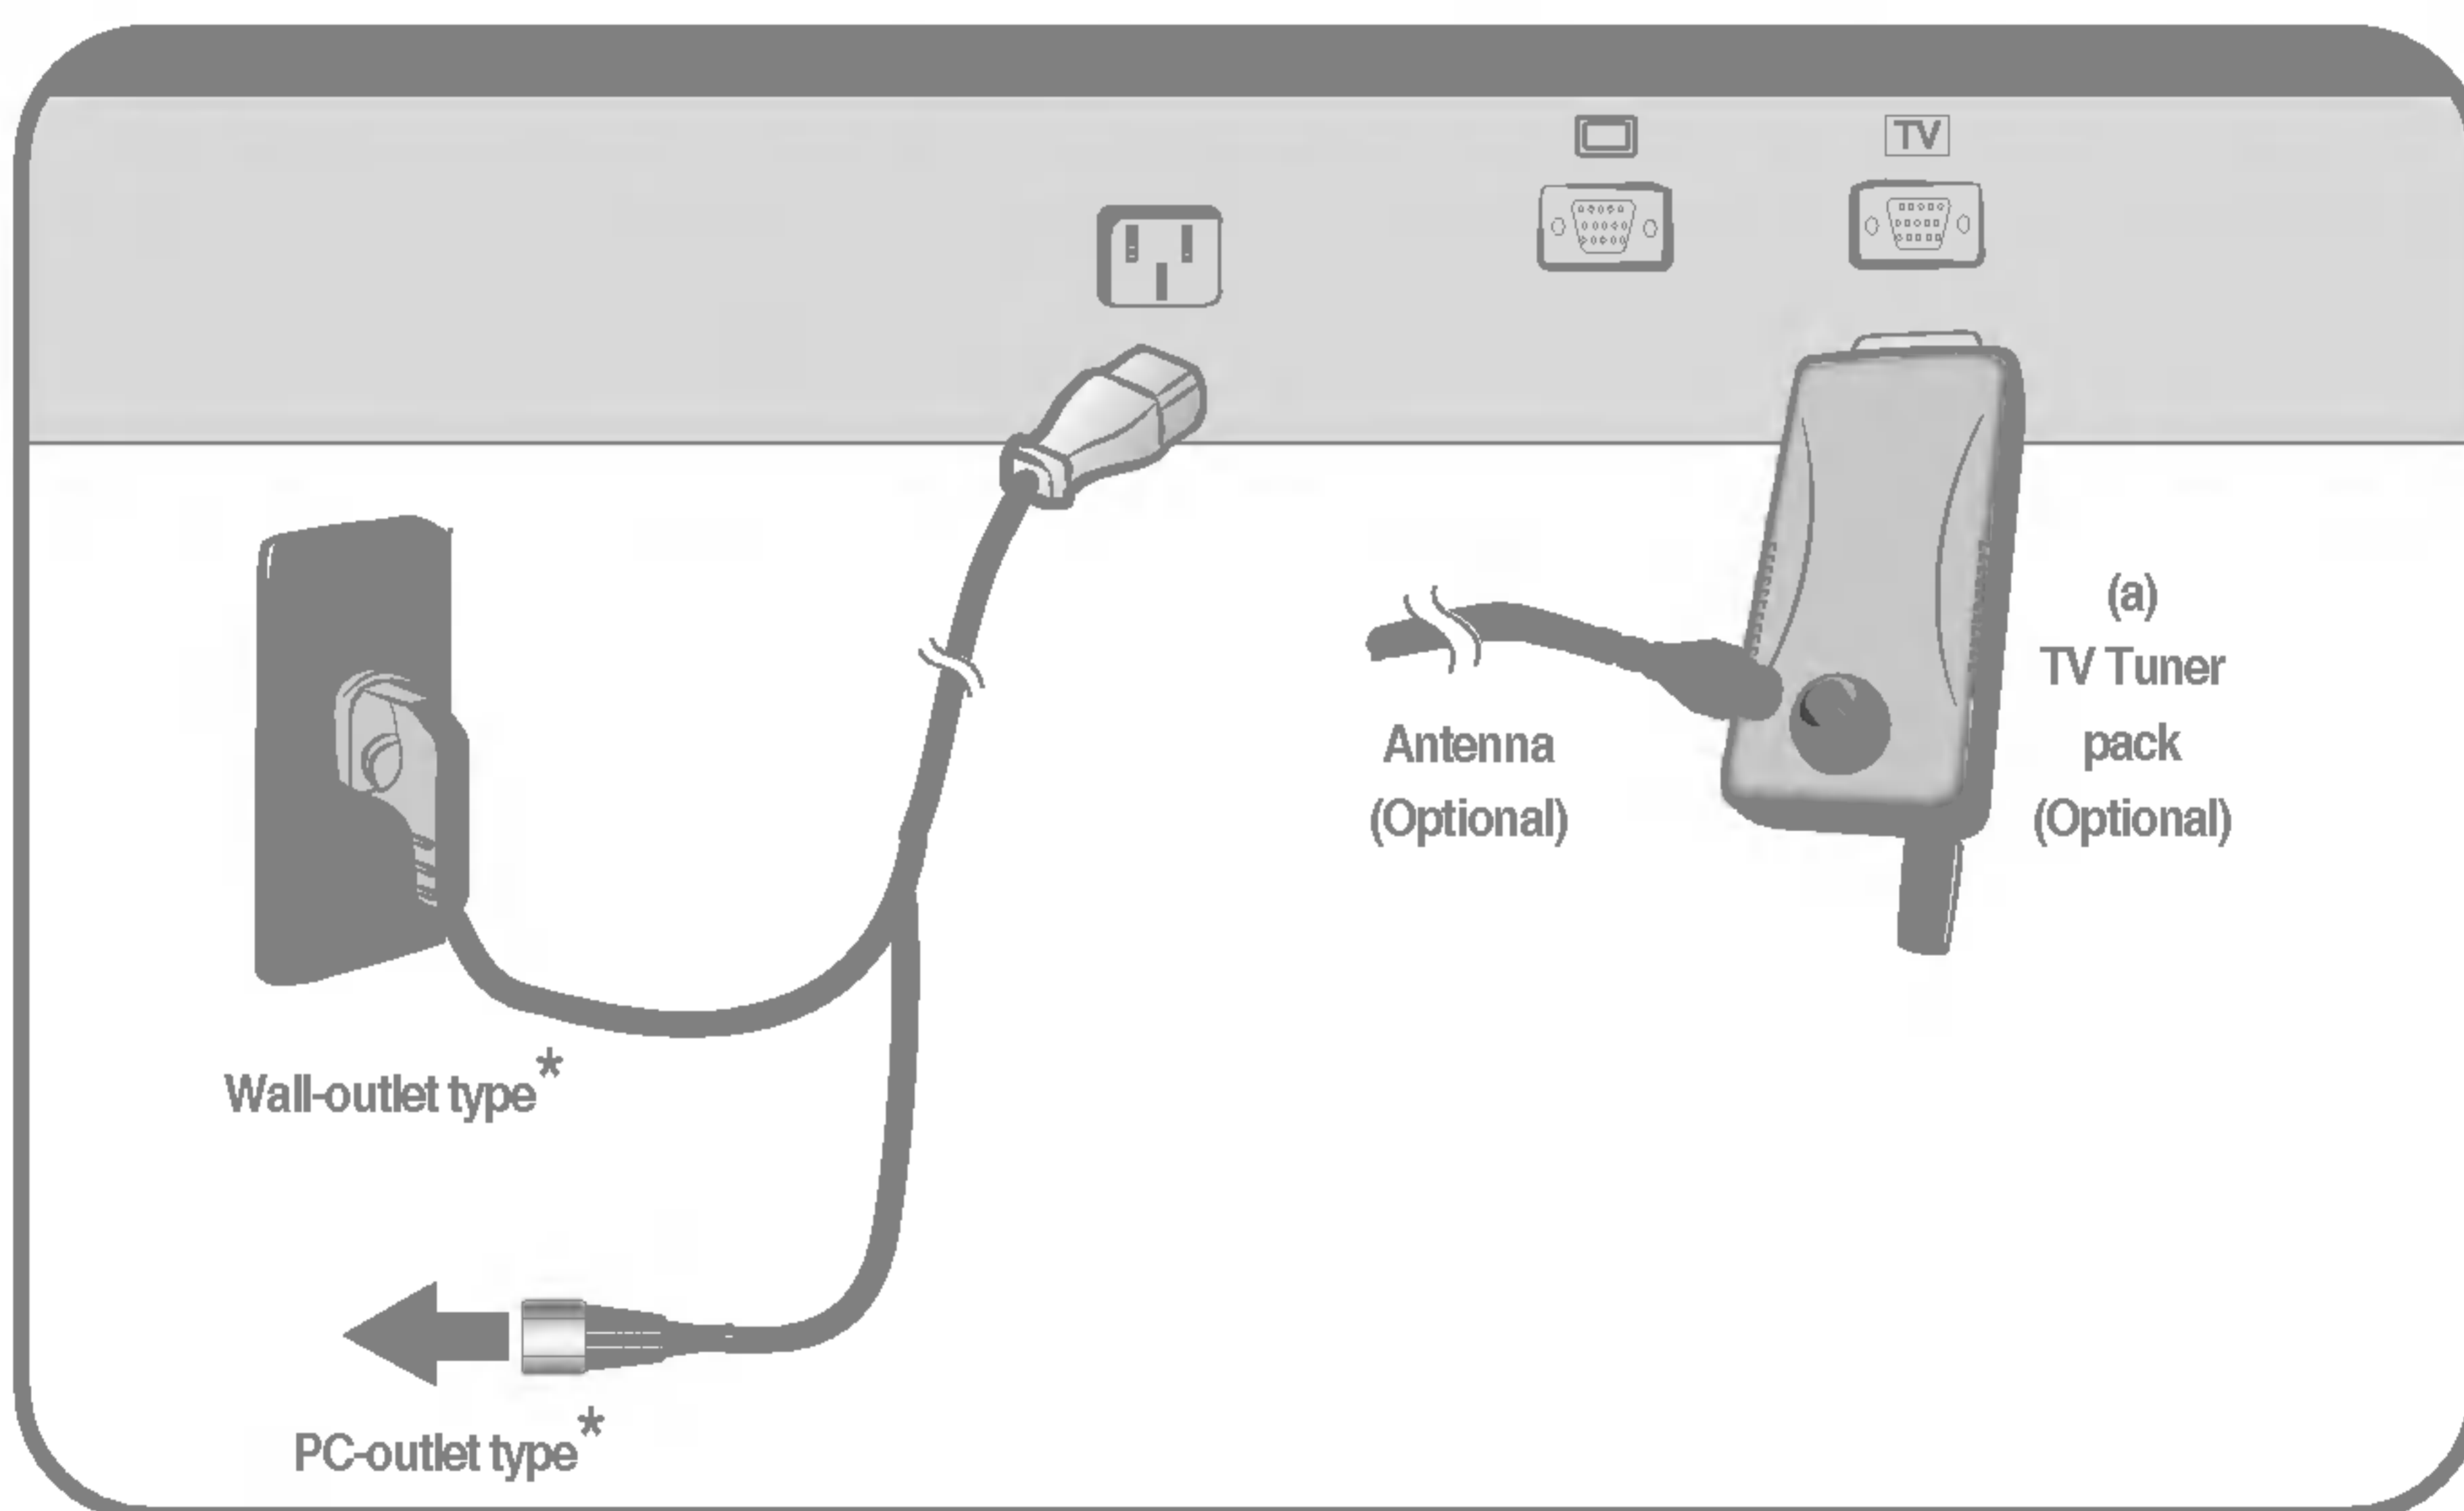

 3. Select an input signal.

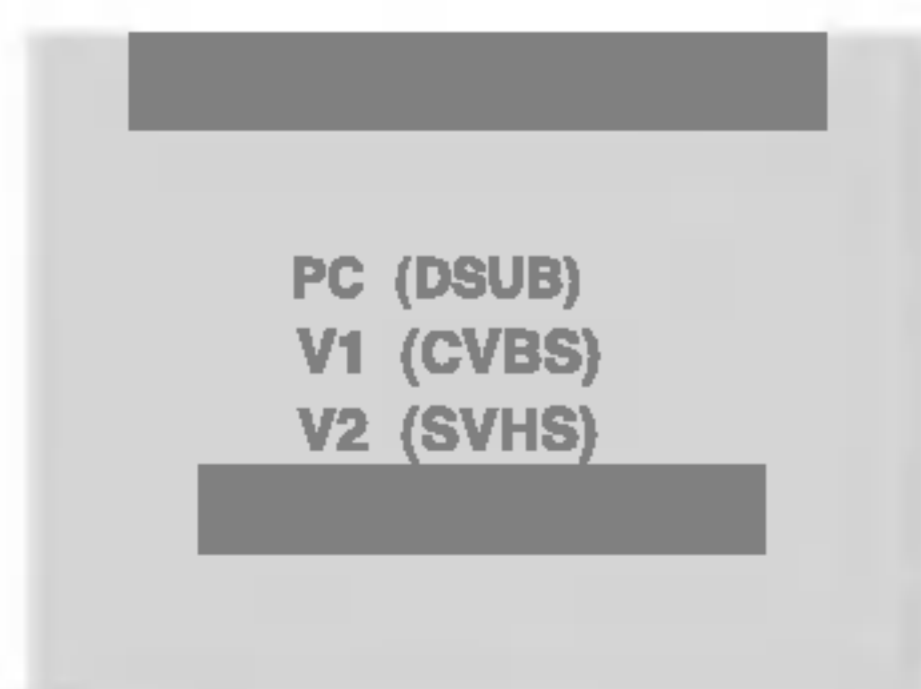

SOURCE → ▼▲ → AUTO/SELECT

Press the **SOURCE** button on the front panel of the display to select an input.

- TV: TV