

Model	V-CP862SD/ST/HT		
Language	English+Chinese (繁体)		
Page	8	Color(cover/body)	4/1
Material	Weight 100g	Size(W*H)	150X220(mm)
Date	2005.09.19	Designer	Liubin
Part No.	3828FI3851Q	Description	owner's manual

Change Record

No.	Change content	ECO No.	Date	Designer	Confirm
1					
2					
3					
4					
5					
6					
7					
8					
9					



Vacuum cleaner

吸塵器

Owner's Manual
用戶手冊


Before connecting, operating or adjusting this product,
please read this instruction booklet carefully and completely.

連線，操作或調整此產品前，請先仔細閱讀本手冊。

V-CP862SD/ST/HT

Basic Parts

基本部品

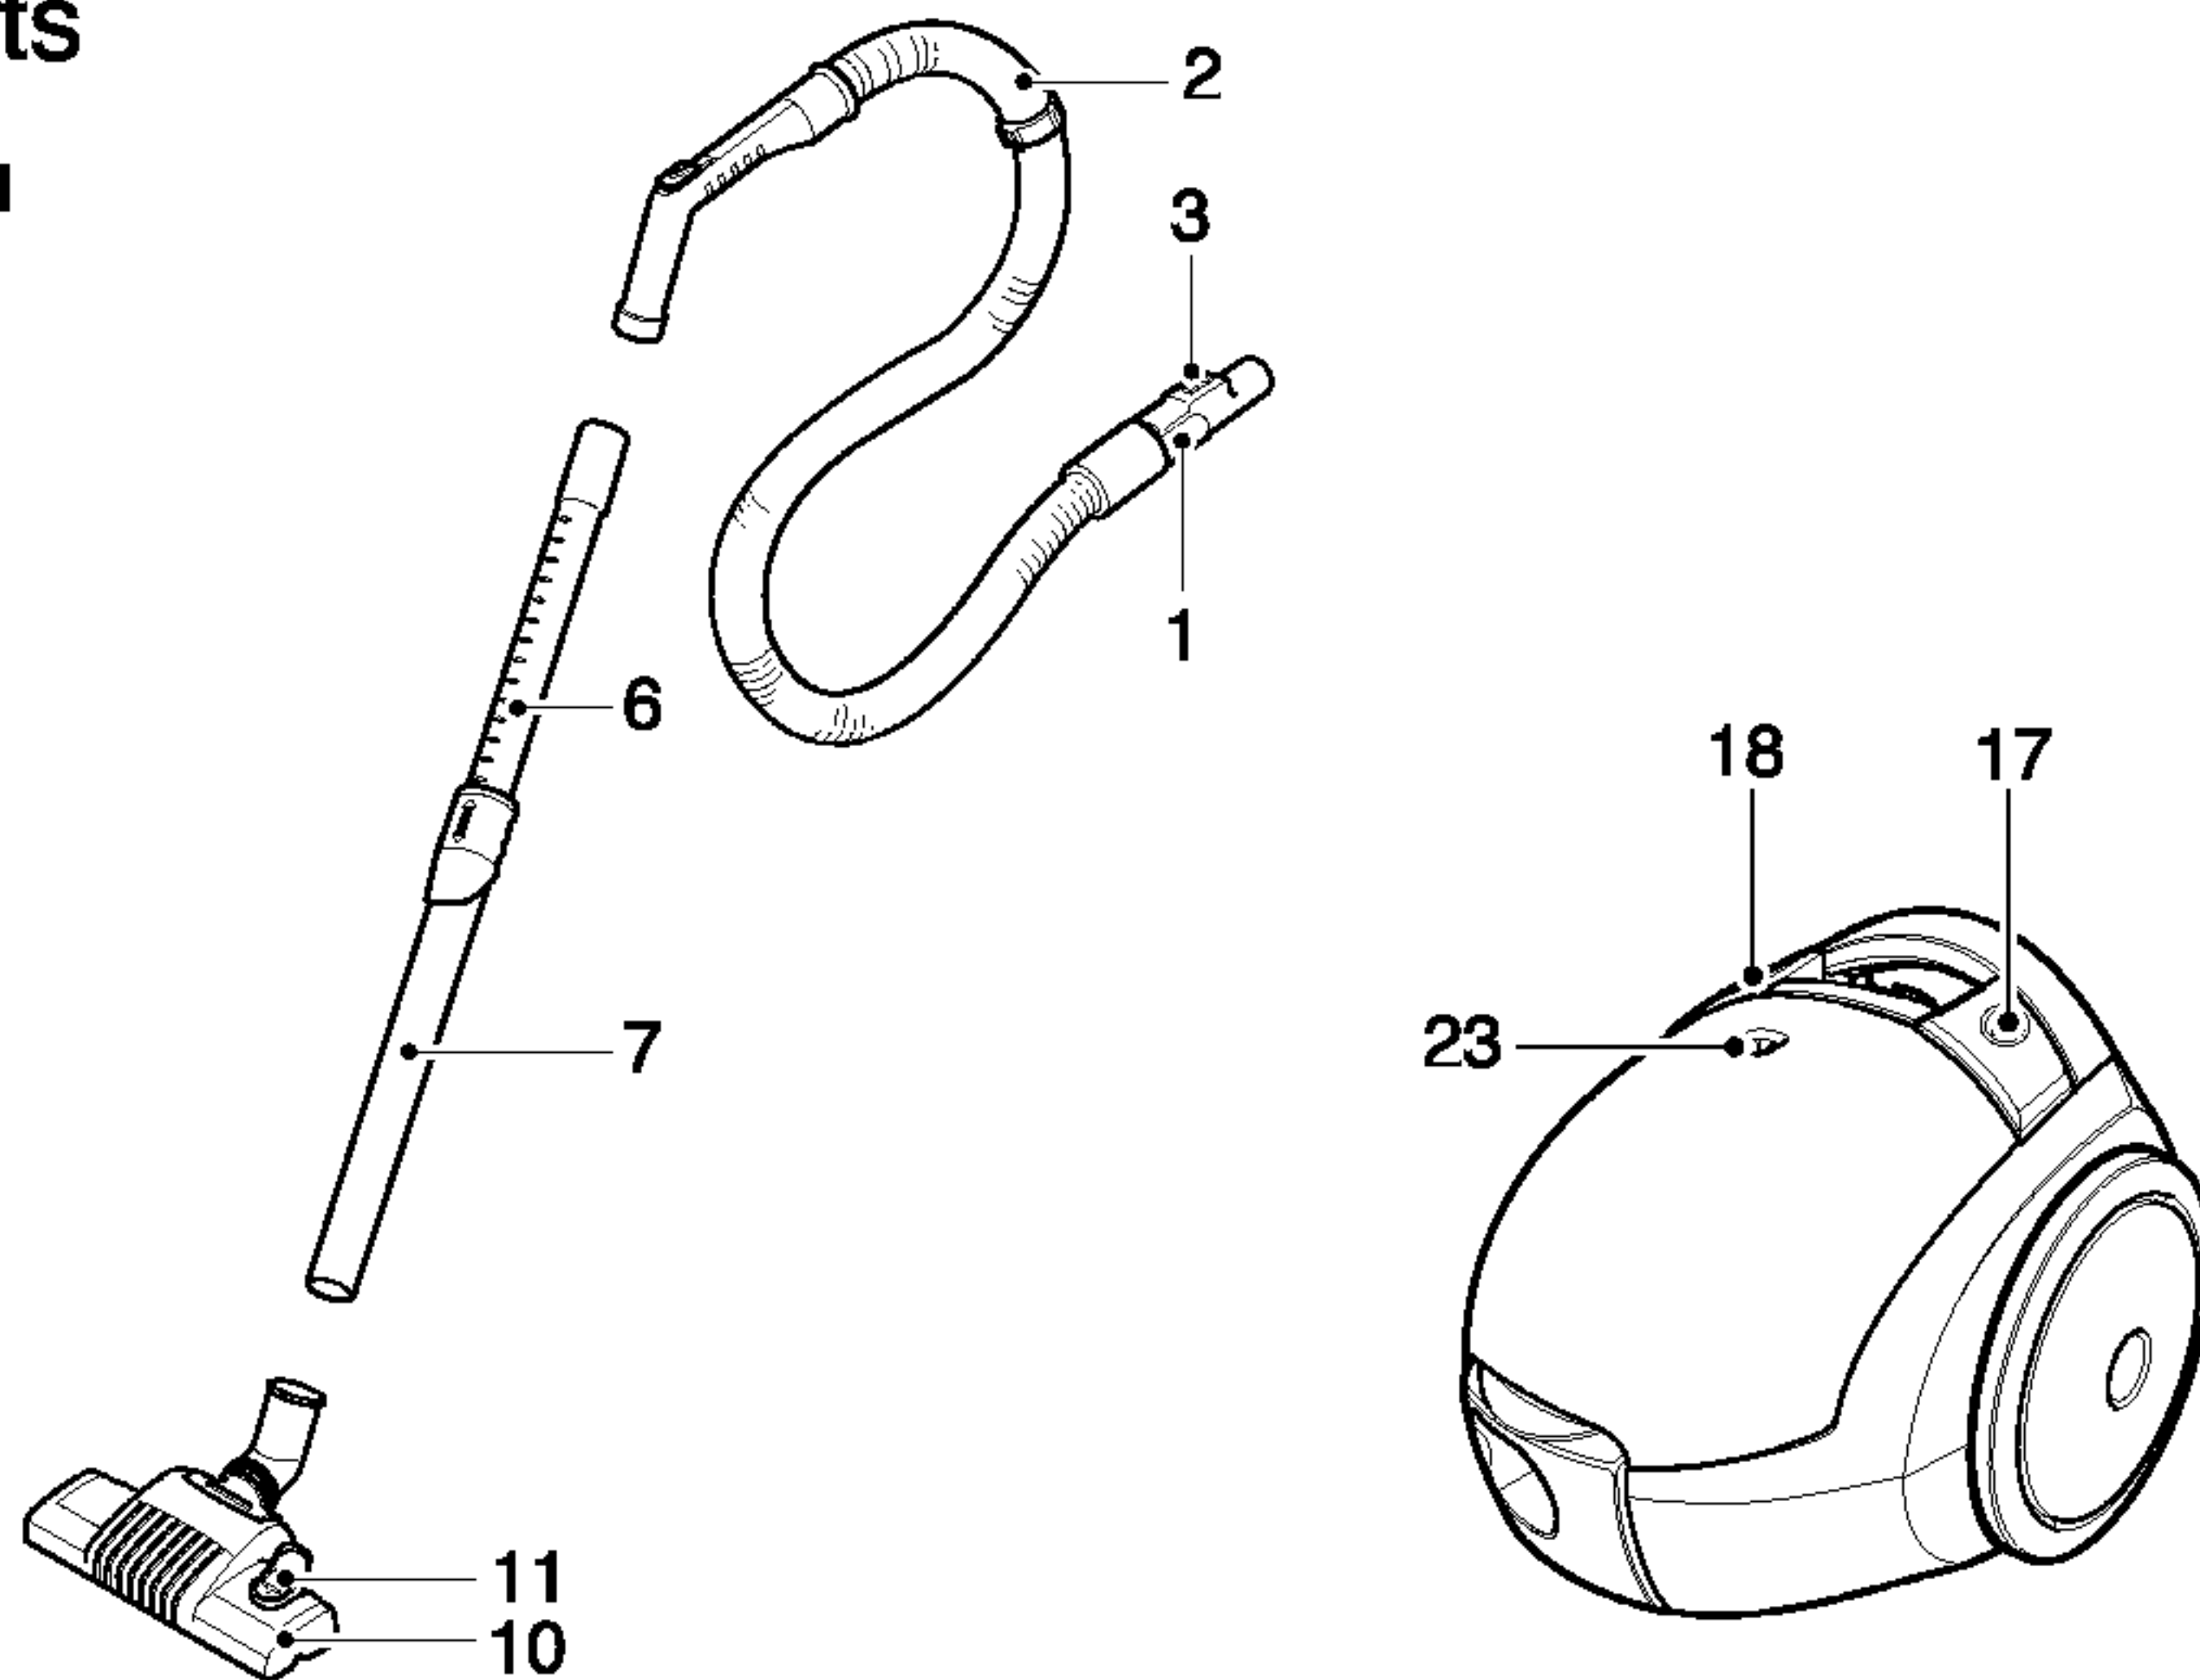


Optional Parts

可選部品

■ The different figure and quantity of the following parts depend on the different models which you have bought.

下列部品的形象和數量根據你所購型號有所不同。

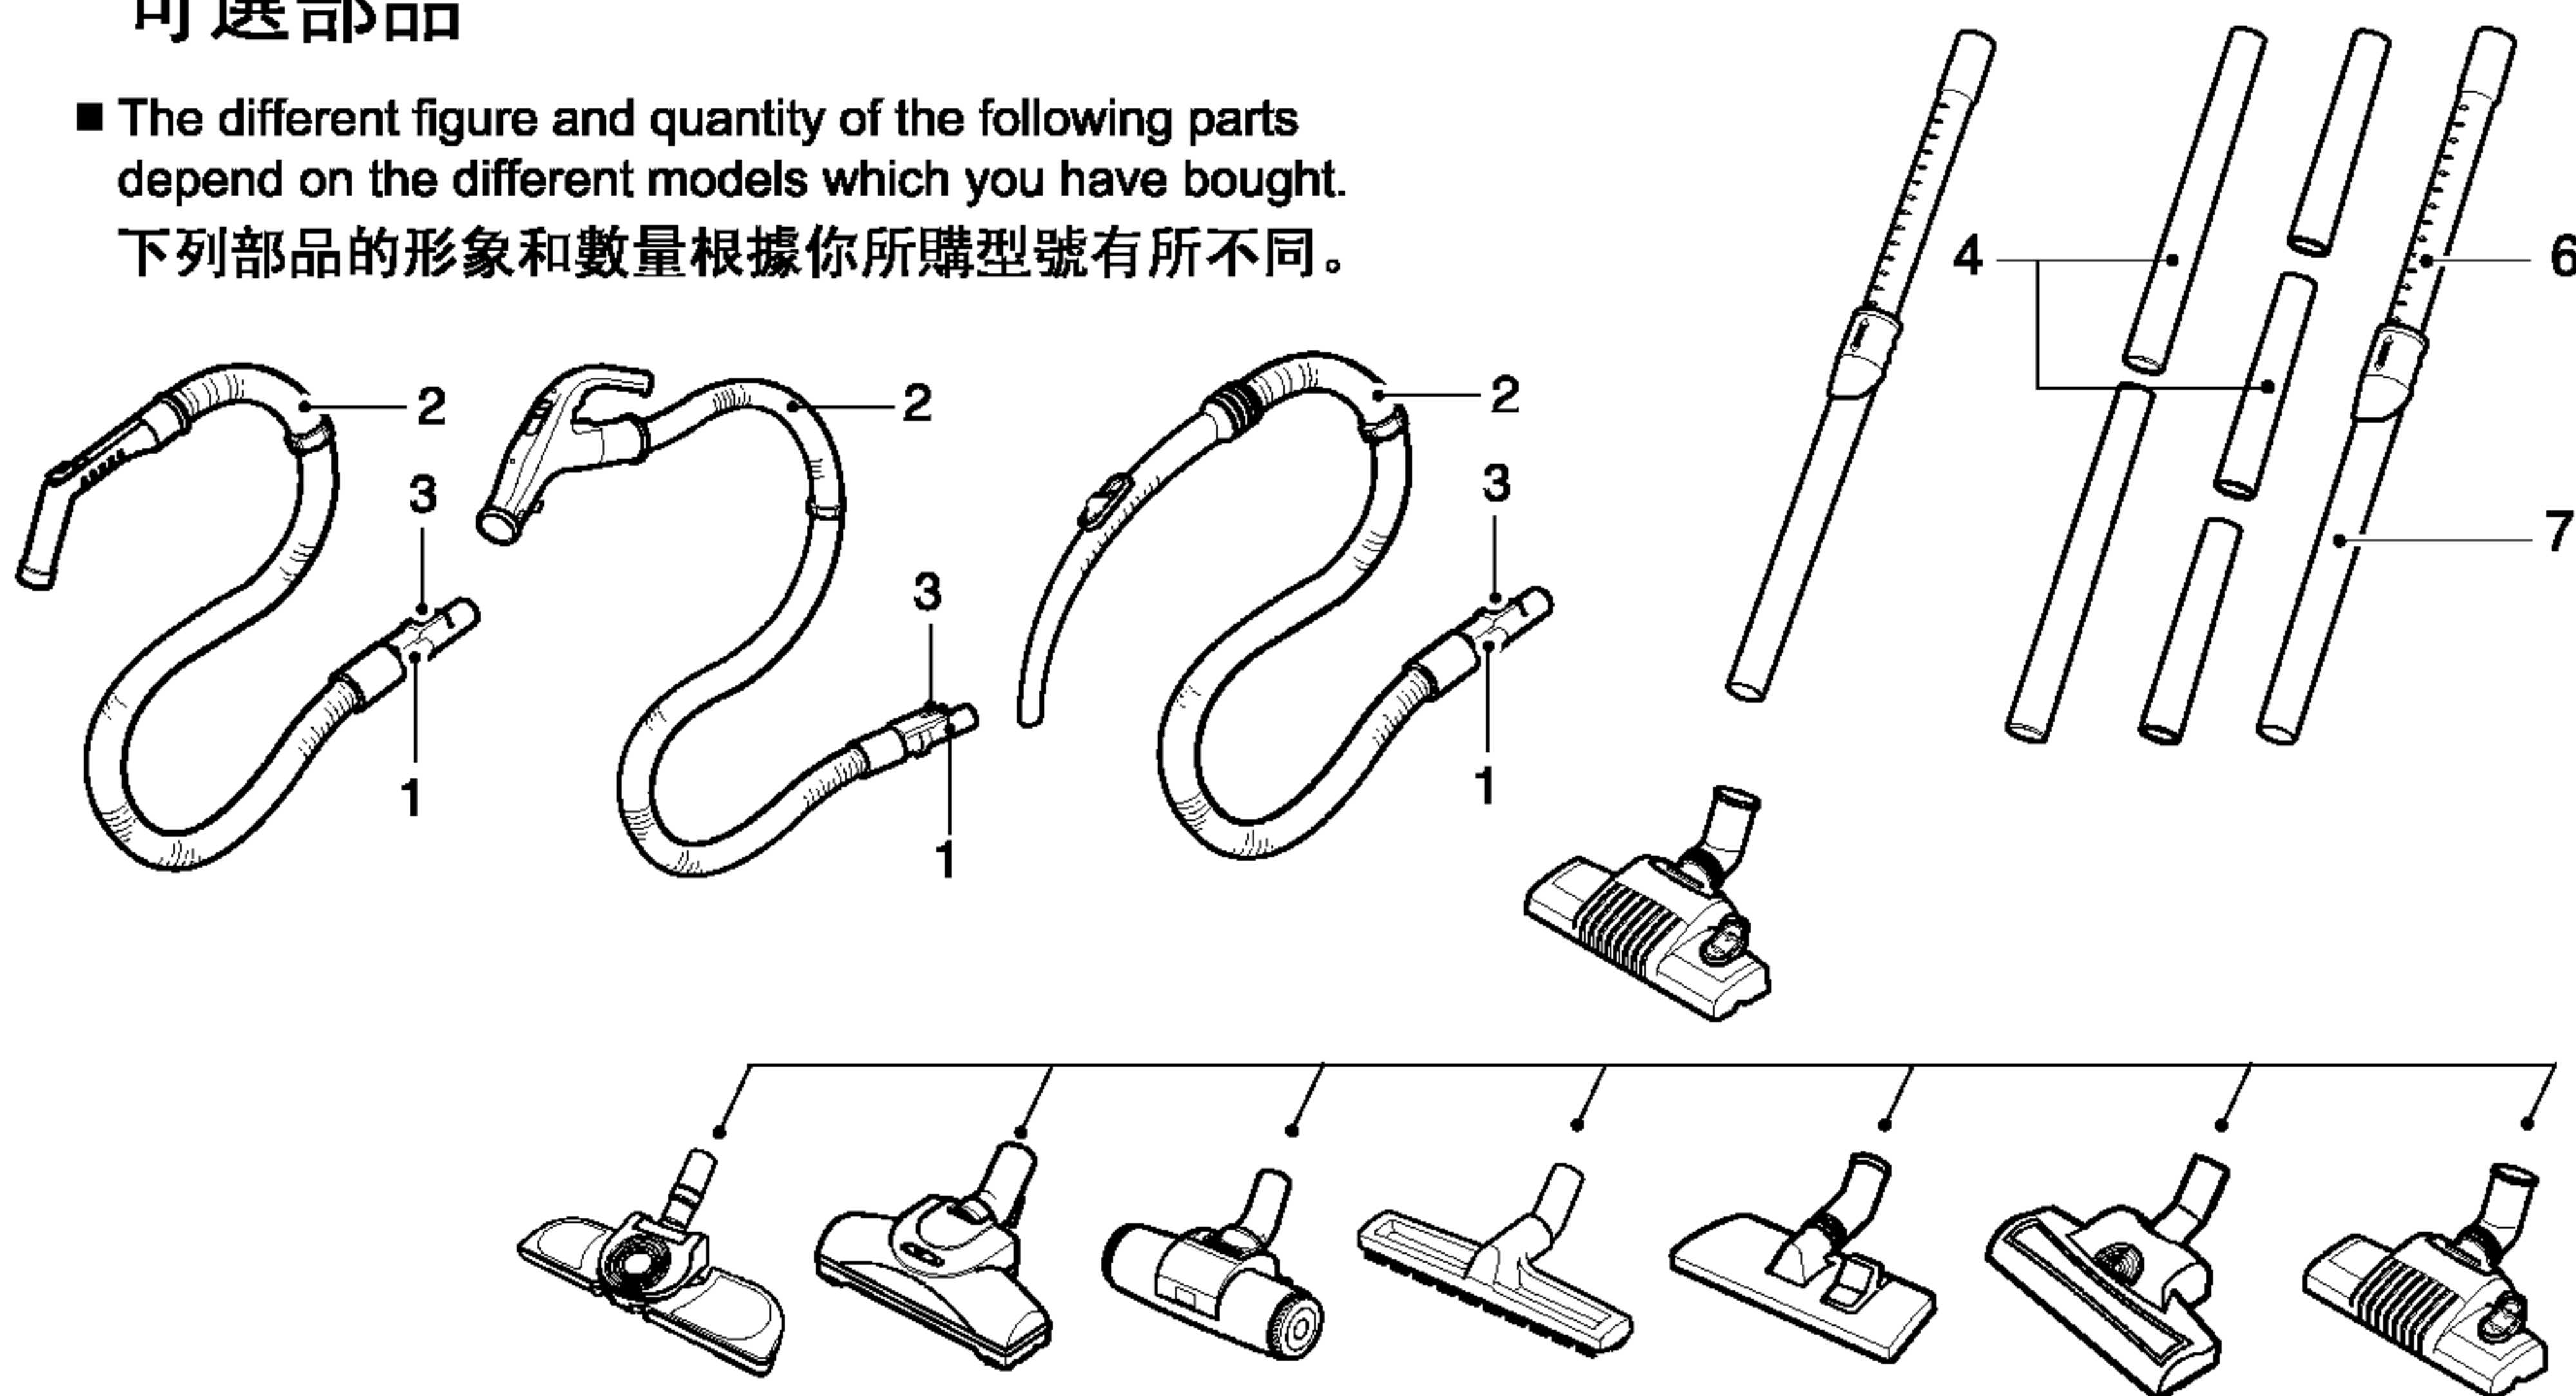
















Accessory

附件

■ These specifications are subject to change according to the agent / buyer's request.

這些附件的規格依代理商/銷售商的要求而定。

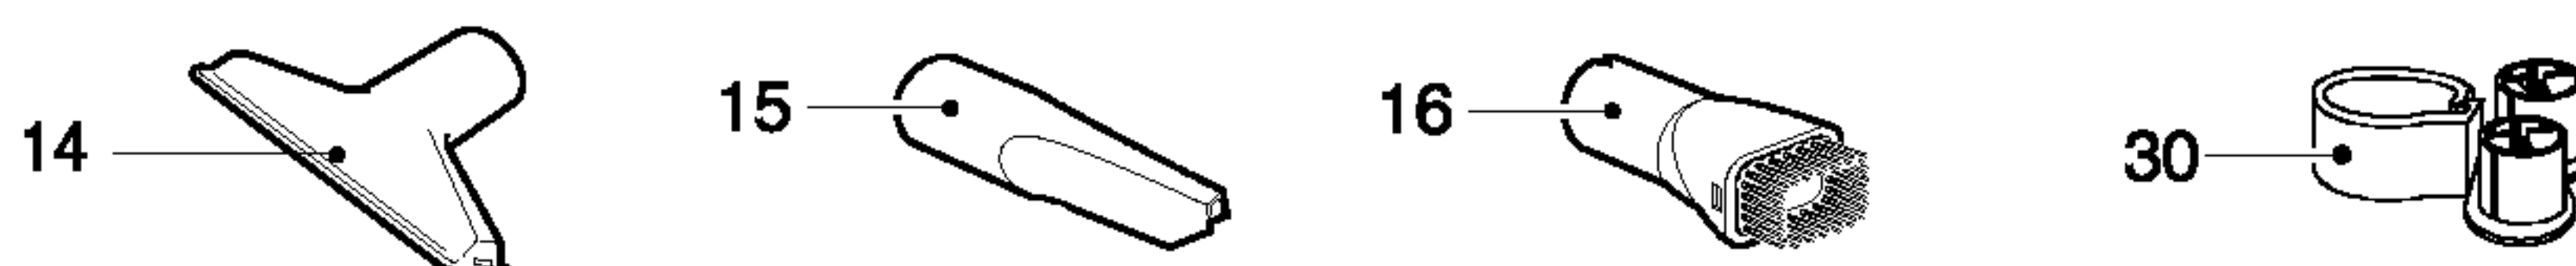

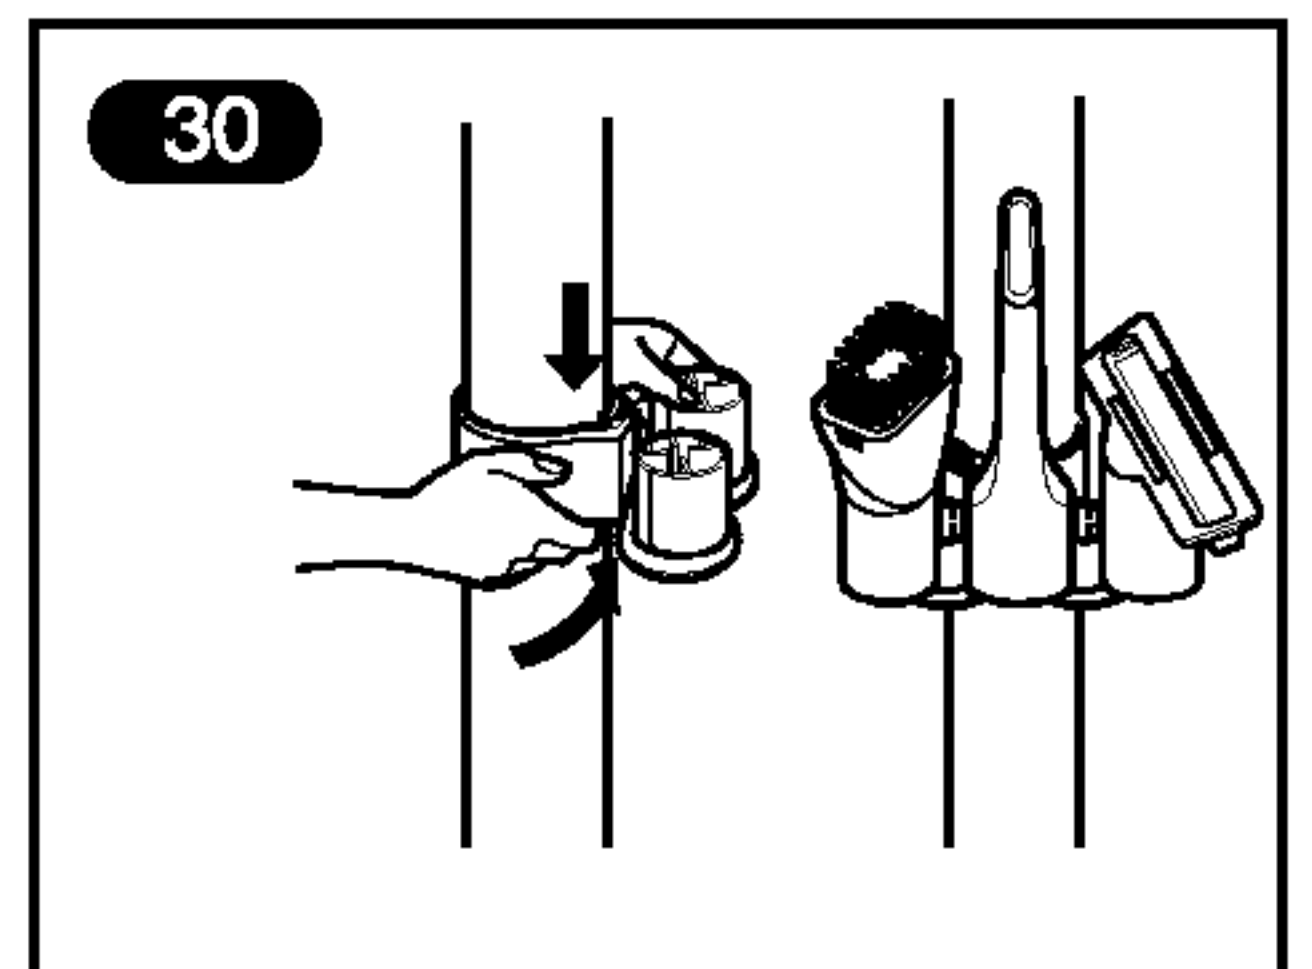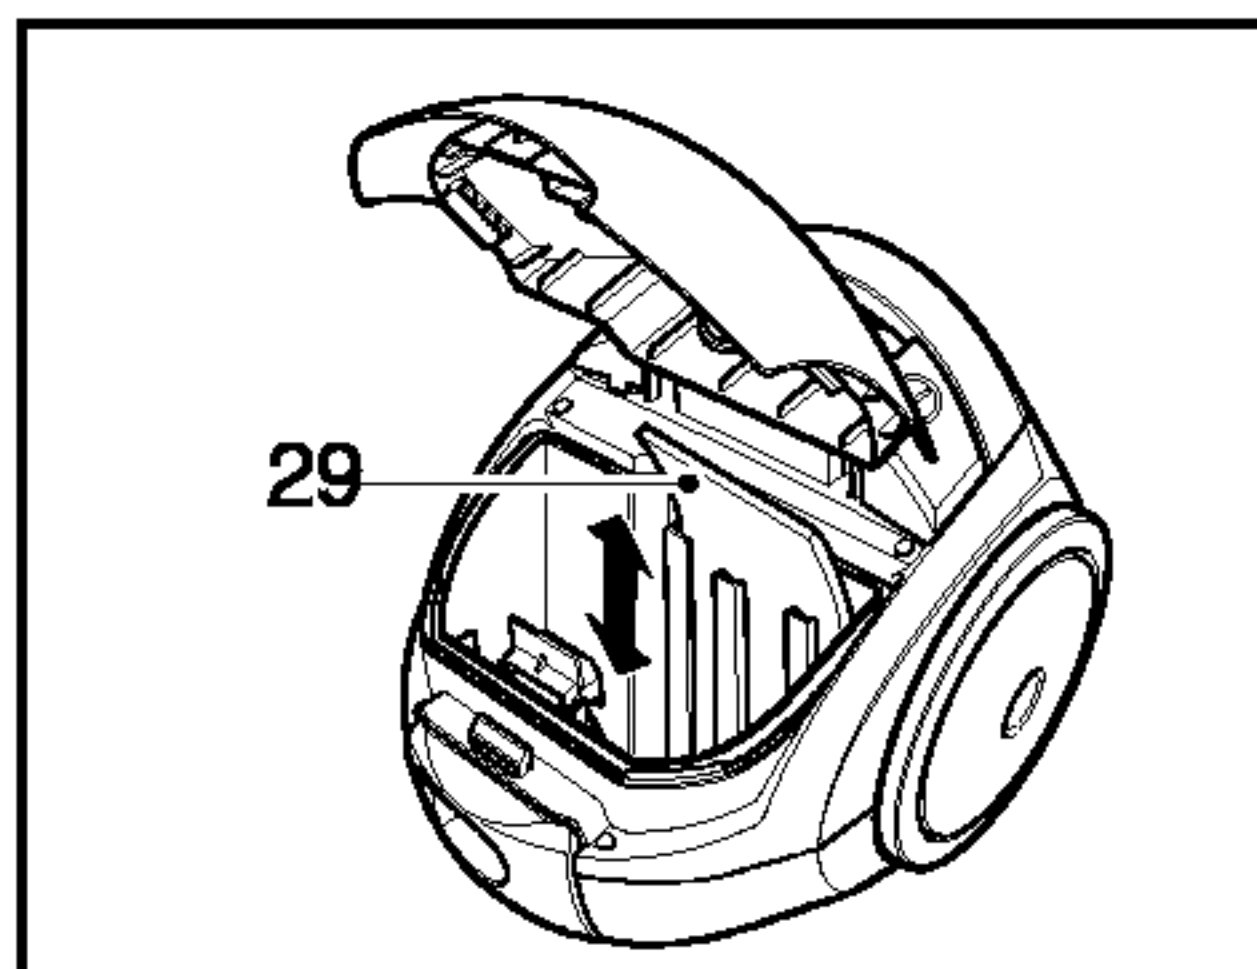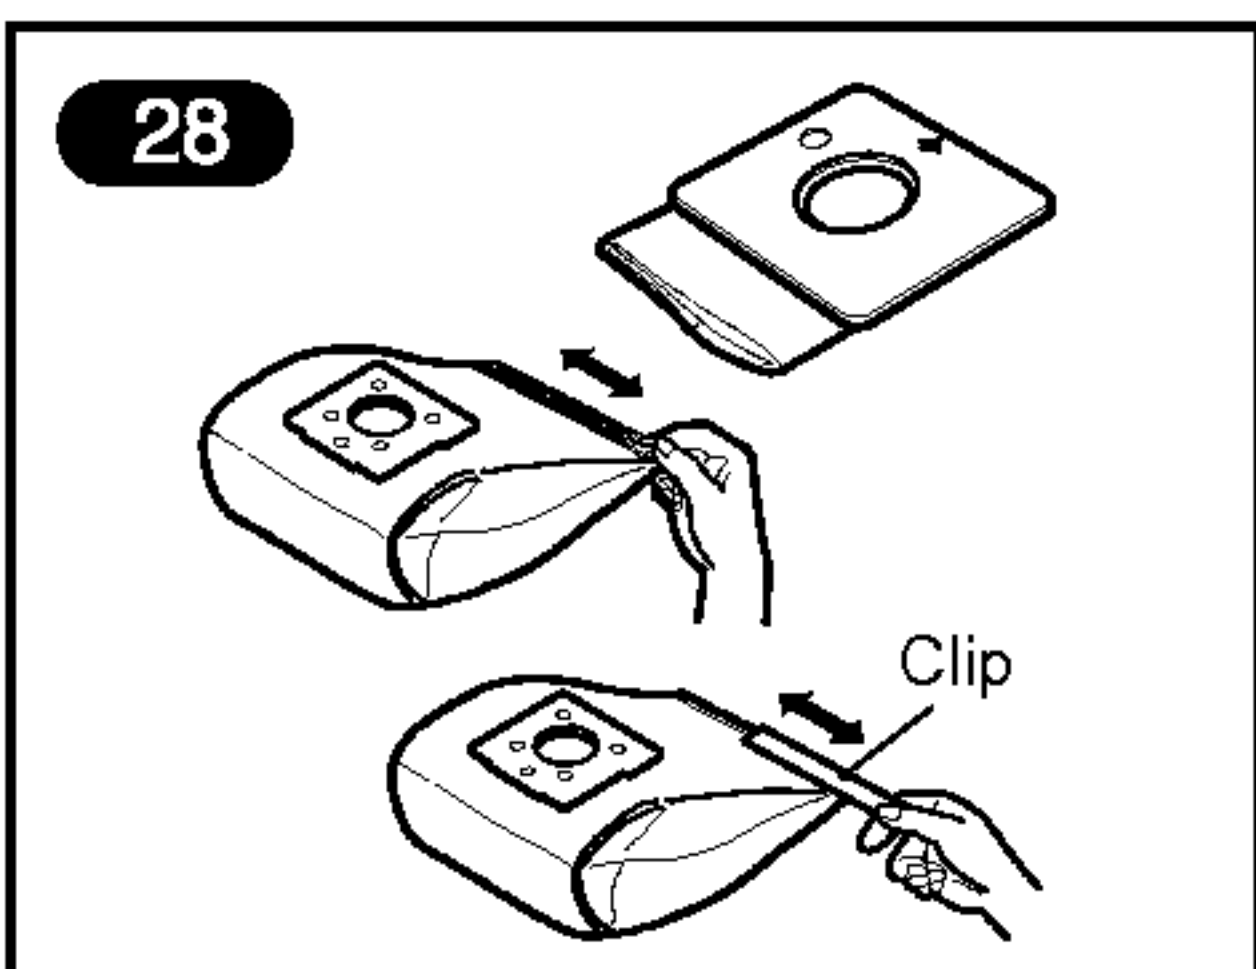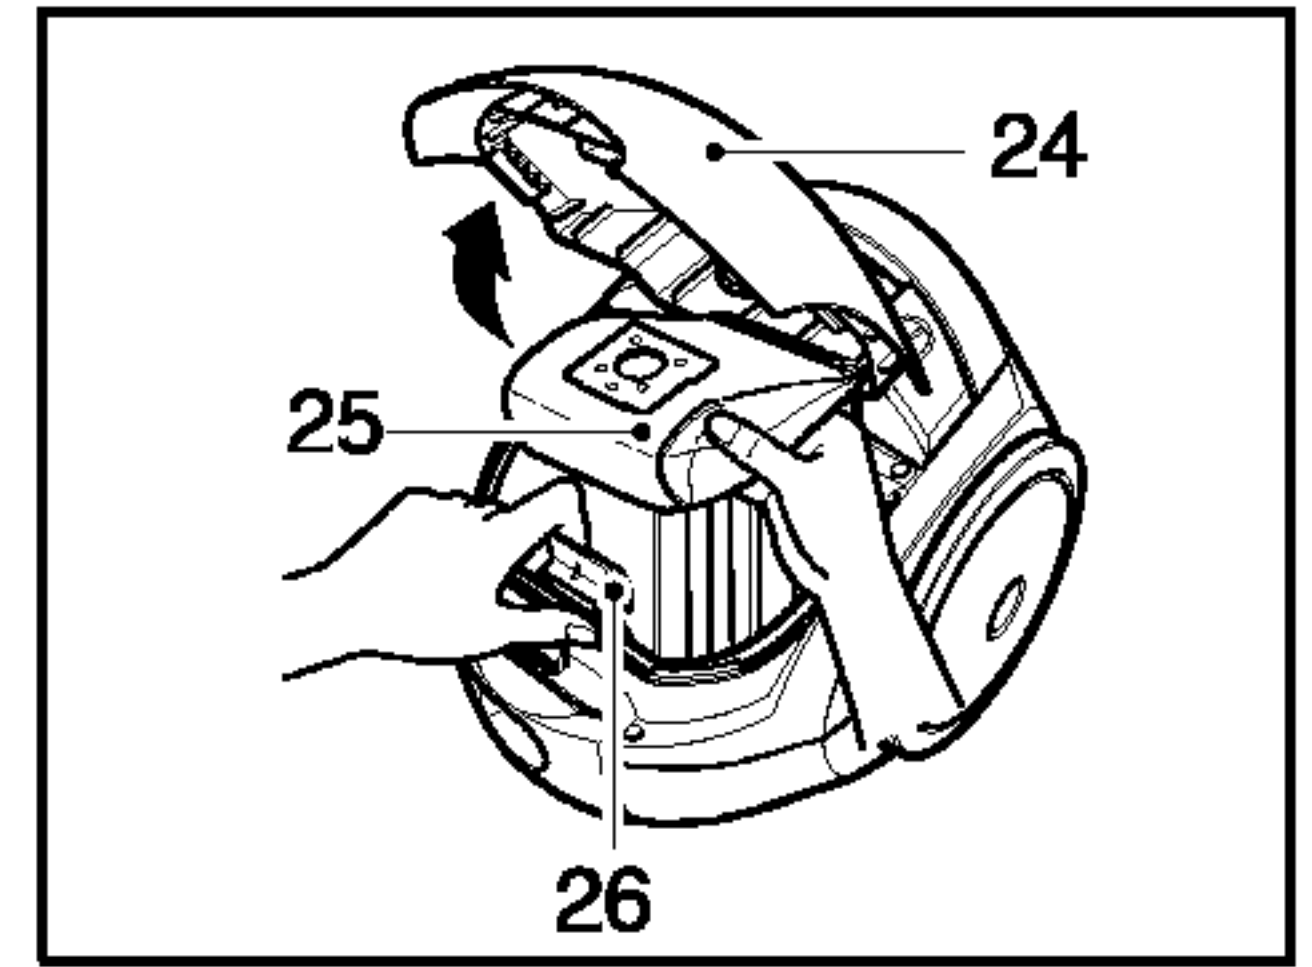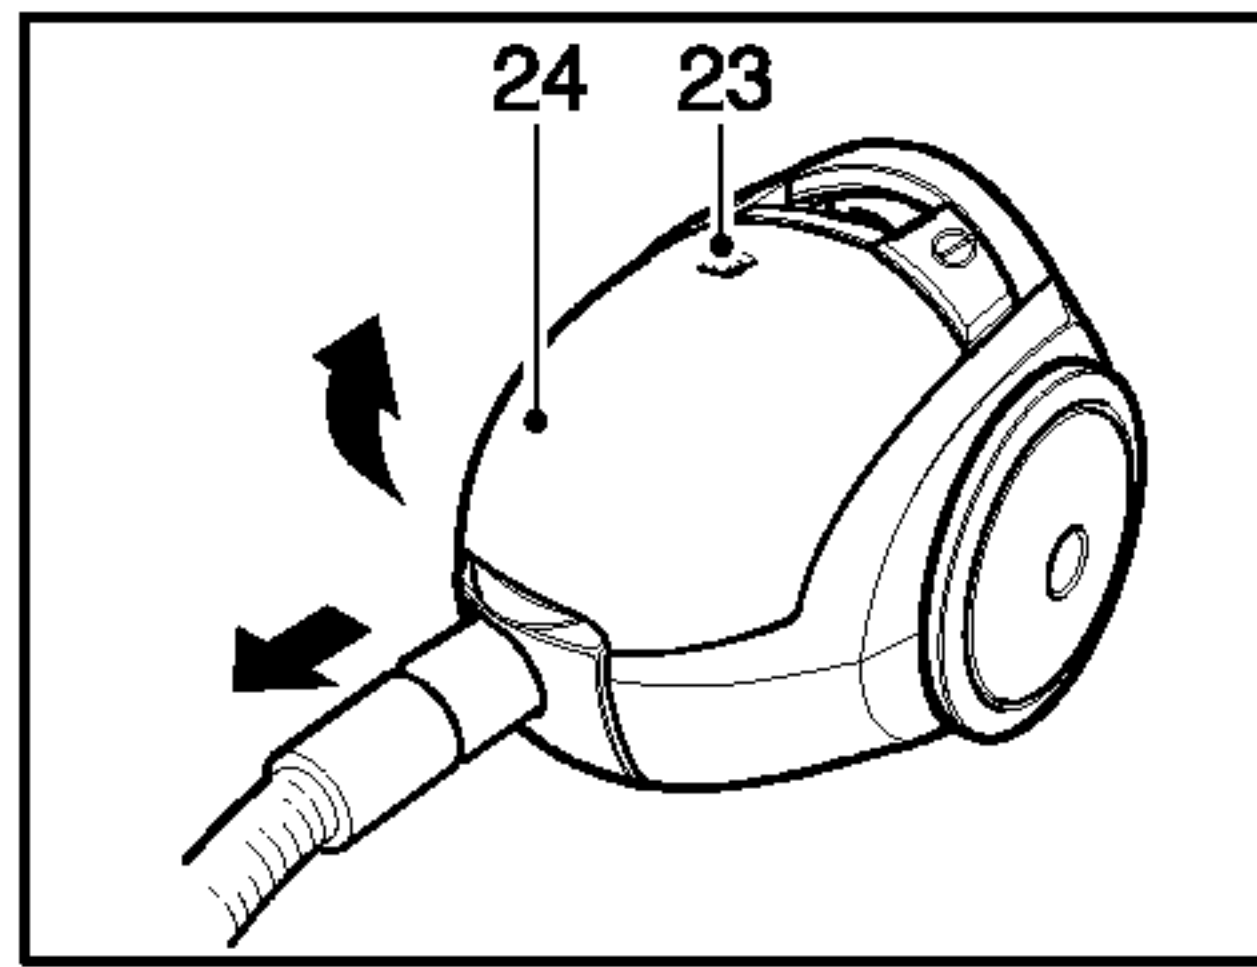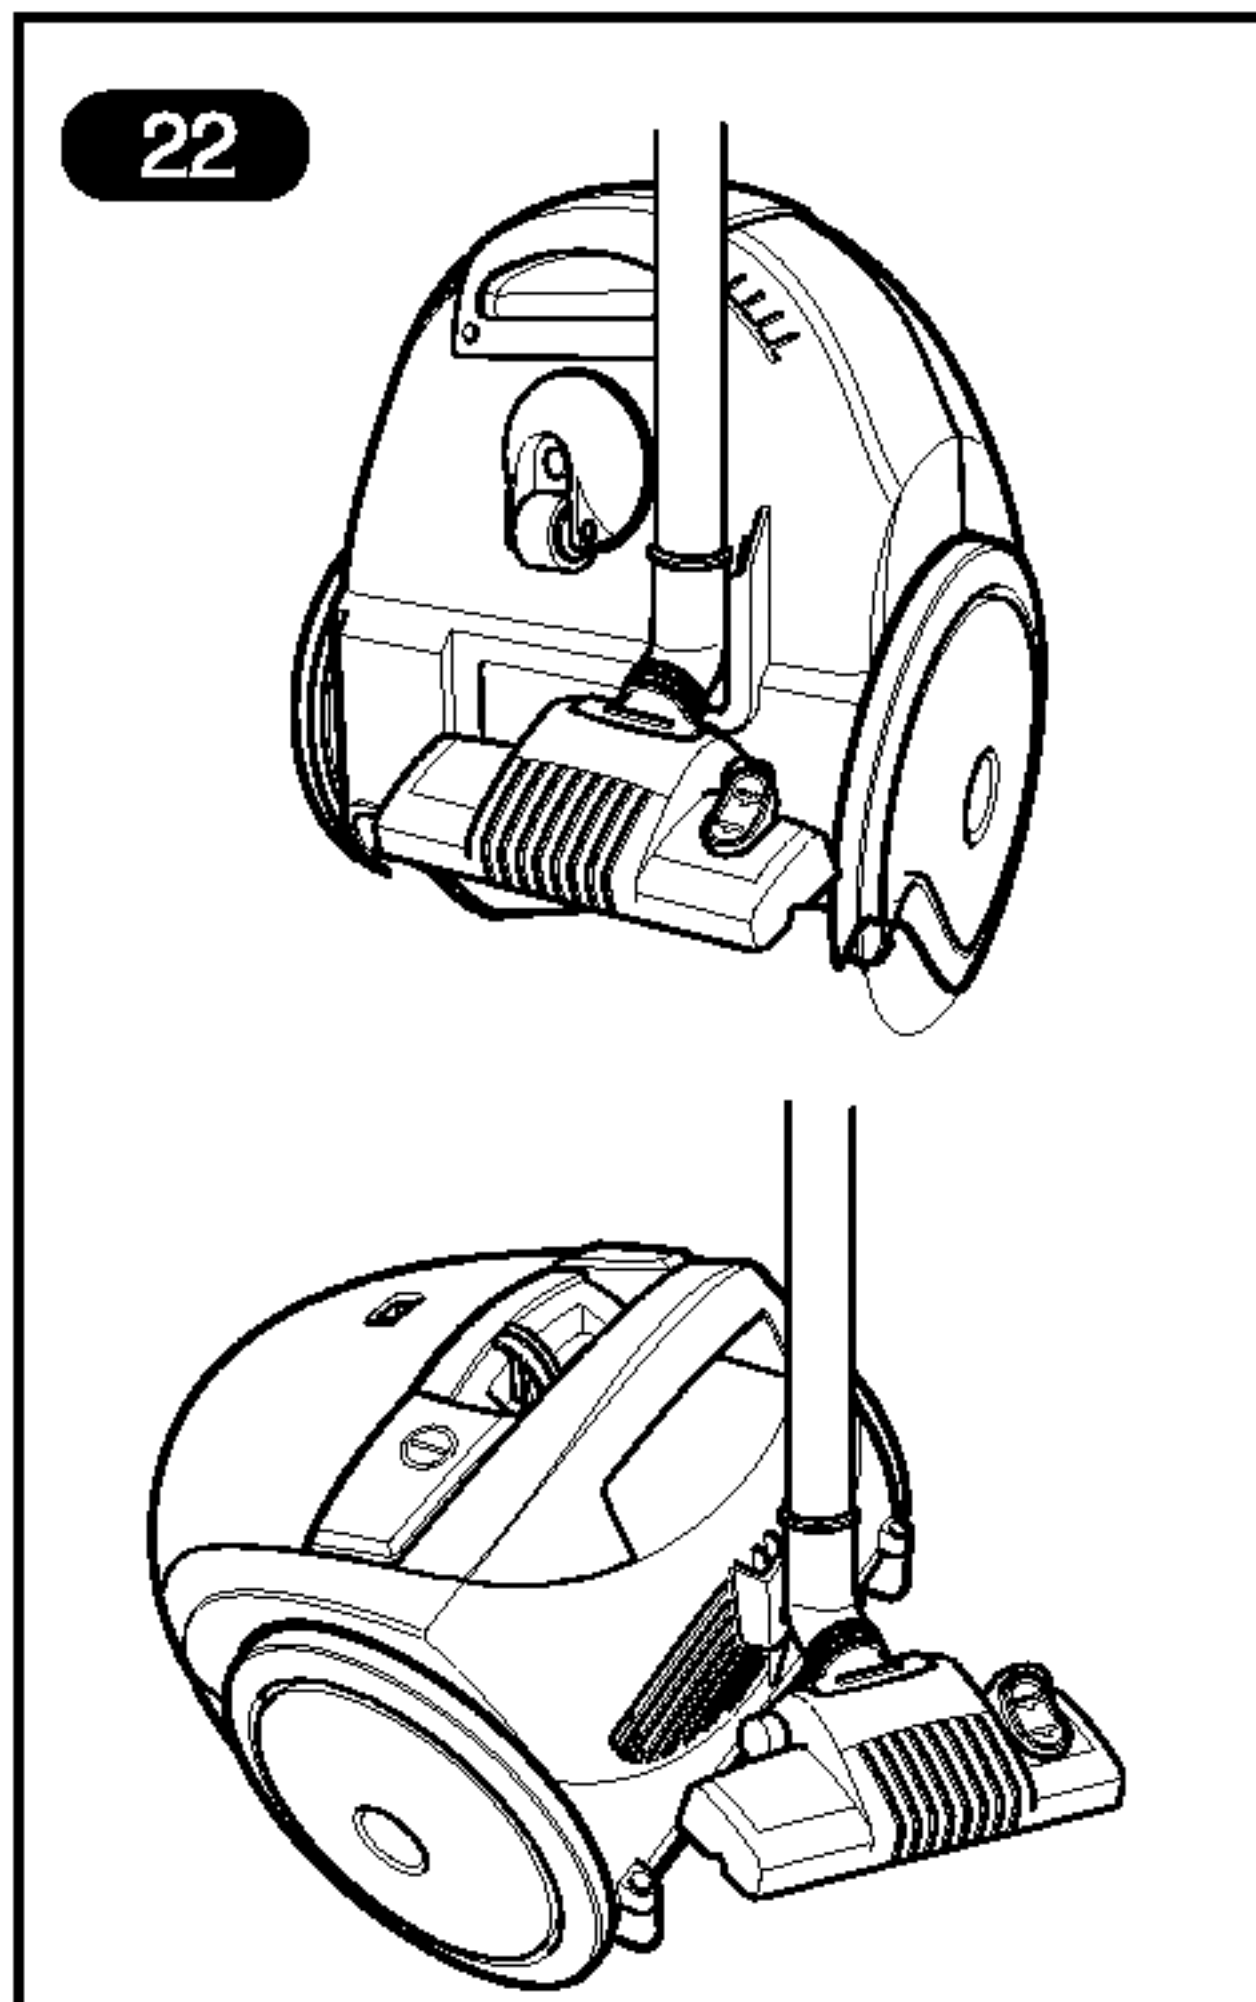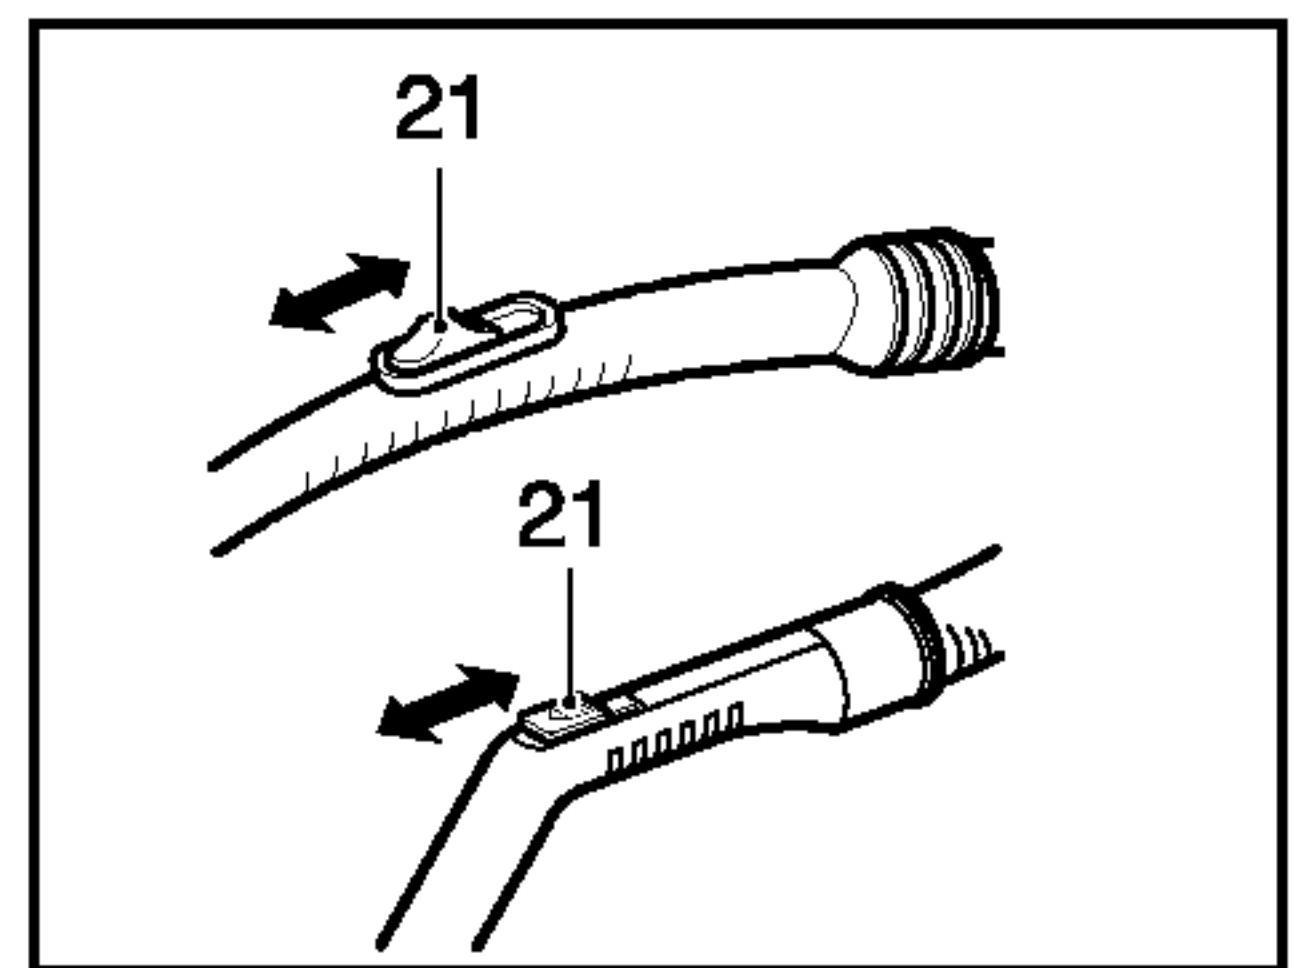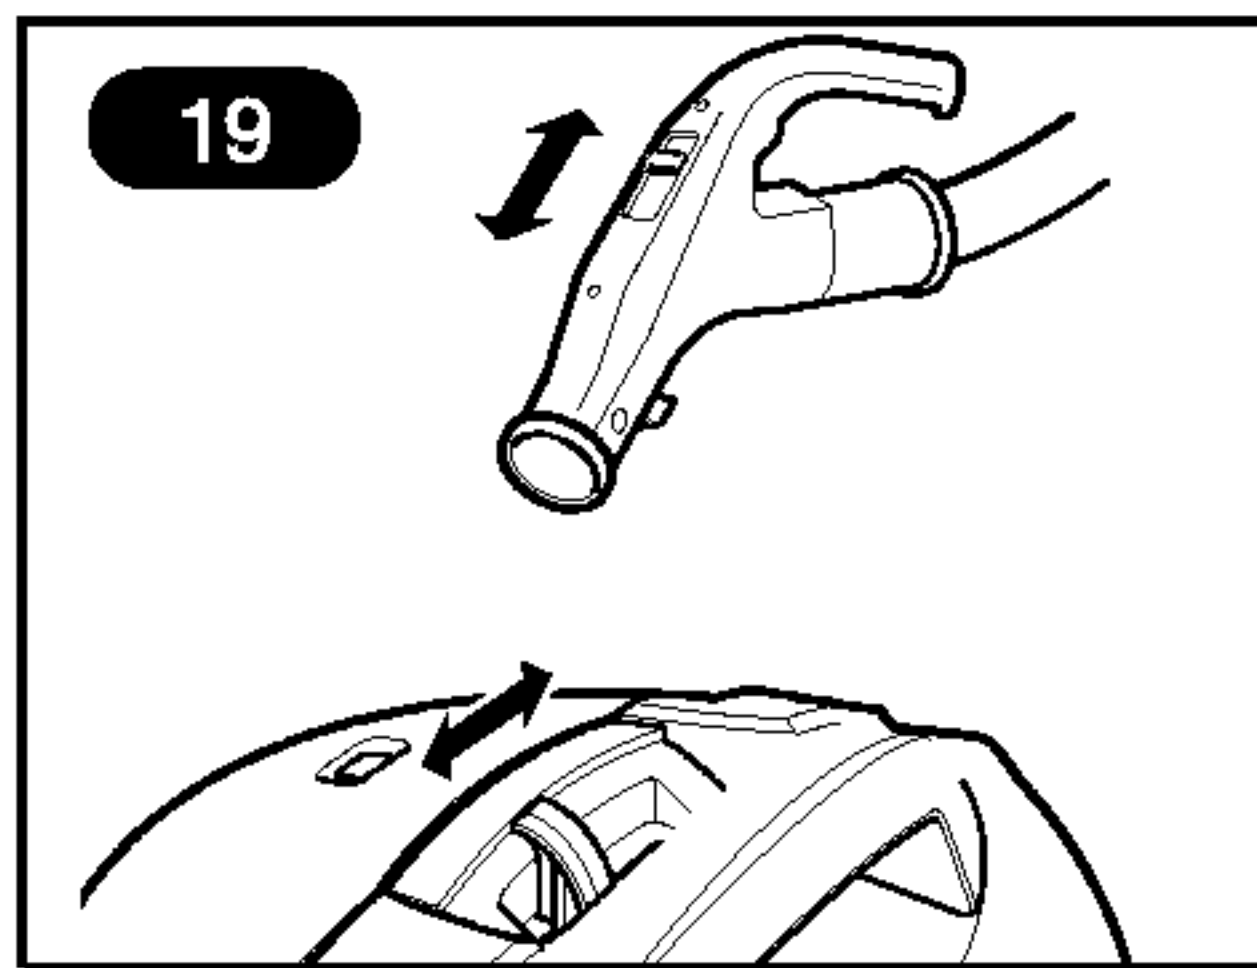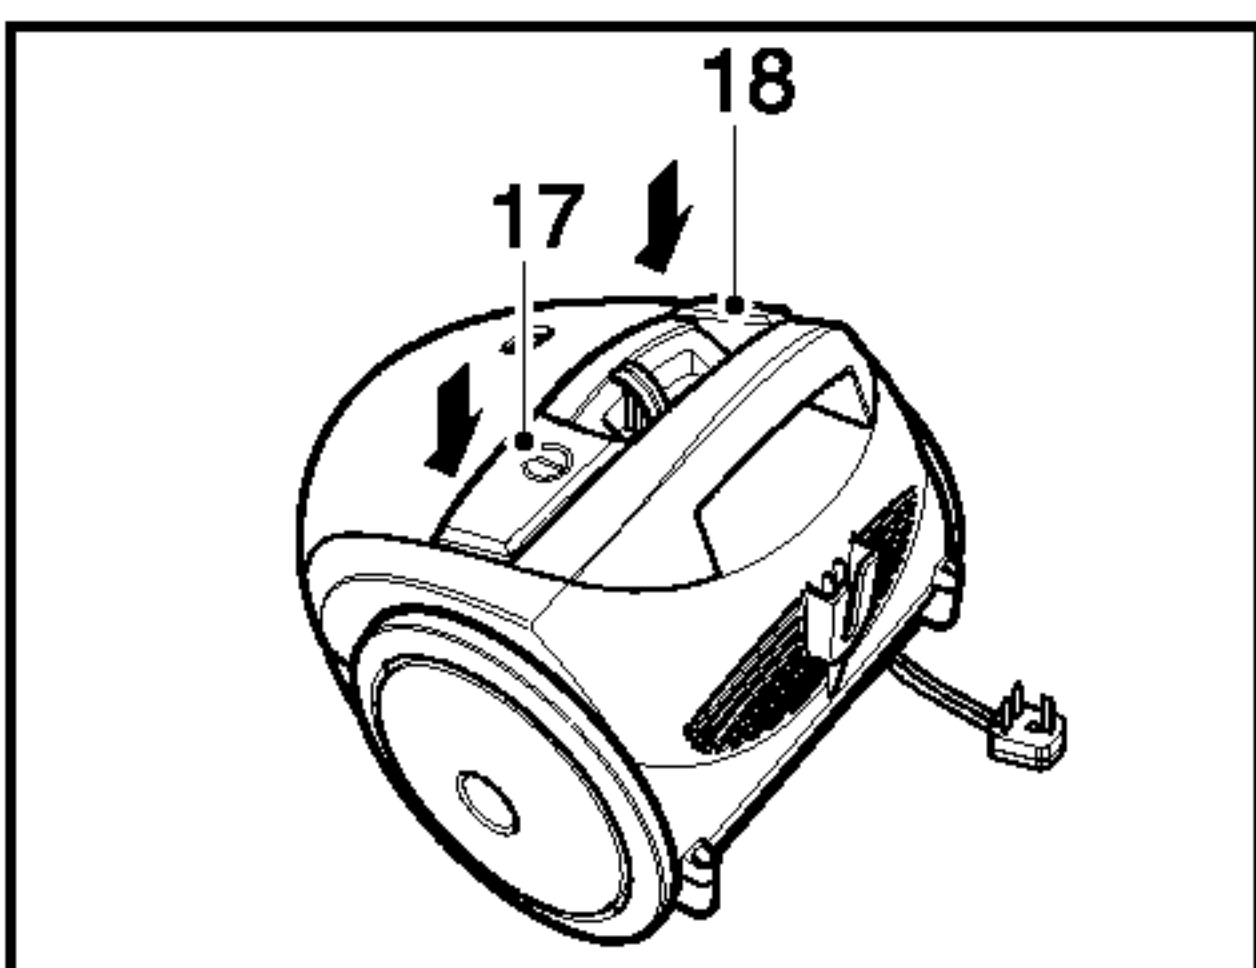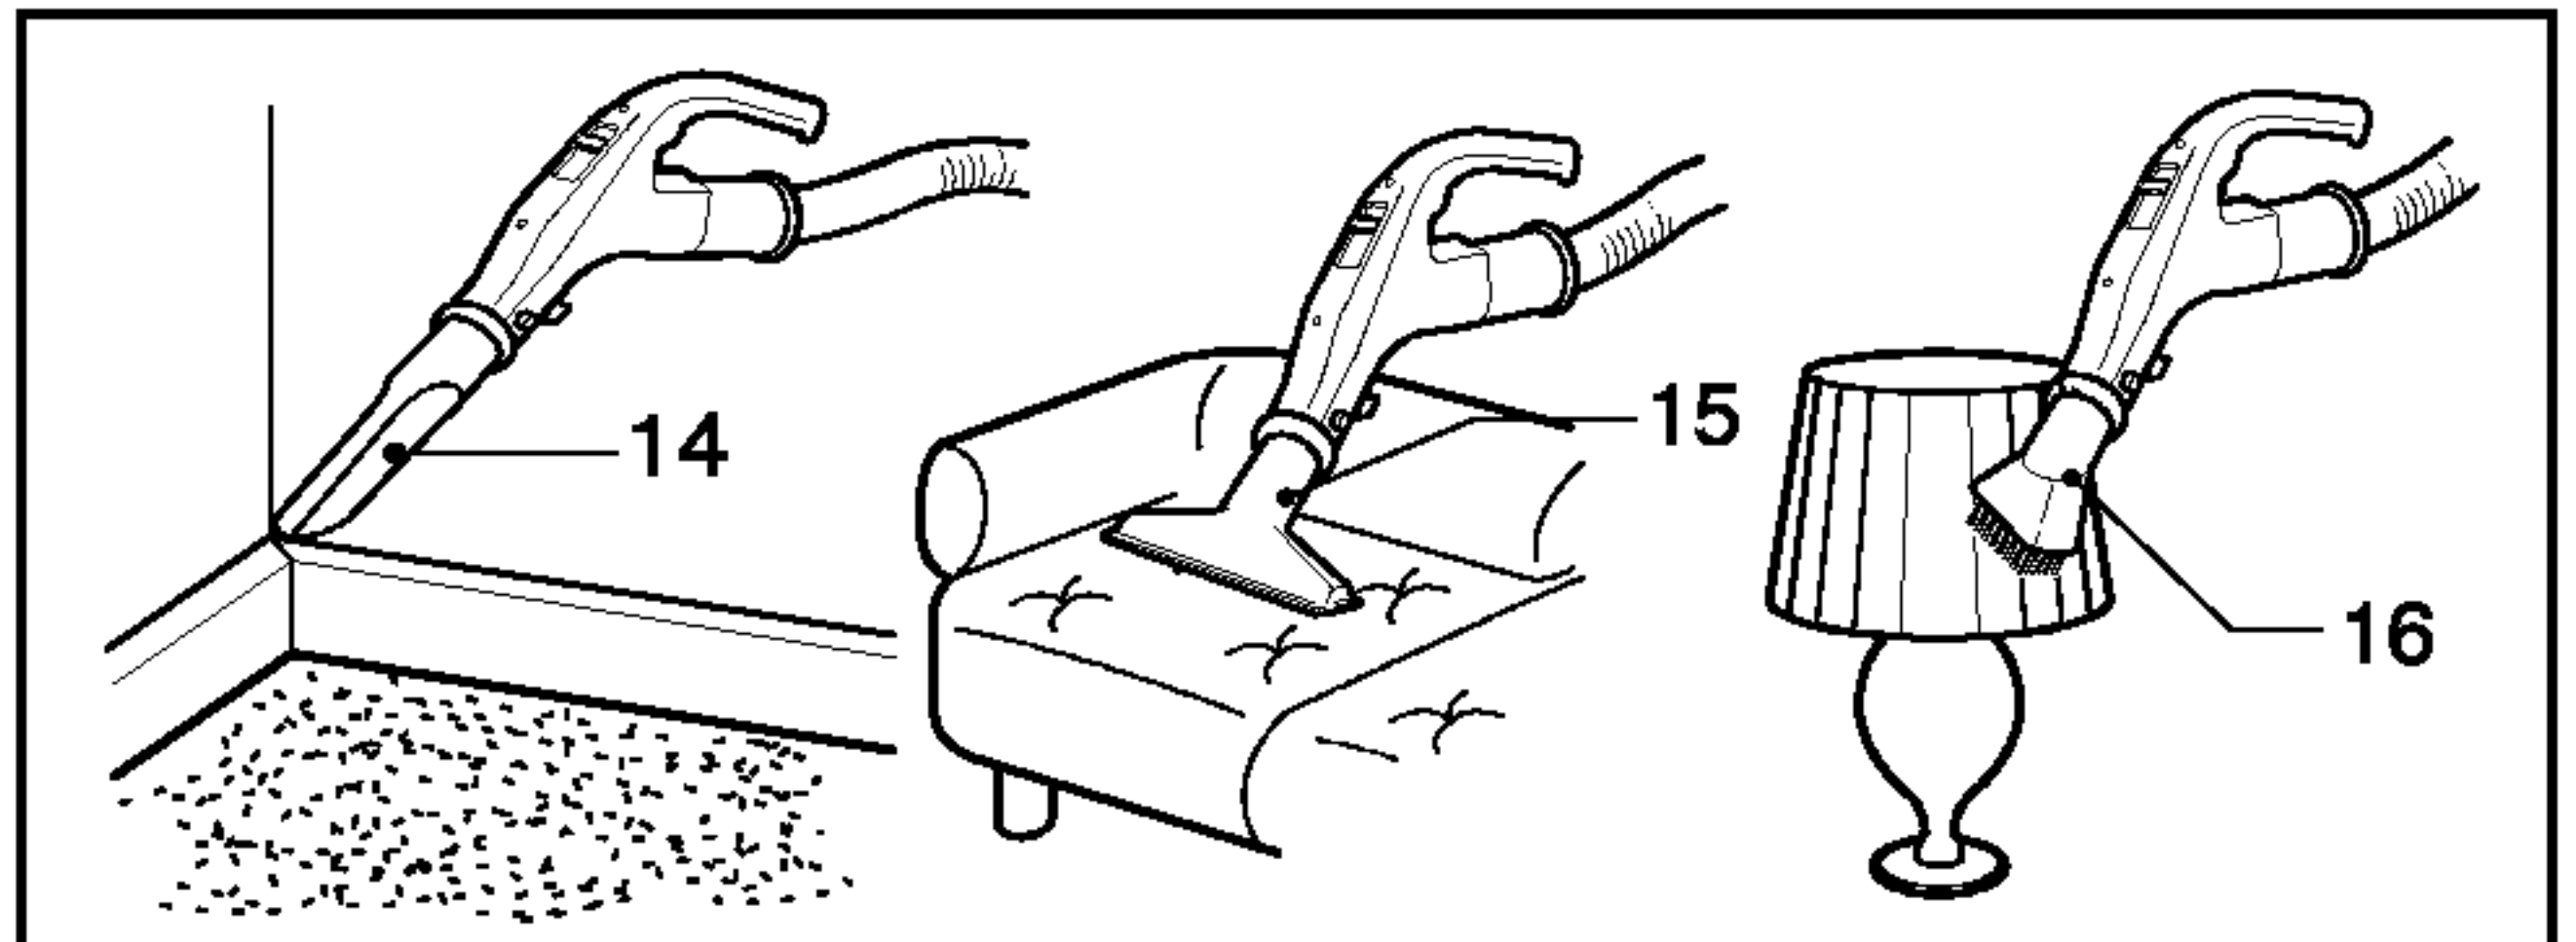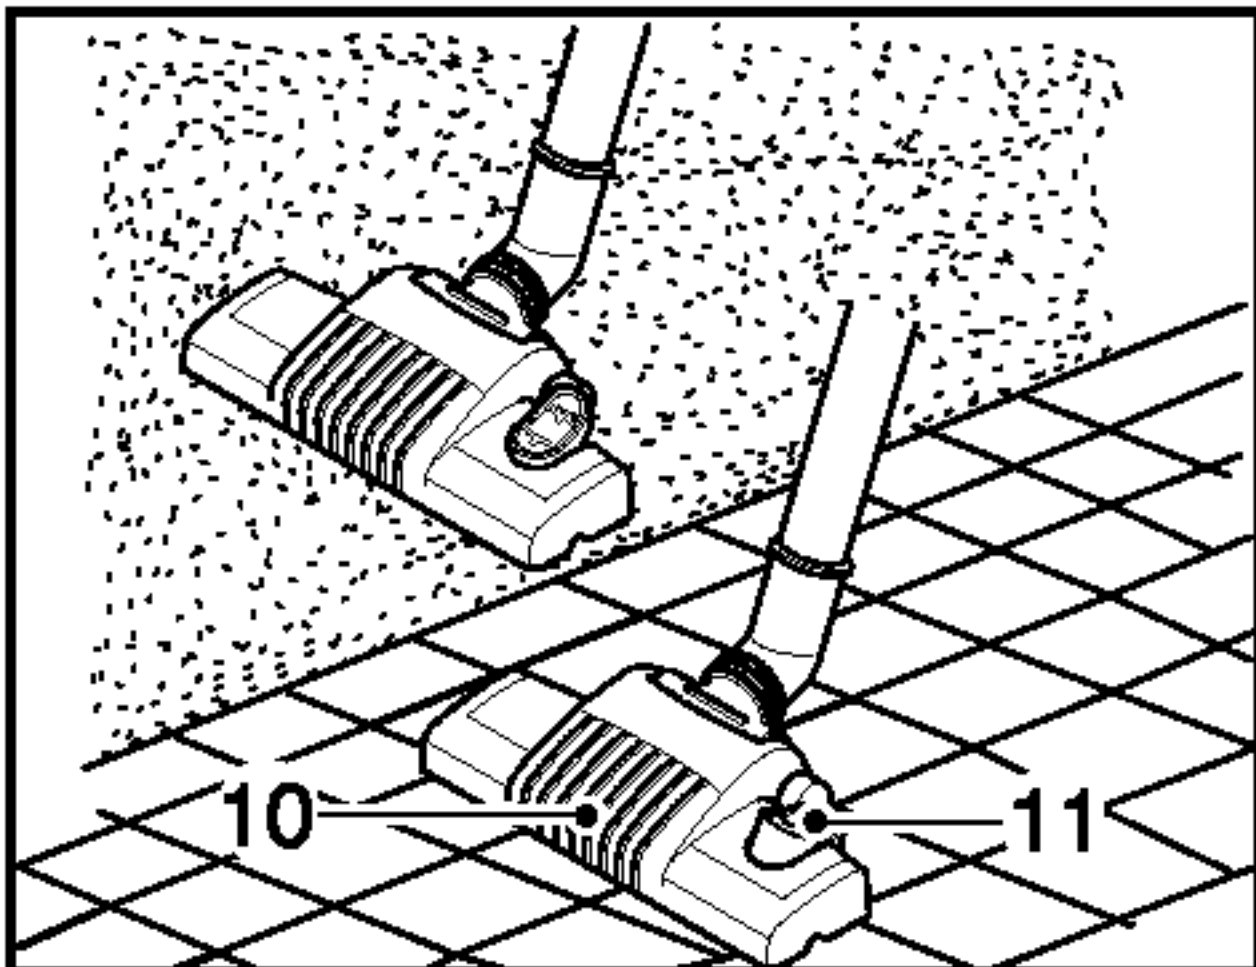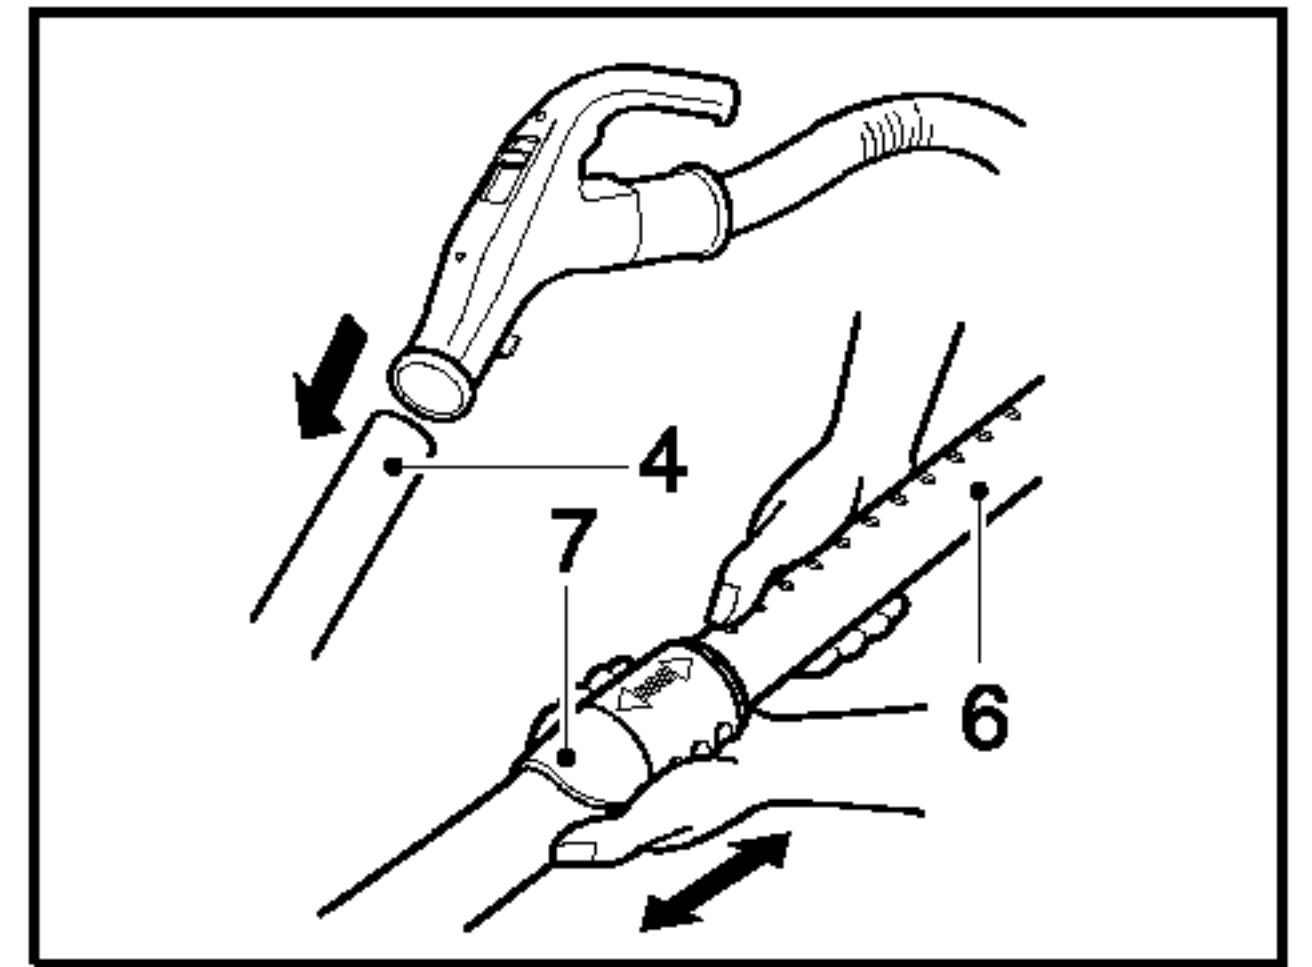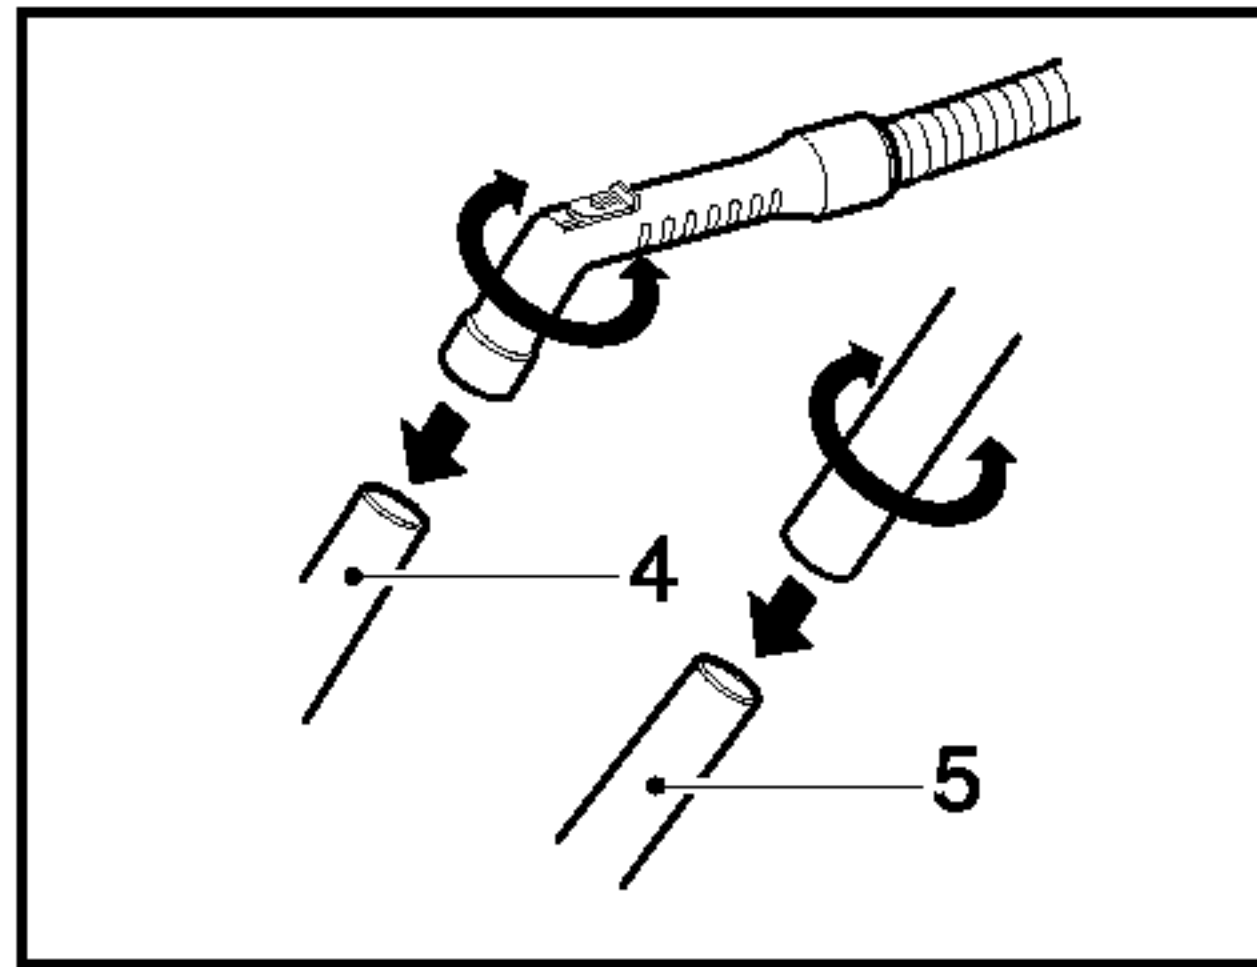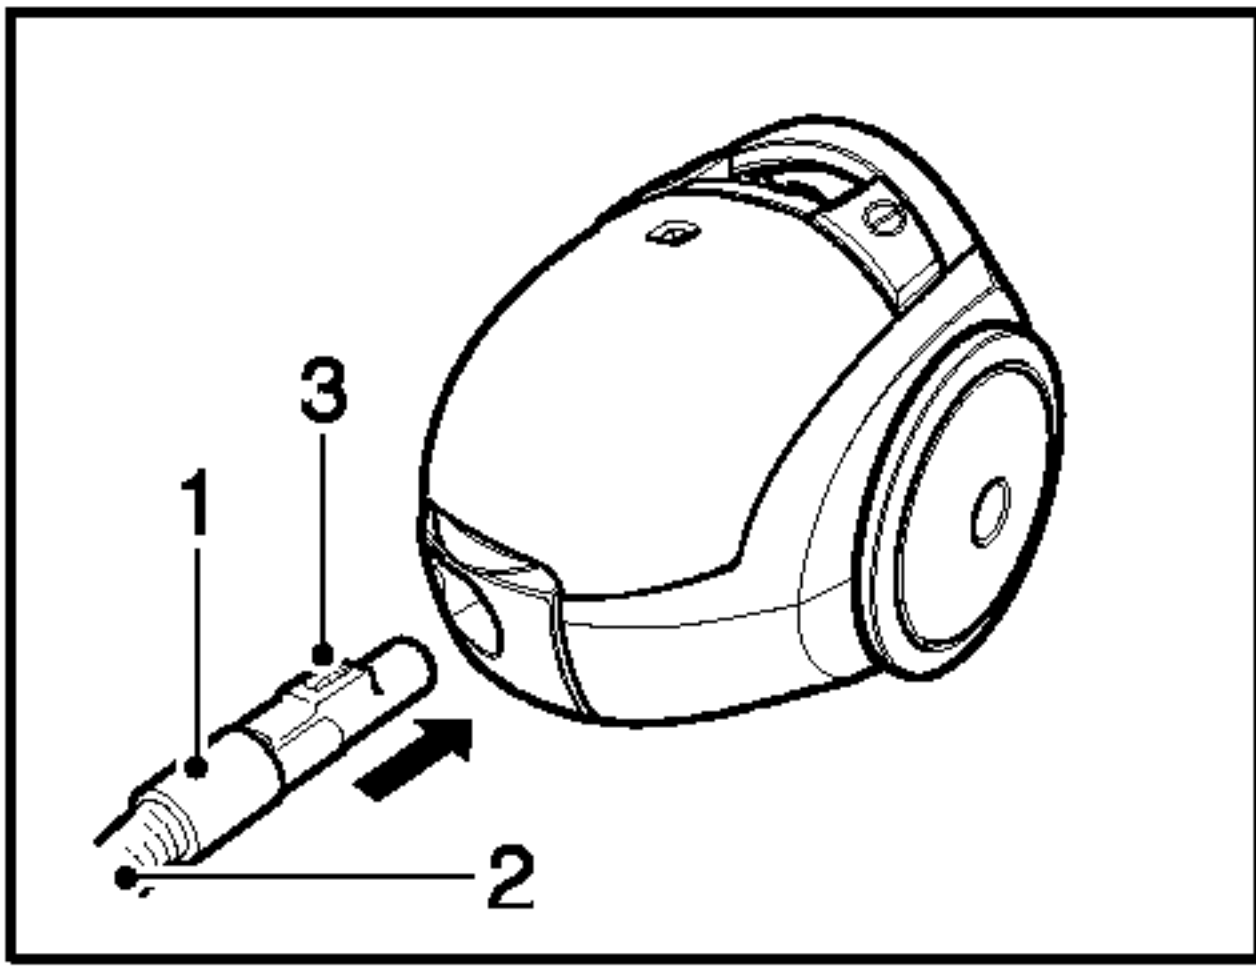

安全說明資訊

請閱讀以下所有資訊，裡面有本機組的安全、使用及維護的重要說明。

本機組遵守以下的歐盟規定 (EC Directives)：-73/23/EEC、93/68/EEC-Low Voltage Directive-89/336EEC -EMC Directive。

- 本設備非供幼兒或老弱人士在未被監督的情形下使用。應妥善監管幼兒，使其無法利用本設備進行遊戲。
- 所附的電源線毀損或故障時不可使用本機組。
- 如電源線已經損壞，必須由 LG Electronics 同意的維修人員更換，以免發生危險。
- 進行以下動作前，請務必關掉本吸塵器：
 - 更換集塵袋
 - 更換或清潔濾網。
- 如果沒有插入集塵袋，蓋子就無法關上。請勿使用蠻力！
- 請勿用吸塵器吸起易燃或易爆物質 (不論是液體或氣體)。
- 請勿用吸塵器吸起灼熱的灰燼、餘燼等等或尖銳物品。
- 請勿用吸塵器吸起水或其他液體。
- 您用有旋轉刷輪的吸塵器清潔時：
 - 請勿把手伸到運轉中的刷輪裡。

警告！

避免任何傷害，插座請使用13安培保險絲

如何使用

接上彈性軟管

把彈性軟管 (2) 上頭 (1) 的那一端壓進吸塵器上的連接點。

如果要把彈性軟管拔出吸塵器本體，請按下頭那邊的按鈕 (3)，然後往上拉起。

結合各種管子 (依型號而定)

- 金屬管 (4, 5)
 - 稍微旋轉一下，把二根管子接起來。
- 伸縮管 (6)
 - 把彈簧栓 (7) 往前推。
 - 把管子拉到所需的長度。
 - 放開彈簧栓就可以固定。

使用清潔頭和吸頭配件 (依型號而定)

把大的清潔頭和管子的尾端接起來。

- 2 段式清潔頭 (10) 配備踏板 (11)，讓您根據要清潔的地板類型變換刷毛位置。
硬質地板 (磁磚、拼花地板…)：採下踏板，讓刷毛降低。地毯或毛毯：採下踏板，讓刷毛升高。
- 尖嘴工具 (14)
用來清潔一般打掃不到的地方，像是蜘蛛網或沙發下方。
- 襯墊吸頭 (15)
用來清潔襯墊、床墊等等。線頭收集器方便您撿起線頭和絨毛。
- 除塵刷 (16)
用來清潔相框、傢俱外表、書籍和其他形狀不定的物體。
- 配件架可以用扣勾接到延長桿上。配件可以收納到架上 (30)。

如何插入和使用

把電源線拉到想要的長度，然後插到插座中。

按下按鈕 **(17)** 啓動吸塵器。如果要停止動作，請再按一下按鈕 **(17)**。

調整吸力大小

(依型號而定)

- 可以無段式增加吸力到「最大」。**(19)**
- 彈性軟管握把 **(20)** 有手控的空氣流動調節鈕 **(21)**，讓您暫時降低吸力。

攜行與存放

關掉電源並把機組的插頭拔掉時，請按下按鈕 **(18)** 來自動收線。

- 如圖，存放吸塵器時請使用存放固定扣 **(22)**。

更換集塵袋

清潔器設定為最大電力而且清潔頭離開地面時，如果「集塵袋已滿」指示窗 **(23)** 還是完全變成紅色，這時就要更換集塵袋。就算集塵袋這時看起來還沒有全滿也要更換。因為可能是非常多的細塵把集塵袋的細孔塞住了。

- 關掉機組，拔掉插頭。
- 取下軟管。
- 把蓋子打開 **(24)**

您的機組配備了集塵紙袋或集塵布袋 **(28)** (依型號而定)

- 把控制桿往箭頭方向推 **(26)**，然後把滿的紙濾網袋往後面拉出來。把袋子拿出來丟掉。
- 把新的紙濾網袋裝到機體內，箭頭方向朝下 **(27)**。

如果您的機組裝的是集塵布袋，請同樣依照上述說明。

把袋子內容物倒掉，重複使用 **(28)**。請勿清洗。

注意事項：因為機組有安全裝置會檢查集塵袋是否放到定位，所以如果集塵袋沒有裝好，蓋子就無法關上。

清潔馬達保護濾網。

馬達保護濾網在集塵袋和馬達之間。您每次更換出氣口濾網時，最好取出馬達保護濾網 **(29)**，用拍打的方式除掉灰塵，然後放回吸塵器裡面。

如果機組不動怎麼辦

檢查機組的插頭是否插好，還有插座是否有電。

如果吸力減少怎麼辦

- 關掉機組，拔掉插頭。
- 檢查管子、彈性軟管和清潔工具有沒有堵塞。
- 檢查集塵袋有沒有滿。必要時更換。

Information for your safety

Please read all the following information, which contains important instructions for the safety, the use and the maintenance of the appliance.

This appliance complies with the following EC Directives: -73/23/EEC, 93/68/EEC-Low Voltage Directive-89/336EEC -EMC Directive.

- The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance if the mains lead is damaged or faulty.
- If the mains lead is damaged, it must be replaced by an approved LG Electronics Service Agent in order to avoid a hazard.
- Always switch the vacuum cleaner off before :
 - changing the dust bag
 - changing or cleaning the filters.
- **If no dustbag is inserted, the cover cannot be closed. Please do not use force!**
- Do not vacuum flammable or explosive substances (liquids or gases).
- Do not vacuum hot ash, embers etc. nor sharp objects.
- Do not vacuum water or other liquids.
- When you vacuum with an attachment appliance that has a rotating brush roller:
 - do not reach into the running brush roller.

WARNING! Should it become necessary to replace the moulded on plug then the defective plug should be destroyed to avoid any possible shock hazard that could occur should such a plug be inserted into a 13 amp socket else where in the house.

How to Use

Connecting the flexible hose

Push the end of the head (1) on the flexible hose (2) into the attachment point on the vacuum cleaner.

To remove the flexible hose from the vacuum cleaner, press on the button (3) situated on the head, then pull upwards.

Assembling the tubes

(depending on model)

- **Metal tube (4,5)**
 - Fit together the two tubes by twisting slightly.
- **Telescopic tube (6)**
 - Push spring latch (7).
 - Pull out tube to required length.
 - Release spring latch to lock.

Using the cleaning head and Accessory Nozzles

(depending on model)

Fit the large cleaning head onto the end of the tube.

- **The 2 position head (10)** is equipped with a pedal (11) which allows you to alter its position according to the type of floor to be cleaned. **Hard floor position** (tiles, parquet floors...): Press on the pedal to lower the brush. **Carpet or rug position**: Press on the pedal to lift the brush up.
- **Crevice Tool (14)**
 - For vacuuming in those normally inaccessible places i.e. reaching cobwebs, or down the side of a sofa!
- **Upholstery Nozzle (15)**
 - For vacuuming upholstery, mattresses, etc. The thread collectors help to pick up the threads and fluff.
- **Dusting brush (16)**
 - For vacuuming picture frames furniture outlines, books and other uneven objects.
- **Accessory Holder** can be attached on the Extension wands using clamping hook. Accessories can be stored in the holder (30).

How to plug in and use

Pull out the mains lead to the desired length and plug into the socket.
 Press button (17) to start the vacuum cleaner.
 To stop it press the button (17) again.

Adjusting the power level

(depending on model)

- Suction capacity increases steplessly up to MAX.(19)
- The flexible hose handle (20) has a manual air flow regulator (21) which allows you to briefly reduce the suction level.

Carrying and storage

When you have switched off and unplugged the appliance, press on the button (18) to automatically rewind the cord.

- Use stowage clip as shown when storing the cleaner (22).

Changing the dust bag

The dustbag needs changing when the cleaner is set to maximum power and the cleaner head is off the floor but the ìbag fullî indicator window (23) is completely coloured red. Even if the dustbag does not appear to be full at this stage, it should be changed. It could be that a great deal of very fine dust has clogged up the pores of the dust bag.

- Turn off the appliance and unplug it.
- Remove hose.
- Open the cover (24)

Your appliance is equipped with either a paper dust bag or a fabric dust bag (28) (depending on model)

- Push the lever forwards in the direction of the arrow (26), and pull off the full paper filter bag towards the rear. Remove the bag and throw it away.
- Insert the new paper filter bag into the unit with the arrow pointing downwards (27).

If your appliance is fitted with a fabric dust bag follow the same instructions as above.

Empty it and reuse it (28). Do not wash it.

Note: as the appliance is fitted with a safety device which checks that the bag is in place you cannot close the lid if the bag is not fitted correctly.

Cleaning the motor filter

The motor filter is situated inside the appliance between the dust bag and the motor. Each time that you change the air outlet filter we advise you to remove the motor filter (29) and to clean it by tapping to remover the dirt and then replacing it in the vacuum cleaner.

What to do if your appliance does not work

Check that the appliance is correctly plugged in and that the electrical socket is working.

What to do when the suction performance reduces?

- Stop the appliance and unplug it.
- Check that the tubes, flexible hose and cleaning tool are not blocked.
- Check that the dust bag is not full. Replace if necessary.



LG Electronics Inc.

<http://www.lge.com/>