

# User's Guide

## F900P

**M**ake sure to read the **Important Precautions** before using the product.  
Keep the User's Guide(CD) in an accessible place for future reference.

**S**ee the label attached on the back cover and quote this information to your dealer when you require service.



**This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this monitor, observe the following basic rules for its installation, use, and servicing.**

## On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

The power supply cord is used as the main disconnect device. Ensure that the socket-outlet is easily accessible after installation.

Operate the monitor only from a power source indicated in the specifications of this manual or listed on the monitor. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

Do not Open the Monitor.

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the monitor is not operating properly.

To Avoid Personal Injury :

- Do not place the monitor on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not try to roll a stand with small casters across thresholds or deep pile carpets.

To Prevent Fire or Hazards:

- Always turn the monitor OFF if you leave the room for more than a short period of time. Never leave the monitor ON when leaving the house.
- Keep children from dropping or pushing objects into the monitor's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this monitor.
- During a lightning storm or when the monitor is to be left unattended for an extended period of time, unplug it from the wall outlet.
- Do not bring magnetic devices such as magnets or motors near the picture tube.

## On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the monitor where the power cord is subject to damage.

Do not use this monitor near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Monitors are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the monitor on a bed, sofa, rug, etc.
- Place the monitor in a built-in enclosure unless proper ventilation is provided.
- Cover the openings with cloth or other material.
- Place the monitor near or over a radiator or heat source.

## On Cleaning

- Unplug the monitor before cleaning the face of the monitor screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the monitor screen because overspray may cause electrical shock.

## On Repacking

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

# Connecting the Monitor


- Before setting up the monitor, ensure that the power is turned off to the monitor, computer system, and other attached devices.
- Carefully set the monitor face-down with the underside facing you.

## Connecting the Tilt/Swivel stand

1. Align the hooks on the tilt/swivel stand with the matching slots in the base of the monitor.
2. Insert the hooks into slots.
3. Slide the tilt/swivel stand toward the front of the monitor until the latches click into the locked position.

### NOTE

- This illustration depicts the general model of connection. Your monitor may differ from the items shown in the picture.

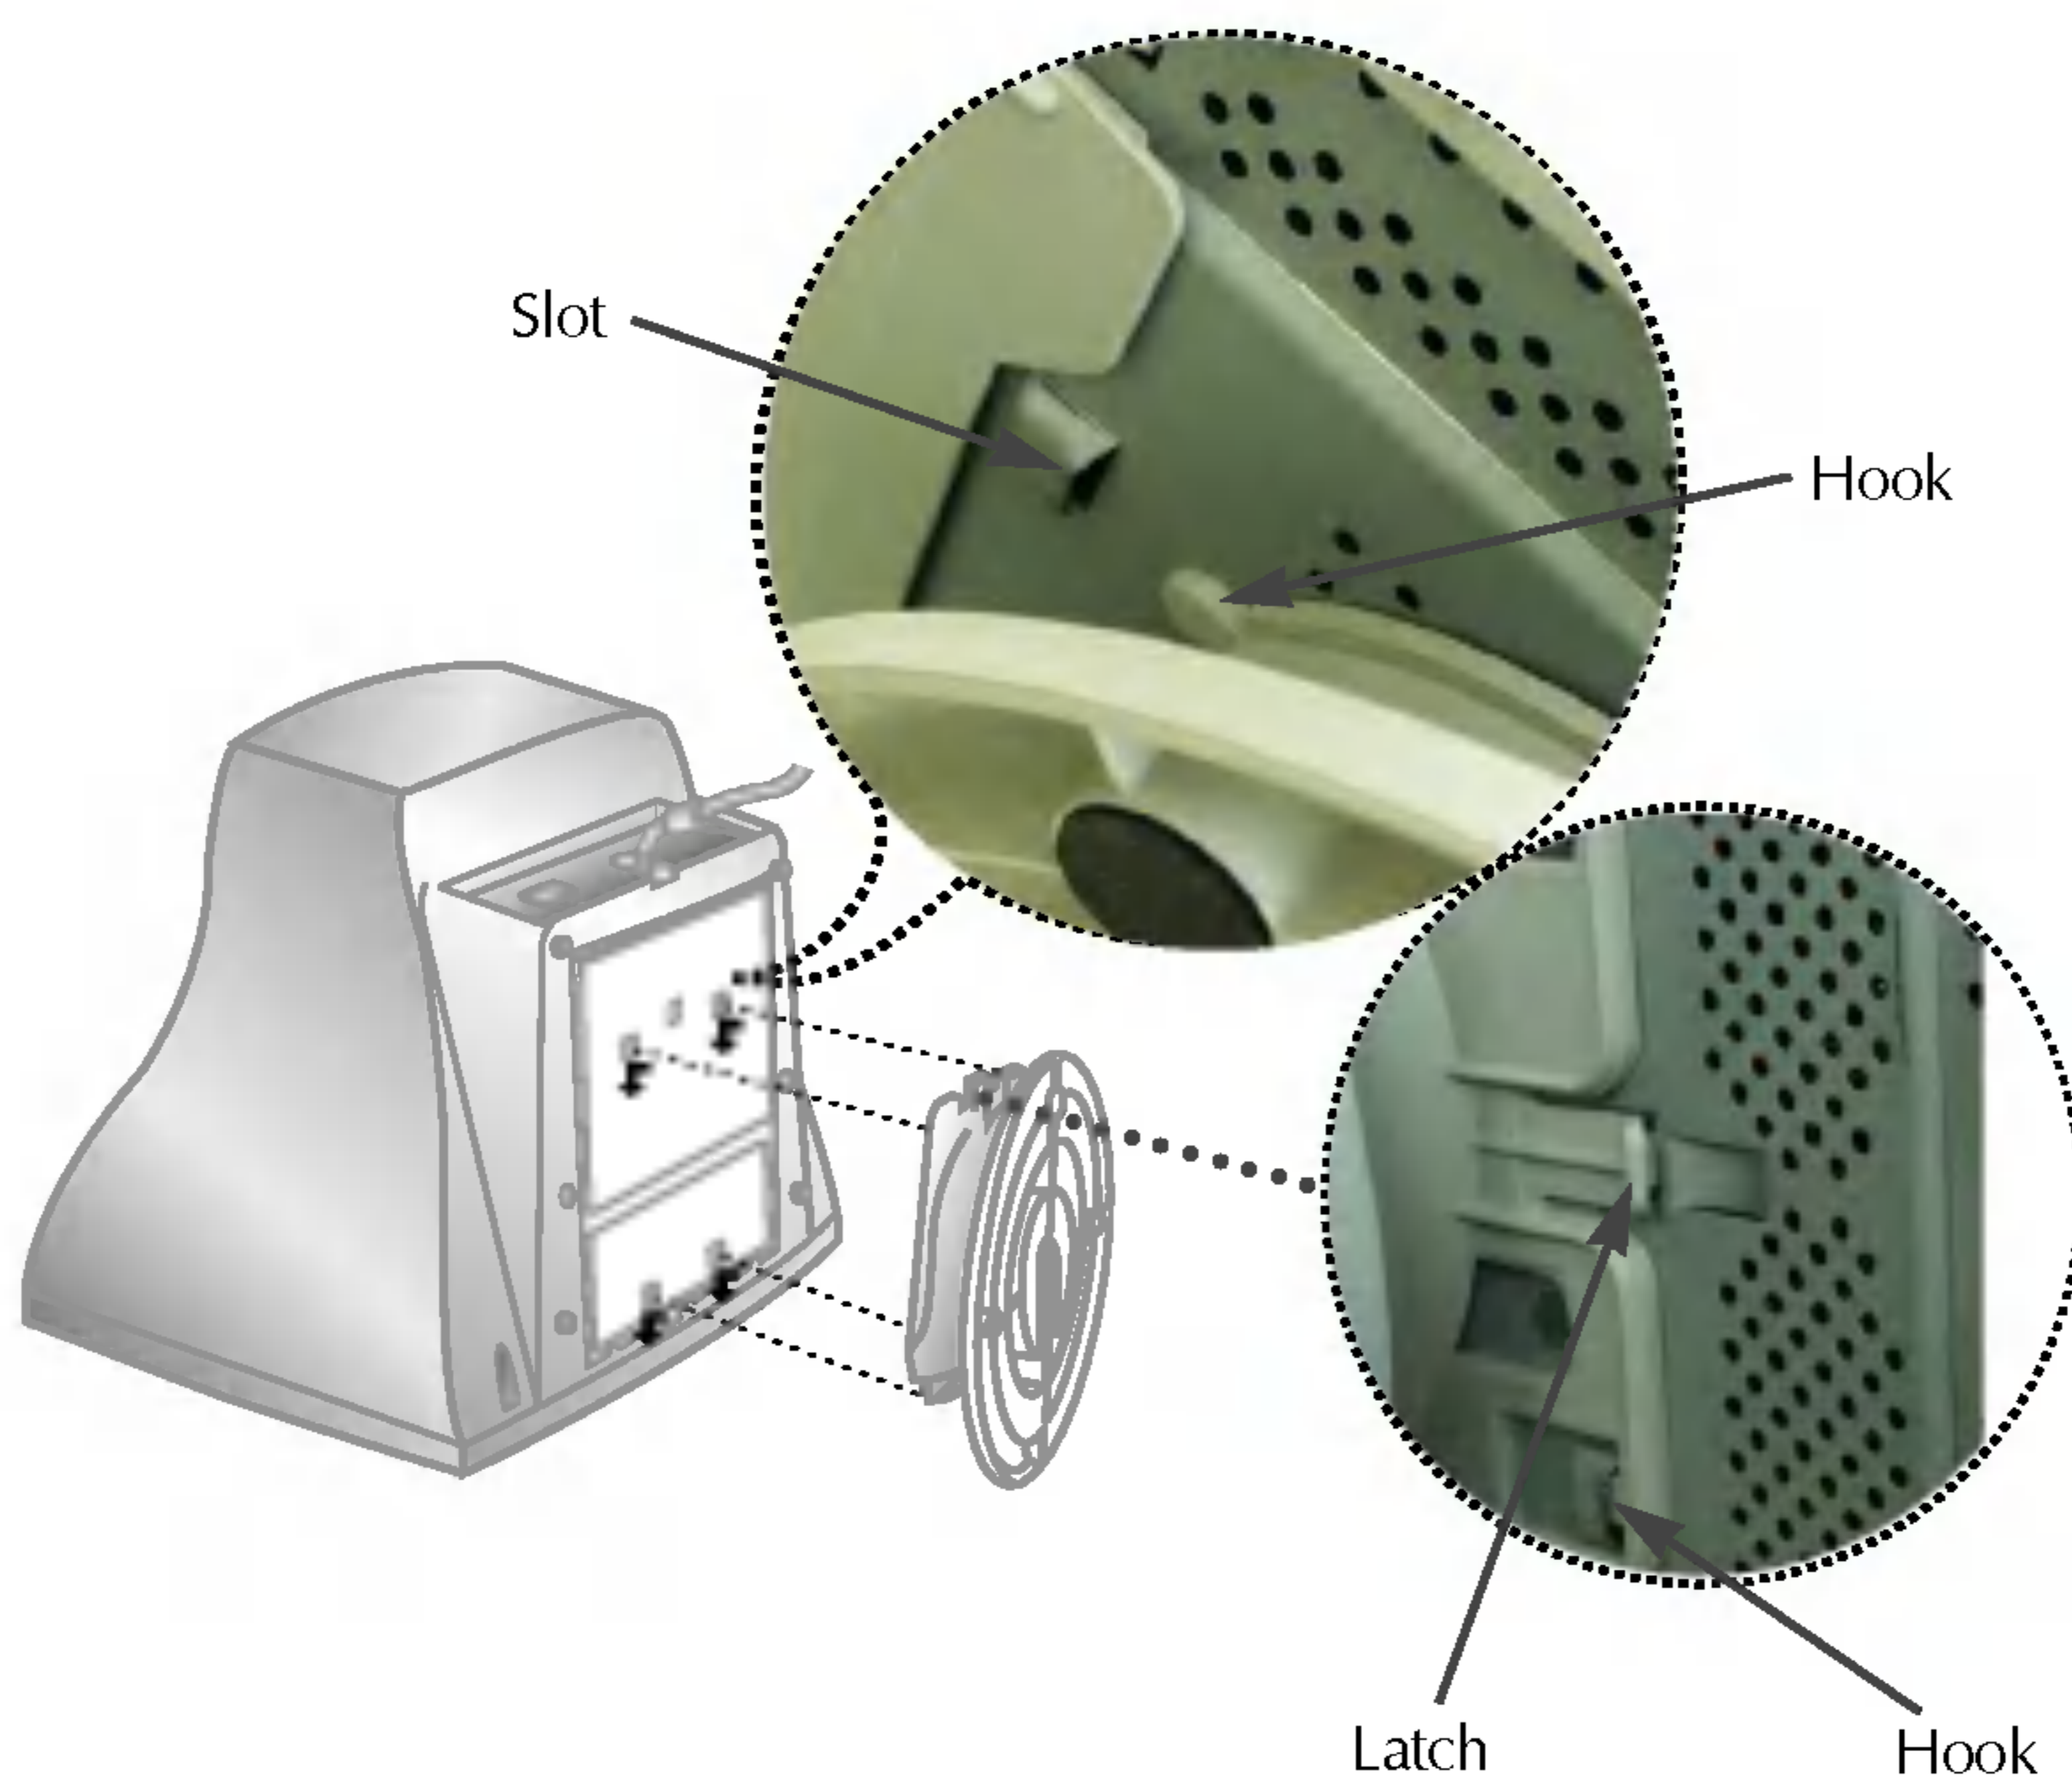


# Connecting the Monitor

## Using the Computer


1. Connect the signal cable. When mated, tighten the thumbscrews to secure the connection.
2. Connect the power cord into a properly power outlet that is easily accessible and close to the monitor.

### NOTE


- This is a simplified representation of the rear view.
- This rear view represents a general model; your monitor may differ from the view as shown.

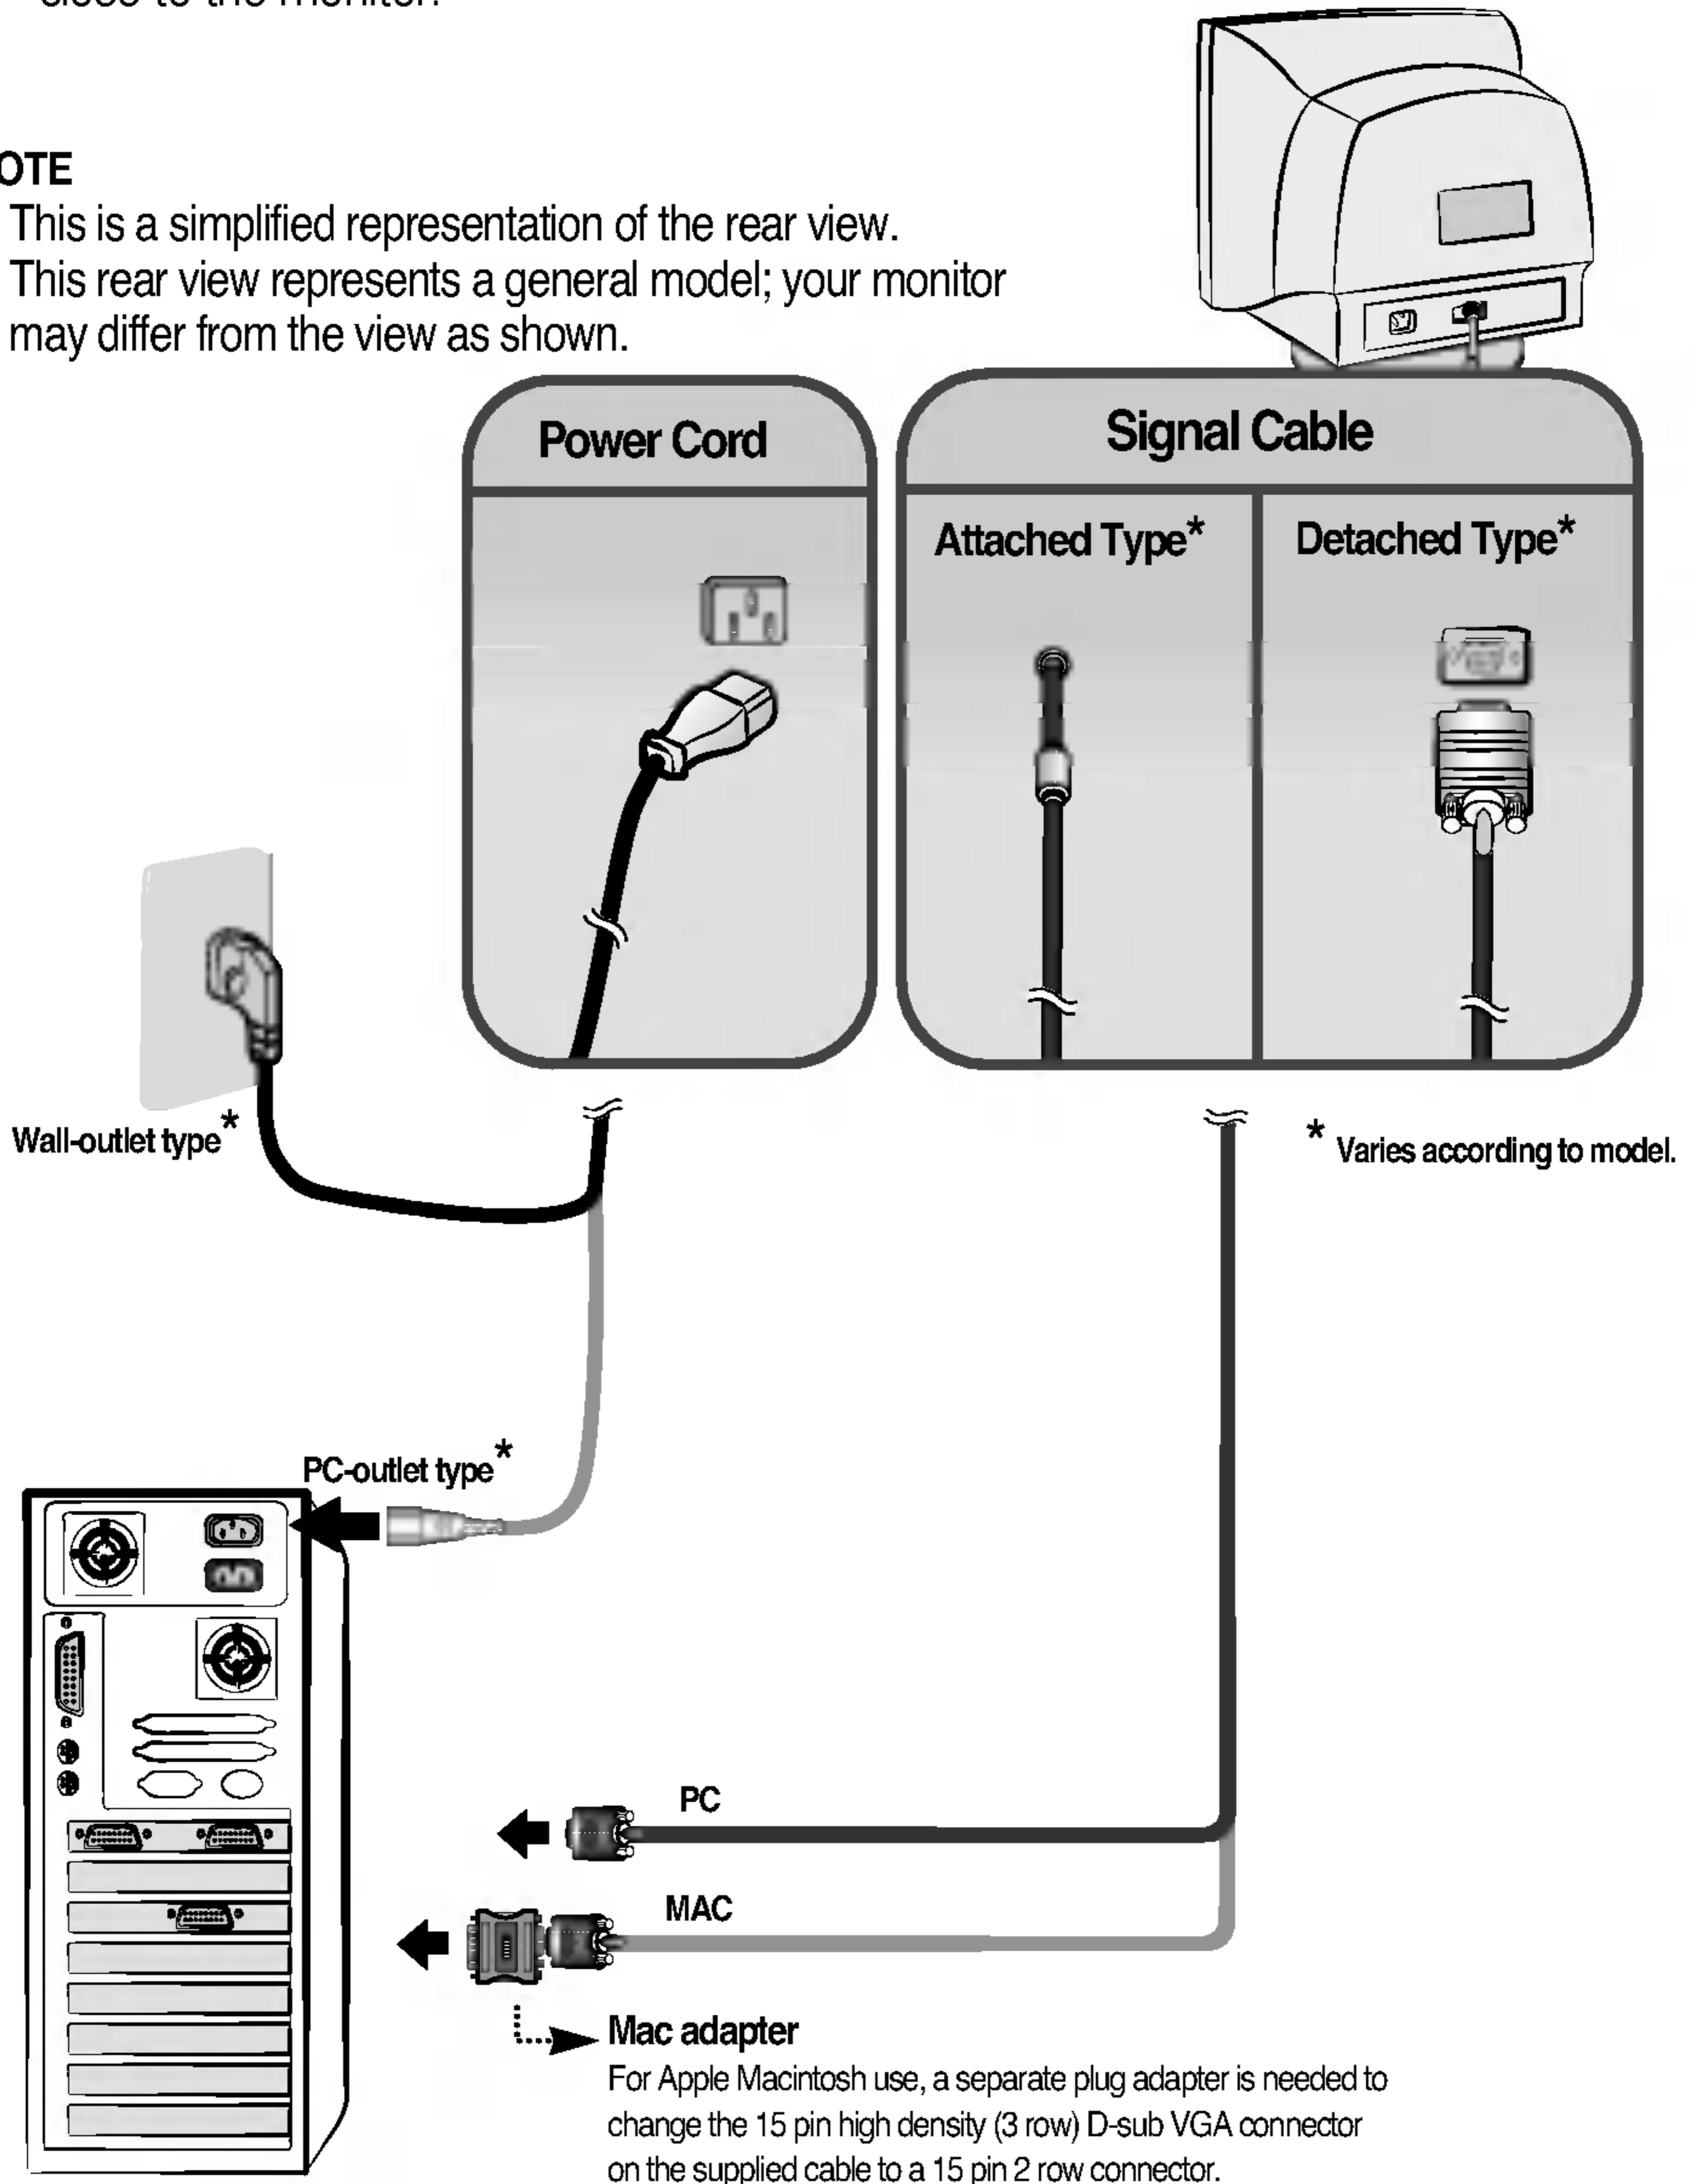

## Front Panel Controls

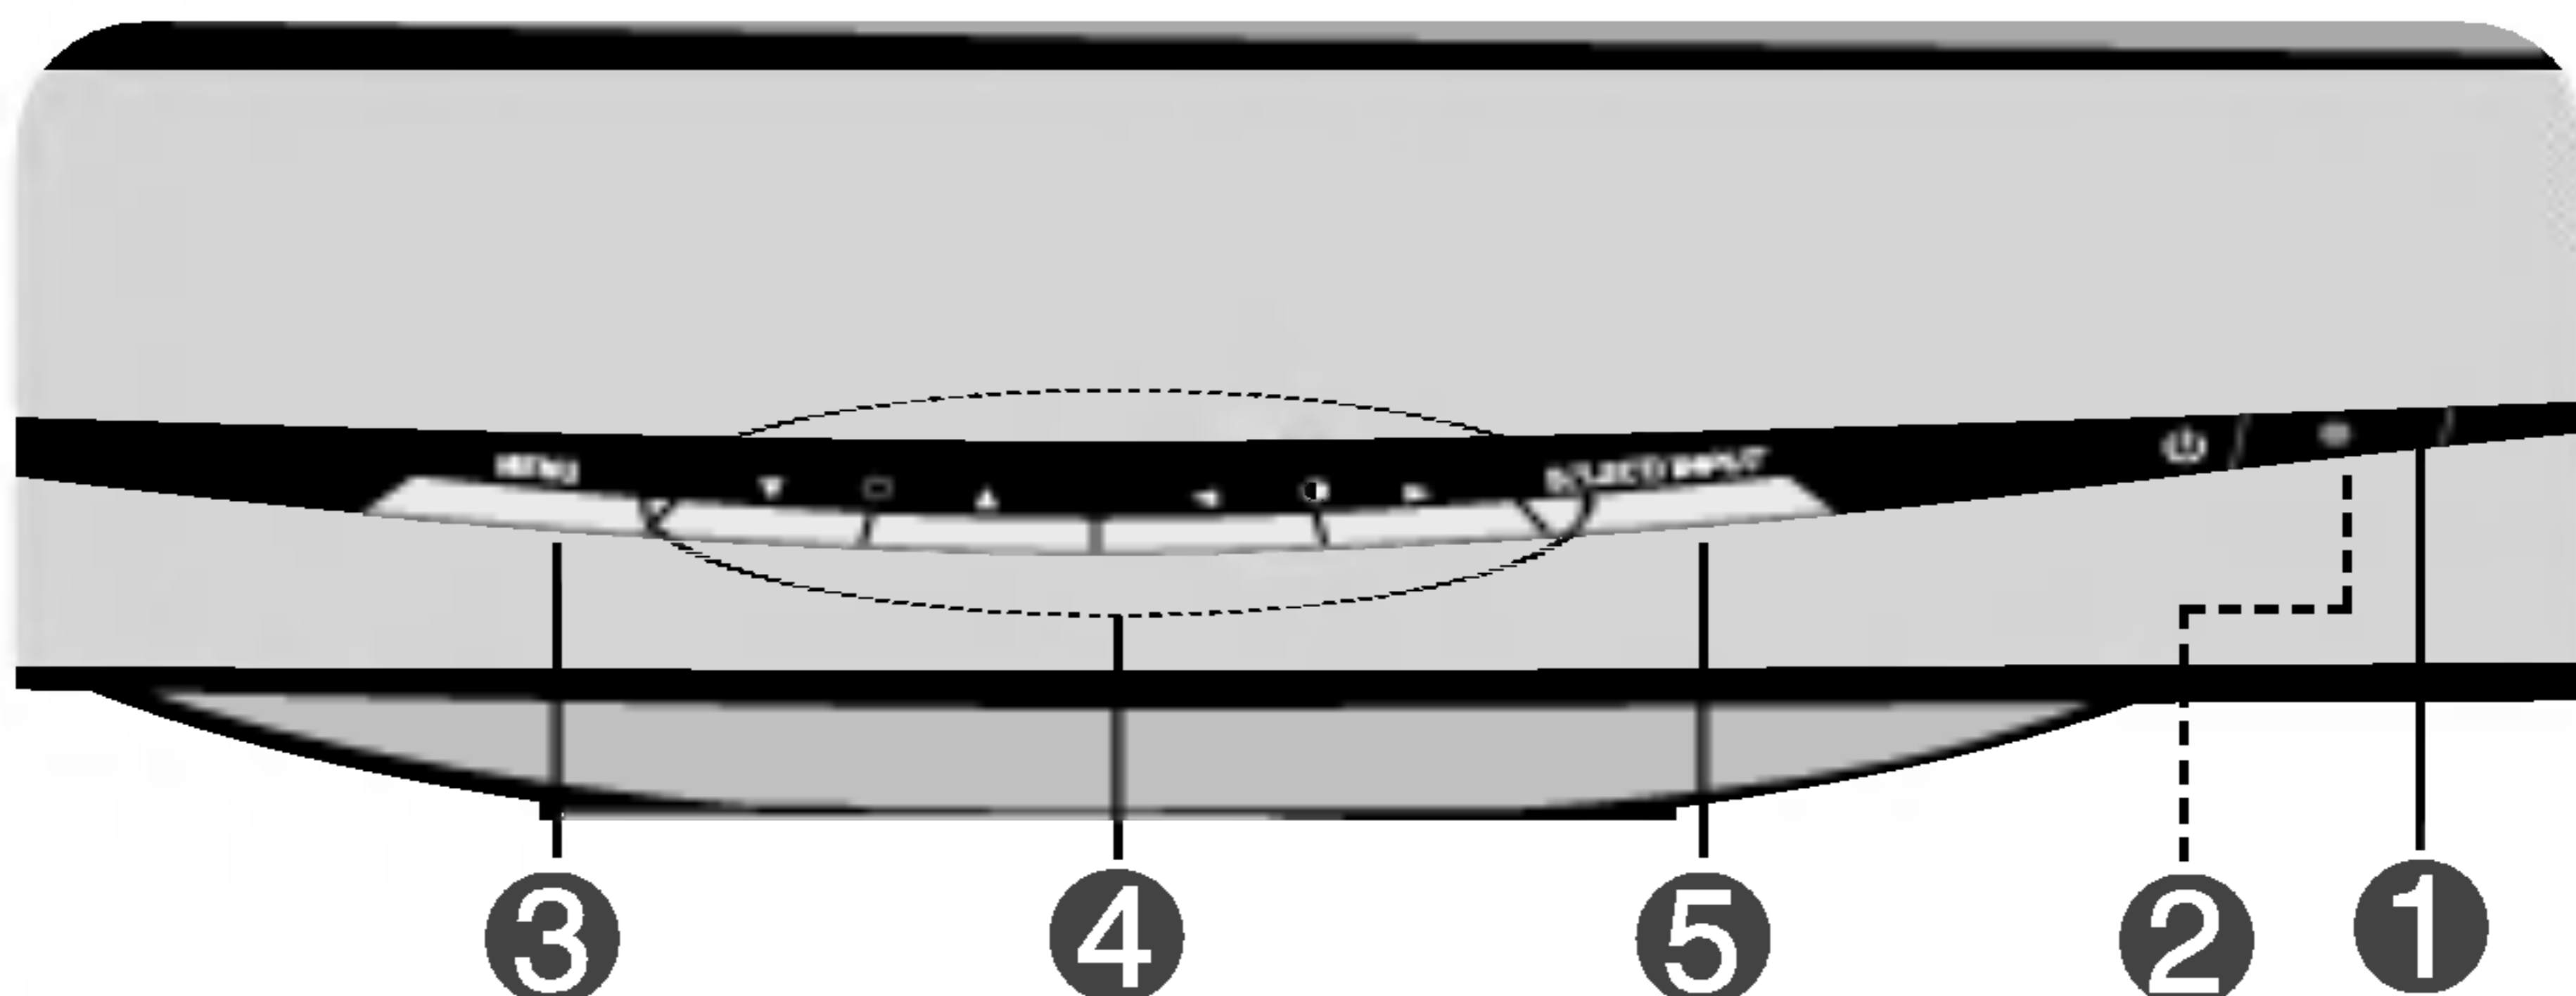

Control	Function
<b>1</b> Power Button	Use this button to turn the monitor on or off.
<b>2</b> Power (DPMS) Indicator	This Indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode, this indicator color changes to amber.
<b>3</b> MENU (or OSD) Button	Use this button to enter or exit the on screen display.
<b>4</b> ▲▼/◀▶ Buttons	Use these buttons to choose or adjust items in the on screen display.
<b>5</b> SELECT (or SET) Button	Use this button to enter a selection in the on screen display.

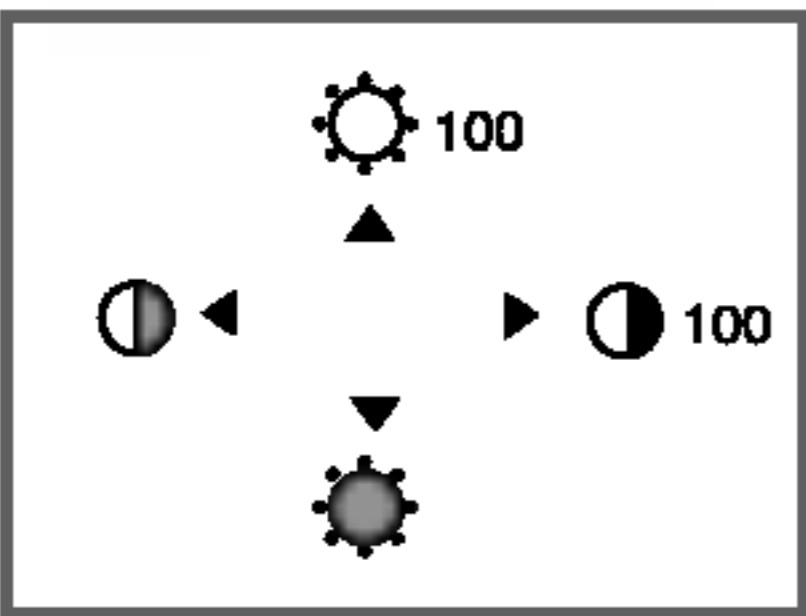Control	Direct Access Function
	<p>◀▶ <b>Button</b> Bring up Contrast adjustment</p> <p>▼▲ <b>Button</b> Bring up Brightness adjustment</p> <p>The Contrast and Brightness functions are also available in the On Screen Display (OSD) menu.</p>
<b>5</b> INPUT	Use this button to make Dsub or BNC connector active. This feature is used when two computers are connected to the display.

## Screen Adjustment

Making adjustments to the image size, position and operating parameters of the monitor is quick and easy with the On Screen Display Control system. A short example is quick and easy given below to familiarize you with the use of the controls. The following section is an outline of the available adjustments and selections you can make using the OSD.

### NOTE

- Allow the monitor to stabilize for at least 30 minutes before making image adjustments.

To make adjustments in the On Screen Display, follow these steps:

#### ■ Case 1

**MENU** → ▲ ▼ → **SELECT** → ▲ ▼ ◀ ▶ → **SELECT** → **MENU**








#### ■ Case 2

**OSD** → ▲ ▼ → **SET** → ▲ ▼ ◀ ▶ → **SET** → **OSD**

- 1** Press the MENU (or OSD) Button, then the main menu of the OSD appears.
- 2** To access a control, use the ▲ or ▼ Buttons. When the icon you want becomes highlighted, press the SELECT (or SET) Button.
- 3** Use the ▲ ▼ / ◀ ▶ Buttons to adjust the item to the desired level.
- 4** Accept the changes by pressing the SELECT (or SET) Button.
- 5** Exit the OSD by Pressing the MENU (or OSD) Button.
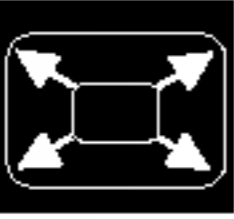
# On Screen Display(OSD) Selection and Adjustment

The following table indicates all the On Screen Display control, adjustment, and setting menus.

Main menu	Sub menu		Reference	
 BRIGHTNESS/ CONTRAST	Brightness	●	To adjust the brightness and contrast of the screen	
	Contrast	●		
 POSITION	V Position	●	To adjust the position of the screen	
	H Position	●		
 SIZE	V Size	●	To adjust the size of the screen	
	H Size	●		
 SHAPE	Tilt	●	To adjust the shape of the screen	
	Side Pincushion	●		
	S Pincushion Balance	●		
	Parallelogram	●		
	Trapezoid	●		
	H Corner			
	Top Corner	●		
	Bottom Corner	●		
 COLOR	PRESET	6500K	●	To customize the color of the screen
		9300K	●	
	Temp		●	
	R/G/B(User Color)		●	
 SETUP	Video Level		●	To customize the screen status for a user's operating environment
	Language		●	
	OSD Time		●	
	Clamp		●	
 SPECIAL	Degauss		●	To improve the clarity and stability of the screen
	Recall		●	
	Reset		●	
	Moire	H Moire	●	
		V Moire	●	
	Convergence		●	
Purity		●		
			● : Adjustable	








You were introduced to the procedure of selecting and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the all items shown on the Menu.




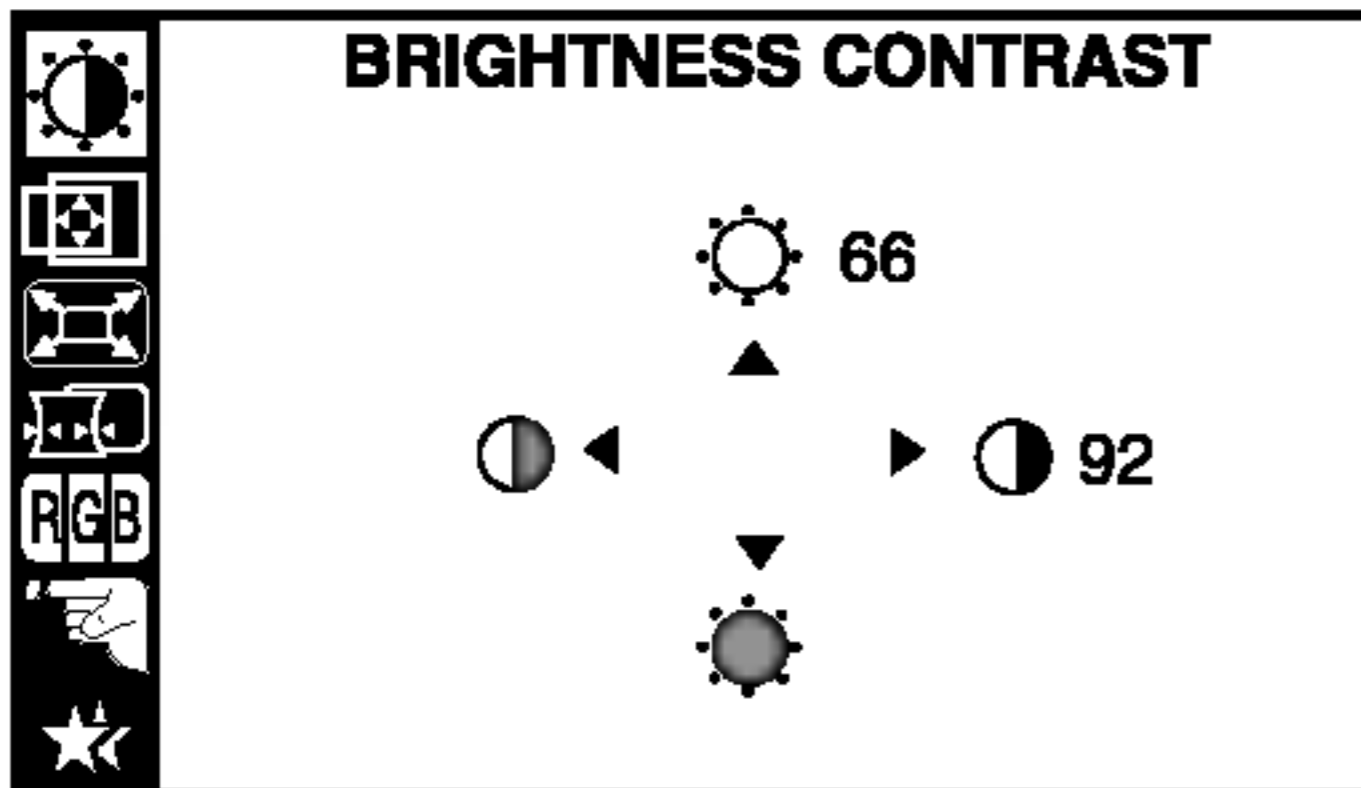

## NOTE

- The order of icons may differ depending on the model (A8~A11).





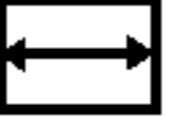
## To adjust the brightness and contrast of the screen

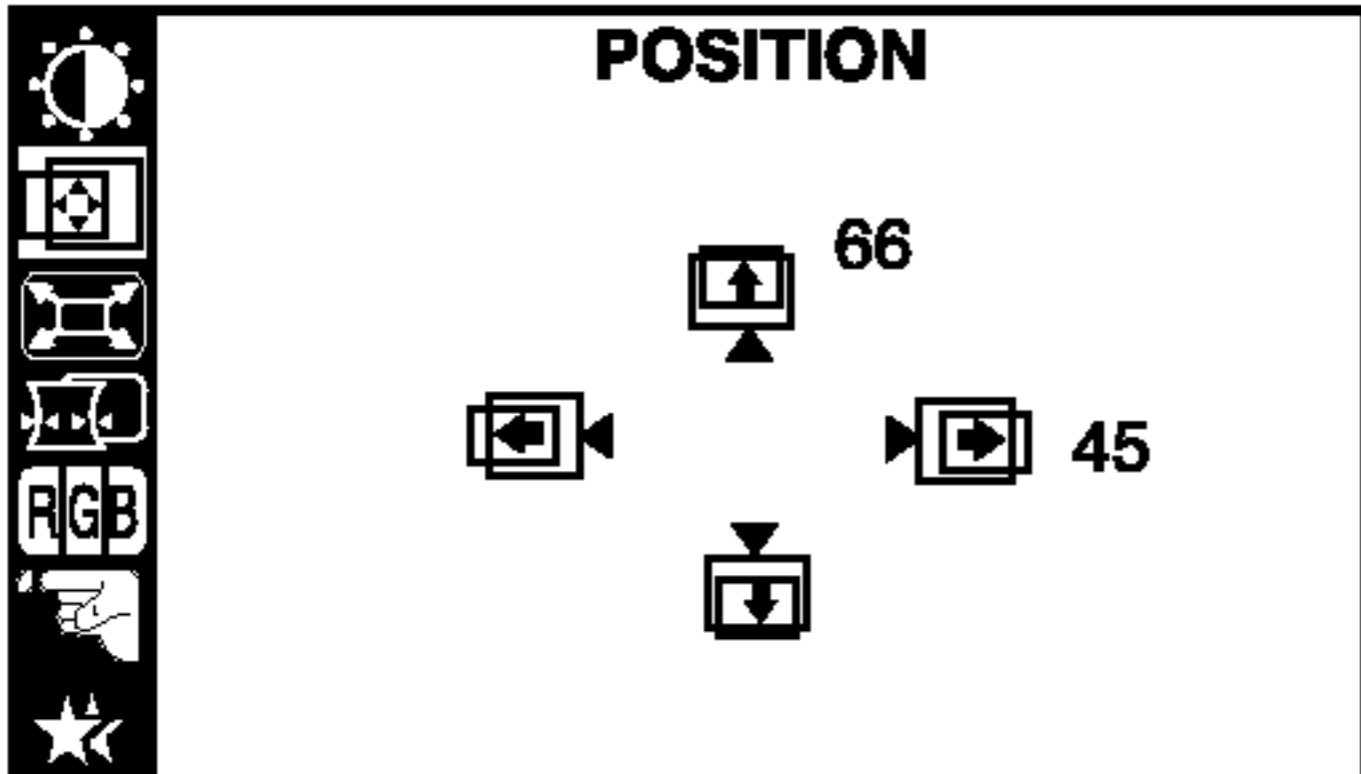OSD Adjust	Description
	  <b>Brightness</b> To adjust the brightness of the screen.
	  <b>Contrast</b> To adjust the contrast of the screen.








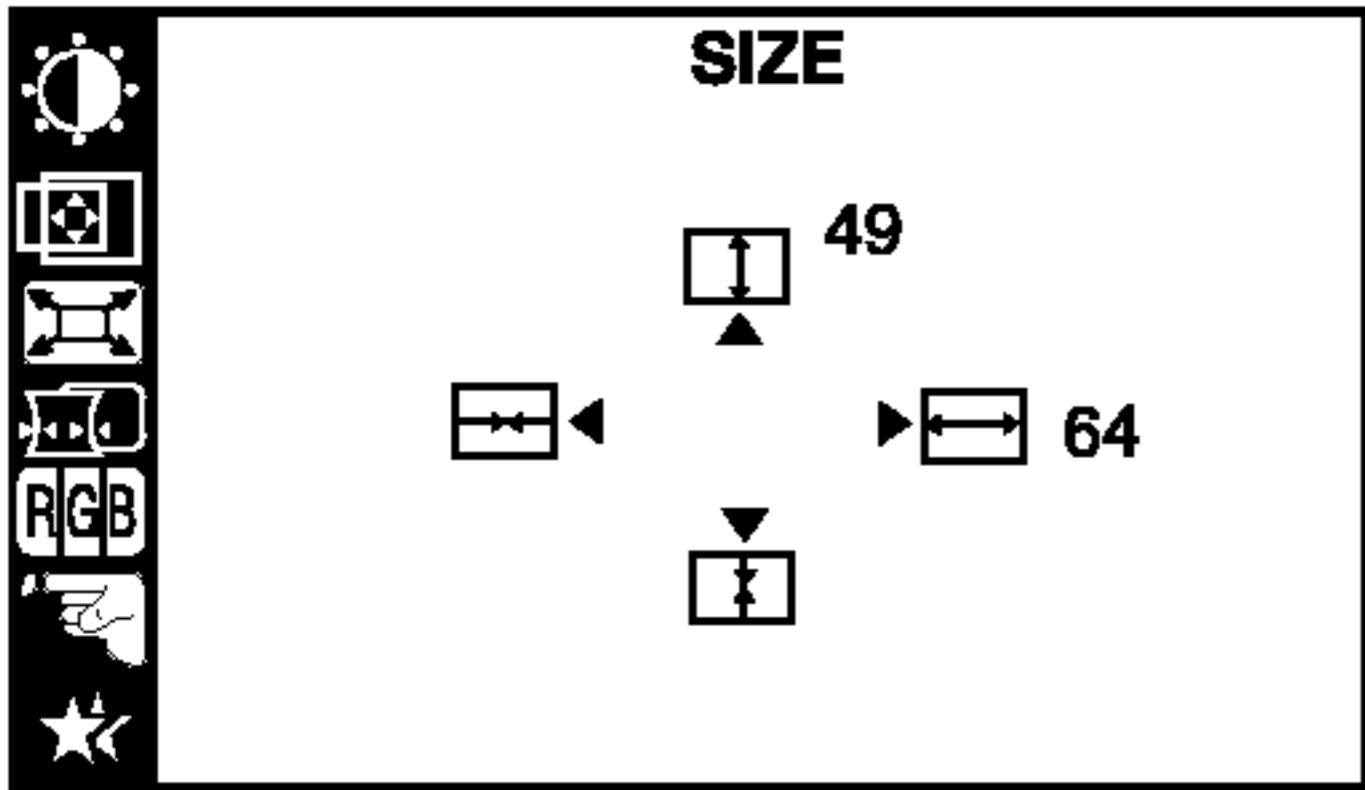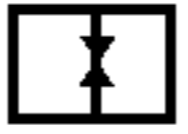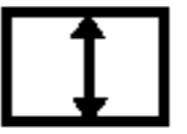



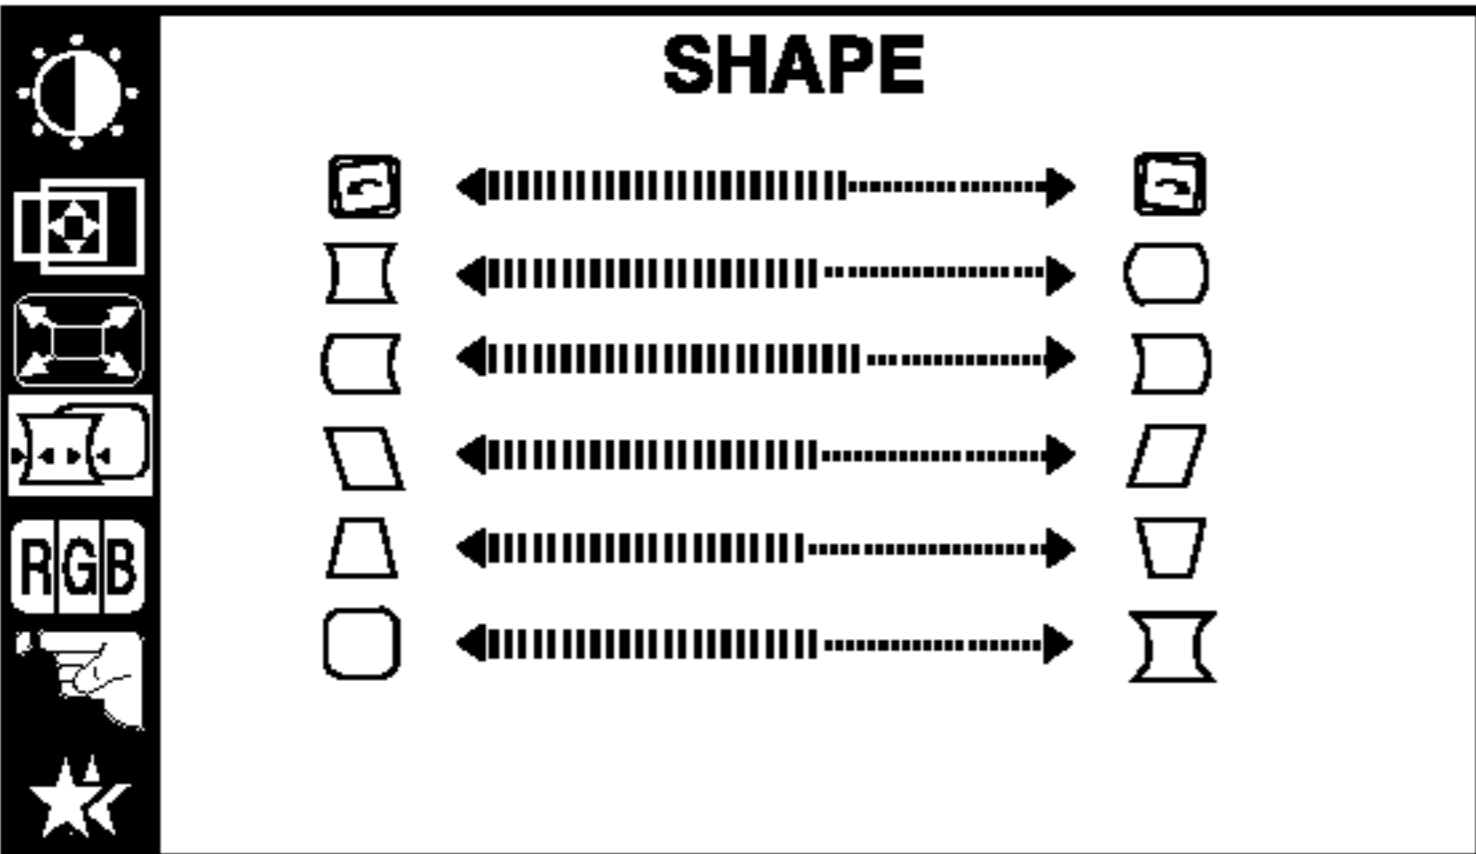





## To adjust the position of the screen

OSD Adjust	Description
	  <b>Vertical Position</b> To move image up and down.
	  <b>Horizontal Position</b> To move image left and right.

## To adjust the size of the screen


OSD Adjust	Description
	<p>  <b>Vertical Size</b> To adjust image height.</p> <p>  <b>Horizontal Size</b> To adjust image width.</p>

## To adjust the shape of the screen


OSD Adjust	Description
	<p>  <b>Tilt</b> To correct image rotation.</p> <p>  <b>Side Pincushion</b> To correct a concave or convex bowing of the image.</p> <p>  <b>Side Pincushion Balance</b> To correct the balance of both sides bowing.</p> <p>  <b>Parallelogram</b> To correctly adjust the skew of the image.</p> <p>  <b>Trapezoid</b> To correct geometric distortion.</p> <p>  <b>H Corner*</b></p> <p>  <b>Top Corner*</b></p> <p>  <b>Bottom Corner*</b> To correct an irregular distortion of the displayed image.</p>

\* This function is available for designated models only.

## To customize the color of the screen

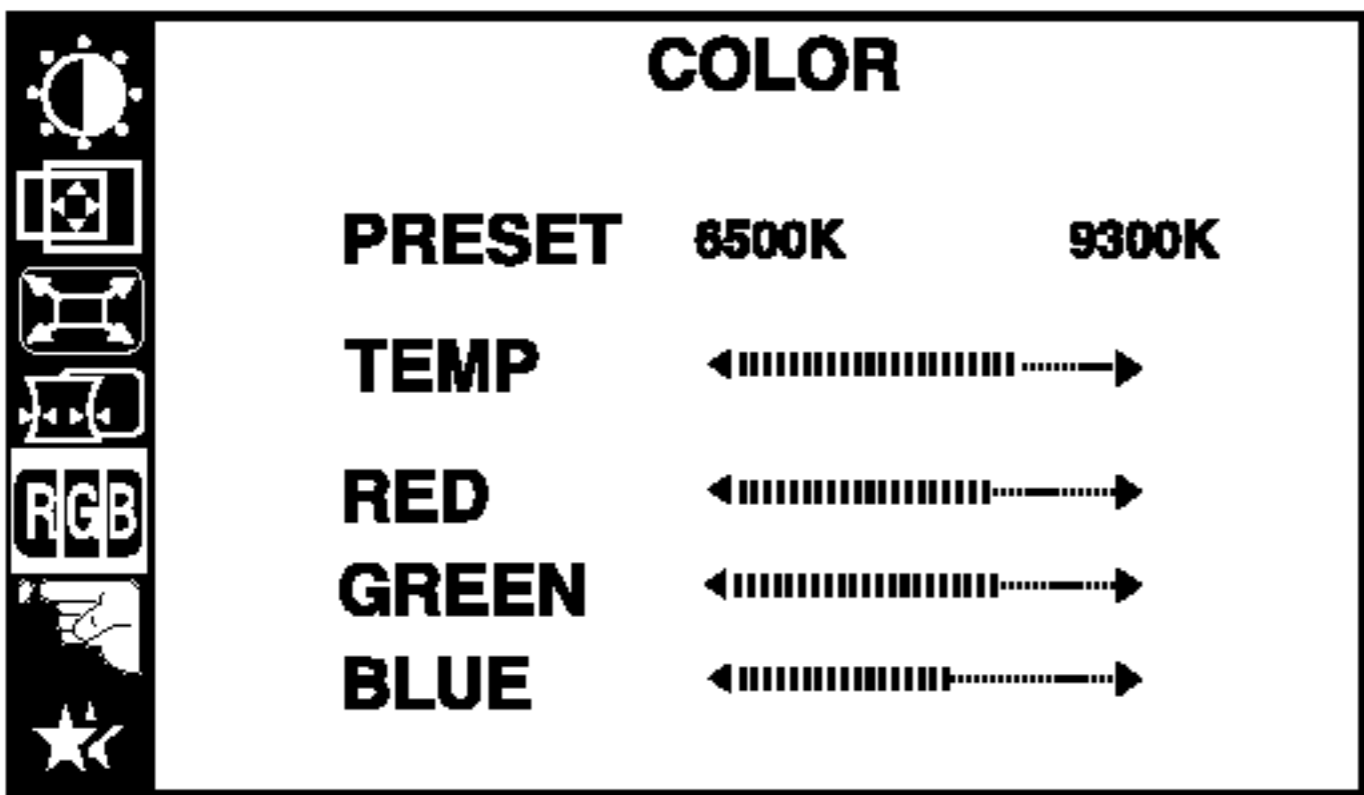OSD Adjust	Description
 <p>The screenshot shows the 'COLOR' menu with options: PRESET (6500K, 9300K), TEMP, RED, GREEN, and BLUE. Each option has a corresponding horizontal slider bar.</p>	<p><b>PRESET 6500K/ 9300K</b> Select the screen color. • 6500K: Slightly reddish white. • 9300K: Slightly bluish white.</p> <p><b>TEMP</b> Select the screen temperature which you prefer among reddish or bluish or any color in between.</p> <p><b>RED GREEN BLUE</b> Set your own color levels.</p>

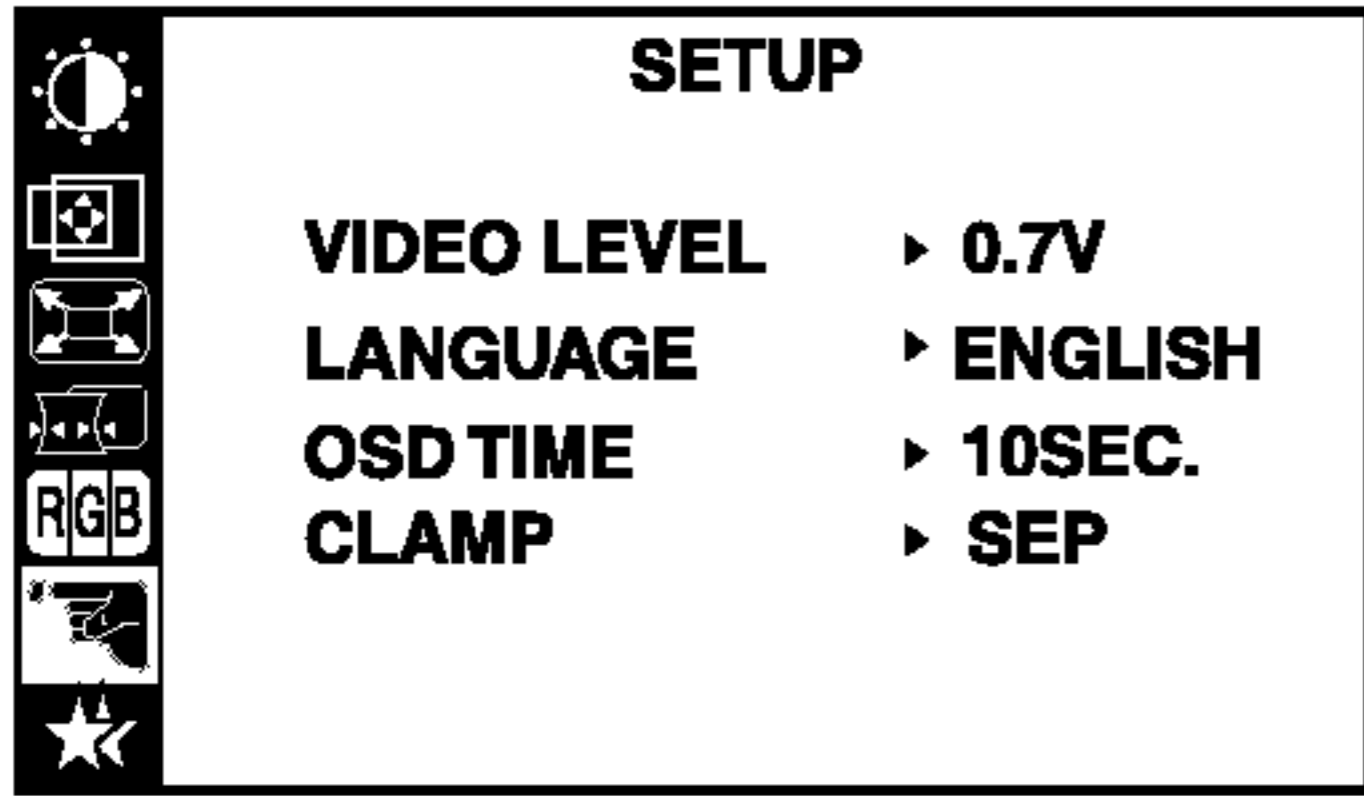

## To customize the screen status for a user's operating environment

OSD Adjust	Description
 <p>The screenshot shows the 'SETUP' menu with options: VIDEO LEVEL (0.7V), LANGUAGE (ENGLISH), OSD TIME (10SEC.), and CLAMP (SEP).</p>	<p><b>VIDEO LEVEL</b> This item is used to select the monitor's input signal level. The normal level used for most PCs is 0.7V. If the screen becomes suddenly washed-out or blurred, please select 1.0V and try again.</p> <p><b>LANGUAGE</b> To choose the language in which the control names are displayed. OSD Menus are available in 11 languages: English, German, French, Spanish, Italian, Swedish, Finnish, Portuguese, Korean, Chinese and Russian.</p> <p><b>OSD TIME</b> Set the OSD time, i.e. the length of time a menu will remain on-screen before it shuts off automatically. Adjust the time to 5, 10, 20, 30 or 60 seconds.</p> <p><b>CLAMP*</b> In case of input SOG (Sync On Green) Video Signal, the back raster will appear green. Then, to select the SOG (Sync On Green) in the clamp, it goes back to the original back raster.</p>

\* This function is available for designated models only.

PAGE A7

## To improve the clarity and stability of the screen

OSD Adjust	Description
 <p style="text-align: center;"><b>SPECIAL</b></p> <p><b>DEGAUSS</b> ▶ ON  <b>RECALL</b> ▶ ON  <b>RESET</b> ▶ ON  <b>MOIRE</b> ▶ H: 0/V: 0  <b>PURITY</b> ▶ 50</p> <p style="text-align: center;">1024X768 /85 Hz  <b>PRESET MODE</b></p>	<p><b>DEGAUSS</b> To manually demagnetize the screen to avoid showing incorrect images or colors.</p> <p><b>RECALL</b> You can use this function to reload the modified parameters for screen display operation, as specified by the user after purchase: Position, Size, Side Pincushion, Trapezoid (These recalled options may differ depending on the mode selected: Preset, User, or New).                      If you don't want to recall the monitor to these modified settings, use the ▲ ▼ button to select CANCEL and then press the SELECT (or SET) button.</p>
 <p style="text-align: center;"><b>SPECIAL</b></p> <p><b>DEGAUSS</b> ▶ ON  <b>RECALL</b> ▶ ON  <b>RESET</b> ▶ ON  <b>MOIRE</b> ▶ H: 0/V: 0  <b>CONVERGENCE</b> ▶ H: 50  <b>PURITY</b> ▶ 50</p> <p style="text-align: center;">1024X768 /85 Hz  <b>PRESET MODE</b></p>	<p><b>RESET</b> Return to all factory default settings except "LANGUAGE": Brightness, Contrast, Tilt, Color 9300K, Video Level, OSD Time, Moire, Purity (These reset options may differ depending on the mode selected: Preset, User, or New).                      If you don't want to reset the monitor, use the ▲ ▼ button to select CANCEL and then press the SELECT (or SET) button.</p>
	<p><b>MOIRE</b> This item allows you to reduce the degree of moire. (Moire is caused by interference Horizontal Scan Line with the periodical dot screen). It is normally OFF(H:0/V:0).                      The moire adjustments may affect the focus of the screen.                      Moire adjustments may shake slightly while the moire reduction function is on.</p>
	<p><b>CONVERGENCE*</b> This is to adjust the alignment of red and blue fields.</p>
	<p><b>PURITY*</b> Use to adjust the purity on the screen if the color appears uneven.</p>

\* This function is available for designated models only. **PAGE A7**

Check the following before calling for service.

No image appears	
<input type="checkbox"/> Is the power cord of the monitor connected?	<ul style="list-style-type: none"><li>• Check and see if the power cord is connected properly to the power outlet.</li></ul>
<input type="checkbox"/> Is the power indicator light on?	<ul style="list-style-type: none"><li>• Press the Power button.</li></ul>
<input type="checkbox"/> Is the power on and the power indicator green?	<ul style="list-style-type: none"><li>• the brightness and the contrast.</li></ul>
<input type="checkbox"/> Is the power indicator amber?	<ul style="list-style-type: none"><li>• If the monitor is in power saving mode, try moving the mouse or pressing any key on the keyboard to bring up the screen.</li></ul>
<input type="checkbox"/> Do you see an "OUT OF FREQUENCY" message on the screen?	<ul style="list-style-type: none"><li>• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the monitor. See the 'Specifications' section of this manual and configure your monitor again.</li></ul>
<input type="checkbox"/> Do you see a "SELF DIAGNOSTICS" message on the screen?	<ul style="list-style-type: none"><li>• This message appears when the signal cable between your PC and your monitor is not connected. Check the signal cable and try again.</li></ul>

The screen is flickering.	
<input type="checkbox"/> Is the vertical frequency less than 70Hz or is your monitor set to the interlaced mode?	<ul style="list-style-type: none"><li>• Set the vertical frequency to 72Hz or higher, and consult the video card user manual for instructions on converting to a non-interlaced mode. (You can set this option under the Display icon of the Control Panel.)</li></ul>
<input type="checkbox"/> Do you have any magnetic material such as adapter, or high-voltage line near to your monitor?	<ul style="list-style-type: none"><li>• Remove magnetic sources, such as power adapters, speakers, or high-voltage lines, away from the monitor.</li></ul>
<input type="checkbox"/> Do you hear a "~ding" sound while the monitor is flickering?	<ul style="list-style-type: none"><li>• Use the normal degaussing function. This function clears the screen and reduces any screen blur that may occur due to the surrounding magnetic field. The screen may flicker for about 5 seconds, accompanied by a "~ding" sound.</li></ul>

## The screen color is not normal.

- |   |  |
|---|--|
| <input type="checkbox"/> Do you see basic discoloration (16 colors)?  | <ul style="list-style-type: none"><li>• Set the color depth to 256 colors or higher: use 'Control Panel' -&gt;'Display' -&gt;'Settings' -&gt;'Color Palette'</li><li>• Check the connection of the signal cable. Or pull out the video card of the PC and insert it again.</li><li>• This is due to a small amount of foreign or abnormally florescent material that became fastened on the mask during manufacturing. It will not affect product performance.</li><li>• This happens due to interference from surrounding magnetic fields, as created when speakers, steel structures, or high-voltage lines are placed near the monitor. Remove any such materials from the immediate vicinity and use the DEGAUSS icon on the screen adjustment menu to fix the screen.</li></ul> |
| <input type="checkbox"/> Is the screen color unstable or monochrome?  |  |
| <input type="checkbox"/> Do you see black dots on the screen?         |  |
| <input type="checkbox"/> Do you see a partial blurring on the screen? |  |

## I see an after-image on the screen.

- |   |   |
|---|---|
| <input type="checkbox"/> Do you see the after-image even when you turn off the monitor? | <ul style="list-style-type: none"><li>• A premature aging of the monitor pixels may cause the prolonged display of a single image on the screen. Be sure to use a screen saver to maximize the service life of the monitor.</li></ul> |
|---|---|

## I see waves on the screen.

- |  |  |
|--|--|
| <input type="checkbox"/> Do you see the wave directly on the screen? | <ul style="list-style-type: none"><li>• This occurs in inverse proportion to the screen focus, which can be caused by a particular frequency or video card. Brighten the screen and use the 'MOIRE' icon on the screen adjustment menu to adjust the screen.</li></ul> |
|--|--|

## Have you installed the monitor driver?

- |   |   |
|---|---|
| <input type="checkbox"/> Have you installed the monitor driver? | <ul style="list-style-type: none"><li>• Be sure to install the monitor driver from the monitor driver CD (or diskette) that comes with your monitor. Or, you can also download the driver from our web site: <a href="http://www.lge.com">http://www.lge.com</a>.</li></ul> |
|---|---|

# Specifications

<b>Picture Tube</b>	19 inches (18.0 inches viewable) Perfect Flat Tube 90 degree deflection 0.24mm Slot pitch ARAS(Anti-Reflective Anti-Static) coating	
<b>Sync Input</b>	Horizontal Freq.	30 - 111kHz (Automatic)
	Vertical Freq.	50 - 160 Hz (Automatic)
	Input Form	Separate TTL, Positive/Negative CompositeTTL, Positive/Negative SOG(Sync On Green)
	Signal Input	15 pin D-Sub / 5 BNC Connector
<b>Video Input</b>	Input Form	Separate, RGB Analog, 0.7Vp-p/75 ohm, Positive
<b>Resolution</b>	Max Flicker Free	VESA 1600 x 1200@ 85Hz
	Recommend	VESA 1280 x 1024@ 85Hz
<b>Plug&amp;Play</b>	DDC 1/2B	
<b>Power Consumption</b>	On	≤ 118W(118W)
	Sleep	≤ 4W( 20W)
	Off	≤ 2W( 20W) *( ):With USB
<b>Dimensions &amp;Weight (with tilt/ swivel stand)</b>	Width	46.7 cm / 18.37 inches
	Height	47.4 cm / 18.66 inches
	Depth	47.3 cm / 18.64 inches
	Net	24.0 kg (52.91 lbs)
<b>Power Input</b>	Europe	AC 200-240V 50Hz 1.2A
	Others	AC 100-240V 50/60Hz 2.5A
	The products should be used according to the Power requirements of each ID LABEL.	
<b>Environmental Conditions</b>	<b>Operating Conditions</b>	
	Temperature	0°C to 40 °C
	Humidity	10 % to 90 % non-Condensing
	<b>Storage Conditions</b>	
	Temperature	-20°C to 60 °C
	Humidity	5 % to 90 % non-Condensing
<b>Tilt/Swivel Stand</b>	Attached( ), Detached ( O )	
<b>Signal cable</b>	Attached( ), Detached ( O )	
<b>Power cord</b>	Wall-outlet type or PC-outlet type	
<b>Regulations</b>	TCO99, Blue Angel	

## NOTE

- Information in this document is subject to change without notice.

## Preset Modes (Resolution)


Display Modes (Resolution)			Horizontal Freq. (kHz)	Vertical Freq. (Hz)
1	VESA	640 x 480	43.269	85
2	VESA	800 x 600	53.674	85
3	VESA	1024 x 768	68.677	85
4	VESA	1280 x 1024	91.146	85
5	VESA	1600 x 1200	106.250	85
6	VESA	1920 x 1200	94.038	75




# Using the BNC connector with other types of video cards

Using the BNC connectors with other types of video cards. Follow the example that fits your needs.


1. In case of using a composite sync on green video signal(Sync On Green):  
Connect each R,G and B video signals to BNC receptacles on the back of the monitor.

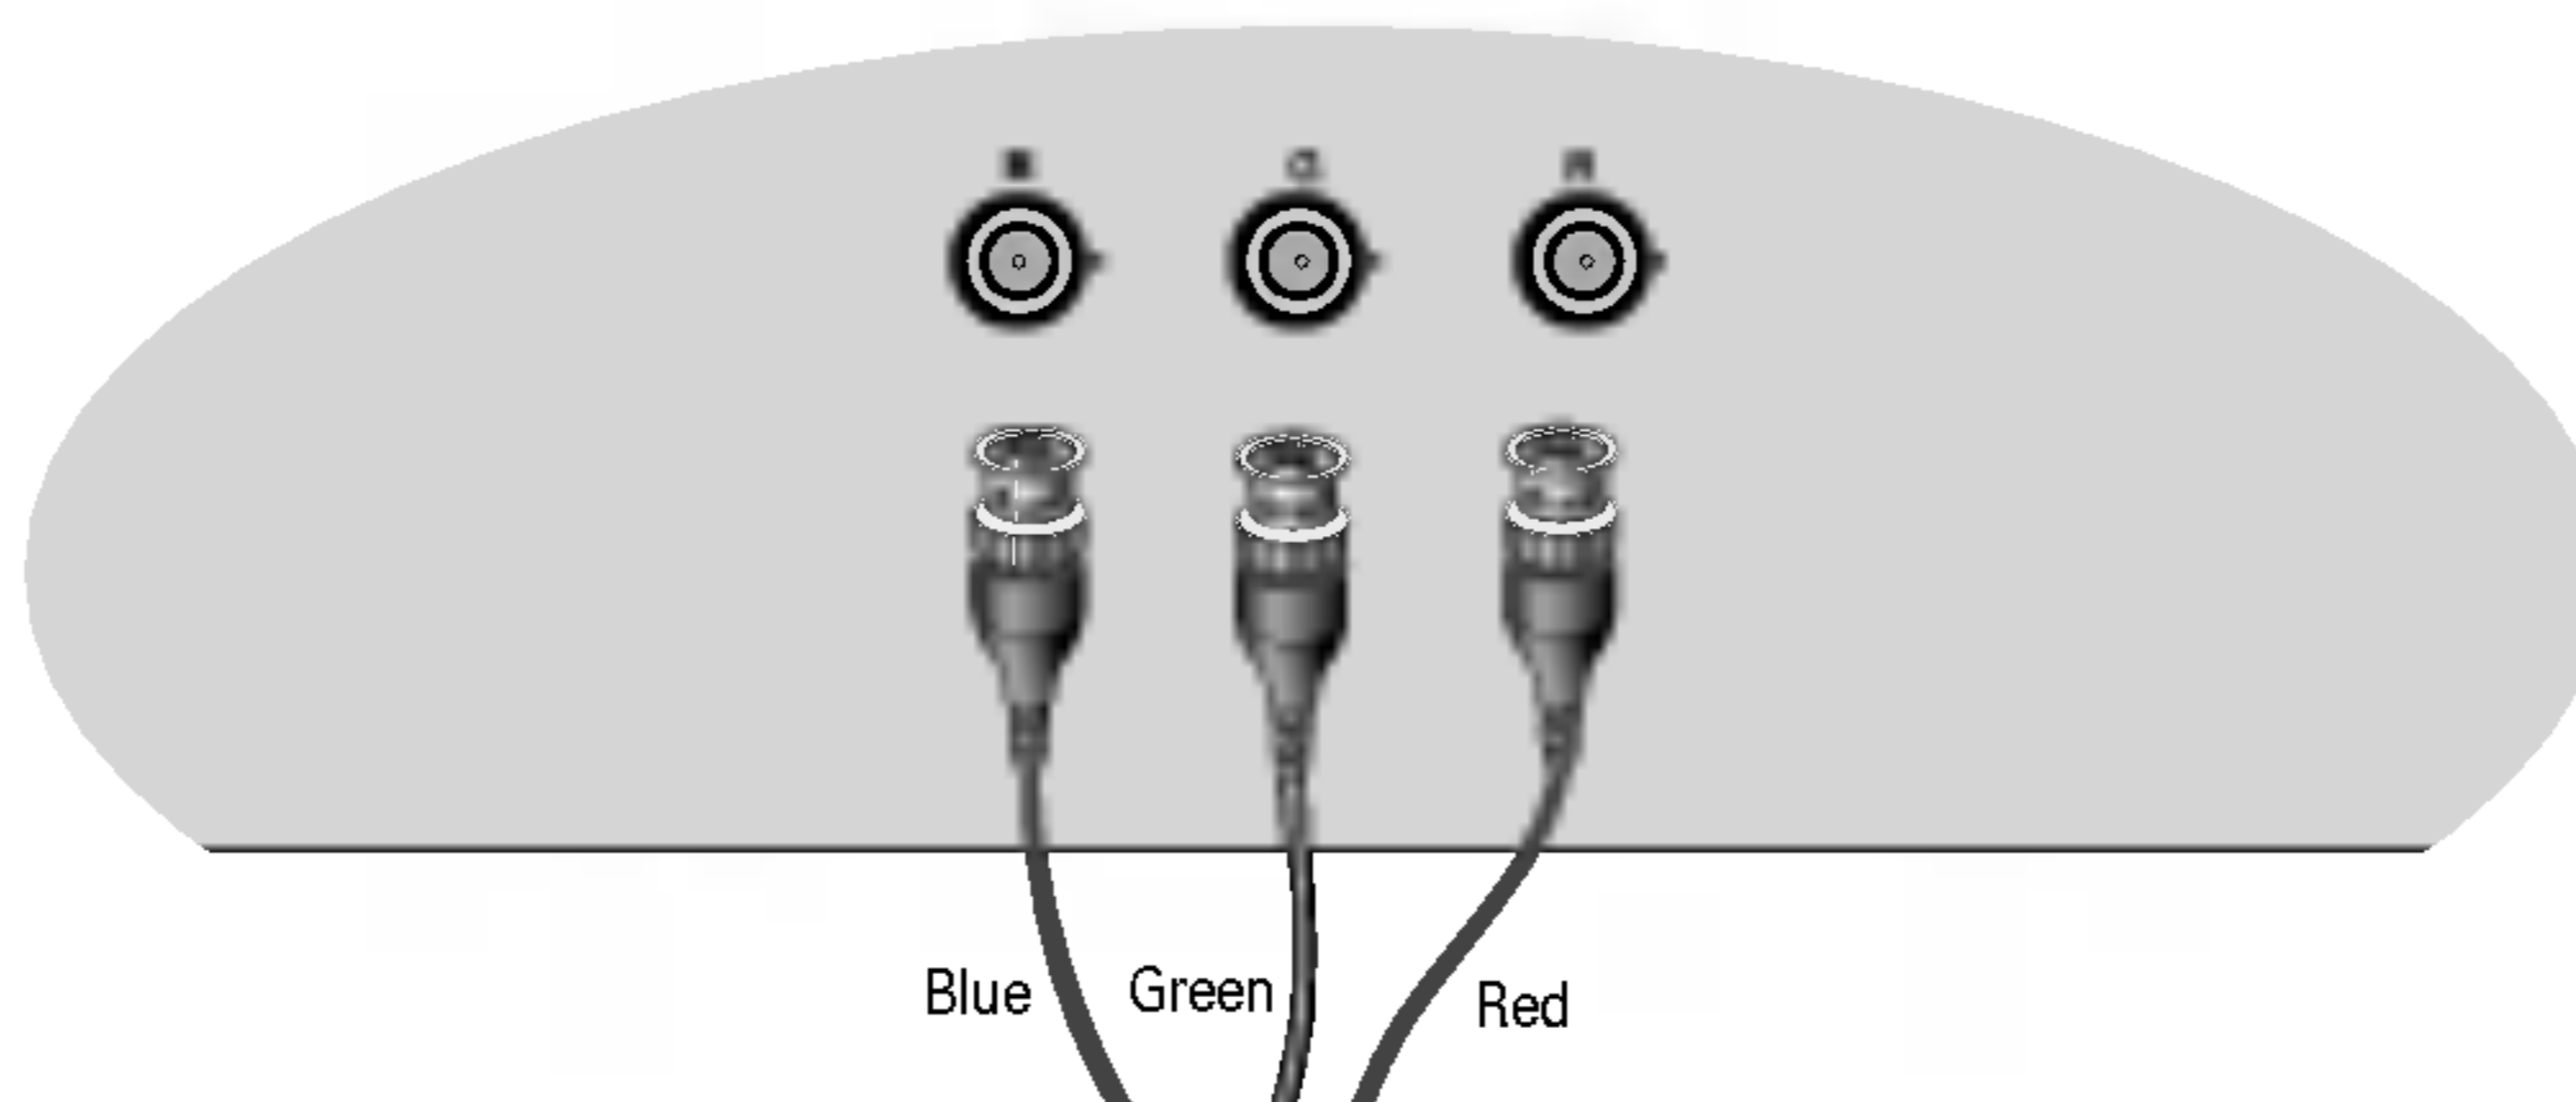

2. In case of using an external composite sync signal:  
Connect each R, G and B video signals and composite sync signal to the BNC receptacles on the rear panel.

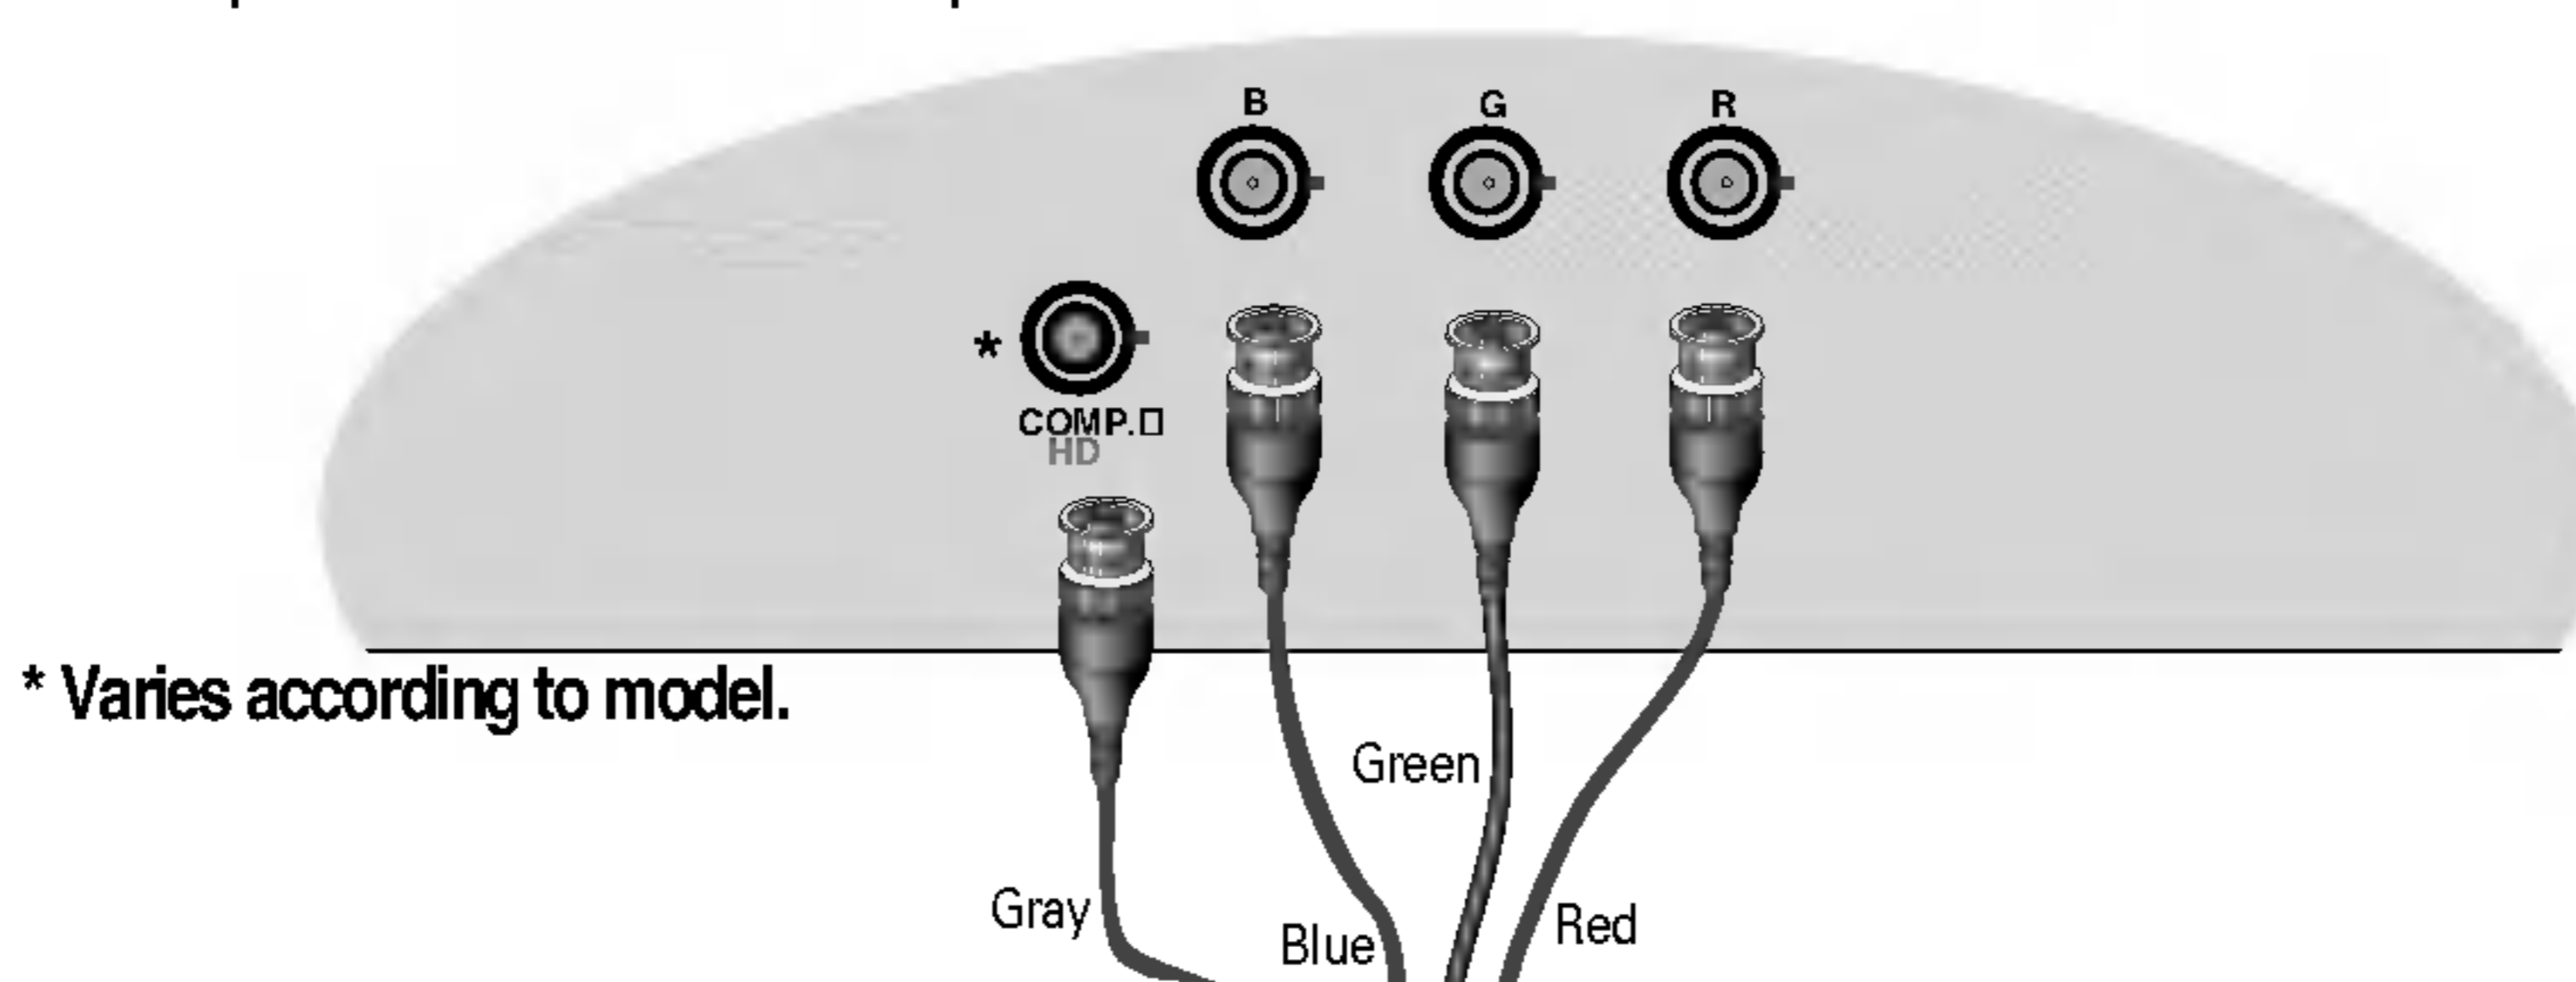

3. In case of using a separate horizontal and vertical sync signal:  
Connect each R, G and B video signals and the horizontal and vertical sync signal to BNC receptacles on rear panel.

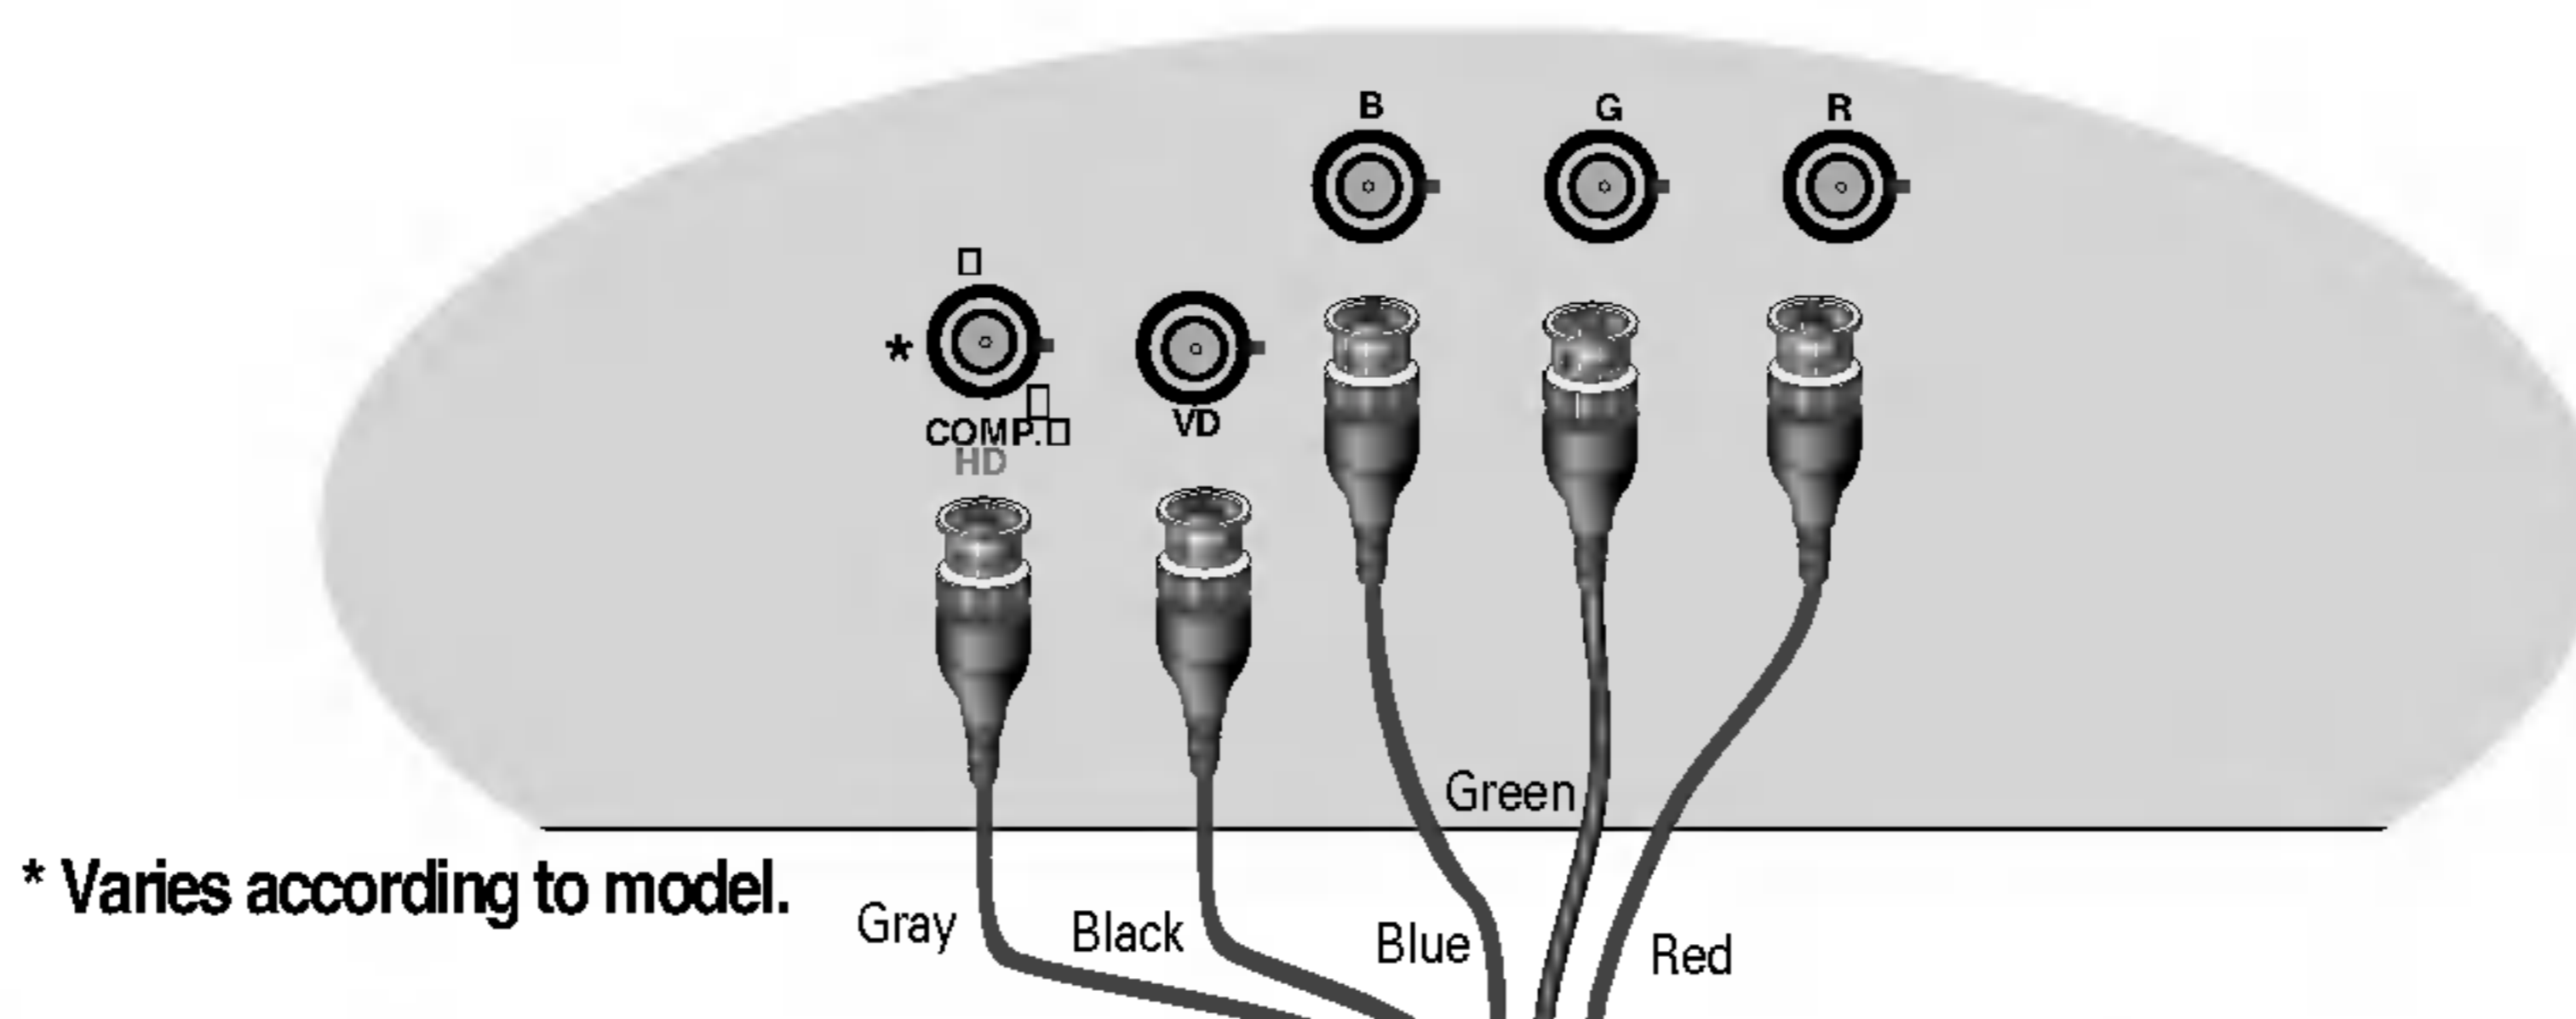

## NOTE

- This package does not include the BNC connectors but you can purchase them at your local computer stores.
- This monitor does not support the DDC function, if you use the 5 BNC connectors with other types of video cards.

**HD** : Horizontal Drive  
**VD** : Vertical Drive  
**COMP** : Composite


# Making use of USB (Universal Serial Bus)

**USB (Universal Serial Bus) is an innovation in connecting your different desktop peripherals conveniently to your computer. By using the USB, you will be able to connect your mouse, keyboard, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. USB allows you to connect chain up to 120 devices on a single USB port, and you can “hot” plug (attach them while the computer is running) or unplug them while maintaining Plug and Play auto detection and configuration. This monitor has an integrated self-powered USB hub, allowing up to 4 other USB devices to be attached it.**


## USB connection

1. Connect the upstream port of the monitor to the downstream port of the USB compliant PC or another hub using the USB cable (Computer must have a USB port).
2. Connect the USB compliant peripherals to the downstream ports of the monitor.

- This is a simplified representation of the rear view.

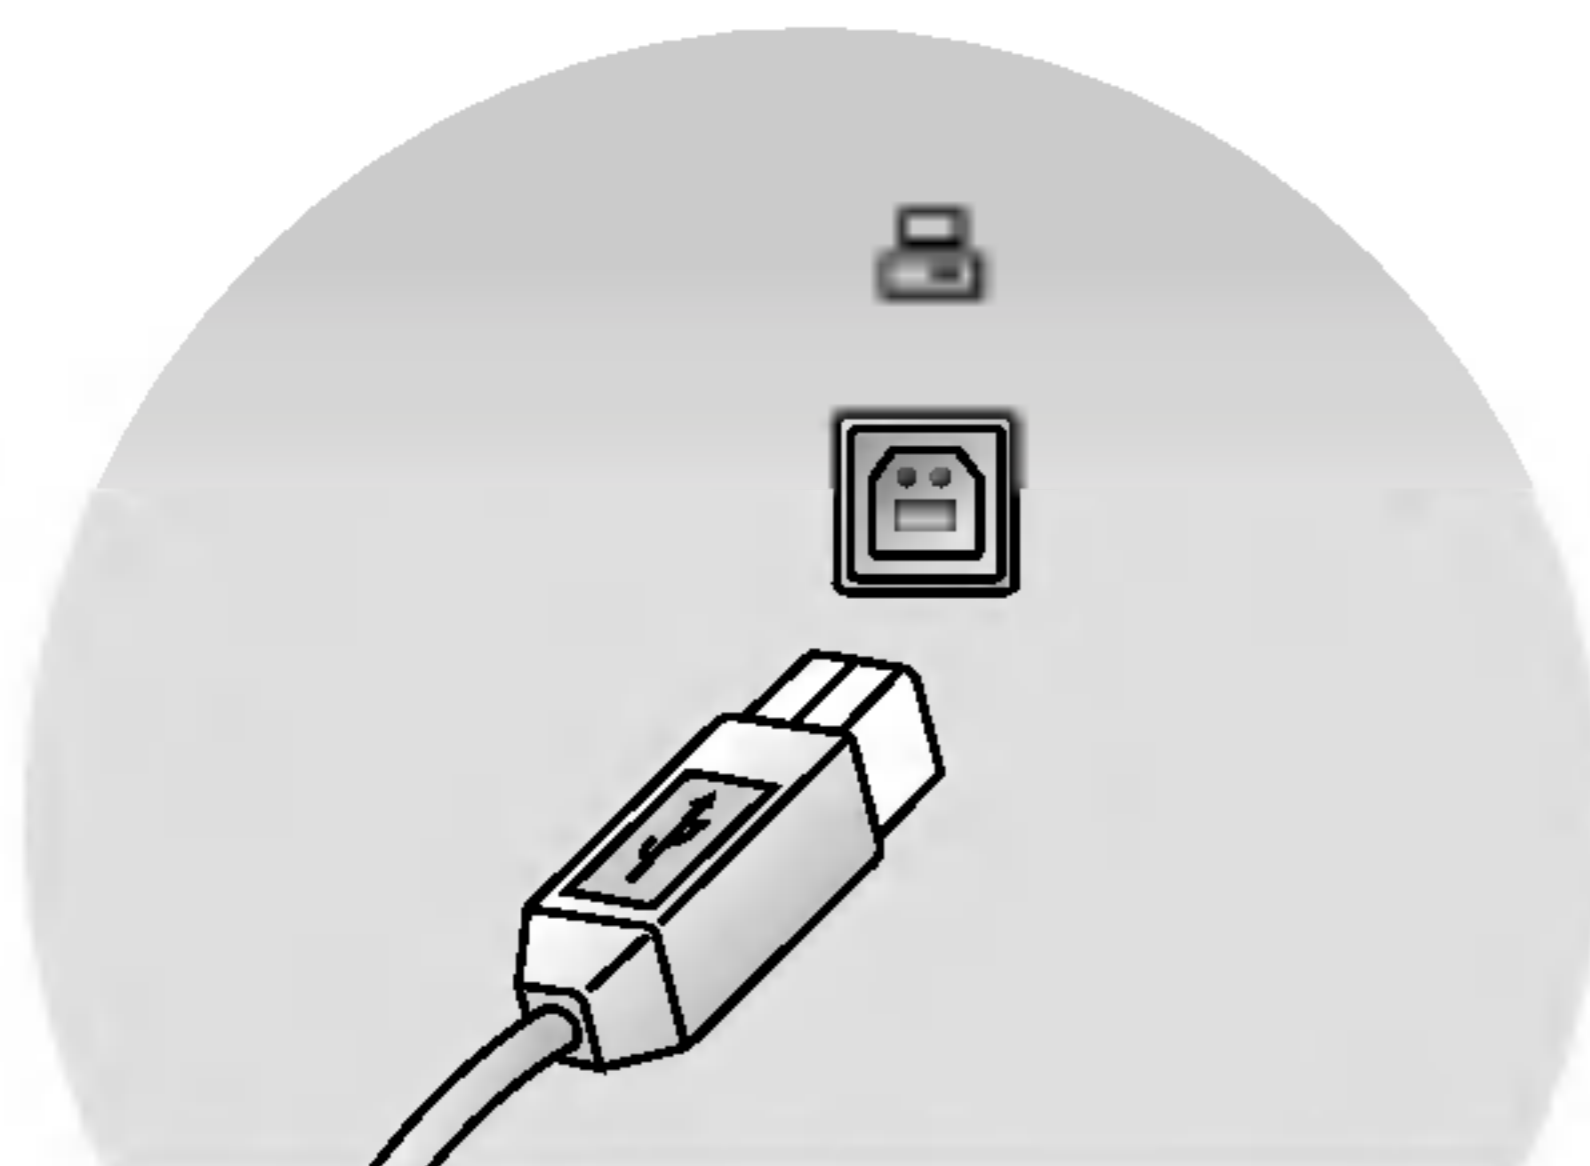

To **USB downstream port** of the USB compliant PC or another hub cable

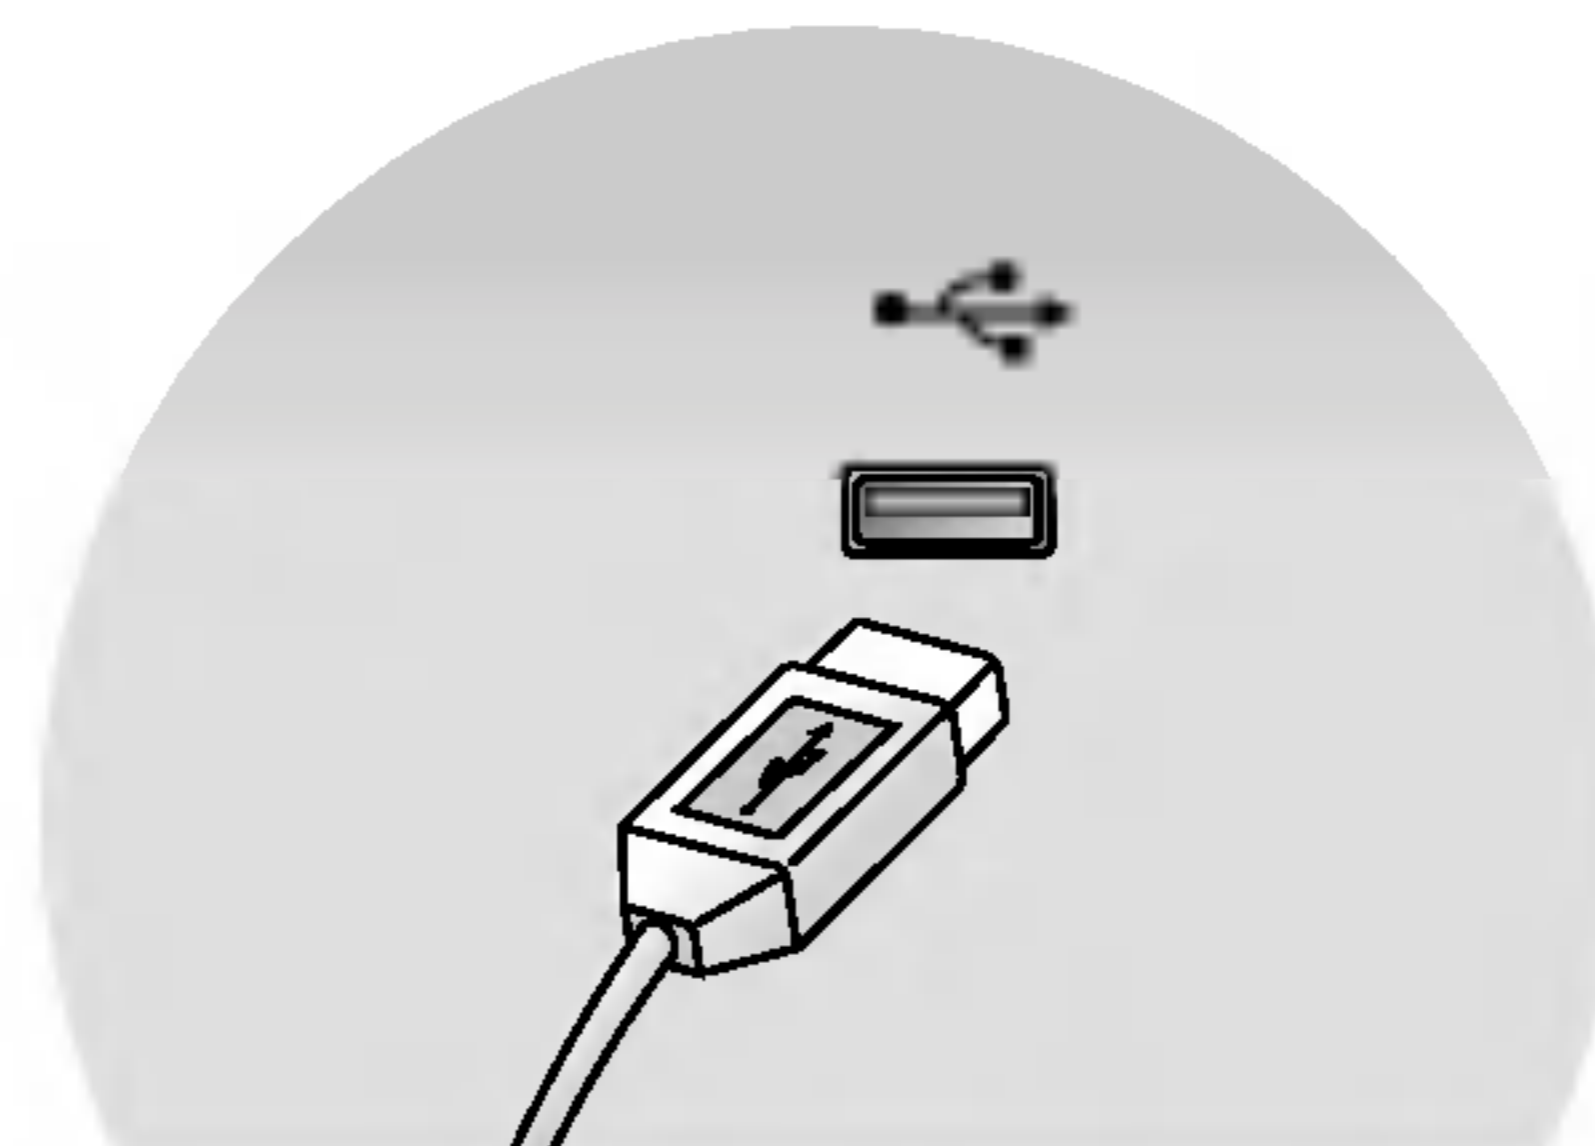

**USB downstream Ports** connect the cables from USB compliant peripherals-such as keyboard, mouse, printer, scanner, etc

### NOTE

- To activate the USB hub function, the monitor must be connected to a USB compliant PC(OS) or another hub with the USB cable(enclosed).
- When connecting the USB cable, check that the shape of the connector at the cable side matches the shape at the connecting side.
- Even if the monitor is in a power saving mode, USB compliant devices will function when they are connected the USB ports(both the upstream and downstream) of the monitor.

## USB Specifications

<b>USB standard</b>	Rev. 1.1 complied Self-powered hub
<b>Downstream power supply</b>	500mA for each (MAX)
<b>Communication speed</b>	12 Mbps (full), 1.5 Mbps (low)
<b>USB port</b>	1 Upstream port / 4 Downstream ports

**IMPORTANT:** These USB connectors are not designed for use with high-power USB devices such as a video camera, scanner, etc. LGE recommends connecting high-power USB devices directly to the computer

