



# Color Television OWNER'S MANUAL

Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote this  
information to your dealer when you require service.

Internet Home Page : <http://www.lge.com>

# Safety Precautions

**WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

**CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK). NO USER-SERVICEABLE PARTS IN SIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

## Cleaning

Unplug this television receiver from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Do not use attachments not recommended by the television receiver manufacturer as they may cause hazards.

## Power Supply

This television receiver should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your television dealer or local power company.

## Installation

Do not use this television receiver near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Do not place this television receiver on an unstable cart, stand, or table. The television receiver may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television receiver. Wall or shelf mounting should follow the manufacturer's instructions and should use a mounting kit approved by the manufacturer.

Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the television receiver, and to protect it from overheating. These openings must not be blocked or covered. The openings should

never be blocked by placing the television receiver on a bed, sofa, rug, or other similar surface. This television receiver should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.

It is recommended not to operate this unit near speakers or big metallic furnitures in order to keep their magnetism from disturbing colors purity (uniformity) on the screen.

## Wet Location Marking:

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## Use

Do not allow anything to rest on the power cord. Do not locate this television receiver where the cord will be abused by persons walking on it.

Do not overload wall outlets and extension cords as this can result in fire or electric shock.

Never push objects of any kind into this television receiver through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock.

Never spill liquid of any kind on the television receiver.

## Service

Do not attempt to service this television yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified personnel.

## Writing Model And Serial Numbers

The serial number and model number are found on the back of this unit. The serial number is unique to this unit. You should record requested information here and retain this guide as a permanent record of your purchase. Please retain your purchase receipt as your proof of purchase.

Date of Purchase \_\_\_\_\_

Dealer Purchased from \_\_\_\_\_

Dealer Address \_\_\_\_\_

Dealer Phone No. \_\_\_\_\_


Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# CONTENTS

<b>Description of controls .....</b>	<b>4 ~ 6</b>
<b>Basic TV operation .....</b>	<b>7</b>
Turning on/off the TV .....	7
Selecting the on screen language .....	7
Memorizing Channels .....	8
Memorizing the Channels by AUTO PROGRAM .....	8
Memorizing the Channels by MANUAL PROGRAM .....	9
Selecting the Channel .....	9
Adjusting the Volume .....	9
<b>Various function .....</b>	<b>10</b>
Booster .....	10
Adjusting the Fine Tuning .....	10
Favorite channel memory .....	10
Setting the Clock .....	11
Setting the OFF TIMER .....	11
Setting the ON TIMER .....	11
Setting the Sleep Time .....	12
Auto Off .....	12
Key Lock .....	13
XD Demo .....	13
Blue back .....	13
Tilt (some models) .....	14
Operating the degauss (some models) .....	14
Auto Demonstration .....	14
<b>Picture control .....</b>	<b>15</b>
Enjoying the Eye Function (some models) .....	15
Auto Picture Control .....	15
XD .....	16
Cinema .....	16
VM (Velocity Modulation) .....	16
Virtual HD .....	17
Adjusting the Picture .....	17
<b>Sound control .....</b>	<b>18</b>
Enjoying the Stereo/SAP Broadcast .....	18
Auto Sound Control .....	18
Adjusting the DBS (Dynamic Bass Sound) (some models) .....	18
AVL (Auto Volume Leveler) .....	19
Adjusting the balance .....	19
X-WAVE (some models) .....	19
Turbo Sound (some models) .....	20
Adjusting the equalizer (User mode in Auto Sound Control) .....	20
<b>Closed caption function .....</b>	<b>21</b>
Using Closed Captions .....	22
Operating the Caption and Text .....	22
<b>PIP function (some models) .....</b>	<b>23</b>
Watching the PIP (PiCTure in PiCTure) .....	23
Selecting the input signal (in PIP and Double window mode) .....	23
Moving the Sub Picture (in PIP mode) .....	24
Swapping Screens .....	24
Still Picture .....	24
PIP size (in PIP mode) .....	24
<b>Antenna Connections .....</b>	<b>25</b>
<b>Connection of external equipment (some models) .....</b>	<b>26 ~ 27</b>
<b>Connecting DVD player (some models) .....</b>	<b>28</b>
<b>Troubleshooting check list .....</b>	<b>29</b>

## Description of controls

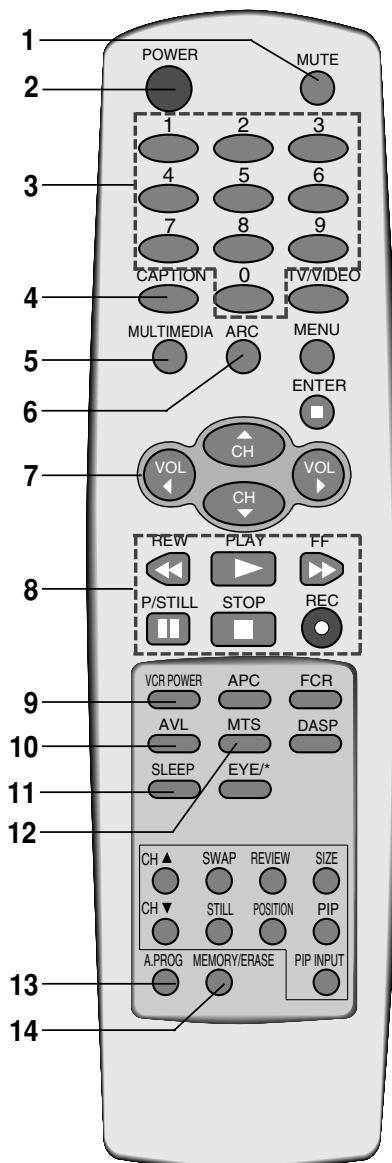

### 1. MUTE BUTTON

To mute the sound. Again to restore the muted sound.

### 2. POWER BUTTON (or ON/OFF)

Refer to "Turning on/off the TV".

### 3. NUMBER BUTTONS

To select the desired channel directly.

Switches the set on from standby.

### 4. CAPTION BUTTON

To select the CAPTION mode.

Refer to "Closed caption function".

### 5. MULTIMEDIA BUTTON

To select COMPONENT mode.

### 6. ARC BUTTON

Selects the picture formats.

### 7. CHANNEL UP/DOWN ( $\Delta/\nabla$ ) BUTTONS

- To select the desired channel.
- To select the desired menu item when menu is displayed on the screen.
- Switches the set on from standby.

### VOLUME UP/DOWN ( $\blacktriangleleft/\triangleright$ ) BUTTONS

- To increase or decrease volume level.
- To enter or adjust the selected menu when menu is displayed on the screen.

### 8. VCR BUTTONS

To control LG video cassette recorder.

### 9. VCR POWER BUTTON

Turns your LG video cassette recorder.

### 10. AVL (Auto Volume Leveler) BUTTON (some models)

To keep on equal volume level of each channel.

### 11. SLEEP BUTTON

To set the desired sleep time.

### 12. MTS BUTTON

To listen to the MTS sound : **MONO, STEREO or SAP**.

### 13. A.PROG BUTTON

To memorize channels by AUTO PROGRAM.

### 14. MEMORY/ERASE BUTTON

To memorize or erase the desired channel.



### 15. TV/VIDEO BUTTON

To select TV, VIDEO or COMPONENT mode.

Switches the set on from standby.

### 16. MENU BUTTON

To display on-screen.

### 17. ENTER (■) BUTTON

- To memorize the adjusted menu.
- To recall the current TV mode (by remote control only).

### 18. APC (Auto Picture Control) BUTTON

To adjust the factory preset pictures corresponding to the lighting around.

### 19. FCR (Favorite Channel Review) BUTTON

To select the favorite channel.

Refer to "Favorite channel memory".

### 20. DASP BUTTON

To select the sound appropriate to your viewing program character ; **Flat, Music, Movie, Sports or User**.

### 21. EYE BUTTON (some models)

To switch on or off eye picture.

Refer to "Enjoying the Eye Function".

### 22. PIP (Picture in Picture) BUTTONS (some models)

#### CH ▲/▼ BUTTONS

To select the desired channel of the sub picture

#### SWAP BUTTON

To exchange the main picture and sub picture.

#### STILL BUTTON

To stand still the picture in sub picture.

#### REVIEW BUTTON (some models)

To return to the previous channel.

#### POSITION BUTTON

To move the sub picture to another corner of the main picture.

#### SIZE BUTTON

To select the desired size of the sub picture.

#### PIP BUTTON


To switch the sub picture on or off.

#### PIP INPUT BUTTON

To select the input signal of the sub picture.

## Description of controls

This is a simplified representation of front panel.

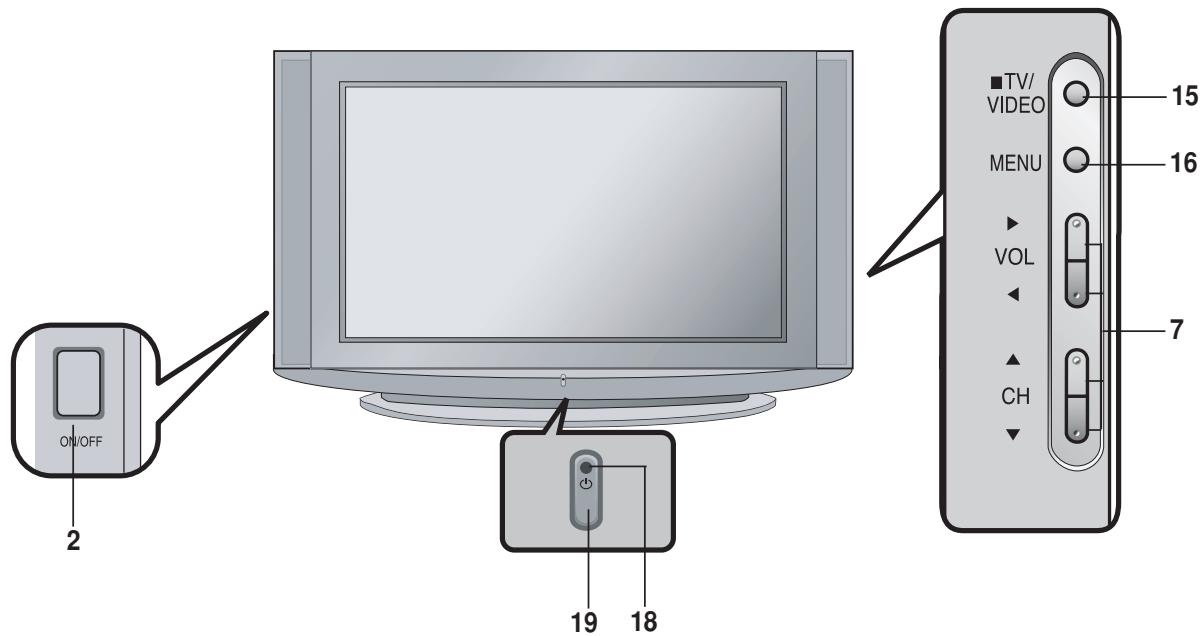

### 18. STAND BY INDICATOR (STAND BY or $\odot$ )

Illuminates red when the TV is in standby mode. Refer to "Turning on/off the TV".

### 19. REMOTE CONTROL SENSOR

## Fitting Batteries in the Remote Control Unit

The remote control is powered by batteries. This requires **AA** type batteries for operation. To ensure consistent operation, change the batteries about once a year.

**Caution :** Batteries installed incorrectly may leak and damage the remote control. Do not mix old and new batteries or different types of batteries (for example, standard and alkaline).

1. Remove the battery compartment cover by sliding it in the arrowhead direction.
2. Insert new batteries as indicated by the polarity markings (+ and -) inside the compartment.
3. Replace the battery compartment cover.

## Basic TV operation

Before operating your TV, make sure the following instructions have been completed.

- Your TV has been connected to an antenna or a cable system.
- Your TV has been plugged in a power outlet.
- In this manual, the OSD (On Screen Display) may be different from your TV's because it is just an example to help you with the TV operation.

### Turning on/off the TV

Press the **POWER** (or **ON/OFF**) button on the set. At this time, the set switches to standby mode and the standby indicator lights up in red.

To switch the TV on from standby mode, press the **TV/VIDEO**, **CH ▲/▼** button on the set or **POWER**, **TV/VIDEO**, **CH ▲/▼** or number button on the remote control.

A channel number will be displayed on the screen. The on-screen display will disappear after a few seconds.

Press the **POWER** button on the remote control. It reverts to standby mode.


To switch the TV off, press the **POWER** button on the set.

### Selecting the on screen language

1. Press the **MENU** button and then **▲ / ▼** button until the menu is displayed as shown right.
2. Press the **►** and then **▲/▼** button to select **Language**.
3. Press the **►** and then use **▲ / ▼** button to select the desired language.

From this point on, the on-screen display will be presented in the language of your choice.

4. Press the **MENU** button to exit.

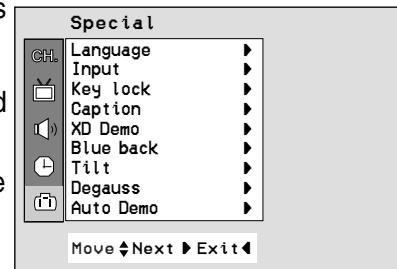

## Basic TV operation

### Memorizing Channels

This is the function to memorize all the active channels in your area before you can use the TV.

There are two ways of memorizing channels. You can use either.

One is called **AUTO PROGRAM** and the other is called **MANUAL PROGRAM**.

In **AUTO PROGRAM** the TV will memorize the channels in ascending order. If there are additional channels you want to add or delete, you can manually add or delete those channels.

### Memorizing the Channels by AUTO PROGRAM

**AUTO PROGRAM** searches and memorizes all the active channels in your area then you can select the desired channel with the ▲ / ▼ buttons.

#### Using the A.PROG button

You can conveniently perform AUTO PROGRAM using the **A.PROG** button on the remote control.

1. Press the **A.PROG** button.
2. Press the ► or **A.PROG** button.  
The AUTO PROGRAM starts now.

If you want to stop auto programming, press the **ENTER** (■) button.  
Only the channels searched up to that time are memorized.



**Notes :** • If the programmed signal has poor quality, memorize again in the **Auto program**.

- AUTO PROGRAM stores all receivable channels regardless of receiving signal (RF, Cable).
- If channels of general wireless TV and cable TV are duplicated, press the number buttons (0 ~ 9) to change as .

Channels of general wireless TV   ↔   Channels of Cable TV

#### Using the MENU button

1. Press the **MENU** button and then use ▲ / ▼ button to select the channel menu.
2. Press the ► and then ▲/▼ button to select **Auto program**.
3. Press the ► button to enter the **Auto program** mode.
4. The AUTO PROGRAM starts now.

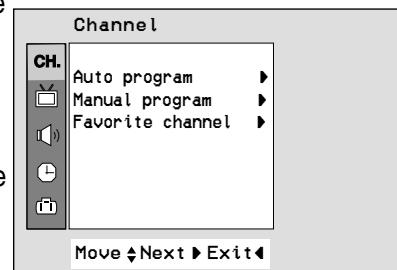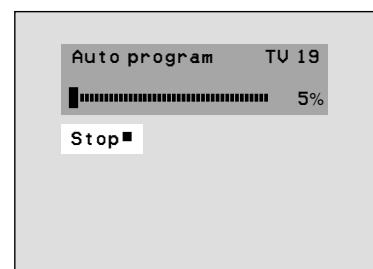

## Memorizing the Channels by MANUAL PROGRAM

### Using the MEMORY/ERASE button

You can conveniently perform MANUAL PROGRAM using the **MEMORY / ERASE** button on the remote control.



1. Press the **▲ / ▼** or **NUMBER** buttons to select the channel number you want to memorize or erase.
2. Press the **MEMORY/ERASE** button to select **Memory** or **Erase**.

The on screen display appears as shown right.

CATU 95 Memory

### Using the MENU

1. Press the **MENU** button and then use **▲ / ▼** button to select the channel menu.
2. Press the **▶** and then use **▲ / ▼** button to select **Manual program**.
3. Press the **▶** button and then use **▲/▼** button to select **Channel**.
4. Press the **▶** button and then use **▲/▼** button to select the channel number you want to memorize or erase.
5. Press the **◀** button and then use **▲/▼** button to select **Memory**.
6. Press the **▶** button and then **▲/▼** to select **Memory** or **Erase**.
7. Press the **◀** button and then use **▲/▼** button to select **Name**.  
You can make a channel name.
8. Press the **▶** button and then **◀/▶** button to select a word position and then **▲/▼** button to enter alphabet **A** to **Z**, number **0** to **9**, or blank.
9. Repeat steps 3 to 8 to memorize or erase other channels.
10. Press the **MENU** button to exit.

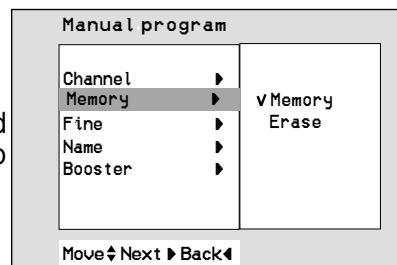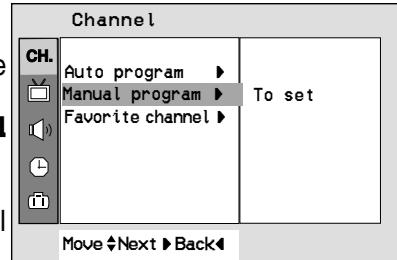


## Selecting the Channel

Press the **▲ / ▼** button to conveniently select the upper or lower channel then the channel being viewed, or **NUMBER** buttons to directly select the desired channel.

## Adjusting the Volume

Press the **▶** button to increase the volume level or **◀** button to decrease the volume level.

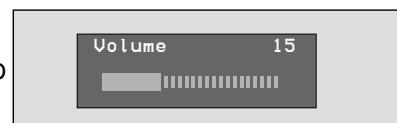

To mute the sound, Press the **MUTE** button.  
It's convenient when you get the telephone calls.

To restore the muted sound, press the **MUTE** button again or **VOL ▲/▶** button.




## Various function

### Booster

When the interference between programs appear, select **Booster** to **Off**.

1. Press the **MENU** button and then use **▲ / ▼** button to select the channel menu.
2. Press the **▶** and then use **▲/▼** button to select **Manual prog..**
3. Press the **▶** button and then use **▲/▼** button to select **Booster**.
4. Press the **▶** and then use **▲/▼** button to select **On** or **Off**.
5. Press the **MENU** button to exit

Note : Adjustment for one channel don't affect the adjustment of other channels. Readjust booster for desired channel separately.

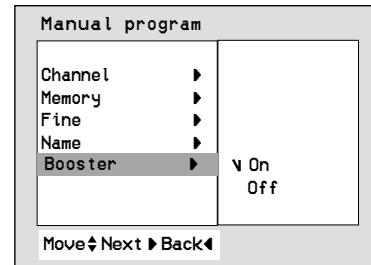


### Adjusting the Fine Tuning

This function is to adjust the picture to stable condition when it is poor, for example, a horizontal stripe, twisted picture or no color in broadcasting.

1. Press the **MENU** button and then use **▲ / ▼** button to select the channel menu.
2. Press the **▶** and then use **▲/▼** button to select **Fine**.
3. Press the **▶** and then use **◀ / ▶** button to tune the desired picture condition.
4. Press the **ENTER (■)** button to memorize.


**Notes :** • To release the memorized fine tuning, program again the fine-tuned channel by AUTO PROGRAM or MANUAL PROGRAM.  
• If the finely tuned channel is memorized, the color of the channel number changes to orange.

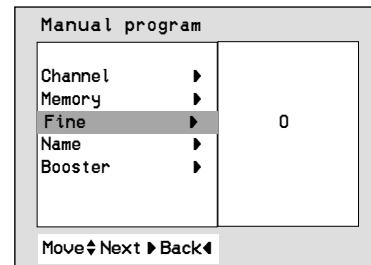

### Favorite channel memory

Favorite channel memory is a convenient feature that lets you quickly scan up to five channels of your choice without having to wait for the TV to scan through all the in-between channels.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Channel menu.
2. Press the **▶** and then **▲/▼** button to select **Favorite channel**.
3. Press the **▶** button and then use **▲ / ▼** button to select a favorite channel position.
4. Use the **◀/▶** button to select the desired channel number.
5. Repeat steps 3 to 4.
6. Press the **MENU** button to exit.

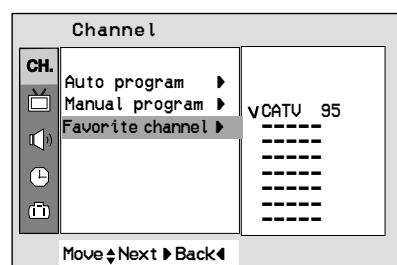


To select the favorite channel, repeatedly press the **FCR** (Favorite Channel Review) button. Eight channels programmed appear on the screen one by one.

## Setting the Clock

Before setting the on/off timer, first you should set the current time.


1. Press the **MENU** button and then use **▲ / ▼** button to select the Timer menu.
2. Press the **▶** and then **▲/▼** button to select **Clock**.
3. Press the **▶** button and then press the **▲ / ▼** button to adjust the hour.
4. Press the **▶** button and then press the **▲ / ▼** button to adjust the minute.
5. Press the **MENU** button to exit.

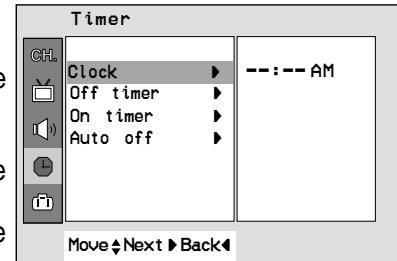

## Setting the OFF TIMER

This is the function to automatically switch the TV to standby mode at a preset time.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Timer menu.
2. Press the **▶** and then **▲/▼** button to select **Off timer**.
3. Press the **▶** button and then press the **▲ / ▼** button to adjust the hour.
4. Press the **▶** button and then press the **▲ / ▼** button to adjust the minute.
5. **On/Off** is used to activate or deactivate preset on/off times.  
Press the **▶** and then **▲/▼** button to select **Off** or **On**.
6. Press the **MENU** button to exit.

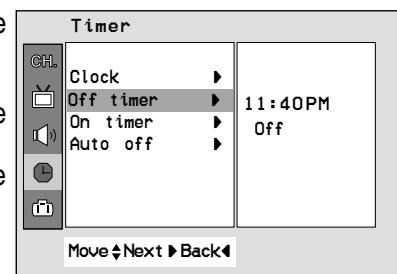


**Note:** If the same time is set for the on time and off time, only the off time operates.

## Setting the ON TIMER

This is the function to automatically turn the TV on at a preset time and channel.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Timer menu.
2. Press the **▶** and then **▲/▼** button to select **On timer**.
3. Press the **▶** and then use **▲ / ▼** button to adjust the hour.
4. Press the **▶** and then use **▲ / ▼** button to adjust the minute.
5. Press the **▶** and then use **▲ / ▼** button to select the desired channel among the memorized channels in auto program.
6. Press the **▶** and then use **▲ / ▼** button to adjust the desired volume level.
7. **On/Off** is used to activate or deactivate preset on/off times.  
Press the **▶** button and then use **▲/▼** button to select **Off** or **On**.
8. Press the **MENU** button to exit.

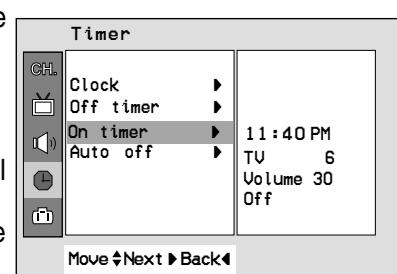

**Notes:** •If you don't press any button within 2 hours after turning on the TV set by ON TIMER function, the set will be automatically switched back to standby mode.  
•TV must be in standby mode for the On timer to work.

## Various function


### Setting the Sleep Time

You don't have to remember to switch the TV to standby mode before you go to sleep. The sleep timer automatically turns the TV off after the preset time elapses.

Press the **SLEEP** button to select the desired sleep time.

Each time you press this button, the sleep time is displayed one by one as shown below. The timer begins to count down from the number of minutes selected.

→ --- → **10** → **20** → **30** → **60** → **90** → **120** → **180** → **240**

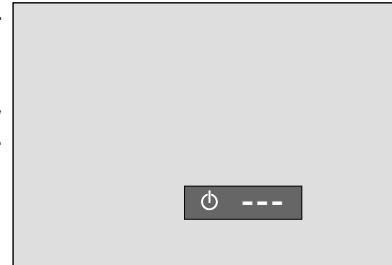


- Notes:**
- After a few seconds, the desired sleep time will disappear and be operated automatically.
  - To view the remaining sleep time, press the **SLEEP** button once and the remaining sleep time will be displayed.
  - To cancel the sleep time, select the **⊖---** mode by using the **SLEEP** button.

### Auto Off

If there is no input signal, the TV is switched to standby mode automatically in 10 minutes.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Timer menu.
2. Press the **▶** and then **▲/▼** button to select **Auto off**.
3. Press the **▶** and then **▲/▼** button to select **On** or **Off**.
4. Press the **MENU** button to exit.

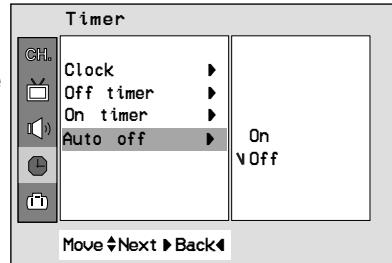


## Key Lock

The TV can be set so that the remote control is needed to control it. This feature can be used to prevent unauthorized viewing.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Special menu.
2. Press the **▶** and then **▲/▼** button to select **Key lock**.
3. Press the **▶** button and then **▲/▼** button to select **On** or **Off**.
4. Press the **MENU** button to exit.

**Notes :** • With the key lock on, the display **Key lock** appears on the screen if any button on the front panel is pressed while viewing the TV.


- This programmed to remember which option it was last set to even if you switch the TV from standby mode.

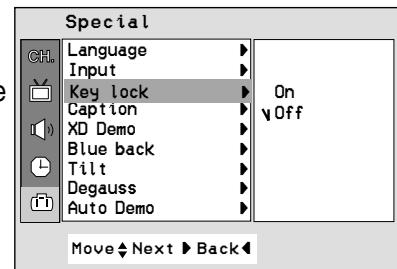

## XD Demo

Use it to see the difference between XD demo on and XD Demo off.


1. Press the **MENU** button and then use **▲ / ▼** button to select the Special menu.
2. Press the **▶** button and then use **▲/▼** button to select **XD demo**.
3. Press the **▶** button to begin **XD demo**.
4. To stop **XD demo**, press the **MENU** button.

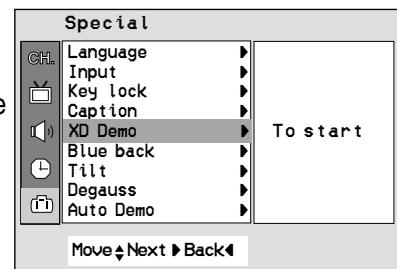

## Blue back

If you select **On** on the **Blue back** pull-down menu, the blue background appears on the screen when there is no or poor signal.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Special menu.
2. Press the **▶** button and then use **▲/▼** button to select **Blue back**.
3. Press the **▶** button and then use **▲/▼** button to select **On** or **Off**.
4. Press the **MENU** button to exit.

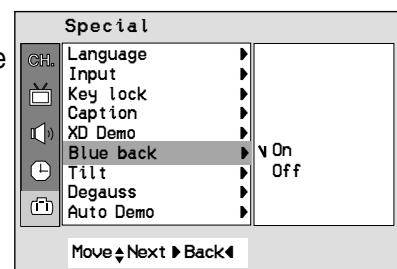


## Various function

### Tilt (some models)

The picture of the set may tilt to left or right if the set is moved to another direction. This function is to adjust the tilt.


1. Press the **MENU** button and then use **▲ / ▼** button to select the Special menu.
2. Press the **▶** and then **▲/▼** button to select **Tilt**.
3. Press the **▶** button and then use **◀/▶** button to adjust the tilt.
4. Press the **MENU** button to exit.

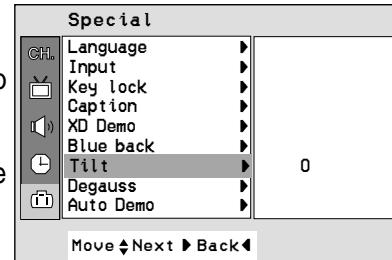

### Operating the degauss

In this TV set the magnetic field of the earth may influence on the color purity of picture by neighbor magnetic substance or installation direction of the TV set. The stripes may appear on the screen or the color may not be equal in the corner. You can enjoy the program in high color quality by operating the Degauss.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Special menu.
2. Press the **▶** and then **▲/▼** button to select **Degauss**.
3. Press the **▶** button and then use **▲/▼** button to select **On** or **Off**.  
After the degaussing function works, **On** mode switches to **Off** mode automatically.
4. Press the **MENU** button to exit.

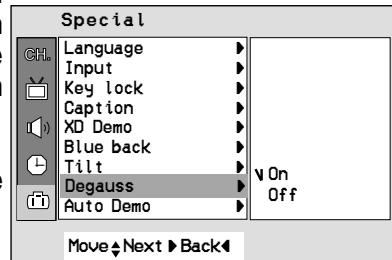

**Notes:** •Do not operate this function often because the lifetime of CPT may be shorten.  
•If you cannot adjust the screen condition by degaussing, try it again after about 4 minutes.


### Auto Demonstration

Auto demo allows you to review all the menus available on the TV set.

1. Press the **MENU** button and then use **▲ / ▼** button to select the Special menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Auto demo**.
3. Press the **▶** button, and the demonstration starts.

When the demonstration reaches the last display, it starts again from the beginning.

To stop auto demonstration, press any button.

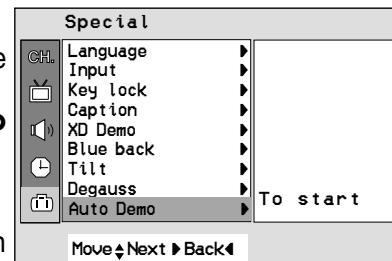


## Picture control

### Enjoying the Eye Function (some models)

The set will automatically adjust the picture according to the surrounding conditions with the display **EYE**.

1. Press the **EYE** button on the remote control.  
The display **EYE** appears and the picture is adjusted.
2. Press the **EYE** button again to switch the Eye function off.

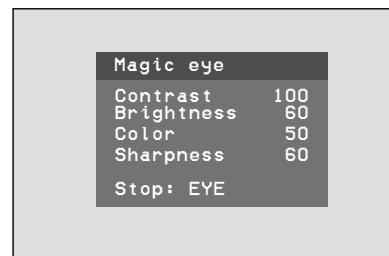

### Auto Picture Control

You can select picture modes programmed at factory as you prefer.


#### Using the APC button

1. Press the **APC** button.
2. Press the **APC** button to select **Clear**, **Optimum**, **Soft** or **User**.
3. Press the **ENTER(■)** button to exit.



#### Using the MENU button

1. Press the **MENU** button and then use **▲ / ▼** button to select the Picture menu.
2. Press the **▶** and then **▲ / ▼** button to select **APC**.
3. Press the **▶** button to enter the **APC** mode.
4. Press the **▲ / ▼** button to select **Clear**, **Optimum**, **Soft** or **User**.
5. Press the **MENU** button to exit.

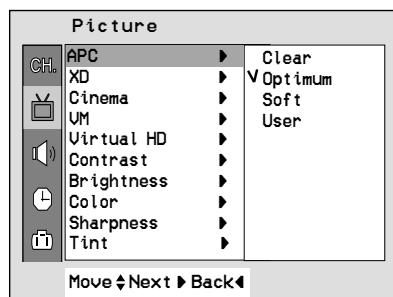


## Picture control

### XD

XD is LG Electronic's unique picture improving technology to display a real HD source through an advanced digital signal processing algorithm.

1. Press the **MENU** button and then use **▲ / ▼** button to select the picture menu.
2. Press the **▶** and then use **▲/▼** button to select **XD**.
3. Press the **▶** and then use **▲/▼** button to select **On** or **Off**.
4. Press the **MENU** button to exit.


Note : When selecting APC options (Clear, Optimum and Soft), XD is automatically change to On.

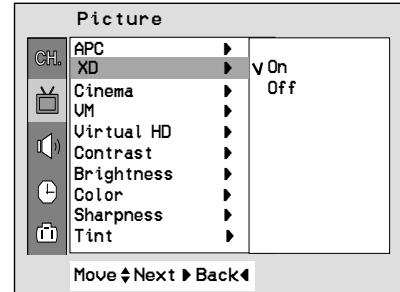

### Cinema

When you watch the movie, this function adjusts the set to the best picture appearance.


1. Press the **MENU** button and then use **▲ / ▼** button to select the picture menu.
2. Press the **▶** and then use **▲/▼** button to select **Cinema**.
3. Press the **▶** and then use **▲/▼** button to select **On** or **Off**.
4. Press the **MENU** button to exit.

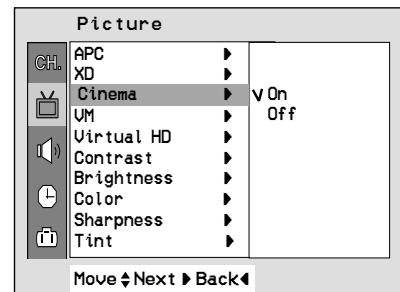

### VM (Velocity Modulation)

The TV will automatically enhance the sharpness of the image's edges.

1. Press the **MENU** button and then use **▲ / ▼** button to select the picture menu.
2. Press the **▶** and then use **▲/▼** button to select **VM**.
3. Press the **▶** and then **◀/▶** button to adjust the VM level.
4. Press the **MENU** button to exit.

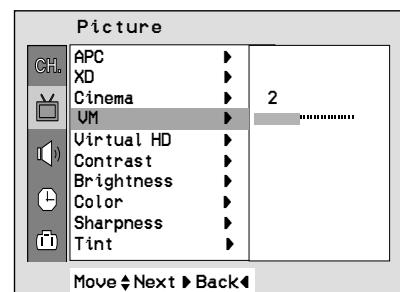


## Virtual HD

1. Press the **MENU** button and then use **▲ / ▼** button to select the Picture menu.
2. Press the **▶** and then use **▲/▼** button to select **Virtual HD**.
3. Press the **▶** and then use **▲/▼** button to select **100, Pro** or **1080i**.
4. Press the **MENU** button to exit.


Note :

- a. When you change to 16:9 mode after selecting **100** for **Virtual HD**, it's automatically changed to **Pro**.
- b. It's not available to use **100** for **Virtual HD** in NTSC signal.

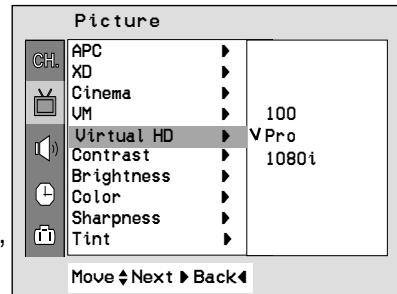


## Adjusting the Picture

This is the function to manually adjust the desired picture levels (**Contrast, Brightness, Color, Sharpness, Tint**) of the screen as you like. If the picture you set is not satisfactory, you can select a factory preset picture. In the broadcasting system PAL-M/N, the picture item **Tint** is not displayed.

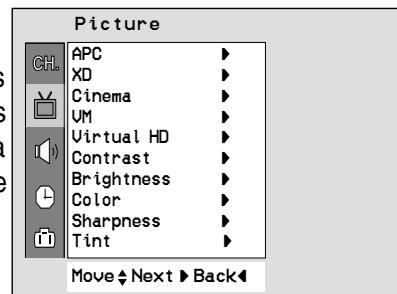

1. Press the **MENU** button and then use **▲ / ▼** button to select the Picture menu.
2. Press the **▶** and then **▲ / ▼** button to select the desired picture mode.
3. Press the **▶** button.
4. Press the **◀/▶** button to adjust the level.  
The level of displayed is adjusted.
5. Press the **MENU** button to exit.

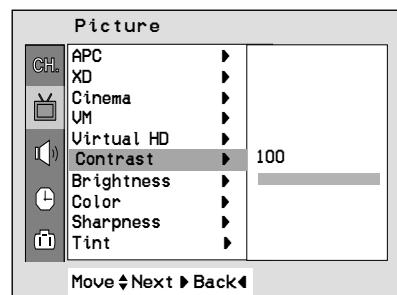

## Sound control

### Enjoying the Stereo/SAP Broadcast

This TV set can receive MTS stereo programs and any SAP (Secondary Audio Program) that accompanies the stereo program, as the system to be transmitted one additional sound signal as well as the original one. MTS function doesn't operate in the video mode.

#### Using the MTS Button

1. Press the **MTS** button to select your desired MTS mode.  
Each time you press this button, the **MONO**, **STEREO** or **SAP** mode appears in turn.
2. Press the **ENTER (■)** button to exit.

#### Notes:

- Stereo or SAP can only be received if the TV station transmits those signals, even though you have selected **STEREO** or **SAP**.
- Mono sound is automatically received if the broadcast is only in Mono; even though **STEREO** or **SAP** has been selected.
- Select **MONO** if you want to listen to mono sound in remote fringe areas during stereo/SAP broadcasting.

### Auto Sound Control

You can enjoy the best sound without any special adjustment because this TV set automatically adjusts the sound appropriate to viewing program character by self-intelligence.


#### Using the DASP Button

1. Press the **DASP** button.
2. Press the **DASP** button to select **Flat**, **Music**, **Movie**, **Sports** or **User**.
3. Press the **ENTER (■)** button to exit.




#### Using the MENU Button

1. Press the **MENU** button and then use **▲ / ▼** button to select the Sound menu.
2. Press the **►** and then the **▲ / ▼** button to select **DASP**.
3. Press the **►** and then the **▲ / ▼** button to select **Flat**, **Music**, **Movie**, **Sports** or **User**.
4. Press the **MENU** button to exit.

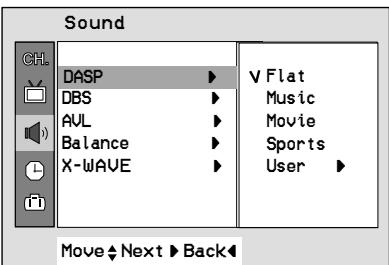

### Adjusting the DBS (Dynamic Bass Sound) (some models)

1. Press the **MENU** button and then use **▲ / ▼** button to select the Sound menu.
2. Press the **►** and then **▲ / ▼** button to select **DBS**.
3. Press the **►** and then **▲ / ▼** button to adjust the DBS level.
4. Press the **MENU** button to exit.

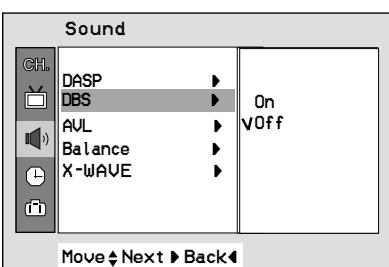


## AVL (Auto Volume Leveler)

AVL automatically keeps on an equal volume level even if you change channels.


### Using the MENU Button

1. Press the **MENU** button and then use **▲ / ▼** button to select the Sound menu.
2. Press the **▶** and then **▲/▼** button to select **AVL**.
3. Press the **▶** and then **▲/▼** button to select **On** or **Off**.
4. Press the **MENU** button to exit.

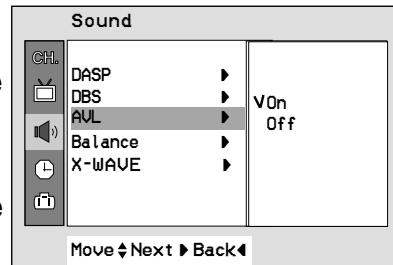

## Adjusting the balance

1. Press the **MENU** button and then use **▲ / ▼** button to select the Sound menu.
2. Press the **▶** and then **▲/▼** button to select **Balance**.
3. Press the **▶** and then **◀/▶** button to adjust the balance level.
4. Press the **MENU** button to exit.


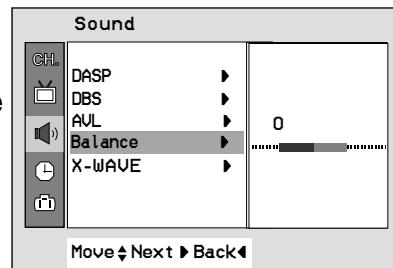


## X-WAVE (some models)

1. Press the **MENU** button and then use **▲ / ▼** button to select the Sound menu.
2. Press the **▶** and then **▲/▼** button to select **X-WAVE**.
3. Press the **▶** and then **▲/▼** button to select **Set Freq**.
4. Press the **▶** button to tune in a frequency on the X-wave menu.
5. Use the number **0** to **9** or press the **◀/▶** button to match the TV's frequency and the FM receiver's.

### Note:


1. If the reception is poor or weak, select a different frequency.
2. For best results, there should be no more than 19ft between the TV and FM Receiver.
3. In certain areas, the FM transmitter ability may be weak, such as near a broadcast tower.
4. The reception sensitivity may depend on the kinds of receiver (FM radio).

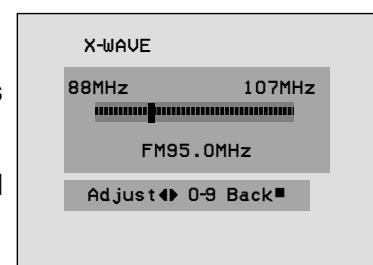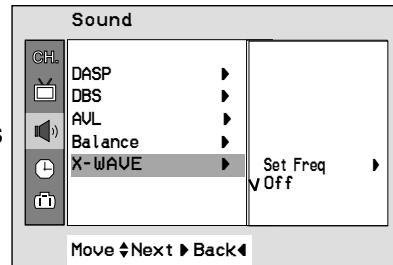

## Sound control



### Turbo Sound (some models)

With this function sound will be more emphasized and amplified than normal sound. You can enjoy the Turbo sound so much better than normal sound.

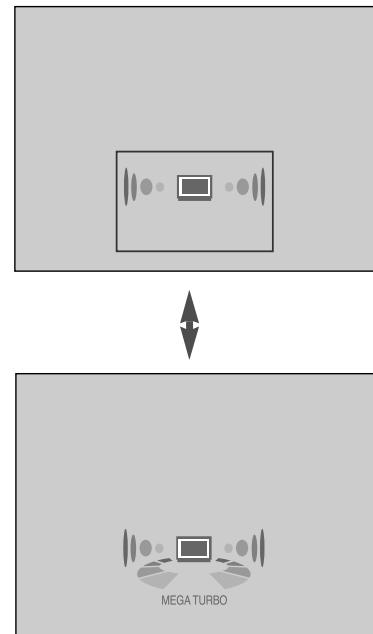

### Adjusting the equalizer (User mode in Auto Sound Control)


1. Press the **MENU** button and then use **▲ / ▼** button to select the Sound menu.
2. Press the **▶** and then **▲/▼** button to select **DASP**.
3. Press the **▶** and then **▲/▼** button to select **User**, then press **▶** button to enter the **User** mode.
4. Press the **◀/▶** button to select the sound band and then press the **▲/▼** button to adjust the desired level.
5. Press the **MENU** button to exit.

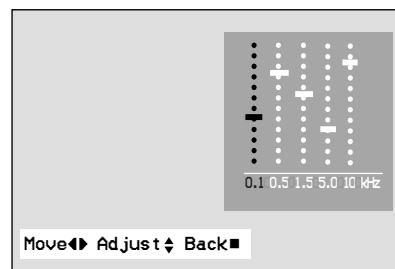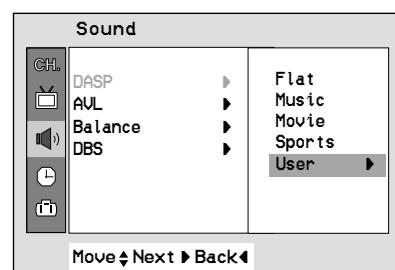

## Closed caption function

Closed captioning is a process which converts the audio portion of a television program into written words, which then appear on the television screen in a form similar to subtitles. Closed captions allow viewers to read the dialogue and narration of television programs.

### Using Closed Captions

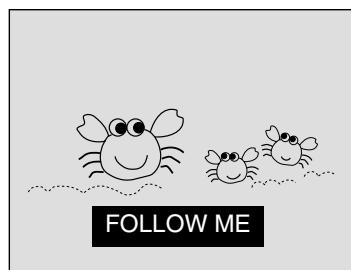

Captions are the subtitles of the dialogue and narration of television programs. For prerecorded programs, program dialogue can be arranged into captions in advance. It's possible to caption a live program by using a process called "real-time captioning", which creates captions instantly. Real-time captioning is normally done by professional reporters using a machine shorthand system and computer for translation into English.

Captioning is an effective system for the hearing-impaired, and it can also aid in teaching language skills.

- The picture at left shows a typical caption.

### Caption Tips

- Not all TV broadcasts include closed caption signals.
- Sometimes TV stations broadcast two different caption signals on the same channel. By selecting MODE 1 or MODE 2, you can choose which signal you view. MODE 1 is usually the signal with the captions, while MODE 2 might show demonstration or programming information.
- Your TV might not receive caption signals normally in the following situations.

- [1] Poor reception conditions are encountered:



■ IGNITION:

Picture may flutter, drift, suffer from black spots or horizontal streaking. Usually caused by interference from automobile ignition systems, neon lamps, electrical drills and other electrical appliances.



■ GHOSTS:

Ghosts are caused when the TV signal splits and follows two paths. One is the direct path and the other is reflected off tall buildings, hills or other objects. Changing the direction or position of the antenna may improve reception.



■ SNOW:

If your receiver is located at the weak, fringe area of a TV signal, your picture may be marred by small dots. It may be necessary to install a special antenna to improve the picture.

- [2] An old, bad or illegally recorded tape is played.  
[3] Strong, random signals from a car or airplane interfere with the TV signal.  
[4] The signal from the antenna is weak.  
[5] The program wasn't captioned when it was produced, transmitted or taped.

## Closed caption function

### Using the Text Function


Text services give a wide variety of information on all kind of subjects (ex. captioned program lists, weather forecasts, stock exchange topics, news for hearing-impaired---) through the full TV screen. But not all stations offer text services, even though they might offer captioning.

**Note:** In the event you receive a poor signal, an empty black box may appear and disappear, even when the text mode is selected. This is normal function in such an event.

### Operating the Caption and Text

#### Using the CAPTION button


1. Press the **CAPTION** button.
2. Press the **CAPTION** button to select **OFF, Mode 1, Mode 2, Text 1** or **Text 2**.
3. Press the **ENTER (■)** button to exit.

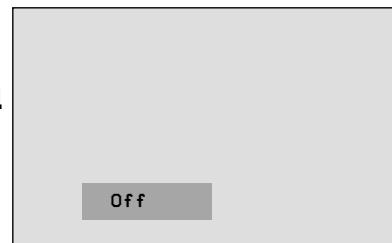

#### Using the MENU button

1. Press the **MENU** button and then use **▲ / ▼** button to select the Special menu.
2. Press the **►** and then **▲/▼** button to select **Caption**.
3. Press the **►** button and then use **▲/▼** button to select **Off, Mode 1, Mode 2, Text 1** or **Text 2**.
4. Press the **MENU** button to exit.

**Note:** This TV is programmed to remember which mode it was last set to, even if you turn the TV off.

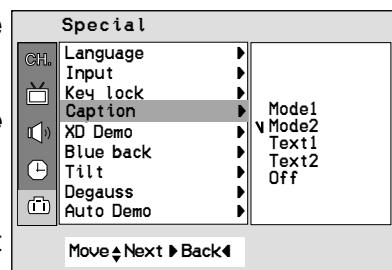


## PIP function (Some models)

### Watching the PIP (Picture in Picture)

This is the function to call up a little picture (PIP : picture in picture) within the main picture. Thus at the same time you can watch two different programs.

1. Press the **PIP** button to turn the sub picture on as shown right.
2. Press the **CH ▲/▼** button of the PIP buttons to select the desired channel in the sub picture.

**Note:** Press the **▲ / ▼** button to select the upper or lower channel in main picture and press the **CH ▲/▼** button of the PIP buttons to select the upper or lower channel in sub picture.

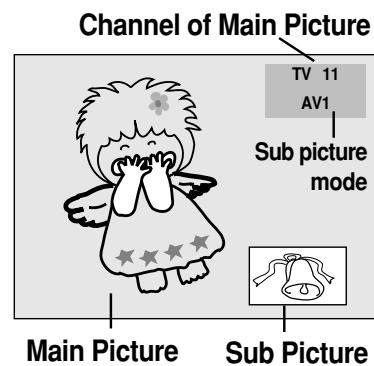


### Selecting the input signal (in PIP and Double window mode)

Press the **PIP INPUT** button to select **TV, AV1, AV2, AV3**.

## PIP function (Some models)


### Moving the Sub Picture (in PIP mode)

Press the **POSITION** button to select the desired position of sub picture.

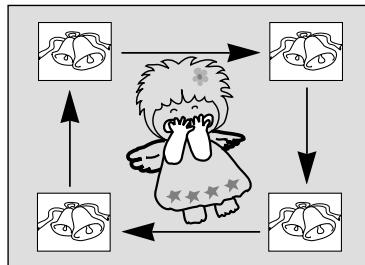

### Swapping Screens



Press the **SWAP** button.  
Each time you press this button,  
the main picture and sub picture  
exchange places.

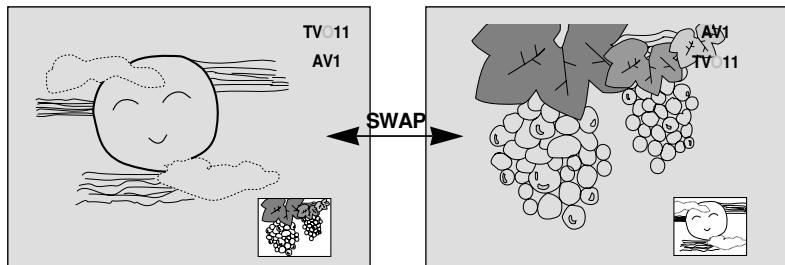

### Still Picture



Press the **STILL** button.  
The still picture is displayed.  
In PIP mode, the still picture is  
displayed in the sub picture.

To cancel the still picture, press  
the **STILL** button again.

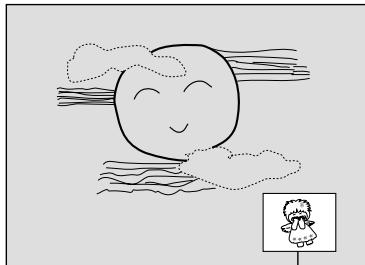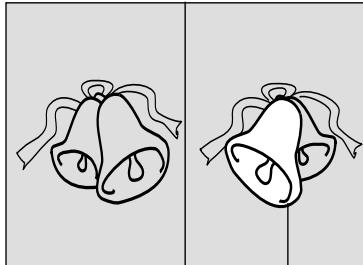



### PIP size (in PIP mode)

Press the **SIZE** button to select the desired size of sub picture.

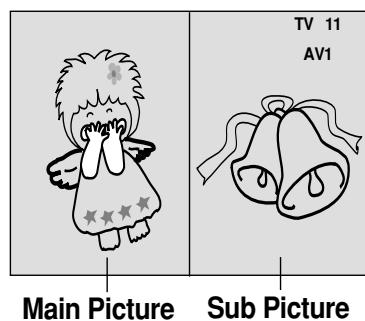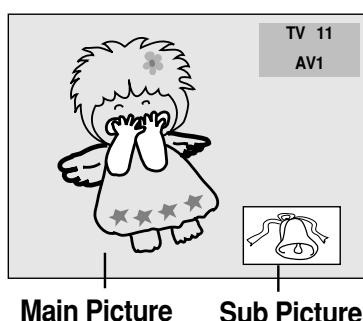

## Antenna Connections

Combination  
VHF/UHF Antennas

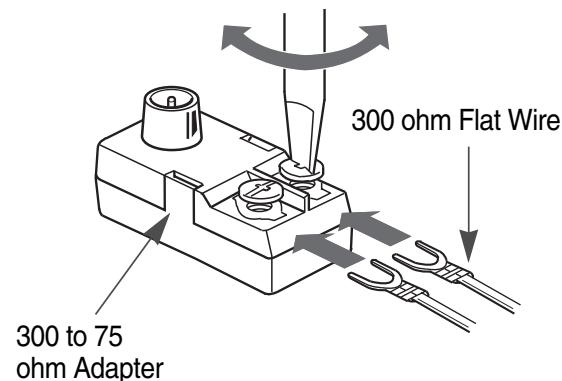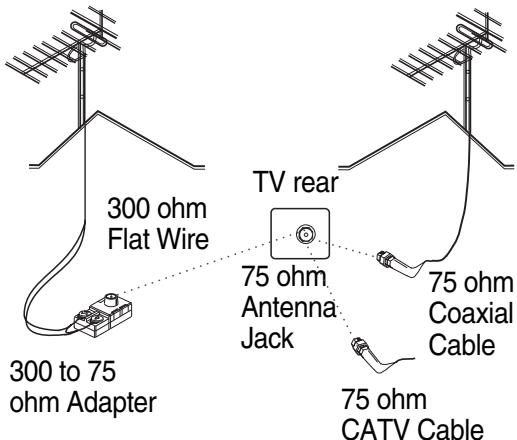

### Connecting an Outdoor Antenna

For the best reception, we recommend you use an outdoor antenna.

Severely weathered antennas and antenna cables can reduce the signal quality. Before connecting it, necessarily inspect them. Any service center can explain the various outdoor antennas available to you.

#### 300 Ohm Flat Wire



1. Connect the 300 ohm flat wire to screws on the 300 ohm to 75 ohm adapter.
2. Push the end of 300 ohm to 75 ohm adapter into 75 ohm antenna jack.

#### 75 Ohm Coaxial Cable

1. Connect the 75 ohm coaxial cable directly to the 75 ohm antenna jack.

### Connecting a CATV Cable


If you subscribe to a CATV system, change the antenna connection as described below.

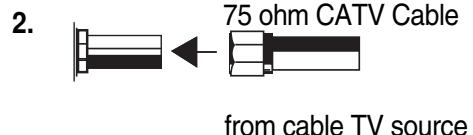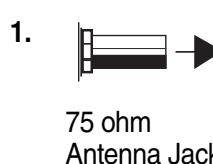

1. Remove the 300 to 75 ohm adapter or the cable from the set if attached.
2. Connect the CATV cable (75 ohm coaxial cable) to the 75 ohm antenna jack.

## Connection of external equipment (some models)

You can connect additional equipment, such as VCRs, camcorders etc. to your set. Here shown may be somewhat different from your set. These are an example drawing of typical jack layout.

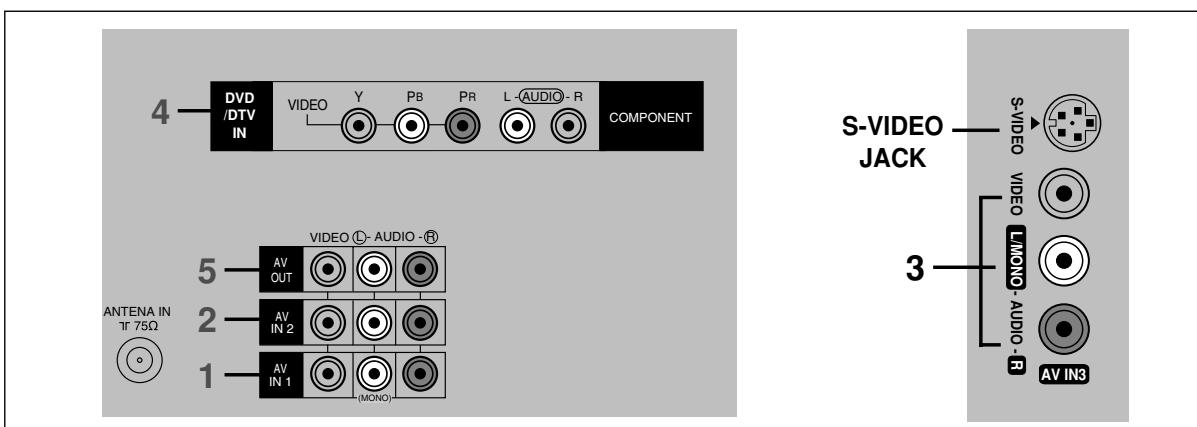


1. **IN 1 JACKS** : Connect external equipment outputs (VCR, LASER DISC, CAMCORDER) to these inputs. Press the **TV/VIDEO** button to select **AV 1**.
2. **IN 2 JACKS** : Connect external equipment outputs (VCR, LASER DISC, CAMCORDER) to these inputs. Press the **TV/VIDEO** button to select **AV 2**.
3. **IN 3 JACKS** : Connect external equipment outputs (VCR, LASER DISC, CAMCORDER) to these inputs. Press the **TV/VIDEO** button to select **AV 3**.
4. **DVD/DTV INPUT JACKS** : Connect component output jacks to these inputs. Press the **TV/VIDEO** or **MULTIMEDIA** button to select **COMPONENT**.
5. **OUT JACKS**: Connect external equipment inputs (VCR, Audio amplifier) to these outputs for recording or monitoring the selected program.

**Note:** This TV is programmed to remember which mode it was last set to, even if you turn the TV off.

### Connecting AUDIO/VIDEO IN Jacks

1. Connect the audio/video output jacks of the VCR to **IN 1** or **IN 2(A/V)** jacks on the side or back of TV. If you connect the audio jack only, you can't hear the sound from the TV.
  2. Press the **TV/VIDEO** button to select **AV1** or **AV2**.
- Note:** In some stereo models, if you connect the audio/video output jacks of the VCR to the **IN 3(A/V)** jacks on the front or side of TV, select **AV3**.
3. Press the **PLAY** button on the VCR.  
The video playback is on the TV screen.

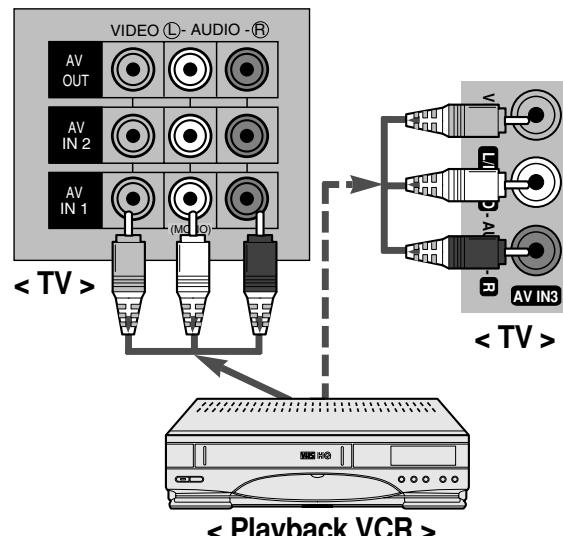


**Note:** In case of MONO VCR, connect the output jack of VCR to the **AUDIO L/MONO IN** jack of TV so that the sound can be heard from both speakers. If you connect it to the **AUDIO R IN** jack of TV the sound is heard only from right speaker.

**Note:** In some mono models, when the input jacks on the front panel and back panel are connected to external equipments at the same time, the input jacks on the front panel have priority over the input jacks on the back panel of the TV.


## Connecting the S-VHS VCR (some models)

1. Connect the S-VHS output jack of the VCR to the **S-VIDEO** jack on the side or back of TV.
2. Connect the audio/video output jacks of the VCR to the **IN 3(A/V)** jacks on the front or side of TV.
3. Press the **TV/VIDEO** button to select **S-VIDEO**.
4. Press the **PLAY** button on the VCR.  
The video playback is visible on the TV screen.

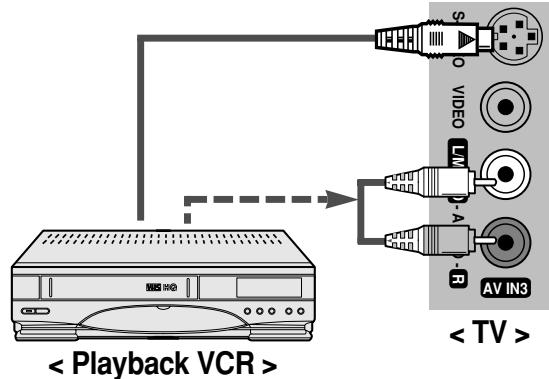

## VCR Recording (some models)

1. Connect the audio/video input jacks of the recording VCR to the **OUT (A/V)** jacks on the back of the TV.
2. Select the program number on the TV.
3. Set the recording VCR to record.

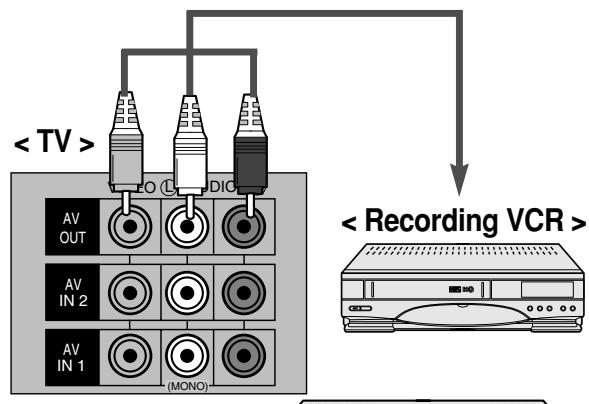


## Recording a program from connected other equipment (some models)

1. Connect the output jacks of the playback VCR to the **IN 1** or **IN 2 (A/V)** jacks on the side or back of TV (or **IN 3** jacks on the side of TV ).
2. Connect the input jacks of the recording VCR to the **OUT (A/V)** jacks on the back of TV.
3. Press the **TV/VIDEO** button to select **AV 1** or **AV 2**.

If you connect it to the **IN 3 (A/V)** jacks on the side of TV, you should select **AV 3**.



4. Press the **PLAY** button on the playback VCR and set the recording VCR to record.

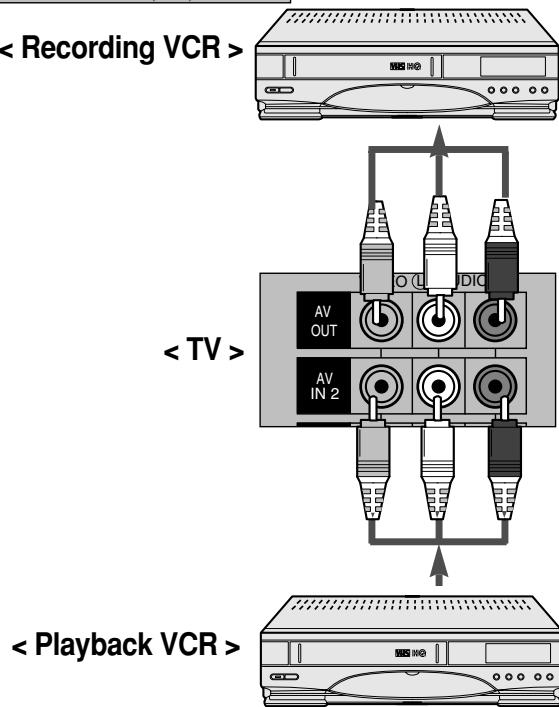

## Connecting DVD player

- Connect component video inputs to Y, Pb, Pr(480i) and audio IN2 to audio(L/R) ports.
- **Note:** This TV is programmed to remember which mode it was last set to, even if you turn the TV off.

### 1. How to connect

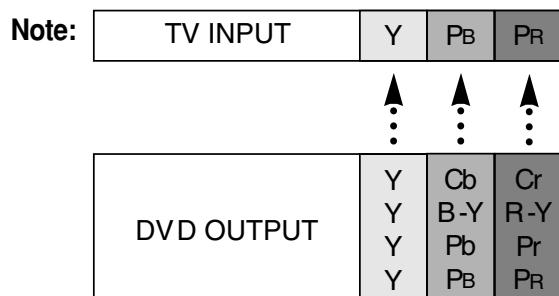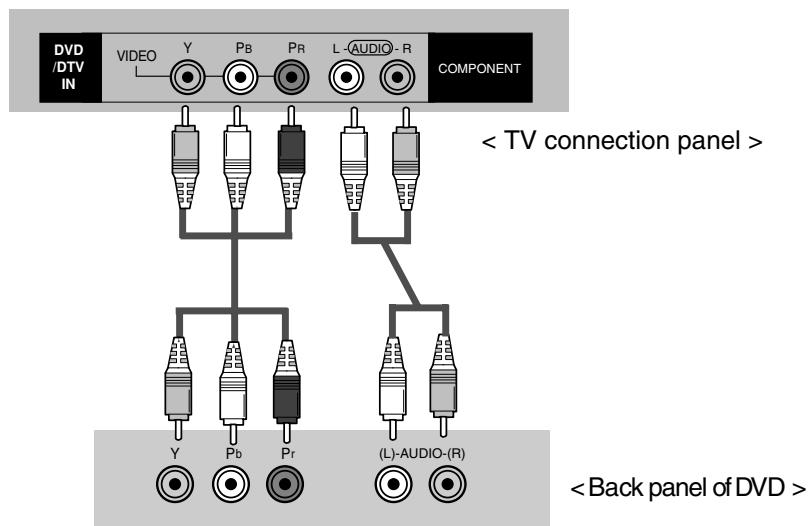

### 2. How to use

- Turn the set on and press the **TV/VIDEO** button on the remote control or **TV/VIDEO** button on the front panel to select **COMPONENT**.
- Try this after turning on the DVD set.

# Troubleshooting check list

## **SYMPTOMS**

No power

No picture or sound

Poor picture but good sound


Poor reception

## Lines in picture

## Ghosts (multiple images)

Remote control does not work.

Cannot tune desired channel.

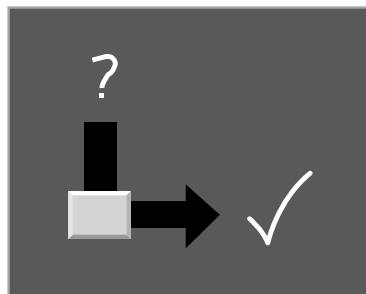

## CHECK THESE THINGS

- Is power cord plugged in?
  - Is television turned on?
  - Check batteries in remote control.
  - Try another channel (station trouble).
  - Check antenna connectings.
  - Check for local interference.
  - Adjust the antenna.
  - Adjust the picture control.
  - Program channel using AUTO PROGRAM.

