


Model	V-KC902HTY		
Language	English+Chinese		
Page	28	Color(cover/body)	2/1
Material	Weight 100g	Size(W*H)	150 x 220(mm)
Date	2009.02.24	Designer	Zhang Xianli
Part No.	MFL56999649	Description	Owner's manual

Chage Record

No.	Change content	ECO No.	Date	Designer	Confirm
①					
②					
③					
④					
⑤					
⑥					
⑦					
⑧					
⑨					

使用说明书

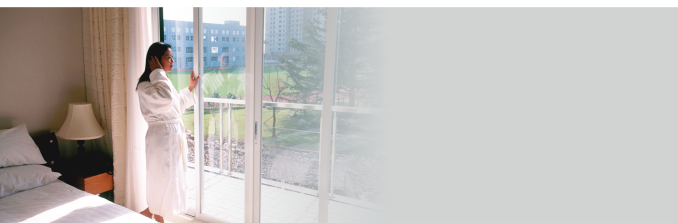

吸尘器

强劲吸力

V-KC902HTY

中文 ——> 1-14页

English ——> Page15- 28

售后服务电话




使用前请仔细阅读说明书，阅读完后请妥善保管以备需要时查阅。

目录


产品规格	2
使用前注意事项	3-4
吸尘器的组装与吸力调节	5
部分名称与连接方法	
附件	
毛刷、鸭嘴、折叠管的使用	6
震动刷头使用方法与清洗方法	7
使用方法	
清洗方法	
集尘筒	8-9
取放方法	
装配方法	
清洗方法	
空气过滤器和电机保护海绵的清洗	10
排气海绵的清洗更换	11
故障通告前需确认事项	12-13
装箱单	14

产品规格

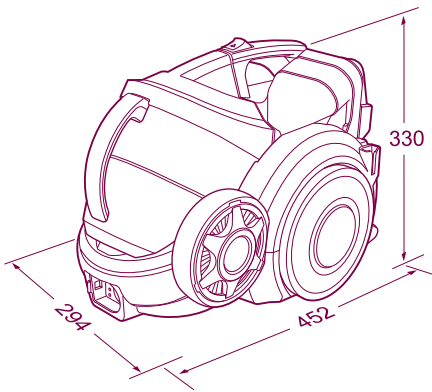

型号: V-KC902HTY
额定电压: 220V~ 50Hz
额定功率: 1800W
最大功率: 2000W
吸率: 300W
净重: 6.5 Kg
集尘容量: 2L
外形尺寸: 294mm x 452mm x 330mm
本产品执行标准: GB4706.1-2005
GB4706.7-2004
GB17625.1-2003
GB4343-2003

※ 为了提高产品质量而进行的外观及设计规格上的变更将不再另行通知。

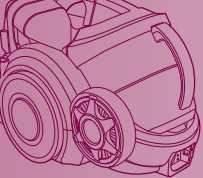

使用前注意事项

使用前注意事项

忽视说明而导致的错误操作将会对您造成不同程度的损害，请认真阅读以下提示说明。



危险 此标识表明违反标记事项时，会立刻发生严重伤害或死亡现象。



警告 此标识表明违反标记事项时，有可能发生严重伤害或死亡现象。




注意 此标识表明违反此标记事项时，有可能发生财产损失或轻微伤害。




危险

请不要在易燃液体附近使用吸尘器，以免发生火灾。

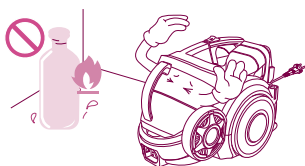


插拔电源插头时，请先关闭电源开关，以免发生火灾或触电的危险。请不要用湿手触摸电源插头，以防触电。（不要在220V以外的电源上使用产品）

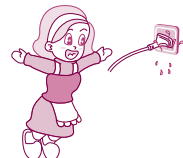


警告

请不要让大头钉等金属物存留在软管、机体延长管内，否则会造成短路故障。


请不要吸入头发团、大纸团等物品，否则容易堵塞软管，如有堵管现象，请及时清理。

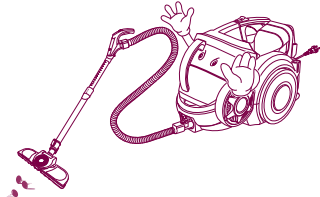


为避免发生火灾或触电的危险，在清扫时，注意不要让机体吸入液体、刀片、火种以及水泥、石膏粉等小微粒。

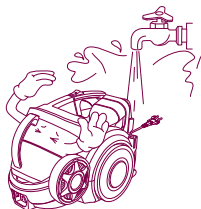

15A以上的电流请单独使用插线板，在一个插线板上同时使用多种电器可能会引发火灾。建议不要使用电源线延长线，以免引起不必要的危险。本吸尘器最大电流为6A。

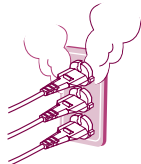


长时间不使用电器时，请记住拔掉电源插头；正处于通电时，请您不要离开。

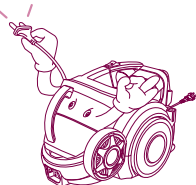


使用前注意事项

警告

请不要让电源线与吸尘器接近电暖器等热源，以免使机体变形或发生火灾。请您不要使用破损的电源和插头，如有破损，必须由指定维修站更换。

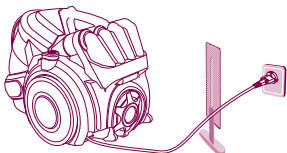


请不要在吸入口和排气口堵塞时，继续长时间运作，否则可能造成机体变形或损坏。

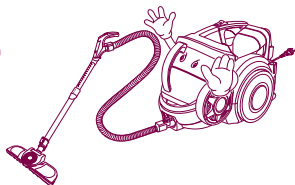

请不要让儿童把吸尘器及组件，如延长管等当做玩具，以防止意外。




使用过程中，延长管和机体会产生静电的可能，请您使用时注意。

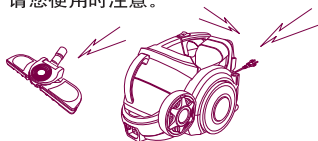


注意


非专业维修人员请勿开机修理。

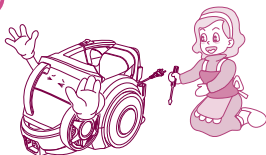


请不要弯曲、践踏、拉拽软管，如软管受损，请不要继续使用。
请不要用重物或尖刃物压线。

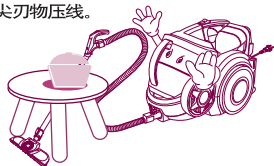

注意不要使电源线夹在门缝里或用电源线提拉吸尘器，防止电源线受损。

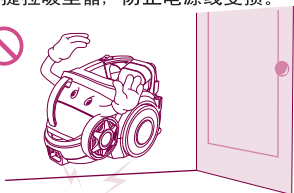

集尘筒集满时，请您正确开启集尘筒清理。请您注意不要在没安装集尘筒或过滤网时使用吸尘器。

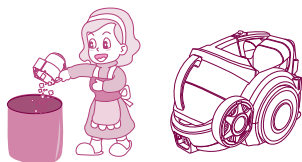



收卷电线时，请拿住电源插头后再按动卷线器按钮。

请不要将电源线拉至红色警告线以外，否则可能损坏电源线或不能回卷。
收线时请注意插头，以免损坏周围物品。




请您注意保护自身安全，使身体各部位远离吸尘器吸口或活动部位。

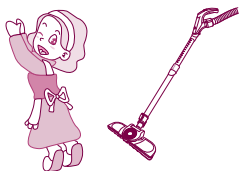

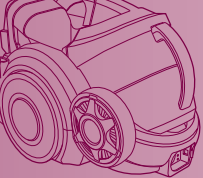


吸尘器的组装与吸力调节

部分名称与连接方法

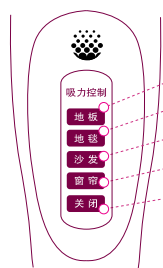

- **地板** 清扫极脏的环境
- **地毯** 清扫织物，清扫床垫（被褥）
- **沙发** 沙发、椅子、地板、合成革
- **窗帘** 清扫门窗帘、桌子、较薄的床上用品
- **关闭** 停止吸尘工作时，请将调节钮放于此位置

在不同环境下吸尘时，请按实际需要调节吸力。
根据地面情况和吸入量可以自主调节吸力。

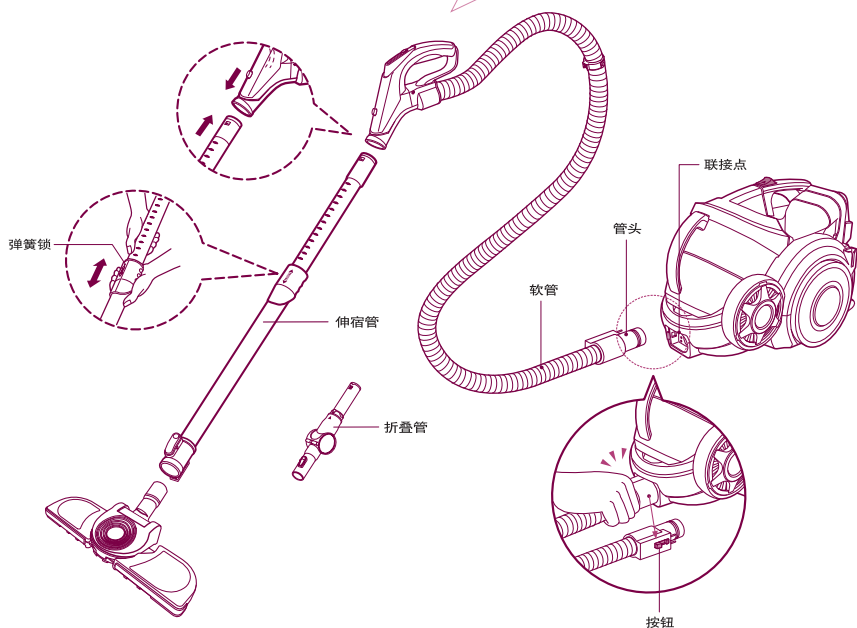

附件



 
● 鸭嘴毛刷




● 角落刷头



● 软管



● 伸缩管

 

● 震动刷头




● 折叠管

毛刷、鸭嘴、折叠管的使用

鸭嘴与毛刷


- ▶ 打开附件袋，取出附件。

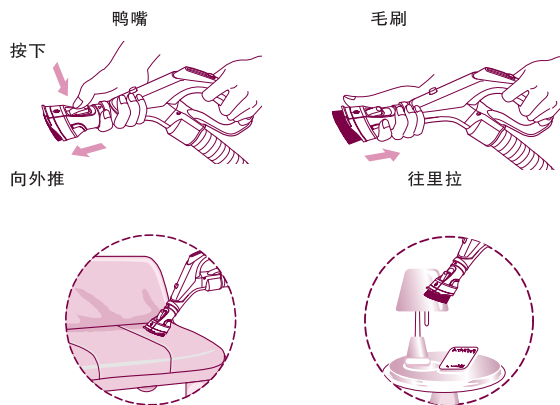


- ▶ 鸭嘴是用来对饰物、床垫等物品进行吸除的。
- ▶ 毛刷用于吸扫画框、家具边沿、书籍和其它不规则的表面。

折叠管的使用

- ▶ 折叠管可用来容易地清扫沙发、桌子和床铺的下面。

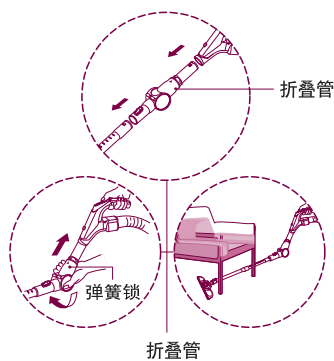

- 将折叠管连接到软管并将伸缩管连接到折叠管上（也可以不用折叠管而直接将伸缩管接到软管上）。
- 拉出弹簧锁，使折叠管弯曲。
- 如果伸直折叠管则其回到原来的位置。

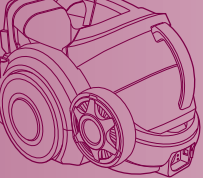


震动刷头使用方法与清洗方法


震动刷头使用方法

请按图示使用

组合

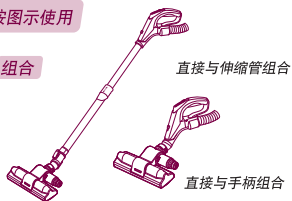


使用

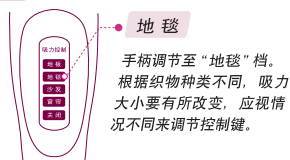


最佳效果清扫方法

 ● 床、床褥、厚棉被



● 薄被、毛毯

 

清扫薄被时，下面垫一个厚被，效果更理想！

 
- 若震动拍不运作，可轻轻向地面敲打刷头后再使用。
- 如还不震动，检查一下振动拍是否被棉絮卡住或需要调大吸力。
- 吸地毯时，根据地毯种类的不同，也会有发生不震动的可能性，所以最好专用于清扫床上用品。
- 集尘筒集满灰尘或吸力减小，震动幅度相应减小时，应注意及时清理滤芯。

清洁寝具吸入口的清洁方法

▶ 用水清洗吸入口，有可能导致振动器故障。




1 清洁过程中集尘瓶内灰尘较多时，按2~3次按钮。（可彻底去除灰尘）




2 清洁结束后集尘瓶内灰尘较多时，握住集尘瓶向逆时针方向转动拆卸。



3 倒掉集尘瓶内的灰尘。

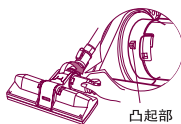

4 握住集尘瓶，对准凸起部，按顺时针方向转动安装。

 

5 按下吸入口背面的按钮，卸下底板。




6 用抹布擦拭吸入口的污染面。



7 用水冲洗卸下的底板后，置于阴凉处晾干。



8 整齐地放置底板的振动板。

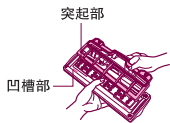


9 将突起部插入凹槽部内。



10 向下按，确保底板安装正确。

集尘桶


集尘桶取出方法

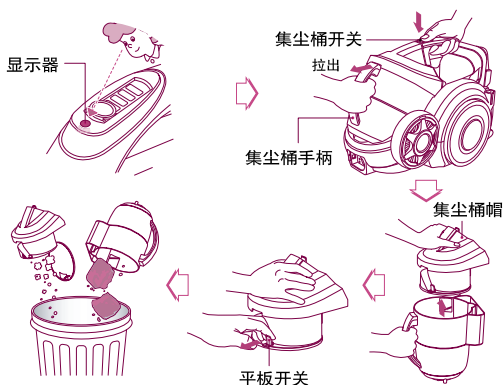

- ▶ 当尘满时，吸尘器吸力会自动降低 1~2 分钟，之后自动关闭，显示器灯亮并伴随报警声，这时请清理集尘桶。


- 关闭吸尘器，拔下插头。
- 抓住集尘桶手柄，按下集尘桶开关。
- 拉出集尘桶。
- 倒出集尘桶垃圾，然后按照下面步骤装上集尘桶。

集尘桶装配方法

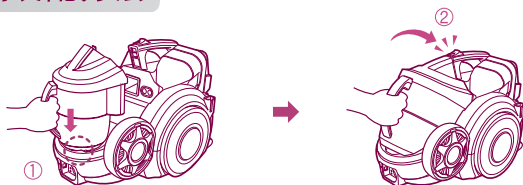


- ▶ 将集尘桶放到吸尘器里

- ▶ 往里推集尘桶使其倾斜装到吸尘器中

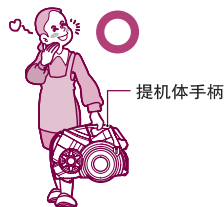


注意:

- ▶ 移动吸尘器时请提机体手柄，不要提集尘桶手柄，否则集尘桶和机体有可能分离导致机体掉在地上。
- ▶ 清空集尘桶内的垃圾后如果吸率降低，请清洗集尘桶 → 详细请见下页。

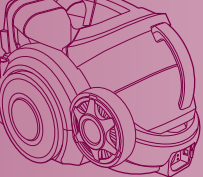

集尘桶

集尘桶清洗方法

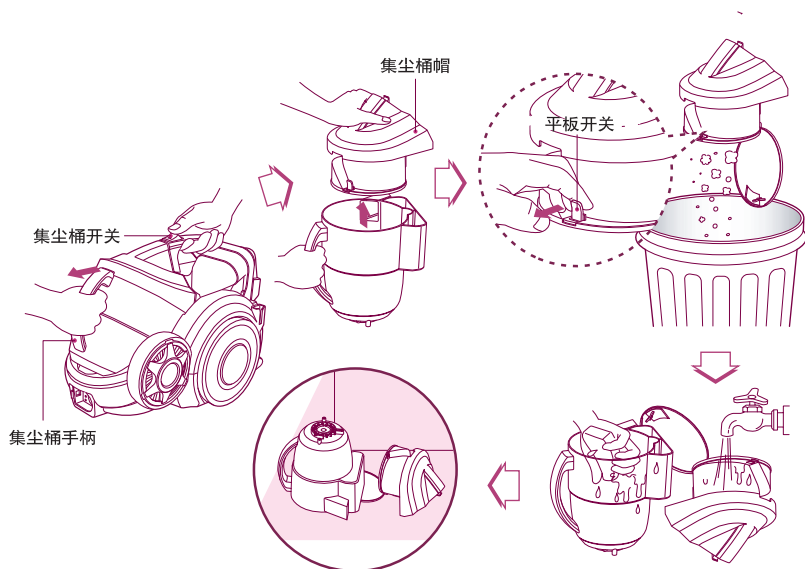


- 按下集尘桶开关，拉出集尘桶。
- 取下集尘桶帽，倾倒垃圾。
- 清洗后，待集尘桶完全干燥后使用。

注意：如果在清洗完集尘桶之后吸力降低，请清洗空气过滤器和电机保护海绵。

空气过滤器和电机保护海绵的清洗

空气过滤器和电机保护海绵的清洗方法


▶ 请至少半年清洗一次，放置在阴凉处风干，或根据使用频率酌情处理。

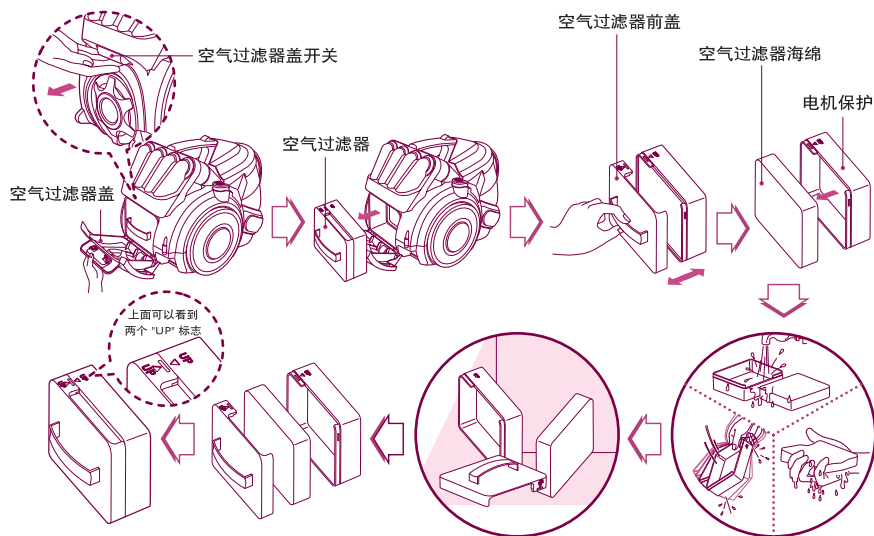

▶ 如果在清洗完集尘桶之后吸率降低，请清洗空气过滤器和电机保护海绵，然后将他们放置在吸尘器的后面，如图所示。

- 按下空气过滤器盖开关，打开空气过滤器盖，去除空气过滤器。
- 根据图示说明打开空气过滤器。
- 用清水清洗过滤器和电机保护海绵。
- 请不要用热水清洗。
- 请在完全干燥后适用。
- 请按照图示说明清洗。


注意：如果空气过滤器和电机保护海绵损坏了，请联系LG售后服务中心，不要继续使用。

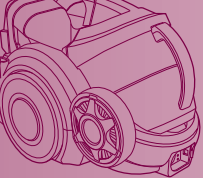

排气海绵的清洗

排气海绵的清洗

- ▶ 请至少半年清洗一次，放置在阴凉处风干，或根据使用频率酌情处理。

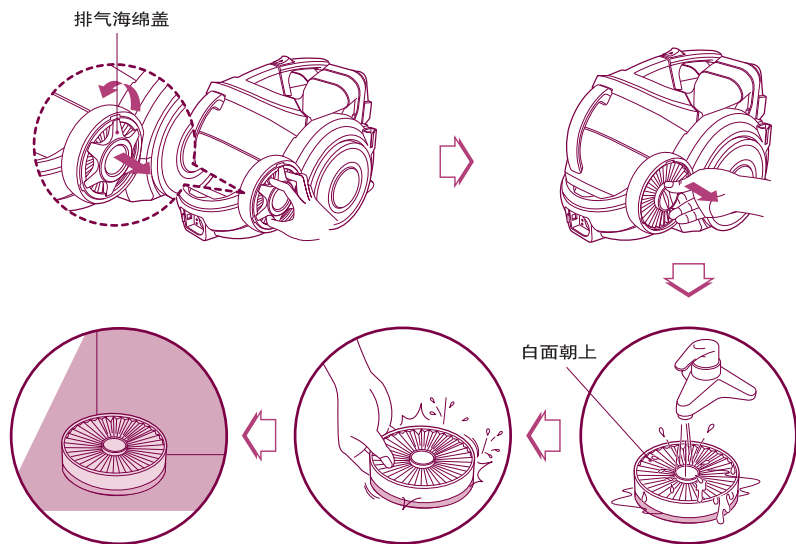

- ▶ 排气海绵是可清洗可循环利用的HEPA海绵。
 - 如要清洗海绵，请旋转排气海绵盖并将其与机身上取下。
 - 取出排气海绵。
 - 在流动的水下清洗。
 - 晾干。
 - 清洗时，请不要清洗海绵的绿面。
 - 请在排气海绵干燥后使用。
- ▶ 排气海绵盖的装配
 - 将排气海绵盖的卡扣放进机体的凹槽中旋转排气海绵盖。

故障通告前需确认事项

故障通告前请先确认

- ▶ 如果您怀疑产品发生故障，请先确认故障发生原因，再与售后服务中心或代理商联系，以确保检修的效率。

现象：

吸力突然下降，并发出报警声！

噪音加大
软管收缩



吸力忽然下降

吸尘器求助：

请检查集尘筒和吸入口



处理要领

- 1 查看集尘筒灰尘是否集满，如果是，请及时清理集尘筒。



已经满了吗？请及时清理集尘筒哦！

- 2 请确认集尘筒滤芯是否堵塞
过滤器堵塞时会发出异常声，请及时清洗。



滤芯有问题吗？那么检查一下吸入口。

- 3 检查吸入口时，需将吸力调节到最大。

第一步

将伸缩管与刷头分离后，检查有无阻塞，如发现问题请立即清理。



如果还有问题，请进行第二步。

第二步

分离手柄与伸缩管，检查有无阻塞，如有阻塞，请将伸缩管收短，清除异物。



如果还有问题，请进行第三步。


第三步

检查软管是否阻塞，将吸力调至最强，用手堵住放管口，反复几次。



如果还有问题，请清理一下滤芯。



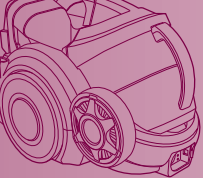








故障通告前需确认事项

故障通告前请先确认

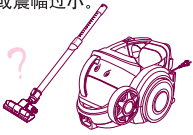- ▶ 如果您怀疑产品发生故障，请先确认故障发生原因，再与售后服务中心或代理商联系，以确保检修的效率。

故障	检查	措施
吸尘器为何不能工作? 	<ul style="list-style-type: none"> ● 电源插头是否插上? ● 电源插座有电吗? ● 软管是否插上? ● 电机热保护处于开启期间。 	<ul style="list-style-type: none"> ● 请将电源插牢 (本产品适用于220V电压)。 ● 确认插座是否有电。 ● 将软管插牢。 ● 2小时后重新启动。
机体内有噪音。 	<ul style="list-style-type: none"> ● 吸尘器吸力过大或电机高速运转时所发出的声音，不属于异常情况，请正常使用。 ● 如果不是正常的电机响声，而是异常的噪音，请打电话与维修中心联系。 	
机体发出报警声。 	<ul style="list-style-type: none"> ● 集尘筒已满。 ● 集尘筒滤芯堵塞。 ● 吸入口阻塞。 ● 伸缩管阻塞。 ● 软管阻塞。 	<ul style="list-style-type: none"> ● 清理集尘筒。 ● 用软毛刷轻轻刷滤芯，用水冲洗后放置于阴凉处风干一天。 ● 将吸入的异物取出后再使用。 ● 将伸缩管内异物取出后再使用。 ● 将软管内异物取出后再使用。
机体出现异味。 	<ul style="list-style-type: none"> ● 电机运作时，用于固定电机的橡胶圈会受热而产生少量气味，不会影响运作或使机器发生损坏。 ● 机器不小心吸入一些水或集尘筒长期不清理时，会有一些异味排出，此时应及时清理集尘筒。 	
震动刷头不运作或震幅过小。 	<ul style="list-style-type: none"> ● 震动刷头是用于清扫床上用品、沙发等织物时使用的。 ● 清扫地毯时，请使用大刷头。 ● 检查底盘是否正确地与刷头结合。 ● 清扫薄织物时，请在下面垫上厚被褥。 ● 请确认集尘筒和吸入口各部位是否有阻塞现象。 ● 吸力下降也可能使震幅减小。 	
电源线不能全部卷入机体，电源线不能全部拉出。 	<ul style="list-style-type: none"> ● 将电源线拉出一部分后重新卷入。 ● 请用力将电源线拉出，不会损坏电源线。 ● 由于线在内部互相缠绕或夏季周围温度过高所致。 ● 由于线在内部折曲或未缠在卷线器上，启动卷线器后，能正常运作。 	
机体或排出的气体过热。 	<ul style="list-style-type: none"> ● 吸力是否正常? 	<ul style="list-style-type: none"> ● 从机体内排出的热气，是由电机导热产生的热量所致，属正常温度，请继续使用。
软管内壁过脏。	<ul style="list-style-type: none"> ● 请勿将水吸入，水与灰尘混合吸入后，有可能弄脏管壁。 	

装箱单


装箱单

吸尘器	一台
说明书	一本
鸭嘴毛刷	一个
震动刷头	一个
折叠管	一根
软管	一根
伸缩管	一根
角落刷头	一个
保修卡	一份

Table of contents

Product specifications	15
Attention before using the appliance	16-17
Assembling and adjusting the Cleaner	18
Parts description and assembly	
Accessories	
Using the Accessories, Elbow Tube	19
Using and cleaning the Sani Punch	20
Using the Sani Punch	
Replacing the Dust Tank	
Cleaning the Sani Punch	
Dust Tank	21-22
Removing the Dust Tank	
Cleaning the Dust Tank	
Cleaning air filter and motor safety filter	23
Cleaning exhaust filter	24
If you have a problem	25-26
Packing list	27

Product specifications

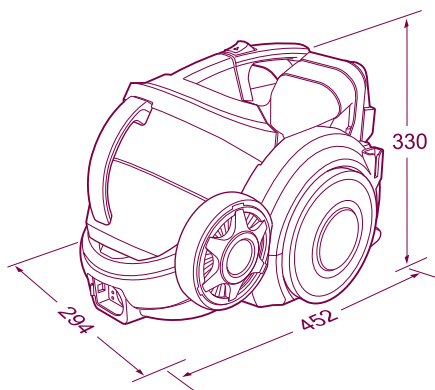

Model: V-KC902HTY

220V~ 50Hz

IEC: 1800W

MAX: 2000W

Suction Power: 300W

Net Weight: 6.5 Kg

Dust Capacity: 2L

Dimension: 294mm x 452mm x 330mm

This appliance complies with the following GB Directives:

GB4706.1-2005

GB4706.7-2004

GB17625.1-2003

GB4343-2003

※ You will not be informed otherwise of any changes in appearance and standard deriving for improvement of product quality.

Attention before using the appliance

Attention before using the appliance

Please read all the following information, which contains important instructions for the safety, the use of the appliance.



DANGER

May immediately cause serious injury or death.



WARNING

May possibly cause serious injury or death.




ATTENTION

May possibly cause losses of property or light injury.




DANGER

Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.

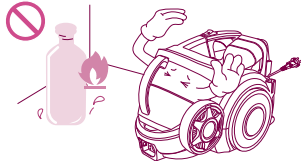


Please turn off the power before pulling out the plug to prevent fire or electric shock. Never handle plug or appliance with wet hands. (Do not use the appliance on the power above 220V.)

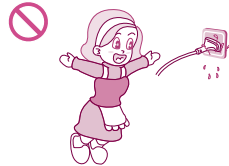


WARNING

Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner and the tank.

Do not vacuum the objects like hair ball or big paper ball, otherwise the hose is possibly blocked up. Please clear the hose in time when it is blocked.

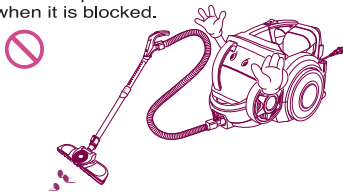


To avoid the danger of fire or electric shock, do not vacuum liquid, blade, flammable substances, or small particles like cement and gesso in cleaning.

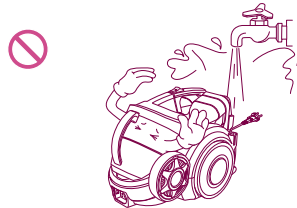


Independently use a socket when the current is $\geq 15A$. It may cause fire when many electric appliances share one socket. In order to avoid the needless danger, you had better not use the prolonged thread of power cord. The current at most 6A is allowed.



Unplug cleaner when not in use. Turn off all controls before unplugging.

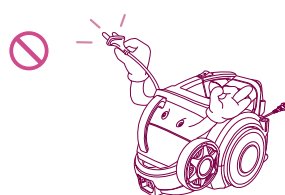


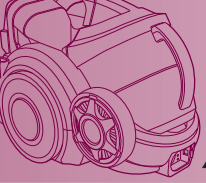


Attention before using the appliance

! WARNING

 Do not let the power cord near the electric heater or other heat source, lest that the cleaner should be deformed or it should cause fire. Do not use the appliance when the power cord or plug is damaged. The damaged power cord or plug must be replaced in the approved service station.




Close supervision is necessary when any appliance is used by or near children. Do not allow vacuum cleaner to be used as a toy or to run unattended at any time.

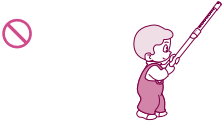

Do not operate the appliance for long when the nozzle inlet or nozzle outlet is blocked, which may have it deformed or damaged.




In using the appliance, pay attention to the electrostatic effect generated on the telescopic tube and cleaner body.

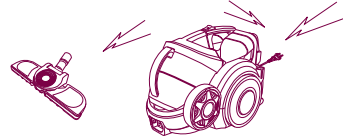


! ATTENTION


Do not allow the non-professional maintenance people to repair.

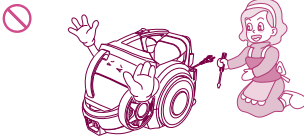

Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

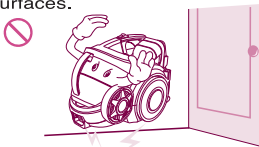

In winding the power cord, hold the plug before pressing the button of the cord reel. Do not pull the power cord beyond the red warning line, other wise the power cord may be damaged or unable to be wound up. Pay attention to the plug in winding the cord to avoid damaging the surrounding objects.

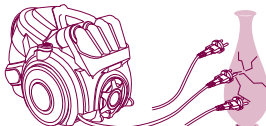


Do not bend, stamp on, or drag the hose. Do not continue to use the hose if it is damaged.


Do not use any heavy or sharp object to press the power cord.



Do not use without dust tank or filters in place. Change tank frequently when picking up very fine materials such as powder.

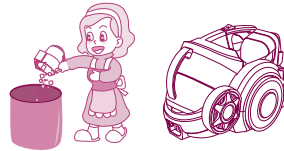


Keep hair, loose clothing, fingers, feet and all parts of body away from the nozzle or movable portion.

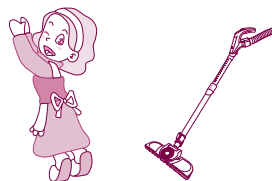


Assembling and adjusting the Cleaner

Parts description and assembly

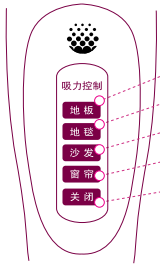



- **地板** cleaning the dirtiest environment.
- **地毯** cleaning fabrics and mattress (bedding).
- **沙发** cleaning sofa, chair, floor.
- **窗帘** cleaning door and window curtain, table, and light blanket.
- **关闭** Adjusting to “关闭” when you stop operating the appliance.

When cleaning under different environment, adjust the suction level according to practical need.

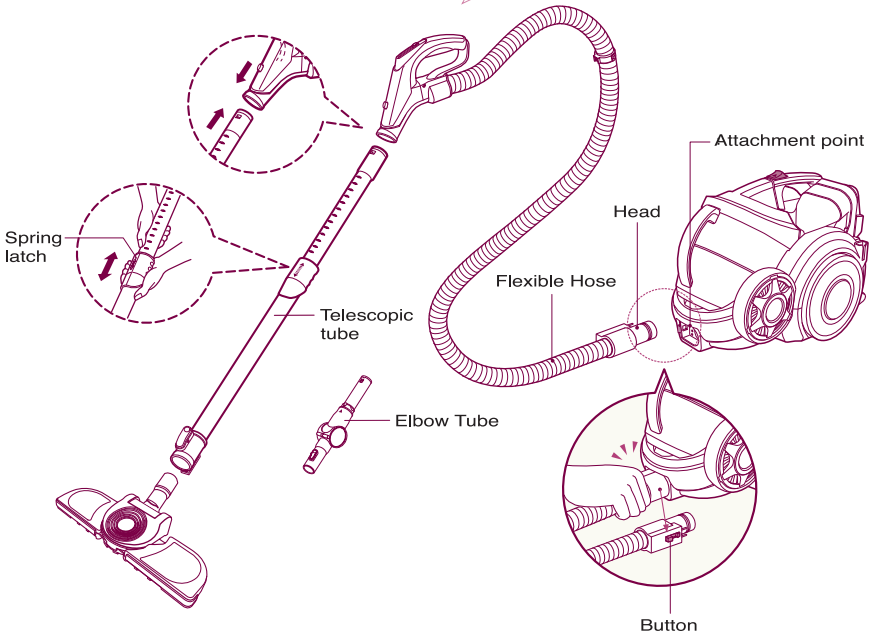

Accessories

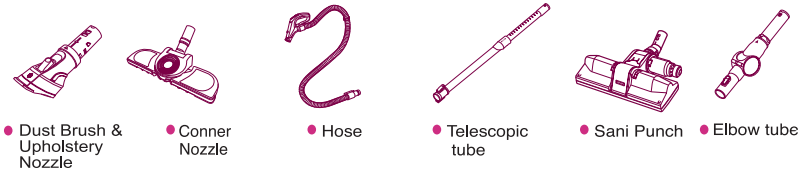


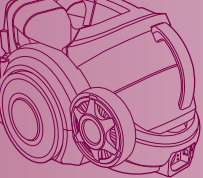


Using the Accessories, Elbow Tube

Using Dust Brush & Upholstery Nozzle

- ▶ Tear the vinyl bag and pull out accessories.

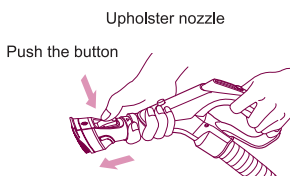

Upholstery nozzle mode

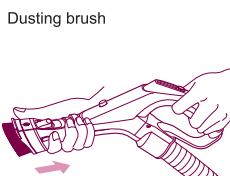


Dusting brush mode



- ▶ Upholstery Nozzle is for vacuuming upholstery, mattresses, etc.

Using the Elbow Tube

- ▶ Elbow tube is for cleaning under the sofa, table and bed easily.

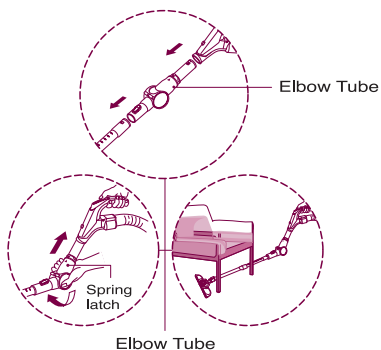


- Connect the elbow tube to the flexible hose and connect the telescopic tube to the elbow tube. (You can also connect the telescopic tube to the flexible hose without the elbow tube.)
- If you pull the spring latch, the elbow tube is bended.
- If you stretch the elbow tube, it is returned to its position.

Using and cleaning the Sani Punch


Using the Sani Punch

Use it as shown in the diagram

Assembling

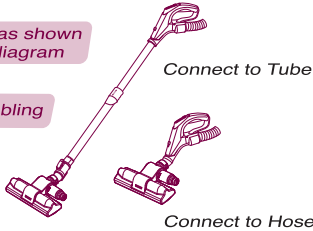

Using

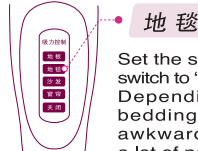


Set the suction power control switch to “地毯” before vacuuming. Depending on the type of bedding, handling may be awkward or it may cause a lot of noise. If this is the case, adjust the suction power control switch to a lower setting.

Effective cleaning

• bed, bedding, heavy blanket

 • Light blanket & sheet



To increase cleaning efficiency for light blankets, lay on top of a bulky blanket and then clean.

 
- If the punch bar does not move, lift the nozzle slightly off the surface.
- If it does not move, even after doing this, check if the suction power is too low or if the nozzle base is clogged with a foreign object.
- This Sani Punch nozzle is for effective cleaning of beds and blankets to remove mites and dust.

How to clean the inhaler of the bed cleaner

▶ The vibrator may break down due to the cleansing of the inhaler with water.




1 If the dust settles in the box while cleaning, press the button 2 or 3 times. (It will remove most of the dust.)




2 After the cleaning, if there are lots of dusts in the box, separate the box from the inhaler by turning it anticlockwise.



3 Empty the box.

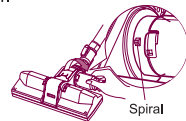

 4 Aim at the Spiral, Fix the box into the inhaler by turning it clockwise.




5 Separate the bottom plate by pressing the buttons in the back.



6 Clean the dirty body of the inhaler carefully with a cloth.



7 Wash the separated bottom plate and dry it in the shade.

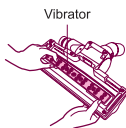


8 Arrange the vibrator in order.



9 Insert the joining spiral into the groove.




10 Attach the bottom plate properly by pressing down.

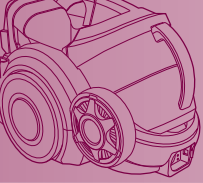

Dust Tank


Removing the Dust Tank

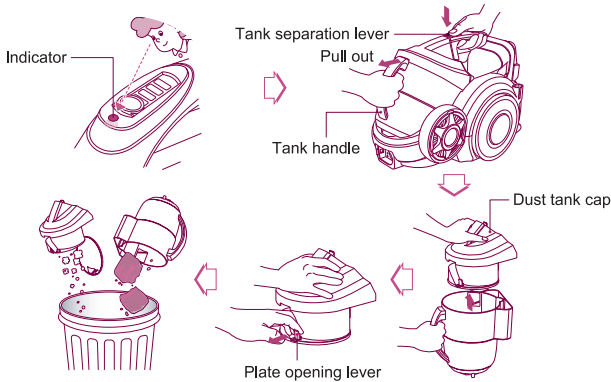

▶ Please empty the dust tank when the power down automatic for 1~2 minutes then shut down, also with the indicator flash and alarm.

- Turn off the vacuum cleaner and unplug it.
- Grasp the handle of the tank and then press the tank separation lever.
- Pull out the dust tank.
- Empty the tank and then assemble the dust tank as below

Replacing the Dust Tank

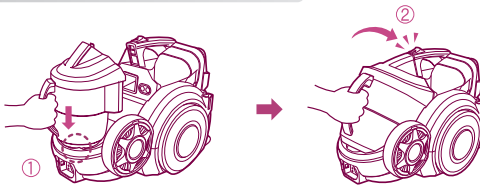

▶ Assembling dust tank

First, place the bottom of dust tank on the vacuum cleaner and tilt.



▶ Moving the vacuum cleaner


Don't grasp the tank handle when you are moving the vacuum cleaner. The vacuum cleaner's body may fall when separating tank and body. You should grasp the carrier handle when you are moving the vacuum cleaner.

NOTICE

- If suction power decreases after emptying dust tank, clean dust tank → next page.
- Please clean the dust tank when the suction power still low after empty the tank.

Dust Tank

Cleaning the Dust Tank

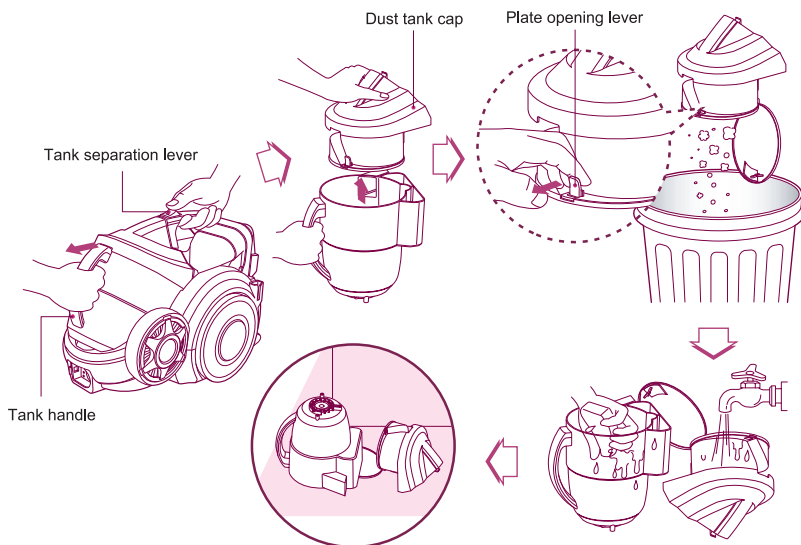


- Press tank separation lever and pull out dust tank.
- Raise dust tank cap.
- Dry fully in shade so that moisture is entirely removed.

NOTICE:


If suction power decreases after cleaning dust tank, clean air filter and motor safety filter.

➔ Next page.

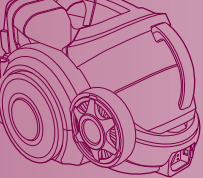

Cleaning air filter and motor safety filter


Cleaning air filter and motor safety filter

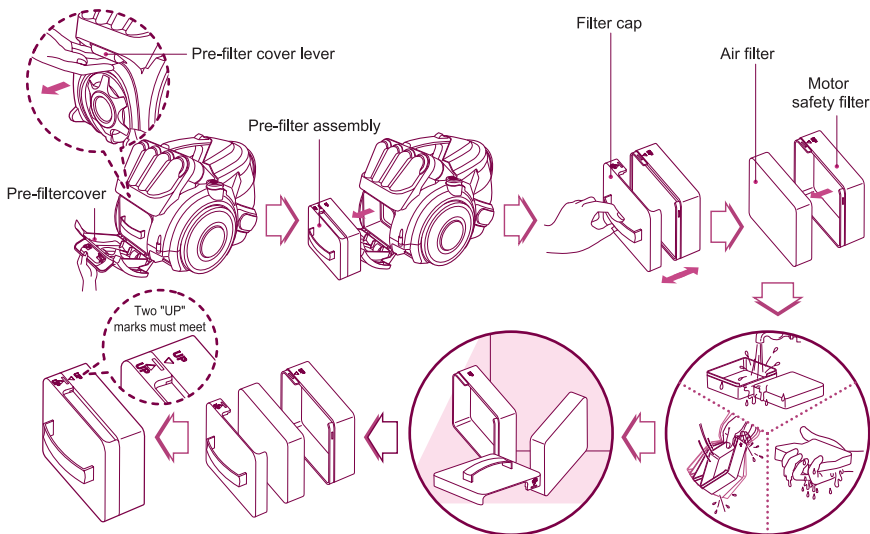


- If suction power is decreased after cleaning dust tank, clean air filter and motor safety filter. Air filter and motor safety filter are located at the back of vacuum cleaner in the above figure.
- Open the pre filter cover by pulling the pre filter cover lever and take out pre filter assembly.
 - Separate the parts.
 - Wash air filter and motor safety filter with water.
 - Do not wash filters with hot water.
 - Dry fully in shade so that moisture is entirely removed.
 - Air filter and motor safety filter should be cleaned in the above case.

Cleaning exhaust filter

Cleaning exhaust filter

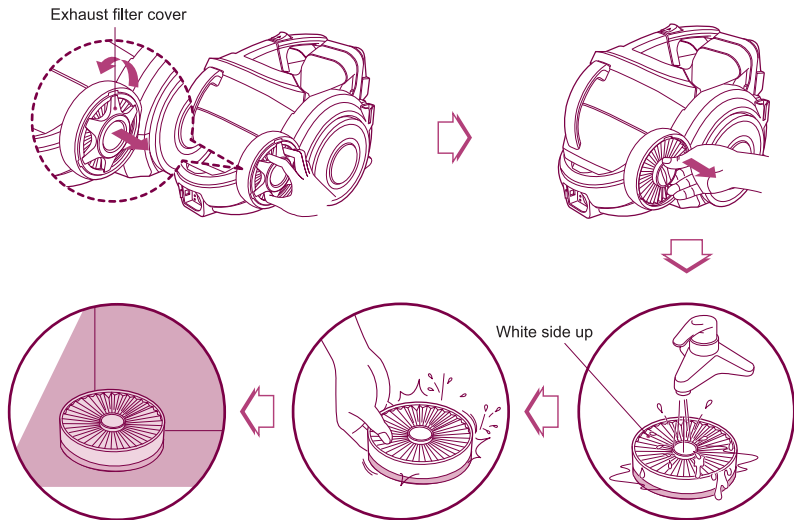

- ▶ The exhaust filter is a washable and reusable HEPA filter.
 - To clean the exhaust filter, remove the exhaust filter cover on the body by rotating it counterclockwise.
 - Separate the exhaust filter.
 - Wash the filter cleanly in flowing water.
 - Remove moisture.
 - **When filter is washed, make sure not to wash green side of filter.**
 - Dry fully in shade so that moisture is entirely removed.
 - The exhaust filter should be cleaned at least once a year.
- ▶ **Exhaust filter cover assembling**
 - Fit exhaust filter cover lugs to the grooves of vacuum cleaner body

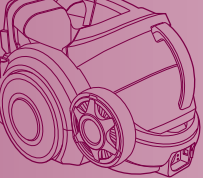

If you have a problem

If you have a problem

- ▶ If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the check list below.

Problem:
Suction is weakened and alarm.

The noise increases and the hose shrink.



Suction power is abruptly weakened.

Help:

Check the dust tank and suction inlet.



Solution

- 1 Dust tank full.
Empty dust tank.



Is it full? Empty the dust tank in time!

- 2 Motor filter dirty.
Clean the motor filter with brush and water, allow to dry and replace in cleaner.



Is the filter OK? Then check the suction inlet.

- 3 When checking the suction inlet, adjust the suction level to the maximum.

First step

Turn cleaner off and disconnect from electrical outlet, then disconnect nozzle from telescopic tube. Check if it is blocked, and remove any blockages.



If there is still a problem, proceed the second step.



Second step

Disconnect the telescopic tube from hose. Check if it is blocked, and remove any blockages.



If there is still a problem, proceed the third step.



Third step

Plug cleaner in, turn on, and check hose end for suction. Remove any obstructions.







 


If there is also a problem, clean the filter.




If you have a problem

Please check before notifying malfunction

- If you doubt the product meets with malfunction, please check the cause of such malfunction before contacting with the after-sales service center or agent, so as to ensure efficiency of repair.

Malfunction	Check	Troubleshooting
<p>The vacuum does not work?</p> 	<ul style="list-style-type: none"> • Is the plug inserted? • Is the socket powered on? • If the hose inserted? • If the motor heat protection opened? 	<ul style="list-style-type: none"> • Insert the plug tight (This product is applicable for 220V) • Verify the power of socket is on • Insert the hose tight • Restart in 2 hours
<p>The vacuum does not work?</p> 	<ul style="list-style-type: none"> • When the vacuum cleaner's suction is too large or the motor is under high speed running, they do not belong to the abnormal conditions. So, please use the vacuum cleaner properly. • If it is the noise rather than the normal motor sound, please phone the repair center. 	
<p>Abnormal sound exists inside the vacuum cleaner</p> 	<ul style="list-style-type: none"> • The duster collector is filled up. • The filter is clogged. • Suction inlet is jammed. • Drawtube is clogged. • Hose is clogged. 	<ul style="list-style-type: none"> • Clean out the dust collector. • Purge the sponge filter with water and air-dry in the shady and cool place for one day. • Take out the sucked objects before use. • Take out the objects inside the drawtube before use. • Take out the objects inside the hose before use.
<p>Peculiar smell exists inside the vacuum cleaner</p> 	<ul style="list-style-type: none"> • When the motor is running, the rubber band used for fixing the motor will produce a little smell due to the heat, but it will not affect the operation or damage the machine. • When the machine sucks some water accidentally or the dust collector is not cleaned for a long period of time, the peculiar smell will be produced. So, clean up the dust collector timely. 	
<p>Vibration brush head does not work or the amplitude of vibration is too small.</p> 	<ul style="list-style-type: none"> • The vibration brush head is used for cleaning the fabric such as bedclothes and sofa. • The big brush head shall be used for cleaning the carpet. • Check whether the chassis is properly. • When cleaning the thin fabric, please pad the thick bedclothes hereunder. • As cleaning the carpet, sometimes, the machine may not work due to affection from the carpet materials. So, please carry out the operation as required • Please confirm whether obstruction exists at the dust collector and suction inlet. • The amplitude of vibration may be reduced due to the decrease of suction. 	
<p>The power cord can not be scrolled thoroughly into the vacuum cleaner or the power cord can not be fully pulled.</p> 	<ul style="list-style-type: none"> • Pull out part of the power cord and then re-scroll it. • Please put forth your strength to pull out the power cord, which will not be damaged. • The power cord entwined inside the machine or it is caused by high temperature in the summer. • The cord is bended inside the machine or not coiled around the winder. After the winder is started, the normal operation could be realized. 	
<p>The vacuum cleaner or the discharged air is too heat.</p> 	<ul style="list-style-type: none"> • Is the suction normal? 	<ul style="list-style-type: none"> • The heat air discharged from the machine is arising from the heat produced by motor. So, the temperature is normal, please use the machine continuously.
<p>Inner wall of the hose is too dirt.</p>	<ul style="list-style-type: none"> • Never suck the water because after mixing of the water and dust, the tube wall will be polluted and the motor will be damaged. 	

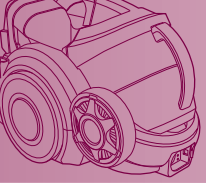

Packing List

Packing List

Vacuum Cleaner	1
Owner's Manual	1
Dust Brush&Upholstery Nozzle	1
Sani Punch	1
Elbow Tube	1
Hose	1
Telescopic tube	1
Conner Nozzle	1
Warranty Card	1

如有问题

瞬间感动 Moment Of Truth
LG 售后

请打电话



400-819-9999

售后热线

一号通

LG 电子 (天津) 电器有限公司

地址: 中国·天津市北辰区兴淀公路

传真: 022-26903476

邮编: 300402

全国技术服务中心服务咨询电话: 400-819-9999



<http://cn.lge.com>

P/No.: MFL56999649