


ENGLISH



**RAD114 (RAD114-A0U, RAS114F)  
RAD114B (RAD114B-A0U, RAS114B)**

**Before connecting, operating or adjusting this product, please read this instruction booklet carefully and completely.**



As an ENERGY STAR® Partner, LG has determined that this product or product models meet the ENERGY STAR® guidelines for energy efficiency.

ENERGY STAR® is a U.S. registered mark.



P/NO :MFL63266226

## Safety Precaution



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 
This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.



### CAUTION:

This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

### CAUTION concerning the Power Cord

**Most appliances recommend they be placed upon a dedicated circuit;**

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.




This device is equipped with a portable battery or accumulator.

**Safe way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators.

The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

 
## There is so much your Hi-Fi system can do

### Contents

	Setting up	4
	Main unit	5
	About Remote control	6
	Listening to CDs	7
	Listening to the radio	7
	Using an USB device	8
	Listening to music from your external device	9
	Enjoying a pre-programmed sound field	9
	Recording to USB	10
	Setting the Clock	11
	Troubleshooting	12
	Specifications	12

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible  
Respect copyrights**

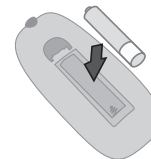

 
#### **Put the battery into the remote control**

Make sure for the + (plus) and – (minus) on the battery to be matched on the remote control. (size AAA)

**ENGLISH**

**Before connecting, operating or adjusting this product, please read this instruction booklet carefully and completely.**

## Setting up

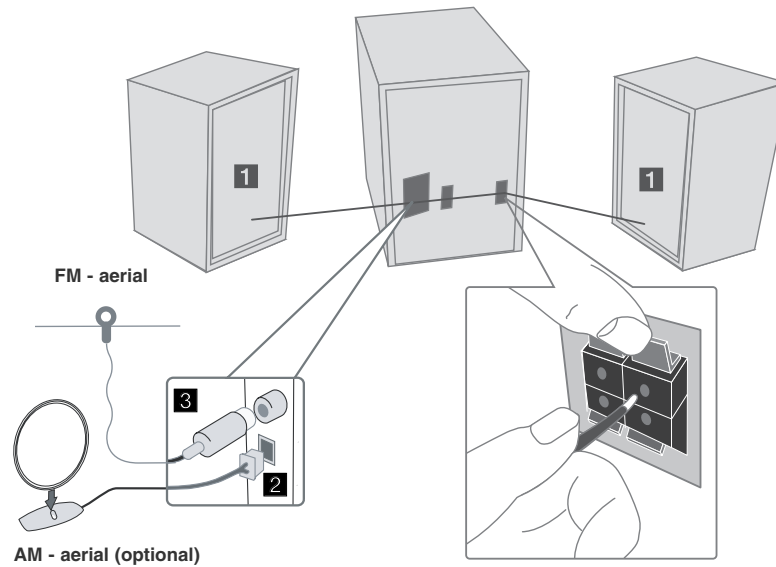

### Be careful of the following

Be careful to make sure children not to put their hands or any objects into the \*speaker duct.

\*speaker duct : A hole for plentiful bass sound on speaker cabinet(enclosure).

### 1 Connection of the front speakers

Connect the speaker cables to the speaker terminals. Connect the black end of each wire to the terminals marked - (minus) and the other end to the terminals marked + (plus).

### 2 Fit the AM loop aerial to its stand (AM optional)

Connect the AM loop aerial to the unit.

### 3 Connect the FM aerial

The reception will be at its best when the two loose ends of the aerial are in a straight line and horizontal.

### 4 Plug the power plug into a wall socket

 
### NOTES:

- If TV screen becomes discolored do not place speakers within 30cm from TV.
- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and - to -. If the cords are reversed, the sound will be distorted and will lack base.

## Main unit


- 1 DISPLAY WINDOW**
- 2** ◀◀ **TUNING (-)** (CD Previous)
- 3** ▶▶ **ST./MO.**
- 4** ■ **STOP** Stops playback or recording
- 5** ▶▶ **TUNING (+)** (CD Next)

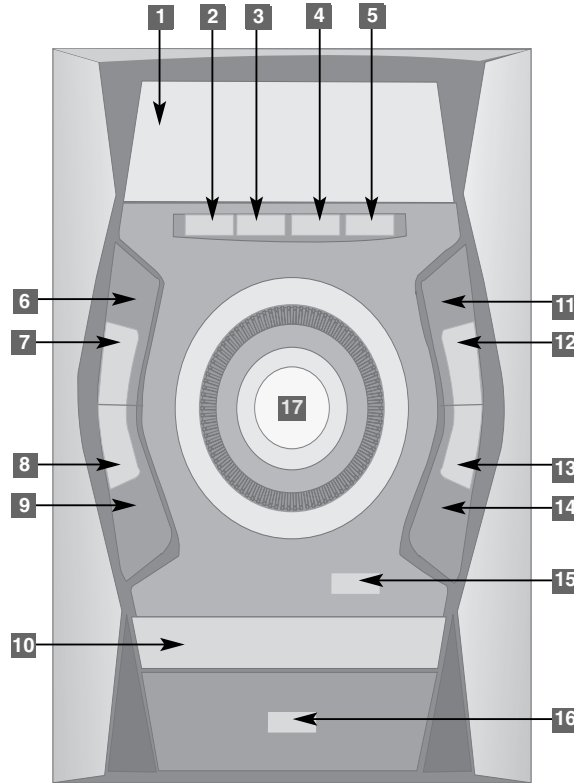


- 6** ⏻/⏪ **Power on/ off**
- 7** **EQ**  
You can choose sound impressions.
- 8** **XDSS Plus**  
**Extreme Dynamic Sound System**  
Reinforce the treble, bass and surround effect.
- MP3 Opt.**  
Optimizes compressible MP3 files so that it improves the bass sound.
- 9** **USB/ Rec.** Recording to USB
- 10** **CD door**




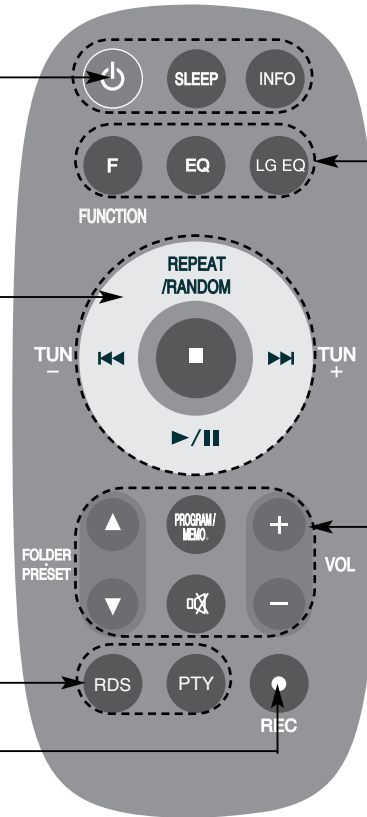 
- 11** **FUNCTION** Changes the functions
- 12** **CLOCK**  
For setting the clock and checking the time.
- 13** **TIMER**  
With the TIMER function you can turn CD, USB play and TUNER reception on or off at a desired time.
- 14** **SET** Confirms the time you have selected when setting the clock.
- 15** ▲ **OPEN/ CLOSE**
- 16** **USB Port**  
Connect a USB compatible device here.
- 17** **VOLUME**  
Controls the volume when using any function.

## About Remote control


 

	<b>POWER on/ off</b>
<b>SLEEP</b>	<b>Fall asleep while listening to your unit</b> Press <b>SLEEP</b> one or more times to select delay time between 10 and 180 minutes, after the unit will turn off.
<b>INFO</b>	<b>See information about your music.</b> MP3/ WMA files often come with tags. The tag gives the Title, Artist, Album or Time information.

<b>REPEAT/RANDOM</b>	<b>Listen to your tracks repeatedly or randomly.</b>
	<b>Selects the radio station.</b> <b>Searchs for a section within a track.</b> <b>Skips Fast backward or Forward.</b>
	<b>Starts or pauses playback</b>
	<b>Stops playback or recording</b>

<b>RDS/ PTY (optional)</b>	<b>RDS (Radio Data System)</b> <b>Searchs radio stations by radio type</b>
	<b>Recording button</b>



<b>F (FUNCTION)</b>	<b>Changes the functions.</b>
<b>EQ</b>	<b>Sound quality adjustment</b> You can choose sound impressions.
<b>LG EQ</b>	You can select a Natural or Local Specialization equalizer effect by using LG EQ.

	<b>Searchs for a folder of MP3/ WMA files</b> When a CD containing MP3/ WMA files in several folders is being played, press <b>FOLDER•PRESET</b> selects the folder you want to play. <b>Choose a 'preset number' for a radio station.</b>
	<b>Controls the volume when using any function.</b>
<b>PROGRAM/MEMO.</b>	<b>For storing radio stations</b> If you have saved radio stations using <b>PROGRAM/MEMO.</b> , you can scroll through them and select one. <b>Listens to your tracks in any order</b>
	<b>Temporarily stop the sound</b> Press the button again to return to the sound.

### Listening to CDs

Audio CD and MP3/ WMA CD can be played back in this unit.

	ON UNIT	ON REMOTE
1. Open the CD door	▲ OPEN/CLOSE	-
2. Insert the CD: Label facing up.	-	-
3. Close the CD door	▲ OPEN/CLOSE	-
4. Select the CD function: The display will show the total number of tracks (files).	FUNCTION	FUNCTION
5. Start the CD playing	▶/	▶/
6. To stop a CD playing	■	■

### Listening to CDs - More you can do

#### Pausing or restarting a CD

- 1 Press ▶/|| during playback.
- 2 Press this button again to resume play.

#### Searching for a section within a track

Hold ◀◀/▶▶ on the unit or ◀◀/▶▶ on the remote control during playback and release it at the point you want to listen to.

#### Skipping to another track (files)

Press ◀◀/▶▶ on the unit or ◀◀/▶▶ on the remote control in stop status.

#### Program list

You can play up to 20 tracks on a CD in order.

- 1 Insert a CD and wait for it to be read.
- 2 Press PROGRAM/MEMO. on the remote control in stop status.
- 3 Press ◀◀/▶▶ on the unit or ◀◀/▶▶ on the remote control to select a track.
- 4 Press PROGRAM/MEMO. again to save and select a next track.
- 5 Press ▶/|| to play the programmed music files.
- 6 To clear your selection, press ■, PROGRAM/MEMO. and then ■.

#### Listening to your tracks (files) repeatedly or randomly

- 1 Press REPEAT/RANDOM repeatedly. The current (tracks) file will be played back repeatedly or randomly.
- 2 To return to normal playback, press REPEAT/RANDOM repeatedly to select [Off].

### Listening to the radio

Make sure both the FM and AM (optional) aerials are connected.

	ON UNIT	ON REMOTE
1. Select either FM or AM (optional)	FUNCTION	FUNCTION
2. Select the radio station	TUNING (+) / (-)	TUN.- / TUN.+
3. To 'save' a radio station: A preset number will show in the display.	-	PROGRAM/MEMO.
4. Select the preset number	-	FOLDER*PRESET
5. To confirm press: Up to 50 radio stations can be saved.	-	PROGRAM/MEMO.
6. To select a 'saved' station	-	FOLDER*PRESET

### Listening to the radio - More you can do

#### Looking for radio stations automatically

- 1 Press and hold TUNING + / TUNING - on the unit or TUN.- / TUN.+ on the remote control for more than 0.5 second.
- 2 The tuner will scan automatically and stop when it finds a radio station.

#### Deleting all the saved stations

- 1 Press and hold PROGRAM/MEMO. on the remote control for two seconds. "ERASE ALL" shows.
- 2 Press PROGRAM/MEMO. on the remote control to erase all the saved stations.

#### Improving poor FM reception

Press ▶/|| (ST./MO.) on the remote control. This will change the tuner from stereo to mono and usually improve the reception.

## About MP3/ WMA

### MP3/WMA Disc compatibility with this unit is limited as follows:

- Sampling Frequency : 32 - 48 kHz (MP3), 32 - 48 kHz (WMA)
- Bit rate : 32 - 320 kbps (MP3), 40 - 320 kbps (WMA)
- CD-R physical format should be "ISO 9660/ JOLIET"
- If you record MP3/WMA files using the software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it is impossible to playback MP3 files.

We recommend that you use "Easy-CD Creator", which creates an ISO 9660 file system.

- Do not use special letters such as "/ : \* ? " < >" etc.
- Even if the total number of files on the disc has more than 1000, it will only be shown up to 999.

## Using an USB device

You can enjoy media files saved on an USB device by connecting the USB device to the USB port of the unit.

If you want to operate other function, see the CD playback section.

	ON UNIT	ON REMOTE
1. Connect the USB device to the USB port of the unit.	-	-
2. Select the USB function.	FUNCTION	FUNCTION
3. Select a file you want to play.	-	-
4. Start your media playing.	▶/	▶/
5. To stop, press	■	■
6. Before disconnecting the portable USB device, change to any other function.	FUNCTION	FUNCTION

### Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive : Devices that support USB 2.0 or USB 1.1.
- The USB function may not be available depending on devices.

### USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.

 
### Look out for the follows.

- **Do not extract the USB device while in operation.**
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/32) file system is supported.
- This unit is not supported when the total number of files is 1000 or more.
- External HDD, Locked devices or hard type USB devices are not supported.
- USB port of the unit can not be connected to PC. This unit can not be used as a storage device.



### Listening to music from your external device

The unit can be used to play the music from many types of external device.

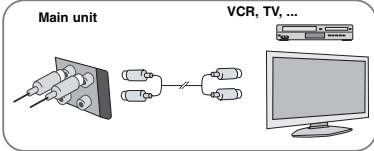	ON UNIT	ON REMOTE
<p><b>1. Connect</b> the external device to the <b>AUX IN</b> connector of the unit.</p> <p>&gt; If your TV has only one output for audio(MONO). connect it to the left(white) audio jack on the unit.</p> 	-	-
<b>2. Turn the power on.</b>	⏻/⏿	⏻
<b>3. Select the AUX function.</b>	FUNCTION	FUNCTION
<b>4. Turn on the external device and start it playing.</b>	-	-

### Enjoying a pre-programmed sound field

This system has a number of pre-set surround sound fields. You can select a desired sound mode by using **EQ/ LG EQ**.

The displayed items for the Equalizer may be different depending on sound sources and effects.

ON DISPLAY	Description
<b>NATURAL</b>	You can enjoy comfortable and natural sound.
<b>Local Specialization equalizer</b>	Regionally optimized sound effect.(DANGDUT/ ARABIC/ PERSIAN/ INDIA/ REGUETON/ MERENGUE / SALSA/ SAMBA)
<b>AUTO EQ</b>	Realizes the sound equalizer that is the most similar to the genre of which is included in the MP3 ID3 tag of song files.
<b>POP CLASSIC ROCK JAZZ</b>	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock , pop, jazz or classic concert.
<b>MP3 Opt.</b>	This function is optimized for compressible MP3 file. It improves the bass sound.
<b>XDSS</b>	Reinforce the treble, bass and surround sound effect.
<b>VIRTUAL</b>	You can enjoy moe virtual surround sound.
<b>NORMAL(OFF)</b>	You can enjoy the sound without equalizer effect.

## Recording to USB

You can record a various sound source to USB.

	ON UNIT	ON REMOTE
<b>1. Connect the USB device to the unit.</b>	-	-
<b>2. Select a mode in which you want to record.</b> Play back a sound source first.	<b>FUNCTION</b>	<b>FUNCTION</b>
<b>3. Start the recording.</b>	<b>Rec.</b>	<b>REC</b>
<b>4. To stop recording, press</b>	■	■

## Recording to USB - More you can do

### Recording Music file in disc source to USB

#### One track recording -

If the USB recording is started during playback of the CD, the one track/ file would be recording into the USB.

#### All tracks recording -

If the recording button is pressed at the CD stop, all tracks/ files would be recording.

#### Program list recording -

USB records after creating your own program if you want to record the track you want. Up to 20 songs can be recorded.

### Pausing recording

During recording, press **Rec.** (**REC**) to pause recording. Press **Rec.** (**REC**) to continue recording. (Only Radio/ AUX)

### To select recording bit rate and speed

- Press **Rec.** on the player or **REC** on the remote control for longer than 3 seconds.
- Use **◀ / ▶** on the player or **◀ / ▶** on the remote control to select the bit rate.
- Press **Rec.** or **REC** again to select the recording speed.
- Use **◀ / ▶** or **◀ / ▶** to select a desired recording speed.
  - X 1 SPEED** (96kbps, 128kbps, 192kbps, 256kbps)
    - You can listen to music while recording it. (Audio CD Only)
  - X 2 SPEED** (96kbps, 128kbps)
    - You can just recording the music file. (Audio CD Only)
- Press **Rec.** or **REC** to finish the setting.

 



10

### When you are recording, look out for the following

 
 

 
- You can check the recording percentage rate for the USB record on the screen during the recording. (MP3/ WMA CD only)
- During recording MP3/ WMA, there is no sound.
- When you stop recording during playback, the file that has been recorded at that time will be stored.(Audio CD only)
- Do not remove the USB device or turn off the unit during USB recording. If not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB", "ERROR", "USB FULL" or "NO REC" is displayed on the display window.
- For the discs recorded in the format of DTS disc, USB recording is not supported.
- Multi card reader device or External HDD can not be used for USB recording.
- A file is recorded by 128Mbyte when you record for a long term.
- When you stop recording during playback, the file will not be stored.
- In the state CD-G, DTS disc USB record is not operated.
- You may not record more than 999files.
- It'll be stored as follows.**

AUDIO CD	MP3/ WMA	The other sources
CD_REC   TRK 001   TRK 002   :   :	FILE_REC   (File name)   (File name)   :   :	EXT_REC   AUDIO_001   AUDIO_002   :   :


## Setting the Clock

	ON UNIT
1. Turn the power on	
2. Press for at least 2 seconds	<b>CLOCK</b>
3. Choose from either: AM 12:00 (for an am and pm display) or 0:00 (for a 24 hour display).	
4. Confirm your selection	<b>SET</b>
5. Select the hours	
6. Press	<b>SET</b>
7. Select the minutes	
8. Press	<b>SET</b>

### Use your player as an alarm clock

- Turn the power on.
- Press and hold **TIMER**. Each function, EX) TUNER, CD... flashes.
- Press **SET** when the function you want to be woken by is showing.
- Choose one of them by pressing **SET**.
- "ON TIME" will be displayed. Then you can set the time you want the alarm to go on. Press  to change the hours and minutes and **SET** to save.
- "OFF TIME" will be displayed. Then, you can set the time you want the function to stop. Press  to change the hours and minutes and press **SET** to save.
- You will be shown the volume (VOL) you want to be woken by. Use  to change the volume and **SET** to save. The clock icon "" shows that the alarm is set.
- When the system is turned off, you can check the time the alarm is set for by pressing **TIMER**. You can also turn the alarm on and off by pressing **TIMER**.

#### Notes:

- If you set the clock time, you can check the time by pressing **CLOCK** even when the player is turned off.
- If you set the clock time and alarm, you can check the alarm icon "" by pressing **CLOCK** even when the player is turned off.

### Fall asleep while listening to your player

- Press **SLEEP** repeatedly to select delay time between 10 and 180 minutes, after the unit will be turned off.
- To check the remaining time, press **SLEEP**.

### DIMMER

Press **SLEEP** once. The LED (Light-emitting diode) of front panel is turned off and the display window will be darken by half. To cancel it, press **SLEEP** repeatedly until dim off.

Troubleshooting		
Symptom	Cause	Correction
<b>General</b>		
No power.	The power cord is not plugged in.	Plug in the power cord.
	Check whether electricity failed.	Check the condition by operating other electronic devices.
No sound.	Check whether you select right function.	Press <b>FUNCTION</b> and check the selected function.
<b>CD</b>		
The unit does not start playback.	An unplayable disc is inserted.	Insert a playable disc.
	The disc is dirty.	Clean the disc.
<b>RADIO</b>		
Radio stations cannot be tuned in.	The antenna is positioned or connected poorly.	Connect the antenna securely.
<b>Remote control</b>		
The remote control does not work properly.	The remote control is too far from the unit.	Operate the remote control within about 23 ft (7 m).
	There is an obstacle in the path of the remote control and the unit.	Remove the obstacle.
	The battery in the remote control is exhausted.	Replace the battery with new one.

Specifications	
<b>General</b>	
Power supply	Refer to main label. (Mexico only : 120 V ~ 60 Hz)
Power consumption	30 W
Net Weight	3.1 kg
External dimensions (WxHxD)	202 x 307 x 292 mm
Operating temperature	5 °C to 35 °C
Operating humidity	5% to 85 %
<b>Tuner</b>	
FM Tuning Range	87,5 - 108,0 MHz or 87,50 - 108,00 MHz
AM Tuning Range (optional)	522 - 1620 kHz or 522 - 1710 kHz or 520 - 1710 kHz
<b>Amplifier</b>	
Output Power	55 W + 55 W
T.H.D	10 %
Frequency Response	42 - 20000 Hz
Signal-to-noise ratio	75 dB
<b>CD</b>	
Frequency response	40 - 20000 Hz
Signal-to-noise ratio	75 dB
Dynamic range	80 dB
<b>Speakers (RAS114B) (RAS114F)</b>	
Type	2 Way 2 Speaker
Impedance	4 Ω
Rated Input Power	55 W
Max. Input Power	110 W
Net Dimensions (WxHxD)	215 x 309 x 232 mm
Net Weight (1EA)	2.6 kg

Designs and specifications are subject to change without notice.



**Atención al Cliente**

<b>País</b>	<b>Teléfono</b>	<b>País</b>	<b>Teléfono</b>
México	01-800-347-1919	Costa Rica	1-800-507-5454
Colombia	01-8000-910683	Rep. Dominicana	00-800-751-5454
Chile	800-26-1054	Guatemala	1-801-422-5454
Ecuador	1-800-545454	El Salvador	00-800-6309
Venezuela	800-5424477	Cuba	204-3333
Panamá	800-5454	Miami, USA	1-305-477-1882
Perú	0-800-1-2424	Bolivia, La Paz	800-100-545
Puerto Rico	001-800-510-9564	Nicaragua	001-800-507-0007
Argentina	0800-888-5454 (Capital y GBA) / 0810-555-5454 (Interior del país)		


[www.lgservice.com](http://www.lgservice.com)