



Portable Theater

Multimedia 2.5" HDD

HXF2



HDMI



- This user manual contains instructions on how to use the product properly.
- Please read this manual carefully. Be sure to follow the instructions and notices.
- **GUI and package contents are subject to change without prior notice to improve the product quality.**
- To view HD quality resolution, you must connect the HDMI cable.
- Firmware can be updated frequently to improve the product quality.
- To download the latest firmware, please visit www.lge.com or LG service sites (LG service sites are listed on the last page)

Table of Contents

● Check Before Use	03
● Regulations	05
● Package Contents	07
● Name of Parts	08
● Connect Multimedia HDD to PC	09
● Connect Multimedia HDD to TV	10
● Remote control	13
● Touch Button	17
● Playing Multimedia File	
Movie menu	18
Photo menu	20
Music menu	22
All files menu	24
Setup menu	25
System Tab	
Menu Language	26
Text Encoding	26
Screen Saver	27
System Upgrade	28
Restore Default	29
System Version	29
HDD Capacity	30
Movie Tab	
Aspect Ratio	31
Brightness	32
Contrast	32
TV System	33
Subtitle Size	34
DivX Register	35
DivX Deregister	35
Photo Tab	
Slide show Time	36
Transition Effect	36
Background Music	37
Play Mode	37
Music Tab	
Night Mode	38
Digital Output	38
Play Mode	39
EQ Mode	40
● Safely remove (Unplug) for Windows	41
● FAT32 format for Mac	42
● Troubleshooting (FAQ)	43
● LG Service Site	47

Check Before Use

Check before use

- This user manual contains instructions on how to use the product properly.
- Please read this manual carefully.
- Be sure to follow the instructions and notices.

- Notes are divided into "Warning", "Caution" and "Tip" each denotes the following:

	Warning	Failure to follow the instructions below may result in injuries or product damage.
	Caution	Failure to follow the instructions below may result in serious injuries or product damage.
	Tip	It provides a recommendation to prevent product failure or malfunction in advance when using the product.

Warning



Warning

- It may cause defect under following circumstance.
 - Keep away from humidity, dust, and soot (may cause fire or electrocution).
 - Keep away from areas with temperature of above 35°C(95°F).
 - Keep away from magnetic fields, water, heat.
 - Do not use during thunder and lightning.
 - Do not drop the product or place heavy objects on it.
- The product may not work properly in areas with high static electricity.
- Make sure no dust or other foreign matter gets inside the port. It may cause data damage.
- Keep important data separately. We shall not be responsible for any loss of or damage to saved or recorded data caused by product defect, product repair or any other reason.
- Fan may make small noise depending on the environment.

Check Before Use

⦿ Caution



Caution

- LG Electronics will replace this product if it is faulty due to a manufacturing or materials defect, except where damage is caused by your use or negligence.
- **LG EXCLUDES LIABILITY FOR ALL CONSEQUENTIAL AND OTHER LOSS, INCLUDING LOSS OF DATA.**
- Do not use this product while it is in the pouch, it may cause the product to malfunction.
- Do not touch the heat vent or Fan when the unit is operating. It may become hot and may result in burns.
- This product is intended for use with TV's and monitors. Do not use this product other than its intended purpose.
- Do not use the product for the commercial purpose.
- Do not use the product for a long time without cooling it down.
- Do not attempt to modify this product in any way without authorization from LG Electronics. Unauthorized modification could void the user's authority to operate this product
- Do not place this product on a soft surface where the heat vent can be blocked. i.e. blanket, pouch, bed and etc. The heat vent is located on the bottom of the unit.
- **DO NOT PLACE THIS PRODUCT WHERE IT CAN BE REACHED BY CHILDREN. THE PRODUCT CAN GET HOT WHILE WORKING. IT MAY RESULT IN BURNS.**
- If smoke, unpleasant odor or noise is produced, unplug the power and peripherals immediately and remove all of cables.
- Do not disassemble, repair or rebuild the product.
- Do not pull out the USB cable while the Multimedia HDD operating. (The product may cause malfunction.)

Regulations

Regulations

Dolby

* Manufactured under license from Dolby Laboratories.

* "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



DivX

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.



ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content.

To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

"DivX Certified to play DivX video up to HD 1080p, including premium content."
"Pat. 7,295,673; 7,519,274; 7,515,710"

DTS

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software.

© 1996-2009 DTS, Inc., All Rights Reserved.



Regulations

Regulations

Battery directive

This symbol is applicable in Europe Union.
Hand over used batteries to recycling collection point of waste batteries.









FCC

"This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received,
including interference that may cause undesired operation"



Package Contents

🎯 Components

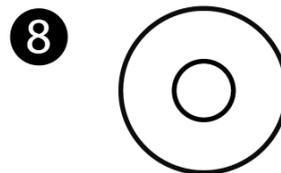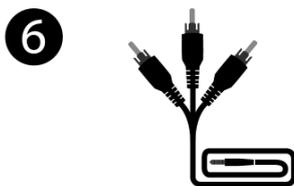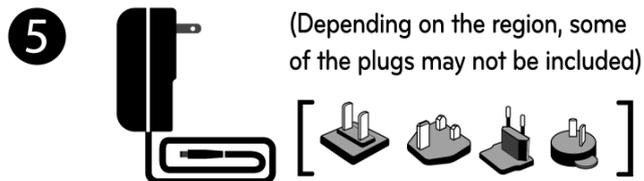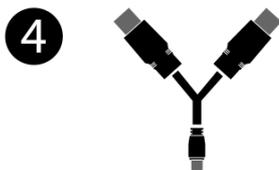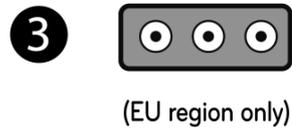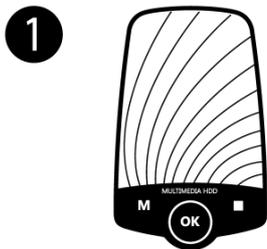

1. Multimedia HDD

2. Remote control

3. SCART adapter (EU only)

4. USB Y-cable

5. Power adapter (Optional Plug)

6. A/V composite cable

7. Quick guide

8. Manual CD


※ Components are subject to change without prior notice to improve the product quality.

※ Depending on the region, some of the plugs may not be included.

※ The accessories included may differ from the images.

Name of Parts

🎯 Name of Parts

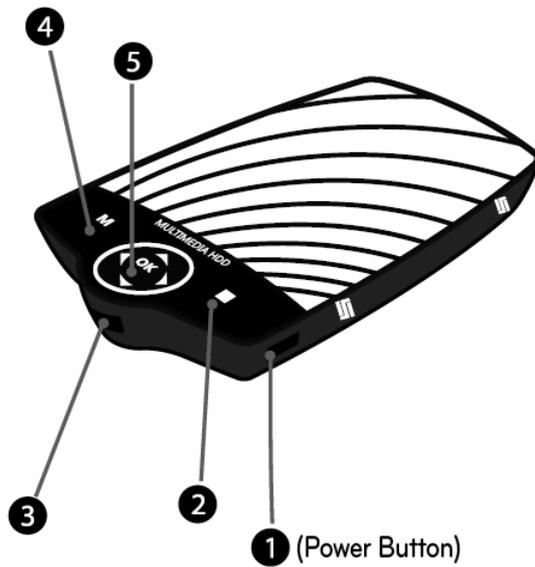

1. Power Button

2. Stop & Return (Touch Button)

3. IR (for remote control)

4. Menu (Touch Button)

5. Left, Right, OK, Up, Down
(Touch Button)

6. Power supply connector

7. HDMI connector

8. A/V composite (Phone Jack type)

9. USB port (Mini-B type)

Connect Multimedia HDD to PC

① Connect to PC


1



Connect Multimedia HDD to TV

① Connect to TV


2

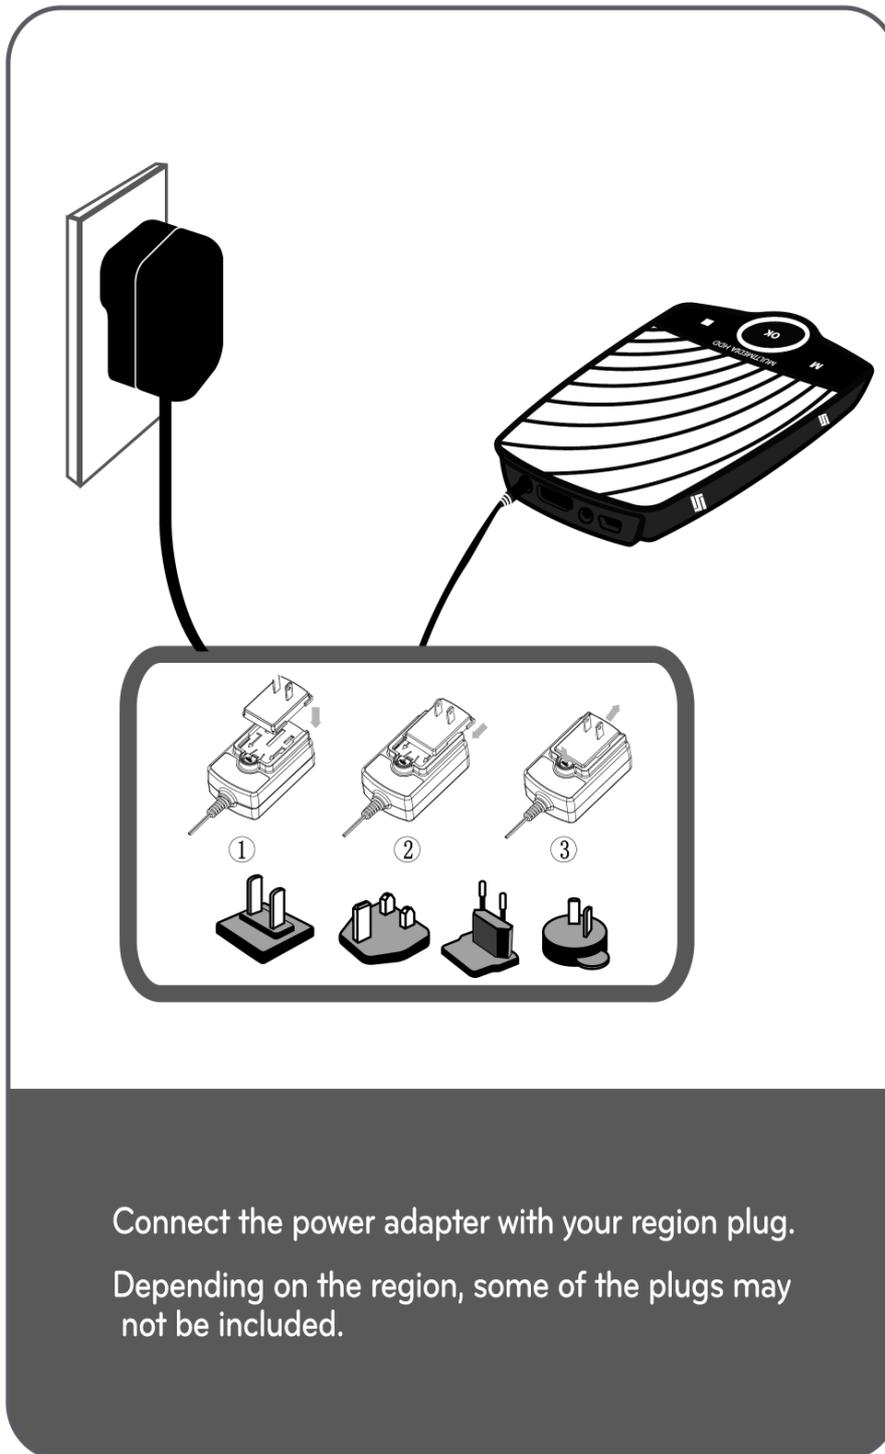

Connect Multimedia HDD to TV

③ Connect to TV

3

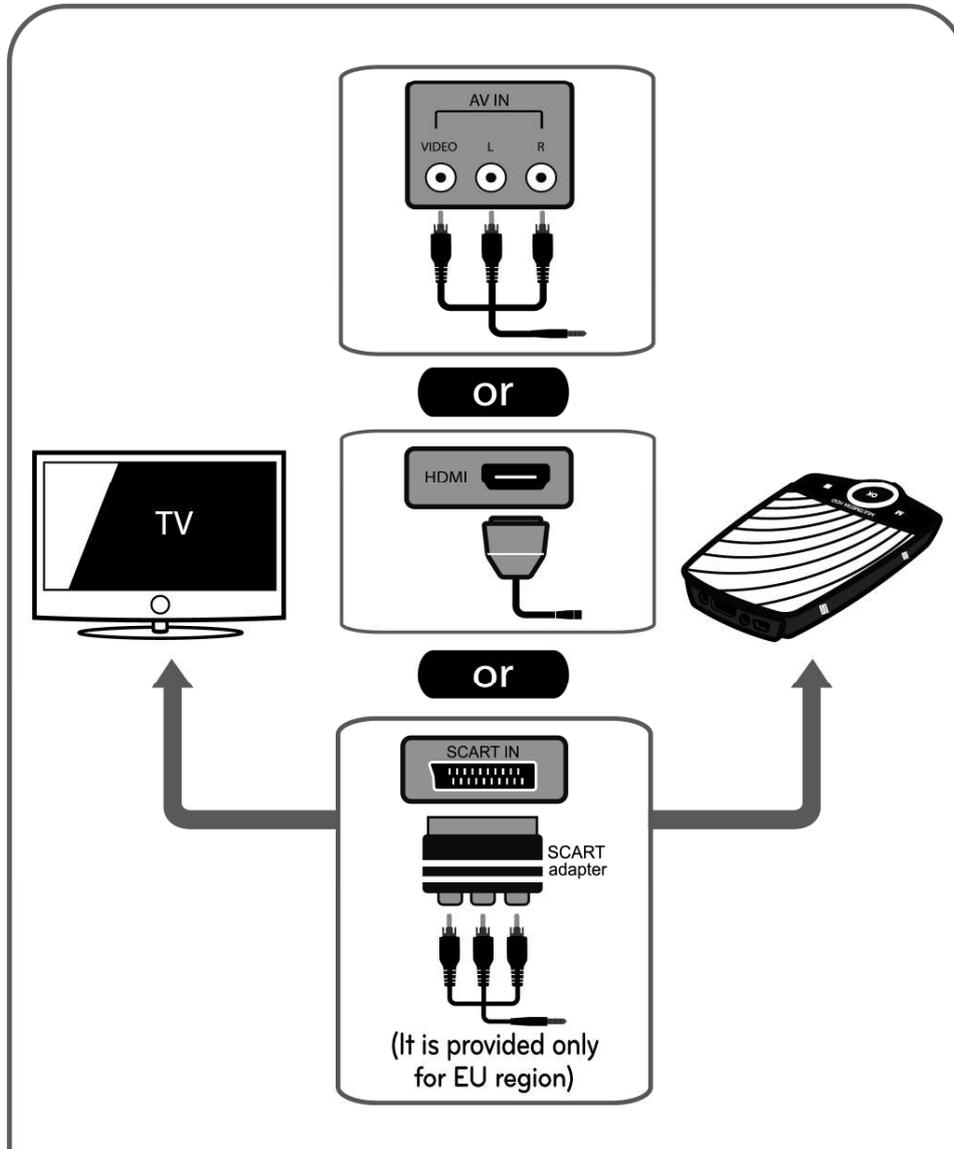

Connect the Multimedia HDD to TV with A/V cable, HDMI cable or SCART adapter with A/V cable. SCART adapter needs to be connected to A/V cable. Depending on the region, SCART adapter may not be included.

★ You can enjoy the high resolution movie with HDMI cable.

Connect Multimedia HDD to TV

Connect to TV

4



- ★ This product is set to NTSC or PAL depending on the region.
- ★ If you want to change NTSC to PAL or PAL to NTSC mode, please change the TV system in setup menu.
- ★ While HDMI cable is connected, it does not need to change the TV system in setup menu.
- ★ This product supports both NTSC and PAL.


Use the remote control or touch buttons on the Multimedia HDD to select the media files you want to play. (www.lge.com, www.lgservice.com)

For more detail, please see the "Playing Multimedia file" chapter in the user's manual.

- ★ When using the remote control, aim it at the IR (for remote control).
- ★ After turning on the Multimedia HDD first time, language selection page will be shown. Please choose the language you want.

Remote control

Remote control battery installation

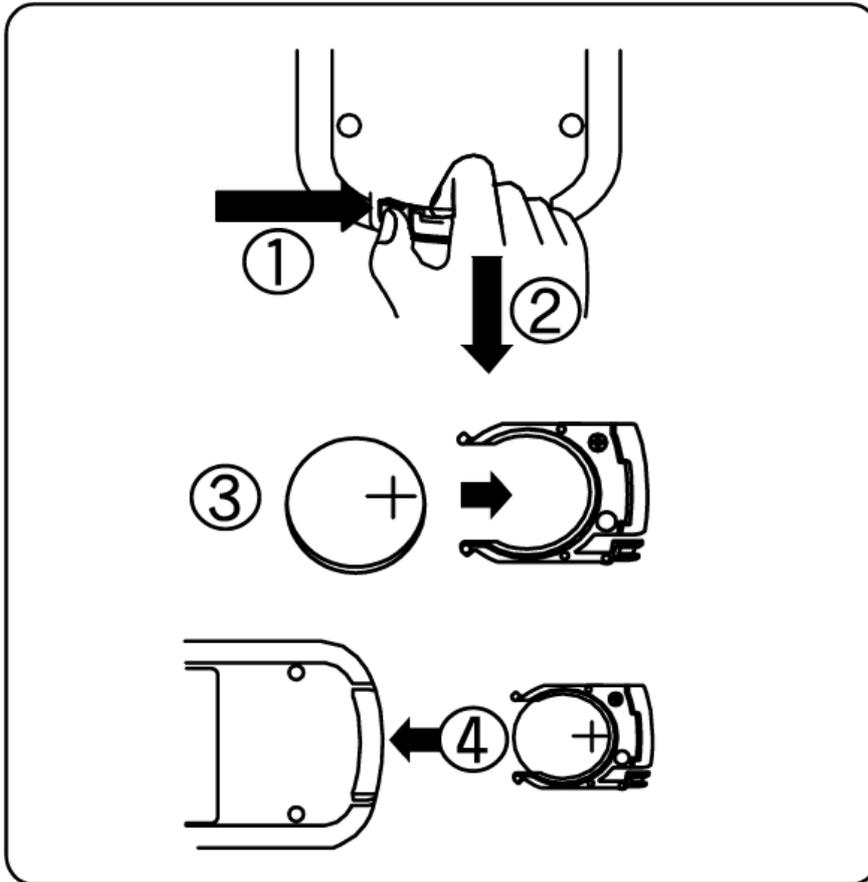

*To install/change the remote control battery pull out the battery tray by pulling the tab. Place the battery with the + side facing up. Insert the battery tray back into the remote control in its original position.

*This symbol is applicable in Europe Union.
Hand over used batteries to recycling collection point of waste batteries.




Tip

Battery Type : Li Coin Battery CR2032
Operating Voltage : 3V

Remote control

Remote control

*If you press and hold the button, it may jump to the next step due to the remote control sensitivity.

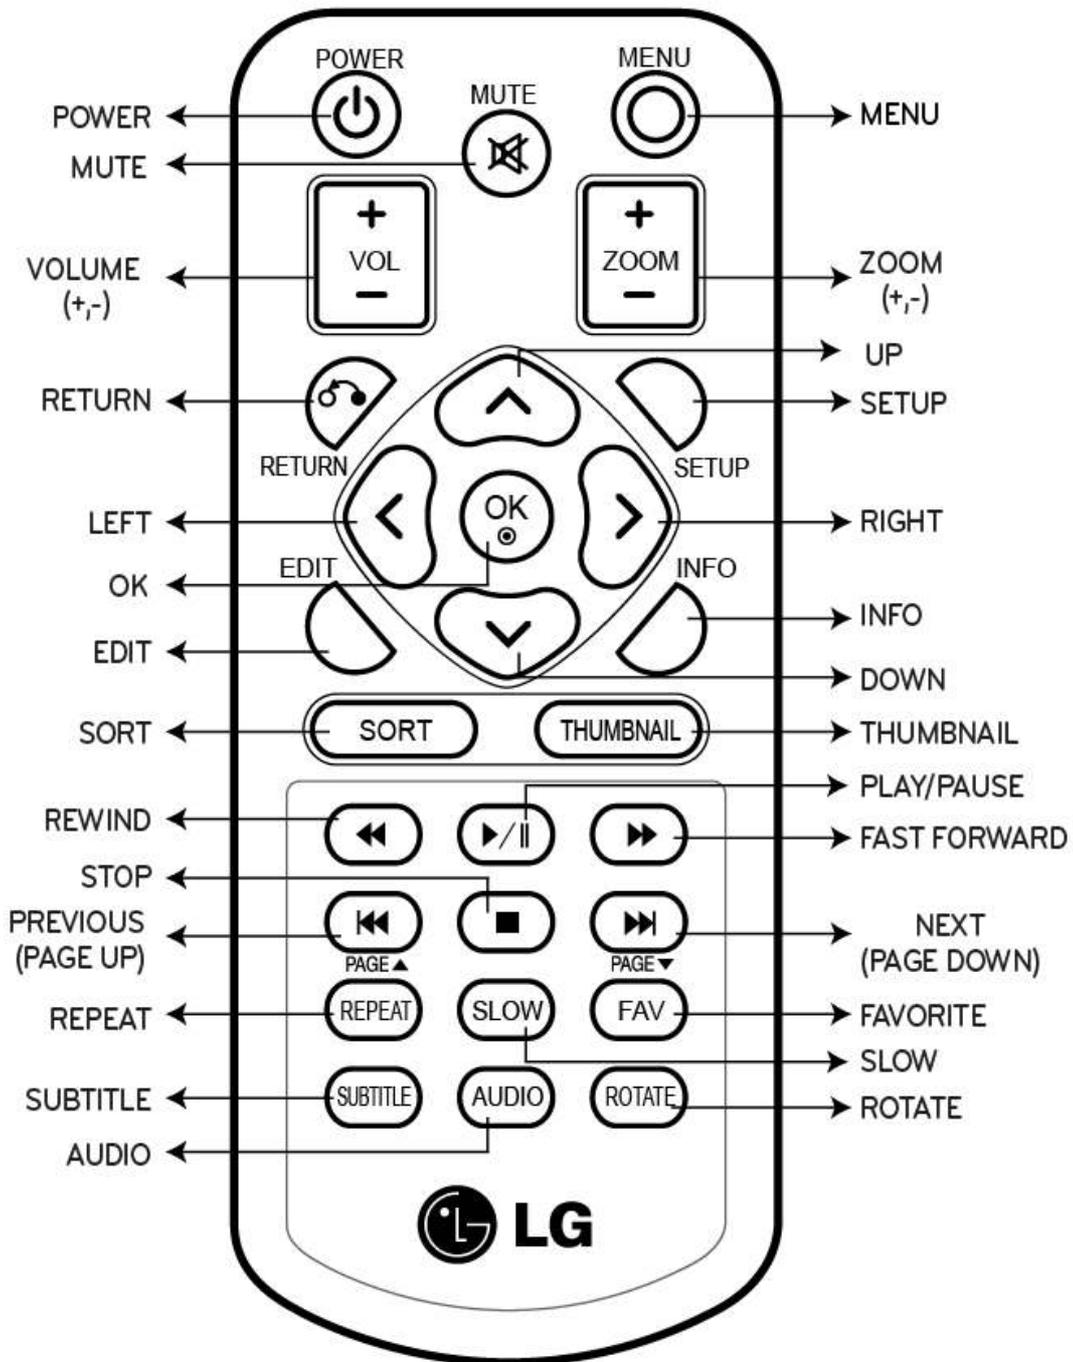

Remote control

Remote control

*If you press and hold the button, it may jump to the next step due to the remote control sensitivity.

	POWER	Turn on/off power
	MENU	Go to the main menu
	VOLUME (+,-)	Increase/decrease the volume (To maximize the volume, increase the TV volume)
	MUTE	Mute/Resume audio output
	ZOOM (+, -)	Zoom in/out during movie, photo playing
		Photo zoom (2x, 4x, 8x, 16x)
		Movie zoom (2x, 3x, 4x, 8x)
	RETURN	Stop/Return playing file
		Go to upper folder/menu
	SETUP	Go to the setup menu
	EDIT	Delete/Rename file on the list
	INFO	See the information of movie and photo in full screen mode
	OK	Confirm/play selected file
		Display the status bar during playing movie, photo
	UP	Go to the previous file on the list
		Move up
	DOWN	Go to the next file on the list
		Move down
	LEFT	Go to the left sub menu (Movie, Photo, Music and All files)
		Move to left
		Move to 5 minutes before in movie full screen mode
	RIGHT	Go to the right sub menu (Movie, Photo, Music and All files)
		Move to right
		Move to 5 minutes later in movie full screen mode

Remote control

Remote control


*If you press and hold the button, it may jump to the next step due to the remote control sensitivity.

	SORT	Sort the files on list (Name, date, type and size)
	THUMBNAIL	Change displayed photos in thumbnail/list
	PLAY/PAUSE	Play/Pause the file
	REWIND	Rewind the movie or music playback in full screen mode (2X, 4X, 8X, 16X, 32X)
	FAST FORWARD	Forward the movie or music playback in full screen mode (2X, 4X, 8X, 16X, 32X)
	PREVIOUS (PAGE UP)	Go to the previous page of the list
		Play the previous file
	NEXT (PAGE DOWN)	Go to the next page of the list
		Play the next file
	STOP	Stop playing
	REPEAT	Change the repeat mode
	SLOW	Play movie slowly in full screen mode (3/4, 1/2, 1/4, 1/8, 1/16x)
	FAVORITE	Add/delete music file in favorite folder for slideshow background music (Favorite folder is displayed in music menu)
	SUBTITLE	Display/hide the subtitle setting menu
		File names of subtitle and movie should be same
		Subtitle may not be displayed properly, depending on TV aspect ratio, subtitle language or subtitle file property (If there is no subtitle, it is not working)
	AUDIO	Change the available audio track of movie (If there is no dubbing audio track, it is not working)
	ROTATE	Rotate the photo to 90 degrees (Clockwise) in full screen mode

Touch Button

Touch Button

*If you press and hold the button, it may jump to the next step due to the touch button sensitivity.

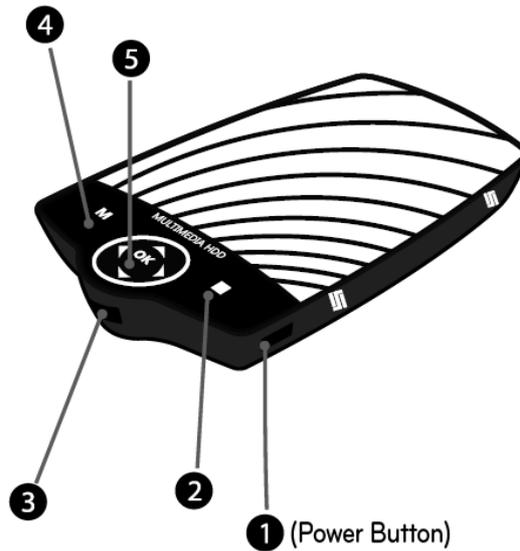

1		POWER	Turn on/off power
2		RETURN	Stop/Return playing file Go to upper folder/menu
3		IR (for Remote control)	When using the remote control, aim it at the IR (for remote control)
4	M	MENU	Go to the main menu
5	OK	OK	Confirm/play selected file Display the status bar during playing movie, photo
		UP	Go to the previous file on the list Move up
		DOWN	Go to the next file on the list Move down
		LEFT	Go to the left sub menu (Movie, Photo, Music and All files) Move to left Move to 5 minutes before in movie full screen mode
		RIGHT	Go to the right sub menu (Movie, Photo, Music and All files) Move to right Move to 5 minutes later in movie full screen mode

Playing Multimedia File

⊙ Movie Menu



*On main menu, use **LEFT and RIGHT** to anchor on the movie icon, and press **OK** to enter the movie menu.

*Use the movie menu to play movie files from the Multimedia HDD. This Multimedia HDD cannot playback DRM files.
(The On Screen Display on your model may be slightly different.)

*Use the **UP and DOWN** for navigation in the movie menu. Press **OK** to play the movie file.

Tip) Only movie files are shown on the list.

Tip) Specific files cannot support some of functions.

Playing Multimedia File

Movie Menu



FUNCTIONS

1. Change the sub menu (All files, Movie, Photo and Music)

Press **LEFT** and **RIGHT** to change the sub menu (All files, Movie, Photo and Music)

Tip) For user's convenience, change the folder first.

(Depending on the sub menu, some of files are not shown on the list)

2. Slow motion, Rewind / Forward movie

Slow motion: Press **SLOW** to see the slow motion. (3/4, 1/2, 1/4, 1/8, 1/16x)

Rewind : Press **REW** to fast rewind the current playback. (2X, 4X, 8X, 16X, 32X)

Forward : Press **FF** to fast forward the current playback. (2X, 4X, 8X, 16X, 32X)

Press **OK** to return to the regular playback.

Tip) Depending on the file properties, actual running speed may differ from displayed speed.

Specific files may not support some of FF/REW/SLOW.

3. Zoom

Press **ZOOM(+, -)** to zoom in/out during movie playback. (2x, 3x, 4x, 8x)

4. Stop playing movie

Press **RETURN** to stop/return playback when playing movie.

Press **STOP** to stop playing.

Tip) To resume playing from the beginning or where you left off,

you have to stop playing movie with **RETURN** before the power off.

5. Volume

Press **VOLUME(+, -)** to increase/decrease the volume, **MUTE** to mute/resume audio output.

(To maximize the volume, increase the TV volume)

6. Subtitle / Movie audio track

Press **SUBTITLE** to display/hide the subtitle setting menu. File name of subtitle and movie should be same. Subtitle may not be displayed properly, depending on TV aspect ratio or subtitle file property.

(If there is no subtitle, it is not working)

Tip) Press **UP, DOWN** and **OK** to change the subtitle, text encoding, time sync, color, size and offset.

Press **AUDIO** to change the available audio track of movie.

(If there is no dubbing audio track, it is not working)

7. File rename and delete

Press **EDIT** to delete/rename file on the list.

8. Go to Setup/Main menu

Press **SETUP** to go the setup menu. Press **MENU** to go the main menu.

Tip) (NTSC : A/V phone jack mode (480P), HDMI mode (480P, 720P 60Hz, 1080i 60Hz, 1080p 60Hz)

PAL : A/V phone jack mode (576P), HDMI mode (576P, 720P 50Hz, 1080i 50Hz, 1080p 50Hz))

9. Sort

Press **SORT** the files on list. (Name, date, type and size)

Caution)

In case of display "Bitstream Error" during playing, please press **FF** to skip the error section of abnormal file before message comes up again. The movie may or may not play depending on the error severity of file. It may not work depending on the file.

Playing Multimedia File

⊙ Photo Menu



*On main menu, use **LEFT and RIGHT** to anchor on the photo icon, and press **OK** to enter the photo menu.

*Use the photo menu to play photo files from the Multimedia HDD. This Multimedia HDD cannot playback DRM files.
(The On Screen Display on your model may be slightly different.)

*Use the **UP and DOWN** for navigation in the photo menu. Press **OK** to play the photo file.

Tip) Only photo files are shown on the list.

Tip) Specific files cannot support some of functions.

Playing Multimedia File

Photo Menu



FUNCTIONS

1. Change the sub menu (All files, Movie, Photo and Music)

Press **LEFT** and **RIGHT** to change the sub menu (All files, Movie, Photo and Music)

Tip) For user's convenience, change the folder first.

(Depending on the sub menu, some of files are not shown on the list)

2. Go to previous, next photo file

Previous : Press **PREVIOUS** or **LEFT** to go to previous photo file.

Next : Press **NEXT** or **RIGHT** to go to next photo file.

3. Zoom

Press **ZOOM** to zoom in/out during photo playing. (2x, 4x, 8x, 16x)

4. Rotate the photo

Press **Rotate** to rotate the picture to 90 degrees. (Clockwise)

5. Stop playing photo

Press **RETURN** to stop/return playback when playing photo.

Press **STOP** to stop playing.

6. File rename and delete

Press **EDIT** to delete/rename file on the list.

7. Go to Setup/Main menu

Press **SETUP** to go the setup menu. Press **MENU** to go the main menu.

Tip) Select "Folder" or "Favorite" (Setup → Photo → Background music) to listen to music while viewing photo files.

8. Thumbnail

Press **THUMBNAIL** to change displayed photos in thumbnail/list.

9. Favorite

Press **FAV** to add/delete music file in favorite folder for Slideshow background music.

10. Sort

Press **SORT** the files on list. (Name, date, type and size)

Playing Multimedia File

⊙ Music Menu



*On main menu, use **LEFT and RIGHT** to anchor on the music icon, and press **OK** to enter the music menu.

*Use the music menu to play music files from the Multimedia HDD. This Multimedia HDD cannot playback DRM files.
(The On Screen Display on your model may be slightly different.)


*Use the **UP and DOWN** for navigation in the music menu. Press **OK** to play the music file.

Tip) Only music files are shown on the list.

Tip) Specific files cannot support some of functions.

Playing Multimedia File

🎯 Music Menu

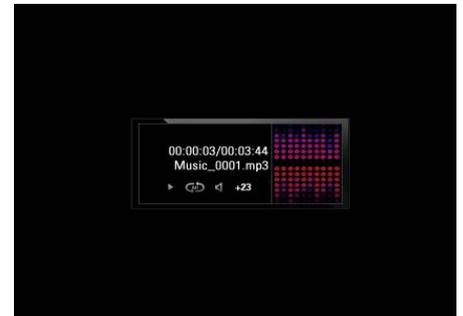

FUNCTIONS

1. Change the sub menu (All files, Movie, Photo and Music)

Press **LEFT** and **RIGHT** to change the sub menu (All files, Movie, Photo and Music)

Tip) For user's convenience, change the folder first.

(Depending on the sub menu, some of files are not shown on the list)

2. Go to previous, next music file

Previous : Press **PREVIOUS** to go to previous music file.

Next : Press **NEXT** to go to next music file.

3. Rewind / Forward music

Rewind : Press **REW** to fast rewind the current playback. (2X, 4X, 8X, 16X, 32X)

Forward : Press **FF** to fast forward the current playback. (2X, 4X, 8X, 16X, 32X)

Press **OK** to return to the regular playback.

Tip) Depending on the file properties, actual running speed may differ from displayed speed.
Specific files may not support some of FF/REW/SLOW.

4. Volume

Press **+**, **-** to increase/decrease the volume, **MUTE** to mute/resume audio output.

(To maximize the volume, increase the TV volume)

5. Stop playing music

Press **RETURN** to stop/return playback when playing music.

Press **STOP** to stop playing.

6. File rename and delete

Press **EDIT** to delete/rename file on the list.

7. Go to Setup/Main menu

Press **SETUP** to go the setup menu. Press **MENU** to go the main menu.

Tip) Repeat-track, Repeat-All, Shuffle and Off Play modes can be selected in "Setup → Music → Play Mode".

Tip) Select "Folder" or "Favorite" (Setup → Photo → Background music) to listen to music while viewing photo files.

8. Favorite

Press **FAV** to add/delete music file in favorite folder for Slideshow background music.

9. Sort

Press **SORT** the files on list. (Name, date, type and size)

Caution)

To play music file with all functions support in setup menu, please play through music menu.
In case of playing music file through All files menu, some functions may not be supported.

Playing Multimedia File

⊙ All Files Menu



*On main menu, use **LEFT and RIGHT** to anchor on the All files icon, and press **OK** to enter the All files menu.

*Use the All files menu to play movie, photo and music files from the Multimedia HDD.

*This Multimedia HDD cannot playback DRM files.
(The On Screen Display on your model may be slightly different.)

*Use the **UP and DOWN** for navigation in the All files menu.
Press **OK** to play the movie, photo and music files.

*For more detail, please see the "Movie, photo and music menu" Chapter.

Tip) Movie, photo and music files are shown on the list.

Tip) Specific files cannot support some of functions.

Playing Multimedia File

⦿ Setup Menu



*On main menu, use **LEFT and RIGHT** to anchor on the setup icon, and press **OK** to enter the setup menu.

*Use **LEFT and RIGHT** to toggle between System, Movie, Photo and Music.



*Use **UP and DOWN** to select sub menu of System, Movie, Photo and Music, and press **OK** to access the next level items, and press again to confirm the setting.

Tip) Most of changes will be saved automatically without any further notice.

*Exit Setup menu, press **SETUP or RETURN**
(The On Screen Display on your model may be slightly different.)

Playing Multimedia File

Setup Menu – System Tab



Language : Select to choose the OSD (On Screen Display) language.

*Press **OK** to unfold the sub items of Language, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

*Total 15 different languages are supported, they are English, Spanish, French, German, Italian, Russian, Polish, Portuguese, Dutch, Greek, Turkish, Korean, Chinese, Simplified Chinese and Japanese.

(Depending on the region, supported GUI language may change)



Text Encoding : Select to choose the text encoding subtitle language.

*Press **OK** to show the checkbox of Text Encoding, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

Playing Multimedia File

① Setup Menu – System Tab



Tip) Language – Text encoding table

Languages	Text encoding
English	English
French, German, Polish Portuguese, Spanish, Italian, Dutch	Western
Korean	Korean
Russian	Cyrillic
Turkish	Turkish
Greek	Greek
Chinese	繁體中文(BIG5)
Simplified Chinese	简体中文(GBK)
Japanese	Japanese



Screen Saver : Select to set screen saver time.

*Press **OK** to unfold the sub items of Screen Saver, use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

*User can select among Off / 5 / 10 / 20 minutes.

Playing Multimedia File

Setup Menu – System Tab



System Upgrade : Select to upgrade system firmware.

*Put new firmware named "install.img" under the root directory of multimedia HDD through USB port by PC or Mac.

(※ You can get the latest firmware file at www.lge.com)

*Press **OK** to show the sub items of System Upgrade, choose "Cancel" to abort the operation and choose "Upgrade" to upgrade the system firmware. Afterward, the system will reboot and the firmware upgrade page begin to show. After firmware upgrade completed, the system will reboot and show the language selection page, just like below.



Caution)

- Do not turn off the power while the firmware is updating.
- If the firmware is not updated correctly the Multimedia HDD will not function properly. (Refer to #14 in Trouble Shooting)

Playing Multimedia File

Setup Menu – System Tab



Restore Default : Select to restore factory setting.

*Press **OK** to show sub items of Restore Default, use **UP and DOWN** to select Cancel or Restore. Choose "Cancel" to abort the operation and "Restore" to start to restore factory setting.

*After Restore to default is completed, the system will reboot and show the language selection page.



System Version : Show the system version.

*System Version will be displayed.

Playing Multimedia File

① Setup Menu – System Tab




HDD Capacity : Show the hard disk capacity information.

*Information of HDD Capacity will be displayed.

Playing Multimedia File

① Setup Menu – Movie Tab

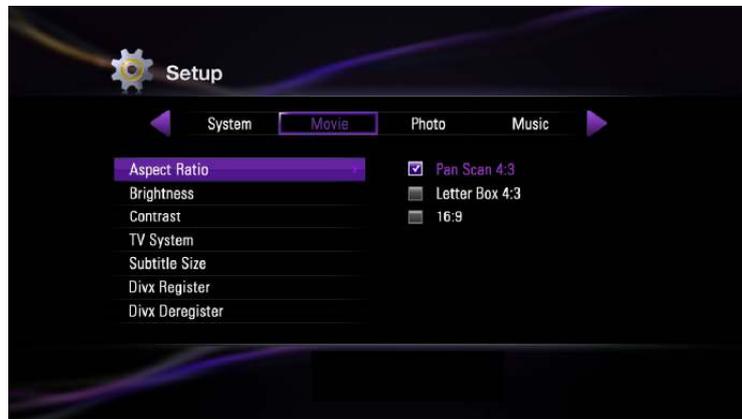

Aspect Ratio : Select to set aspect ratio.

*Press **OK** to unfold the sub items of aspect ratio, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

Pan Scan 4:3 Display a wide picture on the entire screen and cuts off the redundant portions. Select when a standard 4:3 TV is connected.

Letter Box 4:3 Display a wide picture with two black borders on the top and bottom of 4:3 screen. Select when a standard 4:3 TV is connected.

16:9 Compress the image to convert the whole image.
Select when a 16:9 TV is connected.

Playing Multimedia File

Setup Menu – Movie Tab



Brightness : Select to set brightness levels.

*Press **OK** to pop up the brightness status bar, and use **LEFT** and **RIGHT** to adjust the brightness level, press **OK** to confirm the setting.



Contrast : Select to set contrast levels.

*Press **OK** to pop up the contrast status bar, and use **LEFT** and **RIGHT** to adjust the contrast level, press **OK** to confirm the setting.

Playing Multimedia File

① Setup Menu – Movie Tab




Subtitle Size : Select to set subtitle size.

*Press **OK** to unfold the sub items of subtitle size, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

*User can select among Small / Normal / Large


Playing Multimedia File

Setup Menu – Movie Tab

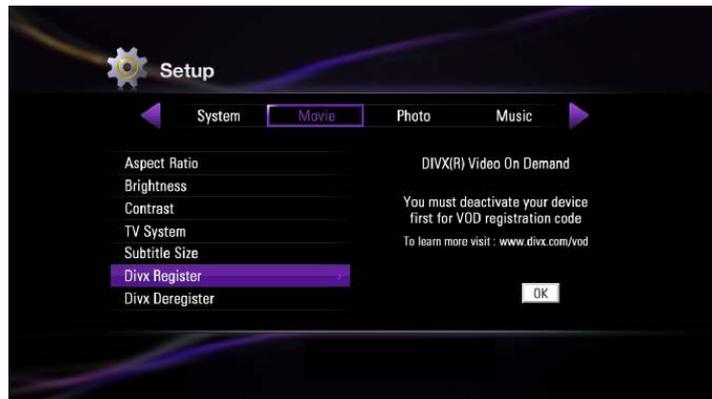

DivX Register : Select to set DivX Register.

*Press **OK** to see the DivX register, press again to confirm the setting.

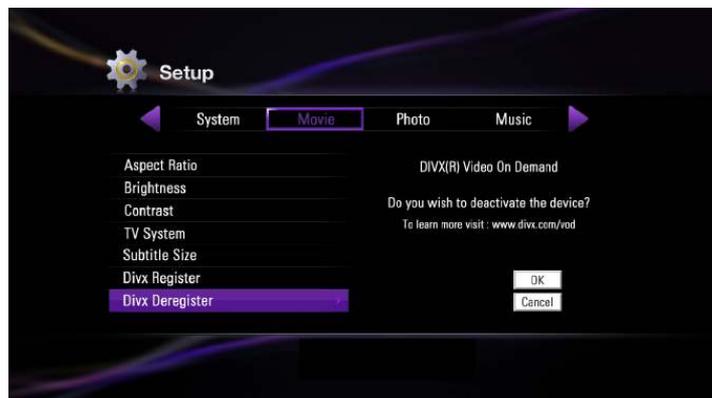

DivX Deregister : Select to set DivX deregister.

*Press **OK** to see the DivX deregister, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

Playing Multimedia File

Setup Menu – Photo Tab



Slide Show Time : Select to set slide show time.

*Press **OK** to unfold the sub items of Slide Show Timing, use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

*User can select among Off / 2 / 5 / 10 / 30 Seconds / 1 minute / 2 minutes.




Transition Effect : Select to set the transition effect of photos.

*Press **OK** to unfold the sub items of Transition Effect, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

- 1) Shuffle : shuffle in and out
- 2) Waterfall : like a steep descent of water from a height
- 3) Left to Right : from left to right
- 4) Top to Bottom : from top to bottom
- 5) Strip Left Down : like strip cover from top of left to bottom of right
- 6) Cross Fade : fade in and fade out
- 7) Snake : like snake motion
- 8) Dissolve : like water dissolve

Playing Multimedia File

Setup Menu – Photo Tab

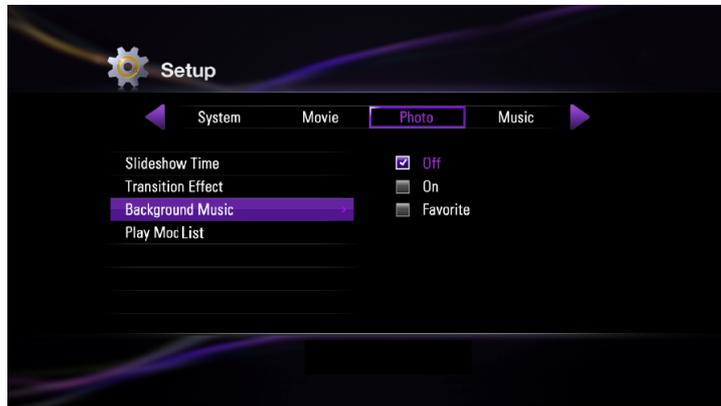


Background Music : Select to play the music file during slide show.

*Press **OK** to show sub items of background music, use **UP and DOWN** to select the items, press **OK** to confirm the setting.

Off: Turn off the background music during.

Folder: Turn on the music on the same folder during slide show.

Favorite: Turn on the music on the favorite list during slide show.

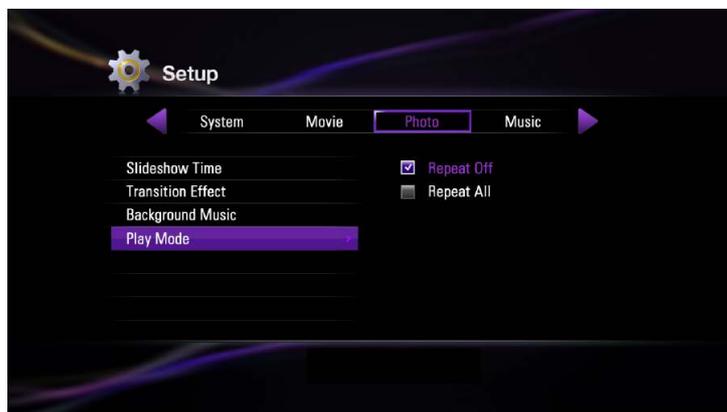

Play Mode : Select to set Play Mode from Repeat Off/All.


*Press **OK** button to unfold the sub items of Play Mode, and use **UP and DOWN** to select the items, press **OK** to confirm the setting.

Repeat Off: Turn off the repeat function.

Repeat All: Select to repeat all files under the same folder.

Playing Multimedia File

Setup Menu – Music Tab

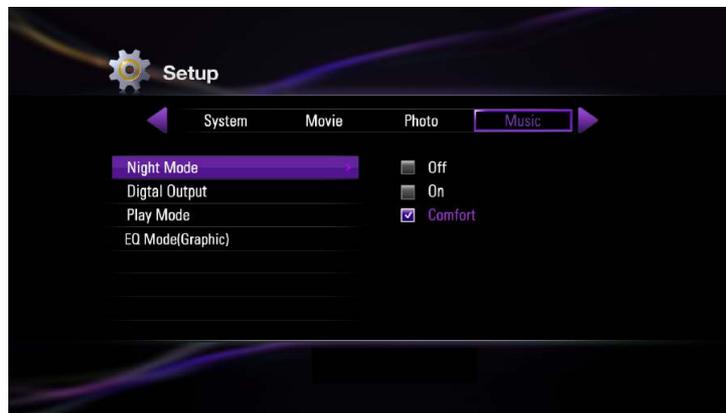

Night Mode : Select to toggle Night Mode on, off and comfort.


*This function reduces the maximum dynamic audio range.

*Press **OK** to unfold the sub items of Night Mode, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

Off: Close night mode function.

On: Reduces most of the maximum dynamic audio range.

Comfort: Reduces half of the maximum dynamic audio range.

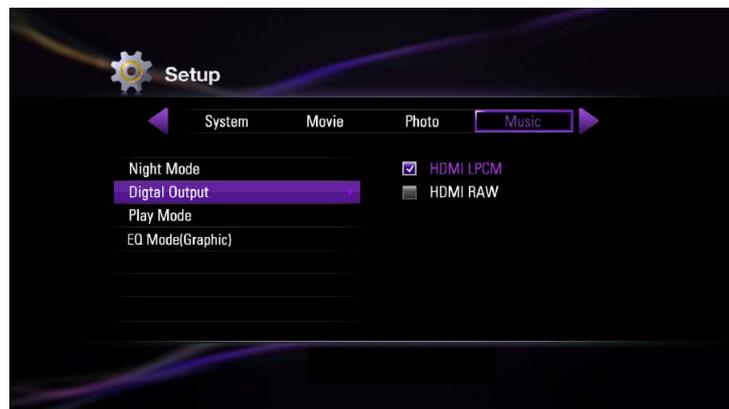

Digital Output : Select from HDMI LPCM or RAW.

*Press **OK** to unfold the sub items of Digital output, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

HDMI LPCM: 2 channels audio output. (default setting)

HDMI RAW: Provide a better audio output quality. (5.1 channels, the original bit stream)

Playing Multimedia File

① Setup Menu – Music Tab



Play Mode : Select to set Play Mode from Off, Repeat-track, Repeat-All or Shuffle.

*Press **OK** to unfold the sub items of Play mode, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.

Repeat Off: Turn off the repeat function.


Repeat Track: Select to repeat on single file.

Repeat All: Select to repeat all the files under the same folder/Favorite list.

Shuffle: Repeat on the files randomly under the same folder/Favorite list.

Playing Multimedia File

Setup Menu – Music Tab

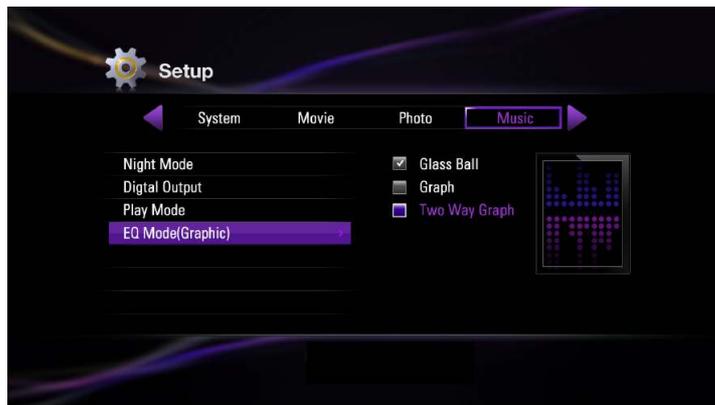

EQ Mode : Select to set EQ Mode from Glass Ball, Graph or Two Way Graph.


*Press **OK** to unfold the sub items of EQ mode, and use **UP** and **DOWN** to select the items, press **OK** to confirm the setting.



(Glass Ball)



(Graph)

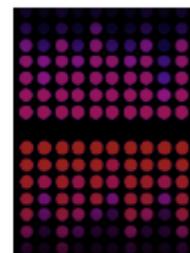

(2Way Graph)

Safely remove (Unplug) for Windows

⦿ Safely remove (unplug)

✳ Removing the external HDD from the PC without following the safe removal instruction may cause problem to the stored data or operation of the external HDD.

1. Double-click the Safely Remove Hardware Icon in the notification area.



2. On the window, click the Stop button followed by OK.




3. When the message indicates that is safe to remove the device appears, click OK and remove the external HDD after checking LED Operation Status.



FAT32 format for Mac

⦿ FAT32 format for Mac

*LG Multimedia HDD do not support Mac format (HFS+). To use this product on Mac, it needs to be formatted as FAT32. (Files more than 4GB cannot copied at one time. Please copy them separately.)

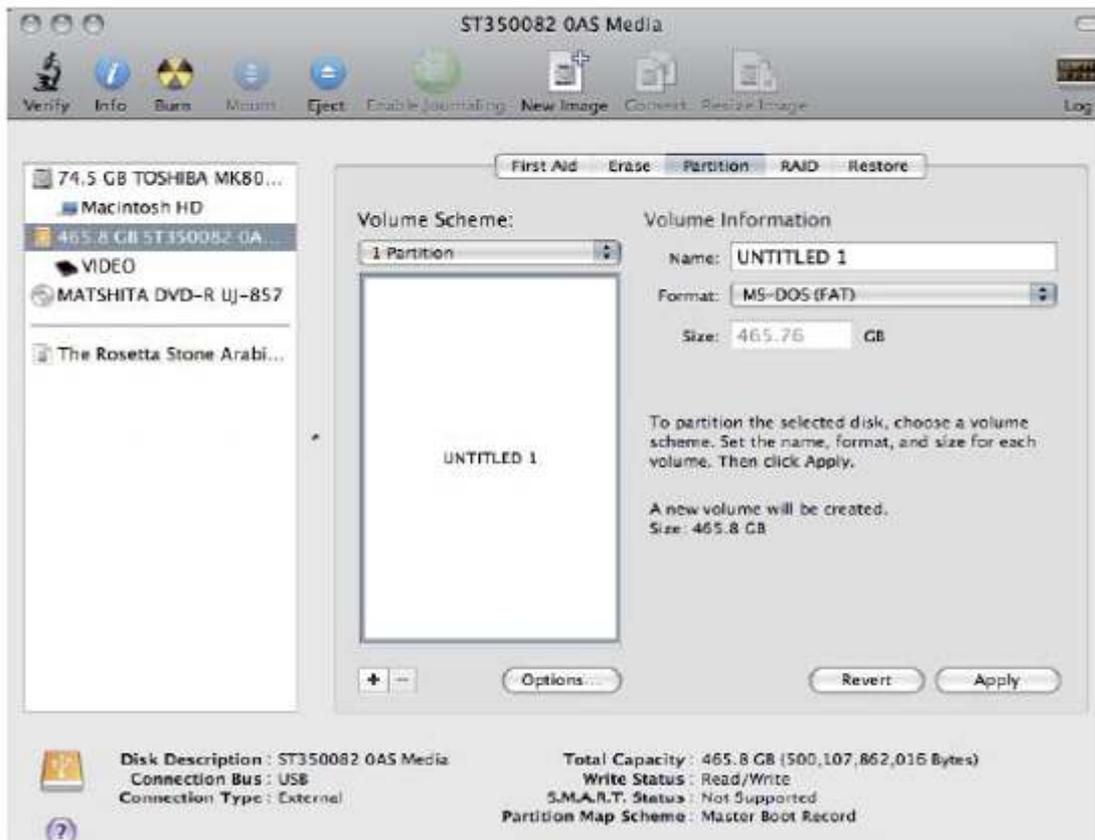

1. Connect the Multimedia HDD to your Mac.
2. Go to [Finder Menu Bar] → [Go Menu] → [Utilities], double click [Disk Utility]
3. Select the Multimedia HDD and choose the partition tab.
4. In the Volume Scheme, choose only one partition. If you choose more than one partition, the unit may not work properly.
5. In the [Volume Option], enter the name and choose [MS-DOS(FAT)].
6. Click [Apply], to start formatting. It could take several minutes depending on your Mac.

Troubleshooting (FAQ)

⦿ When connect Multimedia HDD to PC

- 1. Once connected, the Multimedia HDD is recognized but not displayed.**
Make sure that the mounted external HDD is initialized, partitioned, and formatted.
- 2. Files larger than 4GB cannot be copied to the Multimedia HDD on Mac.**
The partition of the external HDD is FAT 32. Files larger than 4GB cannot be copied to the Multimedia HDD on Mac.
- 3. Power is insufficient.**
[Major symptoms]
Not recognized/Sometimes recognized/Tick sound heard/Data move failed/Driver disappeared.
[Solution]
Connect all USB Y-cables, connect directly to the rear of the PC, connect power adapter.
- 4. Data in Multimedia HDD is lost.**
 - Data may be lost when running Disk Defragmenter or Scan Disk with "Precise"
Data may be lost due to shock when the Multimedia HDD is operating.
Data after a format may be lost.
 - Data may be lost if USB cable is disconnected while files are copied via USB port.
Also, resume function, skip function or FF/REW does not work properly during movie playback because file attribute data were damaged.
- 5. The "Hi-Speed USB device is connected to a Non Hi-Speed USB hub" message is displayed.**
This message is displayed when a multimedia HDD is connected to a USB Low speed host adapter (12Mbps max) or if the USB driver is incorrect.
In this case, purchase a USB 2.0 hub or install the driver manually.
- 6. Check the sequence when the multimedia HDD does not work.**
Check whether the USB cable is connected correctly.
Check the operation of LED.
Check the driver recognition.
Check if the internal motor of the multimedia HDD works during operation.
Check the normal operation of the USB port from the Control Panel in the following sequence:
1) Windows 2000/XP/VISTA, Windows 7
Control Panel → System → Hardware → Device Manager → Common Parallel Bus Controller
- 7. After copying files from Mac, Multimedia HDD is not working.**
Multimedia HDD does not support Mac format (HFS+). To use this product on Mac, it needs to be formatted as FAT32. Please see the FAT32 format for Mac in previous page. (Files larger than 4GB cannot copied at one time. Please copy them separately)
- 8. The HDD capacity is smaller than indicated capacity on the package**
The capacity is usually different because calculation method. It depends on method of decimal or binary.

Troubleshooting (FAQ)

⦿ When connect Multimedia HDD to TV

[Operation-Remote control]

1. The remote control doesn't work.

- Check the power adapter connection.
- Check to see if there is any object between the product and the remote control causing obstruction.
- Ensure you are pointing the remote control directly at the Multimedia HDD.
- Ensure that the battery is installed with correct polarity (+ to +, - to -).
- Install new battery.

[Operation-Connection]

2. Power is suddenly turned off.

- Check the power adapter connection.
- Do not connect USB cable and Power adapter together.

3. No picture & No sound.

- Check whether the product is turned on.
- Is the power cord inserted into power outlet?

4. Picture appears slowly after turning on.

- This is a normal process, the image is not displayed during the product startup process.
- The picture will appear within two minutes.

5. The product does not turn on.

- You must first turn on the main power (on the actual product itself). Only after the main power has been turned on will you be able to turn on/off the product by remote control.
- The Multimedia HDD will turn on after the power has been turned off for more than 5 seconds. (It takes a moment for the main HDD to reboot.)

[Operation-Display]

6. I see a blank screen when I select "HDMI auto" in the Setup Menu.

- Depending on your TV model, the Multimedia HDD may not recognize the TV resolution. With A/V cable, it does not support over 720P.
(A/V recommended resolution : 576P for PAL TV's, and 480P for NTSC TV's)

7. TV screen can shake and blur while viewing booting logo.

- Depending on your TV system (NTSC, PAL), TV screen can shake and blur while viewing booting logo. Main menu GUI is not showing properly. Please modify the resolution.
(Setup menu → Movie tab → TV System)

8. After booting, the main menu does not show up on the screen.

- This situation may occur due to resolution problems. Please modify the resolution.
(Setup menu → Movie tab → TV System)
- Please remove the cable and power adapter and retry.

9. After booting, the files I copied are not shown on TV.

- After booting, if the files you copied are not shown on TV properly, please unplug the power adapter and retry.

Troubleshooting (FAQ)

⦿ When connect Multimedia HDD to TV

[Operation-Display]

10. After the boot up while the loading screen is showing the TV turns off or the "No Signal" message appears.
 - The TV may turn off momentarily or the "No Signal" message might appear depending on the model of your TV. This is a normal process when your Multimedia HDD is booting.
11. Do not see the GUI on the screen properly.
 - The GUI is optimized for 720p resolution. In other resolutions, the letters may appear blurry or broken, however it will not have affect playing the files.

[Operation-Others]

12. The product stops operating when exposed to excess heat.
 - This product has a HDD attached inside. Therefore, if played for over a certain amount of time, the product will get hot. The reason the product stops operating is to protect the HDD circuit from the hot temperature. Please cool the product down and restart the product. (Depending on the environment, it may take over 30 minutes)
13. I can still hear the unit operating after it's been turned off.
 - The Hard Disk included in the product will need 20-30 seconds to turn it off completely.
14. The Multimedia HDD will not boot up.
 - There may be a firmware problem and the product may not be functioning properly.
 - Do as follows to correct the problem.
 - 1) Download the latest firmware from www.lge.com, www.lgservice.com and place the file in the root(D:/, E:/, etc) directory.
 - 2) Connect the A/V or HDMI cable to the TV and then connect the power cord.
 - 3) Press the main POWER button (located on the side of the unit) for 5 seconds. (Under Multimedia HDD power off status)
(If Multimedia HDD power is on already, firmware update does not start)
 - 4) The system will boot and automatically update the firmware. This process may take 2-3 minutes or longer depending on the system.
 - 5) When the update process is complete, the Multimedia HDD will automatically reboot.
 - 6) It is now ready for use.
15. The screen shakes when playing music, movie and photo files.
 - The optimized mode for PAL TV's and NTSC TV's is 50Hz and 60Hz, respectively.
 - Choosing the wrong frequency mode(50Hz or 60Hz) can cause the screen to shake during movie or picture playback.
16. It sounds noisy from fan.
 - Fan sound level is less than 30dB. Sometimes it sounds different because of environmental condition such as floor flatness or material.

Troubleshooting (FAQ)

⦿ When connect Multimedia HDD to TV

[Play-Movie]

17. AVI, WMV, MKV and MOV file extension movies are not played.

- Please check the codec first. This product doesn't support wmv1 and wmv2 codecs.
- Movie file including OGG and rt29 audio codecs are not supported.

18. During playing movie, "Bitstream error" message is shown.

- In case of display "Bitstream Error" during playing, please press **FF** to skip the error section of abnormal file before message comes up again. The movie may or may not play depending on the error severity of file. (It may not work depending on the file.)

19. The quality of HD movie is not good.

- AV connection only supports the SD movie even though HD movie plays.
- HDMI cable is required to enjoy the HD movie.

20. Subtitle is not displayed properly.

- Subtitle may not be displayed properly, depending on TV aspect ratio or subtitle file.
- Change the position and color in the subtitle menu.

21. The audio does not work during movie playback.

- The audio depends on setting of HDMI RAW or HDMI LPCM. Try to change the audio setting. If it does not work, audio codec in movie may not be supported.

22. How can DivX paid VOD be played?

- Please visit www.divx.com. There is detail information on the website.

[Play-Music]

23. Some functions are not supported during playing music.

- To play music file with all functions support in setup menu, please play through music menu.
- In case of playing music file through all files menu, some functions may not be supported.

24. Music is not stopping.

- After playing music, background music is basic function
- If you want to turn off the music, press **RETURN** or **STOP**.

[Play-Photo]

25. The screen blurs or shakes when playing slide show.

- Depending on the model of TV, the screen may blur or shake while viewing a photo image.

[Play-Function]

26. It does not go to the main menu screen when I press **MENU**.

- In full movie or photo screen mode, **MENU** button is not activated.
- Press **RETURN**, and then press **MENU** to go to the Main menu.

LG Service Site

Asia (Country / Region)

Azerbaijan	http://www.lgservice.com
Bangladesh	http://www.lgservice.com
Brunei	http://www.lgservice.com
Cambodia	http://www.lgservice.com
China	http://china.lgservice.com
Hong Kong	http://hk.lgservice.com
India	http://in.lgservice.com
Indonesia	http://id.lgservice.com
Japan	http://jp.lgservice.com
Kazakhstan	http://kz.lgservice.com
Korea	http://www.lgservice.co.kr
Kyrgyzstan	http://www.lgservice.com
Macau	http://mo.lgservice.com
Malaysia	http://my.lgservice.com
Myanmar	http://www.lgservice.com
Nepal	http://www.lgservice.com
Philippines	http://ph.lgservice.com
Singapore	http://sg.lgservice.com
Sri Lanka	http://www.lgservice.com
Taiwan	http://www.lgservice.com
Tajikistan	http://www.lgservice.com
Thailand	http://th.lgservice.com
Turkmen	http://www.lgservice.com
Uzbekistan	http://www.lgservice.com
Vietnam	http://vn.lgservice.com

Africa (Country/Region)

Algeria	http://dz.lgservice.com
Angola	http://ao.lgservice.com
Benin	http://bj.lgservice.com
Botswana	http://www.lgservice.com
Burkina Faso	http://bf.lgservice.com
Cameroon	http://cm.lgservice.com
Canary Islands	http://cn.lgservice.com
Egypt	http://eg.lgservice.com
Ethiopia	http://et.lgservice.com
Gabon	http://ga.lgservice.com
Gambia	http://gm.lgservice.com
Ghana	http://gh.lgservice.com
Guinea	http://gn.lgservice.com
Ivory Coast	http://ic.lgservice.com
Kenya	http://ke.lgservice.com

Lesotho	http://www.lgservice.com
Liberia	http://lr.lgservice.com
Libya	http://www.lgservice.com
Madagascar	http://mg.lgservice.com
Mali	http://ml.lgservice.com
Mauritius	http://mu.lgservice.com
Morocco	http://ma.lgservice.com
Namibia	http://www.lgservice.com
Nigeria	http://ng.lgservice.com
Reunion	http://re.lgservice.com
Senegal	http://sn.lgservice.com
South Africa	http://za.lgservice.com
Sudan	http://www.lgservice.com
Swaziland	http://www.lgservice.com
Togo	http://tg.lgservice.com
Tunisia	http://tn.lgservice.com
Zimbabwe	http://zw.lgservice.com

Middle East (Country/Region)

Afghanistan	http://www.lgservice.com
Bahrain	http://bh.lgservice.com
Cyprus	http://cy.lgservice.com
Iran	http://ir.lgservice.com
Iraq	http://iq.lgservice.com
Israel	http://www.lgservice.com
Jordan	http://jo.lgservice.com
Kuwait	http://kw.lgservice.com
Lebanon	http://lb.lgservice.com
Oman	http://om.lgservice.com
Pakistan	http://pk.lgservice.com
Qatar	http://qa.lgservice.com
Saudi Arabia	http://sa.lgservice.com
Syria	http://sy.lgservice.com
Turkey	http://tr.lgservice.com
U.A.E.	http://ae.lgservice.com
Yemen	http://ye.lgservice.com

Central & South America (Country/Region)

Argentina	http://ar.lgservice.com
Bolivia	http://www.lgservice.com
Brazil	http://br.lgservice.com

LG Service Site

Caribbean	http://www.lgservice.com
Chile	http://cl.lgservice.com
Colombia	http://co.lgservice.com
Costa Rica	http://cr.lgservice.com
Cuba	http://www.lgservice.com
Dominican Republic	http://dm.lgservice.com
Ecuador	http://ec.lgservice.com
El Salvador	http://www.lgservice.com
Guatemala	http://www.lgservice.com
Honduras	http://www.lgservice.com
Nicaragua	http://www.lgservice.com
Panama	http://pa.lgservice.com
Paraguay	http://www.lgservice.com
Peru	http://pe.lgservice.com
Uruguay	http://www.lgservice.com
Venezuela	http://ve.lgservice.com

North America (Country/Region)

Canada	http://ca.lgservice.com
Mexico	http://mx.lgservice.com
Puerto Rico	http://www.lgservice.com
U.S.A.	http://www.lgusa.com

Europe (Country/Region)

Albania	http://www.lgservice.com
Austria	http://www.lgservice.com
Belgium	http://be.lgservice.com
Bosnia-Herzegovina	http://www.lgservice.com
Bulgaria	http://bg.lgservice.com
Byelorussia	http://www.lgservice.com
Croatia	http://www.lgservice.com
Czech Republic	http://cz.lgservice.com
Denmark	http://dk.lgservice.com
Estonia	http://ee.lgservice.com
Finland	http://fi.lgservice.com
France	http://fr.lgservice.com
Germany	http://de.lgservice.com
Greece	http://gr.lgservice.com
Hungary	http://hu.lgservice.com
Iceland	http://is.lgservice.com
Ireland	http://ie.lgservice.com
Italy	http://italy.lgservice.com
Kazakhstan	http://kz.lgservice.com

Latvia	http://lv.lgservice.com
Lithuania	http://lt.lgservice.com
Luxembourg	http://lu.lgservice.com
Macedonia	http://www.lgservice.com
Moldova	http://www.lgservice.com
Netherlands	http://nl.lgservice.com
Norway	http://no.lgservice.com
Poland	http://pl.lgservice.com
Portugal	http://pt.lgservice.com
Romania	http://ro.lgservice.com
Russia	http://ru.lgservice.com
Serbia	http://www.lgservice.com
Slovakia	http://www.lgservice.com
Slovenia	http://www.lgservice.com
Spain	http://es.lgservice.com
Sweden	http://se.lgservice.com
Switzerland	http://www.lgservice.com
Ukraine	http://ua.lgservice.com
United Kingdom	http://gb.lgservice.com

Oceania (Country/Region)

Australia	http://au.lgservice.com
-----------	---

LG Electronics Inc.

Home page : www.lge.com.au
Service site : <http://au.lgservice.com>
Customer information centre
1800-LG-HELP(54-4357)

Fiji	http://www.lgservice.com
New Caledonia	http://www.lgservice.com
New Zealand	http://nz.lgservice.com
Papua New Guinea	http://www.lgservice.com