

# Table of Contents

## Table of Contents

### Usage Notice

Safety Instructions .....	2
---------------------------	---

### Introduction

Product Features .....	5
Package Overview .....	6
Optional Extras .....	6
Product Overview .....	7
Connection Ports .....	8
Control Panel .....	9
Remote Control .....	10
Remote Control Battery Installation .....	12
Remote Control Operating Range .....	12

### Installation

Connecting the Projector .....	13
Connect to Computer/Notebook .....	13
Connect to Video .....	14
Powering On/Off the Projector .....	15
Powering On the Projector .....	15
Powering Off the Projector .....	16
Warning Indicator .....	17
Adjusting the Projected Image .....	18
Adjusting the Height of Projector Image .....	18
Adjusting the Projector Zoom and Focus .....	19
Adjusting Projection Image Size .....	19

### User Controls

On Screen Display .....	20
How to operate .....	20
IMAGE .....	21
IMAGE   Advanced .....	23
IMAGE   Advanced   Color .....	24
IMAGE   Advanced   Input .....	24
SCREEN .....	25
SETTING   Language .....	27
SETTING .....	27
SETTING   Signal .....	29
SETTING   Advanced .....	30
OPTIONS .....	31
OPTIONS   Advanced .....	32
OPTIONS   Lamp Settings .....	33

### Appendices

Troubleshooting .....	34
Replacing the lamp .....	39
Computer Compatibility .....	40
Configurations of Terminals .....	41
Terminal : Analog RGB (Mini D-sub 15 pin) .....	41
Terminal : Mini DIN 3-pin .....	41
Regulation & Safety Notices .....	42
Dimensions .....	44

# Usage Notice

## Safety Instructions

Please take note of the safety instructions to prevent any potential accident or misuse of the projector.

→ Safety Instructions are given in two forms as detailed below.

 **WARNING** : The violation of this instruction may cause serious injuries and even death.

 **NOTES** : The violation of this instruction may cause injuries or damage to the projector.

→ After reading this manual, keep it in the place that you can access easily.

### Indoor Installation

### WARNING

Do not place the Projector in direct sunlight or near heat sources such as radiators, fires, stove etc.

This may cause a fire hazard !

Do not place flammable materials in, on or near the projector

This may cause a fire hazard!

Do not hang on the installed projector.

It may cause the projector to fall, causing injury or death.

Do not block the vents of the projector or restrict air-flow in any way.

This would cause the internal temperature to increase and could cause a fire hazard or damage to the unit!

Do not place the projector close to sources of steam or oil such as a humidifier.

This may create a fire hazard or an electric shock hazard !

Do not place the projector where it might be exposed to dust.

This may cause a fire hazard or damage to the unit!

Do not use the projector in a damp place such as a bathroom where it is likely to get wet.

This may cause a fire or an electric shock hazard!

Do not place the projector directly on a carpet, rug or place where ventilation is restricted.

This would cause its internal temperature to increase and might create a fire hazard or damage the unit.

Ensure good ventilation around the projector. The distance between the projector and the wall should be more than 30cm/12 inches.

An excessive increase in its internal temperature may cause a fire hazard or damage to the unit!

### Indoor Installation

### NOTES

When installing the projector on a table, be careful not to place it near the edge.

The projector could fall causing injury and damage to the projector.

**Only use a suitable stand.**

Disconnect from the power supply and remove all connections before moving, or cleaning.

Only use the projector on a level and stable surface.

It may fall and cause injury and/or damage to the unit.

### Power

### WARNING

Earth wire should be connected.

Ensure that you connect the earth ground wire to prevent possible electric shock (i.e.a Projector with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet.

If grounding methods are not possible, have a qualified electrician install a separate circuit breaker.

Do not try to ground the unit by connecting it to telephone wires, lightning rods, or gas pipes.

The power cord should be inserted fully into the power outlet to avoid a fire hazard!

This may cause a fire hazard or damage the unit.

Do not place heavy objects on the power cord.

This may cause a fire or an electric shock hazard !

# Usage Notice

Power	 <b>WARNING</b>	
<p>Never touch the power plug with a wet hand</p> <p>This may cause an electric shock-hazard!</p>	<p>Do not plug-in too many items into one power outlet.</p> <p>It may result in overheating of the outlet and create a fire hazard!</p>	<p>Prevent dust from collecting on the power plug pins or outlet.</p> <p>This may cause a fire hazard!</p>

Power	 <b>NOTES</b>	
<p>Hold the plug firmly when unplugging. If you pull the cord, it may be damaged.</p> <p>This may cause a fire hazard !</p>	<p>Do not use if the power cord or the plug is damaged or any part of the power outlet is loose.</p> <p>This may cause a fire or an electric-shock hazard or damage to the unit!</p>	<p>Ensure the power cord does not come into contact with sharp or hot objects.</p> <p>This may cause a fire or an electric-shock hazard or damage to the unit!</p>
<p>Place the projector where people will not trip or tread on the power cord.</p> <p>This may cause a fire or an electric-shock hazard or damage to the unit!</p>	<p>Do not turn the projector On/Off by plugging-in or unplugging the power plug to the wall outlet. (Allow the unit to cool before removing power.)</p> <p>It may cause mechanical failure or could cause an electric shock.</p>	

Using	 <b>WARNING</b>	
<p>Do not place anything containing liquid on top of the projector such as flowerpot, cup, cosmetics or candle.</p> <p>This may cause a fire hazard or damage to the unit!</p>	<p>In case of impact shock or damage to the projector switch it off and unplug it from the power outlet and contact an authorized service center.</p> <p>This may cause a fire or an electric shock hazard or damage to the unit!</p>	<p>Do not allow any objects to fall into the projector.</p> <p>This may cause an electric shock hazard or damage to the unit!</p>
<p>If water is spilled into the projector unplug it from the power supply immediately and consult your Service Agent.</p> <p>This may cause an electric shock hazard or damage to the unit!</p>	<p>Dispose of used batteries carefully and safely.</p> <p>In the case of a battery being swallowed by a child please consult a doctor immediately.</p>	
<p>Do not remove any covers. High risk of Electric Shock!</p>	<p>Don't look directly into the lens when the projector is in use. Eye damage may occur!</p>	<p>Do not touch metal parts during or soon after operation since the vents will remain very hot!</p>

## CAUTION concerning the Power Cord

It is recommend that most appliances be placed on a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service personnel.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

# Usage Notice

Using		 <b>WARNING</b>
<p>If the projector is in a room that experiences a gas leak, do not touch the projector.</p> <p>It can cause a fire or a burn by a spark.</p>	<p>Don't look at laser beam directly as it can cause eye damage!</p>	<p>Always open the lens door or remove the lens cap when the projector lamp is on.</p>

Using		 <b>NOTES</b>
<p>Do not place heavy objects on top of projector.</p> <p>This may cause mechanical failure or personal injury!</p>	<p>Take care not to impact the lens particularly when moving the projector.</p>	<p>Do not touch the lens of the projector. It is delicate and easily damaged.</p>
<p>Do not use any sharp tools on the projector as this will damage the casing.</p>	<p>In the event that an image does not appear on the screen please switch it off and unplug it from the power outlet and contact your Service Agent.</p> <p>This may cause a fire or an electric shock hazard or damage to the unit!</p>	<p>Do not drop the projector or allow impact shock.</p> <p>This may cause mechanical failure or personal injury!</p>

Cleaning		 <b>WARNING</b>
<p>Do not use water while cleaning the projector.</p> <p>This may cause damage to the projector or an electric shock hazard.</p>	<p>In the unlikely event of smoke or a strange smell from the projector, switch it off, unplug it from the wall outlet and contact your dealer or service centre.</p> <p>This may cause a fire or an electric shock hazard or damage to the unit!</p>	<p>Use an air spray or soft cloth that is moist with a neutral detergent and water for removing dust or stains on the projection lens.</p>

Cleaning		 <b>NOTES</b>
<p>Contact the Service Center once a year to clean the internal parts of the projector.</p> <p>Accumulated dust can cause mechanical failure.</p>	<p>When cleaning the plastic parts such as projector case, unplug the power and wipe it with a soft cloth. Do not use cleanser, spray water or wipe with a wet cloth. Especially, never use cleanser (glass cleaner), automobile or industrial shiner, abrasive or wax, benzene, alcohol etc., which can damage the product.</p> <p>Use an air spray or soft cloth that is moist with a neutral detergent and water for removing dust or stains on the projection lens.</p> <p>It can cause fire, electric shock or product damage (deformation, corrosion and damage).</p>	

Others		 <b>WARNING</b>
<p>Do not attempt to service the projector yourself. Contact your dealer or service center.</p> <p>This may cause damage to the projector and could give an electric Shock as well as invalidating the warranty!</p>		

Others		 <b>NOTES</b>
<p>Be sure to unplug if the projector is not to be used for a long period.</p> <p>Accumulated dust may cause a fire hazard or damage to the unit!</p>	<p>Only use the specified type of battery.</p> <p>This could cause damage to the remote control.</p>	

## Product Features

This product is an XGA/SVGA single chip 0.55" DLP® projector. Outstanding features include:

- XGA (1024x768) / SVGA (800x600) Native resolution
- One built-in speaker with 2 watt amplifier
- HDTV compatible (720P, 1080i/p)
- VGA monitor Loop Thru (works on standby mode > 1W)
- BrilliantColor™ Technology
- RS232 control


# Introduction

## Package Overview

This projector comes with all the items shown below. Check to make sure your unit is complete. Contact your dealer immediately if anything is missing.

### Note

❖ Due to the difference in applications for each country, some regions may have different accessories.

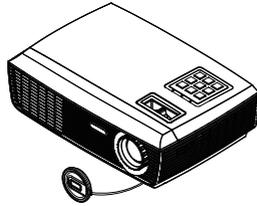


Projector with lens cap




Wireless Remote Control



Battery

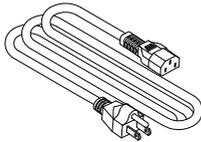

Power Cable

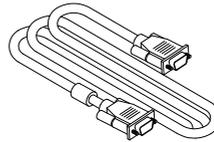


VGA Cable

### Documentation:

CD-ROM User's Manual



## Optional Extras

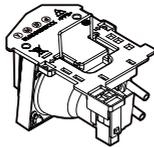

Lamp

# Introduction


## Product Overview

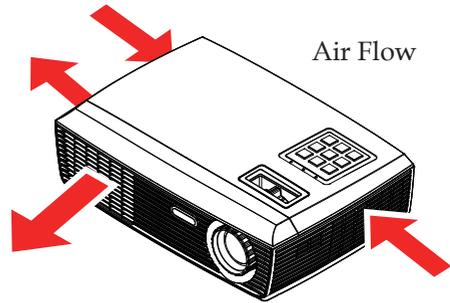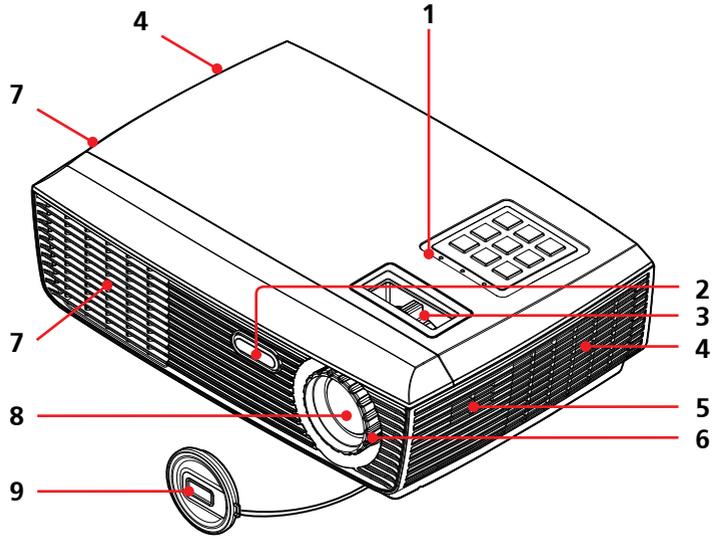

1. Control Panel
2. Remote Sensor
3. Zoom Ring
4. Ventilation (inlet)
5. Speaker
6. Focus Ring
7. Ventilation (outlet)
8. Lens
9. Lens Cap

# Introduction


## Connection Ports

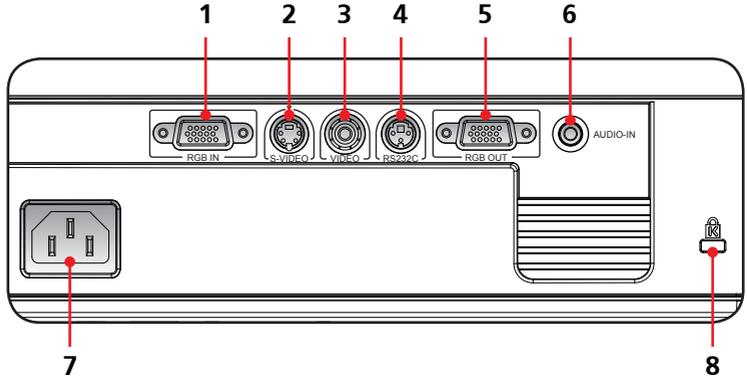


1. RGB IN Connector
2. S-VIDEO Connector
3. VIDEO Connector
4. RS232C Service Port
5. RGB OUT Connector
6. AUDIO-IN Jack
7. AC IN
8. Kensington™ Lock

## Kensington Security System

- ❖ This projector has a Kensington Security System Connector on the side panel. Connect the Kensington Security System cable as below.
- ❖ For the detailed installation and use of the Kensington Security System, refer to the user's guide included with the Kensington Security System set. And for further information, contact <http://www.kensington.com>, the internet homepage of the Kensington company that deals with expensive electronic equipment such as notebook PCs or projectors.
- ❖ The Kensington Security System is an optional item.

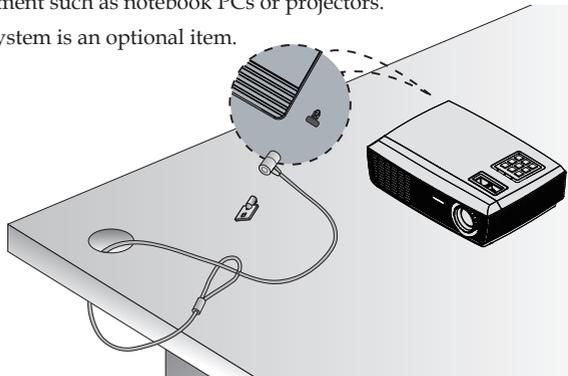

## Control Panel

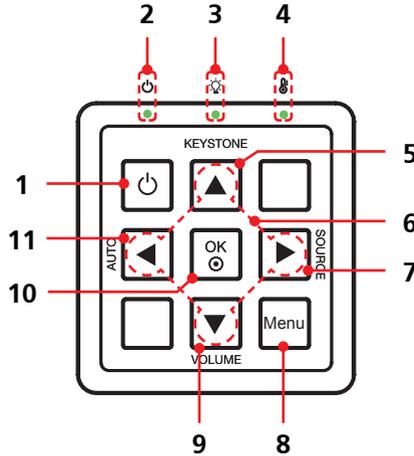


1	POWER	Refer to the “Power On/Off the Projector” section on pages 15~16.
2	POWER LED	Indicate the projector’s status.
3	LAMP LED	Indicate the projector’s lamp status.
4	TEMP LED	Indicate the projector’s temperature status.
5	KEYSTONE	Adjust the image to compensate for distortion caused by tilting the projector.
6	Four Directional Select Keys	Use ▲ or ▼ or ◀ or ▶ to select items or make adjustments to your selection.
7	SOURCE	Press “SOURCE” to select an input signal.
8	MENU	Press “MENU” to launch the on-screen display (OSD) menu. To exit OSD, Press “MENU” again.
9	VOLUME	Adjust to increase / decrease the volume.
10	OK	Confirm your item selection.
11	AUTO	Automatically synchronizes the projector to the input source.

# Introduction



## Remote Control

### Note

❖ Before using the remote control for the first time, remove the transparent insulation tape. See page 12 for battery installation.

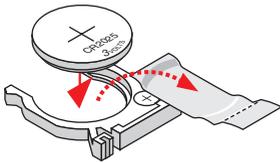

### How to install the battery

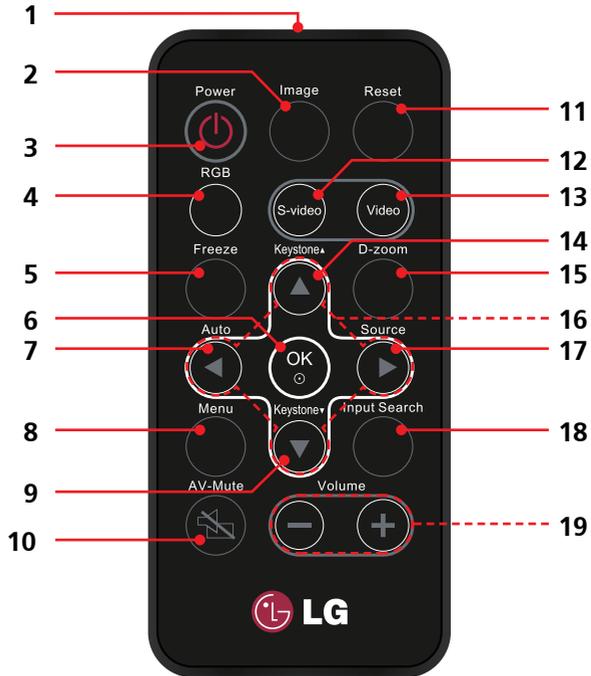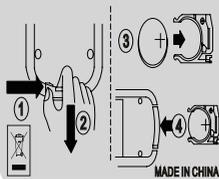

### Note

❖ You can only turn the projector on/off with POWER button on the projector.  
You can operate all of the functions of the projector via the remote control. Make sure not to lose the remote control.

1	Infrared transmitter	Sends signals to the projector.
2	Image	Select the Image mode from Presentation, Bright, Movie, sRGB, Blackboard, Classroom, User1 and User2.
3	Power	Refer to the “Power On/Off the Projector” section. (See pages 15~16)
4	RGB	Press “RGB” to choose RGB IN connector.
5	Freeze	Pause the screen image. Press again to resume the screen image.
6	OK	Confirm your section of items in sub menu operation.


# Introduction

7	Auto	Automatically synchronize the projector to the input source.
8	Menu	Press "Menu" to launch the Onscreen display (OSD), back to the top level of OSD for the OSD main menu operation
9	Keystone ▼	Adjust the image to compensate for distortion caused by tilting the projector.
10	AV-Mute	Momentarily turn off/on the audio and video.
11	Reset	Return the adjustments and settings to the factory default values. (except for lamp counter)
12	S-video	Press "S-video" to choose S-VIDEO connector.
13	Video	Press "Video" to choose VIDEO connector.
14	Keystone ▲	Adjust the image to compensate for distortion caused by tilting the projector.
15	D.zoom	Zoom out or Zoom in the projector display.
16	Four Directional Select Keys	Use ▲ or ▼ or ◀ or ▶ to select items or make adjustments to your selection.
17	Source	Press "Source" to choose RGB, Component, S-Video and Composite sources.
18	Input Search	This function detects the input signal automatically. When finding a signal, the search will stop.
19	Volume +/-	Increase/decrease speaker volume.

# Introduction

## Remote Control Battery Installation

- 1 Press firmly and slide the battery cover off.

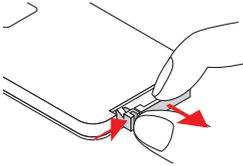


- 2 Install new battery into the compartment.



Remove the old Lithium coin cell and install new one (CR2025). Ensure that the side with a "+" is facing up.

- 3 Put the cover back.

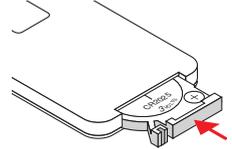


To ensure safe operation, please observe the following precautions :

- Use CR2025 type battery.
- Avoid contact with water or liquid.
- Do not expose the remote control to moisture or heat.
- Do not drop the remote control.
- If the battery has leaked in the remote control, carefully wipe the case clean and install new battery.
- Risk of an explosion if battery is replaced by an incorrect type.
- Dispose of used battery according to the instructions.

## Remote Control Operating Range


Point the remote control toward the projector (Infrared Remote Receiver) when pressing any button. Maximum operating range for the remote control is about 23.0' (7m) and 30° in front of the projector.

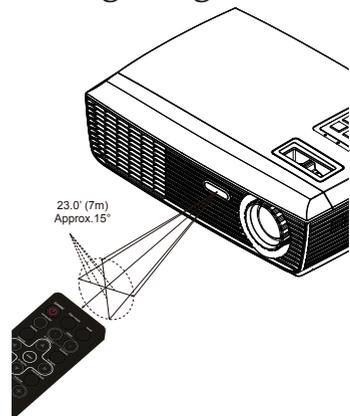

# Installation

## Connecting the Projector

### Connect to Computer/Notebook

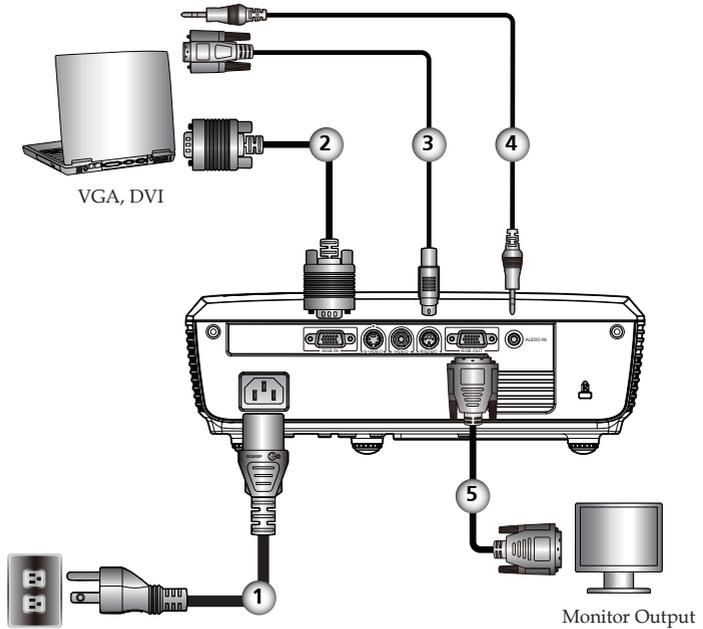

#### Note


❖ Due to the difference in applications for each country, some regions may have different accessories.

- |        |                             |
|--------|-----------------------------|
| 1..... | Power cable (supplied)      |
| 2..... | VGA cable (supplied)        |
| 3..... | RS232 cable                 |
| 4..... | Audio in cable jack to jack |
| 5..... | Monitor out cable           |

# Installation

## Connect to Video

DVD player, Set-top Box  
HDTV receiver

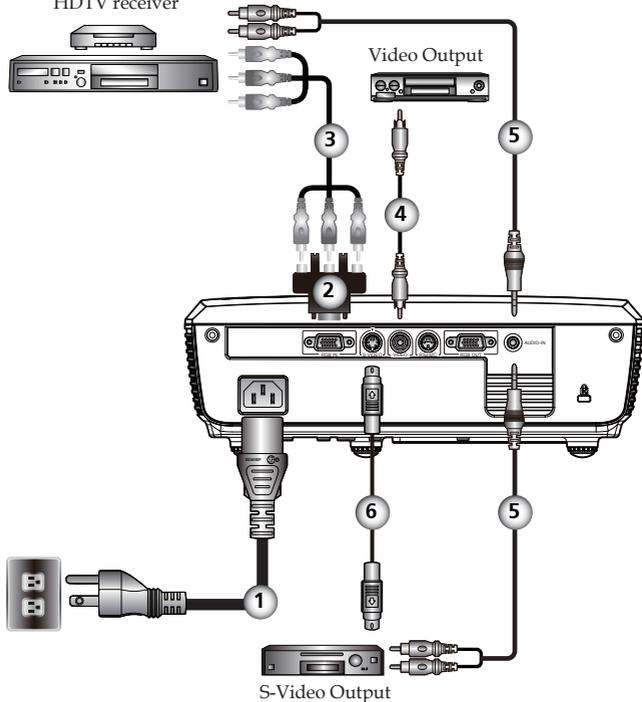

### Note

❖ Due to the difference in applications for each country, some regions may have different accessories.

- |        |                             |
|--------|-----------------------------|
| 1..... | Power cable (supplied)      |
| 2..... | VGA to RCA adaptor          |
| 3..... | 3 RCA Component Cable       |
| 4..... | Composite video cable       |
| 5..... | Audio in cable jack to jack |
| 6..... | S-Video cable               |

## Powering On/Off the Projector

### Powering On the Projector


1. Ensure that the power cable and signal cable are securely connected. The POWER LED will turn amber.
2. Remove the lens cap. ❶
3. Turn on the lamp by pressing “POWER” on the control panel or the remote control. ❷ The POWER LED will flash green.

The startup screen will display in approximately 5 seconds. When disappear startup screen, the POWER LED will turn green.

4. Turn on your source (computer, notebook, video player, etc.) The projector will detect your source automatically.
- ❖ If you connect multiple sources at the same time, use the “SOURCE” on the remote control or use “RGB”, “S-video”, “Video” on the remote control to switch inputs.

#### Note

❖ Turn on the projector first and then the signal sources.

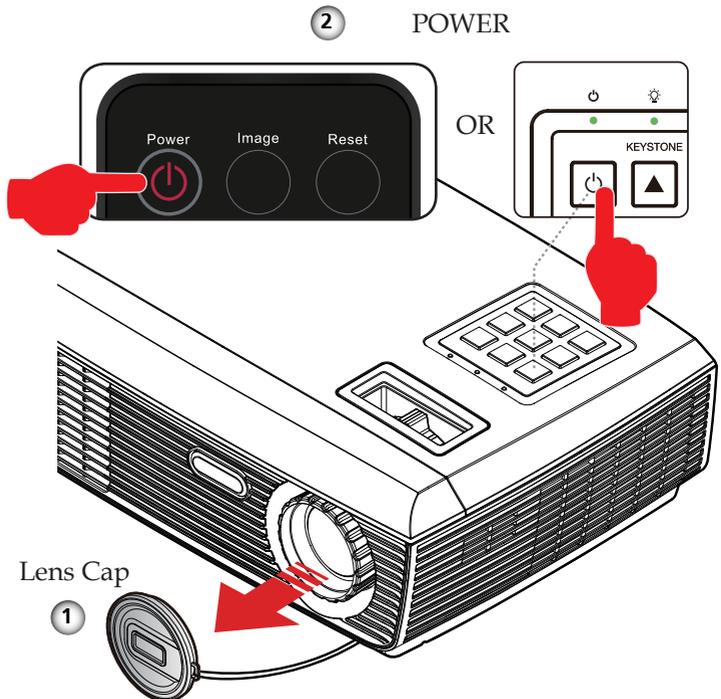

## Powering Off the Projector

1. Press the “POWER” to turn off the projector lamp, you will see a message as below on the on-screen display.



2. Press the “POWER” again to confirm.
3. The cooling fan continues to operate for about 120 seconds for cooling cycle and the POWER LED will flash green. When the light stop flashing and turn amber, the projector has entered standby mode.  
If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press “POWER” to restart the projector.
4. Disconnect the power cable from the electrical outlet and the projector.
5. Do not turn on the projector immediately following a power off procedure.

## Warning Indicator

- ❖ When the “TEMP” LED indicator lights red, it indicates the projector has overheated. The projector will automatically shut itself down.



- ❖ When you see the message below displays on-screen, the projector has detected that the lamp is approaching its end of life. Please change the lamp as soon as possible or contact your local dealer or our service center.



- ❖ When the “TEMP” LED indicator flashes red and the message below displays on-screen, it indicates the fan failed. Stop using the projector and disconnect the power cable from the electrical outlet, then contact your local dealer or our service center.



# Installation


## Adjusting the Projected Image

### Adjusting the Height of Projector Image

The projector is equipped with adjustable feet to raise and lower the image to fill the screen.

To raise/lower the image:

1. Use ❶ to fine-tune the display angle.

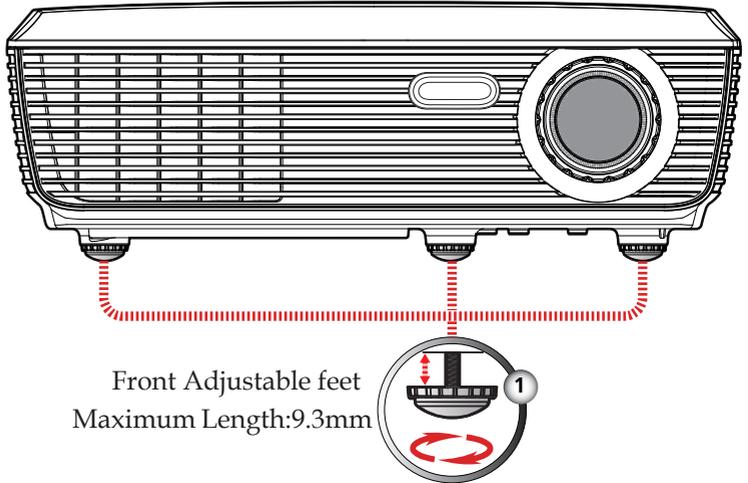


#### Note

❖ You can raise the projector front up to 3.7 degrees by rotating the adjustable feet.


# Installation

## Adjusting the Projector Zoom and Focus

You may turn the zoom ring to zoom in or out. To focus the image, rotate the focus ring until the image is clear. The projector will focus at distances from 3.94 to 39.36 feet (1.2 to 12.0 meters) with mechanical travel.

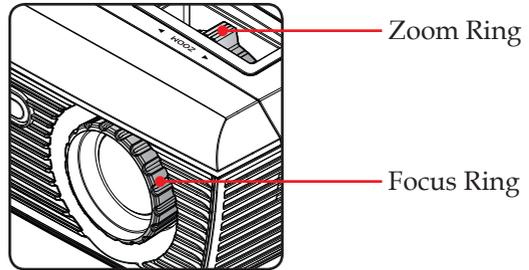

## Adjusting Projection Image Size

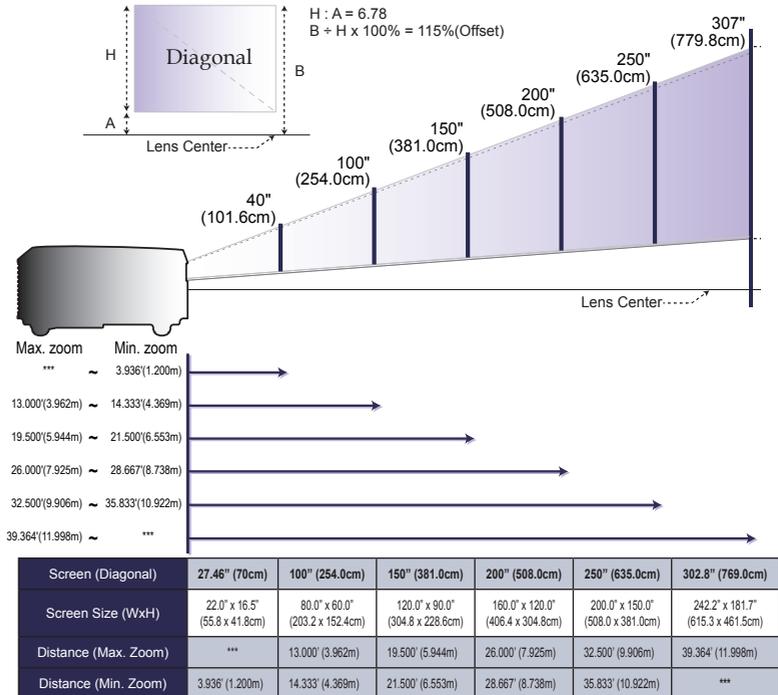

❖ This graph is for user's reference only.

## On Screen Display


The Projector has multilingual On-screen Display menus that allow you to make image adjustments and change a variety of settings. The projector will automatically detect the source.


### How to operate

1. To open the OSD, press “MENU” on the Remote Control or Control Panel.
2. When OSD is displayed, use ◀▶ keys to select any item in the main menu. While making a selection on a particular page, press ▼ or “OK” key to enter sub menu.
3. Use ▲▼ keys to select the desired item in the sub menu and adjust the settings using ◀▶ key.
4. If the setting has ◀↵ icon, you could press “OK” to enter another sub menu. Press “MENU” to close the sub menu after adjustment.
5. After adjusting the settings, press “MENU” go back to the main menu.
6. To exit, press “MENU” again. The OSD will be closed and the projector will automatically save the new settings.

#### Note

❖ If no button operation is made for 30 seconds, the OSD will be closed automatically.

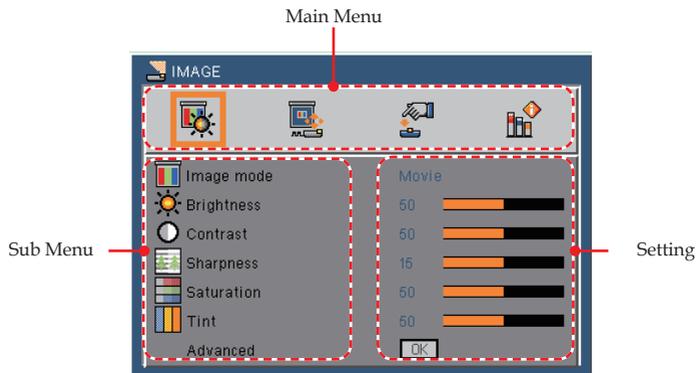

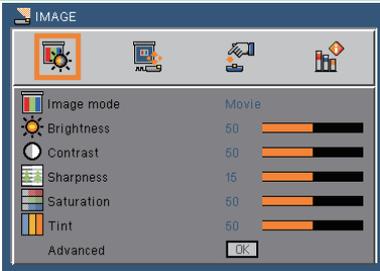

## IMAGE

### Image Mode

There are many factory presets optimized for various types of images. Use the ◀ or ▶ to select the item.

- ▶ Presentation: For computer or notebook.
- ▶ Bright: For bright room.
- ▶ Movie: For home theater.
- ▶ sRGB: For standard color.
- ▶ Blackboard: This mode should be selected to achieve optimum color settings when projecting onto a blackboard (green).
- ▶ Classroom: This mode is recommended for projecting in a classroom.
- ▶ User1/User2: Memorize user's settings.

### Brightness

Adjust the brightness of the image.

- ▶ Press the ◀ to darken image.
- ▶ Press the ▶ to lighten the image.

### Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture.

- ▶ Press the ◀ to decrease the contrast.
- ▶ Press the ▶ to increase the contrast.

# User Controls

## Note

❖ “Sharpness”, “Saturation” and “Tint” functions are only supported under Video mode.

## Sharpness

Adjust the sharpness of the image.

- ▶ Press the ◀ to decrease the sharpness.
- ▶ Press the ▶ to increase the sharpness.

## Saturation


Adjust a video image from black and white to fully saturated color.

- ▶ Press the ◀ to decrease the amount of color in the image.
- ▶ Press the ▶ to increase the amount of color in the image.

## Tint

Adjust the color balance of red and green.

- ▶ Press the ◀ to increase the amount of green in the image.
- ▶ Press the ▶ to increase the amount of red in the image.

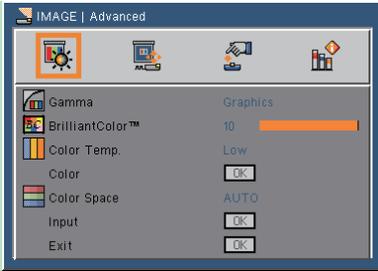

## *IMAGE | Advanced*

### Gamma

This allows you to choose a gamma table that has been fine-tuned to bring out the best image quality for the input.

- ▶ Film: For home theater.
- ▶ Video: For video or TV source.
- ▶ Graphics: For image source.
- ▶ PC: For computer or notebook.

### BrilliantColor™

Produces an expanded onscreen color spectrum that delivers enhanced color saturation for bright, true-to-life images.

### Color Temp.

Adjust the color temperature. At higher temperature, the screen looks colder; at lower temperature, the screen looks warmer.

### Color Space

Select an appropriate color matrix type from AUTO, RGB or YUV.

# User Controls




## *IMAGE | Advanced | Color*

### Color

Use these settings for advanced adjustment of the individual Red, Green, Blue, Cyan, Magenta and Yellow Colors.

### Reset


Choose “Yes” to return the factory default settings for “Color” menu.

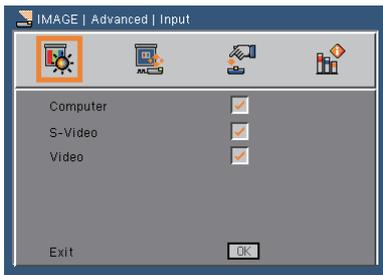

## *IMAGE | Advanced | Input*

### Input

Use this option to enable / disable input sources. Press **←** to enter the sub menu and select which sources you require. Press “OK” to finalize the selection. The projector will not search for inputs that are not selected.

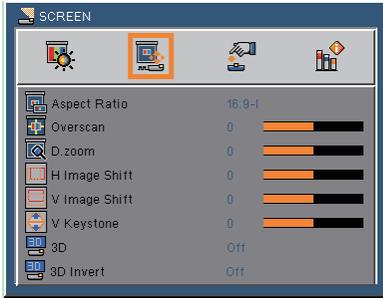

## SCREEN

### Aspect Ratio

Use this function to choose your desired aspect ratio.

- ▶ 4:3: This format is for 4×3 input sources not enhanced for Wide-screen TV.
- ▶ 16:9-I: This format is for 16×9 input sources, like HDTV and DVD enhanced for Wide screen TV. (576i/p)
- ▶ 16:9-II: This format is for 16×9 input sources, like HDTV and DVD enhanced for Wide screen TV. (480i/p)
- ▶ Native: This format displays the original image without any scaling.
- ▶ AUTO: Automatically selects the appropriate display format.

Aspect ratio (source detected)	Resize image
	SVGA model
4:3	800 x 600 center
16:9-I	800 x 450 center
16:9-II	854 x 480 catch 800 x 480 center
Native	1:1 mapping center

### Overscan

Overscan function removes the noise in a video image. Overscan the image to remove video encoding noise on the edge of video source.

# User Controls

## D. zoom

Adjust the size of projector's display area.

- ▶ Press the ◀ to reduce the size of an image on the projection screen.
- ▶ Press the ▶ to magnify an image on the projection screen.

## H Image Shift

Shift the projected image position horizontally.

## V Image Shift

Shift the projected image position vertically.

## V Keystone

Press the ◀ or ▶ to adjust image distortion vertically and makes a rectangular image.

## 3D Mode

- ▶ Off: Select "Off" to turn 3D settings off for 3D images.
- ▶ On: Select "On" to use optimized settings for 3D images.

## 3D Sync. Invert

- ▶ Press the "On" to invert left and right frame contents.
- ▶ Press the "Off" for default frame contents.

### Note

❖ "3D Mode" and "3D Sync. Invert" functions only supports 800x600@120Hz or 1024x768@120Hz PC signal.

# User Controls



## SETTING | Language

### Language

Choose the multilingual OSD. Press ▼ into the sub menu and then use the ▲ or ▼ or ◀ or ▶ key to select your preferred language. Press “OK” to finalize the selection.



## SETTING

### Mounting

- ▶  Front-Desktop  
The factory default setting. The image is projected straight on the screen.
- ▶  Rear-Desktop  
When you select this function, the projector reverses the image so you can project behind a translucent screen.
- ▶  Front-Ceiling  
When you select this function, the projector turns the image upside down for ceiling-mounted projection.

# User Controls

- ▶  Rear-Ceiling

When you select this function, the projector reverses and turns the image upside down at same time. You can project from behind a translucent screen with ceiling mounted projection.

## Menu Location

Choose the menu location on the display screen.

## Projector ID


ID definition can be set up by menu (range 0~99), and allow user control an individual projector by RS232C.

## Mute

- ▶ Choose "On" to mute the volume.
- ▶ Choose "Off" to restore the volume.

## Volume

- ▶ Press the ◀ to decrease the volume.
- ▶ Press the ▶ to increase the volume.

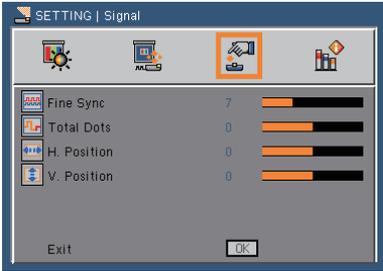

## SETTING | Signal



❖ “Signal” is only supported in Analog VGA (RGB) signal.

### Fine Sync

Eliminate flicker from the image displayed. Use the ◀ or ▶ to adjust the value.

### Total Dots

Adjust the number of total dots in one horizontal period. Use the ◀ or ▶ to adjust number to match your PC image.


### H. Position (Horizontal Position)

- ▶ Press the ◀ to move the image left.
- ▶ Press the ▶ to move the image right.

### V. Position (Vertical Position)

- ▶ Press the ◀ to move the image down.
- ▶ Press the ▶ to move the image up.

# User Controls

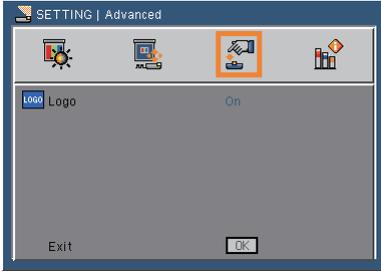

## SETTING | Advanced

### Logo

Use this function to set the desired startup screen. If changes are made they will take effect the next time the projector is powered on.

- ▶ On: LG startup screen.
- ▶ Off: No logo is displayed.



## OPTIONS

### Input Search

When this function is turned “On”, the projector will search for other signals if the current input signal is lost. When this function is turned “Off”, it will only search a specified connection port.

### High Altitude

When “On” is selected, the fans will spin faster. This feature is useful in high altitude areas where the air is thin.

### Information Hide

- ▶ On: Choose “On” to hide the “searching” message.
- ▶ Off: Choose “Off” to show the “searching” message.

### Keypad Lock

 
When the keypad lock function is “On”, the control panel will be locked however, the projector can be operated by the remote control. By selecting “Off”, you will be able to reuse the control panel.

### Background Color


Use this feature to display a “Black”, “Red”, “Blue”, “Green” or “White”, screen when no signal is available.

### Reset

Choose “Yes” to return the display parameters on all menus to the factory default settings. (except for lamp counter)

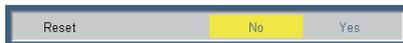

# User Controls

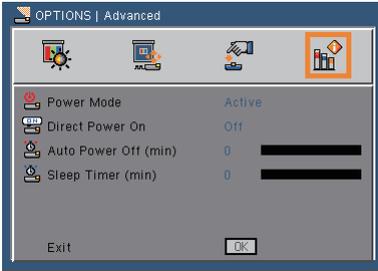

## *OPTIONS | Advanced*

### Power Mode

- ▶ Standby: Choose “Standby” to save power dissipation further < 1W.
- ▶ Active: Choose “Active” to return to normal standby mode and the “MONITOR OUT” port will be enabled.

### Direct Power On

Choose “On” to activate Direct Power mode. The projector will automatically power on when AC power is supplied, without pressing the “POWER” key on the projector control panel or “POWER” key on the remote control.

### Auto Power Off (min)

Sets the countdown timer interval. The countdown timer will start, when there is no signal being sent to the projector. The projector will automatically power off when the countdown has finished (in minutes).

### Sleep Timer (min)

Sets the countdown timer interval. The countdown timer will start, with or without a signal being sent to the projector. The projector will automatically power off when the countdown has finished (in minutes).



## OPTIONS | Lamp Settings

### Lamp Counter (Normal)

Display the projection time of normal mode.

### Lamp Counter (ECO)

Display the projection time of ECO mode.

### Lamp Life Reminder

- ▶ On: Choose “On” to show the lamp end of life warning message.
- ▶ Off: Choose “Off” to hide the lamp end of life warning message.

### Eco Mode

- ▶ On: Choose “On” to dim the projector lamp which will lower power consumption and extend the lamp life.
- ▶ Off: Choose “Off” to increase the brightness.

### Lamp Counter Reset

Reset the lamp hour counter after replacing the lamp.

## Troubleshooting

If you experience trouble with the projector, refer to the following information. If the problem persists, please contact your local dealer or service center.

### **Problem: No image appears on screen**

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
- ▶ Ensure the pins of connectors are not crooked or broken.
- ▶ Check if the projection lamp has been securely installed. Please refer to the “Replacing the lamp” section.
- ▶ Make sure you have removed the lens cap and the projector is switched on.
- ▶ Ensure that the “AV-Mute” feature is not turned on.

### **Problem: Partial, scrolling or incorrectly displayed image**

- ▶ Press “Auto” on the remote control or on the control panel.
- ▶ If you are using a PC:  
For Windows 95, 98, 2000, XP:
  1. From the “My Computer” icon, open the “Control Panel” folder, and double click the “Display” icon.
  2. Select the “Settings” tab
  3. Click on the “Advanced Properties”.

#### For Windows Vista:

1. From the “My Computer” icon, open the “Control Panel” folder, and double click the “Appearance and Personalization”
2. Select “Personalization”
3. Click “Adjust screen resolution” to display “Display Settings”.  
Click on the “Advanced Settings”.

**If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps.**

# Appendices

4. Verify the resolution setting is less than or equal to 1600 x 1200 resolution.
  5. Select the "Change" under the "Monitor" tab .
  6. Click on "Show all devices". Next, select "Standard monitor types" under the SP box; choose the resolution mode you need under the "Models" box.
- ▶ If you are using a Notebook:
1. First, follow the steps above to adjust resolution of the computer.
  2. Press the toggle output settings. example: [Fn]+[F4]

Compaq=>	[Fn]+[F4]	Hewlett	
Dell =>	[Fn]+[F8]	Packard =>	[Fn]+[F4]
Gateway=>	[Fn]+[F4]	NEC=>	[Fn]+[F3]
IBM=>	[Fn]+[F7]	Toshiba =>	[Fn]+[F5]

Macintosh Apple:  
System Preference-->Display-->Arrangement-->Mirror display

- ▶ If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

## **Problem: The screen of the Notebook or PowerBook computer is not displaying a presentation**

- ▶ If you are using a Notebook PC:

Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer's documentation for detailed information.

## **Problem: Image is unstable or flickering**

- ▶ Adjust the "Total Dots" or "Fine Sync" to correct it. Refer to the "Setting | signal" section for more information.
- ▶ Change the monitor color setting from your computer.

- ▶ Check and reconfigure the display mode of your graphic card to make it compatible with the product.

## **Problem: Image is out of focus**

- ▶ Adjust the Focus Ring on the projector lens.
- ▶ Make sure the projection screen is between the required distance 3.94 to 39.36 feet (1.2 to 12.0 meters) from the projector (refer to page 19).

## **Problem: The image is stretched when displaying 16:9 DVD**

The projector automatically detects 16:9 DVD and adjusts the aspect ratio by digitizing to full screen with 4:3 default setting.

If the image is still stretched, you will also need to adjust the aspect ratio by referring to the following:

- ▶ Please select 4:3 aspect ratio type on your DVD player if you are playing a 16:9 DVD.
- ▶ If you can't select 4:3 aspect ratio type on your DVD player, please select 4:3 aspect ratio in the on screen menu.

## **Problem: Image is too small or too large**

- ▶ Adjust the Zoom Ring on the top of the projector.
- ▶ Move the projector closer to or further from the screen.
- ▶ Press "MENU" button on the remote control or projector panel, go to "SCREEN --> Aspect Ratio" and try the different settings.

## **Problem: Image is reversed**

- ▶ Select "SETTING-->Mounting" from the OSD and adjust the projection direction.

## **Problem: Lamp burns out or makes a popping sound**

- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will

# Appendices

not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the “Replacing the Lamp”.

## Problem: LED lighting message

Message	POWER-LED		LAMP-LED	TEMP-LED
	(Green)	(Amber)	(Red)	(Red)
Standby (Input power cable)	○	☀		
Normal (Power on)	☀	○		
Powering up (Warming up)	Flashing	○		
Power off (Cooling-I: It can't accept any key at this status)	Flashing	○		
Power off (Cooling-II: It can accept power key to turn on the projector)	○	Flashing		
Error (Lamp failed)	○	○	☀	○
Error (Fan lock)	○	○	○	Flashing
Error (Over temp.)	○	○	○	☀

### Note

Steady light => ☀  
 No light => ○

## Problem: Message Reminders

- ▶ Over temperature - the projector has exceeded its recommended operating temperature and must be allowed to cool down before it may be used.



- ▶ Replacing the lamp - the lamp is about to reach its maximum life-time. Prepare to replace it soon.



- ▶ Fan failed - the system fan is not working.



## Replacing the lamp


The projector will detect the lamp life itself. It will show you a warning message



Warning: Lamp compartment may be hot! Allow it to cool down before changing the lamp!



When you see this message, please contact your local reseller or service center to change the lamp as soon as possible. Make sure the projector has been cooled down for at least 45 minutes before changing the lamp.

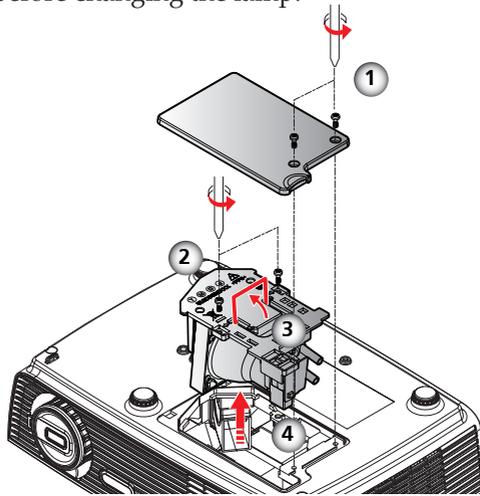

Warning: To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.

### Lamp Replacing Procedure:

1. Switch off the power to the projector by pressing the "POWER".
2. Allow the projector to cool down at least 45 minutes.
3. Disconnect the power cable.
4. Use a screwdriver to remove the 2 screws from the cover. ❶
5. Push up and remove the cover.
6. Remove the 2 screws from the lamp module ❷ and pull up the lamp bar. ❸
7. Pull out the lamp module by force. ❹
8. Install the new lamp module by reversing the previous steps.
9. After replacing the lamp, turn on the power, and select the menu ->[OPTIONS | Lamp Settings] ->[Lamp Counter Reset] to reset the lamp usage hours. See page 33.

## Computer Compatibility

### Note

- ❖ “\*” compressed computer image.
- ❖ If projector does not support the input signal, “Out of display range” message appears on the screen.
- ❖ If the input signal is not in the compatibility table, the image may not be displayed clearly.
- ❖ The 3D function only supports 800x600@120Hz or 1024x768@120Hz PC signal. When projector gets the PC signal is 800x600@120Hz or 1024x768@120Hz, the 3D function will be turned “On” automatically. On the contrary, if the projector gets the PC signal is not 800x600@120Hz or 1024x768@120Hz; the function will be turned “Off”.

Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)
VGA	640 x 350	85	37.90
	640 x 400	85	37.90
	640 x 480	60	31.50
	640 x 480	72	37.90
	640 x 480	75	37.50
	640 x 480	85	43.30
	720 x 400	70	31.50
SVGA	720 x 400	85	37.90
	800 x 600	56	35.20
	800 x 600	60	37.90
	800 x 600	72	48.10
	800 x 600	75	46.90
	800 x 600	85	53.70
	800 x 600	120	---
XGA	*1024 x 768	60	48.40
	*1024 x 768	70	56.50
	*1024 x 768	75	60.00
	*1024 x 768	85	68.70
	*1024 x 768	120	---
WXGA	*1280 x 768	60	47.40
	*1280 x 768	75	60.30
	*1280 x 720	60	45.00
	*1280 x 800	60	49.30
SXGA	*1152 x 864	60	53.80
	*1152 x 864	70	63.80
	*1152 x 864	75	67.50
	*1152 x 864	85	77.10
	*1280 x 1024	60	63.98
	*1280 x 1024	75	79.98
	*1280 x 1024	85	91.10
	*1280 x 960	60	60.00
SXGA+	*1400 x 1050	60	65.31
UXGA	*1600 x 1200	60	75.00
MAC LC 13"	640 x 480	66.66	35.00
MAC 16"	*832 x 624	74.55	49.10
MAC 19"	*1024 x 768	75	60.24
MAC	*1152 x 870	75.06	68.68
MAC G4	640 x 480	66.619	34.98
i Mac DV	*1024 x 768	75	60.20
i Mac DV	*1152 x 870	75	68.68
i Mac DV	*1280 x 960	75	75

## Configurations of Terminals

### Terminal : Analog RGB (Mini D-sub 15 pin)



1	Red (R/Cr) Input/R Output	9	5V / ***
2	Green (G/Y) Input/G Output	10	Ground (Ver. sync.)
3	Blue (B/Cb) Input/B Output	11	ICP download
4	***	12	DDC data / ***
5	Ground (Horiz.sync.)	13	Horiz. sync. Input / Output (Composite H/V sync. Input)
6	Ground (Red)		
7	Ground (Green)	14	Vert. sync. Input / Output
8	Ground (Blue)	15	DDC clock / ***

### Terminal : Mini DIN 3-pin



1	TXD
2	RXD
3	GND

## Regulation & Safety Notices

This appendix lists the general notices of your projector.

### *FCC notice*

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

### ***Notice: Shielded cables***

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

### ***Caution***

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

## *Operation conditions*

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

## *Notice: Canadian users*

This Class B digital apparatus complies with Canadian ICES-003.

## *Remarque à l'intention des utilisateurs canadiens*

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## *Declaration of Conformity for EU countries*

- EMC Directive 2004/108/EC (including amendments)
- Low Voltage Directive 2006/95/EC
- R & TTE Directive 1999/5/EC (if product has RF function)

### **Disposal instructions**



**Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.**

