



**RAD114 (RAD114-D0U, RAS114F)
RAD204B (RAD204B-D0U, RAS204B)**



P/NO : MFL63266222

ENGLISH
DEUTSCH
FRANÇAIS
NEDERLANDS
SLOVENŠČINA
ITALIANO
ESPAÑOL
ΕΛΛΗΝΙΚΑ
PORTUGUÊS

Safety Precaution



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 
This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.



CAUTION:

This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. The unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**

CAUTION: The apparatus not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, be placed on the apparatus.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safe way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly.

To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators.

The battery shall not be exposed to excessive heat such as sunshine, fire or the like.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



This product is manufactured to comply with EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

European representative:

LG Electronics Service Europe B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
(Tel : +31-036-547-8940)

There is so much your Hi-Fi system can do



Contents



Setting up	4
Main unit	5
About Remote control	6



 
Listening to CDs	7
Listening to the radio	7
Using an USB device	8
Listening to music from your external device	9
Enjoying a pre-programmed sound field	9
Recording to USB	10
Setting the Clock	11



Troubleshooting	12
Specifications	12

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible
Respect copyrights**

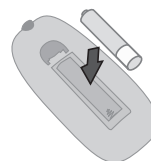 


Put the battery into the remote control

Make sure for the + (plus) and – (minus) on the battery to be matched on the remote control.
(size AAA)

Before connecting, operating or adjusting this product, please read this instruction booklet carefully and completely.

Setting up

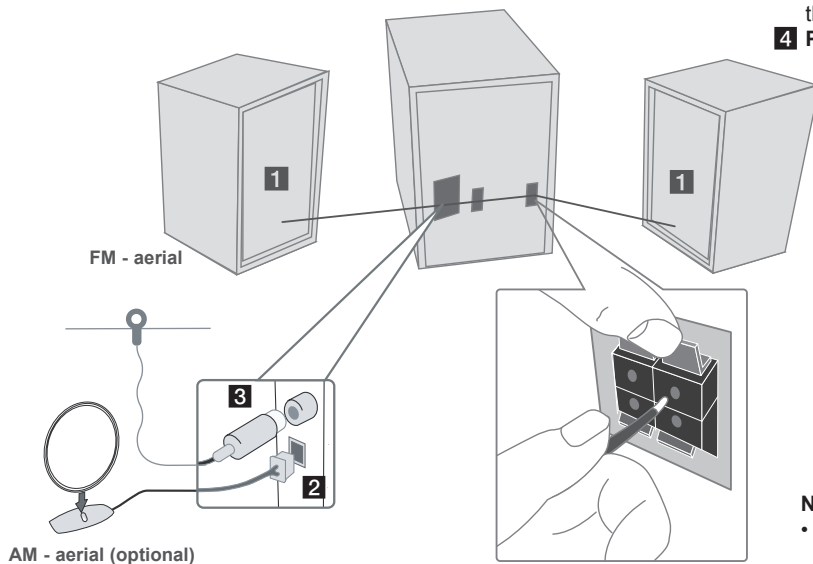

1 Connection of the front speakers

Connect the speaker cables to the speaker terminals.

Connect the black end of each wire to the terminals marked - (minus) and the other end to the terminals marked + (plus).

2 Fit the AM loop aerial to its stand (AM optional)

Connect the AM loop aerial to the unit.

3 Connect the FM aerial

The reception will be at its best when the two loose ends of the aerial are in a straight line and horizontal.

4 Plug the power plug into a wall socket

NOTES:

- If TV screen becomes discolored do not place speakers within 30cm from TV.
- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and - to -. If the cords are reversed, the sound will be distorted and will lack base.

Be careful of the following

 
Be careful to make sure children not to put their hands or any objects into the *speaker duct.

*speaker duct : A hole for plentiful bass sound on speaker cabinet (enclosure).

Main unit


- 1 **DISPLAY WINDOW**
- 2 **◀◀ TUNING (-)** (CD Previous)
- 3 **▶▶/|| ST./MO.**
- 4 **■ STOP** Stops playback or recording
- 5 **▶▶ TUNING (+)** (CD Next)

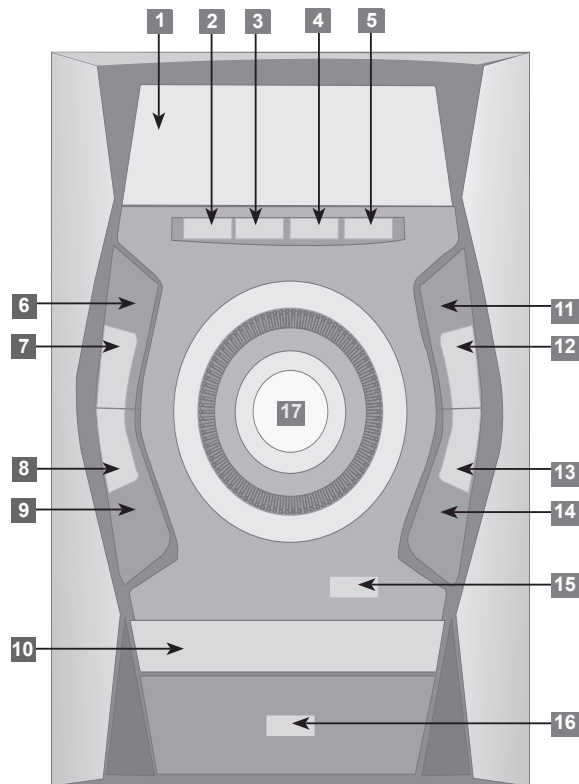


- 6 **⏻/⏻ Power on/ off**
- 7 **EQ**
You can choose sound impressions.
- 8 **XDSS Plus**
Extreme Dynamic Sound System
Reinforce the treble, bass and surround effect.
- 9 **MP3 Opt.**
Optimizes compressible MP3 files so that it improves the bass sound.
- 10 **Ⓜ USB/Rec.** Recording to USB
- 10 **CD door**




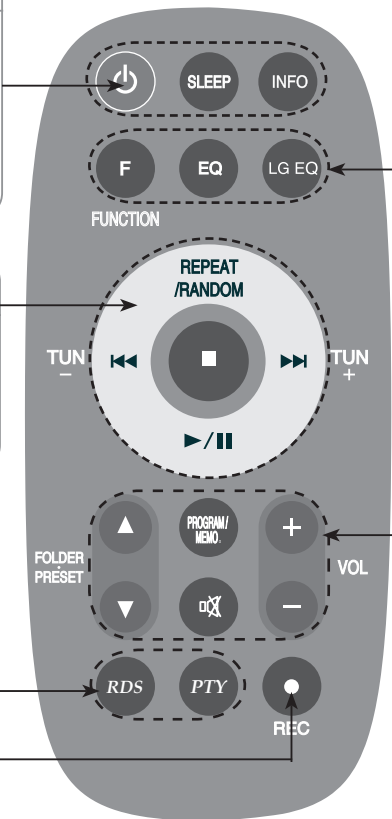 
- 11 **FUNCTION** Changes the functions
- 12 **CLOCK**
For setting the clock and checking the time.
- 13 **TIMER**
With the TIMER function you can turn CD, USB play and TUNER reception on or off at a desired time.
- 14 **SET** Confirms the time you have selected when setting the clock.
RDS (optional)
- 15 **△ OPEN/ CLOSE**
- 16 **USB Port**
Connect a USB compatible device here.
- 17 **VOLUME**
Controls the volume when using any function.

About Remote control



	POWER on/ off
SLEEP	Fall asleep while listening to your unit Press SLEEP one or more times to select delay time between 10 and 180 minutes, after the unit will turn off.
INFO	See information about your music. MP3/ WMA files often come with tags. The tag gives the Title, Artist, Album or Time information.

REPEAT /RANDOM	Listen to your tracks repeatedly or randomly.
	Selects the radio station. Searchs for a section within a track. Skips Fast backward or Forward.
	Starts or pauses playback
	Stops playback or recording

RDS/ PTY (optional)	RDS (Radio Data System) Searchs radio stations by radio type
	Recording button



F (FUNCTION)	Changes the functions.
EQ	Sound quality adjustment You can choose sound impressions.
LG EQ	You can select a Natural or Local Specialization equalizer effect by using LG EQ.

	Searchs for a folder of MP3/ WMA files When a CD containing MP3/ WMA files in several folders is being played, press FOLDER•PRESET selects the folder you want to play. Choose a 'preset number' for a radio station.
± VOL	Controls the volume when using any function.
PROGRAM/ MEMO.	For storing radio stations If you have saved radio stations using PROGRAM/MEMO. , you can scroll through them and select one. Listens to your tracks in any order
	Temporarily stop the sound Press the button again to return to the sound.

Listening to CDs

Audio CD and MP3/ WMA CD can be played back in this unit.

	ON UNIT	ON REMOTE
1. Open the CD door	▲ OPEN/CLOSE	-
2. Insert the CD: Label facing up.	-	-
3. Close the CD door	▲ OPEN/CLOSE	-
4. Select the CD function: The display will show the total number of tracks (files).	FUNCTION	FUNCTION
5. Start the CD playing	▶/	▶/
6. To stop a CD playing	■	■

Listening to CDs - More you can do

Pausing or restarting a CD

- 1 Press ▶/|| during playback.
- 2 Press this button again to resume play.

Searching for a section within a track

Hold ◀◀/▶▶ on the unit or ◀◀/▶▶ on the remote control during playback and release it at the point you want to listen to.

Skipping to another track (files)

Press ◀◀/▶▶ on the unit or ◀◀/▶▶ on the remote control in stop status.

Program list

You can play up to 20 tracks on a CD in order.

- 1 Insert a CD and wait for it to be read.
- 2 Press PROGRAM/MEMO. on the remote control in stop status.
- 3 Press ◀◀/▶▶ on the unit or ◀◀/▶▶ on the remote control to select a track.
- 4 Press PROGRAM/MEMO. again to save and select a next track.
- 5 Press ▶/|| to play the programmed music files.
- 6 To clear your selection, press ■ , PROGRAM/MEMO. and then ■ .

Listening to your tracks (files) repeatedly or randomly

- 1 Press REPEAT/RANDOM repeatedly. The current (tracks) file will be played back repeatedly or randomly.
- 2 To return to normal playback, press REPEAT/RANDOM repeatedly to select [Off].

Listening to the radio

Make sure both the FM and AM (optional) aerials are connected.

	ON UNIT	ON REMOTE
1. Select either FM or AM (optional)	FUNCTION	FUNCTION
2. Select the radio station	TUNING (+)/ (-)	TUN.- / TUN.+
3. To 'save' a radio station: A preset number will show in the display.	-	PROGRAM/MEMO.
4. Select the preset number	-	FOLDER-PRESET
5. To confirm press: Up to 50 radio stations can be saved.	-	PROGRAM/MEMO.
6. To select a 'saved' station	-	FOLDER-PRESET

Listening to the radio - More you can do

Looking for radio stations automatically

- 1 Press and hold TUNING + / TUNING - on the unit or TUN.- / TUN.+ on the remote control for more than 0.5 second.
- 2 The tuner will scan automatically and stop when it finds a radio station.

Deleting all the saved stations

- 1 Press and hold PROGRAM/MEMO. on the remote control for two seconds. "ERASE ALL" shows.
- 2 Press PROGRAM/MEMO. on the remote control to erase all the saved stations.

Improving poor FM reception

Press ▶/|| (MONO/ST) on the remote control. This will change the tuner from stereo to mono and usually improve the reception.

See information about your radio stations - OPTIONAL

The FM tuner is supplied with the Radio Data System (RDS) facility. This shows the letters **RDS** on the display, plus information about the radio station being listened to. Press **RDS** on the remote control several times to view the information.

PTY - Programme Type, such as News, Sport, Jazz.

RT - Radio Text, the name of the radio station.

CT - Time Control, the time at the location of the radio station.

PS - Programme Service name, the name of channel.

You can search the radio stations by programme type by pressing **RDS**. The display will show the last PTY in use. Press **PTY** one or more times to select your preferred programme type. Press and hold **◀◀/▶▶**. The tuner will search automatically. When a station is found the search will stop.

About MP3/ WMA

MP3/WMA Disc compatibility with this unit is limited as follows:

- Sampling Frequency : 32 - 48 kHz (MP3), 32 - 48 kHz (WMA)
- Bit rate : 32 - 320 kbps (MP3), 40 - 320 kbps (WMA)
- CD-R physical format should be "ISO 9660/ JOLIET"
- If you record MP3/WMA files using the software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it is impossible to playback MP3 files. We recommend that you use "Easy-CD Creator", which creates an ISO 9660 file system.
- Do not use special letters such as "/ : * ? " < >" etc.
- Even if the total number of files on the disc has more than 1000, it will only be shown up to 999.

Using an USB device

You can enjoy media files saved on an USB device by connecting the USB device to the USB port of the unit.

If you want to operate other function, see the CD playback section.

	ON UNIT	ON REMOTE
1. Connect the USB device to the USB port of the unit.	-	-
2. Select the USB function.	FUNCTION	FUNCTION
3. Select a file you want to play.	-	-
4. Start your media playing.	▶/	▶/
5. To stop, press	■	■
6. Before disconnecting the portable USB device, change to any other function.	FUNCTION	FUNCTION

Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive : Devices that support USB2.0 or USB1.1.
- The USB function may not be available depending on devices.

USB device requirement

 
- Devices which require additional program installation when you have connected it to a computer, are not supported.

Look out for the follows.

- **Do not extract the USB device while in operation.**
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.
- This unit is not supported when the total number of files is 1000 or more.
- External HDD, Locked devices or hard type USB devices are not supported.
- USB port of the unit can not be connected to PC. This unit can not be used as a storage device.

Listening to music from your external device

The unit can be used to play the music from many types of external device.

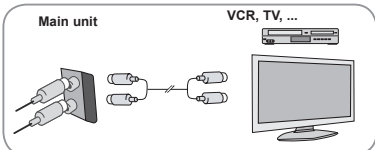	ON UNIT	ON REMOTE
<p>1. Connect the external device to the AUX IN connector of the unit. If your TV has only one output for audio(MONO). connect it to the left(white) audio jack on the unit.</p> 	-	-
2. Turn the power on.	⏻/⏻	⏻
3. Select the AUX function.	FUNCTION	FUNCTION
4. Turn on the external device and start it playing.	-	-

 






Enjoying a pre-programmed sound field

This system has a number of pre-set surround sound fields. You can select a desired sound mode by using **EQ/ LG EQ**.








The displayed items for the Equalizer may be different depending on sound sources and effects.

ON DISPLAY	Description
NATURAL	You can enjoy comfortable and natural sound.
Local Specialization equalizer	Regionally optimized sound effect.(DANGDUT/ ARABIC/ PERSIAN/ INDIA/ REGUETON/ MERENGUE / SALSA/ SAMBA)
AUTO EQ	Realizes the sound equalizer that is the most similar to the genre of which is included in the MP3 ID3 tag of song files.
POP CLASSIC ROCK JAZZ	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock , pop, jazz or classic concert.
MP3 Opt.	This function is optimized for compressible MP3 file. It improves the bass sound.
XDSS	Reinforce the treble, bass and surround sound effect.
VIRTUAL	You can enjoy moe virtual surround sound.
NORMAL(OFF)	You can enjoy the sound without equalizer effect.


Setting the Clock

	ON UNIT
1. Turn the power on	
2. Press for at least 2 seconds	CLOCK
3. Choose from either: AM 12:00 (for an am and pm display) or 0:00 (for a 24 hour display).	 
4. Confirm your selection	SET
5. Select the hours	 
6. Press	SET
7. Select the minutes	 
8. Press	SET

Use your player as an alarm clock

- 1 Turn the power on.
- 2 Press and hold **TIMER**. Each function, EX) TUNER, CD.... flashes.
- 3 Press **SET** when the function you want to be woken by is showing.
- 4 Choose one of them by pressing **SET**.
- 5 "ON TIME" will be displayed. Then you can set the time you want the alarm to go on. Press   to change the hours and minutes and **SET** to save.
- 6 "OFF TIME" will be displayed. Then, you can set the time you want the function to stop. Press   to change the hours and minutes and press **SET** to save.
- 7 You will be shown the volume (VOL) you want to be woken by.
Use   to change the volume and **SET** to save.
The clock icon  shows that the alarm is set.
- 8 Press **TIMER** button 2times. You can check the setting status.

Notes:

- If you set the clock time, you can check the time by pressing **CLOCK** even when the player is turned off.
- If you set the clock time and alarm, you can check the alarm icon  by pressing **CLOCK** even when the player is turned off.

Fall asleep while listening to your player

- 1 Press **SLEEP** repeatedly to select delay time between 10 and 180 minutes, after the unit will be turned off.
- 2 To check the remaining time, press **SLEEP**.

DIMMER

Press **SLEEP** once. The LED (Light-emitting diode) of front panel is turned off and the display window will be darken by half. To cancel it, press **SLEEP** repeatedly until dim off.

Troubleshooting

Symptom	Cause	Correction
General		
No power.	The power cord is not plugged in.	Plug in the power cord.
	Check whether electricity failed.	Check the condition by operating other electronic devices.
No sound.	Check whether you select right function.	Press FUNCTION and check the selected function.
CD		
The unit does not start playback.	An unplayable disc is inserted.	Insert a playable disc.
	The disc is dirty.	Clean the disc.
RADIO		
Radio stations cannot be tuned in.	The antenna is positioned or connected poorly.	Connect the antenna securely.
Remote control		
The remote control does not work properly.	The remote control is too far from the unit.	Operate the remote control within about 23 ft (7 m).
	There is an obstacle in the path of the remote control and the unit.	Remove the obstacle.
	The battery in the remote control is exhausted.	Replace the battery with new one.

Specifications

General

Power supply	200 - 240 V, 50/ 60 Hz
Power consumption	RAD114: 30 W RAD204B: 45 W
Net Weight	RAD114: 3.1 kg RAD204B: 3.44 kg
External dimensions (WxHxD)	202 x 307 x 292 mm
Operating temperature	5 °C to 35 °C
Operating humidity	5% to 85 %

Tuner

FM Tuning Range	87,5 - 108,0 MHz or 87,50 - 108,00 MHz
AM Tuning Range (optional)	522 - 1620 kHz or 522 - 1710 kHz or 520 - 1710 kHz

Amplifier

Output Power	RAD114: 55 W + 55 W RAD204B: 100 W + 100 W
T.H.D	10 %
Frequency Response	42 - 20000 Hz
Signal-to-noise ratio	75 dB

CD

Frequency response	40 - 20000 Hz
Signal-to-noise ratio	75 dB
Dynamic range	80 dB

Speakers (RAS114F, RAS204B)

Type	2 Way 2 Speaker
Impedance	4 Ω
Rated Input Power	RAS114F: 55 W RAS204B: 100 W
Max. Input Power	RAS114F: 110 W RAS204B: 200 W
Net Dimensions (WxHxD)	RAS114F: 215 x 309 x 232 mm RAS204B: 215 x 309 x 245 mm
Net Weight (1EA)	RAS114F: 2.6 kg RAS204B: 2.9 kg

Designs and specifications are subject to change without notice.