



**LG**

Life's Good

ENGLISH

# OWNER'S MANUAL Full HD Media Player

Please read this manual carefully before operating your set and retain it for future reference.

DV6H

P/NO : MFL67007102



## Safety Informaion



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



**CAUTION:** This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**

### **CAUTION concerning the Power Cord**

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

#### Notes on Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, DVDs, CDs and other materials may subject you to civil and/or criminal liability.

#### Caution of Unit treatment

- **Shipping the unit**  
Save the original packing materials and re-pack the unit with them to maximize protection.
- **Cleaning the unit**  
Clean the unit using a soft and dry cloth with a mild detergent solution, not strong solvents occurred the damage of surface.
- **Maintaining performance of the unit**  
Maintain the cleaing status of optical pick-up lens and disc drive parts. If they are dirty or worn, the displayed quality could be diminished. For details, please contact your nearest authorized service center.

# Table of Contents

## Getting Started

---

- 3 Safety Information
- 6 Introduction
  - 6 - Symbols Used in this Manual
  - 6 - About the "Ø" Symbol Display
  - 6 - Regional Code
  - 6 - Playable Discs
- 7 - File compatibility
- 8 Front panel
- 8 Rear panel
- 8 Supplied Accessories
- 9 Remote control

## Connecting

---

- 10 Connecting to your TV
  - 10 - Connecting Video (CVBS) / Audio cable
  - 10 - Connecting Component Video cable
  - 10 - Connecting HDMI cable
- 11 Connecting to an Amplifier
  - 11 - Connecting Audio cable
  - 11 - Connecting COAXIAL (digital audio) cable
- 11 - Connecting HDMI cable

## System Setting

---

- 12 Setup
  - 12 - Adjust the settings
  - 12 - [Language] Menu
  - 12 - [Audio] Menu
  - 12 - [Video] Menu
  - 13 - [Slide] Menu
  - 13 - [Parental control] Menu
  - 13 - [Other] Menu

## Operating

---

- 14 On-Screen display
  - 14 - Displaying content information on-screen
- 14 General Playback
  - 14 - Playing Disc
  - 14 - Playing USB Device
- 15 General operation
  - 15 Advanced Playback
    - 15 - Movie
    - 16 - Music
    - 16 - Photo

## Troubleshooting

---

- 17 Troubleshooting

## Appendix

---

- 18 Area Code List
- 19 Language code List
- 20 Specifications
- 20 Trademarks and Licenses

1

2

3

4



5

6

 
## Introduction

### Symbols Used in this Manual

A section whose title has one of the following symbols are applicable only to the disc represented by the symbol.

	DVD-Video, DVD±R/RW
	Audio CDs
	Movie files contained in the USB/Disc
	Music files contained in the USB/Disc
	Photo files contained in the USB/Disc


### About the “” Symbol Display

“” may appear on your TV display during operation and indicates that the function explained in this owner’s manual is not available on that specific media.

### Regional Code

This unit has a regional code printed on the rear of the unit. This unit can play only DVD disc labeled same as the rear of the unit or “ALL”.

## Playable Discs

	<b>DVD-VIDEO</b> (8 cm / 12 cm disc) Discs such as movies that can be purchased or rented.
 	<b>DVD±R</b> (8 cm / 12 cm disc) - Video mode and finalized only - Supports the dual layer disc also - DVD±R discs that contain Movie, Music or Photo files.
	<b>DVD-RW</b> (8 cm / 12 cm disc) - VR mode, Video mode and finalized only - DVD-RW discs that contain Movie, Music or Photo files.
	<b>DVD+RW</b> (8 cm / 12 cm disc) - Video mode and finalized only - DVD+RW discs that contain Movie, Music or Photo files.
	<b>Audio CD</b> (8 cm / 12 cm disc)
	<b>CD-R/RW</b> (8 cm / 12 cm disc) CD-R/RW discs that contain audio titles, Movie, Music or Photo files.

## File compatibility

### Overall

**Available File extensions:** ".jpg", ".jpeg", ".png", ".avi", ".divx", ".mpg", ".mpeg", ".mkv", ".mp4", ".mp3", ".wma"

- The file name is limited to 45 characters.
- Depending on the size and number of the files, it may take several minutes to read the contents on the media.

**Maximum Files/Folder:** Less than 2000 (total number of files and folders)

**CD-R/RW, DVD±R/RW Format:** ISO 9660+JOLIET

### MOVIE

#### Available resolution size:

1920 x 1080 (W x H) pixels

**Playable subtitle:** SubRipper (.srt), MicroDVD (.sub/.txt), SAMI (.smi), SubStation Alpha (.ssa), Advance SubStation Alpha (.ass), SubViewer 2.0 (.sub), DVD Subtitle (.txt)

**Playable Codec format:** "DIVX3.xx", "DIVX4.xx", "DIVX5.xx", "DIVX6.xx" (Standard playback only), "MPEG-1", "MPEG-2", "MPEG-4 AVC (H.264)"

#### ! Note

- This unit does not support the file that are recorded with GMC\*1 or Qpel\*2. Those are video encoding techniques in MPEG4 standard, like DivX or XVID have.  
\*1 GMC – Global Motion Compensation  
\*2 Qpel – Quarter pixel
- This unit supports MPEG-4 AVC (H.264) at Level 4.1 for Main Profile and High Profile and at Level 3.1 for Baseline profile.
- Even though the resolution for some Movie file is supported, there may be not operated by limitation of system memory.

**Playable Audio format:** "Dolby Digital", "DTS", "MP3", "WMA", "AAC", "AC3"

**Sampling frequency:** within 8 - 48 kHz (MP3), within 32 - 48 kHz (WMA)

**Bit rate:** within 32 - 320 kbps (MP3), within 20 - 320 kbps (WMA)

## MUSIC

**Sampling frequency:** within 8 - 48 kHz (MP3), within 32 - 48 kHz (WMA)

**Bit rate:** within 8 - 320 kbps (MP3), within 32 - 192 kbps (WMA)

## PHOTO


### Recommended size:

more than 32 x 32 x 32 bit/pixel  
less than 4800 x 3500 bit/pixel

#### ! Notes of USB Device


- This unit supports USB flash memory/ external HDD formatted in FAT16, FAT32 and NTFS when accessing files (music, photo, movie).
- Audio CD recording can be performed in condition of just FAT16 and FAT32 format type of HDD, not NTFS or multi-format type.
- This unit can support up to 4 partitions of the USB device.
- Do not extract the USB device during operation (play, etc.).
- A USB device which requires additional program installation when you have connected it to a computer, is not supported.
- USB device: USB device that supports USB1.1 and USB2.0.
- Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages.
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable, USB HUB or USB Multi-reader, the USB device may not be recognized.
- Some USB device may not work with this unit.
- Digital camera and mobile phone are not supported.
- USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

## Front panel

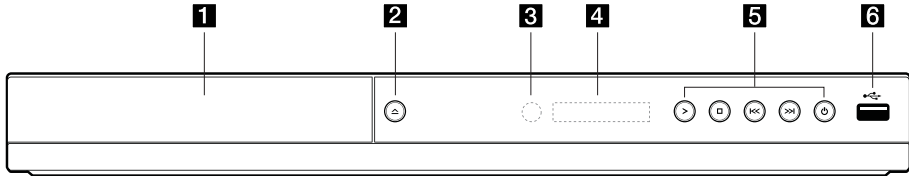


- 1** Disc Tray
- 2** △ (Open / Close)
- 3** Remote sensor
- 4** Display window
- 5** > (Play)  
□ (Stop)  
|<</>>| (Skip)  
⏻ (Power)
- 6** USB Port

## Rear panel

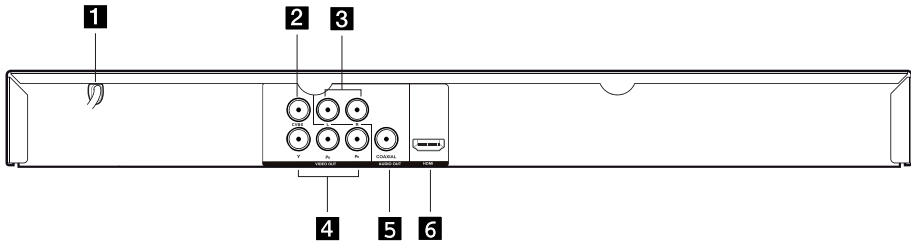


- 1** Power Cord
- 2** Video Out (CVBS)
- 3** 2CH Audio Out (Left/Right)
- 4** Component Video Out (Y PB PR)
- 5** Digital Audio Out (COAXIAL)
- 6** HDMI Out


## Supplied Accesories

 

RCA Video/Audio cable (1)

 


Remote control (1)

 

Battery (1)



# Remote control

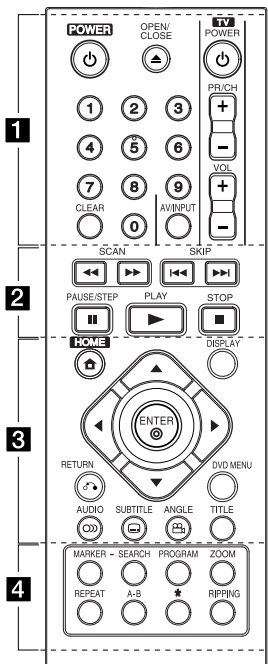

- ..... **1** .....
- POWER**: Switches the player ON or OFF.
- OPEN/CLOSE**: Opens and closes the disc tray.
- 0-9 numerical buttons**: Selects numbered options or inputs letters.
- CLEAR**: Removes a mark on the Search menu or a number when setting the password.
- TV Control Buttons**: Controls the sound volume, channel, source, and power On/Off on TV.
- ..... **2** .....
- ◀◀/▶▶ (SCAN)**: Searches backward or forward.
- ◀◀/▶▶ (SKIP)**: Goes to the next or previous chapter/track/file.
- ⏸ (PAUSE/STEP)**: Pauses playback.
- ▶ (PLAY)**: Starts playback.
- (STOP)**: Stops playback.
- ..... **3** .....
- HOME**: Displays the [HOME] menu.
- DISPLAY**: Accesses On-Screen Display.
- ▲▼◀▶ (Direction buttons)**: Selects an option in the menu.

- ⊙ (ENTER)**: Confirms menu selection.
- ↶ (RETURN)**: Presses to move backwards or exits the menu.
- DVD MENU**: Accesses or exits the DVD menu.
- 🔊 (AUDIO)**: Selects an audio language or audio channel.
- 🗨 (SUBTITLE)**: Selects a subtitle language.
- 📷 (ANGLE)**: Selects a DVD camera angle if it is available on the disc being played.
- TITLE**: Accesses the disc's title menu.
- ..... **4** .....
- MARKER**: Marks any desired point during playback, and select or remove any specific track/file.
- SEARCH**: Displays or exit the search menu.
- PROGRAM**: Enters the program edit mode.
- ZOOM**: Enlarge video image in disc mode.
- REPEAT**: Repeats a desired selection or sequence.
- A-B**: Repeats a section.
- \***: Button is not available.
- RIPPING**: Records the Audio CD to USB device.

## Battery Installation:

Remove the battery cover on the rear of the Remote Control, and insert one R03 (size AAA) battery with **+** and **-** matched correctly.

## Code number to control TVs:


Press the below proper number of TV maker on holding down 1 (TV Power) and just press 1 (TV Power). If TV is turned on or off, it is to be set. But, some or all buttons may not be operated according to TV, even though it is to be set or input the proper number.

Maker	Code Number
LG	1 (Default), 2
Zenith	1, 3, 4
GoldStar	1, 2
Samsung	6, 7
Sony	8, 9
Hitachi	4

## Connecting to your TV


### Connecting Video (CVBS) / Audio cable

Connect the VIDEO/AUDIO OUT on the unit to VIDEO/AUDIO IN on TV with AV cable, such as VIDEO with yellow, AUDIO Left/Right with white/red.

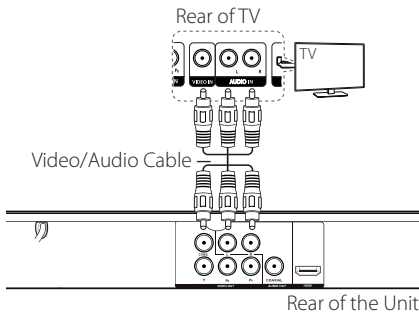

### Connecting Component Video cable


Connect the COMPONENT VIDEO OUT on the unit to COMPONENT VIDEO IN on TV with COMPONENT cable, such as Y with green, Pb with blue, and Pr with red.

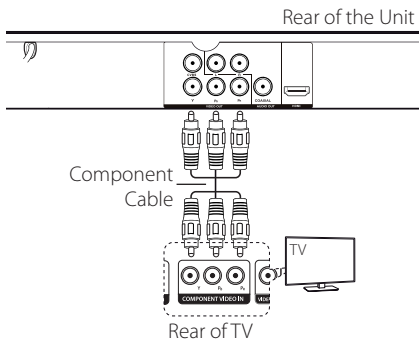

- You should still connect the AUDIO cable between the unit and TV.

### Connecting HDMI cable

Connect the HDMI OUT on the unit to the HDMI IN on compatible TV with HDMI cable. (Type A, High Speed HDMI™ Cable)

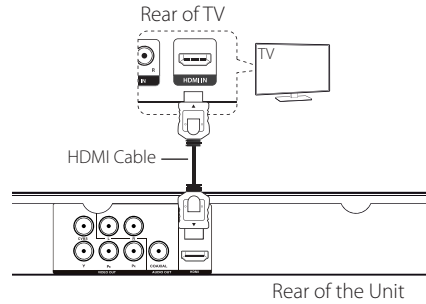

#### Additional Information for HDMI

- When you connect a HDMI or DVI compatible device make sure of the following:
  - Try switching off the HDMI/DVI device and this unit. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this unit.
  - The connected device's video input is set correctly for this unit.
  - The connected device is compatible with 720x576i(480i), 720x576p(480p), 1280x720p, 1920x1080i or 1920x1080p video input.
- Not all HDCP-compatible HDMI or DVI devices will work with this unit.
  - The picture will not be displayed properly with non-HDCP device.
  - This unit does not playback and TV screen is changed to black screen.

#### Resolution Setting


The unit provides several output resolutions for HDMI OUT and COMPONENT VIDEO OUT jacks. You can change the resolution using [SETUP] menu.

- Depending on your TV, some of the resolution settings may result in the picture disappearing or an abnormal picture appearing. In this case, set the [Resolution] option to suitable one on the setup menu.
- Changing the resolution when the unit is connected with HDMI connector may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.

## Connecting to an Amplifier

### Connecting Audio cable


Connect the AUDIO OUT on the unit to 2CH AUDIO IN on amplifier with Audio cable, such as AUDIO Left/Right with white/red.

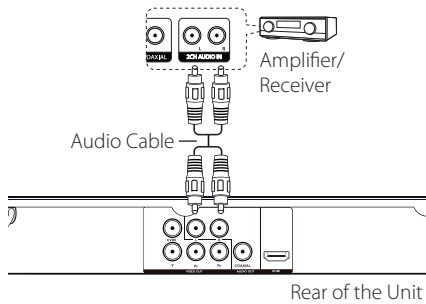

### Connecting HDMI cable


Connect the HDMI OUT on the unit to the HDMI IN on amplifier with HDMI cable.

Connect the HDMI OUT jack on amplifier to HDMI IN jack on TV with HDMI cable, if the amplifier has HDMI OUT jack.

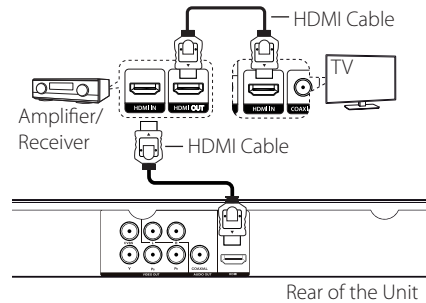

### Connecting COAXIAL (digital audio) cable

Connect the COAXIAL (digital audio out) on the unit to Digital Audio IN (COAXIAL) on amplifier with COAXIAL cable.

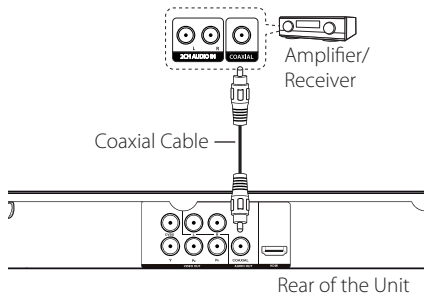

- If your TV is not capable of handling 96 kHz sampling frequency, set the [Sample Freq.] option to [48 KHz] on the setup menu (See page 12).
- If your TV is not equipped with Dolby Digital and MPEG decoder, set the [Dolby Digital] and [MPEG] options to [PCM] on the setup menu (See page 12).

## Setup

When the unit is turned-on at the first time, you have to select the desired language. (optional)

### Adjust the settings

You can change the settings of the player in the [SETUP] menu.

1. Press HOME.
2. Select the [Setup] using ◀▶ and press ENTER. The [Setup] menu appears.
3. Select the first setup option using ▲▼ the first setup option, and press ▶ to move to the second level.
4. Select a second setup option using ▲▼, and press ENTER to move to the third level.
5. Select a desired setting using ▲▼, and press ENTER to confirm.

### [Language] Menu

#### Menu Language/Disc Menu/Disc Audio/Disc Subtitle

Select and set the language you prefer.

### [Audio] Menu

Set the player's Audio options according to various disc output type you use.

#### Dolby Digital / DTS / MPEG

Set the unit's Audio options according to various disc output type you use.

---

**[Bitstream]:** Select to connect COAXIAL jack to an amplifier with Dolby Digital, DTS or MPEG decoder.

---

**[PCM] (for Dolby Digital / MPEG):** Select to connect COAXIAL jack to an amplifier without Dolby Digital or MPEG decoder.

---

**[Off] (for DTS):** Select to connect COAXIAL jack to an amplifier without DTS decoder.

---

### Sample Freq. (Frequency)

Selects the sampling frequency of the audio signal between [48KHz] and [96KHz].

### DRC (Dynamic Range Control)

To adjust the volume level by itself when Audio level reaches to more than the specific level (Dolby Digital only).

### [Video] Menu

#### TV Aspect

Select and set TV aspect ratio according to your TV type and preference.

---

**[4:3]:** Standard TV type

---

**[16:9]:** Wide TV type

---

#### Display Mode

Select and set Display Mode according to your preference. Display Mode works only when the TV Aspect mode is 4:3.

---

**[Panscan]:** Display full screen with cut non-main scene on TV

---

**[Letterbox]:** Display wide screen with black stripe at top and bottom on TV

---

#### TV System

Select [NTSC] or [PAL] according to your region.

#### Resolution

Select and set the output resolution of the Component and HDMI video signal as Auto, 1080p, 1080i, 720p, 576p(480p), 576i(480i).

## [Slide] Menu

Select and set the Transition mode and Interval Time of sliding on photo mode you prefer or appropriate.

## [Parental control] Menu

Press ► and enter the 4-digit password.

### Rating

Rate the level from 1(Kids) to 8 (Adult).

### Change Password

Enter the 4-digit password twice to create new password.

#### If you forget the password

Remove the disc, select Parental control, and input "210499". The password will be cleared.

### Area Code

To input the standardized area code refer to the Area Code List on page 18.

## [Other] Menu

### DivX(R) VOD

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX,Inc. This is an official DivX Certified® device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

### Factory Set

You can reset the unit to its original default setting.

### B.L.E (Black Level Expansion)

Select On or Off to expand the black level or not. It just operates when TV system is set to NTSC.

### REC Bitrate

To select bitrate when you record from Audio CD to USB directly. Higher bitrate gives better sound quality. For detailed recording method, see page 16.

## On-Screen display

You can display and adjust various information on-screen about the loaded disc and USB Device.

### Displaying content information on-screen **DVD MOVIE**

1. Press DISPLAY to show various playback information.
2. Select an available contents by pressing ▲▼◀▶ and ENTER.
3. Change an available contents by pressing ENTER and numerical button.
4. Press DISPLAY to escape from playback information.

<b>Time</b> 00:09:42 / 02:12:18	Elapsed playing time/total playback time
<b>Title</b> 0001/0005	Current title number/total number of title (DVD)
<b>Track</b> 0002/0004	Current track number/total number of files (MOVIE)
<b>Chapter</b> 0002/0004	Current chapter number/total number of chapter (DVD)
<b>Format</b> 0002/0004	Codec type of playback content (MOVIE)
<b>Audio</b> 1/1 English DD 2ch	Audio language on playback
<b>Audio</b> 1/1 MP3 2ch	
<b>Type</b> DVD	File type of playback content
<b>Type</b> AVI	
<b>File</b> DVD Video	File format of playback content
<b>File</b> File 02.avi	
<b>Resolution</b> 720 x 480	Resolution of playback content
<b>Subtitle</b> ,1 ENG	Subtitle on playback
<b>Angle</b> 1/2	Angle on playback (DVD)

## General Playback

### Playing Disc

1. Press ▲, and place a disc on the disc tray.
2. Press ▲ to close the disc tray.
3. Select [DISC] option using ◀▶ and press ENTER.
4. Press ▶ to play the file.  
DVD disc will be automatically loaded.

### Playing USB Device

1. connect the USB device.
2. Select [USB] option using ◀▶ and press ENTER.
3. Select the desired file.
4. Press ▶ to play the file.

## General operation

To	Do this
<b>Playback</b>	Press ►
<b>Pause</b>	Press II
<b>Stop</b>	Press ■
<b>Skip to the next or previous</b>	Press I◀◀ or ▶▶ during playback
<b>Fast / slow playback forward or backward</b>	Press ◀◀ or ▶▶ during playback
<b>Resume playback</b>	<p>Press ■ during playback to save the stopped point.</p> <ul style="list-style-type: none"> <li>Press ■ once: Displayed II■ on the screen (Resume Stop)</li> <li>Press ■ twice: Displayed ■ on the screen (Complete Stop)</li> </ul>
<b>Playback disc or USB device with several kinds of files</b>	Select the proper menu by continuously pressing TITLE as MUSIC, PHOTO, and MOVIE.
<b>Screen Saver</b>	The Screen Saver operates when unit let leave for 5minutes on Stop. Press any buttons to deactivate it.
<b>Last Scene Memory</b>	This unit can memorize and play the lastly viewed scene even if disc is inserted again after removal or unit is turned on after off with same disc. (DVD/ACD only)

## Advanced Playback

### Movie **DVD** **MOVIE**

To	Do this
<b>Display disc menu</b>	Press DVD MENU (DVD Only)
<b>Play repeatedly</b>	<p>Press REPEAT during playback. Press REPEAT repeatedly.</p> <ul style="list-style-type: none"> <li>DVD: CHAPTER/ TITLE /OFF</li> <li>MOVIE: TRACK/ALL/OFF</li> </ul>
<b>Repeat a specific portion</b>	Press A-B to beginning and end points desired repeatedly. To return to normal playback, Press A-B again to return to normal playback.
<b>Set the desired starting time of playback</b>	<p>Press DISPLAY during playback. Select the elapsed Time. Press ENTER and set the desired starting time of playback using ◀▶, numerical buttons, and then press ENTER.</p> <p>For example, set "02:10:20" to start at 2 hours, 10 minutes, and 20 seconds.</p>
<b>Watch an enlarged scene</b>	<p>Press ZOOM repeatedly during playback or pause mode. Use ▲▼◀▶ to move the enlarged picture.</p> <ul style="list-style-type: none"> <li>ZOOM rate: x2/x3/x4</li> </ul>
<b>Play frame-by-frame</b>	Press II during playback and press II repeatedly.
<b>Set and play the memorized point</b>	Press MARKER to mark the desired points up to 9. Press SEARCH and ◀▶ to play at the memorized point.
<b>Select the proper subtitle code on Movie file</b>	Press and hold SUBTITLE for 3 seconds during playback. The language code will be appeared. Select properly displayed subtitle by pressing ◀▶ and, press ENTER.

## Music **ACD MUSIC**

To	Do this
<b>Play repeatedly</b>	Press REPEAT during playback. Press REPEAT repeatedly. <ul style="list-style-type: none"> <li>• <b>1</b> (REPEAT ONE) / <b>ALL</b> (REPEAT ALL) / REPEAT Off</li> </ul>
<b>Create or delete your own program</b>	Press PROGRAM on stop mode. Select the desired one or more files or tracks by pressing MARKER.  If you want to delete the undesired lists or all lists, press MARKER or PROGRAM on stop mode.
<b>Listen to music during slide show</b>	Press DVD MENU during music playback and select the PHOTO mode. And then, press ENTER.
<b>Record the Audio CD to USB device</b>	Insert Audi o CD and USB Device, and press RIPPING. Deactivated check boxes are displayed. Press ENTER after selecting the desired track, one or more to record by pressing MARKER. Recording will be started.  If you want to escape from RIPPING mode, press ENTER.

## Photo **PHOTO**

To	Do this
<b>View the Photo information</b>	Press the DISPLAY to see the contained file information, [Type], [File], [Camera], [Resolution], and [Date]..
<b>Rotate a photo</b>	Press <b>▲▼</b> to rotate the photo counterclockwise or clockwise while displaying a photo in full screen.
<b>Watch an enlarged Photo</b>	During slide show, press ZOOM repeatedly to select zoom mode. <ul style="list-style-type: none"> <li>• ZOOM rate: x2/x3/x4</li> <li>• <b>▲▼◀▶</b>: Move through the zoomed photo</li> </ul>
<b>Adjust the transition mode and interval time of slide show</b>	Go to Slide mode in Setup and select the desired transition mode and the Interval time. <ul style="list-style-type: none"> <li>• [Transition mode]: None, Slide, Stripes, Fade, Wipe, Random</li> <li>• [Interval time]: 5/10/30/60 seconds</li> </ul>

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

**Be responsible  
Respect copyrights**



# Troubleshooting

Symptom	Cause	Solution
<b>No power.</b>	The power cord is disconnected.	Plug the power cord.
<b>The unit does not start playback.</b>	An unplayable disc is inserted.	Insert a playable disc. (Check the disc type and regional code.)
	The rating level is set.	Change the rating level.
<b>The remote control does not work properly.</b>	The remote control is not pointed at the remote sensor on the unit.	Point the remote control at the remote sensor of the unit.
	The remote control is too far from the unit.	Operate the remote control closer to the unit.
<b>Poor picture quality and sound distortion.</b>	Fingerprints and dust is stained on the disc.	Wipe the disc from the center to out with a clean cloth. Do not use strong solvents (alcohol, benzine, thinner, commercially available cleaners)
<b>No picture.</b>	The TV is not set to receive the signal from the unit.	Select the appropriate video input mode on the TV.
	The video cable is not connected securely.	Connect the video cable securely.
	The TV does not accept the resolution that is set on the unit.	It can be changed using the resolution of SETUP menu.
<b>No sound.</b>	The equipment connected with the audio cable is not set to receive the signal from the unit.	Select the correct input mode of the audio amplifier.
	The AUDIO options are set to the wrong position.	Set the AUDIO settings to the correct position.

## Area Code List

Choose an area code from this list.


Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Fiji	FJ	Monaco	MC	Singapore	SG
Argentina	AR	Finland	FI	Mongolia	MN	Slovak Republic	SK
Australia	AU	France	FR	Morocco	MA	Slovenia	SI
Austria	AT	Germany	DE	Nepal	NP	South Africa	ZA
Belgium	BE	Great Britain	GB	Netherlands	NL	South Korea	KR
Bhutan	BT	Greece	GR	Antilles	AN	Spain	ES
Bolivia	BO	Greenland	GL	New Zealand	NZ	Sri Lanka	LK
Brazil	BR	Hong Kong	HK	Nigeria	NG	Sweden	SE
Cambodia	KH	Hungary	HU	Norway	NO	Switzerland	CH
Canada	CA	India	IN	Oman	OM	Taiwan	TW
Chile	CL	Indonesia	ID	Pakistan	PK	Thailand	TH
China	CN	Israel	IL	Panama	PA	Turkey	TR
Colombia	CO	Italy	IT	Paraguay	PY	Uganda	UG
Congo	CG	Jamaica	JM	Philippines	PH	Ukraine	UA
Costa Rica	CR	Japan	JP	Poland	PL	United States	US
Croatia	HR	Kenya	KE	Portugal	PT	Uruguay	UY
Czech Republic	CZ	Kuwait	KW	Romania	RO	Uzbekistan	UZ
Denmark	DK	Libya	LY	Russian Federation	RU	Vietnam	VN
Ecuador	EC	Luxembourg	LU	Saudi Arabia	SA	Zimbabwe	ZW
Egypt	EG	Malaysia	MY	Senegal	SN		
El Salvador	SV	Maldives	MV				
Ethiopia	ET	Mexico	MX				

## Language code List

Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	French	7082	Lithuanian	7684	Sindhi	8368
Afrikaans	6570	Frisian	7089	Macedonian	7775	Singhalese	8373
Albanian	8381	Galician	7176	Malagasy	7771	Slovak	8375
Ameharic	6577	Georgian	7565	Malay	7783	Slovenian	8376
Arabic	6582	German	6869	Malayalam	7776	Spanish	6983
Armenian	7289	Greek	6976	Maori	7773	Sudanese	8385
Assamese	6583	Greenlandic	7576	Marathi	7782	Swahili	8387
Aymara	6588	Guarani	7178	Moldavian	7779	Swedish	8386
Azerbaijani	6590	Gujarati	7185	Mongolian	7778	Tagalog	8476
Bashkir	6665	Hausa	7265	Nauru	7865	Tajik	8471
Basque	6985	Hebrew	7387	Nepali	7869	Tamil	8465
Bengali; Bangla	6678	Hindi	7273	Norwegian	7879	Telugu	8469
Bhutani	6890	Hungarian	7285	Oriya	7982	Thai	8472
Bihari	6672	Icelandic	7383	Panjabi	8065	Tonga	8479
Breton	6682	Indonesian	7378	Pashto, Pushto	8083	Turkish	8482
Bulgarian	6671	Interlingua	7365	Persian	7065	Turkmen	8475
Burmese	7789	Irish	7165	Polish	8076	Twi	8487
Byelorussian	6669	Italian	7384	Portuguese	8084	Ukrainian	8575
Chinese	9072	Japanese	7465	Quechua	8185	Urdu	8582
Croatian	7282	Kannada	7578	Rhaeto-Romance	8277	Uzbek	8590
Czech	6783	Kashmiri	7583	Rumanian	8279	Vietnamese	8673
Danish	6865	Kazakh	7575	Russian	8285	Volapük	8679
Dutch	7876	Kirghiz	7589	Samoan	8377	Welsh	6789
English	6978	Korean	7579	Sanskrit	8365	Wolof	8779
Esperanto	6979	Kurdish	7585	Scots Gaelic	7168	Xhosa	8872
Estonian	6984	Laothian	7679	Serbian	8382	Yiddish	7473
Faroese	7079	Latin	7665	Serbo-Croatian	8372	Yoruba	8979
Fiji	7074	Latvian, Lettish	7686	Shona	8378	Zulu	9085
Finnish	7073	Lingala	7678				

## Specifications

<b>Power requirements</b>	AC 200 - 240 V, 50/60 Hz
<b>Power consumption</b>	14.5 W
<b>Dimensions (W x D x H)</b>	Approx. (430 x 233 x 51) mm
<b>Net Weight (Approx.)</b>	1.9 kg
<b>Operating temperature</b>	0 °C to 35 °C
<b>Operating humidity</b>	5 % to 90 %
<b>Laser</b>	Semiconductor laser
<b>Signal system</b>	PAL / NTSC
<b>Bus Power Supply (USB)</b>	5 V  500 mA
<b>CVBS (Video Out)</b>	1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1
<b>Component Video Out</b>	(Y) 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1, (PB)/(PR) 0.7 V (p-p), 75 Ω, RCA jack x 2
<b>HDMI Out (Video/Audio)</b>	19 pin (Type A, High Speed HDMI™ Cable)
<b>Audio Out</b>	2.0 Vrms (1 kHz, 0 dB), 600 Ω, RCA jack (L, R) x 1
<b>Digital Audio Out (COAXIAL)</b>	0.5 V (p-p), 75 Ω, RCA jack x 1

Design and specifications are subject to change without prior notice.

## Trademarks and Licenses



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.



DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.



