



LG-T310 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



CE0168

Bluetooth QD ID B016850



www.lg.com

P/N: MMBB0390463 (1.1)

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


Important!

The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

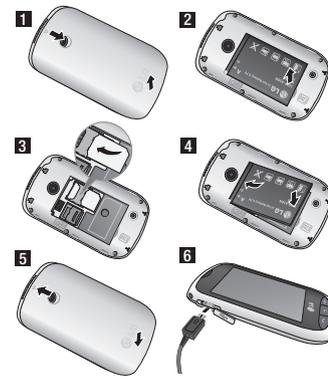

Phone Components



- Volume keys**
- When the screen is at the Home screen: Ring tone and touch tone volume.
 - During a call: Earpiece volume.
 - Down volume key: Press and hold to activate/deactivate Silent mode.
- Power/Lock key**
- Short press to turn on/off the screen.
 - Long press for power on/off.



Handsfree or Stereo earphone connector

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T310 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the LG-T310 touch screen change dynamically depending on the task you are carrying out.

Calls

Making a Call

- 1 Touch to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch to initiate the call.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch to open the Contacts.

- 4 Touch **Send** when ready.

WARNING: If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

Messaging

Your LG-T310 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch to select a contact. You can even add multiple contacts.

Entering Text

You can choose your input method by tapping and **Input method**. Touch to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the on the right-center of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen. The following options are available.

Touch .

Send - Touch to send the photo as a **Message, Email** or via **Bluetooth**.

Set as - Touch to set as Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shut down image.

Rename - Touch to rename the photo.

Edit - Touch to edit the photo.

Touch to delete the image.

Touch to take another photo immediately.

Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch to open all advanced settings options.

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory

White balance - Choose between **Auto, Incandescent, Sunny, Fluorescent, and Cloudy**.

Colour effect - Choose a colour tone for your new photo.

- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, press key to answer the call.

To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on Reject tab to reject an incoming call in alerting screen.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T310 will convert your handwriting into your message.

Setting up your email

Touch **E-mail** in **Application** screen.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off, 3 seconds, 5 seconds, or 10 seconds**. This is ideal if you want to be included in a photo.

Night mode - Useful to user in dark places.

Image quality - Choose between **Super fine, Fine, and Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Hide icons - Choose the camera setting icons to hide manually or automatically.

Show captured image - Choose On to check the picture you took right away.

Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 Scroll and touch **Common settings**.
- **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers and All unknown numbers.

• **Send my number** - Choose whether to display your number on an outgoing call.

• **Auto-redial** - Slide the switch left for ON or right for OFF.

• **Answer mode**

Press send key: Allows you to only answer an incoming call by pressing the key.

Press any key: Allows you to answer an incoming call by pressing any key, except the key.

• **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose between **Off, Simple cross, or Trisection**.

Reset settings - Restore all camera default settings.

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

1 Holding the phone horizontally, point the lens towards the subject of the video.

2 Press the red dot .

3 **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.

4 To pause the video, touch and resume by selecting .

5 Touch on screen to stop video recording.

- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment - Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

Social network services (SNS)

Your LG-T310 has SNS that lets you enjoy and manage your social network.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides.

Touch to play the video.

The following options are available.

Touch .

Send - Touch to send the video as a **Message, Email** or via **Bluetooth**.

Rename - Touch to rename the video.

Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

Touch to shoot another video immediately. Your current video will be saved.

Touch to view a gallery of saved videos and images.

- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key** and touch **Settings**.

• **Display name** - Choose whether to display the first or last name of a contact first.

• **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.

• **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and upload the photo by touching **Album > Upload Photo**.

Friends: Search your friends in facebook by selecting Search tap.

Message: You can see the Inbox/Sent folder, and write a SN message.

Using the advanced settings

From the viewfinder, touch to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Colour Effect - Choose a colour tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto, Incandescent, Sunny, Fluorescent, and Cloudy**.

Quality - Choose between **Super fine, Fine and Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Audio recording - Choose Mute to record a video without sound.

Hide icons - Select whether to hide the icons in the camera menu automatically or manually.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

1 Make sure both devices have Bluetooth switched on and are connected to each other.

2 Select the music file on the other device and select send via Bluetooth.

3 When the file is sent, you will have to accept it on your phone by touching **Yes**.

4 The file should appear in **Music > All tracks**.

Settings

Personalising your profiles

You can personalise each profile setting.

1 Touch **Profiles**.

2 Choose the profile you want to edit.

3 You can then change all the sounds and alert options available in the list, including your Ringtones and Volume, Message tone settings and more.

Changing your phone settings

Use the freedom of adapting the LG-T310 to your own preferences.

From the home screen, select  and touch **Settings** then scroll to **Device settings**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:

Touch **Connectivity**.

• Pull off the road and park before making or answering a call if driving conditions so require.

• RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

• If your vehicle is equipped with an airbag, ensure it is not obstructed by your mobile device or accessories. It may fail or cause a serious injury if obstructed when deployed.

• If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time.

We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound and pressure from earphones can causing hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove.

Stop using your mobile device until the glass is replaced by an authorised service centre.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

• Use your wireless phone to call emergency services for yourself or others. In the case of fire, traffic accident or medical emergencies;

Australia: Dial 0-0-0,

New Zealand: Dial 1-1-1,

International: Dial 1-1-2,

other local emergency number.

Remember, it is a free call on your wireless phone for emergency services.

• Use your wireless phone to help others in emergencies, if you see an accident in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

• Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.

• If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.

• Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

Games and Applications

You can download new games and applications to your phone to keep you enjoy.

Application

Adding an event to your calendar

1 Touch Calendar.

2 Select the date you would like to add an event to.

3 Touch Add.

Setting your alarm

1 Touch Alarms.

2 Touch Add, then you can set and save your alarm in this menu.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

• While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

• The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.

• The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.961 W/kg (10 g) and when worn on the body is 0.974 W/kg(10 g).

• The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over 1g of tissue.

• Do not subject this unit to excessive smoke or dust.

• Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

• Do not tap the screen with a sharp object as it may damage the phone.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-T310 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

• The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

Potentially explosive atmospheres

• Do not use the phone at a refueling point.

• Do not use near fuel or chemicals.

• Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

• Turn your mobile phone off before boarding any aircraft.

• Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

• You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

• Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

• Do not disassemble or shortcircuit the battery pack.

• Keep the metal contacts of the battery pack clean.

• Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger



Battery



User Guide

Learn more about your LG-T310.



Stereo headset



Data cable



NOTE

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Using your calculator

1 Touch Calculator.

2 Touch the number keys to enter numbers.

Converting a unit

1 Touch Unit converter.

2 Choose whether you want to convert Currency, Area, Length, Weight, Temperature, Volume or Velocity.

3 Then select the unit and enter the value you would like to convert from.

The web

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

• Do not expose the phone to liquid, moisture or humidity.

• Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments; it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic and medical devices

All mobile phones may get interference, which could affect performance.

• Do not use your mobile phone near medical equipment.

• Avoid placing the phone over pacemakers, for example, in your breast pocket.

• Mobile phones may interfere with some hearing aids.

• Minor interference may affect TVs, radios, PCs, etc.

• Recharge the battery if it has not been used for a long time to maximize usability.

• Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.

• Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

• There is risk of explosion if the battery is replaced by an incorrect type.

• Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

• If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.

• Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Accessing the web

1 Touch the Browser.

2 Go straight to the browser home page, select Home. Alternately, select Enter address and type in the URL, followed by Connect.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Access to Google Service

Access to Google Service Touch Google Search to launch google search application.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

• Do not use a hand-held phone while driving.

• Give full attention to driving.

• Use a hands-free kit, if available.

• Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Driver Safety Tips

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

• Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

• Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.

Declaration of Conformity		LG Electronics	
Product Data			
Name	LG Electronics Inc		
Address	LG Twin Tower 20, Yusong-dong, Yongsong-gu, Seoul, Korea 150-721		
Product Code			
Product Name	GSM900 / GSM 900 / PCS 1900 / PCS 1900 Quadband Terminal Equipment		
Model Name	LG-T310		
Type Name	LG		
CE Marking Declaration			
ASITE Directive 1999/5/EC	EN 301 490 v1.1.1 / EN 301 488 v1.3.1 / EN 301 489 v1.1.2		
EN 300 328 v1.2.1	EN 60951 2007		
EN 301 490 v1.1.1	EN 301 489 v1.1.2		
EN 301 491 v1.2.1	EN 301 490 v1.1.2		
Declaration of Conformity			
The conformity to above standards is verified by the following Notified Body(SBT)			
SBT (Seoyoung House, Cheongdeildae Road, Woljeon on Thames, Sump, 4712 2TD, United Kingdom Notified Body Registration Number: 0109)			
Declaration			
I hereby declare under our sole responsibility that the product mentioned above fully complies with the applicable standards and directives.	Name	Seung Hwan, J. Director	
This declaration remains valid only if the product is manufactured in accordance with the standards and directives mentioned above.	Date	21 June 2010	
LG Electronics Inc., 47, Yousong-dong, Yongsong-gu, Seoul, Korea 150-721	Signature of responsible person		