

KF300 | USER GUIDE |

www.lgmobile.com

P/N : MMBB022288(1.0)

LG Electronics Inc.

KF300 | USER GUIDE



ENGLISH



| KF300 | USER GUIDE

CE 0168

Bluetooth QD ID B013568

KF300 USER GUIDE

- English

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Table of Contents

Introduction	6	Games & Apps	40
For Your Safety	7	Games	
Guidelines for safe and efficient use	8	Applications	41
KF300 features	15	Network profiles	
Parts of the phone			
Display Information	19		
On-Screen Icons			
Getting started	21	Call history	42
Inserting the SIM card and the handset battery		All calls	
Charging the Battery	22	Missed calls	
Disconnecting the adapter	23	Dialled calls	
How to use a microSD memory card	24	Received calls	
General Functions	28	Call duration	
Making and answering calls		Call costs	43
Entering text	30	Data information	
Changing the text input mode	31		
Selecting functions and options	33	Organizer	44
In-call menu	34	Calendar	
Menu Tree	38	Memo	
		To do	45
		Multimedia	46
		MP3 player	
		All songs	47
		My playlist	
		Settings	
		Camera	48

Video camera	50
FM Radio	51
Voice recorder	52

Messaging 53

New message

Message

E-mail 55

Inbox 56

E-mail box 57

Drafts

Outbox 58

Sent 59

Listen to voicemail

Info message

Read 60

Topics

Templates

Text templates

Multimedia templates 61

Settings 62

Text message

Multimedia message 63

E-mail 64

Voicemail number 66

Service message

Info message

My stuff 68

Images

Sounds 69

Videos 70

Others 71

Profiles 72

General

Silent

Vibrate only

Outdoor

Headset

Activate

Personalize

Contacts 74

Search

New contact 75

Speed dials 76

Groups 76

Copy all

Delete all

Table of Contents

Settings 77

View options

Backup Contacts

Restore Contacts

Information

Service dial number

Own number

My business card

Tools 78

Alarm clock

Calculator

Stopwatch 79

Unit converter

World clock

SIM services

Browser 80

Home 81

Bookmarks

Enter address 82

History

Saved pages

Settings

Network profiles

Rendering mode

Cache 83

Cookies

Security certificates

Show image

Java script

Information

Connectivity 84

Bluetooth

Network 86

Network selection

GPRS attach 87

Access Point

USB connection mode 89

Settings 90

Date & Time

Set date

Date format

Set time

Time format

Auto update

Languages

Display

Wallpaper	90	Anti Theft Mobile Tracker	96
Clock		Fixed dial number	
Backlight timer		Change codes	
Brightness		Flight mode	97
Home screen shortcut	91	Power save	
Font size		Reset	
Theme		Memory status	
Menu style			
Dialing			
Standby text		Accessories	98
Network name		Technical data	99
Shortcut		MANUFACTURER'S WARRANTY	
Call			101
Call divert			
Call barring	92		
Fixed dial number	93		
Answer mode	94		
Send my number			
Call waiting			
Minute minder			
Auto redial			
Select line	95		
Send DTMF tones			
Security			
PIN code request			
Phone lock			

Introduction

Congratulations on your purchase of the advanced and compact KF300 mobile phone, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



For Your Safety

WARNING!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*
- *Don't charge the handset near flammable material as the handset can become hot and create a fire hazard.*
- *Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.*

CAUTION!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed of in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*
- *Risk of explosion if battery is replaced by an incorrect type.*

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF300 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.833 W/kg (10g) and when worn on the body is 0.594 W/kg(10g)
- ▶ This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body.

- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

Warning!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
 - ▶ Keep away from electrical appliances such as TVs, radios, and personal computers.
 - ▶ The unit should be kept away from heat sources such as radiators or cookers.
 - ▶ Do not drop.
 - ▶ Do not subject this unit to mechanical vibration or shock.
 - ▶ Switch off the phone in any area where you are required by special regulations.
- For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
 - ▶ Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
 - ▶ Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
 - ▶ Do not charge the phone when it is on soft furnishings.

Guidelines for safe and efficient use

- ▶ The phone should be charged in a well ventilated area.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- ▶ When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- ▶ If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive environment

- ▶ Do not use the phone at a refueling point.
- ▶ Do not use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn your mobile phone off before boarding any aircraft.
- ▶ Do not use it on the ground without permission from the crew.

Guidelines for safe and efficient use

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ There is risk of explosion if the battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

- ▶ If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- ▶ Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- ▶ Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- ▶ Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- ▶ Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, drive safely.
- ▶ If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.

Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

Guidelines for safe and efficient use

- ▶ Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- ▶ Use your wireless phone to call emergency services for yourself or others. Dial 0-0-0 local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone! Dial 1-1-1 for local emergency in New Zealand and Dial 1-1-2 for international emergency.
- ▶ Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

KF300 features

Parts of the phone

1. Earpiece

2. Main LCD

3. Send key

- ▶ Dials a phone number and answers a call.
- ▶ **In standby mode:** Shows history of calls.

4. Alpha numeric keys

- ▶ **In standby mode:**
Hold down to dial the input numbers.
 - 0+** – International calls
 - 1+** – Activate Voice mail centre menu
 - 2+** to **9+** – Speed dials
- ▶ **In editing mode:**
Enter numbers & characters

5. Clear key

- ▶ Clears a character with each press. Hold the key down to clear all input.

6. End key

- ▶ switch on/off (hold down)
- ▶ End or reject a call.

7. Microphone



KF300 features



1. Alarm Hot key

- ▶ Go to Alarm Menu

2. Schdeule Hot key


- ▶ Go to Schedule Menu

3. Message Hot key

- ▶ Go to Message menu

4. Favorites Hot key

- ▶ Go to Favorites Menu

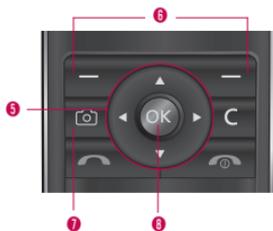

5. Navigation key

- ▶ In standby mode:

- Briefly: Go to Image list
- Briefly: Go to Contacts list
- Briefly: Go to Profiles Menu
- Briefly: Go to MP3 Player Menu

- ▶ In menu: Scroll up & down

6. Soft keys

(Left soft key / Right soft key)

- ▶ These keys perform the function Indicated in the bottom of the display.

7. Camera Hot key

- ▶ Go to Camera preview.

8. Confirm key / OK key

- ▶ Selects menu options and confirms actions.



1. Side keys

- ▶ **In standby mode (opened):**
Keypad tones volume adjustment
- ▶ **In standby mode (closed):**
Show Date & Time by turns
- ▶ **During a call:** Earpiece volume adjustment
- ▶ **During playing MP3 music:**
Audio volume adjustment

2. Headset/Charger/USB cable connector

3. Camera lens

4. Sub LCD



KF300 features

KF300 features



Display Information



Area	Description
First line	Displays various icons.
Middle lines	Displays messages, instructions and any information that you enter, such as number to be dialled.
Last line	Shows the functions currently assigned to the two soft keys.

On-Screen Icons

The screen displays several icons. There are described below.

Icon	Description
	Indicates the strength of the network signal.*

Note

* The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and bad audio.

Please take the network bars as indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

KF300 features

Icon	Description
	Indicates that GPRS service is available.
	Indicates that flight mode has been activated.
	Indicates that a call is in progress.
	All calls are diverted.
	Indicates that the phone is accessing the Browser.
	Indicates that you are using GPRS.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Indicates that you have a schedule.

Icon	Description
	Indicates that external memory is inserted.
	You have received a message.
	You have received a voice mail.
	General menu in profile.
	Silent menu in profile.
	Vibrate only menu in profile.
	Outdoor menu in profile.
	Headset menu in profile.
	Tells you the status of the battery.
	Indicates that external memory is unformatted or is unsupported by the phone.

Getting started

Inserting the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1. Remove the battery cover.

Press the battery release latch and slide the battery cover toward the bottom of the phone. And remove the battery cover.



Note

Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Remove the battery.

Hold the top edge of the battery and lift the battery from the battery compartment.



3. Inserting the SIM card.

Inserting the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



Inserting the SIM card



Remove the SIM card

Getting started

Caution!

The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

4. Inserting the battery.

Inserting the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.



5. Replace the battery cover.

Lay the battery cover in place of the phone and slide it until the latch clicks.



Charging the Battery

To connect the main adapter to the phone, you must have installed the battery.



1. With the battery in position in the phone, connect the lead from the travel adapter to the socket on the left side of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.

2. Connect the other end of the mains adapter to the mains socket. Use only the included travel charger.
3. The moving bars of battery icon will stop after charging is complete.

Caution!

- *Do not force the connector as this may damage the phone and/or the travel adapter.*
- *Installing the battery pack charger vertically to wall power outlet.*
- *If you use the battery pack charger out of your own country, use an attachment plug adapter for the proper configuration.*
- *Do not remove your battery or the SIM card while charging.*

WARNING!

- *Unplug the power cord and charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items such as animal teeth, nails, come into contact with the battery. There is a risk of this causing a fire.*
- *Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.*

Disconnecting the adapter

1. When charging is finished, the moving bars of the battery icon stop and 'Battery Full unplug the charger' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the travel adapter from the phone as shown in the diagram below.



Getting started

Note

- ▶ Ensure the battery is fully charged before using the phone for the first time.
- ▶ Do not remove the battery or SIM card while charging.
- ▶ In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery.

How to use a microSD memory card



<microSD memory card>

< How to install a microSD memory card >

1. Turn the phone off. Inserting or removing the memory card when the phone is on may damage the files stored in the memory card.
2. Open the slot protection.



3. Insert the memory card into the slot. The gold contacts must be kept on the back of the microSD memory card. If the memory card doesn't go into the slot easily, you may be trying to installing it in the wrong way or there could be a foreign object in the slot.



4. Close the slot protection.
5. To remove the memory card, turn the phone off. Open the slot protection and carefully extract the memory card.

Note

- ▶ Avoid using the memory card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.
- ▶ The card is designed to fit easily into the system one way only.
- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any memory cards other than microSD cards.

Note

- ▶ If the microSD has been formatted using FAT32, format the microSD using FAT16 again.
- ▶ After you insert microSD card into your phone, please check the icon area on your screen.
- ▶ If the memory error icon  is displayed, your memory card is not formatted or is unsupported by the phone.
- ▶ In this case, you have to try to format your memory card.
- ▶ If the memory error icon is still displayed on icon area, please contact service center.

For more information on the microSD, please refer to the memory card instruction manual.

Memory card**Installing a memory card**

You can expand the memory space available on your phone using a memory card. The KF300 will support up to a 2GB memory card.

Getting started

Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu** → **Settings** → **Memory status** → **External memory**, then press the OK key.

This operation should only be done when you insert the memory card for the first time. During formatting various folders will be created for different data types.

Turning your handset on

Ensure that your SIM card is in your handset and the battery is charged. Press and hold the end key until the power comes on. Enter the SIM PIN code that was supplied with your SIM card if the PIN code request is set to On. After a few seconds you will be registered on the network.

Turning your handset off

Press and hold the end key until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

Access Codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using Change codes feature of Settings menu.

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is set to Enable, your phone will request the PIN code every time the phone is switched on.

When the PIN code request is set to Disable, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as advice of **Call costs and Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network service provider for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.

Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Reset settings menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorized use of the phone. The security code default setting can be modified from the Security menu.

General Functions

Making and answering calls

Making a call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  key to make the call.
4. To end the call, press the  key.

Making a call from the call history list

1. In standby mode, press the  key, and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press the  key.

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

Ending a call

When you have finished your call, press the  key.

Making a call from the Contacts

You can save the names and phone numbers dialled frequently in the SIM card as well as the phone memory to the contacts list. You can dial a number by simply looking up the desired name in the contacts.

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if saved in the contacts) is displayed.

1. To answer an incoming call, open the phone and press the Send key. You can change the answer mode to what you want by using the Answer mode feature.

Note

If Any key has been set as the answer mode, any key press will answer a call except for the  key or the right soft key.

- ▶ To reject an incoming call, press and hold side down key on the left side of the phone without opening the phone.
 - ▶ You can answer a call while using the Contacts or other menu features.
2. To end the call, close the flip or press the  key.

General Functions

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the contacts, writing a message, creating a personal greeting. The following text input methods are available in the phone.

T9 (T9 Abc) mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 Mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.
2. Change the text input mode by pressing the **☰** key. You can check the current text input mode in the upper right corner of the LCD screen.

Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys **2-9** to **9-0**. Press one key per letter.
 - ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - ▶ If the word is still incorrect after typing completely, press the **☰** key once or more to cycle through the other word options.

Example

Press 4663 to type **Good**

- ▶ If the desired word is missing from the word choice list, add it using the ABC mode.
- ▶ You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.

General Functions

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the Right navigation key.
To delete letters, press **C**. Press and hold down **C** to erase the letters continuously.

Using the ABC mode

Use the **2=** to **9=** keys to enter your text.

1. Press the key labelled with the required letter:
 - ▶ Once for the first letter
 - ▶ Twice for the second letter
 - ▶ And so on
2. To insert a space, press the right navigation key  once or press "0" after typing word.
To delete letters, press the **C** key. Press and hold down the **C** key to clear the whole text.

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the symbol mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert** → **Symbol**. Use the navigation and numeric keys to select the desired symbol and press the OK key.

Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked. Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.



Press the left soft key to access the available Menu.

Press the right soft key to access the available options.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

Making a Second Call (Network Dependent)

You can search and dial the number from **Contacts** to make a second call.

Swapping Between Two Calls

To switch between two calls, press the  key or the left soft key, and then select Swap Call.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call.

A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting feature.

If **Call waiting** is on, you can put the first call on hold and answer the second, by pressing the left soft key or the send key.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the  key.

Muting the Microphone

You can mute the microphone during a call by pressing the right soft key [Mute]. The handset can be unmuted by pressing the right soft key [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

DTMF tones while calling

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) press the left soft key [Options] followed by Enable DTMF. Select Disable DTMF to disable DTMF tones. DTMF tones are normally on.

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.

A conference call can only be set up when you have one active call and one call on hold, both calls having been answered.

In-call menu

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call

You can make a second call while currently in call. Enter the second number and press the  key.

When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

Activate the Conference Call on Hold

To activate a conference call on hold, press the  key. Alternatively press the left soft key [Options] and select Join all/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key [Options] followed by Conference call.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the  key.

Menu Tree

The menu in this phone can be displayed in 2 ways. The menu in this phone can be displayed in either Grid view or List View.

Please note that menu number options are different in each view.

The default setting on the phone is set to show the menu in grid view, so therefore all the menu number selections throughout the manual are shown according to that setting.

You can go to the desired menu using the left soft key [Menu], navigation keys and the OK key. And you can also take a shortcut by pressing the corresponding number key of desired menu after pressing the left soft key [Menu].

1. Games & Apps	2. Call history	3. Organizer
1.1 Games	2.1 All calls	3.1 Calendar
1.2 Applications	2.2 Missed calls	3.2 Memo
1.3 Network profiles	2.3 Dialed calls	3.3 To do
	2.4 Received calls	4. Multimedia
	2.5 Call duration	4.1 MP3 player
	2.6 Call costs	4.2 Camera
	2.7 Data information	4.3 Video camera
		4.4 FM radio
		4.5 Voice recorder

5. Messaging
5.1 New message
5.2 Inbox
5.3 E-mail box
5.4 Drafts
5.5 Outbox
5.6 Sent
5.7 Listen to voicemail
5.8 Info message
5.9 Templates
5.0 Settings
6. My stuff
6.1 Images
6.2 Sounds
6.3 Videos
6.4 Others
7. Profiles
7.1 General
7.2 Silent
7.3 Vibrate only
7.4 Outdoor
7.5 Headset

8. Contacts
8.1 Search
8.2 New contact
8.3 Speed dials
8.4 Groups
8.5 Copy all
8.6 Delete all
8.7 Settings
8.8 Information
9. Tools
9.1 Alarm clock
9.2 Calculator
9.3 Stopwatch
9.4 Unit converter
9.5 World clock
9.6 SIM services

*. Browser
*.1 Home
*.2 Bookmarks
*.3 Enter address
*.4 History
*.5 Saved pages
*.6 Settings
*.7 Information
0. Connectivity
0.1 Bluetooth
0.2 Network
0.3 USB connection mode
#. Settings
#.1 Date & Time
#.2 Languages
#.3 Display
#.4 Shortcut
#.5 Call
#.6 Security
#.7 Flight mode
#.8 Power save
#.9 Reset
#.0 Memory status

Games & Apps

Games

Menu 1.1

You can access a great selection of games on your phone.

Note

Java™ is a technology developed by Sun Microsystems. There are two methods to install Java Applet. The first method, Similar to the way you would download the Java Applet using the standard MS Internet Explorer browsers, Java MIDlet can be downloaded using the Browser enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the Games or Applications menu where you can select, execute, or delete. The Java program files saved in the phone are in JAD or JAR format.

Note

The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

The other method uses the Java Applet in External memory. Go to My stuff -> External memory -> Others, and then select either .jad or .jar file of Java Applet you want to install in your phone.

Caution

Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Network profiles Menu 1.3

Network profiles menu allows you to see the network information used to connect to the Internet. You can activate or add new profiles.

Applications Menu 1.2

When Applications menu is selected, Java loading screen is displayed. You can select and easily access other applications in this menu. For further details, please contact your service provider.

Call history

You can check the record of missed, received, and Last dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

All calls Menu 2.1

You can view all lists of outgoing or incoming calls.

Missed calls Menu 2.2

Allows you to view missed call records, make a call, send a message, and save the number in the contacts.

Dialled calls Menu 2.3

Allows you to view dialled call records, make a call, send a message, and save the number in the contacts.

Received calls Menu 2.4

Allows you to view received call records, make a call, send a message, and save the number in the contacts.

Call duration Menu 2.5

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.

- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Received calls:** Length of the incoming calls.

Call costs

Menu 2.6

Allows you to check the cost of your last call and all calls.

To check Cost settings, you should check the following menus.

- ▶ **Set credit:** This network service allows you to limit the cost of your calls by selected charging units. If you select Read, the number of remaining unit is shown. If you select Change, you can change your change limit.
- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.

- ▶ **Auto display:** This network service allows you to see automatically the cost of your last calls. If set to On, you can see the last cost when the call is released.

Data information

Menu 2.7

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you were online.

Organizer

Calendar

Menu 3.1

You can refer to your schedule by months. The cursor is on the current date, and the registered date is marked.

Each press of		skips back a year.
		skips forward a year.
		moves to today.
		skips back a month.
		skips forward a month.

You can view the schedule note or memo for the chosen day by pressing the OK key.

- ▶ **View:** You can view the schedule note or memo for the chosen day.
- ▶ **New schedule:** Select this to enter a new schedule.
- ▶ **Scheduler tone:** You can set the scheduler tone.

- ▶ **All schedules:** You can display all schedules.
- ▶ **Go to date:** You can go to the chosen date directly.
- ▶ **Delete old:** Select this to delete the expired schedule notes that you have already been notified of.
- ▶ **Delete all:** Select this to delete all the schedules.

Memo

Menu 3.2

You can add new memo, view and manage saved memos.

1. If the entry is empty, press the left soft key [New] and enter the contents of the memo. You can save the memo to the list by the left soft key [Options] then choose [Save].
2. If you have saved memos, you can access following options with the left soft key [Options] : **View, Delete, New memo, Send via, Edit, Multi delete, Delete all.**

Note

If you want to change the text input mode, press the  key.

To do

Menu 3.3

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

1. If the entry is empty, press the left soft key [New].
2. Input the **Due date**, **Note**, **Priority**, and **Status**.
3. When you have finished entering the data, press the left soft key [Save].
4. You can manage saved to do notes by pressing the left soft key [Options].

Multimedia

MP3 player

Menu 4.1

The KF300 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone using a compatible headset or via the internal loudspeaker.

Note

Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- **MPEG-2 Layer III, MPEG-2.5 Layer III:** Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.

- **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- **AAC+:** V1: (Bit rate 16~128Kbps)
V2 : (Bit rate 16~48Kbps)
(Sampling frequency from 8KHz to 48KHz)

Note

KF300 doesn't support the variable bit rate of all mentioned file types. Therefore, you can't change the file from MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the **Mass Storage**.

You connect the phone to a PC using the USB cable and then choose removable disk through windows explorer. After you copy songs in removable disk, you should execute safe remove from your system.

Note

- ▶ You should copy MP3 to Sounds/MP3 folder. If you copy the file to another folder, you can't see the MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.

All songs (Menu 4.1.1)

You can see all the music files.

My playlist (Menu 4.1.2)

You can set the music files of your taste.

Settings (Menu 4.1.3)

- ▶ **Shuffle:** If you select **On**, you can listen to the music randomly.
- ▶ **Repeat:** This menu allows to set the play mode: **Off**, **One**, **All**.

▶ **Equalizer:** This menu helps you to adjust various of environment on listening to the music.

▶ **Player skin:** This menu allows to change the background of main LCD on playing MP3 file.

Note

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Multimedia

Camera

Menu 4.2

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

Note

When using the camera, power consumption increases. If the battery is too low, you may not be able to use the **Camera** feature, please recharge the battery before use.

• To take a picture

- To take clear pictures, press the camera  key while holding the camera without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).
- Handle carefully since the camera is vulnerable to shock and use a soft cloth when cleaning the camera lens.

- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.

1. Press the camera  key in standby mode.
2. Focus on the subject to capture the image, and then press the camera  key or the OK key.
3. The photo you have taken is automatically saved in the **Images** folder of **My stuff**. After taking a photo, you can select the submenus by pressing the left soft key [Options].

Before taking a photo, you can set the following options by pressing the left soft key [Options].

- ▶ **Resolution:** Allows you to set the image size. (320*240/640*480/1280*1024/1600*1200)
- ▶ **Quality:** Allows you to set the image quality from **Normal**, **Fine** and **Super fine**.

- ▶ **Self timer:** Allows you to select the delay time (Off/3 Secs/5 Secs/10 Secs). Then the phone takes a photo after the specified time.
- ▶ **View option:** You can set the view mode. (Full image/Full screen)
- ▶ **Save to:** You can set the save option for a picture. (Phone/External)
- ▶ **Multi shot:** allows you to take multishot-photos successively.
- ▶ **Effects:** 4 settings are available. (Off/Sepia/Mono/Negative)
- ▶ **White balance:** Allows you to change the settings according to the enviroment. (Auto/Daylight/Incandescent/Cloudy/Fluorescent/Nightmode)
- ▶ **Shutter tone:** You can set the sound when taking a picture.
- ▶ **Reset settings:** Allows you to reset the settings.

Note

- ▶ You can adjust the brightness by using the .
- ▶ The zoom function varies depending on the resolution the camera is set to. For example, if the camera resolution is set to the highest setting you can't zoom.

3. the photo you have taken is automatically saved in the Images folder of My stuff. After taking a photo, you can select the submenus by pressing the left soft key [Options].
 - ▶ **New photo:** You can take a new photo.
 - ▶ **Set as:** You can set the taken photo as a **Wallpaper/Picture ID**.
 - ▶ **Send via:** You can send the photo via Multimedia message/Bluetooth/Email
 - ▶ **Album:** You can access the **Images** folder of **My stuff**.

Multimedia

Video camera Menu 4.3

You can record and save a video clip.

1. To start recording press the OK key.

As soon as it starts to record a timer will be displayed.

before recording a video clip, you can set the following options by pressing the left soft key [Options].

- ▶ **Video mode:** Allows you to send video file through **MMS** or **General**.
- ▶ **Resolution:** Allows you to set the size. (176x144/320x240)
- ▶ **Quality:** Allows you to set the image quality from **Normal**, **Fine** and **Super fine**.
- ▶ **Save to:** You can set the save option for a video clip. (Phone/External)
- ▶ **Effects:** 4 settings are available. (Off/Sepia/Mono/Negative)

- ▶ **White balance:** Allows you to change the settings according to the environment. (Auto/Daylight/Incandescent/Cloudy/Fluorescent)
 - ▶ **Reset settings:** Allows you to reset the settings.
2. Press the left soft key[Stop]/confirm key/ camera hot key to end the recording.
 3. The video clip you recorded is automatically saved in the **Videos** folder of **My stuff**. After recording a video, you can select the submenus by pressing the left soft key [Options].

- ▶ **New video:** You can record a new video.
 - ▶ **Play:** You can play the recorded video clip.
 - ▶ **Send via:** You can send the video via Multimedia message/**Bluetooth/Email.**
 - ▶ **Album:** You can access the **Videos** folder of **My stuff.**
- ▶ **Edit channel:** You can adjust frequency and change the radio station in the selected channel. You can change the frequency with Left/Right navigation keys and number keys.
 - ▶ **Auto scan:** If you select "Auto scan Now?" Yes, automatically sets the radio channel. And When "Save this station" message will be popped up, if you select Yes, the selected frequency will be stored.
 - ▶ **Reset channels:** You can delete all channels you saved.
 - ▶ **Listen via:** Select this to listen to the radio through Speaker/Wired headset/Bluetooth in the [Options].

FM Radio

Menu 4.4

1. Connect the headset with your phone.
2. After presetting radio channels, you can listen to other channel by pressing the corresponding number key (short press).
3. You can access the following option menus by pressing the left soft key [Options].

Multimedia

Voice recorder Menu 4.5

You can record a voice memo.

1. Press the OK key to start recording. Once recording is started, the message "REC" and the recording time are displayed, talk into the microphone.
2. If you want to finish recording, press the right soft key [Stop]. The recorded file is automatically saved in **Sounds** folder of **My stuff**.
3. If you press the left soft key [Options], you can select the submenus as follow:

- ▶ **New voice record:** You can start a new voice recording.
- ▶ **Play:** You can play the recorded voice memo.
- ▶ **Send via:** You can send the recorded voice via MMS/Bluetooth/E-mail
- ▶ **Album:** You can access the **Sounds** folder of **My stuff**.

Messaging

New message Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Email, as well as the network's service messages.

Message (Menu 5.1.1)

You can write and edit message.

1. Enter the New message menu by pressing the left soft key [OK].
2. If you want to write a new message, select Message.
3. To make text input easier, use T9.
4. Press the left soft key [Options] to attach the following.

Options

▶ **Send to:** Sends text messages.

1. Enter numbers of recipient.
2. Press the down navigation key to add more recipients.
3. You can add phone numbers in the contacts.

4. Press the left soft key [Options] and then select **Send** after entering numbers. The message will automatically be saved in the **Sent** folder. If the message has not been sent, it will remain in the **Outbox** with a failed status.

▶ **Send to Group:** Send message to all Group members.

▶ Insert

- **Image:** You can insert Images that are available for short messages.

- **Sound:** You can insert sounds that are available for short messages.

- **Video:** You can insert Video that are available for message

- **Symbol:** You can add special characters.

- **Text template:** You can use **Text templates** already set in the phone.

- **Emoticon:** You can insert emoticon.

Messaging

- **Name& Number:** You can add phone numbers or email addresses in the contacts.
- **New slide:** Select this to add a new slide.
- **Subject:** Select this to insert a subject.
- **More:** Select this to add a Contact, a My Business card, Schedule, and Memo.
- ▶ **Save to**
 - **Draft:** Stores Messages in Drafts.
 - **Multimedia template:** Stores Message in Multimedia template.
- ▶ **Preview:** You can preview multimedia messages you have created.
- ▶ **Slide duration:** You can set the duration of slide of multimedia message.
- ▶ **Set T9:** Activate/Deactivate T9 input mode by selecting ON/OFF.
- ▶ **Writing language:** Select the language for T9 input mode.
- ▶ **New T9 word:** Select the **New T9 word** for inputting new word into the dictionary.
- ▶ **Clear text:** You can clear text while writing Message.
- ▶ **Exit:** If you select **Exit** while writing a message, you can end the writing message and go back to the New message menu. The message you have written is not saved.

Note

If you select the picture (200K) on writing multimedia message, loading duration will take around 3 seconds at least. Furthermore, you can't activate any key during loading time. After 3 seconds, it is available to write multimedia message.

E-mail (Menu 5.1.2)

To send/receive an e-mail, you should set up the e-mail account.

1. Key in the subject of the e-mail and press the OK key.
2. After writing an e-mail message, press the left soft key [Options]. You can access the following option menus.

- ▶ **Send to:** Enter the e-mail address or select the e-mail address from the contacts.
- ▶ **Insert:** You can add **Symbol/Text template/Name & Number**.
- ▶ **Attachments:** You can add the following: **Image/Video/Sound/New photo/New video/New voice record/Contact/My business card/Schedule/Memo/To do/Others**.
- ▶ **Save to drafts:** Select this to save the message in the **Drafts**.

- ▶ **Edit subject:** You can edit the subject.
 - ▶ **Preview:** You can preview e-mail you wrote.
 - ▶ **Set T9:** Activate/Deactivate T9 input mode by selecting **ON/OFF**.
 - ▶ **Writing language:** Select the language for T9 input mode.
 - ▶ **New T9 word:** Select the **New T9 word** for inputting new word into the dictionary.
 - ▶ **Clear text:** Allows you to delete all the text within the e-mail.
 - ▶ **Exit:** If you select **Exit** while writing a message, you can end the writing message and go back to the **Messaging** menu. The message you have written is not saved.
3. When you have finished writing an email, press the left soft key and select **Send to**.

Messaging

4. Enter the email address of the recipients in the To, Cc, Bcc fields. You can search the contacts by pressing the left soft key [Options].
5. Press the left soft key [Options] and select Send to send the e-mail.

Note

- ▶ Enter the reference e-mail address to forward the e-mail in Cc (Carbon copy) field.
- ▶ Enter a hidden reference e-mail address to forward the e-mail without forwarding information in Bcc (Blind Carbon Copy) field.
- ▶ Only valid e-mail addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (Bcc) fields. When an e-mail address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To, Cc, Bcc address fields.

Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox.

If the phone shows '**No space for SIM message**', you have to delete only SIM messages from Inbox.

* SIM message

SIM message means the message exceptionally stored in SIM card.

For notified multimedia message, you have to wait for downloading and processing of the message.

To read a message, select one of the messages by pressing the left soft key [Options].

The following options are available.

- ▶ **View:** You can view the received messages.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Delete:** You can delete the current message.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.
- ▶ **Save number:** You can save the sender's phone number in the contacts.
- ▶ **Information:** You can view information about received messages.
- ▶ **Multi delete:** After selecting the messages you want to remove, you can delete the selected messages.

- ▶ **Delete all read:** You can delete all messages read.
- ▶ **Delete all:** You can delete all messages.

E-mail box

Menu 5.3

When you access this menu, you can either connect to your remote mailbox to retrieve your new e-mail messages, or you can view the previously retrieved e-mail messages without logging in to the e-mail server.

Drafts

Menu 5.4

Using this menu, you can preset multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

Messaging

- ▶ **View:** You can see the multimedia messages.
- ▶ **Edit:** Modifies the message you choose.
- ▶ **Delete:** Deletes the message you choose.
- ▶ **Information:** You can view information about the message you choose.
- ▶ **Multi delete:** After selecting the messages you want to remove, press the OK key and you can delete the selected messages.
- ▶ **Delete all:** Deletes all of the messages in the folder.

Outbox

Menu 5.5

You can view the list and contents of sending/resending/waiting/send fail in this menu and can also verify if the transmission was successful.

After sending the message successfully, the message will be moved to sent box.

The following options are available.

- ▶ **View:** You can view the message.
- ▶ **Delete:** You can delete the message.
- ▶ **Resend:** You can resend the selected message.
- ▶ **Edit:** Modifies the message you choose.

- ▶ **Information:** You can check information of each message.
- ▶ **Multi delete:** Select and delete the selected messages.
- ▶ **Delete all:** You can delete all messages in the folder.

Sent

Menu 5.6

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

Listen to voicemail

Menu 5.7

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

Once this menu has been selected, simply press the left soft key [OK] to listen to voice mail. You can also hold down the **1=** key in standby mode to listen to voicemail.

Note

When you receive a voicemail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

Info message

Menu 5.8

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Messaging

When you have received an info service message, you can see the popup message showing you that you have received a message or the info service message is directly displayed.

To view the message again or not in standby mode, follow the sequence shown below;

Read (Menu 5.8.1)

1. When you have received an info service message and select **Read** to view the message, it will be displayed on the screen. You can read another message by scrolling the left or right navigation key.
2. The message will be shown until another message is reached.

Topics (Menu 5.8.2) (Dependent to network and subscription)

You can see info service message numbers which you added. If you press the left soft key [Options], you can edit and delete info message category which you added.

You can select info service message numbers in the active list. if you activate an info service number, you can receive messages sent from the number.

Templates Menu 5.9

Text templates (Menu 5.9.1)

You have 6 text templates as below;

- Please, call me back .
- I'm late. I will be there at
- Where are you now?
- I am on the way.
- Urgent! Please, contact.
- I love you!

The following options are available.

- ▶ **View:** You can see selected templates.
- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.
- ▶ **Send via**
 - **Message:** Use this to send the selected template message by Message.
 - **E-mail:** Use this to send the selected template message by E-mail.

- ▶ **Delete:** Deletes the template.
- ▶ **New template:** Use this to create a new template.
- ▶ **Delete all:** Allows you to delete all template messages.

Multimedia templates

(Menu 5.9.2)

You can save a new multimedia template and edit the saved multimedia templates.

After saving new template, you can use the following options.

- ▶ **View:** You can see multimedia templates.
- ▶ **Edit:** Use this to write a new message or edit the selected multimedia template message from the multimedia template list.
- ▶ **Send:** Use this to send the multimedia template message by MMS.

Messaging

- ▶ **Delete:** Deletes the multimedia template.
- ▶ **New template:** Use this to create a new template.
- ▶ **Delete all:** Allows you to delete all multimedia messages.
- ▶ **Delivery report:** If you set to ON, you can check whether your message is sent successfully.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

Settings

Menu 5.0

Text message (Menu 5.0.1)

- ▶ **Message types:**
Text, Voice, Fax, Paging, X.400, Email, ERMES
Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.
- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
- ▶ **Message center number:** you should enter the SMS Centre number. Normally the SMS Centre number is read from the SIM card.
- ▶ **Character encoding:** Full support/ Reduced support
 - **Full support:** Message with single byte character is normally encoded in Default alphabet(GSM7). Message with double-byte character is automatically encoded in unicode(UCS2).

- **Reduced support:** Message with even double byte character is encoded in single byte. Please note that double byte characters with accent may be converted into single byte character without accent.

Multimedia message

(Menu 5.0.2)

- ▶ **Subject:** You can enter multimedia messages subject when this menu is on.
 - ▶ **Slide duration:** Displays the duration of each page when writing the message.
 - ▶ **Delivery time:** Delivers your message at a specific time.
 - ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
 - ▶ **Delivery reports:** You can set ON/OFF in these menus.
 - **Request report:** Request reports to check out whether your messages are sent to the recipients successfully.
 - **Allow report:** When the senders request delivery reports, you can decide the report to be delivered or not.
 - ▶ **Read report:** You can set ON/OFF in these menus.
 - **Request report:** Request reports to check out whether your messages are read by the recipients

Messaging

- **Allow report:** When the senders request read reports, you can decide the report to be delivered or not.

▶ **Auto download:** You can receive multimedia messages automatically from Home network / Roaming network when you select 'Automatic' in this menu. But when you select 'Manual', you receive only notification messages in the inbox and then you can decide to receive multimedia messages in the option menu of Notifications.

▶ **Network profiles:** If you select multimedia message server, you can set URL for multimedia message server.

▶ **Permitted message types**

- **Personal:** Personal message.

- **Advertisements:** Commercial message.

- **Information:** Necessary information.

E-mail (Menu 5.0.3)

You can configure settings for receiving and transmitting e-mail.

E-mail accounts (Menu 5.0.3.1)

1. Select **New** from the **Email account** menu options.

2. The following items need to be configured.

- **Account name:** You can edit the e-mail account name.

- **E-mail address:** Enter the e-mail address given to you by your service provider.

- **My name:** Enter a user name.

- **Incoming mail server:** Enter the POP3 or IMAP4 address that receives your e-mail.
 - **User name:** Allows you to enter the user ID of the POP3 or IMAP4 server.
 - **Password:** Allows you to enter the user password of the POP3 or IMAP4 server.
 - **Outgoing mail server:** Allows you to enter the SMTP address.
 - **Outgoing mail authentication:** When you send the mail, you can set authentication whether or not.
 - **Outgoing server ID:** Allows you to enter the user ID of the SMTP server.
 - **Outgoing server password:** Allows you to enter the user password of the SMTP server.
 - **Reply email address:** You can set up the reply e-mail address.
 - **Incoming port number:** Enter the POP3 or IMAP4 port number that receives your e-mail.
 - **Outgoing port number:** Enter the Port number of computer that sends your e-mail.
 - **Protocol type:** Choose your protocol type.(POP3/IMAP4)
 - **APOP secure login:** Decide whether to activate APOP secure login or not. When the mailbox type is **IMAP4**, APOP secure login is always set to **OFF**.
 - **Maximum receive size:** Set up the size of files that can receive. (50KB/100KB/200KB/300KB)
 - **Save to server:** Select **On** to save the email on the server.
- Using the left soft key [Options], you can set the advanced settings.

Messaging

- **Insert signature:** Select **On** to add your signature to your email messages.

- **Retrieve download:** You can select the download option.(All/Headers only)

- **Auto retrieving:** You can set up the auto retrieving setting.

Access point (Menu 5.0.3.2)

You can select a configured access point to connect to the Internet.

Retrieve interval (Menu 5.0.3.3)

You can select the auto retrieve interval.

Signature (Menu 5.0.3.4)

You can make your signature.

Voicemail number (Menu 5.0.4)

You can receive voicemail if your network service provider supports this feature. When a new voicemail is received, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

Service message (Menu 5.0.5)

You can set the option whether you will receive the message or not.

Info message (Menu 5.0.6)

► Receive

- **On:** If you select this menu, your phone will receive Info service messages.
- **Off:** If you select this menu, your phone will not receive Info service messages any more.

▶ **Alerts**

- **On:** Your phone will beep when you have received Info service message numbers.
- **Off:** Your phone will not beep even though you have received info service messages.

▶ **Languages**

You can select the language you want by pressing the OK key. Then, the info service message will be shown in the language that you selected.

My stuff

Images

Menu 6.1

To view the image in details, press the OK key.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **View:** You can see the selected file.
- ▶ **Delete:** Delete a selected file.
- ▶ **Set as**
 - **Wallpaper:** Currently selected image can be set as a **Wallpaper**.
 - **Picture ID:** Currently selected image can be set as a **Picture ID**.
- ▶ **Send via:** Send the selected file to another device via **Message, Bluetooth, or Email**.

▶ File

- **Rename:** Change the file name of selected file. You cannot change the extension of file.
- **Move to folder:** Move the selected file to the folder.
- **Move to external memory / Move to phone memory:** Move the selected file to the external memory (if inserted) or multimedia memory in your phone.
- **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory or multimedia memory in your phone.
- **Information:** Show the file information.

- ▶ **Print via Bluetooth:** Most pictures that you have taken in the camera mode and downloaded through Browser can be transmitted via Bluetooth to a printer.
- ▶ **Slide show:** You can view a slide show of the files you stored.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files by as **Date**, **Type** and **Name**.
- ▶ **Thumbnail view/List view:** Allows you to set the view type.

Sounds

Menu 6.2

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Play:** You can play the selected file.
- ▶ **Delete:** Delete a selected file.
- ▶ **Set as:** Currently selected sound can be set as a **Ringtone/ Ringtone ID/Message tones**.

My stuff

- ▶ **Send via:** Send the selected file to another device via **Message, Bluetooth, or Email.**
- ▶ **File**
 - **Rename:** Changes the file name of the selected file.
 - **Move to folder:** Move the selected file to the folder.
 - **Move to external memory / Move to phone memory:** Move the selected file to the external memory (if inserted) or multimedia memory in your phone.
 - **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory (if inserted) or multimedia memory in your phone.
 - **Information:** Show the selected file information.

- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as **Date, Type and Name.**

Videos

Menu 6.3

Show the list of 3GP, 3G2 files at My media/Videos in Multimedia memory. Supports only .3gp files, that are encoded with MPEG4 and h.263 videocodecs and AMR audio-codec.

Here you can manage or send saved video clips. When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Open:** You can open the selected file.
- ▶ **Delete:** Delete a selected file.
- ▶ **Send via:** Send the selected file to another device via **Message**, **Bluetooth**, or **Email**.
- ▶ **File**
 - **Rename:** Change the file name of selected file. The maximum length of characters is 59.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as **Date**, **Type** and **Name**.

Others

Menu 6.4

Other files except images, sounds, videos are stored in this folder.

Warning!

You can't use the following characters: \/:? < > |*

- **Move to folder:** Move the selected file to the folder.
- **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory (if inserted) or multimedia memory in your phone.
- **Information:** Shows the file information.

Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

Activate (Menu 7.X.1)

1. A list of profiles is displayed.
2. In the Profiles list, scroll to the profile you want to activate and press the left soft key [OK] or the OK key.
3. Then, select **Activate**.

Personalize (Menu 7.X.2)

Scroll to the desired profile in the Profiles list. After pressing the left soft key or the OK key, select **Personalize**.

The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tones:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tones:** Select the alert tone for messages.
- ▶ **Message volume:** Set the volume of Message tone.
- ▶ **Keypad tones:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.

- ▶ **Flip tones:** Allows to set the flip tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.

Note

All profiles cannot be renamed.

Contacts

Search

Menu 8.1

1. Select **Search** and enter the name that you want to search.
2. After finding the desired contact, you can make a call to the number by pressing the send key.
3. If you want to edit, delete, copy an entry select the left soft key [Options].

The following menu will be displayed.

- ▶ **View:** You can view each entry in details.
- ▶ **Edit:** You can edit the selected contact.
- ▶ **New message:** After you have found the number you want, you can send a Message to the selected number.
- ▶ **Send via:** You can send the data of the contacts via **Text message/Multimedia message/Bluetooth/Email**.
- ▶ **Delete:** You can delete an entry.
- ▶ **New Contact:** After selecting the place (SIM/Phone) you want to save, you can add to the contacts.
- ▶ **Add to speed dial:** Allows you to set the selected number to add a speed dial list.
- ▶ **Multi delete:** Allows you to remove a number of files selected.
- ▶ **Copy to SIM / Copy to phone:** You can copy an entry from phone to SIM or from SIM to phone.
- ▶ **Main number:** If a contact has more than one number stored, select the one that you use most often. This main number will be displayed first.

New contact

Menu 8.2

You can add or save a new contact. You can enter the name, different phone numbers and email addresses of a new contact. You can also assign the contact to groups, include a picture, assign a specific ringtone and enter the anniversary for the contact. You can enter and manage contact addresses depending on the memory usage.

Note

- ▶ The contact entry fields may differ when you add or save a contact in the SIM address in the SIM.
- ▶ Maximum stored name and number length depends on SIM card type.

Speed dials

Menu 8.3

Using this menu you can manage speed dials.

You can assign any of the keys **2-9** to **9-1** with a name list entry. You can call directly by pressing this key.

1. Open the **Contacts** first by pressing the right soft key [Contacts] in standby mode.
2. Scroll to **Speed dial**, then press the left soft key [OK].
3. If you want to add speed dial, select <Empty> by pressing the left soft key [Assign]. Then, you can search the name in the contacts.
4. After assigning the number as speed dial, you can change and delete the entry. You can also make a call or send a message by this number.

Contacts

Groups

Menu 8.4

You can list up the members for each group. In the handset memory, there are 7 default groups: **Family, Friends, Colleagues, VIP, Group 1, Group 2, and Group 3.**

Select the group name that you want to manage by pressing the left soft key [Option]. The following submenu will be displayed.

- ▶ **View members:** Shows the group members you have selected.
- ▶ **Group ringtone:** Allows you to specify ring tone for the group members call.
- ▶ **Group icon:** Allows you to select the icon dependent on group.
- ▶ **Add member:** You can add group members.
- ▶ **Remove member:** You can remove the member from the group member list. But the name and the number will remain in the **Contacts.**

- ▶ **Rename:** You can change a group name.
- ▶ **Reset all:** Allows you to reset all contacts.

Copy all

Menu 8.5

You can copy entries from SIM card memory to phone memory and vice versa.

- ▶ **SIM to phone:** You can copy the entry from SIM card to phone memory.
- ▶ **Phone to SIM:** You can copy the entry from phone memory to SIM card.

Delete all

Menu 8.6

You can delete all entries from SIM card or phone memory. This function requires the security code.

Settings

Menu 8.7

View options (Menu 8.7.1)

You can set the contact display option.

- ▶ **Name only:** Set the contact information with only name.
- ▶ **Name & Number:** Set the contact information with name and number.
- ▶ **With picture:** Set the contact information with picture.

Backup Contacts (Menu 8.7.2)

(External Memory dependent)

You can save Contacts data to the others folder in external memory.

Restore Contacts (Menu 8.7.3)

(External Memory dependent)

You can save Vcard format (*.vcf) existing in **My stuff** -> **External memory** -> **Others** to the **Contacts**.

Information

Menu 8.8

Service dial number (Menu 8.8.1)

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the SIM card).

Own number (Menu 8.8.2) (SIM dependent)

You can save and check your own number in SIM card.

My business card (Menu 8.8.3)

This option allows you to create your own business card featuring name, any numbers and email. To create a new business card, press the left soft key [New] and enter the information into the fields. If you want to edit, delete or to send a business card, select the left soft key [Options].

Tools

Alarm clock

Menu 9.1

You can set the alarm clock to go on at a specified time.

1. If there is no alarm, press the left soft key [New] to add a new alarm.
2. Set or cancel the alarm using the options for specifying whether the alarm is on or by choosing the alarm time.
3. Select the repeat period: **Once**, **Daily**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun**.
4. Select the alarm tone by using **Options** → **Sounds**. You can press the up/down navigation keys and select the sound you want, then press the left soft key [OK].
5. Edit the title and press the left soft key [Save].

Calculator

Menu 9.2

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions.

1. You can enter numbers by using the number keys, and the operators by using navigation key.

Note

- ▶ To erase any mistake or clear the display, use the **CE** key.
- ▶ To include a decimal point, press the **DEC** key.
- ▶ To include parentheses, press the **⌘** key.

2. To calculate the result, press the **OK** key.
3. After calculation, press the right soft key to return to the initial state.

Stopwatch

Menu 9.3

This menu allows you to record the elapsed time of an event.

1. Press the left soft key [Start] to take time and record the lap time by pressing the right soft key [Lap].
2. Press the left soft key [Stop] to ascertain the record of lap time.
3. Press the right soft key [Reset] to default condition.

Unit converter

Menu 9.4

This converts any measurement into a unit you want. There are 7 types that can be converted into units:

Currency, Area, Length, Weight, Temperature, Volume and Velocity.

World clock

Menu 9.5

The World clock function provides time information on major cities worldwide.

You can select the following options by pressing the left soft key [Options].

- ▶ **Change time zone:** You can change the time zone by selecting city.
- ▶ **New city:** You can add a desired city.
- ▶ **Daylight saving:** You can apply to daylight saving time.

SIM services

Menu 9.6

(SIM dependent)

With the SIM services menu your phone is future-proof and will support additions to your service provider's service. For more information contact your service provider.

Browser

You can access various Browser (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by Browser service providers.

Check the availability of Browser services, pricing and tariffs with your network operator.

Service providers will also give you instructions on how to use their services.

Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the  key. The phone will return to the idle menu.

Navigating with the Browser

You can surf the Internet using either the phone keys or the browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Icon	Description
	Scrolls each line of the content area
	Returns to the previous page
	Select options and confirm actions

Using the browser menu

There are various menu options available when surfing the Mobile Web.

Note

The browser menus may vary, depending on your browser version.

Home

Menu *.1

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks

Menu *.2

This menu allows you to store the URL of favourite web pages for easy access at a later time.

To create a bookmark

1. Press the left soft key [Options].
2. Select **New bookmark** and press the OK key.
3. After entering the desired name and URL, press the OK key.

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **View:** You can see the selected bookmark.
- ▶ **Edit:** You can edit the selected bookmark.
- ▶ **Delete:** You can delete the selected bookmark.
- ▶ **New bookmark:** Select this to create a new bookmark.
- ▶ **New folder:** Select this to create a new folder.
- ▶ **Move:** You can move the selected bookmark to sub folder.
- ▶ **Copy:** You can copy the selected bookmark.
- ▶ **Send URL via:** Sends the selected bookmark via **Message/Email**.
- ▶ **Multi delete:** Allows you to select and delete saved bookmarks.
- ▶ **Delete all:** Deletes all the bookmarks.

Browser

Enter address Menu *.3

You can connect directly to the site you want. After entering a specific URL, press the left soft key [Options] and select the **Connect**.

History Menu *.4

This menu shows the recently browsed pages.

Saved pages Menu *.5

The phone can save the page on display as an offline file.

Settings Menu *.6

You can set the profile, cache and security related to internet service.

Network profiles (Menu *.6.1)

A profile is the network information used to connect to the Internet.

There are default profiles for some operators, stored in phone memory. It is impossible to rename default profiles.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **View:** You can see the selected profile.
- ▶ **Edit:** You can edit the selected profile.
- ▶ **New profile:** You can add a new profile.
- ▶ **Delete:** Deletes the selected profile from the list.

Rendering mode (Menu *.6.2)

You can adjust the size of URL page when the page is larger than phone screen.

Cache (Menu *.6.3)

The information or services you have accessed are saved in the cache memory of the phone.

Note

A cache is a buffer memory, which is used to save data temporarily.

Cookies (Menu *.6.4)

Enabling cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

Security certificates (Menu *.6.5)

You can see the list of personal certificates that have been stored in your phone.

Show image (Menu *.6.6)

You can select to display image or not during Browser browsing.

Java script (Menu *.6.7)

Select whether to turn Java script on or off.

Information Menu *.7

You can view the information of Browser version.

Connectivity

Bluetooth

Menu 0.1

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect it with compatible Bluetooth headsets, computer applications and so on.

Note

- ▶ If you use LG PC Sync via Bluetooth, you can exchange the data only within Contacts.
- ▶ Depending on the file type, it will be stored in the following folders:
 - **Video (.3gp, mp4):** Videos folder
 - **Image (.bmp, gif, jpg, png):** Images folder
 - **Sound (.amr, wav, aac):** Sounds folder
 - **MP3 (.mp3):** Sounds/MP3 folder
 - **Other files (.txt, html):** Others folder

▶ **Bluetooth on/off**

You can activate or cancel the Bluetooth function.

▶ **Device list**

You can view all devices which your KF300 is already paired to. If you enter Paired devices, you access the options

- **Connect /Disconnect:** After pairing with headset or stereo headset, you should connect with those devices. Then you can use those devices.
- **New:** Allows to search new Bluetooth devices and add them to your phone's list of paired devices. When you select New your handset will start to search for Bluetooth devices within range. Scroll to the desired device and press the left soft key [Pair]. You will then be asked to enter a passcode.

The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.

- **Set as authorized /Set as unauthorized:** Allows you to set an unauthorized connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as unauthorized will mean the headset will automatically connect to the handset each time the headset is powered on.
- **All services:** Allows to view all services which are supported by Bluetooth device.

Connectivity

- **Delete:** Allows to delete a paired Bluetooth device.
- **Rename:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.
- **Delete all:** Allows to delete all the paired Bluetooth devices.
- ▶ **Bluetooth settings**
 - **My visibility:** This indicates whether or not your handset will be visible to other Bluetooth devices.
 - **My name:** You can set the name of Bluetooth device. The default name is LG KF300.
 - **My address:** You can view the address of your Bluetooth device.

Network

Menu 0.2

You can select a network which will be registered either automatically or manually.

Network selection (Menu 0.2.1)

Usually, the network selection is set to **Automatic**.

- ▶ **Automatic:** If you select **Automatic** mode, the phone will automatically search for and select a network for you. Once you have selected **Automatic**, the phone will be set to **Automatic** even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

- ▶ **Preferred:** You can set a list of preferred networks that the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

GPRS attach (Menu 0.2.2)

You can set GPRS service depending on various situations.

- ▶ **Power on**
If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a Browser or PC dial-up application creates the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

- ▶ **When needed**

If you select this menu, the GPRS connection is established when you connect a Browser or application service and closed when you end the Browser or application connection.

Access Point (Menu 0.2.3)

- ▶ **View:** You can see the selected profile.
- ▶ **Edit:** You can edit the selected profile.
- ▶ **New access point**
 - **Name:** You can type the network name.
 - **Bearer:** You can set the bearer data service. Data/GPRS.

Connectivity

<Data settings>

Appears only if you select Data Settings as a Bearer/service.

- **Dial number:** Enter the telephone number to dial to access your Browser gateway.
- **User ID:** The users identity for your dial-up server (and NOT the Browser gateway).
- **Password:** The password required by your dial-up server (and NOT the Browser gateway) to identify you.
- **Call type:** Select the type of data call; Analogue or Digital (ISDN).
- **Linger time:** You need to enter timeout period.

After entering that, the Browser navigation service will be unavailable if any data is not input or transferred.

- **Primary server:** Input the IP address of the primary DNS server you access.

- **Secondary Server:** Input the IP address of the secondary DNS server you access.

The service settings are only available when GPRS is chosen as a bearer service.

- **APN:** Input the APN of the GPRS.

- **User ID:** The users identify for your APN server.

- **Password:** The password required by your APN server.

- **Primary Server:** Input the IP address of the primary DNS server you access.

- **Secondary server:** Input the IP address of the secondary DNS server you access.

USB connection mode

Menu 0.3

You can choose one mode of Data service or USB Mass storage.

Note

- ▶ Accessories provided with your phone may vary depending on regions. Accessories available for use with your phone can be found on Page 98.

▶ Mass storage

You can connect your phone to your PC, as a USB storage device, using the cable in three ways.

1. Connect the phone to the PC when the idle screen is displayed.
2. Connect the phone while it is performing an operation or menu function, and then move to the idle screen.
3. Connect the phone while it is performing an operation or menu function, and then select the **USB Mass Storage** menu.

When you have finished using the the microSD memory, click Exit and take the following steps.

Caution!

Before you remove the cable, it is necessary that you click Exit. Or, the integrity of transferred data is not guaranteed.

1. Click on the notification area.
[Unplug or Eject Hardware]
2. Select **USB mass Storage Device**, click on **Stop**. The following message will appear: The **USB mass Storage Device** can now be safely removed from the system.
3. Then remove the cable.

▶ Data service

Select the **Data service** menu to use the LG Mobile Sync program.

Settings

Date & Time

Menu #.1

You can set functions relating to the date and time.

Set date (Menu #.1.1)

You can enter the current date.

Date format (Menu #.1.2)

You can set the Date format such as YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY. (D: Day / M: Month / Y: Year)

Set time (Menu #.1.3)

You can enter the current time.

Time format (Menu #.1.4)

Your can set the time format between 24 hours and 12 hours.

Auto update (Menu #.1.5)

Select **On**, the phone will automatically update the date and time.

Languages

Menu #.2

You can change the language for the display texts in your phone. This change will also affect the language Input mode.

Display

Menu #.3

Wallpaper (Menu #.3.1)

You can select the background pictures in standby mode.

Clock (Menu #.3.2)

You can select the clock format to display the clock on the Internal/ External Phone screen.

Backlight timer (Menu #.3.3)

You can set the light-up duration of the display.

Brightness (Menu #.3.4)

You can set the brightness of LCD.

Home screen shortcut

(Menu #.3.5)

You can turn On/Off the shortcut display on the Home screen.

Font size (Menu #.3.6)

You can change the font size for display text in your phone.

Theme (Menu #.3.7)

You can set the screen theme to be displayed on the main screen.

Menu style (Menu #.3.8)

Your phone provides you with **Grid view** and **List view menu style**. Set the menu style by scrolling and pressing the left soft key [OK].

Dialing (Menu #.3.9)

You can set the font style/font size of the numbers which appear in the home screen when you make a call.

Standby text (Menu #.3.0)

You can set the functions of 4 which is displayed in standby mode.

Network name (Menu #.3.*)

If this function is activated, network name will be displayed on LCD.

Shortcut

Menu #.4

You can set the functions of 4 navigation keys for using shortcut in the idle mode.

Call

Menu #.5

You can set the menu relevant to a call by pressing the left soft key [Select] in the **Setting** menu.

Call divert (Menu #.5.1)

The **Call divert** service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

Settings

- ▶ **All voice calls:** Diverts voice calls unconditionally.
- ▶ **If busy:** Diverts voice calls when the phone is in use.
- ▶ **If no reply:** Diverts voice calls which you do not answer.
- ▶ **If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All data calls:** Diverts to a number with a PC connection unconditionally.
- ▶ **All fax calls:** Diverts to a number with a fax connection unconditionally.
- ▶ **Cancel all:** Cancels all call divert service.

The submenus

Call divert menus have the submenus shown below.

- **Activate:** Activate the corresponding service.

To voicemail number: Forwards to message centre. This function is not shown at **All data calls** and **All fax calls** menus.

To other number: Inputs the number for diverting.

To favourite number: You can check recent 5 diverted numbers.

- **Cancel:** Deactivate the corresponding service.
- **View status:** View the status of the corresponding service.

Call barring (Menu #.5.2)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

▶ All outgoing

The barring service for all outgoing calls.

▶ **Outgoing international**

The barring service for all outgoing international calls.

▶ **O/G international except home country**

The barring service for all international outgoing calls when roaming

▶ **All incoming**

The barring service for all incoming calls.

▶ **Incoming when abroad**

The barring service for all incoming calls when roaming.

▶ **Cancel all barrings**

You can cancel all barring services.

▶ **Change password**

You can change the password for Call Barring Service.

The submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.

- **View status**

View the status whether the calls are barred or not.

**Fixed dial number (Menu #.5.3)
(SIM dependent)**

▶ You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

▶ **On**

You can restrict your outgoing calls to selected phone numbers.

▶ **Off**

You can cancel fixed dialling function.

▶ **Number list**

You can view the number list saved as Fixed dial number

Settings

Answer mode (Menu #.5.4)

- ▶ **Flip open:** If you select this menu, you can receive an incoming call when you open the flip.
- ▶ **Any key:** If you select this menu, you can receive a call by pressing any key except the end key and the right soft key.
- ▶ **Send key only:** If you select this menu, you can receive a call by only pressing the send key.

Send my number (Menu #.5.5) (network and subscription dependent)

- ▶ **Set by network:** If you select this, you can send your phone number depending on two line service such as line 1 or line 2.
- ▶ **On:** You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

- ▶ **Off:** Your phone number will not be shown.

Call waiting (Menu #.5.6) (network dependent)

- ▶ **Activate:** If you select **Activate**, you can accept a waiting (receiving) call.
- ▶ **Cancel:** If you select **Cancel**, you cannot recognize the waiting (receiving) call.
- ▶ **View status:** Shows the status of **Call waiting**.

Minute minder (Menu #.5.7)

If you select **On**, you can check the call duration by a beep sound given every minute during a call.

Auto redial (Menu #.5.8)

- ▶ **On:** When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

- ▶ **Off:** Your phone will not make any attempts to redial when the original call has not connected.

Select line (Menu #.5.9) (SIM dependent)

Depending on the support or not of 2 line services on your SIM card, you can select the line you wants.

Send DTMF tones (Menu #.5.0)

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

Security Menu #.6

PIN code request (Menu #.6.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you will be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press the left soft key [OK].
2. Set **On/Off**.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Phone lock (Menu #.6.2)

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **When switch on**.

Settings

If you set phone lock to **When SIM changed**, your phone will request security code only when you change your SIM card.

Anti Theft Mobile Tracker

(Menu #.6.3)

Anti Theft Mobile Tracker - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

Fixed dial number (Menu #.6.4) (SIM dependent)

- ▶ You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2code.
- ▶ **On**
You can restrict your outgoing calls to selected phone numbers.
- ▶ **Off**
You can cancel fixed dialling function.
- ▶ **Number list**
You can view the number list saved as Fixed dial number.

Change codes (Menu #.6.5)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes:
Security code, PIN2 code, ATMT code.

1. If you want to change the **Security code/PIN2 code** input your original code, and then press the left soft key [OK].
2. Input new Security code/PIN2 code and verify them.

Flight mode Menu #.7

This allows you to use only the phone features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

- ▶ **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage.
- ▶ **Off:** You can deactivate the flight mode and restart your handset to access the network.

Power save Menu #.8

Choose to switch the factory set power saving settings on or off.

Reset Menu #.9

You can initialize all factory defaults. You need **Security code** to activate this function.

Memory status Menu #.0

You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Hands free earmicrophone



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with your retailer or contact LG on 1800 638 080.

Technical data

General

Product name: KF300

System: E-GSM 900/DCS 1800/ PCS 1900

Ambient Temperatures

Max: +55°C (discharging)

+45°C (charging)

Min: -10°C

Technical data

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KF300

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9,0,2
EN 300 328 V1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

11, January, 2008

Signature of representative

MANUFACTURER'S WARRANTY

Australia & New Zealand

1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer.
LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.

 
MANUFACTURER'S WARRANTY

Australia & New Zealand

(7) The benefits available from this warranty are in addition to all applicable statutory rights.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.

- 
- (7) Damage resulting from use of non-LG approved accessories.
 - (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
 - (9) Products operated outside published maximum ratings.
 - (10) Products used or obtained in a rental program.
 - (11) Consumables (such as fuses).
 - (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
 - (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

MANUFACTURER'S WARRANTY

Australia & New Zealand

AUSTRALIA:

LG Electronics Australia Pty Ltd 2
Wonderland Drive
Eastern Creek NSW 2766
PO Box 212
HORSLEY PARK NSW 2175
Tel: 1800-638-080
Fax: 02-8805-4201

NEW ZEALAND:

LG Electronics Australia Pty Ltd
Unit A, 38 Highbrook Drive
East Tamaki 2013
PO Box 58195 Greenmount
Auckland 2141
Tel: 0800-666-780
Fax: 09-914-2441



LG Electronics Australia Pty Ltd.