



CE 0168



P/N : MMBB0338634 (1.0) G

LG ELECTRONICS INC.

GD900 User Guide

GD900 User Guide



ENGLISH

Bluetooth QD ID B015268



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



GD900 User Guide

Congratulations on your purchase of the advanced and compact GD900 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Contents

Set up

| | |
|---------------------------------------|----|
| Getting to know your phone | 8 |
| Installing the USIM and battery | 10 |
| Charging your phone..... | 11 |
| Memory card..... | 12 |
| Menu map..... | 14 |

Your home screen

| | |
|-----------------------------------|----|
| Touch screen tips..... | 15 |
| Touch screen | 16 |
| Get in touch with your GD900..... | 17 |
| Customising the home screen..... | 18 |
| Quick keys | 19 |
| Viewing the status bar | 25 |

The basics

| | |
|------------------------------------|----|
| Calls | 27 |
| Making a call or a video call..... | 27 |
| Calling your contacts..... | 27 |
| Transferring your contacts | 27 |

| | |
|--|----|
| Answering and rejecting a call | 27 |
| In-call options | 28 |
| Adjusting call volume | 29 |
| Speed dialling | 29 |
| Making a second call..... | 29 |
| Turning off DTMF..... | 30 |
| Viewing your call logs | 30 |
| Using call divert..... | 30 |
| Using call barring..... | 31 |
| Changing the common call setting..... | 31 |
| Changing your video call settings..... | 32 |
| Messaging..... | 33 |
| Messaging | 33 |
| Sending a message..... | 33 |
| Entering text..... | 34 |
| T9 predictive..... | 34 |
| Abc manual..... | 34 |
| Sending an email..... | 34 |
| Changing your email settings..... | 35 |
| Message folders | 36 |
| Using templates | 36 |

| | | | |
|--|----|--|----|
| Using emoticons..... | 37 | Your photos and videos | 49 |
| Changing your text message settings..... | 37 | Using zoom when viewing a video or photo..... | 49 |
| Changing your multimedia message settings..... | 38 | Adjusting the volume when viewing a video..... | 49 |
| Get creative | | Editing your photos..... | 49 |
| Camera..... | 39 | Multimedia | 51 |
| Getting to know the viewfinder.... | 39 | Pictures | 51 |
| Once you've taken the photo..... | 40 | Sending a photo | 51 |
| Using the flash..... | 40 | Using an image..... | 51 |
| Adjusting the exposure..... | 41 | Printing an image..... | 52 |
| Adjusting the zoom | 41 | Moving or copying an image..... | 52 |
| Using the advanced settings..... | 42 | Creating a slide show..... | 53 |
| Using the inner camera | 44 | Checking your memory status..... | 53 |
| Video camera | 45 | Sounds..... | 53 |
| Getting to know the viewfinder.... | 45 | Using a sound | 53 |
| After shooting a video | 46 | Videos | 54 |
| Adjusting the exposure..... | 46 | Sending a video clip..... | 54 |
| Using the advanced settings..... | 47 | Games and Applications | 54 |
| Watching your videos on TV..... | 48 | Playing a game..... | 54 |
| | | Use the M-Toy menu..... | 54 |
| | | Flash contents..... | 55 |

Contents

| | | | |
|------------------------------------|----|------------------------------------|----|
| Viewing an SWF/ SVG file..... | 55 | Sending the voice recording | 62 |
| Documents | 55 | Using your calculator | 62 |
| Viewing a file | 55 | Converting a unit..... | 62 |
| Others | 55 | Using the stopwatch | 63 |
| Creating a movie..... | 55 | Adding a city to your world clock. | 63 |
| Music..... | 56 | | |
| Playing a song..... | 56 | The web | |
| Using the radio | 57 | Browser..... | 64 |
| Searching for stations | 57 | Accessing the web | 64 |
| Resetting channels..... | 58 | Adding and accessing | |
| | | bookmarks | 64 |
| Get organised | | Using the RSS reader | 65 |
| Organiser | 59 | Accessing a saved page..... | 65 |
| Adding an event to your | | Viewing your browser history | 65 |
| calendar | 59 | Changing web browser settings... | 65 |
| Changing your default calendar | | Using your phone as a modem | 66 |
| view | 59 | | |
| Adding an item to your To Do list. | 60 | Settings | |
| Using the date finder..... | 60 | Changing your screen settings..... | 67 |
| Setting your alarm..... | 60 | Personalising your profiles..... | 67 |
| Adding a memo | 61 | Changing your phone settings..... | 68 |
| Voice recorder..... | 61 | Changing your touch settings | 68 |
| Recording a sound or voice | 61 | Changing your connectivity | |
| | | settings..... | 69 |

| | |
|---|----|
| Using memory manager | 70 |
| Using flight mode..... | 70 |
| Sending and receiving files using Bluetooth..... | 71 |
| Changing your Bluetooth settings..... | 72 |
| Pairing with another Bluetooth device..... | 72 |
| Using a Bluetooth headset..... | 73 |
| Wi-Fi | 74 |
| Software Upgrade | 76 |

Accessories 77

Network service 78

Technical data..... 78

Guidelines

Guidelines for safe and efficient
use.....80

Trouble Shooting.....88

Getting to know your phone

Power key

Turns the phone on/off.

Earpiece

Proximity Sensor

Inner camera

End key


- Rejects a call.
- Press once to return to the home screen.

Multi-tasking key

Send key

Dials a phone number and answers incoming calls.

Battery cover release tab

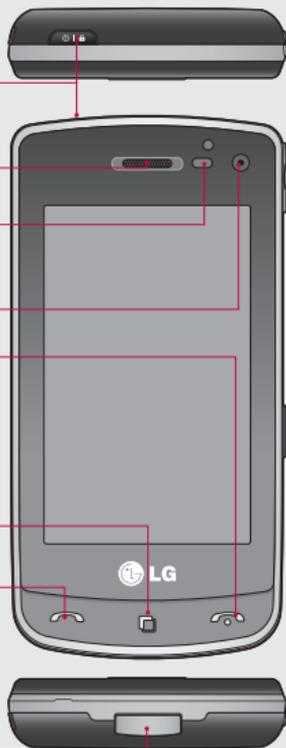

⚠ WARNING: Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Covering the Proximity sensor can cause the sensor to malfunction.

This handset is not recommended for blind disability person due to touch screen keypad.



Charger, Data and Headset Port

TIP: Before connecting the USB cable, wait until the phone has powered up and has registered on the network.



Volume keys

- Controls the ringtone and key tone volume when you are in a homescreen.
- Controls the volume of the ear piece when you are in a call.
- Controls the Volume while playing music.


Camera key

- Press and hold, while the slide is open, to start your camera.

Installing the USIM and battery


1 Remove the battery cover

Release the battery cover by using the battery cover release tab found at the bottom of the phone, and lift off the battery cover.

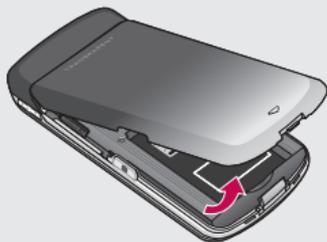

2 Remove the battery


Lift the battery out via the cut out provided at the base of the phone.

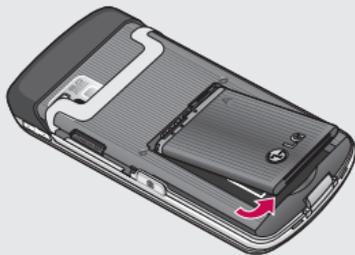

⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card


Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards. To remove the SIM card, gently push it until it clicks. Gently pull it out.

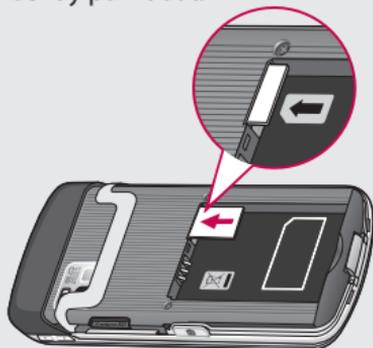

Charging your phone

4 Install the battery

Insert the top of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

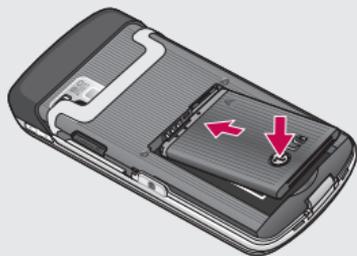

5 Replace the battery cover


Insert the top of the battery cover and push down until it clicks into place.



6 Charge the battery

Open cover of the charger connector on the side of your GD900. Insert the charger and plug it into a mains electricity socket. Your GD900 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight (or for up to 14 hours).

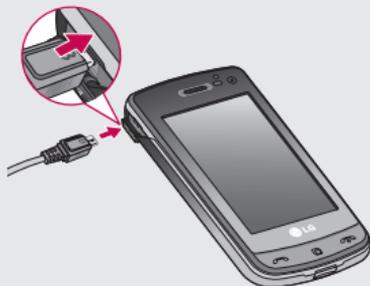

Memory card



Installing a memory card

You can expand the available memory space on your phone by using a Micro SD memory card.

The GD900 will support up to a 32GB memory card.

NOTE: A memory card is an optional accessory. Slide the memory card into the slot at the top, until it clicks into place. Make sure the gold contact area is facing downwards.

 **WARNING:** Slide into the memory card completely into the slot, otherwise, the card can be damaged.

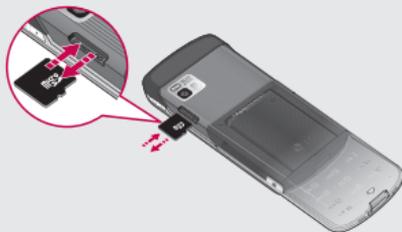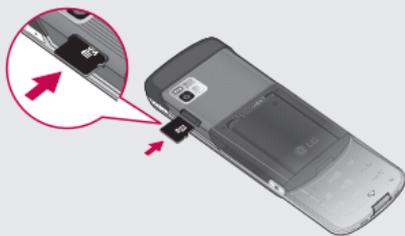

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

NOTE: All files get deleted while formatting.

- 1 From the home screen select  and choose **Phone settings** from the Settings tab.
- 2 Scroll and touch **Memory Info** then scroll and select **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one has been set. The card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, this content will be deleted.

Menu map

COMMUNICATION

-  Contacts
-  Recent history
-  Optus Zoo
-  Messaging
-  Email
-  Dialling
-  Video call
-  Google

MULTIMEDIA

-  Music
-  Camera
-  Video camera
-  Gallery
-  My stuff
-  Games & Apps
-  FM radio
-  Movie maker

UTILITIES

-  Alarms
-  Organiser
-  Memo
-  Stopwatch
-  Voice recorder
-  Calculator
-  World clock
-  Tools

SETTINGS

-  Profiles
-  Screen settings
-  Phone settings
-  Bluetooth
-  Wi-Fi
-  Call settings
-  Connectivity
-  Message settings

Touch screen tips

The home screen is also a great place to get used to using the touch screen.

To select an item, touch the centre of the icon.

- Do not press too hard; the touchscreen is sensitive enough to pick up on a light, firm touch.
 - Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
 - When the screen light is off, either press the power key or hold down the Unlock/Lock key on the touch screen to return the home screen.
- When the screen light is off, there are three ways to get back to your home screen.
 - 1) Press the power key 2 times.
 - 2) Press the power or a volume key then press and hold the 'Press & hold to unlock' soft key on the touch screen to return the home screen.
 - 3) Slide the touch keypad open.


Your home screen

Touch screen

The controls on the GD900 touch screen change dynamically, depending on the task you are carrying out.

Opening Applications

To open any Application, simply touch its icon.

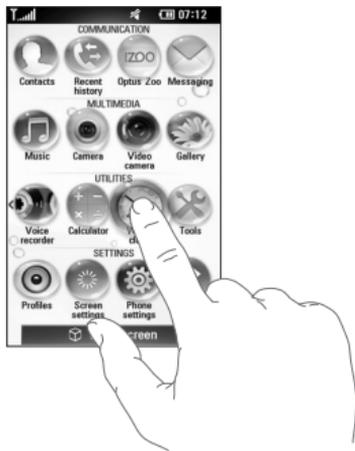

Scrolling

Drag from side to side to scroll. On some screens, such as web pages, you can also scroll up or down.



Get in touch with your GD900

The User Interface is based on four types of Homescreens. To swap between the home screens just wipe quickly over display or touch pad from left to right or from right to left.



NOTE: Use flicking to navigate without disturbing the display area.

Your home screen

From this screen you can access menu options, make a call, view the status of your phone and much more.

Customising the home screen

- **Home screen customisation** - For each type of home screen you are able to add and remove objects by press & holding your finger on an object for approximately 2 seconds.


1 Shortcut home screen




2 Widget home screen (active)



3 Contact home screen

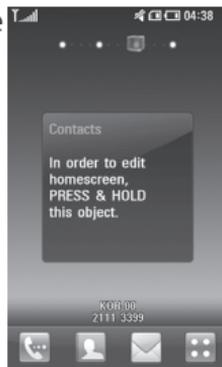

4 Multimedia home screen

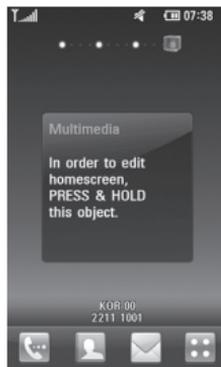

Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to bring up the touch dialling pad, when the touch key pad is closed. This area lets you make a call. Enter the number using the display key pad and touch Voice call or tap . You can also dial a number using the tough keypad, when it is open, and touch Voice call or tap  . To make a video call to this number, touch  after entering the number.



Touch to open your contacts. From here you can search for a contact. You can also create new contacts and edit existing ones.



Touch to access the **Messaging** options menu. From here you can create a new SMS or MMS.




Touch to open the full Top menu which is divided into four sub-menus.


Your home screen

Zooming In or Out

When viewing photos, web pages, emails, or maps, you can zoom in and out. Pinch your fingers together or slide them apart.

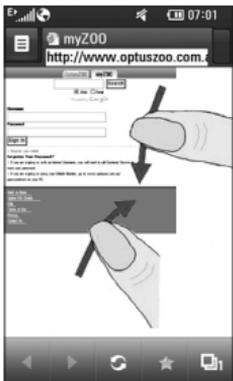

<zoom out>

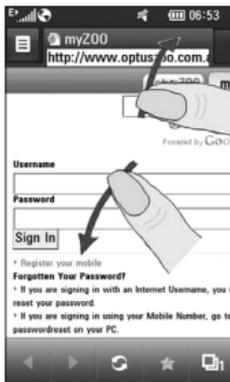

<zoom in>


Favourites : Display your favourite contacts, songs and photos on the screen by touching  .



Transparent Touchpad


Make the most of your Transparent Touchpad.

- 1 Touchpad Shortcut : You can assign a symbol for the most commonly used menus. Assign a symbol to each shortcut, so you can instantly access your favourite functions with simple finger gestures.

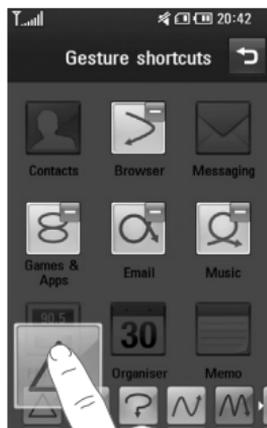

Using the Multitasking function: Touch and hold the multitasking touch key  to open the **Multitasking** menu. From here you can view some applications that are running. Example: If you assign  to Email, simply draw  on the Transparent Touchpad, it will go to Email.

- 2 Easy click : You can click on the Transparent Touchpad without covering the main screen while using the Web Browser.

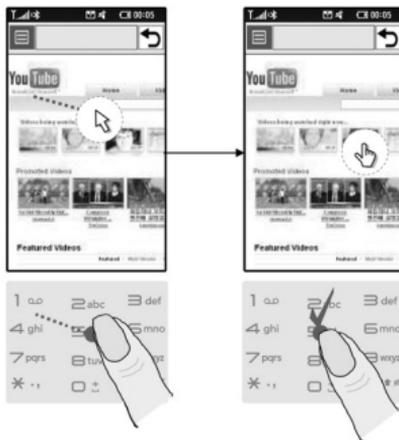

[Browse with mouse pointer]

Your home screen

- 3** Touch wheel: Adjust the volume or brightness by drawing ↶ and ↷ on the Transparent Touchpad in Music, Divx Playback, Camera and Video Camera. In Music you have to select the volume before adjust the volume. You can also zoom in or zoom out by drawing ↶ or ↷ on the Transparent Touchpad in Camera mode, and Video Camera mode.



[Zoom in/out]

- 4** Handwriting: Use your finger to write information on the Transparent Touchpad, without covering the main screen. In Handwriting mode you simply write on the screen and your GD900 will convert your

handwriting into your message. If you select capital letter mode (ABC), letters you type will be inserted as capital letters even if you write in small letters, and vice versa. To get to Hand writing mode Touch ▲ and Touch ✎, you can now write on the screen with your finger.



| Letter | Strokes |
|--------|---------|
| A | A A a a |
| B | B B b b |
| C | C C |
| D | D D d d |
| E | E E e e |
| F | F F f f |
| G | G G g g |
| H | H H h h |
| I | I I i i |
| J | J J j j |
| K | K K k k |
| L | L l l |
| M | M M m m |
| N | N N n n |
| O | O O o o |
| P | P P p p |
| Q | Q Q q q |
| R | R R r |
| S | S S |
| T | T T t t |
| U | U U u |
| V | V V v |

| Letter | Strokes |
|--------|---------|
| W | W W w w |
| X | X X x |
| Y | Y Y y y |
| Z | Z Z z |
| ß | ß |

Accented characters

| Accent | Strokes |
|-----------|---|
| Space |  |
| Backspace |  |
| Enter |  |

Punctuation marks

| Mark | Strokes |
|-----------|---------|
| Full stop | • |
| At @ | @ |

Your home screen

Numbers

| Number | Strokes |
|--------|-----------|
| 0 | 0 0 |
| 1 | 1 1 1 1 1 |
| 2 | 2 2 2 |
| 3 | 3 3 |
| 4 | 4 4 4 4 |
| 5 | 5 5 5 5 |
| 6 | 6 |
| 7 | 7 7 7 7 |
| 8 | 8 8 8 8 |
| 9 | 9 9 9 9 |

- 5 Touch Keypad : The Transparent Touchpad can also be used to input numbers and text.



Note The Transparent Touchpad is made of Tempered Glass.

- 6 Floating cube : When you touch multitasking touch key,  you get the floating cube.



Viewing the status bar

The status bar uses different icons to show conditions such as signal strength, new messages and battery life as well as whether Bluetooth or GPRS is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.



[Status bar]

| Icon | Description |
|------|-------------------------------|
| | No Service |
| | 2G |
| | 3G |
| | EDGE |
| | HSDPA |
| | Wi-fi is on |
| | Bluetooth Mono Stereo headset |
| | Bluetooth Stereo headset |

| Icon | Description |
|------|------------------------|
| | Bluetooth Mono headset |
| | Bluetooth on |
| | Bluetooth Transfer |
| | Bluetooth Visibility |
| | Downloading |
| | Downloading complete. |
| | Downloading cancelled. |
| | In-call option |
| | Internet |
| | Searching |
| | Call divert |
| | Call reject |
| | Security |
| | Headset |
| | HomeZone |
| | Roaming |
| | Alarm |
| | Schedule (Calendar) |
| | Multi-tasking |

Your home screen

| Icon | Description |
|--|----------------------------|
|  | Music paused |
|  | Music playing |
|  | FM radio playing |
|  | Email being sent |
|  | Email receiving |
|  | MMS |
|  | MMS sending |
|  | MMS receiving |
|  | SMS sending |
|  | New voicemail |
|  | New message |
|  | Message sending has failed |
|  | New email |
|  | Push message |
|  | Flight mode |
|  | Outdoor |
|  | Normal Profile |
|  | Silent |

| Icon | Description |
|---|---------------------------|
|  | Customised ringtones 1-10 |
|  | External memory |
|  | Battery status |
|  | Projector/TV out |

Calls

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call or a video call

- 1 Touch  to open the keypad.
- 2 Key in the number on the keypad.
To delete a digit, press the clear key.
- 3 Touch the  key to make the call.
- 4 To end the call, touch the  key.

TIP! To enter + in order to make international calls, touch  twice, or press and hold down .

TIP! You can **Save number**, **Send message**, **Search contacts** by tapping .

Calling your contacts

- 1 From the home screen touch  to open your **Contacts**.

- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 From the filtered list, touch the contact you want to call and select the number to use if there is more than one for that contact.
- 4 Touch **Voice call** or **Video call**.

Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the Communication tab, scroll to **Contacts** and select  then **Change location**.
- 2 Touch **Copy to Handset**.
- 3 Choose **Select all** or select names one by one and touch **Copy to handset**.


Answering and rejecting a call

When your phone rings, press the  hard key to answer.

Touch twice the  hard key to reject an incoming call.

Calls

In-call options

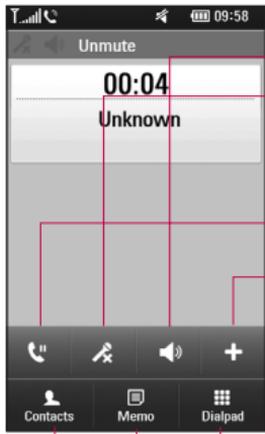

Speaker - Touch  to turn the speaker phone on.

Mute - Touch  to turn the microphone off so the person you are talking to cannot hear you.

Hold - Touch  to put a call on hold.

Options - Touch  to choose from a list of further in-call options, including accessing your memos, your message inbox, and your contacts. You can also end the call from here by scrolling through the options and touching End call.

 - Touch to open a numerical keypad for typing in numbers, e.g. when dialling call centres or other automated telephone services.

 - Access your memos during a call.

 - Search your contacts during a call.

Adjusting call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open your **Contacts**.
- 2 Touch  and select **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it to a contact.
- 4 Your contacts list will open. Select the contact you want to assign to that number by touching the contact once.

To call a speed dial number, touch  on the home screen then press and hold the assigned number until the contact appears on the screen. The call will initiate automatically, without having to touch **Voice call**.

Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Call the number or press  to and touch Search contacts to search your contacts.
- 3 Touch  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 To end one or both calls press .

NOTE: You will be charged for each call you make.

Calls

Turning off DTMF

DTMF lets you use numerical commands to navigate menus within automated calls. DTMF is on by default.

To turn DTMF off during a call touch  and select **Disable DTMF**.

Viewing your call logs

From the home screen, touch , then touch **Recent history** in the Communication tab.

Choose from the following:

All history - View a complete list of all dialed, received and missed calls and messages.

Missed calls - View a list of all calls you have missed.

Calls only - View a list of all numbers that you have called.

Messages only - View a list of all numbers that have received or sent texts and multimedia messages.

VT only - View a list of all video calls.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Call divert** and select **Voice calls** or **Video calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when the network cannot reach you.
- 4 Touch **Activate** to activate.
- 5 Touch **To other number** to enter a specific number to divert to, or select **To voice mail centre** to divert to your voice mail.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Call barring** and select **Voice calls** and/or **Video calls**.
- 3 Choose any or all of the five options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator about this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Changing the common call setting

- 1 Touch  and choose **Call settings** in the Settings tab.
- 2 Touch **Common settings**. This lets you change the following settings:
 - Call reject** - Slide the switch left for **ON**. You can touch the **Reject list** to choose all calls, specific contacts or groups or calls from unregistered numbers or No caller ID (i.e. not in your contacts).

Calls

Send my number - Choose whether to display your number on an outgoing call.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a handset key to answer a call.

Save new number - Select **ON** or **OFF** to save a new number.

Slide close setting - Choose between End call and Continue call.

Changing your video call settings

1 From the home screen, touch  and scroll to **Call settings** in the Settings tab.

2 Touch **Video call settings** and select the settings for your video calls. The following options are available:

Use Private image (on/off) - This uses a set image that the other party will see.

Select private image - You can change the default private image. This can be selected from your handset memory or external memory card (if inserted)

Mirror (on/off) - This mirrors the image of your front camera.

Messaging

Messaging

Your GD900 combines SMS, MMS into one intuitive, easy-to-use menu.

There are two ways of entering the messaging centre:

- 1 From the home screen, touch  or , then scroll to **Messaging** on the Communication tab.

Sending a message

- 1 Touch  then **Write message** to open a blank message.
- 2 Touch **To** to enter the recipient's number. To enter your contacts touch contacts, select the desired contact. You can add multiple contacts, when in contacts, by selecting then Select multiple, then selecting the contacts to send the message to and touch Select contacts. You can add another **To** but touching .
- 3 Touch **Send SMS** or **Send MMS** to send your message. The GD900 automatically changes

to a MMS when attachments are made or when the sizes exceeds SMS length.

TIP! You will be charged for a text message for every person you send the message to.

- 4 Touch  **Insert** to add a text template, multimedia templates, emoticon, name & number, new slide, subject or signature.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.

 **WARNING:** If an image, video or audio file is added to an SMS it will be automatically converted to an MMS, and you will be charged accordingly.

Messaging

Entering text

Keypad

 Touch to turn on/off the T9 predictive texting.

 Touch to change the writing language.

  Tap to change between the number, symbol and text keypads.

Use  to swap between capital or lower case letters. You can lock all letters to upper case by touch and holding.

To enter a space touch .

T9 predictive

In T9 mode, you will see .

T9 mode uses a built-in dictionary to recognise your words based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6 and 3 to write 'telephone'.

Abc manual

In Abc mode you have to touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three more times, then 6 three times.

Sending an email

You need to set up email account first. You can set it up when you choose  first time.

- 1 Touch  then **Write email** to open a blank email.
- 2 Touch **To** to enter the recipient's email address.
- 3 You can add **Cc** or **Bcc** by touching **To**.
- 4 Put the subject.
- 5 Complete the message and touch **Send email**.

Changing your email settings

You can change your email settings based on your own preferences.

- 1 Touch  from the home screen, then scroll to **Messages settings** on the Settings tab.
- 2 Select **Email**.
- 3 You can alter the following settings:

Email accounts - Manage your email accounts.

Allow reply email - Choose whether to allow read confirmation messages to be sent.

Request reply email - Choose whether to request read confirmation messages.

Retrieve interval - Select how often your GD900 checks for new email messages.

Include message in Fwd & Reply - Select to include the original message in any reply.

Include attachment - Select to include the original attachment in any reply.

Auto retrieval when Roaming - Choose whether to retrieve messages automatically when abroad (roaming).


New email noti. info - Choose whether to be alerted about a new e-mail without a pop-up message.

Signature - Create an email signature and switch this feature on.

Messaging

Message folders

You will recognise the folder structure in your GD900, and it is fairly self-explanatory.

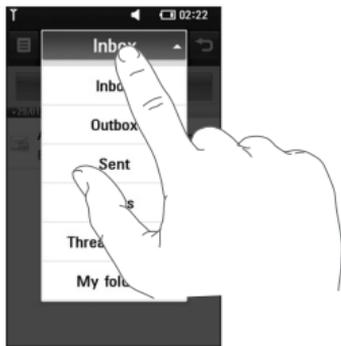

Inbox - All SMS and MMS messages you receive are stored in your inbox. From here you can view and delete them, among other functions.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - Messages you sent are stored in this folder.

Drafts - If you don't finish writing a message, you can save what you've done in this folder.

Threaded box - Messages (SMS) exchanged with another party can be displayed in chronological order so that you conveniently can see an overview of your conversation.

My Folders - Create folders to store your messages.

Using templates

Create templates for the SMS and MMS messages you send most often. There are already some templates on the phone, which you can edit.

- 1 When writing a new message, you can enter **Templates** from **Insert** in the options menu.
- 2 Choose **Text templates** or **Multimedia templates**. You can add, edit, delete or delete all templates. To edit a message, select it, amend it, and touch **Save template**.

Using emoticons

Liven up your messages using emoticons. There are some commonly used emoticons already on your phone.

- 1 When writing a new message, you can enter **Emoticons** from **Insert** in the options menu.
- 2 You can add a new emoticon by touching New emoticon.

Changing your text message settings

Your GD900 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

Scroll to **Message settings** on the Settings tab and touch **Text message**. You can make changes to the following:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Voice, Fax, X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This affects the size of your messages and therefore your data charges.

Send long text as - Choose to send long messages as multiple SMS or MMS.

Messaging

Changing your multimedia message settings

Your GD900 message settings are pre-defined, so you can send messages immediately. These settings can be changed based on your preferences.

In **Setting** tap select **Message settings** and **Multimedia message**.

You can make changes to the following:

Retrieval mode - Select **Home network** or **Roaming network**. If you then select **Manual**, you will only receive notifications about MMS messages. You can then decide whether or not to download them in full.

Delivery report - Choose whether to allow and/or request a delivery report.

Read reply - Choose whether to allow and/or send a read reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long slides appear on screen.

Creation mode - Restricted/ Warning/ Free


Delivery time - Choose how long to wait before a message is delivered.

Multimedia message centre - Enter the details of your message centre.

Camera

Getting to know the viewfinder

Open the slide to use the Outer Camera.

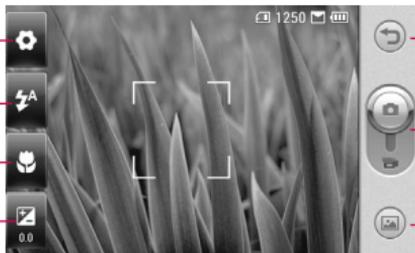

Back - Touch here to return to the previous screen.

Camera mode - Slide up or down to change camera mode between Photo and Video, touch the button to capture your image.

Gallery - Touch this icon to view the gallery.

Exposure - See Adjusting the Exposure on Page no:41

Macro - Switch this on to take close up shots.

Flash status - Set flash light mode to Auto, Always off or Always on.


Settings - Touch this icon to open the settings menu. See Using the advanced settings for details.

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Camera

Once you've taken the photo

Your captured photo will appear on the screen. The image name is shown with four icons on the right-hand side.

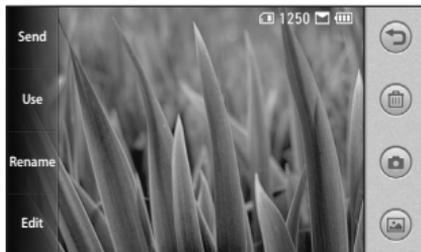

Send Touch to send the photo as a **Message, Email** or **Bluetooth**. or **Blogger**.

See page 33 for Sending a message, and page 71 for Sending and receiving your files using Bluetooth.

Use Touch to use the image as homescreen, Lock screen, contact ,Start-up/Shut down and Outgoing/Incoming call image.

Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools.

 Touch to return to the previous screen.

 Touch to delete the image.

 Touch to take another photo immediately. Your current photo will be saved.

 Touch to view a gallery of your saved photos.

Using the flash

The default flash setting is auto, but there are other options.

- 1 Select  from the left side of the viewfinder to enter the flash sub-menu.
- 2 There are three flash options:
Auto - Your camera will assess the light available for a good picture and use the flash as necessary.

Always off - The camera will never flash. This is useful if you want to save battery power.

Always on - The camera will always flash.

- 3 When you touch the option you want, the flash menu will automatically close, allowing you to take a picture immediately.
- 4 The flash status icon in the viewfinder will change, based on the new flash mode.

Adjusting the exposure

The exposure defines the control of the amount of sunlight entering the image. A low contrast image will appear darker, whereas a high contrast image will appear much brighter.

- 1 Touch .
- 2 Slide the contrast indicator along the bar, towards  for a lower exposure, darker image or towards  for a higher, exposure, brighter image.

You can also make a clockwise motion on the Touchpad to increase the exposure or an anti-clockwise motion on the Touchpad for a lower exposure.

Adjusting the zoom

You can also zoom in or zoom out. Just make a clockwise motion on the Transparent Touchpad to zoom in, and an anti-clockwise one to zoom out

Camera



Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the camera setting by scrolling the wheel. After selecting the option, touch the **OK** button.

Swap camera - For self portraits, switch to the LG GD900's inner camera.

Image size - Change the size of the photo to save memory space or to take an appropriately sized picture for a contact.

Colour Effect - Choose a colour tone to use on your new photo.

White balance - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 secs**, **5 secs** or **10 secs**. This is ideal if you want to be included in a photo.

Shot mode - Choose the shot normal or continuous mode.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can not use the flash. Select the ISO value from **Auto**, **100**, **200**, **400**, **800** and **1600**.

Image quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

Memory in use - Choose whether to save your photos to the Handset memory or the External memory.

Hide icons - Choose the icons of camera settings manually or automatically.

Image stabilization - Enables you to take a photo without the camera wobbling or shaking.

Auto focus - Select the way the camera will focus. Choose between **Spot**, **Manual** and **Face tracking**.

Shutter sound - Select one of the four shutter sounds.

Grid view - Choose between **Off**, **2x2 grid** or **3x3 grid**.

Reset - Restore all the camera settings.

Camera

TIP! When you exit the camera all settings will return to their defaults, except image size and image quality. Any non-default settings will need to be reset, such as colour tone and ISO. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you will see a preview of the image change behind the settings menu.

Using the inner camera

Your LG GD900 has an inner 640x480 camera for both video calls and taking photos.

1 To switch to the inner camera touch  then select **Swap camera** and select **Secondary**

2 After a few seconds you'll see yourself in the viewfinder. To capture the image, press the side button as normal.

TIP! The inner camera has fewer settings as it has no flash nor ISO. You can still alter the image size, colour effect, image quality, white balance and set the self-timer by touching  in the same way as when using the main camera.


3 After you've taken the photo you'll be offered all the same options as for an image taken with the main camera.

4 To return to the main camera touch  and then select **Swap camera** and select **Main**.

Video camera

Getting to know the viewfinder

Open the slide to use the Outer Camera.

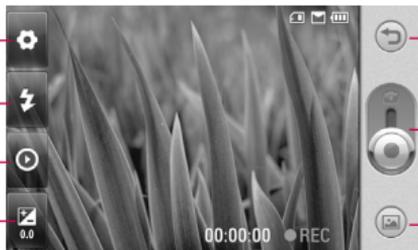

Back - Touch here to return to the home screen.

Start recording

Gallery - Touch this icon to view the gallery.

Exposure - See Adjusting the Exposure on Page no:46

Recording speed

Flash status - Set or turn off the flash.

Settings - Touch this icon to open the settings menu. See Using the advanced settings for details.

TIP! You can close all shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Video camera

After shooting a video

A still image representing your video will appear on the screen. The name of the video will be shown on the bottom of the screen, along with four icons on the right-hand side.



Play Touch to play the video.

Send Touch to send the photo as a Message, Email, Bluetooth or YouTube. See page 33 for Sending a message, and page 71 for Sending and receiving your files using Bluetooth.

Use Touch to use the Video as Ringtone or video call ringtone.

Rename Touch to edit the name of the selected picture.

Edit See Editing your photos on page 49 for more information.

 Touch to return to the previous menu.

 Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view the saved videos and pictures gallery.

Adjusting the exposure

The exposure defines the difference between light and dark areas in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch  .
- 2 Slide the exposure indicator along the bar, towards  for a lower exposure and fuzzier image, or towards  for a higher contrast and sharper image.



Using the advanced settings

Using the viewfinder, touch **Settings** to open all the advanced settings options.

You can adjust the video camera setting by scrolling the wheel. After selecting the option, touch the **OK** button.

Swap camera - Switch to your LG GD900's inner camera to record yourself on video.

Video size - Change the size of the video to save memory space.

Scene mode - Choose between **Auto** or **Night mode**.

Colour Effect - Choose a colour tone to use on your new view.

White balance - The white balance ensures any white parts of your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent** or **Cloudy**.

Video quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper the video will be. The file size will increase as a result, meaning you'll be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS.

Video camera

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

TIP! All formats except 320x240 and 176x144 are compatible with playing the video through a TV.

Memory in use - Choose whether to save your videos to the Handset memory or to the External memory.

Voice - Choose Mute to record a video without sound.

Hide icons - Select whether to hide the icons on the camera menu automatically or manually.

Reset - Reset all the video camera settings.

Watching your videos on TV

Connect your GD900 to your TV using the TV output cable.

NOTE: The TV output cable is available for purchase separately.

Your photos and videos

Using zoom when viewing a video or photo

When viewing photos or videos, you can zoom in and out by pinching your fingers together or spreading them apart.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the left side of the screen. Alternatively, use the volume keys on the side of the phone.

Editing your photos

You can do lots of great things to your photos to change them, add to them or liven them up.

- 1 Open the photo you want to edit and touch **Edit** to show the options.
- 2 Touch the icons to alter your photo:



Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.



Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.



Adding writing on a picture.



Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.



Erase the editing you have done to the picture. You can choose the size of eraser you use.



Touch to return to the gallery.

Your photos and videos

Save Save the changes you made to the photos. Select to save the changes as an **Original file** or a **New file**. If you select **New file** enter a file name.

Undo Undo the last **Effect** or edit you made to the photo.

Image Touch to open further effect options including **Rotate**. There are also more advanced editing options.

Filter Touch to apply the effect options to a photo

Adjustment This helps to adjust a picture taken using automatic colour, brightness etc.



Multimedia

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

To access the Multimedia menu, touch  select **My stuff** from Multimedia tab. You can open a list of the folders that store all your multimedia files.

TIP! To delete any files in My stuff, touch  then **Delete**.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images you have downloaded and those taken on your phone's camera.

Sending a photo

- 1 To send a photo just select picture you want.
- 2 Touch **Send**. Choose between **Message, Email, Bluetooth** or **Blogger**.
- 3 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, your phone will search for a device to send the picture to. Choose Blogger, to upload the Image to your Blog.

Using an image

You can choose images to use as wallpapers and screensavers, or even to identify a caller.

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Select an image and touch  .

Multimedia

4 Touch **Use as** and choose between:

Homescreens - Set a wallpaper for All homescreens, Widget, Contacts, Multimedia or Shortcut.

Lock screen - Set a wallpaper for the key lock screen.

Contacts image - Allocate an image to a person in your contacts list, so the picture is displayed when they call you.

Start up image - Set an image to appear when you switch the phone on.

Shut down image - Set an image to appear when you switch the phone off.

Outgoing call image - Set an image to appear during outgoing calls.

Incoming call image - Set an image to appear during incoming calls.

Printing an image

- 1** Touch  then select **My stuff** from Multimedia tab.
- 2** Touch **My images**.
- 3** Select an image and touch .
- 4** Touch **Print**, then choose between **Bluetooth** and **PictBridge**.

Moving or copying an image

An image can be moved or copied between the phone memory and the memory card. You may want to do this to clear some space in one of the memories, or to safeguard your images against loss.

- 1** Touch  then select **My stuff** from Multimedia tab.
- 2** Touch **My images**.
- 3** Touch .
- 4** Select **Move** or **Copy**.

Creating a slide show

If you want to view all the images on your phone, you can create a slide show to save you having to open and close each individual image.

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Touch  then **Slide show**.

Checking your memory status

You can check to see how much memory space you have used and how much you have left.

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My images**.
- 3 Touch  then **Memory Info**.

Sounds

The **My sounds** folder contains Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage or send sounds or set them as ringtones.

Using a sound

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and touch the play icon. It will start to play.
- 5 You can use the sound for various tones by selecting the **Use as** menu.
- 6 Choose between **Voice ringtone**, **Video ringtone** and **Message tone**.

Multimedia

Videos

The **My videos** folder shows a list of videos you have downloaded or recorded on your phone.

Watching a video

- 1 Touch  then select **My stuff** on the Multimedia tab.
- 2 Touch **My videos**.
- 3 Select a video to play.

TIP! GD900 supports both DivX & Xvid video format playback to ensure greater content availability.

NOTE: The TV output cable is available for purchase separately.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose between **Message, Email, Bluetooth** and **Youtube**.
- 3 If you choose **Message** or **Email**, your video clip will be attached

to the message, which you can write and send as normal. If you choose **Bluetooth**, your phone will search for a device to send the video to. Choose Youtube, To upload your video to youtube.

Games and Applications

You can download new games and applications to your phone to keep you amused in your spare time.

Playing a game

- 1 Touch  then select **My stuff** on the Multimedia tab.
- 2 Touch **Games** or **Applications** menu.
- 3 Touch Launch button to launch a game or an application.

Use the M-Toy menu

M-Toy contains preloaded flash games which use the integrated motion sensor.

Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.

Viewing an SWF/ SVG file

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **Flash contents**.
- 3 Select the file you want to view.

Documents

From Documents in My stuff, you can view all of your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Viewing a file

- 1 Touch  then select **My stuff** from Multimedia tab.
- 2 Touch **Documents**.
- 3 Select a document and touch **View**.

Others

The **Others** folder is used to store files that are not pictures, audio files, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens, you can move them.

Creating a movie

- 1 Touch  then select **Movie maker** from Multimedia tab.
- 2 Touch **Insert** to add an image.
- 3 Touch the **Style** tab on the top to choose a movie style.
- 4 Touch the **Sound** tab on the screen to change the sound, e.g. for a voice recording.
- 5 Touch the **Preview** button to see the results.

Multimedia

- 6 Touch the **Play Order** tab on the screen to change the order.
- 7 Touch the **Saved in** tab on the screen to choose where to save the movie, and touch the **Usage** tab to choose between storing it and MMS.
- 8 To save your movie touch **Save movie**.

Music

Your LG GD900 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch  then select **Music** from Multimedia Tab. From here, you can access a number of folders:

All tracks - Contains all the songs you have on your phone.

Favourites - Contains the songs you have saved as favourites.

Artists - Browse your music collection by artist.

Albums - Browse your music collection by album.

Genres - Browse your music collection by genre.

Playing a song

- 1 Touch  then select **Music** from the Multimedia tab.
- 2 Touch **All tracks**.
- 3 Select the song you want to play then touch .
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the previous song.
- 7 Touch  to return to the **Music** menu.

To change the volume while listening to music, touch . Or make a clockwise touch wheel on the Transparent Touchpad to turn up the volume and an anti-clockwise one to turn down the volume. You need to activate the volume indicator first by touching .

Using the radio

Your LG GD900 has an built-in FM radio feature so you can tune into your favourite stations and listen on the move.

NOTE: You will need to attach your headphones to listen to the radio. Insert them into the headphone socket.



Searching for stations

You can tune your phone to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You can store up to 30 channels on your phone.

To tune automatically

- 1 Touch  then select **FM radio** from Multimedia tab.
- 2 Touch .
- 3 Touch **Auto scan** then **Yes**. The stations found will be allocated to channel numbers in your phone by selecting **Set**, **Skip** and **Stop**.

NOTE: You can also manually tune to a station by using the wheel displayed next to the radio frequency.

Multimedia

Resetting channels

- 1 Touch  then select **FM radio** from Multimedia tab.
- 2 Touch .
- 3 Choose **Reset channel** to reset the current channel or choose **Reset all channels** to reset all of the channels. If you reset all of the channels, each channel will return to the starting 87.5Mhz frequency.

Organiser

Adding an event to your calendar

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab.
- 2 Select the date to which you want to add an event.
- 3 Touch  then **New schedule**.
- 4 Touch **Category** then choose between **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you want your event to begin.
- 5 For appointments and anniversaries, you can enter the time and date the event finishes in the lower time and date boxes.
- 6 If you would like to add a subject or note to your event, touch **Subject** and type in the details.
- 7 Select **Set alarm** to set an alert for the event. If you want to repeat the alarm, select **Set repeat**.

- 8 Touch  to save the event in the calendar. A coloured square will mark all days that have saved events, and an alarm will sound at the event start time, to help you stay organised.

TIP! You can set holiday dates in your calendar. Individually touch each day of the holiday, then touch  and select **Set holiday**. Each day will be marked in red.

Changing your default calendar view

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab. Select **Settings** in .
- 2 Touch **Default view** and choose Month, Week, Timetable, List or All tasks.

Organiser

Adding an item to your To Do list

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab.
- 2 Select **New task** select  and touch **Note**.
- 3 Set the date for the task, add notes, then select its priority level: **High**, **Medium** or **Low**.
- 4 Save the task by selecting .

TIP! You can back up and synchronise your calendar with your computer.

Using the date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed. For example, 60 days from 10.10.09 will be 09.12.2009. This helps you keep track of deadlines.

- 1 From the home screen select  then scroll to **Organiser** on the Utilities tab.
- 2 Select **Date finder** in the Options menu.
- 3 Set the required date in the **From** tab.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

Setting your alarm

- 1 From the home screen select  then scroll to **Alarms** on the Utilities tab.
- 2 If you want add a new alarm, touch **New alarm**. If you want to set the alarm to sound again within one hour, touch **Quick alarm**.
- 3 Set the time you would like the alarm to sound.

- 4 Choose whether you want the alarm to repeat, set the repeat and type.
The icons indicate the weekday you select.
- 5 Select **Sound/Vibration** to select the type of alarm you want.
- 6 Touch **Alarm bell** for selecting the alert melody or sound.
- 7 To listen to the sounds, touch the sound, followed by .
- 8 Add a memo to the alarm.

Adding a memo

- 1 From the home screen select  then scroll to **Memo** on the Utilities tab.
- 2 Touch **New memo**.
- 3 Type your memo, then touch .

TIP! You can edit an existing memo. Select the one to be edited, touch **Edit** and type in your changes.


Voice recorder

Use your voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 Touch .
- 2 Touch **Voice recorder** in Utilities tap.
- 3 Choose where to save the recording between Handset and External.
- 4 Choose recording mode between General and MMS.
- 5 Touch  to begin recording.
- 6 Touch  to end recording.

Organiser

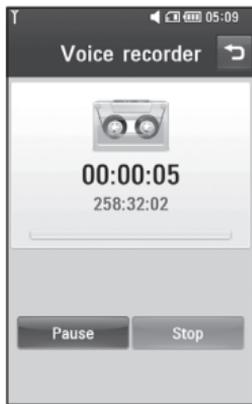

- 7 If you want to re-record the voice, touch **New**.

Sending the voice recording

- 1 Once you have finished recording, touch **Send**.
- 2 Choose **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message which you can write and send it as normal. If you choose **Bluetooth**, your phone will search for a device to send the voice recording to.

Using your calculator

- 1 From the home screen select , then scroll to **Calculator** on the Utilities tab.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you require (+, -, x or ÷), followed by =.
- 4 For more complex calculations, touch  and choose between **sin**, **cos**, **tan**, **deg**, **log**, etc..

Converting a unit

- 1 From the home screen select , then scroll to **Tools** on the Utilities tab.
- 2 Select **Unit converter**.
- 3 Choose whether you want to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.

- 4 Then select the unit and enter the value you would like to convert from.
- 5 The corresponding values then will appear on the screen.

Using the stopwatch

- 1 From the home screen, select , then touch **Utilities**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin timing.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Reset** to start the time again.

Adding a city to your world clock

- 1 From the home screen, select  and scroll to **World clock** in the Utilities tab.
- 2 Touch **Add city**. Choose continent and select the city from the **Map**. Or touch  and touch **List**. Start typing the name of the city you require, and it will be displayed on the screen.
- 3 Touch the city to select it. This will add it to your World time list.

The web

Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 From the home screen select  then scroll to **Optus Zoo** on the Communication tab.
- 2 To go straight to the browser home page, select **Home**. Alternatively, select **Enter address** and type in the URL.

NOTE: You will incur an extra cost by connecting to this service and downloading content. Check data charges with your network provider.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the home screen select  then scroll to **Optus Zoo** on the Communication tab.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **New bookmark**. Enter a name for the bookmark followed by its URL.
- 4 Touch . Your Bookmark will now appear in the bookmark list.
- 5 To access the bookmark simply touch the bookmark then touch connect. You will be connected to the bookmark.

Using the RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts. An RSS document, called a feed, web feed or channel, contains either a summary of content from an associated website or its full text. RSS makes it possible for people to keep up with their favourite web sites in an automated way that is easier than checking manually.

The user subscribes to a feed by entering its link into the reader or by clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content and downloads any updates that it finds.

Accessing a saved page

- 1 From the home screen select  then scroll to **Optus Zoo** on the Communication tab.
- 2 Select **Saved pages**.
- 3 Select the page you want to view and it will open.

Viewing your browser history

- 1 From the home screen select  then scroll to **Optus Zoo** on the Communication tab. Select **History**.
- 2 The web pages you have accessed recently will be displayed. To access any of these pages, simply select it.

Changing web browser settings

- 1 From the home screen select  then scroll to **Connectivity** on the Settings tab.
- 2 Select **Browser settings**.

The web

- 3 You can edit the **Profiles, Appearance settings, Cache/ Cookies, Security** or **Reset settings**.
- 4 You can simply set these on or off by touching the switch icon.

Using your phone as a modem

Your GD900 can double as a modem for your PC, giving you email and internet access even when you don't have any wired connection. You can do this via the USB cable or by Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GD900 and your PC using the USB cable and launch the LG PC Suite software.
- 3 click **Inernetkit** on your PCsuite. Then click **New** and select **Modem**
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on the screen.
- 5 Click **Connect** and your PC will connect via your GD900.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and GD900.
- 2 Pair your PC and GD900 so that a passcode is required to connect them.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 click **Inernetkit** on your PCsuite. Then click **New** and select **Modem**
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on the screen.
- 7 Click **Connect** and your PC will connect via your GD900.

Settings

This folder lets you adapt your settings to personalise your GD900.

Changing your screen settings

- 1 From the home screen, select  then scroll to **Screen settings** on the Settings tab.
- 2 You can choose the option menu from:

Wallpaper - Choose an image for Home screen, locking, switching the phone on or off, or making or receiving a call.

NOTE: The setting will be reset if you select **Reset** menu.

Homescreens - Shortcut/Widget/Contact/Multimedia

Lock screen - Choose the clock type on the lock screen.

Menu style - Choose Style.

Font - Adjust the font size and style.

Backlight - Choose how long the backlight stays on.

NOTE: The longer the backlight stays on, the more battery power it uses and you may need to recharge your phone more often.

Auto brightness - Adjust the screen brightness automatically.

Brightness - Adjust the screen brightness.

Personalising your profiles

You can quickly change your profile on the home screen. Just touch the status summary icon on the top, then touch the profile tab.

Using the settings menu, you can personalise each profile setting.

- 1 From the home screen select  then scroll to **Profiles** on the Settings tab.
- 2 Choose the profile you want to edit: **Normal**, **Silent**, **Outdoor** or **Flight mode**.

Settings

- 3** You can then change all sounds and alert options available in the list, including your **Voice/Video ringtone, Volume, Message alerts** and others.

Changing your phone settings

Enjoy the freedom of adapting the GD900 to your own preferences.

- 1** From the home screen, select  then scroll to **Phone settings** on the Settings tab.
- 2** Select a menu from the list below:
- Date & Time** - Adjust your date and time settings or choose to auto update the time when travelling or for daylight saving.
- Power save** - Choose to switch the value power saving settings to **On** or **OFF**.

Languages - Change the language on your GD900's display.

Auto lock - Lock the keypad automatically on the home screen.

Security - Adjust your security settings, including PIN codes and handset lock.

Touch settings - Change the touchpad value settings.

Memory Info - See **Using Memory Info** on page 70 for more information.

Reset settings - Restores all settings to their factory defaults.

Handset information - View GD900 technical information.

Changing your touch settings

From the home screen select  then scroll to **Phone settings** on Settings tab Choose **Touch settings**.

Touch vibration - Change the vibration On/Off.

Vibration type - Vibration 1/2/3

Vibration volume - Controls the strength of vibration.

Touch sound - Change the tone when touching the screen.

Sound - Sound 1/2/3

Volume - Controls the volume of tone.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To Use this menu to change your settings.

From the home screen select  then scroll to **Connectivity** on Settings tab.

Network selection - Your GD900 will connect automatically to your preferred network.

Internet profile - Set the profiles for connecting to the internet.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

USB connection mode - Synchronise your GD900 using the LG PC Suite software to copy files from your phone.

Projector/ TV out - Choose **PAL** or **NTSC** when connecting your GD900 to a TV.

DivX VOD registration - This menu is used to generate a DivX VOD registration code. Please visit <http://vod.divx.com> to register and for technical support.

Packet data conn. - Set the packet data connection.

Browser setting - Set the values related to the browser.

Settings

Streaming settings - Your network operator has already saved this information. You can edit it if you want to make changes.

Java settings - Allows you to set Profiles.

Using memory Info

Your GD900 has three available memories: the phone itself, the USIM Card and an external memory card (which you may need to purchase separately). You can use memory manager to determine how each memory is used and see how much space is available.

From the home screen select  then scroll to **Phone settings** on the Settings tab. Select **Memory Info**.

Handset common memory 1/2
- View the memory available on your GD900 for MMS, Email, Java applications and others.

Handset multimedia memory - View the memory for multimedia contents, such as streaming files, movies, music, pictures, sounds, video and flash.

Handset reserved memory
- View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memos, Alarms, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (which you may need to purchase separately).

Using flight mode

Turn flight mode on by selecting  then **Settings**. Touch **Profiles** and select **Flight mode**.

Flight mode prevents you making calls, connecting to the Internet, sending messages.

Sending and receiving files using Bluetooth

Bluetooth is a great way to send and receive files as it uses no wires and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, which will typically be a photo, video or music file.
- 2 Touch  and choose **Send**. Select **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your GD900 will not automatically search for other Bluetooth devices. If not, your GD900 will search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and touch **Select**.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file has been sent.

To receive a file:

- 1 To receive files your Bluetooth must be set to **On**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and choose to **View** the file or **Use as**. Files will usually be saved to the appropriate folder in My stuff.

Settings

Changing your Bluetooth settings

1 From the home screen select  then scroll to **Bluetooth** on the Settings tab.

2 Touch .

Make your changes to:

My device information - Enter a name for your GD900.

My device visibility - Choose to be **Visible**, **Hidden** or **Visible for 1 min**.

Remote SIM mode on - Activate the remote SIM mode.

iSync on - Choose to activate on iSync.

Supported services - Choose how to use Bluetooth in a association with different services.

Delete - Choose to delete the selected profile.

Delete all - Choose to delete all profiles.

Pairing with another Bluetooth device

By pairing your GD900 with another device, you can set up a passcode-protected connection. This makes pairing more secure.

1 Check that your Bluetooth is **On**.

You can change your visibility using the **Settings** menu.

2 Touch **New Device**.

3 Your GD900 will search for Bluetooth devices. When the search is completed **Refresh icon** will appear on the screen.

4 Choose the device you want to pair with and enter a passcode, then touch **OK**.

5 Your phone will then connect to the other device, on which you will need to enter the same passcode.

6 Your passcode-protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check that your Bluetooth is **On**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.
- 3 The headset will be automatically switched to Headset profile.
- 4 Touch **Ask before connection** or **Always connect**.

TIP! See page 32 for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

Wi-Fi

Wireless Manager allows you to manage Wi-Fi Internet on your device. It allows the phone to connect to local wireless networks, or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology.

NOTE: The GD900 supports WEP, WPA-PSK/2 encryption, and not EAP, WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

1. How to set up Wi-Fi

- 1 Wi-Fi On
- 2 AP (Access Point) Search
 - Searches which AP it can connect to.
- 3 AP Connect
 - Connects to the desired AP from the AP search list.
 - If the AP is security type WEP or WPA-PSK/2, enter the security key.

2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to a frequently-used AP or Hidden AP)
 - 1) If the AP does not appear in the search list, you can connect to it by saving it as a profile.

- 2) Saving the frequently-used AP as a profile makes it easier to enter the Security key when connecting to an AP with that Security type.
- 3) If the AP does not support DHCP, you can connect to the AP using a static IP address.
- 2 Description of each field in the Wi-Fi profile.
 - 1) Network name: SSID (ID)
 - 2) Security type: WEP, WPA-PSK/2 support.
 - 3) Security key: saves the security key.
 - 4) IP/DNS setting: this allows you to set to Automatic or Static depending on whether the AP supports DHCP.
For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.
- 3 How to save the Wi-Fi profile
 - 1) Select Saved networks from the Options menu, then select **New network** and enter values into each field.
 - 2) It is possible to select and save the AP search list by selecting **Wi-Fi On** and then **Refresh** (Searching AP).
 - 3) After connecting to an AP with this Security type, the profile will be saved automatically.

Software Upgrade

Software Upgrade

LG Mobile Phone Software Upgrade Program

“For more information on installing and using this program, please visit <http://au.lgmobile.com.update.lgmobile.com>.

This feature allows you to upgrade your software to the latest version quickly and conveniently over the Internet without needing to visit our service centre.”

As the mobile phone software upgrade program requires your full attention throughout the upgrade process, please make sure you check all instructions and notes that appear at each step before moving on to the next step. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data

during the upgrade process, you are advised to back up any important information in advance for safekeeping.

Accessories

There are a variety of accessories available for your mobile phone, which may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability. **(Items described below may be optional.)**

Charger



Battery



Stereo headset



Data cable and CD

Connect and synchronise your GD900 and PC.



User Guide

Learn more about your GD900.



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Network service

The wireless phone described in this guide is approved for use on E-GSM 900, DCS 1800, GSM 850, PCS 1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

DivX VOD registration

Generate a DivX VOD registration code.

Please visit <http://vod.divx.com/> for registration and technical support.

Technical data

General

Product name: GD900

System: E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900/ WCDMA

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / GSM 850 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD900

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.6.1 / EN 301 489-7 V1.3.1 / EN 301 489-17 V1.2.1 / EN 301 489-24 V1.3.1
EN 60950-1: 2001
EN 50360 / EN62209-1: 2006
EN 301 511 V9.0.2 / EN 301 908-1 V3.2.1 / EN 301 908-2 V3.2.1
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36 - 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

20, May, 2009

Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model GD900 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.47 W/kg (10g) and when worn on the body is 0.802 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.

- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Guidelines for safe and efficient use

Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold. When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

- Use your wireless phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;
 - Australia: Dial 0-0-0,
 - New Zealand: Dial 1-1-1,
 - International: Dial 1-1-2,
 - other local emergency number.Remember, it is a free call on your wireless phone for emergency services.
- Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
- Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
- Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special nonemergency wireless number.

Trouble Shooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

| Message | Possible causes | Possible Solutions |
|-----------------------------|--|---|
| SIM error | There is no SIM card in the phone or it is inserted incorrectly. | Make sure the SIM card is correctly inserted. |
| No network connection | Signal weak Outside GSM network area | Move towards a window or into an open area. Check the service provider coverage map. |
| Codes do not match | To change a security code, you will need to confirm the new code by entering it again. | Contact your Service Provider. |
| Function cannot be set | Not supported by Service Provider, or registration required | Contact your Service Provider. |
| Calls not available | Dialling error New SIM card inserted Charge limit reached | New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2. |
| Phone cannot be switched on | On/Off key not pressed long enough Battery empty Battery contacts dirty | Press the On/Off key down for at least two seconds. Charge battery. Clean the contacts. |

| Message | Possible causes | Possible Solutions |
|----------------------|---------------------------------------|---|
| Charging error | Battery totally empty | Charge battery. |
| | Temperature out of range | Make sure the ambient temperature is right, wait for a while, and then charge again. |
| | Contact problem | Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary. |
| | No mains voltage | Plug in to a different socket or check the voltage. |
| | Charger defective | If the charger does not warm up, replace it. |
| | Wrong charger | Only use original LG accessories. |
| | Battery defective | Replace battery. |
| Phone loses network | Signal too weak | Reconnection to another service provider is automatic. |
| Number not permitted | The Fixed dial number function is on. | Check settings. |

MANUFACTURER'S WARRANTY

Australia & New Zealand

1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer. LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

MANUFACTURER'S WARRANTY

Australia & New Zealand

(12) Defects or damage resulting from breakage of or tampering with the LCD screen.

(13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

AUSTRALIA:

LG Electronics Australia Pty Ltd
2 Wonderland Drive
Eastern Creek NSW 2766
PO Box 212
HORSLEY PARK NSW 2175
Tel: 1 800-638-080
Fax: 02-8805-4201

NEW ZEALAND:

LG Electronics Australia Pty Ltd
Unit A, 38 Highbrook Drive
East Tamaki 2013
PO Box 58195 Greenmount
Auckland 2141
Tel: 0800-666-780
Fax: 09-914-2441



LG Electronics Australia Pty Ltd.





