



CE 0168

CS200 USER GUIDE

This manual may differ from the phone depending on the phone software version and service provider used.



P/N: MMBB0361705 (1.0)

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! > The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.
> USIM is not supported in this phone.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

1 Press the release button and remove the back cover.

2 Lift battery away.


3 Insert the SIM card.

4 Insert the battery pack.

5 Attach the back cover.

6 Charge the battery.

Note: Fully charge the battery before using it for the first time.

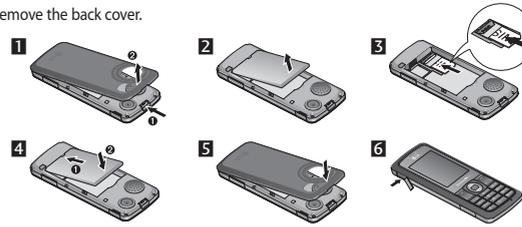

Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked [Menu] and [Contacts]. Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.



Press the left soft key to access the available Menu.

Press the right soft key to access the available Contacts.

Menu tree

1 Browser	3 Tools	5 Messaging	7 Profiles	9 Settings
1 Home	1 Alarm clock	1 New message	1 Normal	1 Date & Time
2 Yahoo!	2 Calendar	2 Inbox	2 Silent	2 Languages
3 Bookmarks	3 Calculator	3 Drafts	3 Outdoor	3 Display
4 Enter address	4 Memo	4 Outbox	4 Flight mode	4 Shortcut
5 History	5 To do	5 Sent	8 Contacts	5 Call
6 Settings	6 Unit converter	6 Listen to voicemail	1 Search	6 Security
2 Call history	7 World clock	7 Info message	2 New contact	7 Connectivity
1 All calls	8 Service Provider Name	8 Templates	3 Speed dials	8 Power save
2 Missed calls	4 Multimedia	9 Settings	4 Groups	9 Reset
3 Dialed calls	1 MP3 player	6 My stuff	5 Copy all	0 Memory status
4 Received calls	2 Camera	1 Images	6 Delete all	
5 Call duration	3 Video camera	2 Sounds	7 Settings	
6 Call costs	4 FM radio	3 Videos	8 Information	
7 Data information	5 Schedule FM record	4 Others		
	6 Voice recorder	5 External memory		
	7 Melody composer	6 Games & Apps		
	8 Ringtone creator			

Tools Menu 3 (Continued)

Calculator	The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.
Memo	You can add new memo, view and manage saved memos.
To Do	You can view, edit and add tasks to do.
Unit converter	This converts any measurement into a unit you want. There are 2 types that can be converted into units: Length, Weight
World clock	The World Clock function provides time information on major cities worldwide. Also you can set any city as your Home city and Make Daylight savings ON/OFF.

Multimedia Menu 4

MP3 player	Using the MP3 player in your phone, you can easily enjoy various music.
Camera	You can take photos with the built in camera and adjust its settings to suit your needs.
Video camera	You can record a video clip through the built-in camera.

Phone Components



Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.
2. Press and hold the End key until the power goes off.

Making a call

1. Enter a phone number including the area code.
2. Press the [Call] key to call the number.
3. To end the call, press the [End] key or the right soft key.

Making an international call

1. Press and hold the [Int'l] key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [Send] key to call the number.

Answering a call

1. When you receive a call, the phone rings and the flashing phone icon appears on the screen.
2. If the Any key has been set as the answer mode, any key press will answer a call except for the [End] key.
3. To end the call, press the [End] key.

Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

1. From the main menu, select **Settings > Security > Anti theft mobile tracker** and press OK.
2. Select **Set ATMT** and press OK.
3. Switch **On** or **Off** and press OK.
4. Input the ATMT code to enable or disable this function.
5. Edit Name, Primary and Secondary numbers and Save the settings.

Note

> The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

Call history Menu 2

All calls	You can view all lists of outgoing or incoming calls.
Missed calls	You can view the unanswered calls.
Dialed calls	You can view the outgoing calls (called or attempted).
Received calls	You can view the Received calls.
Call duration	Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.
Call cost	View the charges applied to your dialed numbers and the call duration of all your received and dialed calls. Also you can do Cost Settings.
Data information	You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

Tools Menu 3

Alarm clock	You can set the alarm clock to go on at a specified time.
Calendar	When you enter this menu, a calendar appears. A square cursor is located on the current date.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. Change the text input mode by pressing the [Mode] key. Also [Mode] key is used to change the profile to silent mode in idle screen.

T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

Symbol Mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol**. Use the navigation keys to select the desired symbol and press the OK key.

Quick feature reference

This section provides brief explanations of features on your phone.

Browser Menu 1

Home	Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.
Yahoo!	You can access to your Yahoo! Messenger, email accounts from any major providers, do a quick search, or view latest news on the Web. For more information, you can visit Yahoo!® Mobile for more information.
Bookmarks	This menu allows you to store the URL of favorite web pages for easy access at a later time.
Enter address	You can connect directly to the site you want. After entering a specific URL, press options then OK key to make the connection Done to connect to the site.
History	This menu shows the History of recently browsed pages.
Settings	You can set the profile, cache and security related to internet service.

Multimedia Menu 4 (Continued)

FM radio	With embedded FM antenna, you can receive FM radio without an external earphone. You can listen to your favourite radio station anytime. Note: In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.
Schedule FM record	This function allows you to pre-schedule FM radio recordings.
Voice recorder	You can record voice memo.
Melody composer	This function allows you to compose a ring tone or melody.
Ringtone creator	This function allows you to create your own personal ringtones by using this tool.

Messaging Menu 5

New message	This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service). Note: You can send SMS to many users at a time. Simply press Option and select Send to Many. This will open contact list where in user can mark/unmark contacts for sending SMS message. Note: To send the SMS to a particular group of contacts, simply press Options and select Send to Group after composing the SMS.
--------------------	--

Messaging Menu 5 (Continued)	
Inbox	You will be alerted when you have received messages. They will be stored in Inbox. You can save SMS up to 150 respectively (summing up all the messages in each folder; inbox, drafts, sent and outbox).
Drafts	Using 'Save to drafts' menu, you can save the message temporarily in Drafts.
Outbox	This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.
Sent	After sending out the message, the text message or multimedia message is saved in the Sent folder.
Listen to voicemail	This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).
Info message	Info service messages are text messages delivered by the network to GSM.
Templates	There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
Settings	This menu allows you to set features of your network service provider.

Settings Menu 9	
Date & Time	You can set functions relating to the date and time.
Languages	You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
Display	You can change settings for the phone display.
Shortcut	You can set the functions of 4 navigation keys to use as shortcuts in idle mode.
Call	You can set the menu relevant to a call by pressing the left soft key [OK] in the Setting menu.
Security	This menu allows you to set the phone's safety. <ul style="list-style-type: none"> > PIN code request: You can set the phone to ask for the PIN code of your SIM card when the phone is switched on. > Auto key lock: You can make the key pad locked automatically after some time. > Phone lock: You can use a security code to avoid unauthorized use of the phone. > Anti Theft Mobile Tracker: The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it. > Application lock: To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).

Guidelines for safe and efficient use (Continued)

Electronic devices

All mobile phones may get interference, which could affect performance.

- > Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- > Do not use a hand-held phone while driving.
- > Use a hands-free kit, if available.
- > Pull off the road and park before making or answering a call if driving conditions so require.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

Guidelines for safe and efficient use (Continued)

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GS200 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- > The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- > While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- > The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- > The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.966W/kg (10g) and when worn on the body is 1.07W/kg (10g).
- > SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

My stuff Menu 6	
Images	Shows the list of image files such as JPG, GIF, BMP, etc.
Sounds	Plays the list of MP3, AMR, MID, WAV, AAC files in Multimedia memory.
Videos	Displays the list of video files.
Others	Other files except images, sounds are stored in this folder.
External memory	When you insert the memory card, you can view Image, Sounds and Others menu in memory card.
Games & Apps	You can access a great selection of games and applications on your phone.

Profiles Menu 7	
In Profiles, you can adjust and customize the phone tones for different events, environments, or caller groups. There are four preset profiles: Normal, Silent, Outdoor and Flight mode.	

Settings Menu 9 (Continued)	
Connectivity	<ul style="list-style-type: none"> > Secret folder: To keep your personal data protected, you can save files in Secret folder. When secret folder feature is activated, user will be required to enter a password when accessing the selected folder. Default password is 0000. > Change codes: PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes: Security code, PIN code, PIN2 code, ATMT code.
Power save	<ul style="list-style-type: none"> > Bluetooth: This enables wireless connections between electronic devices. > Network: You can also select a network manually and set a network.
Reset	You can initialize all factory defaults. You need Security code to activate this function.
Memory status	You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Guidelines for safe and efficient use (Continued)

In aircraft

Wireless devices can cause interference in aircraft.

- > Turn off your mobile phone before boarding any aircraft.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Accessories

 
There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Travel Adapter

Connect this and the included USB cable. This allows you to charge the battery.



Headset



USB cable and CD

You can connect your phone to PC to exchange the data between them.



Note

- > Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- > Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

Contacts Menu 8	
Search	Select Search and enter the name that you want to search from the contact list.
New contact	You can register a new contact address. You can enter the name, different phone numbers, email addresses, Groups and images of a new contact.
Speed dials	You can assign any of the keys from [2-9] to [9] with a Name list entry. You can call directly by pressing this key when you are in idle screen.
Groups	You can list up to the members per each group. There are 7 groups you can make lists to.
Copy all	You can copy entries from SIM card memory to Phone memory and vice versa.
Delete all	You can delete all the entries from SIM or Phone. This function requires the security code.
Settings	You can set the contact display option.
Information	<ul style="list-style-type: none"> > Service dial number: Use this function to access a particular list of services provided by your network operator (if supported by the SIM card). > Own number: You can save and check your own number in SIM card. > My business card: This option allows you to create your own business card featuring Name, any numbers and email.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- > For your safety, use ONLY specified ORIGINAL batteries and chargers.
- > Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- > Batteries should be disposed off in accordance with relevant legislation.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- > Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- > The unit should be kept away from heat sources such as radiators or cookers.
- > Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- > Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

Guidelines for safe and efficient use (Continued)

Battery information and care

- > You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- > Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- > Do not disassemble or short-circuit the battery pack.
- > Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- > Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- > Risk of explosion if battery is replaced by an incorrect type.
- > Dispose off used batteries according to the manufacturer's instructions.

Technical Data

General

- > **Product name :** GS200
- > **System :** GSM 900 / DCS 1800

Ambient Temperatures

- > **Max. :** +55°C, Charging (0~+45°C)
- > **Min. :** -10°C

Bluetooth QD ID B015953

Declaration of Conformity		LG Electronics
Supplier Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc, LG Trade Tower 20, Yongdeong-ro, Youngdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 900 / DCS 1800 Dual band Terminal Equipment	
Model Name	GS200, GS200	
Type Name	LG	
Applicable Standards Details		
RoHS (EU Directive 2002/95/EC)	EN 50361-1:2002, EN 50361-2:2002, EN 50361-3:2002, EN 50361-4:2002, EN 50361-5:2002, EN 50361-6:2002, EN 50361-7:2002, EN 50361-8:2002, EN 50361-9:2002, EN 50361-10:2002, EN 50361-11:2002, EN 50361-12:2002, EN 50361-13:2002, EN 50361-14:2002, EN 50361-15:2002, EN 50361-16:2002, EN 50361-17:2002, EN 50361-18:2002, EN 50361-19:2002, EN 50361-20:2002, EN 50361-21:2002, EN 50361-22:2002, EN 50361-23:2002, EN 50361-24:2002, EN 50361-25:2002, EN 50361-26:2002, EN 50361-27:2002, EN 50361-28:2002, EN 50361-29:2002, EN 50361-30:2002, EN 50361-31:2002, EN 50361-32:2002, EN 50361-33:2002, EN 50361-34:2002, EN 50361-35:2002, EN 50361-36:2002, EN 50361-37:2002, EN 50361-38:2002, EN 50361-39:2002, EN 50361-40:2002, EN 50361-41:2002, EN 50361-42:2002, EN 50361-43:2002, EN 50361-44:2002, EN 50361-45:2002, EN 50361-46:2002, EN 50361-47:2002, EN 50361-48:2002, EN 50361-49:2002, EN 50361-50:2002, EN 50361-51:2002, EN 50361-52:2002, EN 50361-53:2002, EN 50361-54:2002, EN 50361-55:2002, EN 50361-56:2002, EN 50361-57:2002, EN 50361-58:2002, EN 50361-59:2002, EN 50361-60:2002, EN 50361-61:2002, EN 50361-62:2002, EN 50361-63:2002, EN 50361-64:2002, EN 50361-65:2002, EN 50361-66:2002, EN 50361-67:2002, EN 50361-68:2002, EN 50361-69:2002, EN 50361-70:2002, EN 50361-71:2002, EN 50361-72:2002, EN 50361-73:2002, EN 50361-74:2002, EN 50361-75:2002, EN 50361-76:2002, EN 50361-77:2002, EN 50361-78:2002, EN 50361-79:2002, EN 50361-80:2002, EN 50361-81:2002, EN 50361-82:2002, EN 50361-83:2002, EN 50361-84:2002, EN 50361-85:2002, EN 50361-86:2002, EN 50361-87:2002, EN 50361-88:2002, EN 50361-89:2002, EN 50361-90:2002, EN 50361-91:2002, EN 50361-92:2002, EN 50361-93:2002, EN 50361-94:2002, EN 50361-95:2002, EN 50361-96:2002, EN 50361-97:2002, EN 50361-98:2002, EN 50361-99:2002, EN 50361-100:2002	
Regulatory Information		
This conformity to above standards is verified by the following notified body (NBD): BVL, Pöchlinger-Strasse 1, 4040 Linz, Austria Notified Body Identification Number: 0103		
Declaration		
I hereby declare under my sole responsibility that the product mentioned above is in full conformity with the applicable standards and directives.	Name Seung-Hyun, J / Director	Issued Date 18. Sep. 2009
Responsible Contact LG Electronics, LG Trade Tower, 20, Yongdeong-ro, Youngdeungpo-gu, Seoul, Korea 150-721 e-mail: jpd@lg.com		
Signature of representative		