



KP265 User Guide

CE 0168

MMBB0301383 (1.0) G

LG ELECTRONICS INC.

KP265

ENGLISH

Bluetooth QD ID B014198

KP265 User Guide

- ENGLISH



Contents

Introduction	6	General functions	23
For your safety	7	Making a Call	
Guidelines for safe and efficient use	8	Answering a Call	24
KP265 features	13		
Parts of the phone		In-call menu	25
Display Information	17	During a Call	
On-Screen Icons		Conference Calls	26
Installation	19	Menu Tree	28
Installing the SIM card and the handset battery		Games & Apps	30
Charging the Battery	21	Games	
Disconnecting the charger	22	Applications	
Turning Handset ON/OFF		Network profiles	

Call history	31
All calls	
Missed calls	
Dialled calls	
Received calls	
Call duration	32
Call costs	
Data information	

Organizer	33
Calendar	
Memo	
To do	

Multimedia	34
MP3 player	
Camera	35
Video camera	37
FM Radio	
Voice recorder	38

Messaging	39
New message	
Inbox	
Bluetooth box	40
Drafts	
Outbox	
Sent	41
Listen to voicemail	
Info messages	
Templates	42
Settings	43

Contents

My stuff	46	Tools	51
Images		Alarm clock	
Sounds		Calculator	
Videos		Stopwatch	
Others	47	Unit converter	
External memory		World clock	52
		SIM services	
Profiles	48		
Contacts	49	WAP	53
Search		Home	
New contact		Bookmarks	54
Speed dials		Enter address	
Groups	50	History	
Copy all		Saved pages	
Delete all		Settings	
Settings		Information	55
Information			

Connectivity	56
Bluetooth	
Network	
USB connection	57
Settings	58
Date & Time	
Languages	
Display	
Shortcut	59
Call	
Security	61
Flight mode	62
Power save	
Reset	
Memory status	
Accessories	63
Technical data	64

Introduction

Congratulations on your purchase of the advanced and compact KP265 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

For your safety

Warning!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*
- *Not to charge a handset near flammable material as the handset can get hot and smoulder the material, hence possible house fire.*

Caution!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TV's, radios, PCs, etc.*
- *Batteries should be disposed off in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*
- *Risk of explosion if battery is replaced by an incorrect type.*

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KP265 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.276 W/kg (10g) and when worn on the body is 0.358 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

Product care and maintenance

Warning!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.

Guidelines for safe and efficient use

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.

- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long period of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals factory.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

Guidelines for safe and efficient use

Battery information and care

- ▶ You need not completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ Risk of explosion: If battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions.
- ▶ If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- ▶ Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.


KP265 features

Parts of the phone


Front view




KP265 features

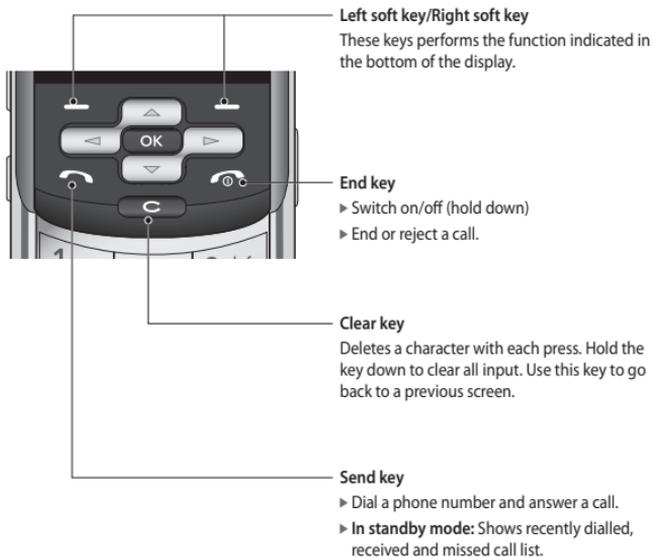

Left side view

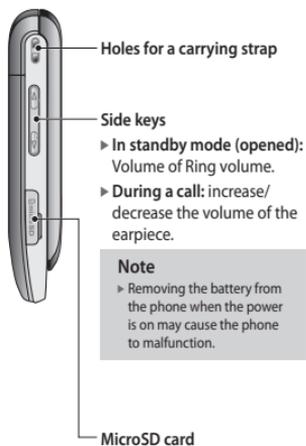


Right side view

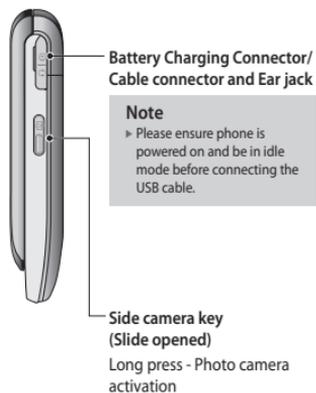


KP265 features

Rear view

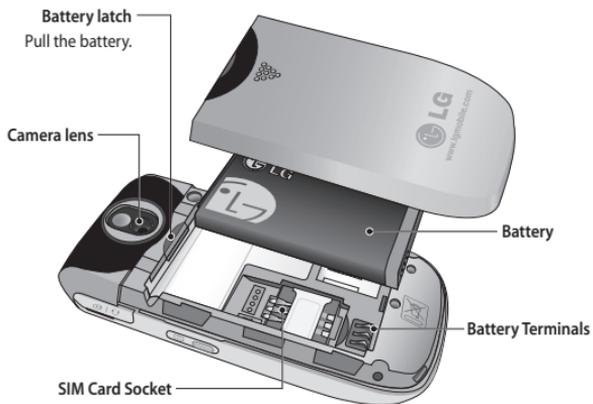

Display Information

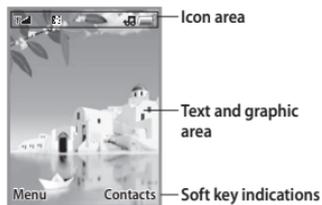

Area	Description
First line	Displays various icons.
Middle lines	Display messages, instructions and any information that you enter, such as number to dialled.
Last line	Shows the functions currently assigned to the two soft keys.

The screen displays several icons. These are described below.

On-Screen Icons

Icon	Description
	Tells you the strength of the network signal.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	Vibrate only menu in Profiles.
	Schedule
	External memory
	Flight mode
	WAP Connection
	GPRS available
	Calling

KP265 features

Icon	Description
	General menu in Profiles.
	Outdoor menu in Profiles.
	Silent menu in Profiles.
	Headset menu in Profiles.
	You have divert a call.
	You have activated Bluetooth connectivity.

* The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and poor audio. Please refer to this signal as an indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

Installation

Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1. Remove the battery.

Slide down the battery cover and pull out the battery.




Note


► Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Install the SIM card.

Insert and slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

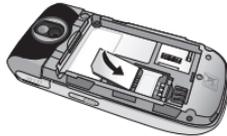

To insert the SIM card

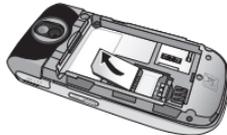

To remove the SIM card

Installation

Note

- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

Warning!

- Do not replace or remove the SIM card while your phone is being used or turned on, or data on the SIM card might be damaged.

3. Install the battery.

Insert the battery onto the back of the phone, and push the battery cover upwards until it snaps back into place.



Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. Ensure the battery is fully charged before using the phone for the first time.
2. With the arrow facing you as shown in the diagram push the plug on the travel adapter into the socket on the side of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the main socket. Use only the charger included in the box.
4. The moving bars of battery icon will stop after charging is complete.

Caution!

- *If the battery is completely discharged, the charging display will appear on the LCD approximately 1 to 1.5 minutes after connecting TA.*
- *Do not force the connector as this may damage the phone and/or the travel adapter.*
- *Insert the battery pack charger vertically to wall power outlet.*
- *If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.*
- *Do not remove your battery or the SIM card while charging.*

Warning!

- *Unplug the power cord and charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. There is a risk of this causing a fire.*

Installation

Disconnecting the charger

Disconnect the charger from the phone by pulling the connector, not the cord.



Turning Handset ON/ OFF

Turning your Handset On

Ensure that your SIM card is in your handset and the battery is charged. Press and hold  until the power comes on. Enter the SIM PIN code that was supplied with your SIM card if the **PIN code request** is set to **On**.

After a few seconds you will be registered on the network.

Turning your Handset Off

Press and hold  until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

General functions

Making a Call

1. Make sure your phone is powered On.
2. Enter a phone number including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  key to call.
4. When you want to end a call, press the  key.

Making a Call by Send Key

1. Press the  key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation key.
3. Press the  key.

Making International Calls

1. Press and hold the  key for the international prefix. The + character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

Ending a Call

When you have finished a call, press the  key.

Making a Call From the Contact list

You can store names and phone numbers dialled frequently in the SIM card as well as the phone memory.

You can dial a number by simply looking up a name in the contact list.

General functions

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the key volume using the side keys.

Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Address Book) is displayed.

1. Slide up, press the  key, or the left soft key to answer an incoming call. If the Any Key menu option (Menu #.5.4.2) has been set, any key press will answer a call except for the  key or the right soft key.
2. End the call by closing the slide or pressing the  key.

Note

- ▶ You can answer a call while using the Address Book or other menu features. In case phone is connected with PC via USB cable, call and messages are not available.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key  [Options].

During a Call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

Making a Second Call (Network Dependent)

You can search and dial the number from Address Book to make a second call.

Swapping Between Two Calls

To switch between two calls, press  key or the left soft key, and then select Swap Call.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as Call waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting (Menu #.5.6).

If Call Waiting is Active, you can put the first call on hold and answer the second, by pressing the left soft key .

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the  key.

In-call menu

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature. A conference call can only be set up when you have one active call and one call on hold, both calls having been answered.

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call

You can make a second call while currently in call. Enter the second number and press the  key.

When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

Activate the Conference Call on Hold

To activate a conference call on hold, press the  key. Alternatively press the left soft key [Options] and select Join all/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key  [Options] followed by Conference call.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the  key.

Menu Tree

The menu in this phone can be displayed in 2 ways. One is by grid view type and secondly by list view type. Please note that menu number options are different in each view.

The default setting on the phone is set to show the menu in grid view type, so therefore all the menu number selections throughout the manual are shown according to that setting.

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and the [OK] key. You can also take a shortcut by pressing the corresponding number key of desired menu after pressing the left soft key [Menu].

1. Games & Apps 1.1 Games 1.2 Applications 1.3 Network profiles	3. Organizer 3.1 Calendar 3.2 Memo 3.3 To do	5. Messaging 5.1 New message 5.2 Inbox 5.3 Bluetooth box 5.4 Drafts 5.5 Outbox 5.6 Sent 5.7 Listen to voicemail 5.8 Info messages 5.9 Templates 5.0 Settings
2. Call history 2.1 All calls 2.2 Missed calls 2.3 Dialed calls 2.4 Received calls 2.5 Call duration 2.6 Call costs 2.7 Data information	4. Multimedia 4.1 MP3 player 4.2 Camera 4.3 Video camera 4.4 FM Radio 4.5 Voice recorder	

6. My stuff
6.1 Images
6.2 Sounds
6.3 Videos
6.4 Others
6.5 External memory
7. Profiles
7.1 General
7.2 Silent
7.3 Vibrate only
7.4 Outdoor
7.5 Headset
8. Contacts
8.1 Search
8.2 New contact
8.3 Speed dials
8.4 Groups
8.5 Copy all
8.6 Delete all
8.7 Settings
8.8 Information

9. Tools
9.1 Alarm clock
9.2 Calculator
9.3 Stopwatch
9.4 Unit converter
9.5 World clock
9.6 SIM services
*. WAP
*.1 Home
*.2 Bookmarks
*.3 Enter address
*.4 History
*.5 Saved pages
*.6 Settings
*.7 Information

0. Connectivity
0.1 Bluetooth
0.2 Network
0.3 USB connection
#. Settings
#.1 Date & Time
#.2 Languages
#.3 Display
#.4 Shortcut
#.5 Call
#.6 Security
#.7 Flight mode
#.8 Power save
#.9 Reset
#.0 Memory status

Games & Apps

Games

Menu 1.1

Your KP265 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Applications

Menu 1.2

You can manage the Java applications installed in your phone by using the Applications menu. You can also delete downloaded applications.

Network profiles

Menu 1.3

To download a game, you can set the value to connect to the network using Network profile.

Call history

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

All calls Menu 2.1

You can view all lists of dialled, missed and received calls.

Missed calls Menu 2.2

This option lets you view the last 50 unanswered calls. You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter a new name for the number and save in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

Dialled calls Menu 2.3

This option lets you view the last 50 outgoing calls (called or attempted). You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

Received calls Menu 2.4

This option lets you view the last 50 incoming calls. You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save both in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

Call history

Call duration Menu 2.5

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Received calls:** Length of the incoming calls.

Call costs Menu 2.6

Allows you to check the cost of your Last call and All calls.

To check Cost settings, you should check the following menus.

- ▶ **Set credit:** This network service allows you to limit the cost of your calls by selected charging units. If you select Read, the number of remaining unit is shown. If you select Change, you can change your change limit.

- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.

- ▶ **Auto display:** This network service allows you to see automatically the cost of your last calls. If set to On, you can see the last cost when the call is released.

Data information Menu 2.7

You can check the amount of data transferred over the network through the GPRS information option.

In addition, you can also view how much time you were Online.

Organizer

Calendar

Menu 3.1

When you enter this menu a calendar will show up. On top of the screen there are sections for date. Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see marked date in the calendar, it means that there is a schedule on that day. This function helps to remind you of your schedule and memo.

To change the day, month, and year.

Key	Description
	Yearly
	Monthly
	Weekly
	Daily

Memo

Menu 3.2

1. Select the Memo by pressing the left soft key  [OK].
2. If the entry is empty, press the left soft key  [New].
3. Input the memo and then press left soft key  [Options] > [Save].

Note

▶ If you want to change the text input mode, press the  in order.

To do

Menu 3.3

You can view and create To do notes.

1. Select the To do by pressing the left soft key  [OK].
2. If the note is not created yet, press the left soft key  [New].
3. Input the to do and then press the left soft key  [Options] > [Save].

Multimedia

You can enjoy your multimedia function such as camera, voice recorder, MP3 for your fun and convenience.

Note

- ▶ When the status of the battery indicates low, you can not use Camera or Multimedia function.
- ▶ While using Multimedia function, the status of the battery is changeable.

MP3 player

Menu 4.1

The KP265 has an integrated MP3 player built-in.

You can enjoy listening to MP3 music files on your phone using a compatible headset or via the internal loudspeaker.

Note

- ▶ Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable, and then you can see removable disk through windows explorer. After you copy songs in removable disk, you should execute safe remove from your system.

Note

- ▶ You should copy MP3 to Sounds/MP3 folder. If you copy another folder, you can't see MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.
- ▶ Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Camera

Menu 4.2

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

Note

- ▶ When using the camera, power consumption increases. If this icon  appears on the wallpaper, indicating low battery, recharge the battery before use.

Shutter sound or video recording sound is omitted even when setting mode, including silent mode .

• To take a picture

Hold down the camera  button.

- To take clear pictures, press the camera  button while holding the camera without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).
- Handle carefully since the camera is vulnerable to shock and use a soft cloth when cleaning the camera lens.
- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.

Multimedia

1. Hold down the  in standby mode.
2. Focus on the subject to capture the image, and then press the  /  key.

Note

- ▶ You can adjust the brightness by using the  , .

To change the below functions, press the left soft key  [Options].

- ▶ **Resolution:** Allows you to set the image size. (1280x960), (640x480) and (320x240).
- ▶ **Quality:** Allows you to set the image quality from Normal, Fine and Super fine.
- ▶ **Self timer:** Allows you to select the delay time (Off, 3 seconds, 5 seconds, 10 seconds). Then the phone takes a photo after the specified time.
- ▶ **View option:** Allows you choose Full image or Full screen.
- ▶ **Save to:** You can set the space after taking a picture. (External/Phone)
- ▶ **Multi shot:** Allows you to take multishot photos successively.
- ▶ **Effects:** Four settings are available.
- ▶ **White balance:** Allows you to change the settings according to the environment.
- ▶ **Shutter tone:** You can set the sound when taking a picture.
- ▶ **Reset settings:** Allows you to reset the settings.

Video camera Menu 4.3

1. Select Video camera menu.
2. Video camera settings menu is the same with Photo camera settings, except following items:

To change the below function, press the left soft key  [Options].

- ▶ **Video mode:** Allows you to set to send a video file through MMS or General.

FM Radio Menu 4.4

You can search radio stations and enjoy listening to the radio.

Note

- ▶ To improve the radio reception, extend the headset cord which functions as the FM antenna.

1. Press the corresponding number key of a channel to store the currently selected radio station.
2. After presetting radio channels, you can listen to other channel by pressing the corresponding number key (short press).
3. You can access the following option menus by pressing the left soft key  [Options].
 - ▶ **Edit channels:** You can adjust frequency and change the radio station in the selected channel. You can change the frequency 0.1 MHz at a time with Left/Right navigation keys and number keys.
 - ▶ **Auto scan:** If you select "Auto Scan Now?" On, automatically set the radio channel. "Save this station?" message will be popped up, if you select Yes, the selected frequency will be stored.
 - ▶ **Reset channels:** You can delete all channels you saved.
 - ▶ **Listen via speaker/Wired headset:** You can listen to the radio via speaker.

Multimedia

Voice recorder Menu 4.5

You can record voice memo.

Record

1. Press OK to start recording. Once recording is started, the message Rec and the counter is displayed.
2. If you want to finish recording, press right soft key [Stop].

Album

You can view the Sounds folder which lists all sound files saved in the memory.

Messaging

New message Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

Message

You can write and edit text message, checking the number of message pages.

1. Enter the New message menu by pressing the left soft key  [OK].
2. If you want to write a new message, select Message.
3. To make text input easier, use T9.
4. Press [Options] to attach the followings.

Options

- ▶ **Send to:** Sends text messages.
 1. Enter numbers of recipients.
 2. Press  key to add more recipients.

3. You can add phone numbers from the address book.
4. Press the  [Options] and then press send after entering numbers. If the message sent is failed, it will be saved in the outbox folder.

Bluetooth message

To send/receive the message via Bluetooth, you should switch on the Bluetooth.

Inbox Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox. You can save SMS up to 110 (SMS: 100, Delivery report: 10). If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for new message', you can make space of each repository as deleting messages, media and applications.

Messaging

- ▶ **View:** You can view the received messages.
- ▶ **Delete:** You can delete the current message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.
- ▶ **Save number:** Choose the contact type (New contact or Update contact).
- ▶ **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **New message:** By selecting this menu, you can write a new message.
- ▶ **Multi delete:** After selecting the messages you want to remove, you can delete the selected messages.

- ▶ **Delete all read:** You can delete all read messages.
- ▶ **Delete all:** You can delete all messages.

Bluetooth box Menu 5.3

All messages you receive via Bluetooth are placed into your Bluetooth box. Here you can read, reply to and forward your messages.

Drafts Menu 5.4

Use this menu, allows you to save messages you have not finish writing or still to be send.

Outbox Menu 5.5

This menu allows to view the message which is about to send or is failed to send.

After sending the message successfully, the message will be moved to sent box.

Sent

Menu 5.6

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

Listen to voicemail

Menu 5.7

Once this menu has been selected, simply press the left soft key  [OK] to Listen to voicemail. You can also hold down the  key in standby mode to Listen to voicemail.

Note

- ▶ When you receive a voice mail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

Info messages

Menu 5.8

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Each type of info message has the number; therefore, you can contact service provider as long as you have input the certain number for the information.

When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed.

Messaging

Templates

Menu 5.9

Text templates

- ▶ **View:** You can see text templates.
- ▶ **Edit:** Use this to edit the selected template message from the text template list.
- ▶ **Send via**
 - **Message:** Use this to send the selected template message by message.
 - **Bluetooth message:** This menu allows you to send the message via Bluetooth.
- ▶ **Delete:** Deletes the template.
- ▶ **New template:** Use this to create new template.
- ▶ **Delete all:** Allows you to delete all Text Templates.

Multimedia templates

After saving new template, you can use the following options.

- ▶ **View:** You can see multimedia templates.
- ▶ **Edit:** Use this to edit the selected template message from the multimedia template list.
- ▶ **Send:** Use this to send the selected template message by MMS.
- ▶ **Delete:** Deletes the template.
- ▶ **New template:** Use this to create new template.
- ▶ **Delete all:** Allows you to delete all Multimedia Templates.

Settings

Menu 5.0

Text message

- ▶ **Message type:** Text, Voice, Fax, Paging, X.400, Email, ERMES.
- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to On, you can check whether your message is sent successfully.
- ▶ **Reply Charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- ▶ **Message center number:** If you want to send the text message, you can receive the address of SMS centre through this menu.

- ▶ **Character encoding:** Choose how the characters in your messages are encoded, this impacts the size of your message and therefore data charges.
- ▶ **Send long text as:** Choose to send as **Multiple text message** or as **Multimedia message**.

Multimedia message

- ▶ **Slide duration:** Displays the duration of each page when viewing the message.
- ▶ **Delivery time:** Deliver your message at a specific time.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your multimedia messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to On, you can check whether your message is sent successfully.

Messaging

- ▶ **Read report:** You can receive the report whether the receiver read the message or not.
- ▶ **Auto download:** If you select On, you receive multimedia messages automatically. If you select Off, you receive only notification message in the inbox and then you can check this notification. If you select Home network only, you receive multimedia messages depends on Home network.
- ▶ **Network profiles:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted Message Types**
 - Personal:** Personal message.
 - Advertisement:** Commercial message.
 - Information:** Necessary information.

Voicemail number

You can receive voicemail if your network service provider supports this feature. When a new voicemail is received, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

Service message

You can set the option whether you want to receive the message or not.

Info message

▶ Receive

On: If you select this menu, your phone will receive Info service messages.

Off: If you select this menu, your phone will not receive Info service messages any more.

▶ **Alert**

On: Your phone will beep when you have received Info service message.

Off: Your phone will not beep even though you have received info service messages.

▶ **Languages**

You can select the language you want by pressing OK key. Then, the info service message will be shown in the language that you selected.

My stuff

Images

Menu 6.1

Shows the list of files at My stuff/ Images in Multimedia memory.

- ▶ **View:** You can see the file when pressing OK key or selecting View menu of Option menus.
- ▶ **Set as**
 - **Wallpaper:** Currently selected image can be set as a wallpaper.
 - **Picture ID:** Currently selected image can be set as a Picture ID.
- ▶ **File info:** Show the file information such as name, size, date, time and type.
- ▶ **Slide show:** You can view a slide show of the files you stored.
- ▶ **New folder:** You can create a new folder.
- ▶ **Sort by:** You can arrange the files as a date, type and name.
- ▶ **List view/List with detail view/ Grid view:** Allows you to set the view type.

Sounds

Menu 6.2

Displays the list of MP3, MIDI, AAC, AMR, MMF files at My stuff/Music in Multimedia memory.

- ▶ **Play:** You can play the sound file when pressing OK key or selecting Play menu of Option menu.
- ▶ **Set as:** Currently selected sound can be set as a Ringtone/Ringtone ID.
- ▶ **Sort by:** You can arrange the files as a date, type and name.

Videos

Menu 6.3

Show the list of 3GP, 3G2 files at My stuff/Videos in Multimedia memory. Supported only .3gp files, that are encoded with MPEG4 and h.263 video-codecs and AMR audio-codecs.

- ▶ **Play:** You can play the video file by pressing OK key or selecting Play menu of Option menu.
- ▶ **Send via:** Send the selected file to another device via Multimedia Message or Bluetooth.

Warning!

• You can't use the following characters, \ / : * ? < > | to name a folder or a file.

- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as a date, type and name.

Others

Menu 6.4

Show the list of files in My media/
Others in the Multimedia memory.

External memory

Menu 6.5

If you've inserted a memory card it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into further folders: **Images**, **Sounds**, **Videos** and **Others**.

Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

Some profiles (General, outdoor, headset) can be personalized. Press the left soft key [Menu] and select Profiles using up/down navigation keys.

Contacts

Search

Menu 8.1

1. Select Search by pressing the left soft key  [OK].
2. Enter the name that you want to search.

Note

► Instant searching is available by inputting the initial letter of the name.

New contact

Menu 8.2

You can add phonebook entry by using this function. SIM card memory capacity depends on the cellular service provider. The number of character is SIM dependent feature.

Note

► Maximum stored name and number length depends on SIM-card type.

1. Select New contact by press left soft key  [OK].
2. Input a name.
3. Press  , then you can input a number.
4. You can set a group for the entry by pressing  , .
5. You can set a ringtone and a photo for the entry by press left soft key  [Options].

Speed dials

Menu 8.3

You can assign any of the keys  to  with a Name list entry. You can call directly by pressing this key.

1. Open the contacts first by pressing the right soft key  [Contacts] in standby mode.
2. Scroll to Speed dials, then press the left soft key  [OK].
3. If you want to add speed dial, select <Empty> by pressing the left soft key  [Assign]. Then, you can search the name in contacts.

Contacts

4. After assigning the number as speed dial, you can change and remove the entry. You can also make a call or send a message by this number.

Groups Menu 8.4

You can list up to 1000 members per each group. There are 7 groups you can make lists to.

Copy all Menu 8.5

You can copy entries from SIM card memory to Phone memory or vice versa.

Delete all Menu 8.6

You can delete all entries from SIM or Phone.

Settings Menu 8.7

1. Press the right soft key  [Contacts] in standby mode.
2. Scroll to Settings, then press the left soft key  [OK].

Information Menu 8.8

▶ Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

▶ Own number (SIM dependent)

You can save and check your own number in SIM card.

▶ My business card

This option allows you to create your own business card featuring name and a mobile phone number.

To create a new business card, press the left soft key  [New] and enter the information into the fields.

If you want to edit, delete or to send a business card, select left soft key  [Options].

Tools

Alarm clock

Menu 9.1

You can set the alarm clock to go on at a specified time.

Calculator

Menu 9.2

This contains the standard functions such as +, -, x, / Addition, Subtraction, Multiplication, and Division.

Furthermore, you can use the various function of calculator such as +/-, sin, cos, tan, log, ln, exp, sqrt.

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  key to view the result.
5. To input the decimal number, press  key.
6. To end Calculator, press the right soft key  [Back].

Stopwatch

Menu 9.3

1. Press [Start] to take time and record the lap time by pressing [Lap].
2. Press [Stop] to ascertain the record of lap time.
3. Press [Reset] to default condition.

Unit converter

Menu 9.4

This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume and Velocity.

1. You can select one of unit types by pressing  [OK] key.
2. Select the unit you want to convert by pressing  ,  . It is impossible to input “-” symbol in unit converter.

Tools

World clock

Menu 9.5

You can view clocks of the worlds major cities.

1. Select the city belonged to the time zone by pressing  ,  key.
2. You can set the current time to the city time you select by pressing the left soft key [OK].

SIM services

Menu 9.6

This feature depends on SIM and the network services.

In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

WAP

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use.

Service providers will also give you instructions on how to use their services.

Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the  key. The phone will return to the idle screen.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
	Scrolls each line of the content area
	Returns to the previous page
	Select options and confirm actions

Home

Menu *.1

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

WAP

Bookmarks

Menu *.2

This menu allows you to store the URL of favourite web pages for easy access at a later time.

To create a bookmark.

1. Press the left soft key  [Options].
2. Select New bookmark and press the OK key.
3. After entering the desired URL and title, press the OK key.

Enter address

Menu *.3

You can connect directly to the site you want. After entering a specific URL, press the OK key.

History

Menu *.4

This menu shows the recently browsed pages.

Saved pages

Menu *.5

The phone can save the page on display as an offline file.

Settings

Menu *.6

You can set the profile, cache and security related to internet service.

Network profile

A profile is the network information used to connect to the Internet.

There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

Cache

The information or services you have accessed are saved in the cache memory of the phone.

Note

- ▶ A cache is a buffer memory, which is used to save data temporarily.

Security certificates

You can see the list of personal certificates that have been stored in your phone.

Show image

You can select to display image or not during WAP browsing.

JavaScript

Select whether to turn JavaScript **On** or **Off**.

Information Menu *.7

This menu shows you about the version of WAP.

Connectivity

Bluetooth

Menu 0.1

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Network

Menu 0.2

You can select a network which will be registered either automatically or manually.

Network selection

Usually, the network selection is set to Automatic.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected Automatic, the phone will be set to Automatic even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator.
The phone lets you select another network if the phone fails to access the selected network.

- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

GPRS attach

You can set GPRS service depending on various situations.

USB connection Menu 0.3

You can choose one mode of Data service and USB Mass storage.

▶ **Mass storage**

You can connect your phone to your PC, as a USB storage device, using the cable in three ways.

1. Connect the phone to the PC when the idle (or Top menu) screen is displayed.
2. Connect the phone while it is performing an operation or menu function, and then move to the idle (or Top menu) screen.

3. Connect the phone while it is performing an operation or menu function, and then select the USB Mass Storage menu.

When you have finished using the phone memory, click Exit and take the following steps.

1. Click on the notification area.
[Unplug or Eject Hardware]
2. Select USB mass Storage Device, click on Stop.
The following message will appear: The USB Mass storage device can now be safely removed from the system.
3. Then remove the cable.

Settings

Date & Time

Menu #.1

You can set functions relating to the date and time.

Languages

Menu #.2

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Display

Menu #.3

Wallpaper

You can select the background pictures in standby mode.

Backlight timer

You can set the light-up duration of the display.

Brightness

You can set the brightness of LCD:
100%, 80%, 60%, 40%

Home screen shortcut

Selecting On displays the functionalities of 4 Navigation keys and Menu key as pictures on the middle of the idle window.

Menu style

Your phone provides you with Grid and List menu themes. Set the menu style by scrolling and pressing the left soft key  [OK].

Standby text

If you select On, you can edit the text which is displayed in standby mode.

Network name

If this function is activated, network name will be displayed on LCD.

Shortcut

Menu #.4

This option allows you to add your own favourites to the list already provided. Once you create your own menu, you can access the desired function quickly in the idle screen by pressing the right navigation key.

Note

- ▶ Radio menu is already provided in your own favourites.

Call

Menu #.5

You can set the menu relevant to a call by pressing  [OK] in the Setting menu.

Call divert

The Call divert service allows you to divert incoming voice calls, and data calls to another number. For details, contact your service provider.

Call barring

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call

barring password. You can view the following submenus.

▶ All outgoing

The barring service for all outgoing calls.

▶ Outgoing international

The barring service for all outgoing international calls.

▶ O/G international expect home country

The barring service for all international outgoing calls when roaming

▶ All incoming

The barring service for all incoming calls.

▶ Incoming when abroad

The barring service for all incoming calls when roaming.

▶ Cancel all barrings

You can cancel all barring services.

▶ Change password

You can change the password for Call Barring Service.

Settings

The submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.

- **View status**

View the status whether the calls are barred or not.

Fixed dial number

(SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

Answer mode

▶ **Any key**

If you select this menu, you can receive a call by pressing any key except  [End]/  keys.

▶ **Send key only**

If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number

(network and subscription dependent)

▶ **Set by network**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

Call waiting

(network dependent)

▶ **Activate**

If you select Activate, you can accept a waiting (receiving) call.

▶ **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

▶ **View status**

Shows the status of Call waiting.

Minute minder

If you select On, you can check the call duration by a beep sound given every minute during a call.

Auto redial

► On

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

► Off

Your phone will not make any attempts to redial when the original call has not connected.

Send DTMF tones

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

Security

Menu #.6

PIN code request

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [OK].
2. Set On/Off.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Auto key lock

This menu allows to set the time of Auto key lock.

Phone lock

You can use a security code to avoid unauthorised use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to When switch on.

Settings

If you set phone lock to When SIM changed, your phone will request security code only when you change your SIM card.

Change codes

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorised person.

You can change the access codes:

Security code, PIN2 code, and ATMT code.

1. If you want to change the Security code/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/ PIN2 code and verify them.

Flight mode Menu #.7

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

Power save Menu #.8

If you set On, you can save the power when you don't use the phone.

Reset Menu #.9

You can initialize all factory defaults. You need Security code to activate this function.

Memory status Menu #.0

You can check free space and memory usage of phone, sim card and external memory (if inserted).

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Hands free ear microphone



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

General

Product name: KP265

System: GSM 900 / DCS 1800 /
PCS 1900

Phone usage temperature limit

Normal: 55 °C

When charging: 45 °C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KP265, KP265c

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

EN 301 511 V9.0.2

EN 300 328 V1.6.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body (BABT)

BABT, Ballfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Velduuzoom 15, 3327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director May 26, 2008


Signature of representative

LG MOBILE PHONE WARRANTY

Middle East & Africa



www.lgservice.com
www.lgmobile.com



Terms & Conditions

Your LG mobile phone and all accessories included in this package are under LG warranty across the countries mentioned in the back of this card for a period of 12 months from purchase date (pls. refer to list of coverage at the back), and (6 months for battery). Warranty support at LG Authorized Service Centers will be provided upon presentation of this warranty card. Warranty covers only those models that are sold in that particular market.

This Warranty is not applicable if this telephone has:

1. Been mishandled, misused, willfully damaged, neglected, improperly tested, liquid damaged, repaired, altered or defaced in any way.
2. A defect arising as a result of any failure to follow instructions either in the manual or product specification.
3. A defect which has arisen from the use of non LG approved accessories or ancillary items attached or in connection with the telephone.



Warranty Card

Kindly fill in all details below at the time of purchase

REFERENCE NO.:

Customer's Name:

Product/ Model:

Serial No.:

IMEI No.:

Dealer's Name:

Date of Purchase:

Invoice/ Cash memo Details:

Operator/ Distributor's Stamp

**LG**

Life's Good

Authorized Service Centers

CIC No. 0861-545454 (LGLGLG)

Tel.No. 27-11-571-6700, Fax No. 27-11-822-5751,

Regional

Middle East

UAE	800 54
KSA	+96612112345
	+96638343000
Qatar	+9744315865
Oman	+96824502866/8
Bahrain	+97317403304
Yemen	+96771503240
Iran	+982188302922
Egypt	19960
Syria	+963113347720/1
Jordan	+96265510137

Africa

Morocco	081005454
Tunisia	+21670838424
Libya	+218213405695
Algeria	+21321917494
Kenya	+25420252240/1
Nigeria	+23418935454
South Africa	0861545454

Others

Turkey	+902165450404
Pakistan	+92214388271/74



LG
Life's Good

Customer Registration Form

Kindly fill in all details below and fax/email to your Local Customer Care.

REFERENCE NO:
Date of Purchase:
Customer's Name:.....
Tel: Fax:
Email:.....
Address:
Product/ Model:.....
Serial No.:
IMEI No.:
Date of Purchase:
Distributor's Name:.....
Dealer's Name:





Stamp

To,
LG Electronics S.A (Pty) Ltd.
181, Barbara Road, Elandsfontein, Johannesburg,
P.O.Box 473, Isando 1600, South Africa.



XPERIENCE

WINNING CELLULAR SERVICE

@ MONTECASINO

Thank you for buying a LG Mobile phone



Visit our LG Mobile Care Lounge

where you and your mobile phone receive five star

Service

Quality

Value

Advice



Visit the LG Xperience Store for the latest in mobile technology, content and accessories. Qualified and experienced staff are on call for all your mobile needs.

Find us at Monte Casino, opposite Nu Metro, Johannesburg

Call: 011 511 0184

