

LG-C300 User Guide

Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.



Disposal of your old appliance

- When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



www.lg.com
Bluetooth QD ID B016671

P/N: MMBB0392918(1.0)

Getting to Know Your Phone

Earpiece

Send key

- Dials a phone number and answers a call.
- In standby mode:** Shows the history of calls.

Alpha numeric keys

- In standby mode:** Input numbers to dial
- Hold down**
 - International calls
 - Connect voice mail centre
 - Speed dials
- Hold the key down to go Silent mode

Confirm key / OK key

- Selects menu options and confirms actions.

Soft keys (Left soft key / Right soft key)

- These keys perform the function indicated in the bottom of the display.

Main LCD

End key

- Switch on/off (hold down)
- End or reject a call.

Navigation key

- In standby mode:**
 - Briefly: Mp3 player
 - Briefly: Camera
 - Briefly: Toolbar when it was set. (Menu > Settings > Display > Homescreen > Display Items)
- In menu:** Scroll up & down.

Charger/USB cable connector

Side keys

- In standby mode:** Controls the ring volume.
- During a call:** Earpiece volume adjustment
- During playing MP3 music:** Audio volume adjustment

Battery cover

Headset

Camera lens

SIM card holder

Battery pack

TIP: Please ensure the phone is powered on, external memory card is inserted and in idle mode before connecting the USB cable for Mass Storage.

Installing the SIM Card and Charging the Battery


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- Open the battery cover
 - Remove the battery
 - Insert your SIM
 - Insert your battery
 - Close the battery cover
 - Charge your battery
- If the phone won't turn on, or if the display freezes or doesn't respond, follow the instructions for installing the battery again.

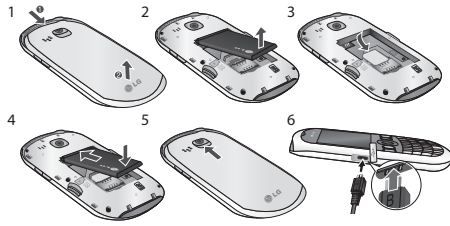

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

After taking a photo

Your captured photo will appear on the screen. The image name is shown on the bottom top of the screen with five icons on the bottom side.

- Album** - View the pictures and videos you have taken in your Album.
- Send** - Send the photo as Message, as an Email or via Bluetooth.
- New** - Take another photo straight away.
- Set as** - Use the image as Wallpaper, as a Contact image, or in your Start up image or Shut down image.
- Delete** - Delete the photo you have just taken. The viewfinder will reappear.

Video Camera

Shooting a quick video

- Press **Menu** and select **Camera** and choose **Video Camera**. The video camera's viewfinder will appear on screen.
- Focus the camera on what to record.

- Select the **Rec.** icon on the bottom-centre of the screen and press **OK** to take a video. **Rec.** will appear at the bottom of the viewfinder. Press **OK** again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen. After recording a video clip, you can check the menu as follows:

- Album** - View the pictures and videos you have taken in your Album.
- Play** - Play the file.
- New** - Press to shoot another video straight away.
- Send** - Send the video as Message, as an Email or via Bluetooth.
- Delete** - Delete the video you have just made. The viewfinder will reappear.

- Text message centre** - Enter the details for your message centre.
 - Delivery report** - Choose to receive confirmation that your message have been delivered.
 - Validity period** - Choose how long your messages are stored at the message centre.
 - Message types** - Convert your text into Voice, Fax, X.400 or Email.
 - Character encoding** - Choose how your characters are encoded. This affects the size of your message and therefore data costs.
 - Send long text as** - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2 pages in the message field.
- Changing your multimedia message settings**
- Press **Menu**, select **Messaging**, then choose **Settings** and **Multimedia message**. You can make changes to:
- Retrieval mode** - Choose to automatically or manually download multimedia messages depending on whether

Calling

Making a Call

- Make sure your phone is on.
- You can use the keypad. To delete a digit press **⏏** or the back arrow.
- Press **☎** to begin the call.
- To end the call, press **⏏**.

TIP! To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your Phonebook.

- Press **Menu** to open the main menu. Select **Phonebook**.
- Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- Press **☎** to begin the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press **⏏** to answer the call.

While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press **⏏** or select **Reject** in order to reject an incoming call.

NOTE: In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialing

You can assign a speed dial number to a contact you call frequently.

Viewing your Call History

You can only check the log of missed, received and dialed calls if the network supports Calling Line Identification (CLI) within the service area.

- Albums** - Allows you to view all tracks sorted by album.
- Genres** - Allows you to view all tracks sorted by genre.
- Shuffle all songs** - Allows you to play all of the songs in random order.

E-Mail

Sending an email using your new account

- To send/receive an email, you should set up an email account.
- Press **Menu**, select **E-Mail** and choose the account you want to use.
 - Choose **Write e-mail** and a new email window will open.
 - Write a subject line then press **OK**.
 - Enter your message using the keypad.

FM Radio

Listening to the Radio

- Press **Menu** and select **Music**, then choose **FM radio**.
- Select the channel number of the station you would like to listen to.

Phonebook

Searching for a contact

- Press **Menu** and select **Phonebook**.
- Using the keypad enter the first letter of the name of the contact you want to call.
- To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- Press **Menu** and select **Phonebook**.
- Press **Option** and select **New contact**.
- Choose whether to store your new contact on your **Handset** or **USIM** card.
- Enter the information you want in the fields provided and select **Done**.

More

Setting your Alarm

Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.

Changing the call settings

You can set call-specific functions. Press **Menu**, select **Settings** and choose **Call**.

- Call divert** - Choose whether to divert your calls.
- Call barring** - Select which calls you would like to be barred.
- Call waiting** - Be alerted when you have a call waiting.
- Fixed dial numbers** - Choose a list of numbers that can be called from your phone.
- Excuse message**
- Call reject settings** - Select **Off** or **On** and choose to reject all calls, those from specific groups, contacts, unregistered numbers (those not in your list of contacts) or those with no caller ID.
- Send my number** - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)
- Auto redial** - Allows you to set the auto redial function when a call attempt has failed.

NOTE: If you are in an area with bad radio reception, you may have difficulty listening to the radio. It is recommended that you insert headphones into the hands-free connector when listening to the radio to ensure good radio reception.

Web

Accessing the web

You can launch the WAP browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WAP page.

- Press **Menu** and select **Web**.
- To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Adding an event to your calendar

Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.

Adding an item to your task list

You can edit an item by selecting it, pressing **Options** and **Edit**. Confirm your amendments by selecting **Done**.

Adding a memo

You can lock the memo. Press **Option** and select **Lock** for the private memo to protect privacy.

Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Sending a voice recording

Once you have finished recording, select **Options**.

Minute minder

Determines whether to sound a tone every 1 minute when you are in the call.

- Bluetooth answer mode** - Choose how to answer a call when using a Bluetooth headset. Select **Hands-free** or **Handset**.
- Save new number** - Selecting this option will save numbers that are not already in your contacts upon ending the call.
- Call costs** - View the charges applied to your last call or all calls. This service is network dependent, some operators are unable to support this.

Camera

Taking a quick photo

- Press **Menu** and select **Camera** and **Camera**.
- When the camera has focused on your subject, select the **Capture** icon on the bottom-centre of the screen and press **OK** to take a photo.

Messaging

Your LG-C300 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages. To use these functions, press **Menu** and select **Messaging**.

Sending a message

- Press **Menu**, select **Messaging** and choose **Write message**.
- A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.
- Enter your message using the keypad. See **Entering text** on the right for more information on how to enter text.
- Select **Options** and choose **Insert** to add an **Image**, **Video**, **Sound**, **Template**, **Emoticon**, **Name & Number**, **New slide**, **Subject** or **More** (**Business card**/**Schedule**/**Memo**/**Task**/**My business card**).
- Choose **Send to**.
- Choose a contact from the list of contacts or enter the phone number.

Using your calculator

- Press **Menu** and select **More**, then choose **Calculator**.
- Press the numeric keys to input numbers.

Using the stopwatch

- Press **Menu** and select **More**, then choose **Stopwatch**.
- Select **Start** to begin the timer.

Converting Units

- Press **Menu** and select **More**, then choose **Unit converter**.
- Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.

Adding a city to your World clock

- Press **Menu** and select **More**, then choose **World clock**.
- To find out the time of specific city, press **Options** and select **New city**.

Settings

Changing your profiles

- Press **Menu** and select **Settings**.
- Select **Profiles** and then choose the profile you want to edit.
- Select **Options** and choose **Personalise**.

4 You can change all of the tones, its volumes and alert options from here.

Using Flight Mode

When Flight mode is activated, you will not be able to make calls, connect to the Internet or send messages.

Changing your Device settings

1 Press **Menu** and select **Settings**.

2 Select **Device** settings and choose from the list below.

- Power save** - Choose to switch the factory set power saving settings On or Off.

- Languages** - Change the language of for your LG-C300's display.

- Auto key lock** - Choose a duration for locking the key automatically.

Changing the date & time

1 Press **Menu** and select **Settings**.

2 Select **Device** and choose **Date and Time** and choose from the list below:

- Date and time settings** - Select On Auto update, and the

3 Press **Menu** and select **Settings**.

4 Select **Device** and choose **Date and Time** and choose from the list below:

5 Press **Menu** and select **Settings**.

By pairing your LG-C300 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

1 Check your Bluetooth is **Turn on** and **Visible**. You can change your visibility in the **Settings** of **Bluetooth** menu, by selecting My device visibility, then Visible.

2 From **Bluetooth**, choose **Activate Bluetooth** and select **Search new device**.

3 Your LG-C300 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.

4 Choose the device you want to pair with, select **Add** and enter a passcode then choose **OK**.

5 Your phone will then connect to the other device, on which you should enter the same passcode.

6 Your passcode protected Bluetooth connection is now ready.

7 Press **Menu** and select **Settings**.

may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed. The highest SAR value for this device when tested for use when worn on the body is 0.670 W/kg. *The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

FCC SAR information

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during product certification for use when placed to the ear is 1.25 W/kg and when properly worn on the body is 0.60 W/kg.

8 Press **Menu** and select **Settings**.

9 Select **Device** and choose **Date and Time** and choose from the list below:

10 Press **Menu** and select **Settings**.

11 Select **Device** and choose **Date and Time** and choose from the list below:

12 Select **Device** and choose **Date and Time** and choose from the list below:

13 Press **Menu** and select **Settings**.

14 Select **Device** and choose **Date and Time** and choose from the list below:

- phone will automatically update the date and time.

• Date format - You can enter the current date. You can set the date format (DD/MM/YYYY, MM/DD/YYYY, YYYY/MM,DD).

• Date separator - You can enter the current date. You can set the date separator (DD/MM/YYYY, DD.MM.YYYY, DD-MM-YYYY).

• Time format - You can set the date format **12 hours** or **24 hours**.

Changing your security settings

Change your security settings to keep your LG-C300 and the important information it holds protected.

1 Press **Menu** and select **Settings** and choose **Device**.

2 Select **Security** and choose from the list below:

- Pin security request** - Choose a PIN code to be requested when you turn your phone on.

- Device lock** - Choose a security code to lock your phone **Never, At device start up, When SIM card is changed** or **Immediately**.

3 Press **Menu** and select **Settings**.

4 Select **Device** and choose **Date and Time** and choose from the list below:

5 Press **Menu** and select **Settings**.

6 Select **Device** and choose **Date and Time** and choose from the list below:

7 Press **Menu** and select **Settings**.

8 Select **Device** and choose **Date and Time** and choose from the list below:

9 Press **Menu** and select **Settings**.

10 Select **Device** and choose **Date and Time** and choose from the list below:

11 Press **Menu** and select **Settings**.

12 Select **Device** and choose **Date and Time** and choose from the list below:

Additionally, this device was tested for typical body-worn operations with the back of the phone kept 2cm (0.79 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 2cm (0.79 inches) must be maintained between the user's body and the back of the phone.

*** FCC Notice & Caution**

Notice!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device must not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Changes or Modifications that are not expressly approved by the manufacturer could invalidate the user's authority to operate the equipment.

13 Press **Menu** and select **Settings**.

14 Select **Device** and choose **Date and Time** and choose from the list below:

15 Press **Menu** and select **Settings**.

16 Select **Device** and choose **Date and Time** and choose from the list below:

17 Press **Menu** and select **Settings**.

18 Select **Device** and choose **Date and Time** and choose from the list below:

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle with your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

- Application lock** - You can lock the contents you want to hide. (Phonebook, Messaging, E-mail, etc.)

• Change codes - Change your PIN code (This menu item will appear if PIN code request is set to On), PIN2 code, Security code.

| |
|--|
| NOTE: Security code <p>The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Reset settings menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the Security > Change codes.</p> |
|--|

Viewing memory status

Your LG-C300 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

15 Press **Menu** and select **Settings**.

16 Select **Device** and choose **Date and Time** and choose from the list below:

To receive a file:

- To receive files, your Bluetooth must be both **Activate Bluetooth** and **Visible**.
- A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

| |
|---|
| TIP! Keep an eye on the progress bar to make sure your file is sent. |
|---|

| |
|--|
| TIP! The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners. |
|--|

Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

17 Press **Menu** and select **Settings**.

18 Select **Device** and choose **Date and Time** and choose from the list below:

19 Press **Menu** and select **Settings**.

| |
|---|
| ⚠ WARNING <p>Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.</p> |
|---|

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

20 Press **Menu** and select **Settings**.

21 Select **Device** and choose **Date and Time** and choose from the list below:

22 Press **Menu** and select **Settings**.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to Maximise usability.

Press Menu and select **Settings**, select **Device** and choose **Memory info** You will then see the current status of the memories in your LG-C300.

Resetting your phone

Use **Reset Device** in **Device** of **Settings** menu to reset all the settings to the factory definitions. You need the security code to activate this function.

Changing your display settings

1 Press **Menu** and select **Settings**.

2 Select **Display** and choose from:

- Homescreen** - Adjust the Wallpaper and Display items.

- Menu theme** - Quickly change the whole look of your screen.

- Menu style** - Change the menu view from List style or Grid style.

- Font** - Adjust the font size.

- Backlight** - Choose how long the backlight remains on. Also, use the navigation keys to adjust the main screen brightness.

3 Press **Menu** and select **Settings**.

4 Select **Device** and choose **Date and Time** and choose from the list below:

5 Press **Menu** and select **Settings**.

6 Select **Device** and choose **Date and Time** and choose from the list below:

7 Press **Menu** and select **Settings**.

8 Select **Device** and choose **Date and Time** and choose from the list below:

9 Press **Menu** and select **Settings**.

10 Select **Device** and choose **Date and Time** and choose from the list below:

11 Press **Menu** and select **Settings**.

12 Select **Device** and choose **Date and Time** and choose from the list below:

13 Press **Menu** and select **Settings**.

14 Select **Device** and choose **Date and Time** and choose from the list below:

15 Press **Menu** and select **Settings**.

16 Select **Device** and choose **Date and Time** and choose from the list below:

17 Press **Menu** and select **Settings**.

18 Select **Device** and choose **Date and Time** and choose from the list below:

19 Press **Menu** and select **Settings**.

20 Select **Device** and choose **Date and Time** and choose from the list below:

21 Press **Menu** and select **Settings**.

22 Select **Device** and choose **Date and Time** and choose from the list below:

23 Press **Menu** and select **Settings**.

24 Select **Device** and choose **Date and Time** and choose from the list below:

25 Press **Menu** and select **Settings**.

26 Select **Device** and choose **Date and Time** and choose from the list below:

27 Press **Menu** and select **Settings**.

28 Select **Device** and choose **Date and Time** and choose from the list below:

29 Press **Menu** and select **Settings**.

30 Select **Device** and choose **Date and Time** and choose from the list below:

31 Press **Menu** and select **Settings**.

32 Select **Device** and choose **Date and Time** and choose from the list below:

33 Press **Menu** and select **Settings**.

34 Select **Device** and choose **Date and Time** and choose from the list below:

35 Press **Menu** and select **Settings**.

36 Select **Device** and choose **Date and Time** and choose from the list below:

37 Press **Menu** and select **Settings**.

38 Select **Device** and choose **Date and Time** and choose from the list below:

39 Press **Menu** and select **Settings**.

40 Select **Device** and choose **Date and Time** and choose from the list below:

41 Press **Menu** and select **Settings**.

42 Select **Device** and choose **Date and Time** and choose from the list below:

43 Press **Menu** and select **Settings**.

44 Select **Device** and choose **Date and Time** and choose from the list below:

45 Press **Menu** and select **Settings**.

46 Select **Device** and choose **Date and Time** and choose from the list below:

47 Press **Menu** and select **Settings**.

48 Select **Device** and choose **Date and Time** and choose from the list below:

49 Press **Menu** and select **Settings**.

50 Select **Device** and choose **Date and Time** and choose from the list below:

51 Press **Menu** and select **Settings**.

52 Select **Device** and choose **Date and Time** and choose from the list below:

53 Press **Menu** and select **Settings**.

54 Select **Device** and choose **Date and Time** and choose from the list below:

55 Press **Menu** and select **Settings**.

56 Select **Device** and choose **Date and Time** and choose from the list below:

57 Press **Menu** and select **Settings**.

58 Select **Device** and choose **Date and Time** and choose from the list below:

59 Press **Menu** and select **Settings**.

60 Select **Device** and choose **Date and Time** and choose from the list below:

61 Press **Menu** and select **Settings**.

62 Select **Device** and choose **Date and Time** and choose from the list below:

63 Press **Menu** and select **Settings**.

64 Select **Device** and choose **Date and Time** and choose from the list below:

65 Press **Menu** and select **Settings**.

66 Select **Device** and choose **Date and Time** and choose from the list below:

67 Press **Menu** and select **Settings**.

68 Select **Device** and choose **Date and Time** and choose from the list below:

69 Press **Menu** and select **Settings**.

70 Select **Device** and choose **Date and Time** and choose from the list below:

71 Press **Menu** and select **Settings**.

72 Select **Device** and choose **Date and Time** and choose from the list below:

73 Press **Menu** and select **Settings**.

74 Select **Device** and choose **Date and Time** and choose from the list below:

75 Press **Menu** and select **Settings**.

76 Select **Device** and choose **Date and Time** and choose from the list below:

77 Press **Menu** and select **Settings**.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the http://update.lgmobile.com or http://www.lg.com/common/index.jsp → select country → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity** in the SETTINGS tab.

78 Press **Menu** and select **Settings**.

79 Select **Device** and choose **Date and Time** and choose from the list below: