



Part No. MMBB0154108

Issue 1.3  
Printed in Korea

B2000 User Guide



ENGLISH

# B2000 User Guide

Please read this manual carefully before operating your mobile phone. Retain it for future reference.



ENGLISH

# GPRS & MMS Phone

**USER'S MANUAL**

**MODEL: B2000**

Please read this manual carefully before operating your mobile phone.  
Retain it for future reference.



## Introduction

Congratulations on your purchase of the advanced and compact B2000 mobile phone, designed to operate with the latest digital mobile communication technology.



This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

## Guidelines for safe and efficient use

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

### Exposure to radio frequency energy

#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model B2000 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.

- The highest SAR value for this model phone tested by DASy4 for use at the ear is 1.10 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).
- Please note the following additional information about compliance regarding usage against the body. For body worn operation, the LG B2000 model meets RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm. away from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.
- The highest SAR value for this model phone when tested for use at the ear is 1.10 W/kg and when worn on the body is 0.275 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.
- Body-worn Operation  
This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches(1.5cm) from the user's body. To comply with

## Guidelines for safe and efficient use

FCC RF exposure requirements, a minimum separation distance of 0.6 inches(1.5cm)' body and the back must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain be used. Body-worn maintain 0.6 inches(1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

### Product care and maintenance

**Warning: Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.**

 
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.

- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

### Efficient phone operation

**To enjoy optimum performance with minimum power consumption please:**

- Hold the phone upright as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.



## Guidelines for safe and efficient use



### Electronic devices

#### All wireless phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### Potentially explosive atmospheres

- Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

### In aircraft

#### Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

### Children

 
Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

### Emergency calls

Emergency call may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be



## Guidelines for safe and efficient use

- recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

### Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice – almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
2. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
3. Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safety.
4. If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be.
5. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
6. Use your wireless phone to call for you. Or other Dial 0-0-0 local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
7. Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call 0-0-0 to call emergency number, as you would want others to do for you.
8. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

## B2000 User Guide

## C o n t e n t s

**Overview****Parts of the Phone** ..... 10

- Front view ..... 10
- Rear view ..... 11

**Key Description** ..... 12

- Keypad Description ..... 12
- Letter Keys ..... 13

**Display Information****Display Information** ..... 14

- On-Screen Icons ..... 14

**Getting Started****Installation** ..... 15

- Inserting the SIM Card ..... 15
- Removing the SIM Card ..... 15
- Installing the Battery ..... 15
- Charging the Battery ..... 16
- Disconnecting the charger ..... 17

**Making and Answering Calls** ..... 18

- Making a call ..... 18
- International Calls ..... 18
- Making a call using the Phonebook ..... 18

**Additional Functions****In call Menu** ..... 19

- During a call ..... 19
- Multiparty or Conference Calls ..... 20

**Access Codes** ..... 22

- PIN code (4 to 8 digits) ..... 22
- PIN2 code (4 to 8 digits) ..... 22
- PUK code (4 to 8 digits) ..... 22
- PUK2 code (4 to 8 digits) ..... 22
- Security code (4 to 8 digits) ..... 22

## Accessing the Menu

<b>Menu Tree</b> .....	<b>23</b>
<b>Messages [Menu 1]</b> .....	<b>25</b>
• Write text message [Menu 1-1] .....	25
• Write multimedia message [Menu 1-2] .....	26
• Inbox [Menu 1-3] .....	29
• Outbox [Menu 1-4] .....	30
• Drafts [Menu 1-5] .....	31
• Listen to voice mail [Menu 1-6] .....	32
• Info message [Menu 1-7] .....	32
• Templates [Menu 1-8] .....	33
• Settings [Menu 1-9] .....	34
<b>Call register [Menu 2]</b> .....	<b>37</b>
• Missed calls [Menu 2-1] .....	37
• Received calls [Menu 2-2] .....	37
• Dialed calls [Menu 2-3] .....	37
• Delete recent calls [Menu 2-4] .....	37
• Call charges [Menu 2-5] .....	37
• GPRS information [Menu 2-6] .....	38

<b>Profiles [Menu 3]</b> .....	<b>39</b>
• Activate [Menu 3-x-1] .....	39
• Personalise [Menu 3-x-2] .....	39
• Rename [Menu 3-x-3] .....	40
<b>Settings [Menu 4]</b> .....	<b>41</b>
• Date & Time [Menu 4-1] .....	41
• Phone settings [Menu 4-2] .....	41
• Call settings [Menu 4-3] .....	42
• Security settings [Menu 4-4] .....	44
• Network settings [Menu 4-5] .....	47
• GPRS setting [Menu 4-6] .....	47
• Reset settings [Menu 4-7] .....	47
<b>Organiser [Menu 5]</b> .....	<b>48</b>
• Alarm clock [Menu 5-1] .....	48
• Scheduler [Menu 5-2] .....	48
• Phonebook [Menu 5-3] .....	49



<b>FM Radio [Menu 6]</b> .....	<b>54</b>
• Listen radio [Menu 6-1] .....	54
• Channels [Menu 6-2] .....	55

<b>Fun &amp; Tools [Menu 7]</b> .....	<b>56</b>
• Favorites [Menu 7-1] .....	56
• Games [Menu 7-2] .....	56
• Calculator [Menu 7-3] .....	56
• My folder [Menu 7-4] .....	57
• Unit converter [Menu 7-5] .....	57
• World time [Menu 7-6] .....	57
• Voice recorder [Menu 7-7] .....	58
• Memory status [Menu 7-8] .....	58

<b>Internet [Menu 8]</b> .....	<b>59</b>
• Home [Menu 8-1] .....	59
• Bookmarks [Menu 8-2] .....	59
• Profiles [Menu 8-3] .....	59
• Go to URL [Menu 8-4] .....	61
• Cache settings [Menu 8-5] .....	61
• Cookies settings [Menu 8-6] .....	61

• Security certification [Menu 8-7] .....	61
• Reset profiles [Menu 8-8] .....	61
• Browser version [Menu 8-9] .....	61

<b>On browsing menu</b> .....	<b>62</b>
-------------------------------	-----------

<b>Java [Menu 9]</b> .....	<b>63</b>
• Applications [Menu 9-1] .....	63
• Download [Menu 9-2] .....	63
• Profiles [Menu 9-3] .....	63

<b>Accessories</b> .....	<b>64</b>
--------------------------	-----------

<b>Care and Maintenance</b> .....	<b>65</b>
-----------------------------------	-----------

<b>Trouble Shooting</b> .....	<b>66</b>
-------------------------------	-----------

<b>Technical Data</b> .....	<b>67</b>
-----------------------------	-----------

## Parts of the Phone

### Front view






Parts of the Phone



Rear view

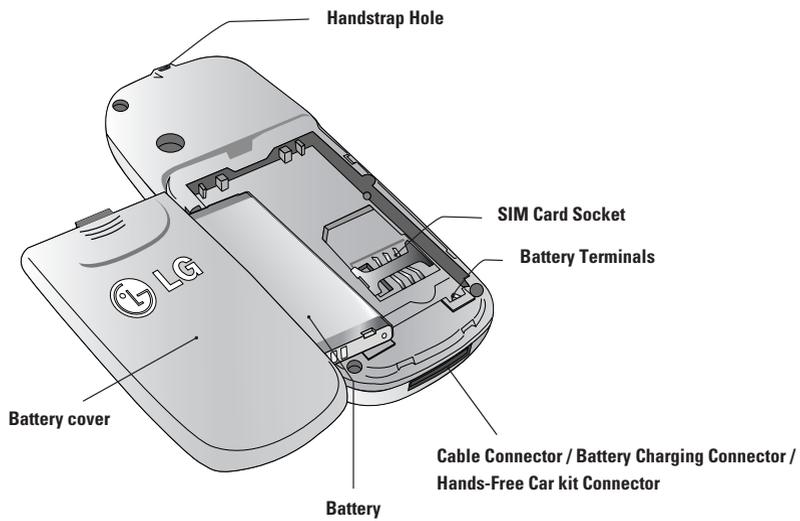

## Key Description

The following shows key components of the phone.

### Keypad Description

Key	Description
	<p><b>Soft Left Key / Soft Right Key</b> Each of these keys performs the function indicated by the text on the display immediately above it.</p>
	<p><b>Navigation Keys</b> Use to scroll through menus and move the cursor. You can also use these keys for quick access to the following functions.</p> <ul style="list-style-type: none"> <li>• Up navigation key (  ) : A shortcut key to the Favorites menu.</li> <li>• Down navigation key (  ) : A shortcut key to the Phonebook.</li> <li>• Left navigation key (  ) : A shortcut key to the FM Radio.</li> <li>• Right navigation key (  ) : A shortcut key to the message inbox.</li> </ul>

Key	Description
	<p><b>Send Key</b> You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialed, received and missed numbers.</p>
	<p><b>Numeric Keys</b> These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode. When you press these keys for a long time.</p> <ul style="list-style-type: none"> <li>• Used to call your voicemail box by  .</li> <li>• Used to call for international call by  .</li> <li>• Used to call Speed dials by from  to  .</li> </ul>
	<p><b>END/PWR Key</b> Used to end or reject a call. This key is also used as Power Key by pressing this key for a few seconds.</p>



## Key Description

 


Key	Description
	You can delete the characters, go back to the menu. In addition, you can view voice memo list when you press this key shortly in standby mode. Long press of this key in standby mode starts voice memo recording.

## Letter Keys

Each key can be used for several symbols. There are shown below.

Key	Description
	.,/?!-:~"1
	ABC2ÄÄÄÄÄÄÆÇabcääääääæç
	DEF3ËËËËËËëëëëëë
	GHI4ÏÏÏÏÏÏghiiiiit@
	JKL5jkl
	MNO6ÑÕØÓÔÕŒmnoñõøóôõœ
	PQRS7BÍpqrSBB
	TUV8ÛÜÛÛÛÛtuvwüúû
	WXYZ9wxyz
	[space]0



## Display Information

The screen displays several icons. There are described below.


### On-Screen Icons

Icon/Indicator	Description
	Tells you the strength of the network signal.
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You have received a push message.
	You can view your schedule.
	All audible signals are turned off.
	General menu in profile.
	Loud menu in profile.
	Silent menu in profile.

Icon/Indicator	Description
	Headset menu in profile.
	Car menu in profile.
	You can divert a call.

## Installation


### 1. Inserting the SIM Card

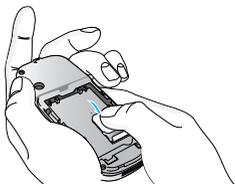

Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.

1. Remove the battery if attached.
2. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down.

### 2. Removing the SIM Card

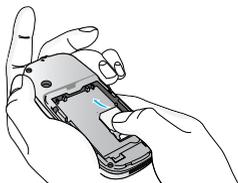

Follow the steps below to Remove the SIM card.

1. Remove the battery if attached.
2. Take out the SIM card from the slot.

### Notice


- Removing the battery from the phone whilst it is switched on may cause it to malfunction.
- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install. Follow the instructions supplied with the SIM card.

### 3. Installing the Battery



1. Position the lugs on the bottom of the battery into the retaining holder.

## Installation

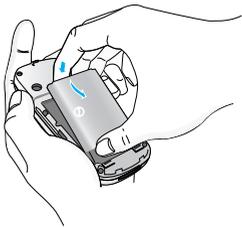

2. Then push to the half of the battery into position.




3. Lay the battery cover in place of the phone and slide it until the latch clicks.

## 4. Charging the Battery

To connect the travel adapter to the phone, you must have installed the battery.



1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.

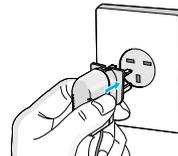

2. Connect the other end of the travel adapter to the mains socket. Use only the included packing charger.

## Installation




### Warning

- Do not force the connector as this may damage the phone and/or the travel adapter.

### Note

- “Battery Charging” is displayed on the screen after connecting the travel adapter. Only if the battery is totally empty, Call indicator Light is on without displaying “Battery Charging”.

## 5. Disconnecting the charger

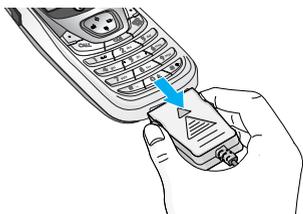

Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.

### Note

- Ensure the battery is fully charged before using the phone.
- Do not remove your battery or the SIM card while charging.
- The moving bars of battery icon will stop after charging is complete.

### Note

- If the battery does not charge,
- switch the phone off.
  - ensure the battery is correctly fit.

## Making and Answering Calls

### Making a call

1. Key in phone number including the area code. If you want to delete number, press  .
2. Press  to call the number.
3. Press  to end the call.

### International Calls

1. Press and hold the  key for the international prefix. "+" character may replace with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  .

### Making a call using the Phonebook

1. In standby mode, press  [Names].
2. When the menu is displayed, you select Search by pressing  .
3. If you find out the desired item through searching by a name or a number, press  to call.

## In call Menu

The menu displayed on the handset screen during a call is different to the default main menu reached from the idle screen, and the options are described here.

### 1 During a call

#### 1-1 Putting a Call on Hold

When a call is made or answered, press the  [Send] to place it on hold. When a call is held, press the  [Send] to make it active.

#### 1-2 Making a Second Call

You can get a dial number from phonebook to make a second call. Press  [Names] then select **Search**. To save the dial number into phonebook during call, press  [Names] then select **Add new**.

#### 1-3 Swapping Between Two Calls

To switch between two calls, select  [Options], then select **Swap** or just press  [Send] key. You can make one of two calls focused by pressing up/down arrow key. If you want to end one of two calls, make the call you want to end focused, then press  [End] key when the call you want to end is focused.

#### 1-4 Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  [Send] key.

The handset is also able to warn you of an incoming call while you are already in a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as Call Waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting [Menu 4-3-4].

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing  [Send] or by selecting  [Answer], then **Hold & Answer**.

You can end the current call and answer the waiting call by selecting  [Menu], then **End & Answer**.

#### 1-5 Rejecting an Incoming Call

When not in a call you can reject an incoming call without answering it by simply pressing the  [End] or for a long time.

When in a call you can reject an incoming call by pressing the  [Menu] key and selecting **Multiparty / Reject** or by pressing  [End] key.

## In call Menu

### 1-6 Muting the Microphone

You can mute the microphone during a call by pressing the  [Options] key then selecting **Mute**.

The handset can be unmuted by pressing the  [Unmute].

When the handset is muted, the caller cannot hear you, but you can still hear them.

### 1-7 Switching DTMF Tones on During a Call

To turn DTMF tones on during a call, for example, to allow your handset to make use of an automated switchboard, select  [Options], then **DTMF On**.

DTMF tones can be turned off the same way.

### 1-8 Calling up Messages and SIM Tool Kit main menu

The Messages and SIM Tool kit main menu options can be reached from the in-call menu by selecting  [Options]. SIM Tool Kit menu is shown only when SIM in the handset supports SIM Tool Kit service.

## 2 Multiparty or Conference Calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.

A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls may be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call.

The maximum callers in a multiparty call is five. Once started, you are in control of the multiparty call, and only you can add calls to the multiparty call.

### 2-1 Making a Second Call

You can make a second call while you are already in a call. To do this, enter the second number and press  [Send]. When you get second call the first call is automatically put on hold. You can swap between calls by selecting  [Options] then **Swap**.

### 2-2 Setting up a Multiparty Call

You can connect a call on hold to the currently active call to form a multiparty call by selecting  [Options] then **Multiparty / Join all**.

### 2-3 Putting the Multiparty Call on Hold

To put a multiparty call on hold, select  [Options] then **Multiparty / Hold all**.



## In call Menu



### 2-4 Activate the Multiparty Call on Hold

To make a multiparty call on hold active, select  [Options] then **Multiparty / Join all**.

### 2-5 Adding Calls to the Multiparty Call

To join an active call to the held multiparty call, select  [Options] then **Multiparty / Join all**.

### 2-6 Displaying Callers in a Multiparty Call

To scroll through the numbers of the callers who make up a multiparty call on the handset screen, press  and  keys.

### 2-7 Putting a Member of a Multiparty Call on Hold

To place one selected caller (whose number is currently displayed on-screen) of a multiparty call on hold, select  [Options] then **Multiparty / Exclude**.

 
### 2-8 A Private Call in a Multiparty Call

To have a private call with one caller of a multiparty call, display the number of the caller you wish to talk to on the screen, then select  [Options] and **Multiparty / Private** to put all the other callers on hold.

### 2-9 Ending a Multiparty Call

The currently displayed caller of a multiparty call can be disconnected by pressing the  [End] key. To end a multiparty call, press  [Options] then select **Multiparty / End**.

Selecting  [Options] then **Multiparty / End all**, will end all the active and held calls.



## Access Codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using [Menu 4-4-6].

### PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When **PIN code** is set **On**, your phone will request the PIN code every time it is switched on. On the contrary, when **PIN code** is set **Off**, your phone connects to the network directly without the request PIN code.

### PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

### PUK code (4 to 8 digits)

The PUK (PIN Unlocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

### PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your service provider.

### Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate "Reset settings" menu. The default number is "0000".

## Menu Tree



### 1 Messages

- 1 Write text message
- 2 Write multimedia message
- 3 Inbox
- 4 Outbox
- 5 Drafts
- 6 Listen to voice mail
- 7 Info message
- 8 Templates
- 9 Settings



### 2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call charges
- 6 GPRS information



### 3 Profiles

- 1 Vibrate only
- 2 Quiet
- 3 General
- 4 Loud
- 5 Headset
- 6 Car



### 4 Settings

- 1 Date & Time
- 2 Phone settings
- 3 Call settings
- 4 Security settings
- 5 Network settings
- 6 GPRS setting
- 7 Reset settings

## Menu Tree



### 5 Organiser

- 1 Alarm clock
- 2 Scheduler
- 3 Phonebook



### 6 FM Radio

- 1 Listen radio
- 2 Channels



### 7 Fun & Tools

- 1 Favorites
- 2 Games
- 3 Calculator
- 4 My folder
- 5 Unit converter
- 6 World time
- 7 Voice recorder
- 8 Memory status



### 8 Internet

- 1 Home
- 2 Bookmarks
- 3 Profiles
- 4 Go to URL
- 5 Cache settings
- 6 Cookies settings
- 7 Security certification
- 8 Reset profiles
- 9 Browser version



### 9 Java

- 1 Applications
- 2 Download
- 3 Profiles



### 10 SIM Service

This menu depends on SIM and the network services.

## Messages [Menu 1]

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

### Write text message [Menu 1-1]

You can write and edit text message, checking the number of message pages.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write text message**.
3. To make text input easier, use T9. For details, see **How to Use T9** (Page 30).
4. Press [Insert] to attach the followings.
5. If you want to set option for your text, or to finish your writing, press  [Options].

### Note

- The phone which supports EMS release 5 is available to send colour pictures, sounds, text styles, etc.. The other party may not receive pictures, sounds or text styles you sent properly if the phone does not support such options.

### Options

#### • Send

Sends text messages.

1. Enter numbers of recipient.
2. Press  key to add more recipients.
3. You can add phone numbers in the phone book.
4. Press  after entering numbers.

#### • Save

Stores messages in Outbox.

#### • Font

You can select **Size** and **Style** of fonts.

#### • Colour

You can select **Colour** of foreground and background.

#### • Alignment

You can make the message contents aligned **Right**, **Centre** or **Left**.

#### • Add T9 dictionary

You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

## Messages [Menu 1]

- **T9 languages**

Select a T9 input mode.

- **Exit**

If you press **Exit** while writing a message, you can end the writing message and back to the Message menu. The message you have written is not saved.

### Insert

- **Symbol**

You can add special characters.

- **Picture**

You can insert the **Default** pictures or pictures in **My folder** that are available for short messages.

- **Sound**

You can insert sounds that are available for short messages.

- **Text templates**

You can use **Text templates** already set in the phone.

- **Phonebook**

You can add phone numbers or e-mail addresses in **Phonebook**.

- **Signature**

You can add your contact information to the message.

### Write multimedia message [Menu 1-2]

You can write and edit multimedia messages, checking message size.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write multimedia message**.
3. You can create a new message or choose one of the multimedia message templates already made.
4. Press **Insert** to add **Symbol, Picture, Sound, Text templates, Phonebook** or **Signature**.

### Options

- **Send**

You can send multimedia messages to multiple recipients, prioritise your message, and make it sent later as well.

- **Preview**

You can preview multimedia messages you wrote.



## Messages [Menu 1]



- **Save**

You can save multimedia messages in the drafts or as templates.

- **Add slide**

You can add a slide before or after current slide.

- **Move to slide**

You can move to previous or next slide.

- **Delete slide**

You can delete current slides.

- **Set slide format**

- Set timer

You can set timer for slide, text, picture and sound.

- Swap text and picture

You can switch the position of picture and text of the message.

- **Remove media**

You can remove pictures or sounds in the slide. This option can be shown only when any media exists.

- **Add T9 dictionary**

You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 languages**

 
Select a T9 input mode.

- **Exit**

You can back to the Message menu.

### Note

- If you select the picture ((15K) on writing multimedia message, loading duration will take around 15 seconds at least. Furthermore, you can't activate any key during loading time. After 15 seconds, it is available to write multimedia message.







## Messages [Menu 1]



3. To insert a punctuation mark, press  repeatedly until the desired mark appears.

### T9 languages

- You can select T9 Languages by selecting Menu. In T9 mode, you can also select T9 Off menu. (Default is T9 On)

## Inbox [Menu 1-3]

You will be alerted when you have received messages. They will be stored in Inbox. In Inbox, you can identify each message by icons. For detail, see the icon directive.

### Icon directive

 
-  Multimedia message
-  Short message
-  SIM message
-  Read
-  Notified multimedia message

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox. If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

### \* SIM message

SIM message means the message exceptionally stored in SIM card. For notified multimedia message, you have to wait for downloading and processing of the message. For notification setting, see [Menu 1-9-2] for detail.

To read a message, select one of the messages by pressing .



## Messages [Menu 1]

### View

You can view the selected message.

### Reply

You can reply to the sender.

### Forward

You can forward the selected message to another party.

### Return call

You can call back to the sender.

### Delete

You can delete the current message.

### Extract

You can extract picture, sound and text. They will be saved in My folder or Phonebook.

### View information

You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

### Replay (applicable to Multimedia message only)

You can replay multimedia messages.

#### \* Receive (In the case of notification message)

If **Multimedia message** is set to **Auto download** off, you can get only Notification. To receive a message, you need to select [Receive].

### Outbox [Menu 1-4]

You can see sent and unsent messages here. For sent message, you can see the delivery status. The browsing is same as that for the inbox message.

#### Icon directive

- [] Sent
- [] Failed
- [] Delivery confirmed
- [] SMS sent

#### \* When you already sent the message:

### Forward

You can forward the current message to other recipients.



## Messages [Menu 1]



### Delete

You can delete the current message.

### View information

You can view information about outbox messages; Recipient 's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

※ **When you didn't send the message:**

### View

You can view the message.

### Send

You can send the message.

### Delete

You can delete the current message.

### View information

You can view information about outbox messages.

## Drafts [Menu 1-5]

You can view the messages saved as a draft. The draft

messages are listed with the date and time when they were saved. Scroll through the list using up/down navigation keys.

### Icon directive

- [  ] Multimedia message
- [  ] Text message
- [  ] Delivery confirmed
- [  ] Delivery confirmed

Each draft has the following options. Press  [Options].

### View

You can view the selected message.

### Edit

 
You can edit the selected message.

### Send

You can send the selected message.

### Delete

Deletes the selected message from the drafts folder.



## Messages [Menu 1]

### View information

You can view the information of selected message: subject (only for multimedia message), the date and time when saved, message type and size, the priority (only for multimedia message).

### Delete all

Deletes all the messages from drafts folder.

### Listen to voice mail [Menu 1-6]

You can listen to voice mail.

### Info message [Menu 1-7]

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information has the number; therefore, you can contact service provider as long as you have input the certain number for the information. When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed. To view the message again or not in standby mode, follow the sequence shown below;

### Read [Menu 1-7-1]

1. When you have received an info service message and select **Read** to view the message, it will be displayed on the screen. You can read another message by scrolling  or  [Next].
2. The message will be shown until another message is reached.

### Topics [Menu 1-7-2]

#### • Add new

You can add Info service message numbers in the Phone memory with its nickname.

#### • View list

You can see Info service message numbers which you added. If you press  [Options], you can edit and delete info message category which you added.

#### • Active list

You can select Info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.



## Messages [Menu 1]



### Templates [Menu 1-8]

#### Text templates [Menu 1-8-1]

You have 6 text templates. You can change the predefined templates into your favorite ones or fill the <empty>s.

#### Multimedia templates [Menu 1-8-2]

You can use the following options.

- **Preview**

You can preview multimedia messages you wrote.

- **Save**

You can save multimedia messages in the outbox or as templates.

- **Add slide**

You can add a slide before or after current slide.

- **Move to slide**

You can move to previous or next slide.

- **Delete slide**

You can delete current slides.

- **Set slide format**

- **Set timer**

You can set timer for slide, text, picture and sound.

- **Remove media**

You can remove pictures or sounds in the slide. This option can be shown only when any media exists.

- **Add T9 dictionary**

You can add your own word. This menu can be shown only when edit mode is **Predictive (T9Abc/T9abc/T9ABC)**.

- **T9 languages**

 
Select a T9 input mode.

- **Exit**

You can back to the Message menu.

#### Signature [Menu 1-8-3]

You can make your Signature. Key in Name, Phone number, Fax number and Email.



## Messages [Menu 1]

### Settings [Menu 1-9]

#### Text message [Menu 1-9-1]

- **Message types**

**Text, Voice, Fax, Natl. paging, X.400, E-mail, ERMES**

Usually, the type of message is set to **Text**. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If you set to **Yes**, you can check whether your message is sent successfully.

- **Reply via same service centre**

When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

- **SMS centre**

If you want to send the text message, you can receive the address of SMS centre through this menu.

### Multimedia message [Menu 1-9-2]

- **Priority**

You can send the message after setting the level of priority: Low, Normal and High.

- **Validity period**

This network service allows you to set how long your text messages will be stored at the message centre.

- **Delivery report**

If it is set to **Yes** in this menu, you can check whether your message is sent successfully.

- **Auto download**

**On:** The messages are downloaded automatically on receipt.

**Off:** Requires to confirm the message which you want to download.

Home network only: In home network, you can activate Auto download "On" menu., Otherwise, you can activate Auto download in roaming network when you set Off.



## Messages [Menu 1]



### • Network settings

In order to download MMS from the server, you need to set up a CSD or GPRS data connection. If you select multimedia message server, you can set URL for multimedia message server. You can set over 5 profiles to connect service.

#### - Homepage

This menu allows to connect MMS centre (MMSC).

#### - Bearer

- Data
- GPRS

#### - Data settings

Appears only if you select Data settings as a Bearer\service.

#### IP address

**Dial number** : Enter the telephone number to dial to access your WAP gateway.

#### User ID

#### Password

**Call type** : Select the type of data call, Analogue or Digital (ISDN).

**Call speed** : The speed of your data connection 9600 or 14400.

#### - GPRS settings

The service settings are only available when GPRS is chosen as a bearer service.

#### IP address

**APN** : Insert APN (Access Point Name) of GPRS.

#### User ID

#### Password

#### - Connection type

The options for connection type are Temporary or Continuous.

#### - Secure settings

 
Depending on the chosen gateway port, you can select this option On or Off.

### • Permitted types

**Personal** : Personal message.

**Advertisements** : Commercial message.

**Information** : Necessary information.



## Messages [Menu 1]

### Voice mail centre [Menu 1-9-3]

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.

#### • Home

You can listen to voice mails by selecting **Home**.

#### • Roaming

Even when you are in abroad, you can listen to voice mails if roaming service is supported.

### Info message [Menu 1-9-4] (Dependent to network and subscription)

#### • Receive

##### - Yes

If you select this menu, your phone will receive Info service messages.

##### - No

If you select this menu, your phone will not receive Info service messages any more.

#### • Alert

##### - Yes

Your phone will beep when you have received Info service message numbers.

##### - No

Your phone will not beep even though you have received info service messages.

#### • Languages

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

### Push messages [Menu 1-9-5]

You can set the option whether you will receive the message or not.

## Call register [Menu 2]

### Missed calls [Menu 2-1]

This menu shows recently missed numbers. You can call these numbers, save and view the date and the time.

### Received calls [Menu 2-2]

This menu shows recently received numbers. You can call these numbers, save and view the date and the time.

### Dialled calls [Menu 2-3]

This menu shows the latest dialled numbers up to 20.

### Delete recent calls [Menu 2-4]

You can delete recent calls of **Missed calls**, **Received calls**, **Dialled calls** or **All calls**.

### Call charges [Menu 2-5]

Within these submenus, you can view the duration and the call cost of your calls.

### Call duration [Menu 2-5-1]

This function allows you to view the duration of your Last Call, All Calls, Received calls and Dialled calls in hours, minutes and seconds. You can also reset the call timers.

1. Press  [Menu] in standby mode.
2. Press  for direct access or use  and  to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call duration** and Press  [Select].  
The following 5 submenus: **Last call**, **All calls**, **Received calls**, **Dialled calls** and **Reset all**.

### Call costs [Menu 2-5-2]

This function allows you to check the cost of your last call, all calls, remaining and reset the cost. To reset the cost, you need the PIN2 code.

1. Press  [Menu] in standby mode.
2. Press  for direct access or use  and  to enter **Call register**, then select **Call charges**.
3. Scroll to highlight **Call costs** and Press  [Select].  
The following 4 submenus: **Last call**, **All calls**, **Remaining** and **Reset all**.

### Note

- The actual cost invoiced for calls by your service provider may vary, depending upon network features, rounding-off for billing, tax, and etc.

## Call register [Menu 2]

### Settings [Menu 2-5-3] (SIM Dependent)

#### • Set tariff

You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.

#### Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

#### • Set credit

This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your charge limit.

#### • Auto display

This network service allows you to see automatically the cost of your last calls. If set to **On**, you can see the last cost when the call is released.

### GPRS information [Menu 2-6]

You can check the amount of data transferred over the network through GPRS. In addition, you can view how much time you are online.

#### Call duration [Menu 2-6-1]

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.

#### Data volumes [Menu 2-6-2]

You can check the **Sent**, **Received** or All data volumes and **Reset all**.

## Profiles [Menu 3]

In this menu, you can adjust and customize the phone tones for different events and environments.

1. Press  [Menu] in standby mode.
2. Press  for direct access or use  and .

### Vibrate only [Menu 3-1]

You can adjust the profile as **Vibrate only** if you need vibration mode. In the mode, all kinds of alert are Vibrate or Silent.

**Quiet** You can adjust the profile as **Quiet** if you are in quiet place.

### General

You can adjust the profile as **General**.

### Loud

You can adjust the profile as **Loud** if you are in a noisy environment.

### Headset

You can adjust the profile as **Headset** when you put on a headset.

### Car

You can adjust the profile as **Car** when you activate Handsfree kit.

### Note

- Headset and Car profiles can be activated only when Handsfree kit or Ear microphone put on the handset. However, their properties can be personalised.

### Activate [Menu 3-x-1]

Activates the selected Profile.

### Personalise [Menu 3-x-2]

Each has the submenus as shown below except for **Vibrate only**.

#### Call alert type

Allows to select alert type such as Ring, Vibrate, etc. for the incoming for adjusting environment.

#### Ring tone

Allows to set the ring tone for adjusting environment.

## Profiles [Menu 3]

### Ring volume

Allows to set the ring volume for adjusting environment. The volume of Power on/off sound and all the alert sounds set according to **Ring volume**.

### Message alert type

Allows to alert when receiving a message for adjusting environment.

### Message tone

Allows to select the alert tone for message reception.

### Keypad volume

Allows to set the keypad volume for adjusting environment.

### Keypad tone

Allows to select the keypad tone for adjusting environment.

### Effect sound volume

Allows to set the effect sound volume for adjusting environment.

### Power on/off volume

Allows to set the power on/off volume for adjusting environment.

### Auto answer

This function will be activated only when your phone is connected to the headset or handsfree kit.

- **Off** : The phone will not answer automatically.
- **After 5 secs** : After 5 seconds, the phone will answer automatically.
- **After 10 secs** : After 10 seconds, the phone will answer automatically.

### Rename [Menu 3-x-3]

You can change the default profile name except of Vibrate only, Headset, and Car menus.

### Note

- If you set the Handsfree kit to the phone, you can't use the vibrate mode related with Call alert type or Message alert menu. In car menu, the following submenus are available;
  - **Call alert type** : Ring, Lamp
  - **Message alert type** : Ring once, Ring periodically, No alert

## Settings [Menu 4]

You can set the following menus for your convenience and preferences.

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter **Settings**.

### Date & Time [Menu 4-1]

You can set functions relating to the date and time.

#### Set date [Menu 4-1-1]

You can enter the current date.

#### Date format [Menu 4-1-2]

You can set the Date format such as **DD/MM/YYYY**, **MM/DD/YYYY**, **YYYY/MM/DD**. (D: Day / M: Month / Y: Year)

#### Set time [Menu 4-1-3]

You can enter the current time.

#### Time format [Menu 4-1-4]

You can set the time format between 24-hour and 12-hour.

### Phone settings [Menu 4-2]

You can set functions relating to the phone.

#### Wallpaper [Menu 4-2-1]

You can select the background pictures in standby mode.

- **Default**

You can select a picture or an animation of wallpaper by pressing  or .

- **Myfolder**

You can select a picture or an animation as wallpaper.

#### Greeting note [Menu 4-2-2]

If you select **On**, you can edit the text which is displayed in standby mode.

#### Language [Menu 4-2-3]

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

#### Backlight [Menu 4-2-4]

You can set the light-up duration of the LCD display.

## Settings [Menu 4]

### LCD contrast [Menu 4-2-5]

You can set the brightness of LCD by pressing .

### Information window [Menu 4-2-6]

You can preview the current state of the selected menu before open the menu. The state is shown at bottom of the display.

### Menu colour [Menu 4-2-7]

You can select the preferred menu colour among various combination.

### Network name [Menu 4-2-8]

If you select on, you can see the network service provider name which is displayed in standby mode.

### Call settings [Menu 4-3]

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.

### Call divert [Menu 4-3-1]

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

### • All voice calls

Diverts voice calls unconditionally.

### • If busy

Diverts voice calls when the phone is in use.

### • If no reply

Diverts voice calls which you do not answer.

### • If out of reach

Diverts voice calls when the phone is switched off or out of coverage.

### • All data calls

Diverts to a number with a PC connection unconditionally.

### • All fax calls

Diverts to a number with a fax connection unconditionally.

### • Cancel all

Cancels all call divert service.

### The submenus

**Call divert** menus have the submenus shown below.



## Settings [Menu 4]



### - Activate

Activate the corresponding service.

#### To voice mail centre

Forwards to message centre. This function is not shown at All data calls and All fax calls menus.

#### To other number

Inputs the number for diverting.

#### To favourite number

You can check recent 5 diverted numbers.

### - Cancel

Deactivate the corresponding service.

### - View status

View the status of the corresponding service.

## Answer mode [Menu 4-3-2]

### • Press any key

If you select this menu, you can receive a call by pressing any key except  [End] key and  key.

### • Send only

If you select this menu, you can receive a call by only pressing  [Send] key.

## Send my number [Menu 4-3-3] (network and subscription dependent)

### • On

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

### • Off

Your phone number will not be shown.

 
### • Set by network

Select this to reset the phone to the setting that you have agreed upon with your service provider.

## Call waiting [Menu 4-3-4] (network dependent)

### • Activate

If you select Activate, you can accept a waiting (receiving) call.



## Settings [Menu 4]

- **Cancel**

If you select Cancel, you cannot recognize the waiting (receiving) call.

- **View status**

Shows the status of Call waiting.

### Minute minder [Menu 4-3-5]

If you select **On**, you can check the call duration by deep sound every minute during a call.

### Auto redial [Menu 4-3-6]

- **On**

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

- **Off**

Your phone will not make any attempts to redial when the original call has not connected.

### Closed user group [Menu 4-3-7] (network dependent)

Restricts usage of the phone with numbers that belong to certain user groups. When this function is used, every outgoing call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).

**Default** : Activate the default group agreed on with the network operator.

**Set** : Setting the selected CUG Index.

**Edit** : Editing the CUG name and CUG Index.

**Delete** : Deleting the selected CUG.

**Delete all** : Deleting All CUG.

### Security settings [Menu 4-4]

#### PIN code request [Menu 4-4-1]

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.



## Settings [Menu 4]



1. Select PIN code request in the security settings menu, and then press [Select].
2. Set On/Off.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

### Phone lock [Menu 4-4-2]

You can use security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **On**. If you set phone lock to **Automatic**, your phone will request security code only when you change your SIM card.

### Automatic key lock [Menu 4-4-3]

When you enable Automatic key lock, keypad will be locked automatically on an idle screen after 30 seconds without any key requesting.

 
## Note

- If you want to lock your phone keypad manually, enter Top menu and press key.
- If you want to unlock your phone keypad, press [unlock] key and then press key. But if you enabled Automatic key lock before, your phone keypad will be unlock and then after 30 seconds the keypad will be lock up again automatically.

### Call barring [Menu 4-4-4]

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing**  
The barring service for all outgoing calls.
- **Outgoing international**  
The barring service for all outgoing international calls.
- **Outgoing international except home country**  
The barring service for all international outgoing calls except home network.



## Settings [Menu 4]

- **All incoming**

The barring service for all incoming calls.

- **Incoming when abroad**

The barring service for all incoming calls when roaming.

- **Cancel all**

You can cancel all barring services.

- **Change password**

You can change the password for Call Barring Service.

### Each call barring menu has following submenus:

- **Activate**

Allows to request the network to set call restriction on.

- **Cancel**

Set the selected call restriction off.

- **View status**

View the status whether the calls are barred or not.

### Fixed dial number [Menu 4-4-5] (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- **Activate**

You can restrict your outgoing calls to selected phone numbers.

- **Cancel**

You can cancel fixed dialling function.

- **Number list**

You can view the number list saved as Fixed dial number.

### Change codes [Menu 4-4-6]

PIN is an abbreviation of Personal Identification Number used to prevent use by only unauthorized person.

You can change the access codes: **PIN2 code**, **Security code**.

1. If you want to change the Security code/PIN/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN/PIN2 code and verify them.



## Settings [Menu 4]



### Network settings [Menu 4-5]

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.

#### Automatic [Menu 4-5-1]

If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected "Automatic", the phone will be set to "Automatic" even though the power is off and on.

#### Manual [Menu 4-5-2]

The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

#### Preferred [Menu 4-5-3]

You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

### GPRS setting [Menu 4-6]

You can set GPRS service depending on various situation.

#### Power on [Menu 4-6-1]

 
If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

#### When needed [Menu 4-6-2]

If you select this menu, the GPRS connection is established when you connect a WAP service and closed when you end the WAP connection.

#### Reset settings [Menu 4-7]

You can initialize all factory defaults. You need Security code to activate this function.



## Organiser [Menu 5]

### Alarm clock [Menu 5-1]

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period : **Once, Mon~Fri, Mon~Sat, Everyday.**
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].

### Scheduler [Menu 5-2]

When you enter this menu a Calendar will show up. On top of the screen there are sections for date. Also on bottom of the screen there are sections for icons (schedule, memo). Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see under bar on the calendar, it means that there is a schedule or memo that day. This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.

To change the day, month, and year.

Key	Description	Key	Description
	Yearly		Weekly
	Monthly		Daily

### Note

- Your phone should be switched on to use this function.

### Add new [Menu 5-2-1]

You can edit maximum 39 characters and take up to 20 notes.

#### • Schedule

Input the subject, the schedule time, the repeat, the alarm by pressing allowed keys.

#### • Memo

1. Select **Add new** by pressing  [Select].
2. Press **Memo**.
3. Input the memo and then press  [OK].



## Organiser [Menu 5]



### View [Menu 5-2-2]

Shows the note for the chosen day. Use , to browse through the note lists. If you set alarm for the note, Alarm watch is displayed. At that time, if you press [Select], you can see the note in detail. Press [Options] to delete, edit the note you selected.

### View all [Menu 5-2-3]

Shows the notes that are set for all days. Use , to browse through the note lists. You can use the same menu as “**View**” by pressing [Options].

### Delete past [Menu 5-2-4]

You can delete the past schedule that has been already notified you.

### Delete all [Menu 5-2-5]

 
You can delete for the all note(s).

## Phonebook [Menu 5-3]

1. To use **Phonebook**, press [Names] in standby mode.
2. To use **Phonebook**, press [Menu] in standby mode and select **Organiser**.

## Search [Menu 5-3-1] (Calling from phonebook)

1. In standby mode, press [Names].
2. **Search** by pressing [Select].
3. Enter the name whose phone numbers or e-mail address you want to search or Select ‘List’ to view phonebook.
4. Instant searching is available by inputting the initial letter of the name or number you want to search.
5. If you want to edit, delete, copy an entry, or to add the voice to one, select [Options]. The following menu will be displayed.
  - **Edit** : You can edit the name, number, E-mail and fax by pressing [OK].
  - **Write message** : After you have found the number you want, you can send a message to the selected number.
  - **Copy** : You can copy an entry from SIM to phone or from phone to SIM.
  - **Main number** : You can select the one out of mobile, home, office that you often use. The main number will be displayed first, if you set this.
  - **Delete** : You can delete an entry.



## Organiser [Menu 5]

### Add new [Menu 5-3-2]

You can add phonebook entry by using this function. Phone memory capacity is 200 entries. SIM card memory capacity depends on the cellular service provider.

You can also save 25 characters of name in The Phone memory, and save characters in the SIM card. The number of character is SIM dependent feature.

1. Open the phonebook first by pressing  [Names] in standby mode.
2. Scroll to highlight **Add new**, and press  [Select].
3. Select the memory you want to save: **SIM** or **Phone**.  
If set to Phone, you need to select which number you want as Main number.
  - a. Press  [OK] to input a name.
  - b. Press  [save], then you can input a number.
  - c. Press  [Save], then you can set a group for the entry by pressing .
  - d. Press  [Save], then you can set a character and a picture for the entry by pressing .
  - e. Press  [Save].

### Caller groups [Menu 5-3-3]

You can list up to 20 members per one group. There are 7 groups you can make lists to.

1. In standby mode, press  [Names].
2. Scroll to **Caller groups** item then press  [Select], and every Group list will be displayed.
3. Select Group name you want by pressing  [Select].

#### • Member list

Shows the group members you have selected.

#### • Group ring tone

Allows you to specify ring tone for the group members' call.

#### • Group icon

Allows you to select the icon dependent on Group.

#### • Add member

You can add group members. Each group member should not exceed 20.

#### • Remove member

You can remove the member from the Group member list. But the name and the number still remain in phonebook.



## Organiser [Menu 5]



### • Rename

You can change a group name.

### Speed dial [Menu 5-3-4]

You can assign any of the keys,  to  with a Name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the phonebook first by pressing  [Names] in standby mode.
2. Scroll to **Speed dial**, then press  [Select].
3. If you want to add Speed dial, select **(Empty)**. Then, you can search the name in phonebook.
4. Select allocated a name by speed dial, and choose **Change** or **Delete** to edit the name.

### • Change

You can allocate a new phone number to the dial key.

### • Delete

You can remove the allocated phone number from the dial key.

### Settings [Menu 5-3-5]

1. Press  [Names] in standby mode.
2. Scroll to **Settings**, then press  [Select].

### • Set memory

Scroll to highlight **Set memory**, then press  [Select].

- If you select **Variable**, when adding entry, the phone will ask where to store.
- If you select **SIM** or **Phone**, the phone will store an entry to SIM or phone.

### • Search by

Scroll to highlight Search by, then press  [Select].

- If you select **Variable**, the phone will ask how to search.
- If you select Name or Number, the phone will search an entry by **Name** or **Number**.

### • View options

Scroll to highlight View options, then press  [Select]

- **Name only** : Set the phonebook list with displaying only name.



## Organiser [Menu 5]

- **With pictures** : Set the phonebook list with the information of character and picture.
- **Name & number** : Set the phonebook list with displaying name and number.

### Copy all [Menu 5-3-6]

You can copy/move entries from SIM card memory to Phone memory and vice versa.

1. Open the Phonebook first by pressing  [Names] in standby mode.
2. Scroll to Copy all, then press  [Select] to enter this menu.
  - **SIM to Phone** : You can copy the entry from SIM Card to Phone memory.
  - **Phone to SIM** : You can copy the entry from Phone memory to SIM Card.
3. You can see the following submenus.
  - **Keep original** : When copying, Original Dial Number is kept.
  - **Delete original** : When copying, Original Dial Number will be erased.

### Delete all [Menu 5-3-7]

You can delete all entries in SIM, Phone, and Voice. This function requires Security code except for voice.

1. Press  [Names] in standby mode and select Delete all, press  [Select].
2. Then select a memory to erase.
3. Enter security code and Press  [OK] or  [Back].

### Information [Menu 5-3-8]

#### • Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

1. Open the phonebook first by pressing  [Names] in standby mode and select Information.
2. Scroll to Service dial number, then press  [Select] to enter.
3. The names of the available services will be shown.
4. Use  and  to select a service. Press  [Send].

## Organiser [Menu 5]



### • Memory status

This feature allows you to see how many free and in-use are in your phonebook.

1. Open the phonebook first by pressing  [Names] in standby mode. Select Information by pressing  [Select].
2. Scroll to Memory status, then press  [OK].

### • Own number (SIM dependent)

You can check your own number in SIM card.


## FM Radio [Menu 6]

You can search radio stations and enjoy listening to the radio.

In standby mode, pressing the Radio hot key (  ) accesses this menu.

### Listen radio [Menu 6-1]

Connect the FM Radio headset into headset jack on the left side of the phone to activate this menu. You can turn on the radio by long press of the Radio hot key (  ). The following screen is displayed.

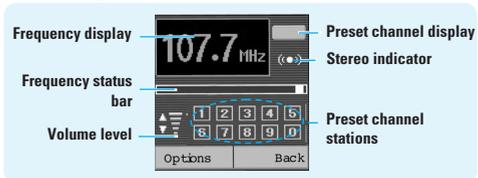

1. Search the desired radio station using the left/right navigation keys.

### Key operations

#### Left/Right navigation keys

(Long press) Scans downward/upward downward/upward to the next receivable radio station.  
(Short press) Changes the frequency 0.05 MHz at a time.

#### Up/Down navigation keys

Increases/Decreases the volume level (6 volume levels including mute).

### Note

- To improve the radio reception, extend the headset cord which functions as the FM antenna.

2. Press and hold down the corresponding number key of a channel to store the currently selected radio station into. "Done" message will be popped up and the selected channel will be coloured.

### Note

- You can preset up to 10 channels.

3. After presetting radio channels, you can listen to other channel by pressing the corresponding number key (short press).



## FM Radio [Menu 6]



4. You can access the following option menus by pressing the left soft key [Options].

- **Exit radio**

Stops the radio play and goes back to standby mode.

- **Radio alarm**

To set the radio alarm. The steps to set the radio alarm are same to the ones to set the alarm clock. (See page 48.)

- **Save channel**

To save the radio station. The list of 10 channel status appears. After selecting an (empty) channel, press the left soft key [Save]. If you select an occupied channel, "Replace?" message will be popped up. And if you select **Yes**, the channel will be replaced by the new station.

- **Delete channel**

After selecting the channel to delete, press the left soft key [Delete]. You'll be asked to confirm this action.

- **Activate speaker**

Select this to listen to the radio through the built-in speaker. To turn off the speaker, select

"Deactivate speaker".

- **Maintain play**

If you set this option to On, the radio will keep playing even when you get out of the "Listen radio" menu and use other menu features.

 
### Note

- When you receive a call, the radio is muted automatically, and you can answer the call by pressing the . When you end the call, the radio is resumed.
- When you receive a message, you will hear the message receipt tone and the radio keeps playing.

### Channels [Menu 6-2]

Opens up the channel list.

After storing radio stations to the preset channels, you can listen to the radio by selecting the desired channel.



## Fun & Tools [Menu 7]

### Favorites [Menu 7-1]

You can set up to 9 menus which you have used often in Favorites. You can connect this menu directly by pressing hot key .

If you want to register the menu in favorites, select <Empty> on a list. If the menu is already registered, the options are displayed as follows:

- **Select** : Activate the registered menu.
- **Change** : Change the menu.
- **Delete** : Delete the registered menu.
- **Delete all** : Delete all menus which are registered in Favorites.
- **Information** : View the information of registered menu.

### Games [Menu 7-2]

The phone offers you the games to play with.

#### Note

- The control keys are different depending on a game. However, each one has an introduction to explain the main control keys. The rest ones are as follows.

#### [Common Key Function]

-  : Game menu
-  : Back
-  : Pause or resume a game.

### Calculator [Menu 7-3]

This contains the standard functions such as +, -, x, ÷ : **Addition, Subtraction, Multiplication, and Division.**

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  [Result] to view the result.
5. Press  [Reset] or enter numbers to repeat the procedure above.
6. Use  key to erase any numbers or signs.
7. If you press  key, you can input a minus number. In addition, if you press  key, you can input a decimal number.
8. To end **Calculator**, press  [Back].



## Fun & Tools [Menu 7]



### My folder [Menu 7-4]

Enables you to view the downloaded pictures and sounds. They can be set as Wallpaper or Ring tone. You can view, listen, delete or rename downloaded data.

#### Pictures [Menu 7-4-1]

#### Sound [Menu 7-4-2]

The Submenus for each main one

- **Edit title**

You can edit the title for each download contents.

- **Send message**

You can write Short message/Multimedia message (available depending on type of Media) with attachment pictures or sounds.

- **Set as Wallpaper / Set as ring tone**

You can set downloaded sounds or pictures as wallpaper or Ring tone.

- **Delete**

You can delete each downloaded content.

- **Delete all**

You can delete all downloaded contents.

### Unit converter [Menu 7-5]

 
This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length, Area, Weight, and Volume.**

1. You can select one of four unit types by pressing [Unit] key.
2. Select the standard value by using .
3. Select the unit you want to convert by pressing and .
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing .

### World time [Menu 7-6]

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing key.
2. You can set the current time to the city time you select by pressing [Set].



## Fun & Tools [Menu 7]

### Voice recorder [Menu 7-7]

The voice memo feature you to record up to 10 voice messages and each memo is up to 20 Seconds.

#### Record [Menu 7-7-1]

1. You can record voice memo in Voice recorder menu and also holding down  in the standby mode.
2. Once recording is started, the message "Recording" and the remaining time is displayed.
3. If you want to finish recording, press  [Save].
4. Key in Voice memo title, press  [OK].

#### View list [Menu 7-7-2]

The phone shows voice memo list. You can Playback and Delete the recorded voice memo.

### Memory status [Menu 7-8]

You can check the size of free memory and each menu of memory such as text/picture message, inbox, outbox.

### PC Sync

PC Sync is a program for data exchange between PC and the phone by data cable. For more information, you can use the guide of PC Sync Help file in CD.

## Internet [Menu 8]

The phone supports services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get the information such as news, weather reports, and flight times.

### Home [Menu 8-1]

Connect to a homepage. The homepage may be the site which is defined in the activated profile. It will be defined by Service Provider if you don't make in activated profile.

### Bookmarks [Menu 8-2]

Press  [Select] to access available options, or press  [Back] to exit.

- **Connect** : Connect to the selected bookmark.
- **Add new** : Add a new bookmark manually.
- **Edit** : Edit the title and the address of the selected bookmark.
- **Delete** : Delete the selected bookmark from the bookmark list.

### Profiles [Menu 8-3]

You can make up to 5 profiles and activate only one out of them. Scroll to the desired profile and press  to access available options.

#### • Activate

You can activate the profile you want.

#### • Settings

You can edit and change WAP settings of the selected profile.

#### - Homepage

This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type "http://" at the front of each URL as the WAP Browser will automatically add it.

#### - Bearer

You can set the bearer data service.

#### • Data

#### • GPRS

#### - Data settings

Appears only if you select Data settings as a Bearer\service.

## Internet [Menu 8]

**IP address** : Enter the IP address of the WAP gateway you want.

**Dial number** : Enter the telephone number to dial to access your WAP gateway.

**User ID** : The users identity for your dial-up server (and NOT the WAP gateway).

**Password** : The password required by your dial-up server (and NOT the WAP gateway) to identify you.

**Call type** : Select the type of data call: Analogue or Digital (ISDN).

**Call speed** : The speed of your data connection; 9600 or 14400.

**Linger time** : You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

### - GPRS settings

The service settings are only available when GPRS is chosen as a bearer service.

**IP address** : Input the IP address of the WAP gateway you access.

**APN** : Input the APN of the GPRS.

**User ID** : The users identify for your APN server.

**Password** : The password required by your APN server.

### - Connection type

The options for connection type are Continuous, Temporary or HTTP and depend on the gateway you are using.

#### Continuous

A confirmed delivery mechanism but generates more network traffic.

#### Temporary

A non-confirmed (connectionless) service.

### - Proxy settings

**IP address** : Input the IP address of the proxy.

**Port** : Input the port number of the proxy.

### - DNS settings

Insert the primary and secondary DNS if required by the network operator.

### - Secure settings

According to the used gateway port, you can choose this option as **On** or **Off**.



## Internet [Menu 8]



- **Rename**

Edit the Profile Name.

- **Delete**

Delete the Profile.

- **Add new**

You can add a new profile manually.

### Go to URL [Menu 8-4]

You can directly connect to the site you want. You need to enter a specific URL.

### Cache settings [Menu 8-5]

You can remove the contents of Cache memory or change the Cache mode.

#### Clear cache [Menu 8-5-1]

The contents of Cache memory will be removed.

#### Check cache [Menu 8-5-2]

You can set the option whether you will check the cache memory or not.

### Cookies settings [Menu 8-6]

The information or services you have accessed are saved in the cache memory of the phone.

#### Clear cookies [Menu 8-6-1]

Removes all context saved in cookie.

#### Check cookies [Menu 8-6-2]

Check whether a cookie is used or not.

### Security certification [Menu 8-7]

 
A list of the available certificates is shown.

### Reset profiles [Menu 8-8]

You can reset profiles to return to original settings.

### Browser version [Menu 8-9]

The WAP Browser version is displayed.



## On browsing menu

If you are on line, you can view the following menus.

- **Home**

Refer to [Menu 8-1].

- **Reload**

Reloads the current page.

- **Bookmarks**

See [Menu 8-2].

- **Save as bookmark**

You can save a site as bookmark.

- **Go to URL**

You can move to the site you want. In this menu, you can also edit the site address.

- **Clear cache**

The contents of cache memory will be removed.

## Java [Menu 9]

### Applications [Menu 9-1]

#### Java Menu Options

Scroll to an application and select Options.

- 1. New** : You can create new folder.
- 2. Move** : You can select a folder which you want.
- 3. About** : Shows Java MIDP information.
- 4. Info** : Displays information about the selected MIDlet.
- 5. Remove** : Deletes the selected MIDlet.
- 6. Update** : Accesses the server and updates the selected MIDlet.
- 7. Options** : Some Java applications may require a data connection to be made. Select this to set the connecting options.
- 8. Rename** : You can rename the application.
- 9. Exit** : Exits from Applications.

### Download [Menu 9-2]

You can edit and set MIDlet server address. Download MIDlets using WAP Browser and store them in the phone. You can also view the list of MIDlets stored on the Applications screen.

### Profiles [Menu 9-3]

Some Java applications may require a network connection to operate, for example, multiplayer games. You can set up to 5 profiles and activate the desired one. This is similar to wap profile setting. Refer to wap profiles when you set this.



JAVA™, is a trademark of Sun Microsystems, Inc.

## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.



### Battery pack



### Stereo Headset

Includes earpiece and microphone so allows hands-free operation. Connect this to the phone to listen to the radio.



### Travel Adapter

This charger allows you to charge the battery while away from home or your office.



### Data cable/CD

You can connect your phone to PC to exchange the data between them.

### Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

## Care and Maintenance

**When using this unit, basic safety precautions as below should be always followed.**

- Do not disassemble this unit. (Take it to a qualified service technician when repair work is required.)
- Away from electrical appliance such as a TV, radio or personal computer.
- The unit should be situated away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.

- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

### Caring for the Battery

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

## Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Message	Possible causes	Possible Corrective measures
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak	Move higher to a window or open space.
	Outside GSM network	Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error	New network not authorized.
	New SIM card inserted Charge limit reached	Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly	Press On/Off key for at least two seconds.
	Battery empty	Charge battery. Check charging indicator in the display.
	Battery contacts dirty	Clean contacts.

Message	Possible causes	Possible Corrective measures
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

## Technical Data

### General

 
 
**Product name :** B2000

**System :** GSM 900 / DCS 1800 / PCS 1900

### Ambient Temperatures

**Max :** +55°C

**Min :** -10°C



# Declaration of Conformity LG Electronics

## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics, Inc, LG Kangnam Tower  
679, Yoksam-dong, Kangnam-gu, Seoul, Korea

## Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 Tri-Band Terminal Equipment

Model Name

B2000

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 & 7 : 2002

EN 55015 : 2001

EN 55020 : 2002

EN 60950 : 2000

EN 55020 : 2002

3GPP TS 51.010-1.

Selection according to GCF-CC 3.12.0 including requirements of EN 301 511, v9.0.2

## Supplementary Information

The conformity to above standards is verified by 7Layers and Phoenix with Certificate No.(NC/12379) and GSM test report (no.WG613517), EMC test report(no. HCT-C04-1212-1), safety test report(no. ITYA0167054M4) and SAR test report(no. TOMA.0866684-01)

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Jun Seog, Kim / Director

 
 
 
 
Issued Date

22.Mar.2005

LG Electronics Inc, Amsterdam Office  
Velluwezoom15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative









# MANUFACTURER'S WARRANTY

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer. LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is good only to the Customer during the warranty period as long as it is in AUSTRALIA.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.
- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses.)
- (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
- (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

### 3. STATEMENT

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

### 4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following telephone number from anywhere in AUSTRALIA:

LG Electronics Australia Pty Ltd  
2 Wonderland Drive  
Eastern Creek NSW 2766  
PO Box 212  
HORSLEY PARK NSW 2175

Tel: 1800-638-080      Fax: 02-8805-4201



**LG Electronics Australia Pty Ltd.**

