

KG 225 | USER GUIDE |

LG Electronics Inc.

<http://www.lge.com>

P/N : MMBB0204002 (1.0) 

LG Electronics Inc.

| KG 225 | USER GUIDE



CE 0168

T-Mobile... ENGLISH



| KG 225 | USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

KG225 | USER GUIDE

Please read this manual carefully
before operating your mobile phone.
Retain it for future reference.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Table of Contents

Introduction	5	General functions	20
Guidelines for safe and efficient use	6	Making and answering calls	20
KG225 Features	10	Signal strength	21
Parts of the phone	10	Entering text	21
Open view	10	Phonebook	24
Rear view	11	In-call menu	24
Key description	12	Multiparty or conference calls	26
Display information	14	Selecting functions and options	28
On-Screen icons	14	Menu tree	29
Getting started	15	Call register	31
Installing the SIM card and the battery	15	Missed calls	31
Remove the battery	15	Received calls	31
Install the SIM card	15	Dialled calls	31
Install the battery	16	All calls	32
Charging the battery	16	Delete recent calls	32
Disconnecting the adapter	17	Call charges	32
Turning your phone on and off	18	GPRS information	33
Change codes	18		

Multimedia	34	Templates	46
Photos	34	Settings	48
Pictures	34		
Sounds	34	t-zones	50
		Home	50
Applications	35	Bookmarks	50
Camera	35	Go to URL	51
Games	38	Settings	51
Alarm clock	39		
Calculator	39	Calendar	53
World time	39	Schedule	53
Unit converter	40	Memo	53
Voice recorder	40		
SIM application	40	Profiles	54
		Changing the profile	54
Messages	41	Customising profiles – Personalise	54
New message	41	Customising profiles – Rename	55
Inbox	42		
Outbox	43	Contacts	56
Draft	44	Search	56
Listen to voice mail	45	Add new	56
Info message	45	Caller groups	57
		Speed dials	57

Table of Contents

Settings	58
Copy all	58
Delete all	58
Information	59
Settings	60
Date & Time	60
Phone settings	60
Call settings	61
Security settings	63
Network settings	65
GPRS setting	66
Memory status	67
Reset settings	67
On browsing menu	68
Accessories	69
Technical data	70

Introduction

Congratulations on your purchase of the advanced and compact KG225 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KG225 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all

designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.917 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

Product care and maintenance

Warning! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's,

radios or personal computers

- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets,

with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

- ▶ Please remove the data cable before powering on the handset.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- ▶ Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it may also cause the phone to operate at a higher power level than needed and shorten talk and standby times.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile

Guidelines for safe and efficient use

phones.

- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings.

This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.


Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

KG225 Features

Parts of the phone

Open view

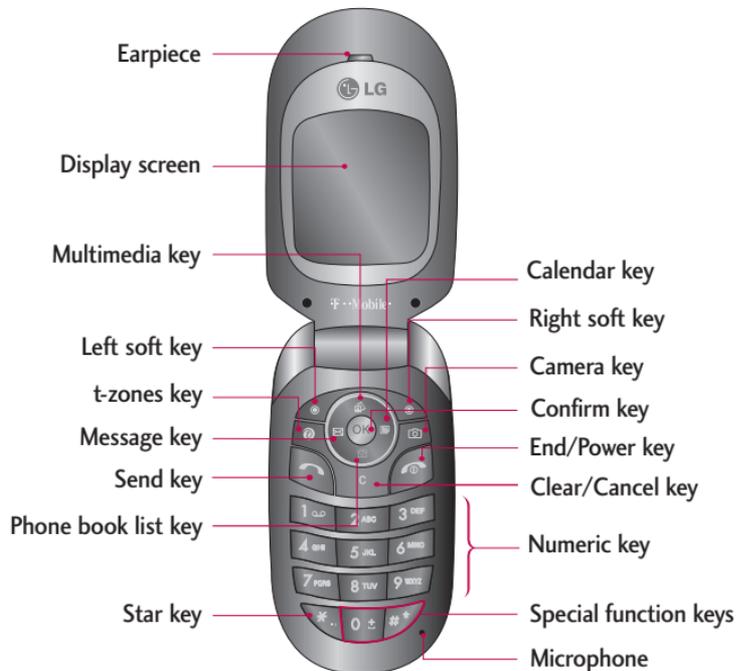

Rear view



Key description

The following shows key components of the phone.

Keypad description

Key	Description
	<p>Left soft key / Right soft key</p> <p>Each of these keys performs the function indicated by the text on the display immediately above it.</p>
	<p>Navigation keys</p> <p>Use to scroll through menus and move the cursor. You can also use these keys for quick access to the following functions.</p> <ul style="list-style-type: none"> Up navigation key (): A shortcut key to access multimedia. Down navigation key (): A shortcut key to search the phonebook list. Left navigation key (): A shortcut key to send a text message. Right navigation key (): A shortcut key to the calendar.

Key	Description
	<p>Send Key</p> <p>You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialed, received and missed calls.</p>
	<p>Numeric keys</p> <p>These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode.</p>
	<p>When you press these keys for a long time.</p> <ul style="list-style-type: none"> Used to call your voicemail box  . Used to add the international prefix  . Used to call Speed dials from  to  . Used to enter a pause  .
	<p>END/PWR key</p> <p>Used to end or reject a call. This key is also used as Power Key by pressing and holding this key for a few seconds.</p>

Key	Description
	Clear key Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.

Side keys

Key	Description
	Up/Down side keys When you open the flip, you can control the volume of key tone in the standby mode and the volume during a call.

Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen icons

Icon/Indicator	Description
	Tells you the strength of the network signal.
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	Line 1/2 is in use for outgoing calls – if you subscribe to the Two Line Service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You have received a push message.

Icon/Indicator	Description
	All audible signals are turned off.
	General profile is activated.
	Loud profile is activated.
	Silent profile is activated.
	Headset profile is activated.
	Car profile is activated.
	You can divert a call.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.


Getting started

Installing the SIM card and the battery

Make sure the power is off before you remove the battery.

1. Remove the battery.

Press the button to release the battery, then slide the battery down till it stops. Now lift the battery from its compartment.

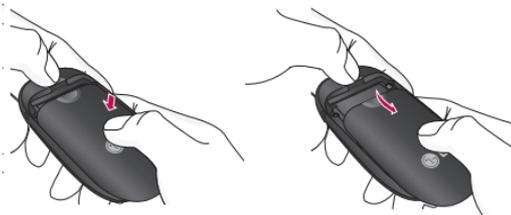

Note

- ▶ Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Install the SIM card.

Insert and slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



To insert the SIM card




To remove the SIM card

Caution

- ▶ The metal contact of the SIM card can easily be damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.


Getting started

3. Install the battery.

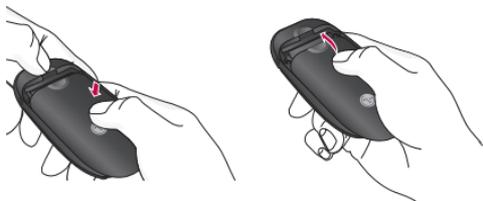

Charging the Battery

To connect the mains adapter to the phone, you must have installed the battery.

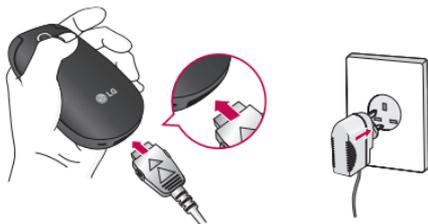

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.
2. Connect the other end of the mains adapter to the mains socket. Only use the charger included in the box.
3. The moving bars of battery icon will stop after charging is complete.

Caution

- ▶ Do not force the connector as this may damage the phone and/or the charger.
- ▶ If you use the battery pack charger out of your own country, use an attachment plug adapter for the proper configuration.
- ▶ Do not remove your battery or the SIM card while charging.

Warning

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ Make sure that no sharp-edged items such as animal teeth or nails come into contact with the battery. There is a risk of this causing a fire.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

Disconnecting the adapter

Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.

1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.



Note

- ▶ Ensure the battery is fully charged before using the phone for the first time.
- ▶ Do not remove your battery or the SIM card while charging.
- ▶ In the case the battery is not properly charged, please turn the phone off and on using the power key. Then detach and reattach the battery, and recharge the phone.

Turning your phone on and off

Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or handsfree car kit. Or install a charged battery pack to the handset.
2. Press and hold  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

Turning your phone OFF

1. Press and hold  for a few seconds until the LCD screen is turned off.

Change codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature (Menu 9.4.5).

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network operator for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unlocking Key) code is required to unlock a PIN blocked phone. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to unlock a blocked PIN2 code. If you lose the code, please contact your network operator.

Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to **enable** or **disable** the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

Barring password

The barring password is required when you use the **Call barring** function. You can obtain the password from your network operator when you subscribe to this function.

General functions

Making and answering calls

Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
 - ▶ To delete numbers press the  key. Press and hold the clear key  to erase the entire number.
3. Press the send key  to call the number.
4. To end the call, press the end key  or the right soft key.

Making a call from the call history list

1. In standby mode, press the send key  and the latest incoming, outgoing and missed calls will be displayed.
2. Select the desired number by using the up/down navigation keys.
3. Press  to call the number.

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  to call the number.

Ending a call

When you have finished your call, press the end  key.

Making a call from the address book

You can save the names and phone numbers dialed regularly in the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the contacts and pressing the  key.

Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.

Note

- ▶ *In standby mode with the phone open, pressing the side keys adjusts the key tone volume.*

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if saved in the phonebook) is displayed.

1. To answer an incoming call, open the phone.
(When **Flip open** has been set as the answer mode. (See page 62 (Menu 9.3.2).))

Note

- ▶ *If **Press any key** has been set as the answer mode (see page 62), any key press will answer a call except for the  or the right soft key.*
- ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the phone.

- ▶ You can answer a call whilst using the phonebook or other menu features.
2. To end the call, close the phone or press the  key.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.

General functions

T9 Mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

ABC Mode


This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the top right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the top right corner of the LCD screen.

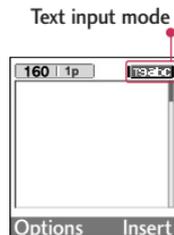

► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.

- ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after you have finished typing, press the down navigation key once or more to cycle through the other word options.

Example: Press      to type **Good**.
Press     [down navigation key] to type **Home**.

- ▶ If the desired word is missing from the word choice list, add it using the ABC mode.
- ▶ You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the  key. To delete letters, press . Press and hold down  to erase entire words.

Note

- ▶ To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

▶ Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:
 - ▶ Once for the first letter
 - ▶ Twice for the second letter.
 - ▶ And so on.
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.

Note

- ▶ Refer to the table below for more information on the characters available using the alphanumeric keys.

General functions

Key	Characters in the order display	
	Upper Case	Lower Case
	., / ? ! - : ' " 1	., / ? ! - : ' " 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	Space 0	Space 0

► Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 500 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Contacts** menu.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the send key. When the second call is connected, the first call is automatically placed on hold. You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.

Switching between two calls

To switch between two calls, press the left soft key then select **Swap** or by pressing  key.

Answering an incoming call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to

activate and deactivate it see **Call waiting** (Menu 9.3.4) on page 62.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting the left soft key [**Answer**].

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the right soft key [End] key or by pressing the .

Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute**. The handset can be unmuted by selecting **Unmute**.

When the handset is muted, the caller cannot hear you, but you can still hear them.

General functions

Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key.

When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.

Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.


Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**. After pressing the left soft key, selecting **Conference/End all** will end all the active and on-hold calls.

Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context or the label on the bottom line of the screen just above each key indicates its current role.

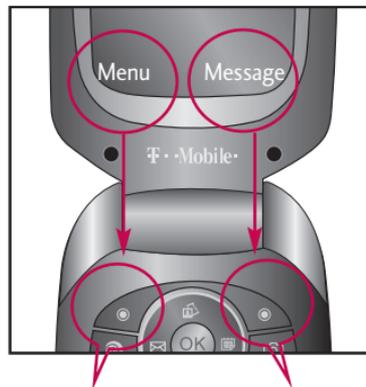

Press the left soft key to access the available menu.

Press the right soft key to activate the corresponding action.

Menu tree

1. Call register
1.1 Missed calls
1.2 Received calls
1.3 Dialed calls
1.4 All calls
1.5 Delete recent calls
1.6 Call charges
1.7 GPRS information
2. Multimedia
2.1 Photos
2.2 Pictures
2.3 Sounds

3. Applications
3.1 Camera
3.2 Games
3.3 Alarm clock
3.4 Calculator
3.5 World time
3.6 Unit converter
3.7 Voice recorder
3.8 SIM application
4. Messages
4.1 New message
4.2 Inbox
4.3 Outbox
4.4 Draft
4.5 Listen to voice mail
4.6 Info message
4.7 Templates
4.8 Settings

5. t-zones
5.1 Home
5.2 Bookmarks
5.3 Go to URL
5.4 Settings
6. Calendar
6.1 Schedule
6.2 Memo

Menu tree

7. Profiles
7.1 General
7.2 Loud
7.3 Headset
7.4 Car
7.5 Vibrate only
7.6 Silent

8. Contacts
8.1 Search
8.2 Add new
8.3 Caller groups
8.4 Speed dials
8.5 Settings
8.6 Copy all
8.7 Delete all
8.8 Information

9. Settings
9.1 Date & Time
9.2 Phone settings
9.3 Call settings
9.4 Security settings
9.5 Network settings
9.6 GPRS setting
9.7 Memory status
9.8 Reset settings

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

Missed calls

Menu 1.1

This option lets you view the last 10 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook.
- ▶ Enter a new name for the number and save both in the phonebook.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

Received calls

Menu 1.2

This option lets you view the last 10 incoming calls. You can also:

- ▶ View the number if available and call it, or save it in the phonebook.
- ▶ Enter a new name for the number and save both in the phonebook.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

Dialled calls

Menu 1.3

This option lets you view the last 20 outgoing calls (called or attempted).

You can also:

- ▶ View the number if available and call it, or save it in the phonebook.
- ▶ Enter a new name for the number and save both in the phonebook.

Call register

- ▶ Send a message to this number.
- ▶ Delete the call from the list.

All calls

Menu 1.4

You can view all lists of outgoing or incoming calls.

Delete recent calls

Menu 1.5

Use this to delete the missed call list, received call list, or dialled call list. You can also delete all call lists at one time selecting **All calls**.

Call charges

Menu 1.6

Call duration

(Menu 1.6.1)

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. You can reset the call timer by selecting **Reset all**.

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and received since the timer was last reset.
- ▶ **Received calls:** Length of the incoming calls.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Reset all:** Resets the call timer.

Call costs

(Menu 1.6.2)

This network service allows you to check the cost of your last call, all calls, remaining and reset the call cost. To reset the call cost, you will be requested to enter the PIN2 code.

Note

- ▶ *The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.*

Settings

(Menu 1.6.3)

(SIM Dependant)

- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
- ▶ **Set credit:** This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining units are shown. If you select **Change**, you can change your charge limit.
- ▶ **Auto display:** This network service allows you to automatically see the cost of your last calls. If set to **On**, you can see the cost of the last call when the call is released.

GPRS information

Menu 1.7

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

Call duration

(Menu 1.7.1)

You can check the duration of **Last call** and **All calls**. You can also reset the call timers by selecting **Reset all**.

Data volumes

(Menu 1.7.2)

You can check the **Sent**, **Received** or **All** data volumes. You can also reset the counter by selecting **Reset all**.

Multimedia

You can download ringtones, sounds, games, pictures, and wallpaper from WAP portals such as t-zones. Press the navigation keys for accessing the contents or your photos.

Photos

Menu 2.1

The photos taken with the KG225 are stored in here. (For more details, refer to page 35.)

Pictures

Menu 2.2

- ▶ **Picture:** Select a picture from the list by pressing the left soft key [View]. Then, you can set it as wallpaper or send it via multimedia message by pressing the left soft key [Options].

Sounds

Menu 2.3

- ▶ **Sounds:** You can select a sound from the list. After selecting the desired sound, you can set it as the ring tone, send the sound via SMS or MMS, using the left soft key [Options].

Your multimedia phone comes with an easy-to-use built-in camera, which allows you to instantly take, view and share pictures with your friends and family.

Note

- ▶ If the battery is too low, you may not be able to use the Camera feature.

Camera

Menu 3.1

Take a picture

(Menu 3.1.1)

Press the Menu key and select **Camera** → **Take a picture** using the navigation keys. Or you can directly open the camera module by a press of the Camera key in standby mode. The camera module opens and you'll see the view to be captured.



→ preview option menu bar

Before shooting, you can set the following options.

1. Digital zoom (): x1, x2, x3, x4

Note

- ▶ The maximum zoom scale depends on the resolution as follows.

48 x 48	1x, 2x, 3x, 4x
160 x 120	1x, 2x, 3x, 4x
320 x 240	1x, 2x, 3x
640 x 480	unavailable

2. Tone (): Colour ()/ Sepia ()/ Black and white ()

3. Brightness (): -2, -1, 0, +1, +2

4. Timer (): Off (kein timer), 3 sec, 5 sec

5. Memory (): Shows the current memory status.

Note

- ▶ If the memory is full, "Memory full" message is displayed and you cannot save a photo. Create space by deleting old photos.


6. Resolution (): 48x48 (for phonebook), 160x120, 320x240, 640x480

Note

► For the picture to be used in the phonebook, select 48x48 (for phonebook).

7. Image quality (): Fine/ Normal/ Basic.

1. Centre the desired option menu using the left/right navigation keys.
2. Select the desired value with the up/down navigation keys.
3. After setting all the values, focus on the subject to capture and press the Camera key or OK key. With a click, the image is captured and the following menu bar appears.

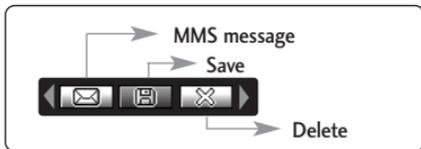

Note

► If *Auto save (Menu 3.1.3)* is set to *Yes*, the captured image is automatically saved without displaying this menu bar. (Refer to page 38.)

4. To save the image, centre the () and press  .

If you don't want to save the image, center the () and press  . You can immediately access Photos by pressing the left soft key  .

You can also send the image via multimedia message by selecting (). For further information regarding multimedia message writing, refer to page 41. Sending of pictures via MMS leads to cost, for details please contact your network operator / service provider.

Take continuously

(Menu 3.1.2)

You can take the maximum of 9 pictures subsequently at the same time. After taking a picture, you can view it using the up/down navigation keys. You can also save them by pressing the OK key.

Note

- ▶ If you set 320x240 in resolution, you can take only 6 pictures. In case of 160x120, it is available to 9 pictures.

Before shooting, you can set the following options.

1. Digital zoom (): x1, x2, x3, x4

Note

- ▶ The maximum zoom scale depends on the resolution as follows.

48 x 48	1x, 2x, 3x, 4x
160 x 120	1x, 2x, 3x, 4x
320 x 240	1x, 2x, 3x
640 x 480	unavailable

2. Tone (): Colour()/ Sepia()/ Black and white()

3. Brightness (): -2, -1, 0, +1, +2

4. Timer (): Off (kein timer), 3 sec, 5 sec

5. Memory (): Shows the current memory status.


Note

- ▶ If the memory is full, "Memory full" message is displayed and you cannot save a photo. Create space by deleting old photos.

6. Resolution (): 160x120, 320x240

7. Image quality (): Fine/ Normal/ Basic.

1. Centre the desired option menu using the left/right navigation keys.
2. Select the desired value with the up/down navigation keys.
3. After setting all the values, focus on the subject to capture and press the Camera key or OK key. Once the images have been captured the following menu bar appears.

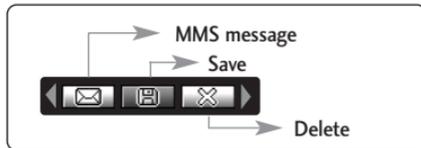

Note

► If **Auto save** (Menu 3.1.3) is set to **Yes**, the captured image is automatically saved without displaying this menu bar. (Refer to page 38.)

4. To save the image, centre the () and press  .
If you don't want to save the image, centre the () and press  .

You can also send the image via multimedia message by selecting ().

Settings

(Menu 3.1.3)

Press the Menu key and select **Camera** → **Settings** using the navigation keys.

- **Auto save:** If you set this to **Yes**, the captured images are automatically saved without displaying the **Save** menu bar.
- **Delete all photos:** Use this menu to delete all the photos. You are asked to confirm this action.

Games

Menu 3.2

You can access a great selection of games on your phone. more games can be downloaded via t-zones portal. Downloading games leads to costs, for details please contact your network operator / service provider.

Note

- *The control keys are different depending on the game. However, each one has an introduction to explain the main control keys. The ones below are as follows.*

Common Key Function

 : Back

 : Pause or resume a game

Alarm clock

Menu 3.3

You can set up to 5 alarm clocks to go off at a specified time.

1. Select **On** and enter the alarm time you want.
2. Select the repeat period : **Once, Mon ~ Fri, Mon ~ Sat, Everyday.**
3. Select the alarm tone you want and press  [OK].
4. Edit the alarm name and press  [OK].

Calculator

Menu 3.4

The calculator provides the basic arithmetic functions: **addition, subtraction, multiplication and division.**

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.

Note

- ▶ To erase any mistake or clear the display, use the  key.

- ▶ To include a decimal point, press the  key.
- ▶ To include a minus sign, press the  key.

3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [OK] to return to the initial state.

World time

Menu 3.5

You can view clocks of the world's major cities.

1. Select the city corresponding to your time zone by pressing the up/down/left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Set].

Unit converter

Menu 3.6

This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length, Area, Weight, and Volume.**

1. Select one of four unit types by pressing the left soft key [Unit].
2. In the Current unit section select the unit you want to convert using the left/right navigation keys.
3. Move to the Convert unit section by pressing the down navigation key.
4. Select the unit you want to convert to, using the left/right navigation keys.
5. Input numbers using the numeric keys. Conversion is calculated automatically.

Note

- ▶ You can input a decimal number by pressing the  key.

Voice recorder

Menu 3.7

In this feature you can record up to 10 voice memos, up to a maximum of 20 seconds each.

SIM application (SIM dependent) Menu 3.8

Your service provider can offer special applications through the SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Application menu your phone is future-proof and will support additions to your service provider's service.

For more information contact your service provider.

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages. Sending of SMS and MMS leads to costs. For details please contact your network operator.

New message

Menu 4.1

You can write and edit text messages up to 10 pages.

1. Enter the **Messages** menu by pressing  [OK].
2. If you want to write a new message, select **Write text message**.
3. To make text input easier, use T9. For details, refer to page 21 through 24 (Entering text).
4. Press [Insert] to attach the following ;

Insert

- ▶ **Symbol:** You can add special characters.
- ▶ **Picture:** You can insert the Default graphics or graphics in My pictures that are available for short messages. Pictures taken using the phones camera also can be used to send via mms.
- ▶ **Sound:** You can insert sounds that are available for

short messages.

- ▶ **Text templates:** You can use Text templates already set in the phone.
 - ▶ **Contacts:** You can add phone numbers or e-mail addresses in the address book.
 - ▶ **My Business card:** You can add your business card to the message.
5. After you have completed the message, to select the required option, press the left soft key [Options].

Options

- ▶ **Send:** Sends the text message.
1. Enter the number of the recipient.
 2. Press  key to add more recipients.
 3. You can add phone numbers from the address book.
 4. Once the numbers have been entered, press the left soft key to send the message.

All messages will automatically be saved in the outbox folder, even after a sending failure.

Messages

- ▶ **Save:** Stores messages in the Drafts folder.
- ▶ **Font:** You can select the Size and Style of font.
- ▶ **Colour:** You can also set the Colour of the text (foreground) and the background.
- ▶ **Alignment:** You can select the alignment of text. [Left/Centre/Right]
- ▶ **Add T9 dictionary:** You can add your own words. This menu will only be shown when the edit mode has been set to T9ABC/T9Abc/T9abc.
- ▶ **T9 languages:** Select the desired language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
- ▶ **Exit:** If you press Exit whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.

Note

- ▶ *This phone supports EMS release 5, so is available to send colour pictures, sounds, text styles, etc.. If the other parties handsets do not support such options, the pictures, sounds or texts sent may not be displayed correctly on their phones.*

Inbox

Menu 4.2

You will be alerted when you have received messages. They will be stored in the Inbox.

In the Inbox, you can identify each message by their icons. For detail, see the icon directive.

▶ Icon directive

Icon	Description
	Multimedia message
	Short message
	SIM message
	Read Short message
	Read Multimedia message
	Read
	Notified multimedia message

If the phone shows 'No space for SIM message', you only have to delete the SIM messages from the Inbox. If the phone displays 'No space for message', you will then need to delete messages, media or applications to free up space.

Note

- ▶ **SIM message:** SIM message means the message is exceptionally stored in the SIM card.

When you are notified that you have received a multimedia message, you have to wait for the message to be downloaded before you can view it. For notification setting, see (Menu 4.8.2) for detail.

To read a message, select one of the messages by pressing .

- ▶ **View:** You can view the selected message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call the sender back.
- ▶ **Delete:** You can delete the current message.
- ▶ **Delete all:** Cancels all the message transmission and deletes all of them.
- ▶ **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

- ▶ **Replay (applicable to Multimedia message only):** You can replay multimedia messages.

- ▶ **Receive (In the case of notification message):** If Multimedia message is set to Auto download off, you can get only Notification. To receive a message, you need to select [Receive].

Outbox

Menu 4.3

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

Icon	Description
	MMS sent
	MMS unsent
	MMS delivery confirmed
	SMS sent
	SMS unsent
	SMS delivery report

In each message, the following options are available by pressing the left soft key [Options].

Messages



The messages of which transmission was completed has the following options.

- ▶ **View:** You can view the selected message.
- ▶ **Forward:** You can forward the selected message to other recipients.
- ▶ **Delete:** Deletes the selected message from outbox.
- ▶ **Information:** You can view the information of selected message: subject (only for multimedia message), the date and time when you sent it, message type and size, the priority (only for multimedia message), and recipients.

- ▶ **Delete all:** Deletes all the messages in the outbox folder.



The messages of which transmission is in progress has the following options.

- ▶ **View:** You can view the selected message.
- ▶ **Send:** Select this to send it again.
- ▶ **Cancel:** Cancels transmitting of the message.
- ▶ **Delete:** Cancels transmitting the message and deletes the message.

- ▶ **Information:** You can view the information of selected message: subject (only for multimedia message), the date and time when you sent it, message type and size, the priority (only for multimedia message), and recipients.
- ▶ **Delete all:** Cancels all the message transmission and deletes all of them.

Draft

Menu 4.4

You can view the messages saved as a draft. The draft messages are listed with the date and time when they were saved. Scroll through the list using up/down navigation keys.

Icon	Description
	Multimedia message
	Text message

Each draft has the following options. Press [Options].

- ▶ **View:** You can view the selected message.
- ▶ **Edit:** You can edit the selected message.

- ▶ **Delete:** Deletes the selected message from the drafts folder.
- ▶ **Information:** You can view the information of selected message: subject (only for multimedia message), the date and time when saved, message type and size, the priority (only for multimedia message).
- ▶ **Delete all:** Deletes all the messages from drafts folder.

Listen to voice mail

Menu 4.5

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice mail number obtained from your network operator.

When a new voice message is received, the  symbol will be displayed on the screen. A long press of the  key will take you directly into your voicemail. Please check with your service operator for details of their service in order to configure the handset correctly.

Info message

Menu 4.6

(Dependant to network and subscription)

Info service messages are text messages delivered by the network to your handset. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

Read

(Menu 4.6.1)

When you have received an info service message and select Read to view the message, it will be displayed on the screen. You can read another message by scrolling ,  or  [Next].

Topics

(Menu 4.6.2)

- ▶ **Add new:** You can add Info service message numbers in the Phone memory with its nickname.
- ▶ **View list:** You can see Info service message numbers which you have added. If you press  [Options], you can edit and delete info message categories which you have added.
- ▶ **Active list:** You can select Info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.

Templates

Menu 4.7

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Three types of templates are available: Text, Multimedia and Business card.

Text templates

(Menu 4.7.1)

The followings are pre-defined text templates.

- Please call me back.
- I'm late. I will be there at
- Where are you now?
- I'm on the way.
- Top urgent. Please contact.
- I love you.

The following options are available.

- ▶ **View:** Select this to view the selected template.
- ▶ **Edit:** Use this to edit the selected template.
- ▶ **Write messages**
 - **Write text message:** Use this to send the selected template message by SMS.
 - **Write multimedia message:** Use this to send the selected template message by MMS.
- ▶ **Add new:** Use this to create a new template.
- ▶ **Delete:** Deletes the selected template from the text template list.

- ▶ **Delete all:** Deletes all templates.

Multimedia templates (Menu 4.7.2)

You can create a multimedia template after pressing the left soft key [Add new]. And the multimedia templates you saved as a template while creating a multimedia message in the **Write multimedia message** (See page 48).

- ▶ **View:** You can view the multimedia template.
- ▶ **Edit:** You can edit the multimedia template.
- ▶ **Add new:** Allows you to add a new multimedia template.
- ▶ **Write messages:** You can write a multimedia message with the multimedia template.
- ▶ **Delete:** Deletes the selected template message from the multimedia template list.
- ▶ **Delete all:** Clears the multimedia template list.

My Business card (Menu 4.7.3)

1. Press the left soft key [Edit].
2. After keying in the name, press the left soft key [OK].
3. Key in the mobile phone number, home number, office number and fax number.
4. Press the left soft key [Save].

After creating the business card template, you can access the following menus by pressing the left soft key [Options].

- ▶ **Edit:** Use this to edit the business card.
- ▶ **Write messages:** You can send your business card via SMS or MMS.
- ▶ **Delete:** Use this to delete the signature.

Settings

Menu 4.8

Text message

(Menu 4.8.1)

▶ Message types:

Text, Voice, Fax, Natl. paging, X.400, Email, ERMES

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to Yes, you can check whether your message is sent successfully.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- ▶ **SMS centre:** Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.

Multimedia message

(Menu 4.8.2)

- ▶ **Priority:** You can send the message after setting the level of priority: Low, Normal and High.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.
- ▶ **Auto download**
 - On:** The messages are downloaded automatically on receipt.
 - Off:** Requires you to confirm you want to download the message.
 - Home network only:** If you select this, messages are downloaded automatically on receipt in your home network area. And outside your home service area, it requires you to confirm the download of the message.
- Reject**

- ▶ **Profiles:** In order to download MMS from the server, you need to set up the URL for the multimedia message server.
- ▶ **Permitted message types**
 - **Personal:** Personal message.
 - **Advertisements:** Commercial message.
 - **Information:** Necessary information.

Voice mail centre (Menu 4.8.3)

You can receive voicemail if this feature is supported by your network service provider. When a new voicemail has arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.
 - ▶ **Home:** You can listen to voice mails by selecting Home.
 - ▶ **Roaming:** Even when you are abroad, you can listen to voice mails if a roaming service is supported.

Info message (Menu 4.8.4) (Dependent to network and subscription)

- ▶ **Receive**
 - **Yes:** If you select this menu, your phone will receive Info service messages.
 - **No:** If you select this menu, your phone will not receive Info service messages any more.
- ▶ **Alert**
 - **Yes:** Your phone will beep when you have received Info service message numbers.
 - **No:** Your phone will not beep even though you have received info service messages.
- ▶ **Languages**
 - You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you have selected.

Push messages (Menu 4.8.5)

You can set the option whether you will receive the message or not.

t-zones

How to access t-zones.

You can use your phone for so much more than just texting and talking. t-zones provides information such as news, weather forecast, information on sports or traffic whenever you need it. In addition, t-zones provides superior multimedia services such as the latest music or ring tones, wallpapers or games for your entertainment and device personalisation.

Press Menu from idle mode and select t-zones using navigation keys. You can also access directly by pressing the t-zones key in idle mode.

Note

- ▶ *Additional cost may occur when using online services. Please contact your network operator/ service provider for more details.*

Home

Menu 5.1

Connects to the t-zones start up homepage. The homepage is defined in the activated profile.

Bookmarks

Menu 5.2

This menu allows you to store the URL of favourite web pages for easy access at a later time. Your phone has several pre-installed bookmarks. These pre-installed bookmarks cannot be deleted.

To create a bookmark

1. Press the left soft key  [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

Tip

- ▶ Use the  key and  key to enter symbols. To enter “.”, press .

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **Add new:** Select this to create a new bookmark.
- ▶ **Edit:** You can edit the URL and/or the title of the selected bookmark.
- ▶ **Delete:** Deletes the selected bookmark.

- ▶ **Delete all:** Deletes all the bookmarks.

Go to URL

Menu 5.3

You can connect directly to the site you want. After entering a specific URL, press the OK key.

Settings

Menu 5.4

Profiles

A profile is the network information used to connect to the Internet.

Note

- ▶ *In case the SIM card support SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card. In case the SIM card does not support SAT services, this menu will be Profiles.*

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **Settings:** Use this to edit and change WAP settings for the selected profile.
 - **Homepage:** This setting allows you to enter the

address (URL) of a site you want to use as homepage. You do not need to type http:// at the front of each URL as the WAP Browser will automatically add it.

- **Bearer:** You can set the bearer data service.

1 Data

2 GPRS

- **Data settings:** Appears only if you select Data Settings as a Bearer / service.

Dial number: Enter the telephone number to dial to access your WAP gateway.

User ID: The users identity for your dial-up server (and NOT the WAP gateway).

Password: The password required by your dial-up server (and NOT the WAP gateway) to identify you.

Call type: Select the type of data call : Analogue of Digital (ISDN)

Linger time: You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

- **GPRS settings:** The service settings are only available when GPRS is chosen as a bearer service.

APN: Input the APN of the GPRS.

User ID: The users identify for your APN server.

Password: The password required by your APN server.

- **Proxy settings**

Proxy: On/Off

IP address: Input the IP address of the Proxy server you access.

Port number: Input the Proxy Port

- **DNS settings**

Primary server: Input the IP address of the primary DNS server you access

Secondary server: Input the IP address of the secondary DNS server you access

- ▶ **Rename:** You can change the profile name.
- ▶ **Add new:** You can add a new profile.
- ▶ **Delete:** You can delete the profile.

Allow cache

Set a value whether a connection attempt is made through cache or not.

Allow Cookies

Check whether a cookie is used or not.

Clear cache

Removes all context saved in cache.

Clear Cookies

Removes all context saved in cookie.

Security

A list of the available certification is shown.

- ▶ **Authority:** You can see the list of authority certificates that have been stored in your phone.
- ▶ **Personal:** You can see the list of personal certificates that have been stored in your phone.

Reset profiles

You can reset profiles to its default configuration.

Schedule

Menu 6.1

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys. On the calendar, you can use the following keys.

Each press of		skips back a year.
		skips forward a year.
		skips back a month.
		skips forward a month.

You can enter a schedule or memo in the scheduler by pressing the left soft key [Options].

- ▶ **Add new:** Select this to enter a new schedule or memo. After a schedule note is entered on a date, the date is shown in a different colour and  appears on the right bottom of the screen. This function reminds you of your schedule. And the phone will sound an alarm tone if you set the phone to do so.

- ▶ **View:** Shows the schedule note or memo for the chosen day. Press the left soft key [Options] to edit or delete the note you selected.
- ▶ **View all:** Shows all the notes that are entered in the phone. Use the up/down navigation keys to browse through the note lists.
- ▶ **Delete past:** Select this to delete the expired schedule notes that you have already been notified of.
- ▶ **Delete all:** Select this to delete all the schedule notes and memos.

Memo

Menu 6.2

1. Select the Memo by pressing the left soft key  [Select].
2. If the entry is empty, press the left soft key  [Write].
3. Input the memo and then press the left soft key  [OK].

Note

- ▶ If you want to change the text input mode, press the  in order.

Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups. There are six preset profiles: **General**, **Loud**, **Headset**, **Car**, **Vibrate only** and **Silent**.

Each profile can be personalised (Except Vibrate only, Silent menu).

Press the left soft key [Menu] and select **Profiles** using left/right navigation keys.

Changing the profile

Menu 7.X.1

1. A list of profiles are displayed.
2. In the **Profiles** list, scroll to the profile you want to activate and press the left soft key [OK] or OK key.
3. Then, select **Activate**.

Note

- ▶ *When a headset is connected to the phone the Headset profile is automatically activated.*

Customising profiles – Personalise

Menu 7.X.2

You can customise profiles except Vibrate only (and Silent menu). Scroll to the desired profile in the Profile list. After pressing the left soft key or the OK key, select **Personalise**. The profile setting option opens. Set the options as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tone:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ring tone.
- ▶ **Message alert type:** Set the alert type for message receipt.
- ▶ **Message tone:** Select the alert tone for message receipt.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Keypad tone:** Select the desired keypad tone.
- ▶ **Flip tone:** Allows you to set the flip tone.

- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ring tone when switching the phone on/off.

Customising profiles – Rename

Menu 7X.3

You can rename a profile and give it any name you want.

Note

- ▶ *Vibrate only, Headset and Car (and Silent) profiles cannot be renamed.*
1. To change the name of a profile, scroll to the profile in the profile list and after pressing the left soft key or the OK key, select **Rename**.
 2. Key in the desired name and press the OK key or the left soft key [OK].

Contacts

You can save phone numbers and their corresponding names in the memory of your SIM card. In addition, you can save up to 500 numbers and names in the phone memory.

Press the left soft key [Menu] in standby mode, then select Contacts.

Search

Menu 8.1

1. Select **Search**. You are asked to enter a name.
2. Enter the start of the name that you wish to find and press the left soft key [Search].
 - ▶ You can access the Contacts directly by pressing navigation key  in standby mode.
3. After finding the desired contact, you can make a call to the number by pressing the  key. Or press the left soft key [Option] to use the following options.

- ▶ **Edit:** You can edit the name and number.
- ▶ **Write text message:** Use this to write a text message to the contact.
- ▶ **Write multimedia message:** Use this to write a

multimedia message to the contact.

- ▶ **Copy:** You can copy an entry from SIM to phone or from phone to SIM.
- ▶ **Main Number:** If more than one number is listed you can choose the main number you want to be displayed.
- ▶ **Delete:** Deletes the contact.

Add new

Menu 8.2

You can add a contact entry using this function.

There are 2 memories: Phone memory and SIM memory. To select the memory, go to Set memory (Menu 8.5.1). The phone memory capacity is 500 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Press the Menu key and select **Contacts** → **Add new**.
2. You can add new contact entries to the SIM memory or the phone memory. To select the memory, go to Set memory (Menu 8.5.1). (Refer to page 58)

- ▶ **Adding new entries into SIM memory:**
You can enter a name and number, and select the required group. (Depends on the SIM)
- ▶ **Adding new entries into the phone memory:**
You can enter a name, and number, and select the required group. And select which number will be the main number.

Caller groups

Menu 8.3

You can add up to 20 members per group, with up to a maximum of 7 groups in total.

1. Select **Caller groups**. All group lists will be displayed: **Family, Friend, Colleague, VIP, Group 1, Group 2, and Others**.
2. Select the group name that you want to manage by pressing the left soft key [Option].
The following submenus will be displayed.
 - ▶ **Member list:** Displays the member list in the group.
 - ▶ **Group ring tone:** Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.

- ▶ **Group icon:** Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
- ▶ **Add member:** Add a member to the group. You can add up to 20 members per group.
- ▶ **Remove member:** Removes the member from the group member list. The contact entry still remains in Contacts.
- ▶ **Rename:** Assigns a new name to the group.

Speed dials

Menu 8.4

Assign contacts to any of the keys  to . You can then call that contact by pressing the corresponding number key.

1. Scroll to **Speed dial**, then press [OK].
2. To add a number to **Speed dial**, select (Empty).
Then, you can search the name through Contacts.
3. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Option].

Settings

Menu 8.5

Default memory

(Menu 8.5.1)

You can select the memory for the Contacts feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

Search by

(Menu 8.5.2)

You can set the phone to search by name or number, when you search Contacts. If you select **Variable**, the phone will ask how to search when you search Contacts.

View options

(Menu 8.5.3)

You can set the Contact display option.

- ▶ **Name only:** When you search Contacts, the list displays the names only.
- ▶ **With pictures:** When you search Contacts, the list displays names and corresponding pictures.
- ▶ **Name & number:** When you search Contacts, the list displays the names and numbers.

Copy all

Menu 8.6

You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- ▶ **SIM to Phone:** Use this to copy the entry from the SIM Card to the Phone memory.
- ▶ **Phone to SIM:** Use this to copy the entry from the Phone memory to the SIM Card.

The following options are available.

- **Keep original:** When copying, the original dial numbers are kept.
- **Delete original:** When copying, the original dial numbers will be erased.

Delete all

Menu 8.7

You can delete all entries in the SIM and/or phone. This function requires the security code.

Press  to return to standby mode.

Information

Menu 8.8

- ▶ **Service dial number (SIM dependent):**
Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.
 1. Select the Service dial number option.
 2. The names of the available services will be shown.
 3. Use the up/down navigation keys to select a service. Press .
- ▶ **Memory in use:** You can check the current memory status of the SIM card or the phone memory.
- ▶ **Own number (SIM dependent):** Use this to display your phone number in the SIM card.

Settings

You can set the following menus for your convenience and preferences.

Date & Time Menu 9.1

You can set functions relating to the date and time.

Set date (Menu 9.1.1)

You can enter the current date.

Date format (Menu 9.1.2)

You can set the Date format such as DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD.
(D: Day / M: Month / Y: Year)

Set time (Menu 9.1.3)

You can enter the current time.

Time format (Menu 9.1.4)

You can set the time format between 24-hour and 12-hour.

Phone settings Menu 9.2

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the Phone settings menu.

Display settings (Menu 9.2.1)

- ▶ **Wallpaper:** Use this to set up the display on the LCD screen in standby mode.
- ▶ **Menu colour:** Your phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the left soft key [OK].
- ▶ **Greeting note:** If you select On, you can edit the text which will be displayed in standby mode.
- ▶ **Backlight:** Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.
- ▶ **Information window:** You can preview the current state of the selected menu before opening the menu. The state is shown on the bottom of the screen.

Language

(Menu 9.2.2)

You can select the display language. When the language option is set to Automatic, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

Call settings

Menu 9.3

You can set the menu relevant to a call by pressing  [OK] in the Setting menu.

Call divert

(Menu 9.3.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number.

For details, contact your service provider.

- ▶ **All voice calls:** Diverts voice calls unconditionally.
- ▶ **If busy:** Diverts voice calls when the phone is in use.
- ▶ **If no reply:** Diverts voice calls which you do not answer.

- ▶ **If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All data calls:** Diverts to a number with a PC connection unconditionally.
- ▶ **All fax calls:** Diverts to a number with a fax connection unconditionally.
- ▶ **Cancel all:** Cancels all call divert service.

The submenus

Call divert menus have the submenus shown below.

- ▶ **Activate:** Activate the corresponding service.
 - **To voice mail centre:** Forwards to message centre. This function is not shown at All data calls and All fax calls menus.
 - **To other number:** Inputs the number for diverting.
 - **To favourite number:** You can check back to last five diverted numbers.
- ▶ **Cancel:** Deactivate the corresponding service.
- ▶ **View status:** View the status of the corresponding service.

Answer mode

(Menu 9.3.2)

▶ Flip open

If you select this menu, you can receive an incoming call when only opening the flip.

▶ Any key

If you select this menu, you can receive a call by pressing any key except  [End] key and .

▶ Send key only

If you select this menu, you can receive a call by only pressing  [Send] key.

Send my number

(Menu 9.3.3)

(network and subscription dependent)

▶ On

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

▶ Off

Your phone number will not be shown.

▶ Set by network

If you select this, you can send your phone number

depending on two line service such as line 1 or line 2.

Call waiting (network dependent)

(Menu 9.3.4)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

Minute minder

(Menu 9.3.5)

When set to **On**, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Auto redial

(Menu 9.3.6)

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Security settings

Menu 9.4

PIN code request

(Menu 9.4.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [OK].
2. Set **Enable/Disable**.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter the wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in the PUK code.
5. You can enter your PUK code up to 10 times. If you enter the wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Handset lock

(Menu 9.4.2)

You can use a security code to avoid unauthorised use of the phone. Whenever you switch on the phone, the phone will request a security code if you set the handset lock to **On**. If you set the handset lock to **Automatic**, your phone will request a security code only when you change your SIM card.

Call barring

(Menu 9.4.3)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- ▶ **All outgoing**
The barring service for all outgoing calls.
- ▶ **International**
The barring service for all outgoing international calls.
- ▶ **International when roaming**
The barring service for all international outgoing calls except home network.

Settings

- ▶ **All incoming**
The barring service for all incoming calls.
- ▶ **Incoming when abroad**
The barring service for all incoming calls when roaming.
- ▶ **Cancel all**
You can cancel all barring services.
- ▶ **Change password**
You can change the password for Call Barring Service.

The submenus:

- **Activate**
Allows to request the network to set call restriction on.
- **Cancel**
Set the selected call restriction off.
- **View status**
View the status whether the calls are barred or not.

Fixed dial number (SIM dependent)

(Menu 9.4.4)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- ▶ **Activate**
You can restrict your outgoing calls to selected phone numbers.
- ▶ **Cancel**
You can cancel fixed dialling function.
- ▶ **Number list**
You can view the number list saved as Fixed dial number.

Change codes

(Menu 9.4.5)

PIN is an abbreviation of Personal Identification Number to prevent use by an unauthorised person.

You can change the access codes: **Security code**, **PIN code**, **PIN2 code**.

1. If you want to change the Security code/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN2 code and verify them.

Network settings

Menu 9.5

The **Network settings** feature enables you to indicate whether the network used when roaming(outside your home area) is selected automatically, manually or preferably.

Note

- ▶ *You can select a network other than your home network only if it has a valid roaming agreement with your home network.*

Network selection

(Menu 9.5.1)

Automatic

(Menu 9.5.1.1)

Use this to set the phone to automatically search for and select one of the networks available in your area.

Manual

(Menu 9.5.1.2)

- ▶ **Manual:** If you want to select the desired network manually from a list of networks, you can activate this function. If the connection to the manually selected network is lost, the phone will give off a error tone and ask you to select a network again. The selected network must have a roaming agreement with your home network. The phone will let you select another network if the phone fails to access the initial selected network. The phone will default back to Automatic if it is switched off.

Preferred

(Menu 9.5.1.3)

You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

Settings

Band selection (Menu 9.5.2)

EGSM/DCS (Menu 9.5.2.1)

According to depending on Network situation, you can select EGSM/DCS.

PCS only (Menu 9.5.2.2)

According to depending on Network situation, you can select PCS only.

GPRS setting Menu 9.6

You can set the GPRS service depending on various situations.

Switch on (Menu 9.6.1)

If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive a multimedia message is quicker.

When needed (Menu 9.6.2)

If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.

Memory status

Menu 9.7

You can check the status of memory in use.

Reset settings

Menu 9.8

You can initialise all factory defaults. You will need the Security code to activate this function.

On browsing menu

- ▶ **Home**

Refer to (Menu 5.1).

- ▶ **Reload**

Reloads the current page.

- ▶ **Bookmarks**

See (Menu 5.2).

- ▶ **Save as bookmark**

You can save a site as bookmark.

- ▶ **Go to URL**

You can move to the site you want. In this menu, you can also edit the site address.

- ▶ **Clear cache**

The contents of cache memory will be removed.

- ▶ **Save Images**

You can save the image which is provided by the WAP.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Portable Handsfree

This connects to your phone, allowing handsfree operation.



Travel Adapter

This charger allows you to charge the battery whilst away from home or your office.



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

Technical data

General

Product name : KG225

System : GSM 900 / DCS 1800 / PCS 1900

Ambient temperatures

Max : +55°C

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers
20, Yeouido-dong, Yeongdeungpo-gu,
Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KG 225

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 / EN 301 489-07

EN 60950-1 : 2001

EN 50360/EN 50361 : 2001

3GPP TS 51.010-1, EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Jin Seog, Kim / Director 06.Feb. 2006

Issued Date

LG Electronics Inc, Amsterdam Office

Velluwezoom 15, 1327 AE Almere, The Netherlands

Tel : +31 - 36-547 - 8940, e-mail : seokim@lge.com

Signature of representative

