

Warning

What to Check Before Use	
Do not drop or throw the Touch Pen. Do not swing the Touch Pen with a charging cable connected to it.	This can damage the product or cause personal injury.
Keep the Touch Pen out of reach of children and away from unstable locations. Do not let children or pets put the Touch Pen in their mouths or lick the Touch Pen.	Playing with or swallowing it may cause serious injury.
For people using pacemakers, the distance between the Touch Pen and the pacemaker should be at least 30 cm. Never use it where wireless communication is prohibited. Protect it from severe vibrations or magnetic objects.	Wireless communications can cause malfunctions or failures.
Do not use the Touch Pen with wet hands. Do not let foreign substances (e.g., soft drinks or water) enter the Touch Pen; if this happens, do not use the Touch Pen. Do not touch the optic receiver of the Touch Pen with a sharp object.	This can result in electrical shock or damage the product.
Do not use or store the Touch Pen in direct sunlight, near a hot object (e.g., a heater or fireplace), or in dusty or high-humidity environments.	This can result in product deformation, malfunction, failure, or fire.
Do not use the product under extreme temperature conditions. Do not use the product immediately after going from the cold outdoors to the warm indoors. * This can cause condensation in the pen.	This can result in damaging the product. Turn off the power and wait several hours until the moisture evaporates before using the product.
If abnormal sound, smoke, or odor is detected, immediately remove the charging cable and stop using the product. Contact a service center.	This can cause failures or fire.
Never disassemble or modify the Touch Pen. * The product warranty does not cover damage or injury caused by unauthorized disassembly.	This can result in electrical shock or damage the product.

Warning

<WARNING WHEN HANDLING BATTERY>

- ⦿ If fluid leaks from the Touch Pen, do not touch the fluid with bare hands.
 - If fluid comes into contact with eyes, immediately rinse eyes with abundant tap water, then consult a doctor. The fluid can cause blindness.
 - If the fluid comes into contact with skin or clothing, immediately wash it off with tap water. If the fluid causes skin inflammation or injury, consult a doctor.
- ⦿ If fluid leaks from the Touch Pen, the use of fire is strictly prohibited.
 - The leaked fluid or gas can ignite a fire or cause damage.
- ⦿ Do not put the fluid in fire. Do not heat the product in a microwave or convection oven.
- ⦿ Avoid extreme shocks or impacts to the product, for example, by placing a heavy object on it or pressing it.
- ⦿ Use the specified USB cable when charging the battery.

Caution

Do not display fixed characters or images on the screen for extended periods of time.
This can cause image sticking.

Do not remove the charging cable using excessive force.
This could damage the charging port and PC.

Do not connect the charging cable to peripheral devices or disks other than those specified.
This can cause malfunctions or failures.

Do not manipulate the Touch Pen with excessive force.
This can cause failures.

Do not leave a Touch Pen on the floor.
Stepping on it can damage the product or cause personal injury.
Use the pen holder provided with the Touch Pen.

When multiple people use the Touch Pen, make sure that sufficient space is available.
Collisions can cause injury or failures.

Be careful when disposing of the product.
The Touch Pen consists of a lithium-ion battery and plastic material.
Burning can be dangerous, so dispose of it according to local regulations.