



ENGLISH



GM200

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



www.lgmobile.com

P/N : MMBB0334402 (1.0)

CE0168

Bluetooth QD ID B015111



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

GM200 User Guide

Congratulations on your purchase of the advanced and compact GM200 phone by LG, designed to operate with the latest digital mobile communication technology.

C

01
Ge
Op
Ins
M

M

02
Yo

03
Ca

Contents

01 SET UP		
Getting to know your phone	7	
Open view	8	
Installing the SIM and battery	9	
Memory card	12	
Installing a memory card	12	
Removing the memory card	12	
Formatting the memory card	12	
Menu map	13	
02 YOUR STANDBY SCREEN		
Your standby screen	14	
The quick keys	14	
The main menu	14	
The status bar	15	
03 THE BASICS		
Calls	16	
Making a call	16	
Making a call from your contacts	16	
Answering and rejecting a call	16	
Adjusting the call volume	17	
Speed dialling	17	
Viewing your call logs	17	
Using call divert	18	
Using call barring	18	
Changing the call settings	19	
		Contacts
		Searching for a contact
		Adding a new contact
		Contact options
		Adding a contact to a group
		Renaming a group
		Adding a picture to a contact
		Copying your contacts to your SIM
		Deleting all your contacts
		Viewing information
		Messaging
		Messaging
		Sending a message
		Entering text
		Setting up your E-mail
		Sending an email using your new
		account
		Message folders
		Managing your messages
		Using templates
		Changing your text message settings
		Changing your multimedia message
		settings
		Changing your E-mail settings
		Changing your other settings

Contents

04 GET CREATIVE	
Camera	30
Taking a quick photo.....	30
Getting to know the viewfinder.....	30
Using the quick settings.....	30
After you've taken your photo.....	31
Changing the image size.....	31
Viewing your saved photos.....	31
Setting a photo as Wallpaper or Contacts image.....	31
Video camera	32
Shooting a quick video.....	32
Getting to know the viewfinder.....	32
Using the quick settings.....	32
Watching your saved videos.....	32
Adjusting the volume when viewing a video.....	33
MP3 player	34
MP3 player.....	34
Transferring music onto your phone.....	34
Playing a song.....	34
Using options while playing music.....	34
Creating a playlist.....	35
Playing a playlist.....	35
Editing a playlist.....	35
Deleting a playlist.....	36
FM radio	37
Using the FM radio.....	37
Searching for stations.....	37
Resetting channels.....	37
Listening to the radio.....	37
Recording the Radio.....	38
Voice recorder	39
Using the voice recorder.....	39
Recording your voice memo.....	39
Sending a voice recording.....	39
Ringtone creator.....	39
Creating your Ringtone.....	39
My stuff	40
Images.....	40
Images options menu.....	40
Sending a photo.....	41
Organising your images.....	41
Deleting an image.....	41
Creating a slide show.....	41
Sounds.....	42
Using a sound.....	42
Videos.....	42
Watching a video.....	42
Using options while video is paused.....	42
Sending a video clip.....	42
Video options menu.....	43
Others.....	43
External memory.....	43

Using your phone as a mass storage device.....	44	Using Google.....	51
Transferring a file to your phone	44	Adding and accessing your bookmarks.....	51
Sending and receiving your files using Bluetooth	45	Saving a page	52
Games and Apps.....	46	Accessing a saved page.....	52
Games and Apps.....	46	Viewing your browser history	52
Playing a game.....	46	Changing the Browser settings	52
Viewing applications	46		
Changing the network profile.....	46	07 SETTINGS	
05 GET ORGANISED		Settings	53
Organiser.....	47	Changing your profiles	53
Adding an event to your calendar	47	Personalising your profiles.....	53
Editing a calendar event.....	47	Changing your date & time.....	53
Sharing a calendar event.....	48	Changing the language	53
Adding a memo.....	48	Changing your display settings	54
Adding an item to your to do list	48	Changing your Shortcut.....	54
Tools	49	Changing your security settings	54
Setting your alarm	49	Using flight mode.....	55
Using your calculator	49	Resetting your phone	55
Using the stopwatch	49	Viewing memory status.....	55
Converting a unit	50	Changing your Bluetooth settings.....	56
Change a city from World clock	50	Changing your connectivity settings	56
06 BROWSER		Pairing with another Bluetooth device	56
Browser	51	Using a Bluetooth headset.....	57
Accessing the Browser.....	51		

Contents

08 ACCESSORIES

Accessories	58
Network service.....	59
Technical data	59
General	59
Ambient Temperatures	59
 Guidelines for safe and efficient use	 61

Getting to know your phone



Open view



Installing the SIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and then lift it away.



2 Remove the battery

Using the bottom edge of the battery as a leverage point, remove it carefully from the battery compartment.




⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the SIM card


Slide the SIM card into the SIM card slot. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.

Installing the SIM and battery

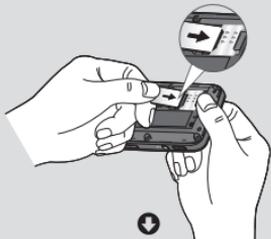

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.

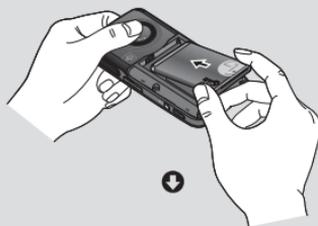

5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.



6 Charging your phone

Pull open the cover of the charger socket on the side of your GM200. Insert the charger and plug into a mains electricity socket. Your GM200 will need to be charged until a message reading Fully Charged appears on screen.



Memory card

Installing a memory card

You can expand the memory space available on your phone using a memory card.

TIP! A memory card is an optional accessory.

Open the slide covering the memory card slot. Slide the memory card into the slot, until it clicks into place. Make sure that the gold contact area is facing downwards.



Removing the memory card

Open the slide and carefully remove the memory card by gently pushing it, as shown in the following diagram:



Formatting the memory card

If your memory card is not already formatted, you will need to do so before you can begin using it.

- 1 From the standby screen, press **Menu** and select **Settings**.
- 2 Choose **Memory status** and select **External memory**.
- 3 Press **Format**. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your GM200 press **Menu** and select **My stuff**. Choose **External memory**.

⚠ WARNING: When you format your memory card, all the content will be deleted. If you do not want to lose the data on your memory card, back it up first.

Menu map



Games & Apps

- 1 Games
- 2 Applications
- 3 Network profiles



Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



Organiser

- 1 Calendar
- 2 Memo
- 3 To do
- 4 Calender settings



Multimedia

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder
- 6 Ringtone creator



Messaging

- 1 New message
- 2 Inbox
- 3 Email box
- 4 Drafts
- 5 Outbox
- 6 Sent
- 7 Listen to voicemail
- 8 Info message
- 9 Templates
- 0 Settings



My stuff

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Others
- 5 External memory



Profiles

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



Tools

- 1 Alarm clock
- 2 Calculator
- 3 Stopwatch
- 4 Unit converter
- 5 World clock
- 6 SIM Service



Browser

- 1 Home
- 2 Google Search
- 3 Bookmarks
- 4 Enter address
- 5 History
- 6 Saved pages
- 7 Settings
- 8 Information



Connectivity

- 1 Bluetooth
- 2 Network
- 3 USB connection



Settings

- 1 Date & Time
- 2 Languages
- 3 Display
- 4 Shortcut
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory status

Your standby screen

The quick keys

The quick keys provide easy, one-press access to your most frequently used functions.

-  Select to open your message editor.
-  Select to choose a sound profile for your phone.
-  Select to open the favourites menu.
-  Select to open your contact lists.

The main menu

The main menu provides twelve menu options. To open the main menu:

- 1 Select **Menu**.
- 2 The main menu will appear on the screen.
- 3 When the option you require is highlighted, select **OK** to open.

Advice to the customer

In order to improve antenna sensitivity, LG suggests that you hold the handset as shown in the figure below.

O



X



Please do not cover the antenna area with your hand during a call or when using a Bluetooth. It may interfere with, and degrade signal quality.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages, and battery life, as well as telling you whether your Bluetooth is active.

Below is a table explaining the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	GPRS available
	EDGE available
	Flight mode is activated
	Calls are diverted
	Roaming service
	Bluetooth® is activated
	WAP service is connected
	An alarm is set
	Schedule

Icon	Description
	New message
	New voice message
	General profile in use
	Silent profile in use
	Vibrate profile in use
	Outdoor profile in use
	Headset profile in use
	Remaining battery life
	Battery empty

Calls

Making a call

- 1 Key in the number using the keypad. To delete a digit press Clear.
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.

Making a call from your contacts

- 1 Select Contacts and then select Search from the Standby screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, Press 6 three times to select the first character, "O"
- 3 Select **Call** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call.

To mute your phone while it is ringing, simply select **Silent**. This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings**, and choose **Call**. Select **Answer mode** and choose from **Any key**, or **Send key only**.

Adjusting the call volume

To adjust the volume during a call, press the volume key on the left hand side of your phone.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

- 1 Press **Contacts**, then select **Speed dial**.
- 2 Your voicemail is set to speed dial 1 and this cannot be changed. Select any other number either by using the navigation key arrows and selecting **Assign** or by pressing the hard key number.
- 3 Your address book will open. Select the contact you'd like to assign to that number using the navigation arrows, then select **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Press **Menu**, select **Call history**. Choose to view:

All calls - View a complete list of all your dialled, received, and missed calls.

Missed calls - View a list of any calls you have missed.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls; Last call, all calls, Dialled calls and Received calls.

Call costs - View the charges applied to your Last call or All calls. This service is network dependent, some operators are unable to support this.

Data information - View the amount of all your received and sent data in kilobytes.

TIP! From any call log select **Options** and choose delete to delete selected or **Delete all** to delete all the recorded items.

TIP! Using the navigation key arrows, highlight any single call entry to view the date and time of the call. To view the call duration select **View**.

Calls

Using call divert

- 1 Select **Menu**, select **Settings**, and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all voice calls, when the line is busy, when there is no reply, when you are out of reach, all data calls, or all fax calls.
- 4 Choose **Activate** and select whether to divert to voicemail, another number, or your favourite number.
- 5 Enter your divert number or select **Search** to browse **Contacts** for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Cancel all** from the **Call divert** menu.

Using call barring

- 1 Select **Menu**, select **Settings**, and choose **Call**.
- 2 Select **Call barring**.
- 3 Choose any or all of the seven options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Call** menu to turn on and compile a list of numbers which can be called from your phone. You will need your PUK2 code from your operator. When activated, only numbers included in the fixed dial list can be called from your phone.

Changing the call settings

1 Select **Menu**, select **Settings**, and choose **Call**.

2 From here you can amend the settings for:

Call divert - Choose whether to divert your calls.

Call barring - Select which calls you would like to be barred.

Fixed dial number - Choose a list of numbers that can be called from your phone.

Answer mode - Choose whether to answer your phone using the send key only or any key.

Send my number - Choose whether your number will be displayed when you call someone.

Call waiting - Be alerted when you have a call waiting.

Minute minder - Select **On** to hear a tone at minute intervals during a call.

Auto redial - Choose **On** or **Off**.

Send DTMF tones - Choose **On** or **Off**.

Contacts

Searching for a contact

- 1 Select **Contacts** from the standby screen, and choose **Search**.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, Press 6 three times to select the first character, "O".
- 3 To scroll through the contacts and their different numbers use the navigation arrows.

Adding a new contact

- 1 Select **Contacts** from the standby screen, and choose **New contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have into the fields provided and select **Save**.

Or, using the slightly quicker method...

- 1 Enter the number you wish to store, in the standby screen, and select **Options**.
- 2 Select **Save number**, and then choose **New contact** or **Update contact**.
- 3 Enter the relevant information as described above and select **Save**.

Note: When you are storing a contact's email address, press ***** to enter a symbol and scroll with the navigation arrows until you see **@**.

Contact options

There are many things you can do when viewing a contact. This is how to access and use the Options menu:

- 1 Highlight the contact you would like to use.
- 2 Select **Options** to open the list of options.

From here you can:

View - View the information about selected contact

Edit - Change any of the contact's details.

New message - Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Message** or **Email**.

Send via - Send the contact's details to another person as a business card. Choose to send as a **Text message**, **Multimedia message**, via **Bluetooth**, or by **Email**.

Send all contacts via Bluetooth - Send all contacts information to another handset by Bluetooth.

Delete - Delete the contact. Select **Yes** if you are sure.

New contact - Add a new contact.

Add to speed dial - Allows you to set a selected number to add to the speed dial list.

Multi delete - Mark multiple contacts to delete.

Copy to SIM/phone - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Main number - If a contact has more than one number stored, select the one that you use most often.

Writing language - Select the language.

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family, Friends, Colleague, VIP, Group1, Group2** and **Group3** already set up on the phone.

- 1 In the standby screen, select **Contacts** and choose **Groups**.

- 2 Scroll to the group you wish to add a contact to, and then select press  and select **Add**.

- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and press , then select **Done**.

TIP! You can assign a specific ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to, select **Options**, and choose an item you want.

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 In the standby screen, select **Contacts** and choose **Groups**.
- 2 Select a group you want to rename.
- 3 Choose **Options**, select **Rename**, and enter your new group name.
- 4 Select **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved in your phone (not the SIM) memory.

Contacts

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 In the standby screen, select **Contacts** and choose **Settings**.
- 2 Select **View options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.
- 4 Choose **Options** and select **Edit**.
- 5 Scroll down to the **Picture** section. Choose **Options** and choose **Save, No picture, Images** or **New image**. If you choose **Image**, you can choose an image that is saved in your phone memory. If you choose **New image**, your camera viewfinder will open so you can take a picture of your contact.
- 6 Select **Save**.

Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset, or from your handset to your SIM.

- 1 In the standby screen, select **Contacts** and choose **Copy All**.

- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to **Keep original** or **Delete original**.
- 4 Select **Yes** if you are sure.

Deleting all your contacts

- 1 In the standby screen, select **Contacts** and choose **Delete all**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Press **OK** if you are sure.

Viewing information

In the standby screen, select **Contacts** and choose **Information**. From here you can view your **Service dial numbers**, your **Own numbers**, and your **My business card**.

TIP! If you haven't yet created a business card, the **My business card** screen will give you the option to create one. Select **New** and enter your details as you would for any contact. Choose **Save**.

Messaging

Messaging

Your GM200 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), and email, as well as the network's service messages. Press **Menu** and select **Messaging**.

Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **New message**.
- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open.
The message editor combines SMS and MMS into one intuitive and easy to switch between mode. The default setting of the message editor is SMS mode.
- 4 Enter your message using either the T9 predictive mode or Abc manual mode.
- 5 Select **Options** and choose **Insert** to add an **Image, Sound, Video, Symbol, Text template, Emoticon, Name & Number, New slide, Subject**, or **More (Contact/My business card/Schedule/Memo/To do)**.

- 6 Press the centre key.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Select **Send**.

 **WARNING:** If an **Image, Sound, Video, New slide**, or **Subject** is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Messaging

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message, and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode, and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

To turn on T9 mode in the text entry field, choose **Options**, select **Set T9**, and choose **On**. With T9 on, you can switch text input mode by pressing . You will notice the text input mode indicator in the upper right corner of the display.

To input a symbol in the text entry field, press the  key, and select a symbol, then select **OK**.

Complete each word with a space by pressing **0**.

To delete a character, press the Clear.

T9 predictive mode

The T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Press the number key associated with the letter you want to enter, and the dictionary will recognise the word as soon as all the letters are entered. For example, press **8, 3, 5, 3, 7, 4, 6, 6, 3** to write 'telephone'.

If the word you want does not appear, select **Options**, and select **New T9 word**, then you can enter the word using ABC manual mode. Your word will be added to the dictionary.

Note: You can select a different T9 language by pressing **Options** and select **Writing language**.

ABC manual mode

In ABC manual mode you may need to press the key repeatedly to enter a letter. Press 4 twice for "h", 3 twice for "e", 5 three times for "l", 5 three times again for "i", then 6 three times for "o".

123 mode

Type numbers using one keystroke per number. You can also add numbers whilst in the letter modes by pressing and holding the desired key.

Setting up your E-mail

You can stay in touch on the move using email on your GM200. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Messaging**, and choose **Settings**.
- 2 Select **E-mail** then **E-mail account**.
- 3 Select **New**.
- 4 You can now choose how your account works:

Account name - Enter a name for this account.

Email address - Enter the account email address.

My name - Enter your name.

Incoming mail server - Enter the account details.

User name - Enter the account user name.

Password - Enter the account password.

Outgoing mail server - Enter the account details.

Outgoing mail authentication - Select on or off.

Outgoing server ID - Enter the account details.

Outgoing server password - Enter the account details.

To enter the following information, choose **Options**, and select **Advanced settings**.
Reply email address - Enter the "reply to" email address.

Incoming port number - Normally, this is 110 for POP3 and 143 for IMAP4 accounts.

Outgoing port number - Normally this is 25.

Protocol type - Select the mailbox type, POP3 or IMAP4.

APOP secure login - Choose whether to save your emails to the server of the phone.

Maximum receive size - Choose the size limit of your emails, the maximum is 300KB.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts, copies are always saved.

Insert signature - Choose whether to automatically insert a signature into your emails.

Retrieve download - Select **Headers only** or **All**.

Auto retrieving - Select this to automatically retrieve your emails.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Messaging

Sending an email using your new account

To send/receive an email, you should set up an email account .

- 1 Select **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **E-mail** and a new email will open.
- 3 Write a subject then press **Option** and choose Write email and press **OK**.
- 4 Enter your message using T9 predictive mode or ABC manual mode. See **Entering text** to see how to switch between the different text entry modes.
- 5 To add an attachment, select **Options** and select **Attachments**, then press **New**: Image, Sound, Video, More(Contact, My business card, or Schedule, Memo, To do), Others or contents of External memory.
- 6 Press **Sent to** and enter the recipient's address or press **Options** and select **Contacts** to open your contacts list.
- 7 Press **Sent** and your email will be sent.

Message folders

Press **Menu**, select **Messaging**. The folder structure used on your GM200 is fairly self-explanatory.

Inbox - All the messages you receive are placed into your Inbox. From here you can reply, forward, and more, see below for details.

Email box - Contains all your email messages. Select the account you want to use then select **Retrieve**. Your GM200 will connect to your email account and retrieve your new messages.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent - All the messages you send are placed into your Sent folder.

Listen to voicemail - You can access your voicemail box (if provided by your network). When a new voice message is received, the symbol will be displayed on the standby screen.

Info message - All info messages and updates received from your operator.

Templates - A list of useful messages, already written for a quick reply.

Managing your messages

You can use your **Inbox** to manage your messages.

1 Press **Menu**, select **Messaging**, and choose **Inbox**.

2 Select **Options** and then choose to:

View - View the selected message.

Delete - Delete the selected message.

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Return call - Call the person who sent you the message.

Save number - Save the sender's phone number in the contacts.

Information - View the details of a message, for example, the time it was sent.

New message - Choose whether to send your new message by message or E-mail.

Multi delete - Delete selected messages.

Delete all read - All opened messages will be deleted.

Delete all - Deletes all text messages and multimedia messages.

If you see the message **No space for message**, you should delete some messages from your inbox.

If you see the message **Memory full**, you can delete either messages or saved files to create space.

Using templates

You can create templates for the **Text** and **Multimedia** messages you send most frequently. There are some templates already on your phone, which can be edited if you wish.

1 Press **Menu**, select **Messaging**, and choose **Templates**.

2 Choose **Text templates** or **Multimedia templates**. You can then select **Options** and choose **Edit** to change existing templates, **New template** to add new template and **Delete to delete the template**.

3 To send a template, select the one you want to send, choose **Options**, and select **Send via**.

Messaging

- 4 Choose how you would like to send the template; as a **Message** or **Email**.
- 5 Complete the message, then select Option ,and then select "Send to" to type or to choose a contact . Press "Send" to send the message.

Changing your text message settings

Your GM200 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do this using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

Message type - Convert your text into Voice, Fax, Paging, X.400, Email, or ERMES.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message center number - Enter the details for your message centre.

Character encoding - Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

Changing your multimedia message settings

Your GM200 message settings are pre-defined so that you can send messages immediately.

If you would like to change the settings, you can do so using the **Settings** options.

Press **Menu**, select **Messaging**, then choose **Settings**, and **Multimedia message**.

You can make changes to:

Slide duration - Choose how long your slides appear on screen.

Delivery time - Delivers your message at a specific time.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to allow and/or request a delivery report.

Read report - Choose to allow and/or send a read report.

Auto download - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Network profile - Select an operator specific network profile for sending multimedia messages.

Permitted message type - Select which type of multimedia messages to allow.

Changing your E-mail settings

You can adapt your email settings to your own preferences.

- 1 Press **Menu**, select **Messaging**, and choose **Settings**.
- 2 Select **E-mail** then you can adapt the following settings:

Email account - You can set up an email account.

Access point - You can set the email access point.

Retrieve interval - Choose how often your GM200 checks for new email messages.

Signature - Create an email signature and switch this feature on.

Changing your other settings

Press **Menu**, select **Messaging**, choose **Settings** then:

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Service message - Here you can switch off the service message which means your messages will no longer be pushed directly to your device as they are received.

Info message - Choose the reception status, alerts and language of your info messages.

Backup text message - Choose whether to save your text messages to the phone memory or to the external memory.

Camera

Taking a quick photo

- 1 Select Menu, and select **Multimedia**.
Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press  to take a photo.

Getting to know the viewfinder

TIP! When using the camera, power consumption increases. If the  icon appears indicating low battery, recharge the battery before use.

Using the quick settings

Select **Options** to access the quick settings options. These include various options for taking photos.

Resolution - See **Changing the image size**.

Quality - Choose between **Normal**, **Fine**, and **Super fine**. The finer the quality, the sharper a photo will be but the file size will increase as a result, which means you will be able to store fewer photos in your memory.

Self timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from Off, 3 seconds, 5 seconds or 10 seconds. Great for that group photo you want to be part of.

View option - Allow you to set the view mode. (Full image/Full screen)

Save to - Choose whether to save your photos to the phone memory or to the external memory.

Multi shot - Allows you to take multishot-photos successively. (1shot/3shots /6shots)

Effect - Choose from four colour tone options: Off (normal/colour), Sepia, Mono (black and white), or Negative.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy**, **Nightmode**, or **Fluorescent**.

Shutter tone - Select one of the three shutter sounds.

Reset settings - Allows you to reset the settings.

After you've taken your photo

The photo you have taken is automatically saved in the Images folder of My stuff. After taking a photo, you can select the submenu by pressing the left soft key [Options].

New photo - You can take a new photo.

Set as - You can set the photo to be Wallpaper/Picture ID.

Send via - You can send the photo via MMS/Bluetooth/Email.

Album - You can access the Images folder of My stuff.

Exit - Leave the photo menu.

Changing the image size

You can change the size of the photo to save memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on your phone you can alter the pixel number to make the file size smaller.

- 1 Press **options** and select **Resolution** from the toolbar.
- 2 Select a pixel value from the six numerical options (320X240, 640X480, 1280x1024, 1600x1200).

- 3 Press **OK** to implement your changes.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and also from the Home screen. After your photo is taken press Options and select Album. From the Home screen select Menu, then select **My stuff** and **Images**.
- 2 Your gallery, downloaded image and Default images folder will appear on the screen.
- 3 Use the navigation keys to select the photo you want to view and select **View** to open it.

Setting a photo as Wallpaper or Contacts image

From your image gallery, use the navigation keys to select an image and choose **Options** and Set as to use the selected image as **Wallpaper**, or **Picture ID**. When you set the photo as Picture ID you can choose which part of the photo to use.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

Video camera

Shooting a quick video

- 1 In standby screen, select **Menu** and select **Multimedia**.
- 2 Choose **Video camera**.
- 3 Point the camera lens towards the subject of the video.
- 4 Press  to start recording.
- 5 **Rec** will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 6 Select **Stop** to stop recording.

Getting to know the viewfinder

Using the quick settings

Select **Options** to access the quick settings options. These include various options for recording videos.

Video mode - To record a video you want to send in a multimedia message, select **MMS**.

Resolution - Your GM200 only offers 176X144 resolution to fit videos onto your phone.

Quality - Normal/Fine/Superfine.

Save to - Choose whether to save your video clip to the phone memory or to the external memory.

Effect - Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

White balance - The white balance ensures that any white in your video is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

Reset settings - Allows you to reset the settings.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the Options menu select **Album**. From the standby screen you should select **Menu**, then select **My stuff** and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the navigation keys to highlight the video you want to view and press the centre soft key to watch it.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video while it is playing, use the volume keys on the left edge of the handset.

MP3 player

MP3 player

Your LG GM200 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, select **Menu** and select **Multimedia** then **MP3 player**. From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlist - Contains any playlists you have created as well as **On the go**, **Recent songs**, and **Favourite songs**.

Settings - Adjust your music settings.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by selecting **Yes**.
- 4 The file should appear in **All songs**.

Playing a song

- 1 Press **Menu** and select **Multimedia**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play.
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select  to stop the music and return to the MP3 player menu.

TIP! To change the volume while listening to music, use the volume keys on the left edge of your phone.

Using options while playing music

Select **Options** and choose from:

Minimise - Hide the music player screen so that you can continue using your phone as usual while music is playing.

View playlist - Look at the playlist you are currently listening to.

Set as ringtone - Set the current track as your **Ringtone**.

Listen via Bluetooth - listen to music via Bluetooth.

Settings - Change the Shuffle, Repeat, Audio effect, or Play skin. You can set up Dolby effect or LG Equalizer using Audio effect.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Press **Options** and select **New playlist**, enter the playlist name and press **Save**.
- 4 The **All songs** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Done** to store the playlist.

Playing a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.

- 3 Highlight the playlist you would like to play and select **View**, then select .

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist.

If you want to organise your playlists, you can edit them using the **Options** menu.

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to edit and select **View**, then select **Options**. Choose from:

Play - Play the highlight Music.

Add - You can add songs to the playlist using this option.

Remove - Remove a song from the playlist. Select **Yes** to confirm.

Move up/down - Move the song up or down the list to change the playing order.

Multi remove - Delete selected songs from the playlist.

Remove all - Remove all of the songs from the playlist.

MP3 player

Information - View the playlist information.

Deleting a playlist

- 1 Press **Menu** and select **Multimedia**.
- 2 Choose **MP3 player**, then select **My playlist**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete all** and select **Yes** to confirm.

Note:

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

FM radio

Using the FM radio

Your LG GM200 has an FM radio feature so you can tune into your favourite stations and listen on the move.

Searching for stations

You can tune into radio stations with your phone by searching for them either manually or automatically. These stations will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 48 channels in your phone.

To auto tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.
- 3 Each time a station is found, your GM200 will ask if you want to save it. Select **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Option** and choose **Edit channel**.
- 3 To enter your station, use the navigation keys to search or enter the frequency using the keypad, then select **OK**.

Note: You can also edit the stations you have saved in a channel number.

TIP! To improve the reception extend the headset cord, which functions as the radio antenna.

Resetting channels

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select **Options** and select **Reset channels**. Choose **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via a built-in speaker. Press **Options**, select **Listen via**, and choose **Speaker**.

FM radio

Recording the Radio

- 1 Press center key during listening to the Radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press  .
If recording is done, the recorded contents will be saved in My stuff as mp3 file.
- 3 When the recording is done, select Option and then choose from Delete, Set as ,or Album.

Note: If you stay in an area with bad radio reception, you may find difficulty in listening to the Radio. So, we recommend you insert Ear-mic into Handsfree connector in order to listen to the Radio and keep the good radio reception.

Voice recorder

Using the voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Multimedia**, then choose **Voice recorder**.
- 2 Press  to begin recording.
- 3 Select **Stop**.

Note: You can listen to all of the voice recordings you have saved by selecting **Album** and choosing **Recordings** folder.

Sending a voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send via** and choose from **Message**, **Bluetooth**, or **E-mail**. If you choose **Message** or **E-mail**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn **Bluetooth** on.

TIP! If you plan to send your recording as a message, before you start recording, select **Options**, select **Recording mode**, and choose **MMS**. This will ensure that the recording fits into a message.

Ringtone creator

Use your **Ringtone creator** to create your ringtones.

Creating your Ringtone

- 1 Press **Menu** and select **Multimedia**, then choose **Ringtone creator**.
- 2 Select the music what you would like to use in music lists, and then select **OK**.
- 3 Press center key.
- 4 Select **Cut** when you want to start recoding music to use as a **Ringtone** while playing music.
- 5 Select **Cut** when you want to stop recording music.
- 6 Once you have finished recording, select option and choose from **Save**, **Play** or **Reset**. If you choose **Reset** the selected file is removed from your phone.

My stuff

You can store any multimedia files in your phone's memory so that you have easy access to all of your pictures, sounds, and videos. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in **My stuff**. Select **Menu** then select **My stuff** to open a list of folders.

Images

Images contains a folder of default images onto your phone, images downloaded by you, and images taken on your phone's camera.

Images options menu

The options which are available to you in **Images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera. Only the **View**, **Set as**, **File info**, **Slide show**, **New folder**, **Multi delete**, **Delete all**, **Sort by**, and **List view/Thumbnail view** options are available for default images.

In the **Images** folder, select **Options** to bring up your list of options.

View - View the selected file.

Delete - Delete the selected image.

Set as - Set the selected image as your **Wallpaper** or as a **Picture ID**.

Send via - Send the selected image to a friend via **Message**, **Bluetooth**, or **E-mail**.

Note: The image may need to be resized before it can be sent by MMS.

File - Edit image, Rename, Move to folder, or view the information (Name, Size, Date, Time, Resolution, Type, and Copyright) of the selected image. If you have an external memory card inserted, two additional options will show: **Move to external memory** and **Copy to external memory**.

Print via Bluetooth - Print an image file via **Bluetooth**.

Slide show - See **Creating a slide show**.

New folder - Create a new folder within the main Images folder.

Multi delete - Select more than one image to delete.

Delete all - Delete all the photos in your Images folder.

Sort by - Arrange your images by **Date**, **Type**, or **Name**.

List view/Thumbnail view - Change the way you view your photos.

Sending a photo

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send via** and choose from **Message**, **Bluetooth**, or **E-mail**.
- 5 If you choose **Message** or **E-mail**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture.

Organising your images

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Choose **Options** then select **Sort by**.
- 4 Choose from **Date**, **Type**, or **Name**.

Deleting an image

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select an image and press **Options**.
- 4 Select **Delete**.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Press **Menu** then select **My stuff**.
- 2 Select **Images**.
- 3 Select the photo you would like to begin the slide show and select **Options**.
- 4 Choose **Slide show** and it will begin.
- 5 Press **Quit** to end the slide show and return to the **Images** folder.

My stuff

Selecting **Options** during the slide show presents further options:

Pause - Select **Pause** to pause the slide show

View - Choose between **Full image** and **Full screen**. Select **Landscape** to change the orientation of the image.

Repeat on/off - Decide whether you want the slide show to repeat or not.

Sounds

The **Sounds** folder contains the Default sounds, your voice recordings, and sound files downloaded by you. From here you can manage, send, or set sounds as ringtones.

Using a sound

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Sounds**.
- 3 Select a sound and press  to listen to it.
- 4 Select **Options**, select **Set as** and choose from **Ringtone**, **Ringtone ID**.

Videos

The **Videos** folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select a video and press .

Using options while video is paused

By selecting **Options**, the video you are playing will be in pause mode and you can choose from:

Delete - Delete the video.

Send via - Send the video to a friend via **Message**, or **Bluetooth**.

File - Rename the video, Move to folder, or view the information (Name, Size, Date, Time, Type and Copyright). If you have an external memory card inserted two additional options will show:

Move to external memory and **Copy to external memory**.

Landscape view - Reorient the video.

Sending a video clip

- 1 Press **Menu** then select **My stuff**.
- 2 Scroll to and select **Videos**.
- 3 Select the video clip you want and press **Options**.

- 4 Press **Send via** and choose from **Message, Bluetooth**.
- 5 If you choose **Message**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video.

Note: The video may need to be resized before it can be sent by MMS. Some videos may be too large to send by MMS.

Video options menu

In the **Videos** folder, press **Options** to bring up the following list of options.

Play - Play the highlight video.

Delete - Delete the selected video.

Send via - Send the selected video to a friend via **Message, E-mail**, or **Bluetooth**.

File - Rename the video, Move to folder, or view the information (Name, Size, Date, Time, Type and Copyright). If you have an external memory card inserted two additional options will show:

Move to external memory and **Copy to external memory**.

New folder - Create a new folder within the main Videos folder.

Multi delete - Select more than one video clip before selecting **Delete**.

Delete all - Delete all the clips in your Videos folder.

Sort by - Arrange your videos by **Date, Type**, or **Name**.

Others

From the **Others** menu, you can view the files that are not saved in the Images, Sounds or Videos folder.

External memory

If you've inserted a memory card, it will be displayed as a folder within **My stuff**. Your external memory folder will be divided into five further folders: **Images, Sounds, Videos** and **Others**. Each folder will contain all the files of that type that are saved to your memory card rather than your handset.

SIM service

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

My stuff

Using your phone as a mass storage device

Your GM200 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as **Mass storage**, the phone will be displayed as two drives on your computer: the handset memory and external memory.

- 1 Press **Menu**, then select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and select **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the GM200. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically on your computer, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music, or documents into the correct folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

- 8 When you want to then access a file, for example an image, press **Menu**, then select **My stuff** followed by **External memory**, then **Images**. All the images you transfer will be contained in this file.

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by selecting **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So for example, photographs will be saved in the **Images** folder and music in the **Sounds** folder. If your phone cannot identify the file type, the file will be saved in the **Others** folder.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files using Bluetooth, you will need to pair your phone with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

To switch Bluetooth on:

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video, or music file.
- 2 Select **Options** and choose **Send via**, then **Bluetooth**.
- 3 Select **Yes** to turn Bluetooth on, if it is not already activated.

- 4 Your GM200 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and select **Send**.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

TIP! Keep an eye on the progress bar to make sure your file is actually sent.

Note The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

Games and Apps

Games and Apps

Your GM200 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Games**.
- 3 Choose the game you want to play and select **Play**.

Viewing applications

You can manage the Java applications installed in your phone by using the **Applications** menu. You can also delete downloaded applications.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Applications**.
- 3 View and manage any applications you have.

Changing the network profile

To download a game, you can set the value to connect to the network using **Network profile**.

- 1 Press **Menu** and select **Games & Apps**.
- 2 Select **Network profile**.
- 3 You can add and edit a new network profile.

Organiser

Adding an event to your calendar

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the navigation keys or by selecting **Options** and **Go to date** in order to enter a date.
- 3 Select **Options** then **New schedule** and scroll down to enter the time you would like your event to begin. Scroll down and enter the end time of your event.
- 4 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.
- 5 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can set the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 6 Scroll down once more to select whether the event is occurring **Once** or repeated **Daily**, **Weekly**, **Monthly**, or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration**

date for when the events will stop completely.

- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the days that any events have been saved to.

Editing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Choose **Options** and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and select **Option** and then select **View**.
- 3 Select **Edit** and scroll to the event detail you want to change. Make your modifications and select **Save** to store the edited event.

Note: You can delete an event from your calendar by selecting to view the event and then pressing **Options** and **Delete**.

Organiser

Sharing a calendar event

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Calendar**.
- 2 Select the event you would like to share and choose **Options**.
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth**, or **Email**.

Adding a memo

- 1 From the standby screen press **Menu**, and select **Organiser**, then **Memo**.
- 2 Select **New** and type your memo.
- 3 Select **Option**, and then select **Save**.
- 4 Your memo will appear on screen the next time you open the memo application.

TIP! You can edit an existing memo. Select the one you want to edit, press **Options**, and select **Edit**.

Adding an item to your to do list

- 1 From the standby screen, press **Menu** and choose **Organiser**.
- 2 Select **To do** and select **New**.
- 3 Set the **Due date** for the to do item, add notes and select a priority level: **High**, **Normal** or **Low**.
- 4 Save your to do list item by selecting **Save**.

Tools

Setting your alarm

- 1 From the standby screen press **Menu**, and select **Tools**, then **Alarm clock**.
- 2 Select **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose the repeat type to indicate whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun**
- 5 Scroll down to choose the alarm tone. Choose **Sounds** to select a new sound.
- 6 Scroll down and enter a name for the alarm or keep the suggested name.
- 7 Allow you to use FM radio as Alarm tone.
- 8 Select **Save**.

Note: You can set up to 5 alarms.

Using your calculator

- 1 From the standby screen press **Menu**, and select **Tools**, then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 For simple calculations, select the function you require (+, -, ×, or ÷), followed by =.

- 4 For more complex calculations, select **Function** to select a command.
- 5 Select **Clear** to clear the screen and start a new calculation.

Using the stopwatch

- 1 From the standby screen press **Menu**, and select **Tools**, then **Stopwatch**.
- 2 Select **Start** to begin the timer.
- 3 Choose **Lap** if you want to record a lap time. The duration of an individual lap time (up to 20 times) can be saved.
- 4 Select **Stop** to end the timer.
- 5 Choose **Resume** to restart the stopwatch the time you stopped it at or select **Reset** to return to zero.

Tools

Converting a unit

- 1 From the standby screen press **Menu**, and select **Tools**, then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume, or Velocity**.
- 3 Enter the unit quantity, then scroll up to choose from the unit of measurement you want by scrolling left and right.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Change a city from World clock

- 1 From the standby screen press **Menu**, and select **Tools**, then **World clock**.
- 2 To find out the time of specific city, press **Options** and select **New city**.
- 3 Select region and city you want
- 4 Press **OK**.

Browser

With a browser at your fingertips, you can get up-to-date news and weather forecasts, as well as information on sports or traffic, whenever you need it. In addition, the browser allows you to download the latest music, ringtones, wallpapers, and games.

Accessing the Browser

- 1 Press **Menu** and select **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately, select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Using Google Search

It is easy to access Google Internet Service using this function

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks, and save web pages.

- 1 Press **Menu** and select **Browser**.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.
- 3 To add a new bookmark, select **Options** and choose **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Press **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and select **Connect**. You will be connected to your bookmarked page.

Browser

Saving a page

- 1 Access your required web page.
- 2 Choose **Options** and scroll to **Save**, select **This page**.
- 3 Select **OK**.

Accessing a saved page

- 1 Press **Menu** and select **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and press **Open**.

TIP! This menu will also allow you to delete saved pages.

Viewing your browser history

- 1 Press **Menu** and select **Browser**.
- 2 Select **History** and select **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and select **Connect**.

Changing the Browser settings

- 1 Press **Menu** and select **Browser**.
- 2 Select **Settings**.
- 3 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network profiles, Rendering mode, Cache, Cookies, Security certificates, Show image, JavaScript**.
- 4 Once you have changed your settings, select **OK**.

Settings

Within this folder you can personalize your settings.

Changing your profiles

You can quickly change your profile from the standby screen. Simply press  then the profile you would like to activate. Choose from **General, Silent, Vibrate only, Outdoor, Headset**.

Personalising your profiles

You can personalise each profile setting.

- 1 Press **Menu** and select **Profiles**.
- 2 Choose the profile you want and select **Personalize**.
- 3 For the **Silent** and **Vibrate only** profiles, you can activate only. For the other profiles, you can change all of the sounds and alert options available in the list. (Please refer to your handset for details.)

Smart - profiling your profiles.

You can select suitable volume level considering present surrounding circumstances.

- 1 Press **Menu** and select **Profiles**.
- 2 Choose **General** or **Outdoor**. You can use only this function with **General** and **Outdoor**.

- 3 Select **smart-profiling**.
- 4 Your phone recommends the suitable volume level to you.

Changing your date & time

You can set functions relating to the date and time.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Date & Time** and choose from the list below:

Set date - You can enter the current date.

Date format - You can set the date format. (YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY)

Set time - You can enter the current time.

Time format - You can set the time format to either 24 hours or 12 hours.

Auto update - Select **On**, the phone will automatically update the date and time.

Changing the language

Go to **Settings** and **Languages** to change the language for any text in your phone. Any change will also alter the language input mode.

Settings

Changing your display settings

- 1 Press **Menu** and select **Settings**.
- 2 Select **Display** and choose from:

Wallpaper - Choose a wallpaper to appear on your screen display.

Clocks - Choose to have the time and date visible on your standby screen. Choose from **No date and time** or **Normal clock**.

Backlight timer - Choose how long the backlight remains

TIP! The longer the backlight is on, the more battery power is used, and you may need to charge your phone more often.

Brightness - Use the navigation keys to adjust the brightness. Choose from 40%, 60%, 80%, or 100%, then select OK to save your change.

Home screen shortcut - Select **On** to display the shortcuts of 4 menus as pictures on the middle of the standby screen.

Font size - Change the font size of the following : **Normal**, **Medium**, and **Large**.

Theme - Quickly change the whole look of your screen.

Menu style - Change the menu view from **Grid view** to **List view**.

Dialling - Adjust the dialling style or dialling size for when you are dialling a phone number.

Standby text - Choose to add a message to your standby screen.

Network name - Choose to show or hide the network name.

Changing your Shortcut

Change your Shortcut menus to keep your GM200.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Shortcut**.
- 3 To change shortcut menu of navigation keys, press **Edit**.
- 4 Select the menu you want.

Changing your security settings

Change your security settings to keep your GM200, and the important information it holds, protected.

- 1 Press **Menu** and select **Settings**.
- 2 Select **Security** and choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Auto key lock - Lock the keypad automatically in standby screen without allowing the action of key.

Phone lock - Choose a security code to lock your phone **When power on**, **When SIM changed**, or **Immediately**.

Application lock - lock the application: Image, Calendar, Memo, To do.

Anti-theft mobile tracker - The Anti-theft mobile tracker feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it. The moment an unauthorized user uses your phone, a SMS is triggered from your phone and the message is sent to your pre-defined number. The SMS will be sent to your predefined numbers without the notice of the un-authorized user.

When you try to use this function, you will be requested to key in the **Anti-theft mobile tracker** code. The default Anti-theft mobile tracker code is "0000"

Change codes - Change your **Security code**, **PIN2 code**, or **ATMT code**.

Using flight mode

Use this function to switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the internet, send messages when **Flight mode** is switched **On**.

Power save - Choose to switch the power saving settings **On** or **Off**.

Resetting your phone

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function.

Viewing memory status

Your GM200 has three memories available: the phone, the SIM card, and an external memory card (you may need to purchase the memory card separately).

You can use the memory manager to determine how each memory is used and see how much space is available.

Press **Menu** and select **Settings**. Choose **Memory status** and you will then see the current status of the memories (Common, Reserved, SIM card, and External memory) in your GM200.

Settings

Changing your Bluetooth settings

- 1 Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make changes to your:

My visibility - Choose whether to **Show** or **Hide** your device to others.

My name - Enter a name for your GM200.

My address - View your Bluetooth address.

Primary storage - To choose your primary storage, you can select Phone or External memory.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the moment you switch it on. If you want to change any settings, use this menu.

Press **Menu** and select **Connectivity**. Your options are:

Bluetooth - Set up your GM200 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

Network - Your GM200 connects automatically to your preferred network. To change these settings, use this menu. You can also add new access points using this menu.

USB connection - Choose **Data service** and synchronise your GM200 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted, select **Mass storage** to use your phone in the same way as you would use a USB stick. Connect to your computer and drag and drop files to the GM200 removable device folder.

Pairing with another Bluetooth device

By pairing your GM200 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth settings** menu by selecting **My visibility**, then **Show**. Press **Menu** and select **Connectivity**, then choose **Bluetooth**.
- 2 Select **Device list** from the **Bluetooth** menu and choose **New**.

- 3 Your GM200 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Pair** and enter a passcode then choose **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that comes with your headset to place it in pairing mode and pair your devices.
- 3 Your GM200 will then automatically connect to your Bluetooth headset and switch to headset profile.

Accessories

There are various accessories for your mobile phone. These are detailed below.

Charger



Data cable and CD

Connect and synchronise your GM200 and PC.



Battery



User Guide

Learn more about your GM200.

Stereo headset



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further inquiries.

Network service

The wireless phone described in this guide is approved for use on the GSM 850, E-GSM 900, DCS 1800, PCS 1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : GM200

System : GSM 850 / E-GSM 900 / DCS 1800
/ PCS 1900

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GM200

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.2.1
EN 301 511 V9.0.2
EN 50360/EN 50361:2001
EN 60950-1:2001
EN300328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel: +31 - 36-547 - 8940, Fax: +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

23, FEB, 2009


Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GM200 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.473 W/kg (10g) and when worn on the body is 0.224 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.

Guidelines for safe and efficient use

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the airbag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blast is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Guidelines for safe and efficient Use

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.