



CE 0168 P/N: MMB0376434 (1.0)

## GS155 User Guide - English



This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



### Making an Emergency call when there is no USIM card present in the handset:

1. Enter emergency number 000 or 112.
2. Press key to activate Emergency call.

## Getting to know your phone

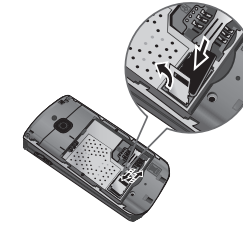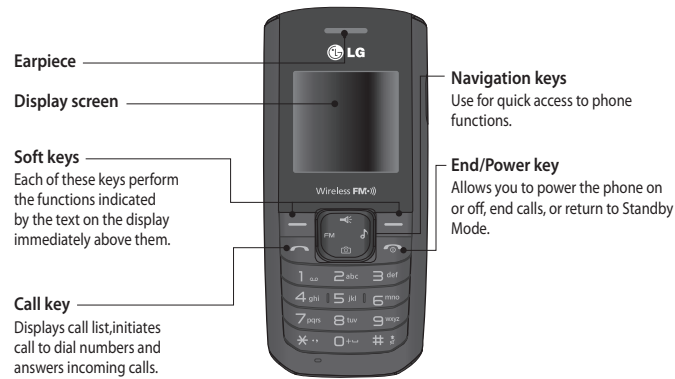

### Installing a memory card

Remove the battery cover and push the memory card slot and flip up the slot. Put the microSD card on the card tray. Make sure that the gold contact area is facing downwards. To remove the microSD card, pull it gently in the opposite direction. The GS155 will support a memory card of up to 2 GB.

## Installing the SIM Card and Charging the Battery


### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

**Important!** The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

• SIM card support: 2G [1.8v / 3V]

### Illustrations

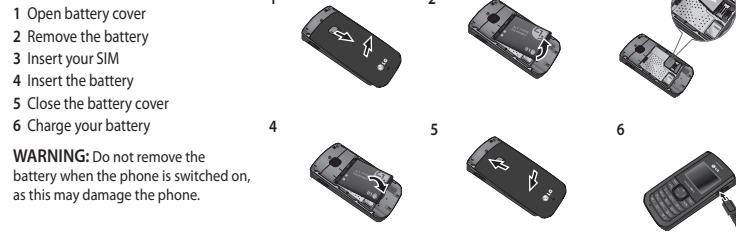

### Answering and rejecting a call

When your phone rings, press **Accept** or press to answer the call. While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting. Press or **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key only**.

### Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Security**.

- **Call barring** – Select when you would like calls to be barred.
- **Fixed dial number** – Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

### Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in **Contacts**, writing a message and creating schedule events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).

- **Received calls:** You can view the Received calls.
- **Call duration:** Allows you to view the duration of your Last Call, All Calls, incoming Calls and outgoing calls.

### Games Menu 4

Your GS155 comes with preloaded games to keep you amused when you have time to spare.

### My stuff Menu 5

You can store multimedia files into your phone's memory. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

Your GS155 supports JPEG images, MP3 & MIDI sound files.

### Multimedia Menu 6

#### Camera

##### Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can select photos as wallpaper.

- 1 Press **Menu** and select **Multimedia**, select **Camera** or go directly to camera through short cut key by pressing down navigation key.

## Menu map

<b>1 Messages</b> 1 New message 2 Inbox 3 Drafts 4 Chat box 5 Outbox 6 Sent 7 Listen voice mail 8 Info messages 9 Templates 0 Settings	<b>2 Contacts</b> 1 Search 2 New contact 3 Speed dials 4 Copy all 5 Delete all 6 Memory status 7 Information	<b>3 Calls</b> 1 All calls 2 Missed calls 3 Dialed calls 4 Received calls 5 Call duration	<b>4 Games</b> 1 Space ball	<b>5 My stuff</b> 1 My Images 2 My Sounds 3 Others
<b>6 Multimedia</b> 1 Camera 2 MP3 Player 3 FM radio	<b>7 Tools</b> 1 Torch 2 Fake call 3 Calculator 4 Stopwatch 5 Unit converter 6 World clock 7 SIM services	<b>8 Organiser</b> 1 Alarm 2 Calendar 3 Memo	<b>9 Settings</b> 1 Profiles 2 Date & Time 3 Language 4 Display 5 Call 6 Auto keylock 7 Security 8 Power save	<b>9 Settings</b> 9 USB connection 0 Network selection * Reset settings # Memory status

### T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. You can use the key to cycle through possible words matching the keys you pressed.

### ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### 123 mode

Type numbers using one keystroke per number. You can also add numbers while remain in letter modes by pressing and holding the desired key.

### Messages Menu 1

Your GS155 includes functions related to SMS (Short Message Service).

#### Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 A new message editor will open. Message editor combines SMS into one intuitive. The default setting of the message editor is SMS mode.

- 2 Holding the phone vertically, point the lens towards the subject of the photo.
- 3 Press the Capture key to take a photo.

### MP3 Player

Your LG GS155 has a built-in MP3 player so you can play all your favourite music.

#### Playing a song

- 1 Press menu and select **Multimedia** and then choose **MP3 Player**.
- 2 Choose all songs then select the song you want to play, Go To Options and then Press Play.
- 3 While music is playing, go to Options->Pause to pause the song.
- 4 Press right navigation key to skip to next song.
- 5 Press left navigation key to skip to previous song.
- 6 While music is playing, press "Back" key to stop the music and return to the MP3 player menu.

You can view and play songs, add songs to Play list, remove, set any song as ringtone from options.

When you're playing a song,

- 1 Long press right navigation key to FF
- 2 Long press left navigation key to REV.
- 3 If song is played for more than 3 seconds and if we press left navigation key then it will play the same song from the beginning else it will play the previous song.

## Turning Your Phone On and Off

- 1 Press and hold the End key until the power comes on.
- 2 Press and hold the End key until the power goes off.

### Making a call

- 1 Key in the number using the keypad. To delete a digit press Clear key.
- 2 Press to initiate the call.
- 3 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.

### Making a call from your contacts

- 1 Press the right soft key contacts from idle screen and select "Search" to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".
- 4 Press to initiate the call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings**, choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key only**.

- 3 Enter your message using either the T9 predictive mode or Abc manual mode. You can switch text input mode by pressing .
- 4 Press Options and choose Insert to add an **Symbol, template, contact and business card**.
- 5 Press options and select **Send to**.
- 6 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 7 Press options and select **Send**.

## Contacts Menu 2

### Searching for a contact

You can search for a contact in your contacts.

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".

## Calls Menu 3

- **All calls:** You can view all lists of outgoing, incoming & missed calls.
- **Missed calls:** You can view the unanswered calls.
- **Dialed calls:** You can view the outgoing calls (called or attempted).

## FM radio

When phone can't find FM channel or low channel clarity is happening, use ear-mic.

Your LG GS155 has an FM radio feature so you can tune into your favourite stations to listen on the move.

**Note:** You will need to insert your headset in order to listen FM Radio more clear. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

### Listening to the radio

- 1 Press **Menu** and select **Multimedia**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

**Note:** You can listen to the radio via built-in speaker. Press **Options**, select **Listen via Speaker**.

GS155 supports wireless FM. User does not require to insert ear-mic to listen FM in normal condition. In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.

## Tools / Organiser Menu 7,8

### Using the calendar ( Menu > Organiser > Calendar )

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

### Adding a memo ( Menu > Organiser > Memo )

You can register your own memos here.

**Setting your alarm** ( Menu > Organiser > Alarm )

You can set up to 3 alarm clocks to go off at a specified time.

**Using your calculator** ( Menu > Tools > Calculator )

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

**Using the stopwatch** ( Menu > Tools > Stopwatch )

This option allows you to use the function of a stopwatch.

**Converting a unit** ( Menu > Tools > Unit converter )

This converts many measurements into a unit you want.

**World clock** ( Menu > Tools > World clock )

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world.

**SIM services** ( Menu > Tools > SIM services )

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

## Settings Menu 9

**Changing your profiles** ( Menu > Settings > Profiles )

You can change your profile **General**, **Silent**, **Vibrate only**, **Outdoor**, **Flight Mode** and **Headset**.

## Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

### WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or serious damage to your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

## Product care and maintenance

### WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not press the antenna unnecessarily.

### Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

### Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

- Use your wireless phone to call emergency services for yourself or others.
  - In the case of fire, traffic accident or medical emergencies;
- Australia: Dial 0-0-0,
- New Zealand: Dial 1-1-1,
- International: Dial 1-1-2,
- other local emergency number.

Remember, it is a free call on your wireless phone for emergency services.

- Use your wireless phone to help others in emergencies, if you see an accident in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

### Using Flight mode

1 Press Menu > Settings > Profiles > Flight mode

2 Use this function to switch the flight mode On or Off. You will not be able to make calls, send message when the Flight mode is On.

**Changing your date & time** ( Menu > Settings > Date & Time )

You can set functions relating to the date and time.

**Changing the language** ( Menu > Settings > Language )

You can change the language for the display texts in your phone. This change will also affect the language input mode.

**Changing your display settings** ( Menu > Settings > Display )

You can change the settings for the phone display.

**Call** ( Menu > Settings > Call ) - You can set the menu relevant to a call.

**Auto key lock** - If you activate this function, the key will be locked automatically in standby mode without requesting the action of key.

**Changing your security settings** ( Menu > Settings > Security )

Change your security settings to keep your GS155 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Phone lock** - Choose a security code to lock your phone, **When power on**, **When SIM changed** or **Immediately**.
- **Call barring**
- **Fixed dial number**

### CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

### Exposure to radio frequency energy

#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GS155 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

### Efficient phone operation

#### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

#### Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

### Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

• **Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner.

User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

• **Change codes** – Changing your security code or PIN code or PIN2 code, ATMT code, enter the old code followed by the new code.

**Power save** ( Menu > Settings > Power save )

If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on**, **Night only** or **Off**.

**Changing your USB connection**

1 Press Menu > Settings >USB connection.

2 Make your change to Mass storage, PC suite or Always ask. (Default Always ask will be selected)

**Network selection** - You can also select a network manually and set a network.

**Resetting your phone** ( Menu > Settings > Reset settings )

Use Reset settings to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

**Memory status** - You can check free space and memory usage of phone, SIM card and external memory (if inserted).

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/Kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.03 W/Kg (10g) and when worn on the body is 0.440 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

### Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

### Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

### Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the aircraft without crew permission.

## Technical data

### General

Product name : GS155

System : GSM 900 / DCS 1800

### Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity		LG Electronics	
<b>Supplier Details</b>			
Name			
LG Electronics Inc			
Address			
LG Electronics Inc, LG Tech Tower 5th, Yongin-si, Gyeonggi-do, Korea, 100-201			
<b>Product Details</b>			
Product Name	GSM 900 / DCS 1800 Dual Band Terminal Equipment		
Model Name	GS155		
Trade Name	LG		
<b>Applicable Standards Details</b>			
EMC Directive (EMC/EMC)	EN 55014 V1.1, EN 55014-2 V1.1, EN 55014-2 V1.1.1		
EMC Directive (EMC/EMC)	EN 55014 V1.1, EN 55014-2 V1.1, EN 55014-2 V1.1.1		
EMC Directive (EMC/EMC)	EN 55014 V1.1, EN 55014-2 V1.1, EN 55014-2 V1.1.1		
EMC Directive (EMC/EMC)	EN 55014 V1.1, EN 55014-2 V1.1, EN 55014-2 V1.1.1		
<b>Supplier's Information</b>			
This conformity to above standards is verified by the following Notified Body (MKT)			
BVMF, Purple House Churchfield Road - Welton on Thorethorpe - ST15 8TJ, United Kingdom			
Notified Body Identification Number: 0108			
<b>Declaration</b>			
I hereby declare under our sole responsibility that the product mentioned above is in full conformity with the above mentioned standards and Directives.	Place	Signed Date	
	Spring Hill, AL, USA	02 Feb, 2010	
LG Electronics Logistics and Services S.A., Viale Europa 15, 37122 Verona, Italy			
Tel: +39 - 047 58095, e-mail: lgs@lg.com			
Signature of representative			