

# LG-T505 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Wi-Fi (WI AN) This equipment may be operated in all European

The WLAN can be operated in the FU without restriction indoors, but cannot be operated outdoors in France, Russia and Ukraine.



P/N: MFL67202046 (1.0) www.lg.com

# Using your touch screen

### Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T505 is not in use, it will return to the lock screen

#### Control the touch screen

intuitive and easy-to-use menu.

Messages

and so on.

Sending a message

4 Touch Send when ready

The controls on the LG-T505 touch screen change dynamically depending on the task you are carrying out.

Your LG-T505 combines SMS and MMS into one

1 Touch Messages in menu and touch Write

3 Touch To at the top of the screen to enter the

message to begin composing a new message

recipients. Then enter the number or touch to select a contact. You can even add multiple contacts.

\*\* WARNING: If an image, video or sound is

to an MMS and you will be charged accordingly.

TIP: To switch to the camera mode or video mode.

added to an SMS it will be automatically converted

# Calls

### Making a Call

- 1 Touch to open the keypad
- 2 Key in the number using the keypad.
- 3 Touch Continitiate the call.

TIP! To enter + for making an international call, press and hold 0+.

PRINTED WITH CE0168 (D

Press the power key to lock the touchscreen to prevent calls being made by mistake

#### Making a call from your contacts

- 1 From the home screen touch to open the Contacts
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

# **Entering Text**

You can choose your input method by tapping and Input method.

Touch 19 to turn on T9 mode. This icon is only shown when you choose Keypad as the input method. Touch to change between numbers, symbols and

text innut 2 Touch Insert to add an image, video, sound, template Use Shift key to change between capital or lowercase input.

### Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T505 will convert your handwriting into

# Setting up your email

Touch E-mail in Application screen.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the additional settings that were filled in automatically when vou created the account.

settings options

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory White balance - Choose between Auto, Incandescent, Sunny, Fluorescent, and Cloudy.

Colour effect - Choose a colour tone for your new photo.

viewfinder then press the capture button as if taking a normal photo. The camera will take shots in quick

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select Off, 3 seconds, 5 seconds, or 10 seconds. This is ideal if you want to be

Night mode - Useful to user in dark places. Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

# Installing the SIM card and the handset battery

#### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

#### Important!

The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations

Always switch the device off and disconnect the charger before removing the battery.

Answering and rejecting a call

incoming call in alerting screen.

When your phone rings, press key to answer the

To mute the ringing, touch on Silent tab in alerting screen. This is useful if you forgot to change your profile

to Silent for a meeting. Touch on Reject tab to reject an

Changing the common call setting

1 Touch Call settings in the Settings menu.

2 Scroll and touch Common settings.

- 1 Remove the back cover
- 2 Lift hattery away
- 3 Insert the SIM card.
- 4 Insert the battery pack 5 Attach the back cover.
- 6 Charge the battery.
- 3 From the filtered list, touch the Call icon next to the • Call reject - Slide the switch left for ON. You can contact you want to call. The call will use the default touch the Reject list to choose All calls, Contacts, Groups All unknown callers and All unknown number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the Send my number - Choose whether to display your number to use if there is more than one for that contact to use. You can also touch to initiate the number on an outgoing call call to the default number
  - Auto-redial Slide the switch left for ON or right for OFF.
  - Answer mode

Press send key: Allows you to only answer an incoming call by pressing the key. Press any key: Allows you to answer an incoming call by pressing any key, except the key.

- Minute minder Slide the switch left to ON to hear a tone every minute during a call.
- BT answer mode Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- Save new number Select ON or OFF to save a

# Changing your text message settings

Touch Messages and touch Settings. Select Text message.

Text message centre - Enter the details of your message centre **Delivery report** - Slide the switch left to receive

confirmation that your messages have been delivered Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into Text, Voice, Fax. X.400 or E-mail.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges

Send long message as - Choose to send long messages as Multiple SMS or as an MMS.

# Changing your multimedia message settings

Touch Messages and, touch Settings and Multimedia

Retrieval mode - Choose between Home network or Roaming network. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply. Priority - Choose the priority level of your MMS. Validity period - Choose how long your message is

stored at the message centre. Slide duration - Choose how long your slides appear on the screen

A still image representing your captured video will

Touch to play the video.

Touch 🔳 Send via - Touch to send the video as a Message.

Touch to delete the video you have just made and

confirm by touching Yes. The viewfinder will reappear. Touch to shoot another video immediately. Your

# **Phone Components**



#### Volume keys

· When the screen is at the Home screen: Ring tone and touch tone

- volume • During a call: Faroiece volume.
  - Down volume key: Press and hold to activate/ deactivate Silent mode.

#### Power/Lock key

- Short press to turn on/off the screen.
- Long press for power on/off.



Handsfree or Stereo earphone

#### Contacts

#### Searching for a contact

- 1 Touch Contacts
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

# Adding a new contact

- Touch Contacts and touch Add
- 2 Choose whether to save the contact to your Internal memory or SIM.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact
- 6 Assign the contact to one or more groups
- 7 Touch Save to save the contact

**Unsupported attachment** - Choose whether the unsupported attachment is restricted or not.

**Delivery time** - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre

#### Social network services (SNS)

Your LG-T505 has SNS that lets you enjoy and manage vour social network.

NOTE: SNS feature is a data intensive application An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider

# Changing your contact settings

You can adapt your contact settings so that your Contacts suits your own preferences

Touch **Options** key and touch **Settings**.

- Display name Choose whether to display the first or last name of a contact first.
- Contacts view Choose whether to display Name or Name & number.
- Copy Copy your contacts from your SIM to Internal memory, or vice versa.
- Move This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- Send all contacts via Bluetooth Sends all contacts to other handset via Bluetooth.
- Back up contacts/ Restore contacts Save or restore the contacts data to the other storage.
- Delete all contacts Delete all your contacts Touch Yes if you are sure you want to delete all your contacts.

# Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check

Profile: You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by touching Album > Upload Photo.

Friends: Search your friends in facebook by selecting Search tap.

Message: You can see the Inbox/Sent folder, and write

#### Camera

# Taking a quick photo

- 1 Touch Camera menu.
- 2 When the camera has focused on your subject, touch the on the right-center of the screen to take a nhoto

new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between Auto, Incandescent, Sunny, Fluorescent, and Cloudy. **Duration** - Set a duration limit for your video. Choose

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

To access the music player, touch Music. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist. Albums - Browse through your music collection by

genre.

Playlists - Contains all the playlists you have created.

# Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo Your captured photo will appear on the screen.

The following options are available. Touch 🔳 **Upload** - Touch to upload the photo. Send via - Touch to send the photo as a Message,

Email or via Bluetooth. Set as - Touch to set as Homescreen wallnaper Lockscreen wallpaper. Contacts image.

Edit - Touch to edit the photo.

Touch to delete the image.

Touch to take another photo immediately Touch to view a gallery of your saved photos.

# Using the advanced settings

From the viewfinder, touch to open all advanced

Continuous shot - Position the subject in the

included in a photo

#### Show captured image - Choose On to check the picture you took right away. Shutter sound - Select shutter sound on/off. Reset settings - Restore all camera default settings.

Making a quick video To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .

selecting .

Video camera

3 Rec will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.

4 To pause the video, touch and resume by

5 Touch on screen to stop video recording.

# After making a video

annear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides

The following options are available.

Email or via Bluetooth.

current video will be saved. Touch to view a gallery of saved videos and

# Using the advanced settings

From the viewfinder, touch to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button. Colour Effect - Choose a colour tone to use for your

between Normal and MMS to limit the maximum size to send as an MMS message.

Reset settings - Reset all the video camera settings.

#### Music

Genres - Browse through your music collection by

Shuffle tracks - Play your tracks in a random order.

- 1 Make sure both devices have Bluetooth switched on and are connected to each other
- 2 Select the music file on the other device and select send via Bluetooth
- 3 When the file is sent, you will have to accept it on your phone by touching Yes.
- 4 The file should appear in Music > All tracks.

# Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card, Using a memory card allows you to free up space in your phone's memory

By touching My stuff, you can open a list of the folders that store all your multimedia files.

#### **Games and Applications**

You can download new games and applications to your phone to keep you enjoy.

### Changing your Bluetooth settings:

Touch Bluetooth then select Options and choose

### Pairing with another Bluetooth device

By pairing your LG-T505 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is ON and Visible. You can NOTE: The LG-T505 supports WEP and WPA/WPA2change your visibility in the Settings menu
- 2 Touch Search
- 3 Your LG-T505 will search for devices. When the search is completed. **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode
- 6 Your passcode protected Bluetooth connection is now ready

Use accessories like earnhones cautiously. Do not

Do not use the phone or accessories in places with

high humidity such as pools, greenhouses, solariums

touch the antenna unnecessarily.

phone and invalidation of warranty

• Do not use your mobile phone near medical

equipment without requesting permission. Avoid

placing the phone over pacemakers, i.e. in your

· Some hearing aids might be disturbed by mobile

· Minor interference may affect TVs, radios, PCs, etc.

Efficient phone operation

Electronic devices

breast pocket

### Application

#### Adding an event to your calendar

- 1 Touch Calendar
- 2 Select the date you would like to add an event to.
- Touch Add.

#### Setting your alarm

- 1 Touch Alarms
- 2 Touch Add, then you can set and save your alarm in this menu.

#### Voice recorder

Use your voice recorder to record voice memos or other

#### Using your calculator

- 1 Touch Calculator
- 2 Touch the number keys to enter numbers.

#### Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

# Road safety

phones in the area when you drive

- . Do not use a hand-held phone while driving
- or tropical environments, it may cause damage to the

  Give full attention to driving.
  - · Use a hands-free kit, if available

  - · RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
  - · When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless serious injury due to improper performance.
  - please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads

Check the laws and regulations on the use of mobile

- Pull off the road and park before making or answering a call if driving conditions so require
- equipment. It can cause the air bag to fail or cause
- . If you are listening to music whilst out and about,

# Avoid damage to your hearing

Converting a unit

1 Touch Unit converter

like to convert from

whatever vou're into.

1 Touch the Browser

(SAR) information

hands

Accessing the web

the URL followed by Connect.

quidelines may be dangerous or illegal

**Browser** 

2 Choose whether you want to convert Currency, Area,

Length, Weight, Temperature, Volume or Velocity.

3 Then select the unit and enter the value you would

Browser gives you a fast, full-colour world of games,

music, news, sport, entertainment and loads more,

straight to your mobile phone. Wherever you are and

2 To go straight to the browser home page, select

Guidelines for safe and efficient

Exposure to radio frequency energy

Please read these simple guidelines. Not following these

Radio wave exposure and Specific Absorption Rate

This mobile phone model LG-T505 has been designed

designed to assure the safety of all users, regardless of

of measurement known as the Specific Absorption

standardised methods with the phone transmitting at

its highest certified power level in all used frequency

Rate, or SAR, Tests for SAR are conducted using

on scientific guidelines that include safety margins

The radio wave exposure guidelines employ a unit

Home. Alternately, select Enter address and type in

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level

NOTE: Excessive sound and pressure from earphones can causing hearing loss.

# Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

#### Potentially explosive atmospheres

- . Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals

#### . The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

• While there may be differences between the SAR

levels of various LG phone models, they are all

designed to meet the relevant guidelines for exposure

NOTE: You will incur extra cost by connecting to

these services and downloading content. Check

Touch Yahoo Search to launch Yahoo search application.

You can personalise each profile setting using the

3 You can then change all the sounds and alert options

available in the list, including your Ringtone and

Volume, Message tone settings and more.

data charges with your network provider

Access to Yahoo Service

Personalising your profiles

2 Choose the profile you want to edit.

**Settings** 

settings menu

1 Touch Profiles.

to radio waves

- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 0.836 W/kg (10g) and when worn on the body is 0.833 W/kg (10g).
- SAR data information for residents in countries/ to comply with applicable safety requirements for exposure to radio waves. These requirements are based regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Do not transport or store flammable gas, liquid, or

Wireless devices can cause interference in aircraft.

· Turn your mobile phone off before boarding any

· Do not use it on the ground without permission from

Keep the phone in a safe place out of the reach of small

children. It includes small parts which may cause a

Emergency calls may not be available with all mobile

the phone for emergency calls. Check with your local

networks. Therefore, you should never depend solely on

as your mobile phone and accessories.

explosives in the same compartment of your vehicle

# Changing your phone settings

Use the freedom of adapting the LG-T505 to your own preferences. From the home screen, select 🔛 and touch Settings then scroll to Device settings.

### Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu:

#### Sending and receiving your files using Bluetooth

#### To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file
- 2 Choose Send via. Choose Bluetooth.
- 3 If you have already naired the Rivetooth device your LG-T505 will not automatically search for other Bluetooth devices. If not, your LG-T505 will search for other **Bluetooth** enabled devices within range.

## 5 Your file will be sent.

#### To receive a file:

1 To receive files, your Bluetooth must be both **ON** and Visible. See Changing your Bluetooth settings below for more information

4 Choose the device you want to send the file to.

- 2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file
- 3 You will see where the file has been saved. For image files, you can choose to View the file. Files will usually be saved to the appropriate folder in My

#### TIP:

- 1 When you use a Bluetooth headset . A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset
- 2 Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera/Camcorder, MusicPlayer, UMS/PCSync)

### Product care and maintenance

**WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs. radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop
- . Do not subject this unit to mechanical vibration or shock
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- . Do not charge the phone when it is on soft furnishings
- · The phone should be charged in a well-ventilated . Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- . Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity

# Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- · Use only LG batteries and chargers. LG chargers are designed to maximise the battery life
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean. Replace the battery when it no longer provides acceptable performance. The battery pack may be
- recharged hundreds of times until it needs replacing. · Recharge the battery if it has not been used for a long time to maximise usability
- . Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- . Do not leave the battery in hot or cold places, this may deteriorate the battery performance
- . There is a risk of explosion if the battery is replaced by an incorrect type

- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- · IAlways unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger
- · Actual battery life will depend on network configuration, product settings, usage patterns. battery and environmental conditions.

#### Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/E0
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and
- 4 For more detailed information about disposal of your old appliance, please contact your city office waste disposal service or the shop where you purchased the product.

### Disposal of waste batteries/accumulators

- 1 When this crossed-out wheeled bin symbol is attached to batteries/accumulators of Your product it means they are covered by the
- 2 This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more than 0.0005% of mercury, 0.002% of cadmium or
- government or the local authorities 4 The correct disposal of Your old batteries accumulators will help to prevent potential negative consequences for the environment.
- 5 For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

European Directive 2006/66/EC.

0.004% of lead. 3 All batteries/accumulators should be disposed

separately from the municipal waste stream via

- designated collection facilities appointed by the
- animal and human health.

# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements



### NOTE

- · Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- · Accessories may vary in different regions.

#### Open Source

service provider

In aircraft

aircraft

the crew

choking hazard if detached.

**Emergency calls** 

Children

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences. please visit http://opensource.lge.com/ All referred licence terms, disclaimers and notices are available for download with the source code

# How to install On-Screen Phone on your PC

Visit LG Home (http://www.lg.com) and go to Support > Mobile Phone Support > Download LG Mobile Support Tool to PC.

# Technical data

#### **Ambient Temperatures**

Max.: +55°C (discharging) +45°C (charging) Min.: -10°C

