

## Table of contents

<b>Introduction</b>	Entry	4
	Important safety instruction	4
	Identification of parts	13
<b>Installation</b>	Where to install	14
<b>Operation</b>	Starting	15
	Adjusting the temperatures and functions	15
	Ice making	19
	Refrigerator compartment	20
	Multi-Use compartment	21
	Health guard (Optional)	21
<b>Suggestion on food storage</b>	Location of foods	22
	Storing foods	24
<b>Care and maintenance</b>	How to dismantle parts	25
	Cleaning	27
	General information	28
	Trouble shooting	29

## Entry

**The model and serial numbers are found on the inner case or back of refrigerator compartment of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.**

Date of purchase : \_\_\_\_\_

Dealer purchased from : \_\_\_\_\_

Dealer address : \_\_\_\_\_

Dealer phone no. : \_\_\_\_\_

Model no. : \_\_\_\_\_

Serial no. : \_\_\_\_\_

## Important safety instruction

Before it is used, this refrigerator must be properly installed and located in accordance with the installation instructions in this document.

When moving your appliance away from the wall, be careful not to roll over the power cord or to damage it in any way.

After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when your hands are damp or wet. Skin could adhere to these extremely cold surfaces.

Unplug the power cord from the power outlet for cleaning or other requirements. Never touch it with wet hands because you can get an electric shock or be hurt.

Never place glass products in the freezer because they may be broken due to expansion when their contents are frozen.

Never allow your hands within the ice storage bin of the automatic ice maker. You could be hurt by the operation of the automatic ice maker.

The appliance is not intended for use by young children or infirm persons without supervision.

**Don't use an extension cord**

If possible, connect the refrigerator to its own individual electrical outlet to prevent it and other appliances or household lights from causing an overload that could cause a power outage.

**Accessibility of Supply Plug**

The refrigerator-freezer should be so positioned that the supply plug is accessible for quick disconnection when accident happens.

**Supply Cord Replacement**

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.



# Important safety instruction

## BASIC SAFETY PRECAUTIONS

This guide contains many important safety messages. Always read and obey all safety messages.

 This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can kill or hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:

 **DANGER** You will be killed or seriously injured if you don't follow instructions.

 **WARNING** You can be killed or seriously injured if you don't follow instructions.

 **CAUTION** Indicates an imminently hazardous situation which if not avoided, may result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

### 1. When connecting the power


#### The dedicated outlet should be used.

- Using several devices at one outlet may cause fire.
- The electric leakage breaker may damage food and the dispenser may be leaked.



#### Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Water may be flown into or the plug may be damaged, which causes fire or electric shock.

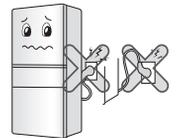

#### Prevent the power cord from being squeezed or imprinted if the refrigerator is pushed in after the power plug is extracted during the installation.

It becomes the cause of fire or electric shock. When moving your appliance away from the wall, be careful not to roll over or damage the power cord.

# Important safety instruction

**Do not allow the power cord bent or pressed by the heavy object to be damaged.**

It may damage the power cord to cause fire or electric shock.




**Do not extend or modify the length of the power plug.**

It causes electric shock or fire by the electric damage of the power cord or others.



**Unplug the power plug when cleaning, handling or replacing the interior lamp of the refrigerator.**

- It may cause electric shock or injury.
- When replacing the interior lamp of the refrigerator, make sure that the rubber ring for preventing the electric spark within the socket is not taken off.

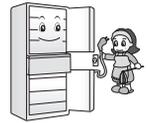

**Do not pull out the cord or touch the power plug with wet hands.**

- It may cause electric shock or injury.



**Remove water or dust from the power plug and insert it with the ends of the pins securely connected.**

Dust, water or unstable connection may fire or electric shock.



**Pull out the power plug not by grasping the cord but the plug of its end.**


It may cause electric shock or short circuit to fire.



**Make sure of grounding.**

**Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded or not.**

The incorrect grounding may cause breakdown and electric shock.

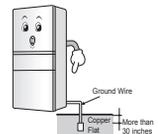

**Be sure to use grounded exclusive proper voltage consent for the power plug.**

It becomes the cause of fire.

## Important safety instruction

**When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.**  
It may cause electric shock or short circuit to make fire.



**Wait for 5 minutes or longer when reconnecting the plug.**

It may cause the operation of the freezer to fail.



**If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any hazard.**

### 2. When using the refrigerator

**Do not place the heavy object or the dangerous object (container with liquid) on the refrigerator.**

It may be dropped to cause injury, fire or electric shock when opening or closing the door.



**Do not install the refrigerator in the wet place or the place which water or rain splashes.**

Deterioration of insulation of electric parts may cause electric leakage.



**Do not cling to the door or the shelves of the door or the home bar of the freezer or the cool chamber.**

It may make the refrigerator fallen down or damage the hands. Especially, do not allow the children to do the above.



**Prevent children from entering the product.**

It may endanger the life of a child if the child enters the refrigerator.




**Opening and closing the door of the refrigerator vigorously may cause the stored food in the refrigerator basket to fall by shock and hurt the foot, so take precautions.**

## Important safety instruction

**Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.**

It may cause explosion or fire.

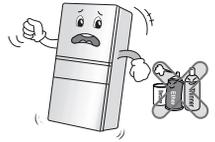


**Do not place the lit candle within the fridge-freezer to deodorize. Do not use drier to dry the inside, nor light a candle to remove odor.**

It may cause explosion or fire.



**Don't insert the hands into the automatic ice maker. (Only for the model with the automatic ice maker)**

It may cause injury.

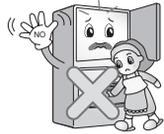

**Do not store the medicine or the academic materials at the refrigerator.**

When the material with the strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.



**Do not use the combustible spray near the refrigerator.**

It may cause fire.




**Avoid the heating devices. Install in places away from the fire such as the place where flammable gas is leaked.**

It may cause fire.



**Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.**


It may cause fire, electric shock or injury by dropping down.

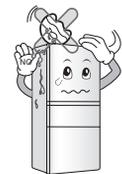

## ! Important safety instruction


**Use the submerged refrigerator after checking it.**

It may cause electric shock or fire.

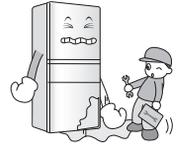


**In case of thunder and lightning, or not in use for a long period of time, detach the power plug.**

There is a danger of electric shock or fire.

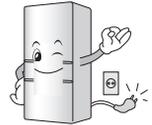

**When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.**

- The explosion by spark may cause fire or burn.
- Because this refrigerator uses natural gas (isobutene, R600a) as the environment-friendly refrigerant, even a small amount (80~90g) is combustible. When the gas is leaked by the severe damage during delivering, installing or using the refrigerator, any spark may cause fire or burn.

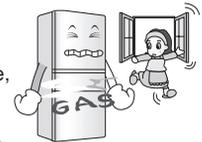

**Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.**

Deterioration of insulation of electric parts may cause electric shock or fire.



**When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center.**

It may cause fire.



**Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.**

It may cause injury, electric shock or fire.



## Important safety instruction

**Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).**

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.



**When disposing the refrigerator, remove the packing material from the door or take off the doors but leave the shelves in place so that children may not easily climb inside.**

It may cause to lock out the child.



**This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

**Children should be supervised to ensure that they do not play with the appliance.**

**Install the refrigerator on the solid and level floor.**

Installing it on the unstable place may cause death by falling down the refrigerator when opening or closing the door.



**Do not insert the hands or the metal stick into the exit of cool air, the cover, the bottom of the refrigerator, the heatproof grill (exhaust hole) at the backside.**

It may cause electric shock or injury.



**When you want to dispose the refrigerator, contact to the down-block office.**

When you want to dispose the large living waste such as electric home appliance and furniture, you'd better contact the local down block office.



# ! Important safety instruction

## ! CAUTION

Violating this direction may cause injury or damage house or furniture.  
Always be careful, please.

**Do not touch food or containers at the freezer with wet hands.**

It may cause frostbite.



**When the electricity is off for long time, remove ice from the ice box.**

- Ice may melt due to long-time power failure.



**Do not place the food in disorder inside the refrigerator.**

The food may fall during opening and closing the door of the refrigerator and hurt people.

**Do not put bottle in the freezer.**

It may freeze the contents to break the bottle to cause injury.



 
**Do not insert the hands into the bottom of the refrigerator.**

The iron plate of the bottom may cause injury.



**Carry the refrigerator with the handle bar at the bottom of the front and the top of the rear.**

Otherwise, your hands may be slipped to cause injury. Because the product is heavy, carrying it alone may hurt people or accidents may occur.



**Because opening or closing the door of the refrigerator may cause injury to the person around it, be careful, please.**

Opening or closing the door may cause feet or hands to be caught in the chink in door or the child to be get hurt by the corner.



**Do not put any living animal in the refrigerator.**



 **WARNING**

 **Important safety instruction**

-  Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
-  The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. When disposal, please consult with service agent or a similarly qualified person.



**This appliance contains a small amount of isobutane refrigerant (R600a), natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged. Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.**

In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m<sup>2</sup> in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance. Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

**Child entrapment warning****⚠ DANGER:** Risk of child entrapment.

Before you throw away your old refrigerator or freezer:

Take off the doors but leave the shelves in place so that children may not easily climb inside.

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.


**Don't store**

Don't store or use gasoline or other flammable vapor and liquids in the vicinity of this or any other appliance.

**Grounding (Earthing)**

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.


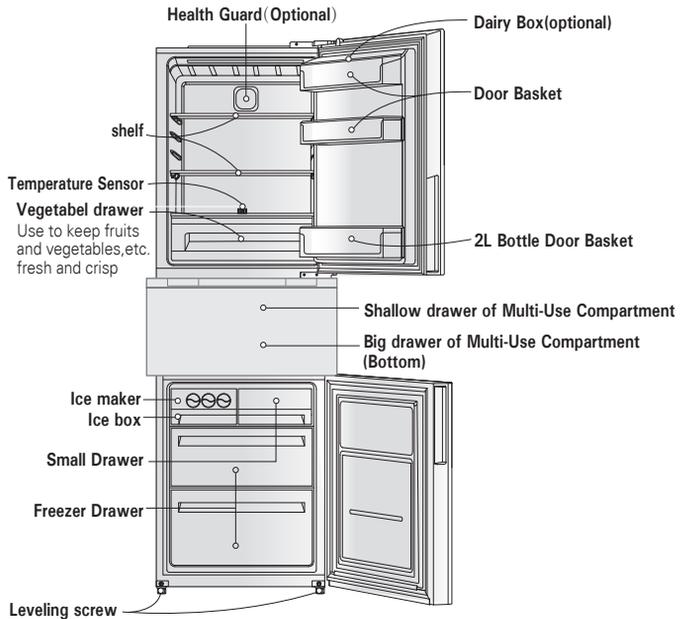
**Identification of parts****Note**

Parts, features, and options vary by model. Your model may not include every option.

**Select a good location**

**Where to install**

1. Select a good location. Place your fridge-freezer where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To ensure proper air circulation around the fridge -freezer, please maintain sufficient space on both the sides as well as top and maintain at least 2 inches (5cm) from the rear wall.
4. There must be proper air circulation around your fridge-freezer to keep it operating efficiently.
5. To avoid vibration, the unit must be leveled. If required, adjust the leveling screws to compensate for the uneven floor. The front should be slightly higher than the rear to aid in door closing. Leveling screws can be turned easily by tipping the cabinet slightly. Turn the leveling screws counterclockwise ( ↺ ) to lower the unit, clockwise( ↻ ) to raise it.
6. Install accessories such as ice cube box, etc., in their proper places. They are packed together to prevent possible damage during shipment.
7. Clean your fridge-freezer thoroughly and wipe off all dust accumulated during shipping.
8. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.

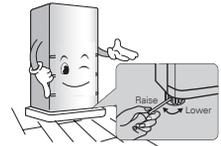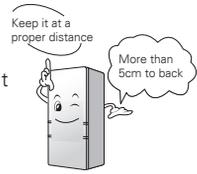


**Disposal of the old appliance**

This appliance contains fluid (refrigerant, lubricant) and is made of parts and materials which are reusable and/or recyclable. All the important materials should be sent to the collection center of waste material and can be reused after rework (recycling). For take back, please contact with the local agency.

## Starting

When your refrigerator is first installed, allow it to stabilize at normal operating temperatures for 2-3 hours prior to filling it with fresh or frozen foods. If operation is interrupted, wait 5 minutes before restarting.

## Adjusting the temperatures and functions

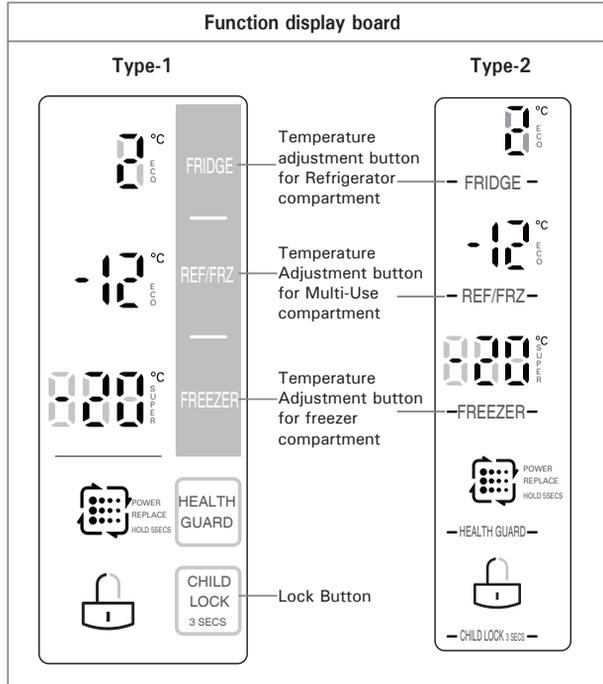

## Adjusting the temperatures and functions

When doors are closed or stopping button selection for 20 seconds, the brightness of LED display will turn down, The power saving mode is activated. When a door is open or a button is pressed, the brightness of LED display will turn up.

### You can adjust temperature of the freezer compartment, refrigerator compartment and Multi-Use compartment.

#### How to adjust the temperature in the refrigerator compartment

##### Refrigerator compartment temperature adjustment



When you press "FRIDGE" button, the temperature of refrigerator compartment is repeated in the following order:

4°C → 5°C → 6°C → 7°C → 8°C → ECO → 2°C → 3°C → 4°C

#### How to adjust the temperature in the Multi-Use compartment

##### Multi-Use compartment temperature adjustment



When you press "REF/FRZ" button, the temperature of Multi-Use compartment is repeated in the following order:

4°C → 3°C → 2°C → 1°C → -1°C → -12°C → -3°C → -7°C → -10°C → -12°C → -13°C → -17°C → ECO → 6°C → 5°C → 4°C

#### How to adjust the temperature in the freezer compartment

##### Freezer compartment temperature adjustment



When you press "FREEZER" button, the temperature of freezer compartment is repeated in the following order:

-18°C → -19°C → -20°C → -21°C → -22°C → -23°C → -24°C → -26°C(SUPER) → -16°C → -17°C → -18°C

#### Note

The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator.

Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.

## Adjusting the temperatures and functions

### Function

#### Refrigerator "ECO"

In order to save electricity when no food needs to be stored in the refrigerator compartment, you can select the Refrigerator ECO function, that is, to turn off the refrigerator compartment.

To put the refrigerator in the stop state, press "FRIDGE" repeatedly until "ECO" lights up.




#### Multi-Use "ECO"

In order to save electricity when no food needs to be stored in the Multi-Use compartment you can select the Multi-Use compartment ECO function, that is, to turn off the Multi-Use compartment.

To put the Multi-Use compartment in the stop state, press "REF/FRZ" repeatedly until "ECO" lights up.

**Note: The "light off" function for Multi-Use compartment only be available for models which have Multi-Use compartment.**

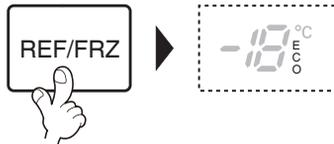

#### Super Freezer

Please select this function for prompt freezer.

Set super freezing: press "FREEZER" key. The panel will display "-26 C" and "SUPER" indicating it is in the super freezing state.


Cancel super freezing: press "FREEZER" key. The panel displays a temperature other than "-26 C" indicating it is not in the super freezing state any more. When the super freezing time is reached, it exits the super freezing state automatically and restores the set freezing temperature of "-21 C".



## Adjusting the temperatures and functions

When you need to clean the air please select this function.

### Health Guard (Optional)

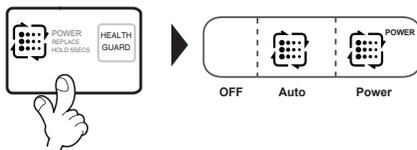


- When Health Guard is selected, rotates 3 times and shows as . Re-select this button, rotates 3 times and shows as . Re-select this button and it shows as "OFF".
- After turning "OFF" Health Guard, open the door and the lamp surrounding Health Guard is off.
- After normal usage for a year, the "REPLACE HOLD SSECS" displays indicating Health Guard need to be replaced. Customers can replace it based on personal needs.
- After replacing Health Guard or when replacement is not needed, press and hold the for more than 5 secs, the timer of the indicator starts again and the reminder is off.
- Water cannot be used for cleaning the filter as it may affect the efficiency. If the operation time exceed the validity time, it may affect deodorization functions.
- If you need to replace the Health Guard, please contact local service center.

### CAUTION

### Lock

- Pressing this button stops operation of other buttons.
- Locking or Unlocking is repeated whenever pressing the "" button. (For "Locking" or "UnLocking" press the "" button for 3 secs.)
- When you use the "" button, you can not use any other button, Until you unlock the refrigerator. When you press the other buttons when the refrigerator is locked, the "" will flash 3 times to notify the current lock condition.

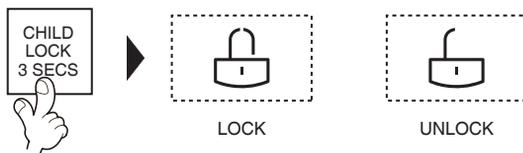

## Adjusting the temperatures and functions

### Door open alarm

- When the refrigerator compartment door, Multi-Use compartment drawer or freezer upper drawer is left open or not closed completely for more than 1 minute, it sounds 3 times every 30 seconds. If the doors are not closed properly after 6 minutes, the alarm stops.
- If the warning sound remains after the refrigerator door, Multi-Use compartment drawer or freezer door is closed, contact your local service center.

### Self-diagnosis (fault detection) function

Self-diagnosis function operates when a problem occurs in the unit. When an error occurs in the unit. Immediately contact the service center without turning the power OFF. If the power is OFF, it will take the engineer longer to find out where the fault occurs. The pressing of any function buttons will not alter the temperature setting when a fault occurs.

### Memory feature



When the power comes on again after a power failure, it is able to recall the last settings of refrigerator temperature, Refrigerator ECO, freezing temperature, multi-use compartment ECO and multi-use compartment temperature. However, the Super Freezing can not be memorized. If the unit is in the Super Freezing state when the power is off, the freezing temperature will be set to “-21°C” after the power is recovered.

### Auto Defroster Function

Your refrigerator is frost free, which means there is no need to manually defrost your refrigerator. The wind blows from heater and fan will melt the frost on the surface of the built-in evaporator (invisible from outside) automatically. At the same time, the defrosted water flows down to the evaporating tray which is located in the lower side of the refrigerator and is evaporated automatically.

### Ice making

1. Pour water into the Ice tray. Adding too much water will make it difficult to separate the ice cubes. When water drips into the ice cube container, the ice cubes may stick together.
2. If you want to speed up the ice making, adjust the freezer compartment to “-26°C(SUPER)”.
3. Rotate the Ice Dispenser knob and the ice cubes will fall into the ice cube container.

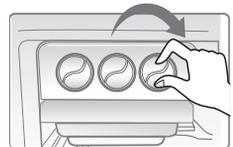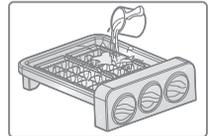

#### Note

Rotating the Ice Dispenser knob before the icing procedure is complete would add the remaining water into the ice cube container. The ice cubes may stick together.

## Refrigerator compartment

### Basket (Optional)


In order to store tall foods, move the door shelves to change the height between the shelves.



Remove the shelf by lifting it upwards, and then install it at desired position.

### Shelf

In order to store tall foods, move the shelves to change the height between them.

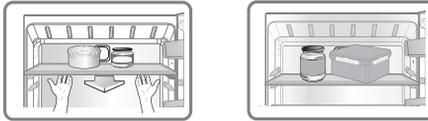

Lift the inside of the shelf and pull it out to remove the shelf. Install the removed shelf at desired position.


### Note

Remove the items on the shelf before moving it.

## Multi-Use Compartment

### Multi-Use compartment

When store vegetables and fruits, set the Multi-Use compartment temperature to 1-6°C; When store fish and meat for a short time, set the temperature to below 0°C. Therefore, always check the temperature setting before store food.

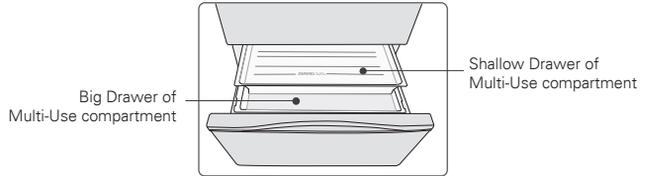


- The shallow drawer is used to store small package foods, and the large size drawer is used to handle large package foods. The stored foods must not exceed the limited height, otherwise the shallow drawer will not be placed to it's correct position and the drawer can not be closed normally.

## Disassembling and installing the Health Guard

### Health Guard(Optional)

- Health Guard is already installed on the refrigerator wall, so installation is not needed.
- Please use containers with tight lids to place spicy food. Otherwise the odor will be absorbed by other food.

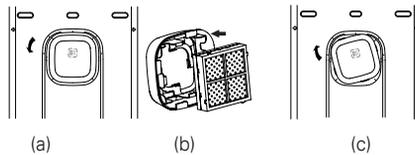

- Hold the case of Health Guard, rotate it counterclockwise about 15 degrees as shown in (a). Take out Health Guard from the case.
- Replace the new Filter into the case as shown in picture (b) (Note the direction of installation).
- Place the unit as shown in picture (c), insert and rotate it clockwise until you hear a clicking sound and the installation is finished.



### ⚠ CAUTION

If the display shows "  REPLACE FILTER ", please contact local service center.

### ⚠ WARNING

Do not place your fingers or foreign objects into the fan of the filter to avoid injury or lanuch accidentally.

## Location on foods

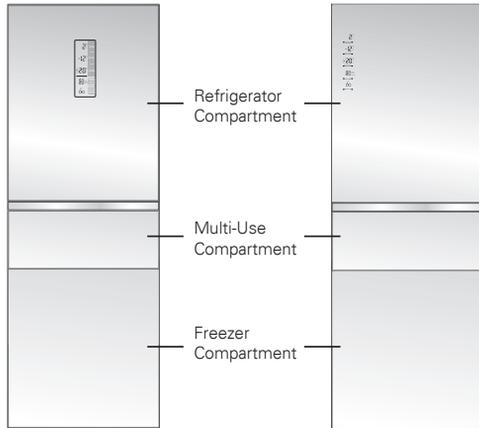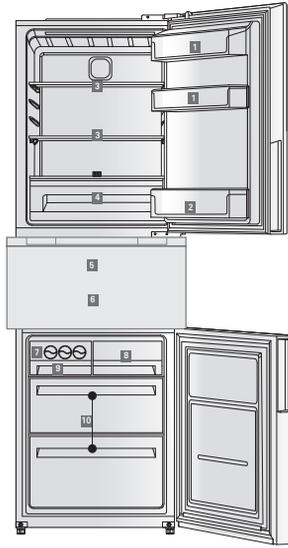

**Suggestions on refrigerator storage**

**1 Dairy Box (optional)**

Store small packages of milk or spices.



**3 Shelf**

Store refrigerated food (The foods should be kept a certain distance between each other and the air outlet should never be blocked by the foods.)



**Suggestions on Multi-Use compartment**

**5 Shallow draw of Multi-Use compartment (top)**

Store refrigerated or frozen foods.

**2 Bottle door basket**

Store water and beverage.



**4 Vegetable drawer**

Store fruits and vegetables.



**Suggestions on freezer compartment**

**7 Ice maker**

For instructions on how to make ice, refer to the user guide. (See page 27.)



**6 Big drawer Multi-Use compartment (bottom)**

Store refrigerated or frozen foods.

**8 Small drawer**

Store frozen foods of small size.



**9 Ice Storage Bin**

Used to storage ice



**10 Drawer**

Store frozen foods for a long time or the foods of large size.



## Storing foods

### Freezer compartment

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, and melons.
- Allow hot food to cool prior to storing, placing hot food in the refrigerator could spoil other food, and lead to higher energy consumption.
- When storing the food, cover it with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, and cause temperatures to rise.
- Never keep too much food in door rack because they may push against by inner racks so that the door cannot be fully closed.
- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrient.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.
- Do not touch the cold foods or containers- especially made of metallic -, with wet hands and place glass products in the freezer compartment.

### CAUTION

- That's why you may have chilblains and they may be broken when their inner matters are frozen, causing personal injury.

### Refrigerator compartment

- Avoid placing moist food in top refrigerator shelves, it could freeze from direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped, to prevent adjacent food from spoiling.
- When storing eggs in their storage rack or box, ensure that they are fresh, and always store them in an upright position, which keeps them fresh longer.

### Note

- If you keep the refrigerator in a hot and humid place, frequent opening of the door or storing a lot of vegetables in it may cause dew to form which has no effect on its performance. Remove the dew with dust cloth free from care.

### Multi-Use compartment

When store vegetables and fruits, set the Multi-Use compartment temperature to 1-6°C. When store fish and meat for a short time, set the temperature to below 0°C. Therefore, always check the temperature setting before store foods.

 
## How to dismantle parts

### Note

Dismantling is done in the reverse sequence of assembly. Be sure to unplug the power plug before dismantling and assembly. Never apply severe force to dismantle parts. Parts may be damaged.


### shelf

- Lift the inside of the shelf and pull it out to remove the shelf;
- Wash the removed shelf with water and wipe it clean using a dry soft cloth;
- Install the shelf in the reverse order.




### Door rack

 Grasp the door rack tightly with one hand and tap it from bottom with another hand to remove the door rack;




### Vegetable drawer

Pull the vegetable drawer all the way out, then lift the outside of the drawer and pull it out.

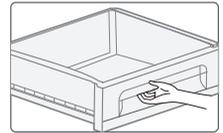

### Vegetable drawer cover

 
- Lift up and pull out the Fruit & Vegetable Drawer cover;




### The drawer of multi-use compartment

## How to dismantle parts


1. Pull the drawer of the Multi-Use compartment all the way out;
2. Remove the transparent shallow drawer
3. Lift the whole set of drawer and pull out to remove it;

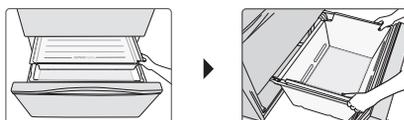

 4. Install the whole set of drawer, keeping the rollers of the drawer underneath the rollers of the compartment;




5. Install the transparent shallow drawer.

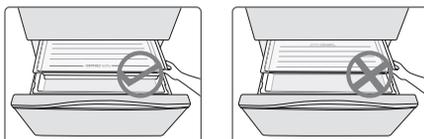

#### Note


Pay attention to the direction when installing the transparent shallow drawer. It can not be closed if installed in the reverse direction.
 
### Dismantle and Cleaning of Ice Maker, Ice Bin and Small Drawer



1. Pull out the ice maker, ice bin and small drawer beside them.
2. Wash the ice maker, ice bin and small drawer with water, wipe them with a clean soft cloth.
3. Reassemble in the reverse direction.

### Dismantle and Cleaning of Freezer Compartment Drawer

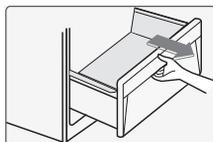

- Raise the front end of the freezer compartment lower drawer, pull out to the front side. Wash the plastic drawer with water, then wipe with a clean soft cloth; Install the plastic drawer in the reverse order.

### Cleaning of Door and Drawer Gaskets

Dirty door seals will get aged and damaged easily and that will cause cold air leakages, so the gaskets of door and drawer should always be clean

## Cleaning

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

### Before cleaning

Be sure to unplug the power.

### Exterior

Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator.

Wipe with a clean damp cloth and then dry.

### Interior

Regular cleaning is recommended. Wash all compartments a baking soda solution or a mild detergent and warm water. Rinse and dry.

### After cleaning

Please verify that the power cord is not damaged, power plug is not overheated, or power plug is well inserted into the power consent.

### WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.).

Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing an electric shock. Never use metallic scouring pads, brushes, coarse abrasive cleaners, strong alkaline solutions, flammable or toxic cleaning liquids on any surface.

Do not touch frozen surfaces with wet or damp hands, because damp object will stick or adhere to extremely cold surfaces.

**Vacation time**

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan not to operate, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

**Power failure**

Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off.

**If you move**

Remove or securely fasten down all loose items inside the refrigerator. To avoid damaging the height adjusting screws, turn them all the way into the base.

**Anti condensation pipe**


The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation. Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerator to prevent "sweating" on the outer cabinet wall.

**Replace the lamp**

Lighting specifications of this product: refrigerator compartment lamp power: DC12V/1.2W;  
Multi-Use compartment lamp: DC12V/0.3W (applicable to some models only).

 **WARNING**

In case the lamp is damaged, contact service center to replace it. Never replace it by yourself.

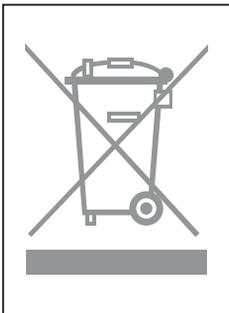

**Disposal of your old appliance**

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## Trouble shooting

Before calling for service, review this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Occurrence	Possible cause	Solution
<b>Runing of refrigerator</b>		
<b>Refrigerator does not run</b>	Refrigerator is in defrost cycle.	This is normal for a fully automatic defrosting refrigerator. The defrost cycle occurs periodically.
	Plug at wall outlet is disconnected.	Make sure plug is tightly pushed into outlet.
	Power outage. Check house lights.	Call local electric company.
<b>Refrigerator runs too much or too long</b>	Refrigerator is larger than the previous one you owned.	This is normal. Larger, more efficient units run longer in these conditions.
	Room or outside weather is hot.	It is normal for the refrigerator to work longer under these conditions.
	Refrigerator has recently been disconnected for a period of time.	It takes some hours for the refrigerator to cool down completely.
	Large amounts of warm or hot food may have been stored recently.	Wait for a while until the refrigerator compartment, Multi-Use compartment and freezer compartment reach the set temperature.
	Doors are opened too frequently or too long.	Warm air entering the refrigerator causes it to run longer. Open the door less often.
	Gaps may be formed on the refrigerator compartment door, Multi-Use compartment drawer or freezer compartment drawer	Make sure the refrigerator is level. Keep food and containers from blocking door. See problem section. OPENING/CLOSING of doors.
	Refrigerator control is set too cold.	Set the refrigerator control to a warmer setting until the refrigerator temperature is satisfactory.
	The gaskets of the refrigerator compartment door, Multi-Use compartment drawer or freezer compartment door is dirty, worn or deformed.	Clean or change gasket. Leaks in the door seal will cause refrigerator to run longer in order to maintain desired temperatures.
	Thermostat is keeping the refrigerator at a constant temperature.	This is normal. Refrigerator goes on and off to keep the temperature constant.

## Trouble shooting

Occurrence	Possible cause	Solution
<b>Temperatures are too cold</b>		
The freezer compartment is too cold but the temperatures in other compartments are normal	Freezer temperature is set too cold.	Set the freezer control to a warmer setting until the freezer temperature is satisfactory.
The refrigerator compartment is too cold but the temperatures in other compartments are normal	Refrigerator temperature is set too cold.	Set the refrigerator control to a warmer setting
The Multi-Use compartment is too cold but the temperatures in other compartments are normal	Multi-Use compartment temperature is set too cold.	Set the Multi-Use control to a warmer setting.
<b>Temperatures are too warm</b>		
The temperature in refrigerator compartment, Multi-Use compartment or freezer compartment is too high	Freezer temperature is set too warm.	Set the freezer temperature to a colder setting until the freezer temperature is satisfactory.
	Multi-Use compartment temperature is set too warm.	Set the Multi-Use compartment temperature to a colder setting until the Multi-Use compartment temperature is satisfactory.
	Refrigerator control is set too warm. Refrigerator control has some effect on freezer temperature.	Set the refrigerator temperature to a colder setting until the refrigerator temperature is satisfactory.
	Doors are opened too frequently or too long.	Warm air enters the refrigerator/ freezer whenever the door is opened. Open the door less often.
	Door is slightly open.	Close the door completely.
	Large amounts of warm or hot food may have been stored recently.	Wait until the refrigerator or freezer has a chance to reach its selected temperature.
	Refrigerator has recently been disconnected for a period of time.	A refrigerator requires some hours to cool down completely.
The refrigerator compartment is too warm but the temperatures in other compartments are normal	The refrigerator compartment is set to a high temperature or in refrigerator compartment ECO state.	Set the refrigerator control to a colder setting.
The Multi-Use compartment is too warm but the temperatures in other compartments are normal	The Multi-Use compartment is set to a high temperature or in Multi-Use compartment ECO state.	Set the Multi-Use control to a colder setting.

## Trouble shooting

Occurrence	Possible cause	Solution
<b>Sound and noise</b>		
<b>Louder sound levels when refrigerator is on.</b>	Today's refrigerators have increased storage capacity and maintain more even temperatures.	It is normal for sound levels to be higher.
<b>Louder sound levels when compressor comes on.</b>	Refrigerator operates at higher pressures during the start of the ON cycle.	This is normal. The sound will level off as the refrigerator continues to run.
<b>Vibrating or rattling noise.</b>	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and solid and can adequately support refrigerator.
	Items placed on the top of the refrigerator are vibrating.	Remove items.
	Dishes are vibrating on the shelves in the refrigerator.	It is normal for dishes to vibrate slightly. Move dishes slightly. Make sure refrigerator is level and firmly set on floor.
	Refrigerator is touching wall or cabinets.	Move refrigerator so that it does not touch the wall or refrigerator.
<b>Water/Moisture /Ice inside refrigerator</b>		
<b>Moisture collects on the inside walls of the refrigerator.</b>	The weather is hot and humid which increases the rate of frost buildup and internal sweating.	This is normal.
	Door is slightly open.	See problem section opening/closing of doors.
	Door is opened too often or too long.	Open the door less often.
<b>Water/Moisture /Ice outside refrigerator</b>		
<b>Moisture forms on the outside of the refrigerator or between doors.</b>	Weather is humid.	This is normal in humid weather. When humidity is lower, the moisture should disappear.
	Door is slightly open, causing cold air from the inside the refrigerator to meet warm air from the outside.	This time, close the door completely.

## Trouble shooting

Occurrence	Possible cause	Solution
<b>Odors in refrigerator</b>		
	Interior needs to be cleaned.	Clean interior with sponge,warm water and baking soda.
	Food with strong odor is in the refrigerator.	Cover food completely.
	Some containers and wrapping materials produce odors.	Use a different container or brand of wrapping materials.
<b>Opening/Closing of doors/Drawers</b>		
<b>Door(s) will not close.</b>	Food package is keeping door open.	Move packages that keep door from closing.
<b>The door or drawer is not closed tightly</b>	The door or drawer is closed with so much force that other drawers and door are opened.	Close the door or drawer gently.
	Refrigerator is not level. It rocks on the floor when it is moved slightly.	Adjust the height adjusting screw.
	Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly.	Be sure floor is level and can adequately support refrigerator. Contact carpenter to correct sagging or sloping floor.
	Refrigerator is touching wall or cabinets.	Move refrigerator.
<b>The drawer is hard to pull out or can not be closed tightly</b>	The drawer is stuck by packing bag or the food in the drawer is too heavy.	Remove the food that blocks the drawer or reduce the amount of food in the drawer.
	Track that drawer slides on is dirty.	Clean drawer and track.
<b>Ice maker problems</b>		
	The ice cubes have an odor.	<ul style="list-style-type: none"> <li>• Check if the ice cubes are tainted by foods with strong odor in the compartment.</li> <li>• The interiors of ice bin and the unit need cleaning.</li> </ul>

# For any further information, please contact LGEIL Branch & Remote Area Offices

## Branch / RAO Addresses

<b>Ahmedabad</b>	101-102, Narayancomplex, Near Navrangpura Busstand, Navrangpura Ahmedabad - 380 009. Tel : 079-26562794, 26407633,34,35
<b>Mehsana</b>	GL-41, Apollo Enclave, Opp Jainderasar, Highway,Maisana,Gujrat, Tel : 9825600404
<b>Agra</b>	28 Gulmohar Vatika,Shilla Road,Khandan Crossing Agra, Tel : 0562-2530913,2530917
<b>Jhansi</b>	200/1,Behind National Bakery,Sipri Road,Civil Lines,Jhansi, Tel : 9839508012
<b>Asansol</b>	Block-E,Ist Floor,P C Chattarjee Market,Rambanhu Tala,GT Road (E) Asansol-713303, Tel : 0341-3096036, Mob : 3092009,3092010
<b>Siliguri</b>	3rd Mile,Sevoka Road,Siliguri-7134401, Tel : 9434006690
<b>Midnapore</b>	BE-27,Bidhannagar,Midnapore, Tel : 9830522899
<b>Aurangabad</b>	207-B, Tapadiya Super Market, Nirala Bazaar Road, Samartha Nagar, Aurangabad - 431005, Tel : 0240-2344705
<b>Jalgaon</b>	Nanded & Jalgaon Area office is on finalisation stage, Tel : 9823317119, 9823317113
<b>Nasik</b>	Flat No:6, Vijay Tower, Opposite Telephone Exchange, Canada Corner Saralpur Road, Nasik-422105, Tel : 9823317006
<b>Amritsar</b>	690,Batala Road,Amritsar,Punjab, Tel : 0183-5096753
<b>Gurdaspur</b>	SCO-19, Gurunanak Market, Opp. LIC Office, Shastri Nagar, Batala., Tel : 9855409012
<b>Bhatinda</b>	142, C/O Pipul Care Centre,Bibi Wala Road Bhatinda, Tel : 0164-2222448
<b>Sangrur</b>	C/o Sigma Enterprises, Gola Market, Sangroor
<b>Ferozpur</b>	C/o Saini industries, Bagdadi Road, Ferozpur, Tel : 9814435428
<b>Bangalore</b>	93,TKN Mansion, Ground Fir, KH Road, Bangalore- 560027, Tel : 080-51145145, Mob : 30910754,30910753
<b>Mysore</b>	No.763, 12th Main, Near Akshay Bandar, Kuvempunagar, Mysore - 570 023.
<b>Bhopal</b>	3 Malik Warehouse, J K Road ,Bhopal, Tel : 0755-5262847, 5262848,5260717, Mob : 3092938 , 3959804
<b>Gwalior</b>	C/o Electrocare, Anuj Sadan,Opp. Dainik Bhaskar Lane, Jayendra Ganj,Gwalior, Tel : 0751-3958510, Mob : 9826722553
<b>Jabalpur</b>	C/o K.M.Marketing Associates, 472, K.S House,Katangi Road, Karmeta,Jabalpur, Tel : 0761- 3097858, 5016847, Mob : 9826722552
<b>Satna</b>	C/o Satna Services, Gali No.1,Pushraj Colony, Satna(M.P), Tel : 07672-309705, Mob : 9826722554
<b>Bhubaneshwar</b>	Plot No.02,1st Flr.,Bapuji Nagar, Bhubaneshwar- 751009, Tel : 0674-2531430, 2534280, Mob : 3966525,3966526
<b>Rourkela</b>	Qtr. No: L-129, Phase - 1, Basanti Colony, Rourkela - 12.
<b>Behrampur</b>	Gandhi Nagar, Main Road, Opp: Indian Gas, BEHRAMPUR - 01, Tel : 9937099009
<b>Calcutta</b>	1, Ho-Chi-Min-Sarani, 6th Floor, Metro Towers, Calcutta-700071, Tel : 033-22883250/51, Mob : 30946125
<b>Barackpore</b>	195 Barasat Road, Near Panasia Nursing Home , 24 Paraganas (North), Kolkata - 700 122, Mob : 9830191903
<b>Chandigarh</b>	Plot No 177-G, Ind. Area, Phase-1, Chandigarh, Tel : 0172-5087389,90, Mob : 3959595,3959596
<b>Dharamshala</b>	301, Civil Lines, Dharamshala, Tel : 01892-229194, Mob : 9816050402
<b>Chennai</b>	AA11, 2nd Avenue, Fatima Tower, Anna Nagar West, Chennai-600040, Tel : 044-55510500-08, Mob : 30924478,30924479
<b>Vellore</b>	No. 3, Post office-3,Krishnanagar,Opp. Venus Theatre,Vellore-1, Mob : 9894721033
<b>Cochin</b>	40/1270, Vasudeva Buildings, T.D.Road, Ernakulam Cochin-682011, Tel : 0484-2368966, 2370744, Mob : 3946877,3946878
<b>Kottayam</b>	C/o Maria Electronics, Goodshed road, Ozhathgil Lane, Kottayam, 686001, Mob : 9895399809
<b>Trivendrum</b>	Hi-Tech Electronics,Hrishikesh,PC 25/2829, Mathrubhumi Road,Trivandrum -35, Mob : 9895399815
<b>Coimbatore</b>	250a, Sangnanur Main Road, Kannappa Nagar, Coimbatore-641027, Tel : 0422-2332506, 2331862, Mob : 3094613,3094573
<b>Salem</b>	F-13, Indira Gandhi Road, Fairlands, Salem-636016, Mob : 9843204202
<b>Delhi (South)</b>	221,Okhla Industrial Area, Phase-III, New Delhi, Tel : 011-26830953, 26837347, Mob : 30989283,30989365/66/67,30989278,30989358
<b>Delhi (West)</b>	13 Milestone, Rohtak Road, Opp Maharaja Agrsen Hospital,Punjabi Bagh,ew Delhi-110026, Tel : 011-9873002340/9873002339
<b>Dehradun</b>	M- 22, Mobbewala, Tata Commercial Compound, Dehradun Saharanpur Road, Dehradun, Tel : 0135-2644213,2644283
<b>Haldwani</b>	Church Compound, Behind PNB, Advocate Jasgish Kr. Bldg, Nanital Road, Haldwani, Mob : 9897173003
<b>Goa</b>	Plot No-D-3&D-4, Rego Baug, Alto Santacruz, Bambolim, Goa-403, Mob : 3094755,3094955,3094956
<b>South Goa</b>	D-3-4, Rego Bagh, Alto St.Cruz, Bambolim, GOA, Mob : 9850478909
<b>Gurgaon</b>	11 nd Fir, A Block, Centre Point Bldg, Sushant Lok , Gurgaon, Tel : 0124-5047461-62 - 63, Mob : 3950019,3099959
<b>Hissar</b>	SCF-2, Red square market, Near Bank of Baroda, Railway Road ,Hissar, Mob : 9811354295
<b>Ghaziabad</b>	J-10, RDC Rajnagar Ghaziabad, Tel : 0120-2722973, 2724686, 3943465, 3943467, Mob : 3943465,3943467
<b>Bareilly</b>	218, Chitrakot Building, Chander Gupt Hotel Lane, Bareilly, Tel : 955812422673/72, Mob : 9837066696
<b>Meerut</b>	A-8, Garh Road, Near Raja Rani Banquet Hall, Meerut, Tel : 95121-3099920/21, Mob : 9837778124
<b>Guwahati</b>	Shantineer Bhawan, C K Aggarwal Path, Chenikerthi, Guwahati-781003, Tel : 0361-2668984, 2662896, 2666395, 2666958, 2666958
<b>Jorhat</b>	K B Road, Near: L.I.C. Office, Jorhat, Tel: 0376-2301057, Mob : 9864028139
<b>Silchar</b>	N.N. Dutta Road, Near Jain Temple, Silchar District - Cachar, Assam, Mob : 9864029750
<b>Hyderabad</b>	K/1/1,IDA, Uppal, Hyderabad -500039, Tel : 040-27207504,05,06, Mob : 30921140
<b>Warrangal</b>	D. No-1-7-1788, Below Labour Office, BalaSamudram Main Road, Hanmakonda,Warangal, Mob : 9849989552
<b>Hubli</b>	603/1B, Ravi Nagar Road, Behind Renuka Petrol Pump, Gokul Road, Hubli-580030, Tel : 0836-2337251,52,53, Mob : 3090749,3090651
<b>Mangalore</b>	2/116, Aspinwall & Co Godown, Opp to Aspinwall & Co., Kulshekar - Maroli Road, Maroli, Mangalore - 575005, Mob : 9845941038
<b>Gulbarga</b>	No. -1-21/4,Mehta Compound, Court Road, Gulbarga, GULBURGA-585102, Mob : 9845941005
<b>Shimoga</b>	Opp. Saphthagiri Finance,Jail Circle, Kuvempu Road, SHIMOGA-577201, Mob : 9845941006
<b>Belgaum</b>	Jyoti Suraj Bldg, CCB-101,Maratha Colony, Off-congress road ,Tilakwadi, BELGAUM-590006, Mob : 9845941030
<b>Indore</b>	3rdflr.,304 Bansri Trade Centre,581/5 M. G.Road,Indore-452003, Tel : 0731-5065523-24, 2546985, 25065669, Mob : 3956060,3956065
<b>Jaipur</b>	B-71, Shankar Marg, Lal Kothi Scheme,Jaipur-302015, Tel : 0141-2741553, 2742639, Mob : 3951458,3951478
<b>Alwar</b>	Plot No. 234A, II/3, State Bank Colony, Police Line, Ajmer-305001, Mob : 9829213525



**Branch / RAO      Addresses**

<b>Jalandhar</b>	Opp Jassi Market, Village Khajurla, Near TVS Godown Jalandhar -Phagwada, G T Road, Jalandhar, Tel : 01824-502,667,502,668,502,000
<b>Hoshiarpur</b>	C/o GIDDA Complex, Near Sale Tax Office, New Hari Nagar Railway Road, Hoshiarpur, Mob : 9814924553
<b>Jammu</b>	Plot No.-52, Transport Nagar, Narwal, Jammu, Tel : 0191-2477420, 2477419, 2474396, 2474384
<b>Srinagar</b>	1-A, Arabian Complex, RajBagh, Srinagar, Mob : 949135809
<b>Jodhpur</b>	22 (1-A), RIICO Heavy Industrial area, Jodhpur - 342003, Tel : 0291-2274203, 2742384, , Mob : 3093487(Accounts), 3093489
<b>Bikaner</b>	II B-9, Jai Narayan Vyas Colony, Shiv Bari Road, Opp Krishna Marriage Place, Bikaner-334003, Rajasthan, Tel : 0151-2230115
<b>Sikar</b>	Mob : 9829213531
<b>Kundli</b>	Sunshine Enterprises, Sunder Cold Storage, Gt Karnal Road, Kundli-Sonipat , Tel : 0130-2219201, 2219202, 2219203, 2219204
<b>Ambala</b>	Plot No. 4261-62, Punjabi Mohalla, Cross Road No. 2, Near Vijaya Bank, Ambala Cantt. 133001, Tel : 0171-2600355
<b>Kozhikode</b>	11 / 434, Erannikkal Bldgs, Cherooty Road, Kozhikode- 673001 Kerala, Tel : 0495-2366755, 2366756, 2366678
<b>Lucknow</b>	537, Hari Kunj, Keshav Nagar, Sitapur Road Lucknow, Tel : 0522-2757538, 39, 58, 59, Mob : 39515078/9
<b>Kanpur</b>	117/Q/70, 120 Ft. Road, Shardanagar, Kanpur, Mob : 9839014446
<b>Sitapur</b>	447 Aryanagar, Sitapur, Mob : 9839173524
<b>Ludhiana</b>	Village Jhande, Near Badowal Railway Station, Opp ferozpur Road Ludhiana, Tel : 0161-2804412 - 15, Mob : 3959985
<b>Patiala</b>	(Richie Electronics) LG Care Centre, Upper Mall, Opposite polo ground, Patiala, Mob : 9814649420
<b>Ropar</b>	(Anukar Utility Service) LG Care Centre, SCF - 56, Phase -II, Mohali, Mob : 9814088934
<b>Madurai</b>	7-1-54, Jothimal Godown, Madurai Dindigul Highroad, Paravai, Madurai-625402 Tamilnadu, Tel : 0452-2464016
<b>Tirunelveli</b>	No:71, Trivandrum High Road, Palayamkottai, Tirunelveli-627002, Mob : 9843204316
<b>Mumbai(North)</b>	Unit No.3, L Wing, 2nd Flr., Tax Center, Behind HDFC Bank, Off Saki Vihar Road, Chandiwali, Andheri(E), Mumbai-400072, Tel : 022-28472410-14
<b>Mumbai(south)</b>	108/109, Nav Neelam Bldg, Near Flora Restaurant, R G Thadani Marg, Worli, Mumbai- 4000018, Tel : 022-24971357, 26244427, 56244428, 29, 30, 31
<b>Nagpur</b>	5a, Road No.13, Behind Msrtc Workshop, Midc Hinga, Nagpur-440016, Tel : 07104-235120, 235122, Fax: 234401, Mob : 3092641, 3092642
<b>Akola</b>	C/o Anand Building, New Bhagat plot, Behind Indraprastha Road, Akola, Mob : 9822255336
<b>Patna</b>	B-8, Shakra Manzil, S K Puri, Patna, Tel : 0612-2211373, 2236580, Mob : 3098714
<b>Bhagalpur</b>	F/O, LIC Building-II(Old), R.B.S.S.S.Road, Bhikhanpur, Bhagalpur - 812 001, Mob : 9431022463
<b>Gaya</b>	Sumitra Sadan, Boring Road Crossing, Patna, Mob : 9431022465
<b>Muzaffarpur</b>	New Bela Ashram Road, Mithanpura Chowk, Muzaffarpur
<b>Pune</b>	105/106, Pride Silicon Plaza, Senapati Bapat Road, Pune-411016, Tel : 020-4030100, Mob : 30922960, 30967366, 30915833, 30967635
<b>Solapur</b>	940/2 "Garud Bungalow", North Sadar Bazar, Solapur- 413003, Tel : 0217-2317403, Mob : 9823317096
<b>Kolhapur</b>	517/10, Sawali Bungalow, Near Vikram high school, Shivaji park, Kolhapur 416 001
<b>Pune Plant</b>	Plot A-5 MIDC, Ranjan Gaon, Tahseel Shirur Distt.-Pune, Tel : 02138-232268/69/70
<b>Raipur</b>	Nathani Compound, Shyam Nagar, Katora Talab, Raipur(C.G), Tel : 0771-5037470, 5053171, Mob : 3959707, 3959708
<b>Bilaspur</b>	Hari Kishan Colony, Near PGBT College, High Court Road, Bilaspur - 495 001, Chattisgarh, Tel : 07752 - 515164, Mob : 9826139333
<b>Ranchi</b>	402, Commerce Tower, Opp. Gel Church Complex, Main Road, Ranchi, Tel : 0651-2331519, 2331815, Mob : 3090426
<b>Dhanbad</b>	Mouja-Dhansar, Moja No. 52, Khata No. 30, Plot no. 101,102,103, Opp: Dhansar Thana, Dhansar, Dhanbad, Jharkhand, Tel : 0326-2306884
<b>Jamshedpur</b>	4, 5 Ravindra Nagar, New Kasidih ,Road No -1, Sakchi, Jamshedpur, Cell : 9431104061, 9431104052
<b>Rajkot</b>	301, 302 Dhanrajni, Dr. Yagnik Road, Rajkot - 360001, Tel : 0281-2481499, 2467692, Mob : 3094093, 3094096
<b>Jamnagar</b>	102, Cozy Hill, Bedi Bandar Road, Pt. Nehru Marg, Jamnagar - 362 005, Tel : 0268-2753916, Mob : 9825612179
<b>Bhavnagar</b>	UL-40, Pattani Plaza, Nr. Nilam Bag Circle, Dairy Road, Bhavnagar - 364 002, Tel : 0276-2524685
<b>Bhuj</b>	12, Second floor, Shree Swaminarayan Vanijya Sankul Building, Main Hospital road, Bhuj - 370001, Mob : 9825610041
<b>Surat</b>	1001-1004, Ascon Plaza, IInd Flr, Anand Mahal Road, Behind Bhulka Bhavan School, Adajan, Surat-395009, Tel : 0261-2730982 - 85, Mob : 3954419
<b>Baroda</b>	204, Silver Line Complex, Opp. BBC Tower, Sayajigunj, Baroda - 390 005, Tel : 0265 - 222 59 70/71, Mob : 9879106703
<b>Thane</b>	Ad-1-13, Rajlaxmi Commercial Complex, Opp. Durgesh Park, Village-Kalher, Thane- Bhiwandi Highway Dist.-Thane-421302, Tel : 02522-277497/27755
<b>Vashi</b>	Mangalmurti Chamber, HB Builder Shop No.-4, Plot No-17, Sector No.-30 Opp.Sanpada Railway Station Vashi Navi Mumbai, Mob : 9820707742
<b>Mira Road</b>	Shop No. 6, Jagannath Dham, Vinayak Nagar, Shree Vinayak Mandir Marg, Nr. Reliance Energy Coll Centre, Bhayander(W) 401101, Tel : 022-28183108
<b>Kalyan</b>	Shop No.1, Satyam Apartment, Bhanu Nagar, Near Bhanu Sagar Theatre, Station Road, Kalyan (WEST), Mob : 9819382052
<b>Tirupati</b>	19-3-13/M4, Behind Hero Honda Showroom, Renugunta Road, Tirupati - 517501, Tel : 0877-2282306/08
<b>Ananthpur</b>	Shop No.1, L.S.Towers, Opp.Lalithakala Parishad, Subash Road, Ananthapur - 515 001, Tel : 08554-241025, Mob : 9849987409
<b>Kurnool</b>	76-103-104, Vasavi Traders Godown, Bellary Road, Kurnool - 518 004, Mob : 9849987557
<b>Trichi</b>	5/2, Kumaran Plaza, Kumaran Nagar, Vayalur Main Road, Trichy -17, Tel : 0431-2771530 / 40 / 50, Mob : 3099564
<b>Pondicherry</b>	RS No. 70, Manaveli, Ariyankuppam, Pondicherry-605 007
<b>Kumbakonam</b>	Siva Complex, No. 29, Pettai Salai Karai Theru, Thanjavur Main Road, Tharasuram, Kumbakonam-612 001, Mob : 9443146973
<b>Udaipur</b>	101, Moti Magri Scheme, Udaipur, Tel : 0294-2419761
<b>Kota</b>	377-B, Near Radha Kishan Temple, Talwandi, Kota, Tel : 0744-2460902, Mob : 9829213510
<b>Varanasi</b>	Shree Ganga Keramos Compound, Lahartara Road, Shivdaspur, Manduadih, Varanasi, Tel : 0542-2373919, Mob : 3091773, 1774, 98398 000 00
<b>Gorakhpur</b>	C/179/301, Daudpur (Op.Kali Mandir), Gorakhpur,(U/P) Pin Code-273001, Tel : 0551-2202197, Mob : 9839800106
<b>Allahabad</b>	7-E5 Tashkent Marg, Opp. St. Joseph College, Allahabad. (U. P), Pin. Code : 211001, Tel : 0532 - 2804216, Mob : 9839900104
<b>Vijaywada</b>	1st Floor, Yalamanchili Complex, Ring Road, Near Executive Club, Vijay wada - 520008, Tel : 0866-2450128, Mob : 3094526, 3094528
<b>Rajahmundry</b>	D.No: 79-5-7, Plot No: 44, Thilak Road, Beside State Bank Of Hyd, Rajahmundry, Mob : 9849987509
<b>Vizag</b>	D.No:14-1-99, Flat No: G-01, Horizon Enclave, Nowrozi Road, Maharani Peta, Vishakapatnam, Mob : 9849987507

# WARRANTY

LG Electronics India Pvt. Ltd., warrants to the end-user customer that the LG refrigerator is free from defects in material or workmanship, under normal domestic use, for a period commencing on the date of purchase and enduring for the warranty period as stipulated, subject to the following conditions:

## 4 YEAR ADDITIONAL WARRANTY ON COMPRESSOR

The 4 year warranty on Compressor will continue even after the expiry of 1 year period from the date of purchase. This warranty covers Compressor only. Gas/Gas Charging will be charged to the customer. Gas charging is included only when compressor is defective & inoperative. During the additional warranty period, it does not cover any part such as condenser, freezer, capillary, suction line, overload protector, relay, thermostat etc.. Standard visiting charges will be applicable within the municipal limit of town where LG Electronics India Pvt. Ltd. (LGEIL) has its Authorized Service centre. Service outside municipal limit will attract to and fro traveling, other incidental expenses in addition to standard visiting charges, as prevailing from time to time. During the warranty period, only the parts replaced or repaired shall be free of costs, but service charges shall always be payable by the customer.

## ※ WARRANTY PERIOD

Refrigerator	Compressor	Linear Compressor (Selected Models Only)
One (1) year from the date of original retail purchase	Four (4) years from the date of original retail purchase	Ten (10) year from the date of original retail purchase
Parts and Labor	Parts only (Customer will be charged for labor)	

## TERMS AND CONDITIONS

- Repairs & Replacements will be carried out either by the dealer from whom the set has been purchased, or through the Authorised Customer Care Centre with whom the set has been registered.
- For Units installed beyond the municipal limits of the jurisdiction of the authorised customer care centre, all expenses incurred in collecting the units or parts thereof from the company's customer care centre, as well as expenses incurred with deputising of service personnel/technicians towards conveyance and other incidentals etc. will be borne by the customer.
- The concerned customer care centre will advise the customer whether to effect the repair at site or at the customer care centre.
- While the company will make every effort to carry out repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- The company or its authorised customer care centre/service dealer reserves the right to retain any part/s or components replaced at its discretion, in the event of a defect being noticed in the equipment during the warranty period.
- Warranty does not cover accessories external to the equipment supplied by the dealer, and replacement of light bulbs, filters, or any consumable parts.
- Noises associated with normal operation and failure to follow instructions found in the use and care and installation guides or operating the unit in an unsuitable environment will not be covered under this warranty.

## **Warranty voids if :**

- The warranty card is not completed properly at the time of purchase.
- The completed warranty card is not presented to authorised personnel at the time of service of the product.
- The Refrigerator is not operated according to instructions given in the Operating Instructions booklet.
- Defects are caused by improper or reckless use, which shall be determined by company personnel.
- Any repair work is carried out by persons other than a authorised company personnel.
- Defects are caused due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to service centre or purchaser's residence.
- The warranty is not valid in case, the Serial Number is deleted, defected or altered.
- Damage to the refrigerator or any parts due to transportation or shifting is not covered by this warranty.
- This warranty automatically expires after 12 months of original date of purchase, even if the refrigerator may not be in use for any time for whatsoever reasons during the warranty period.

# Customer Information Center

For any query related to the after sales service, please contact us on the numbers listed below :

City name	Contact No.
Bangalore	<b>18001809999</b> <b>(BSNL/MTNL Users)</b>
Bhopal	
Calcutta	
Chennai	
Coimbatore	
Hyderabad	
Indore	
Jaipur	
Rajkot	
Surat	
Ahmedabad	
Delhi + NCR	
Lucknow	
Mumbai + Thane	
Nagpur	
Pune	

State	Contact No.
Andhra Pradesh	<b>18001809999</b> <b>(BSNL/MTNL Users)</b>
Gujarat	
Karnataka	
MP	
Rajasthan	
Tamil Nadu	
UP - Eastern	
West Bengal	
Chandigarh	
Punjab	



**LG Electronics India Pvt. Ltd.**

Regd Office: A-27, Mohan Cooperative Industrial Estate,  
Mathura Road, New Delhi-110044



# OWNER'S MANUAL REFRIGERATOR FREEZER

Please read this manual carefully before operating your set and retain it for future reference.

