

# LIMITED WARRANTY CERTIFICATE

LG ELECTRONICS PANAMA, S.A. (LGEPS) warrants this product (including its battery and original accessories) against production defects and labor as follows:

1. **LABOR:** If this product is found to be faulty within a period of one (1) year from the date the consumer purchased the new product, LGEPS shall bear the costs for repair at the Authorized Service Centers designated for these purposes in each country. Once the warranty period has expired, LGEPS shall no longer be liable for labor costs.
2. **PARTS:** If this product is found to be faulty within a period of one (1) year from the date the consumer purchased the new product, LGEPS shall bear the cost of new parts purchased at the Authorized Service Centers designated for these purposes in each country. Once the warranty period has expired, LGEPS shall no longer be liable for the cost of parts.
3. **BATTERIES AND ACCESSORIES:** If this product is found to be faulty within a period of six (6) months from the date the consumer purchased the new product, LGEPS shall bear the cost of new parts purchased at the Authorized Service Centers designated for these purposes in each country. Once the warranty period has expired, LGEPS shall no longer be liable for the cost of batteries and accessories.

Exclusions from the Warranty. This Warranty does not provide cover for the following situations:

- a. Any damage caused by negligence, incompetence, or non-compliance with the telephone user manual.
- b. Damage caused by contact with liquids, food, or corrosion of metal parts.
- c. Damage caused by the penetration of foreign bodies into the product such as sand and insects.
- d. Improper installation of the equipment.
- e. Damage caused to telephones for commercial use (hired equipment).
- f. The use of non-original accessories.
- g. Damage caused to telephones that have been submitted for repair work and upgrades, or that have been opened for the installation of accessories, carried out by personnel other than those at the service centers authorized by LGEPS.
- h. Modifications to voltage conversion or frequency of the equipment.
- i. Damage caused by connections to inappropriate voltages.
- j. Damage caused by the SIM card. The Warranty does not cover any incidental damage such as loss of profits and/or loss of opportunity due to the loss of information contained on the user's SIM card.

- k. Deterioration of the equipment's external surfaces due to normal wear and tear.
- l. Cosmetic damage, damage caused by incidents, or force due to major or unforeseeable events.
- m. In cases where the serial number assigned by the factory has been altered or removed from the product.
- n. When the battery seals are broken, wet, or damp.
- o. When the battery has been charged using a charger that was not manufactured by LG Electronics Inc. or its subsidiaries.
- p. When the battery has been used in equipment other than that for which it was intended.
- q. When the equipment label is illegible, missing, or has been altered.

Replacement products: Those products delivered as a replacement for a faulty product shall come with a one-year (1-year) warranty, valid from the date the first product was purchased, except in those countries and states where the law forbids it.

REPAIR OR REPLACEMENT OF THE PRODUCT, AS SET OUT IN THIS CERTIFICATE, IS THE ONLY COMPENSATION THAT THE CONSUMER SHALL RECEIVE. LGEPS SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGE DUE TO NON-COMPLIANCE WITH THIS WARRANTY.

EXCEPT IN CASES WHERE IT IS EXPRESSLY PROHIBITED BY THE LAW IN THE COUNTRY WHERE THE PRODUCT WAS PURCHASED, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT SHALL BE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY.

This Warranty shall be valid in the country the product was purchased. You may have other rights depending on the country in which the product was purchased. This Warranty is not valid internationally. You may not make a claim in a country other than the country the product was purchased. Some countries and states do not permit the exclusion or limitation of incidental or consequential damage or permit some limitation with regard to the duration of the implied warranty. As such, the limitations and exclusions set out above may not apply.


To validate the Warranty, you must present the purchase invoice or receipt of payment and this warranty certificate.

For more information, please contact us at <http://pa.lge.com> or call the following telephone numbers:

PANAMA: 800-5454, ECUADOR: 800-545454, VENEZUELA: 800-5424477,  
GUATEMALA: 1801-422LGLG(5454), COSTA RICA: 256-6878, 256-3396

# KF240d User Guide

- ENGLISH

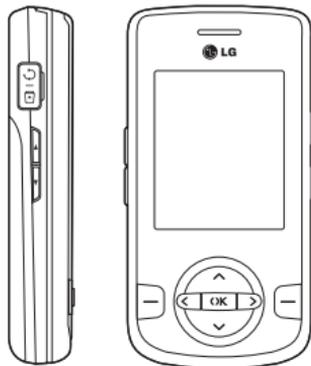

## Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed off separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

# Contents

|   |           |  |           |
|---|-----------|--|-----------|
| <b>Introduction</b>                             | <b>6</b>  | <b>Selection functions and options</b> | <b>27</b> |
| <b>For your safety</b>                          | <b>7</b>  | <b>In-call menu</b>                    | <b>28</b> |
| <b>Guidelines for safe and efficient use</b>    | <b>8</b>  | During a Call                          |           |
| <b>KF240d features</b>                          | <b>13</b> | Conference Calls                       | 29        |
| Parts of the phone                              |           |  |           |
| Display Information                             | 17        |  |           |
| On-Screen Icons                                 |           |  |           |
| <b>Installation</b>                             | <b>19</b> | <b>Menu Tree</b>                       | <b>31</b> |
| Installing the SIM card and the handset battery |           | <b>SIM Service</b>                     | <b>33</b> |
| Charging the Battery                            | 21        | Games                                  |           |
| Disconnecting the charger                       | 22        | Applications                           |           |
|   |           | Network profiles                       |           |
| <b>General functions</b>                        | <b>23</b> |  |           |
| Making a Call                                   |           | <b>Calls</b>                           | <b>34</b> |
| Answering a Call                                | 24        | All calls                              |           |
| Entering Text                                   |           | Missed                                 |           |
|   |           | Dialed                                 |           |
|   |           | Received                               |           |
|   |           | GPRS information                       | 35        |
|   |           | Call duration                          |           |
|   |           |  |           |
|   |           | <b>Organizer</b>                       | <b>36</b> |
|   |           | Calendar                               |           |
|   |           | Memo                                   |           |
|   |           | To do                                  |           |

|                      |           |                   |           |
|----------------------|-----------|-------------------|-----------|
| <b>Multimedia</b>    | <b>37</b> | Voice mail number | 49        |
| MP3 player           |           | Push messages     |           |
| Camera               | 39        | Info service      |           |
| Video camera         | 40        |                   |           |
| FM Radio             |           | <b>My stuff</b>   | <b>50</b> |
| Voice recorder       | 41        | Images            |           |
|                      |           | Sounds            |           |
| <b>Messaging</b>     | <b>42</b> | Videos            | 51        |
| New message          |           | Others            |           |
| Message              |           | Games & Apps      | 52        |
| E-mail               |           |                   |           |
| Inbox                | 43        | <b>Profiles</b>   | <b>53</b> |
| E-mail box           | 44        | Contacts          | 54        |
| Drafts               |           | Search            |           |
| Outbox               |           | Add new           |           |
| Sent                 | 45        | Speed dial        |           |
| Listen to voicemail  |           | Groups            | 55        |
| Info service         |           | Copy all          |           |
| Templates            | 46        | Delete all        |           |
| Text templates       |           | Settings          |           |
| Multimedia templates | 46        | Information       |           |
| Settings             | 47        |                   |           |
| Text message         |           |                   |           |
| Multimedia message   |           |                   |           |
| E-mail               | 48        |                   |           |

# Contents

|                        |           |                       |           |
|------------------------|-----------|-----------------------|-----------|
| <b>Fun &amp; Tools</b> | <b>56</b> | <b>Connectivity</b>   | <b>60</b> |
| Favorites              |           | Bluetooth             |           |
| Alarm clock            |           | Network               |           |
| Calculator             |           | Network selection     |           |
| Stopwatch              |           | GPRS attach           |           |
| Unit converter         |           | <b>USB connection</b> | <b>61</b> |
| World time             |           |                       |           |
| <hr/>                  |           | <hr/>                 |           |
| <b>Live</b>            | <b>57</b> | <b>Settings</b>       | <b>62</b> |
| Home                   |           | Date & Time           |           |
| <hr/>                  |           | Languages             |           |
| Bookmarks              | 58        | Display               |           |
| Go to URL              |           | Wallpaper             |           |
| History                |           | Backlight timer       |           |
| Saved pages            |           | Brightness            |           |
| Settings               |           | Home screen shortcut  |           |
| Network profile        |           | Menu style            |           |
| Cache                  |           | Dial                  |           |
| Security certificates  |           | Greeting note         |           |
| <hr/>                  |           | Network name          |           |
| Show image             | 59        |                       |           |
| Script                 |           |                       |           |
| <b>Information</b>     |           |                       |           |

|                       |           |
|-----------------------|-----------|
| <b>Call</b>           | <b>63</b> |
| Call divert           |           |
| Call barring          |           |
| Fixed dial number     |           |
| Answer mode           |           |
| Send my number        |           |
| <b>Call waiting</b>   | <b>64</b> |
| Minute minder         |           |
| Auto redial           |           |
| Send DTMF tones       |           |
| <b>Shortcuts</b>      |           |
| <b>Security</b>       |           |
| PIN code request      |           |
| <b>Auto key lock</b>  | <b>65</b> |
| Phone lock            |           |
| Change codes          |           |
| <b>Flight mode</b>    |           |
| <b>Power save</b>     | <b>66</b> |
| <b>Master reset</b>   |           |
| <b>Memory status</b>  |           |
| <b>Accessories</b>    | <b>67</b> |
| <b>Technical data</b> | <b>68</b> |

# Introduction

Congratulations on your purchase of the advanced and compact KF240d mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

# For your safety

## Warning!

- *Mobile Phones must be switched off at all times in aircrafts.*
- *Do not hold the phone in your hand while driving.*
- *Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.*
- *For your safety, use ONLY specified ORIGINAL batteries and chargers.*
- *Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.*
- *Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.*
- *Not to charge a handset near flammable material as the handset can get hot and smoulder the Material, hence possible house fire.*

## Caution!

- *Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.*
- *Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.*
- *Only use ORIGINAL accessories to avoid damage to your phone.*
- *All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.*
- *Batteries should be disposed off in accordance with relevant legislation.*
- *Do not dismantle the phone or battery.*
- *Risk of explosion if battery is replaced by an incorrect type.*

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF240d has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.554 W/kg (10g) and when worn on the body is 0.959 W/kg (10g).
- ▶ SAR data information for residents in countries/ regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

## Product care and maintenance

### Warning!

*Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.*

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TVs, radios or personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.

# Guidelines for safe and efficient use

## Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

## Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long period of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

## Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

## Battery information and care

- ▶ You need not completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.


# Guidelines for safe and efficient use

- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ **Risk of explosion:** If battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions.
- ▶ If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- ▶ Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.


# KF240d features

## Parts of the phone


### Front view

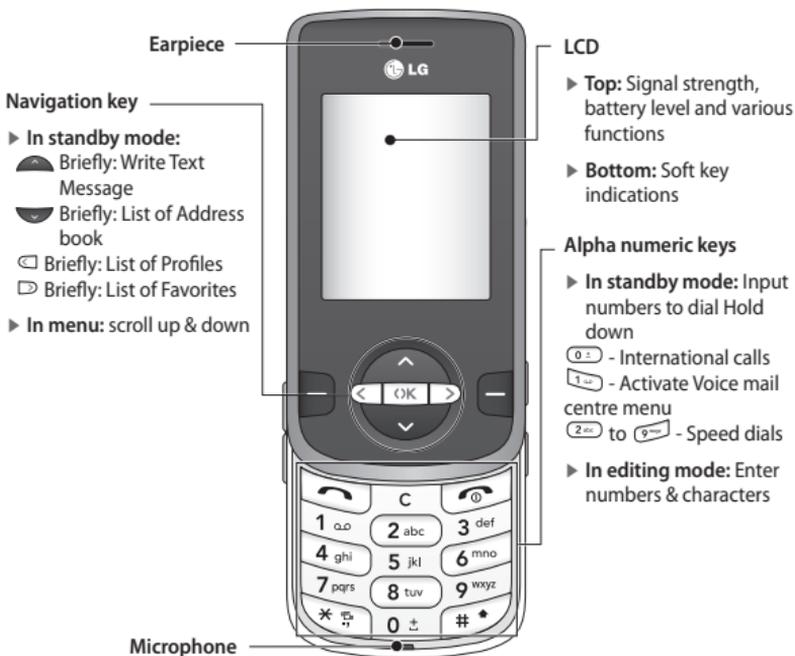


# KF240d features

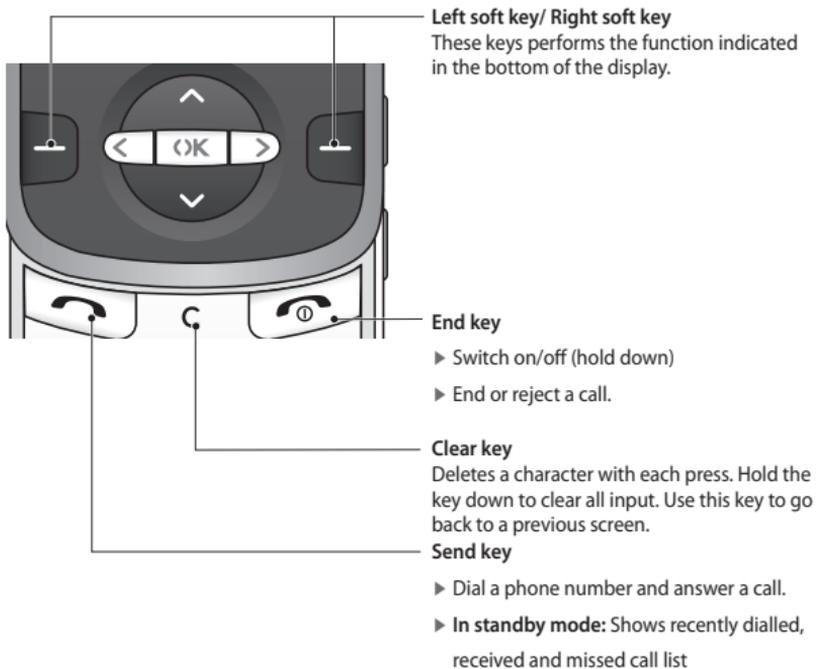

## Left side view

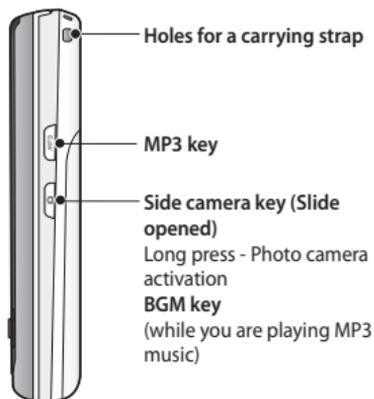

## Right side view

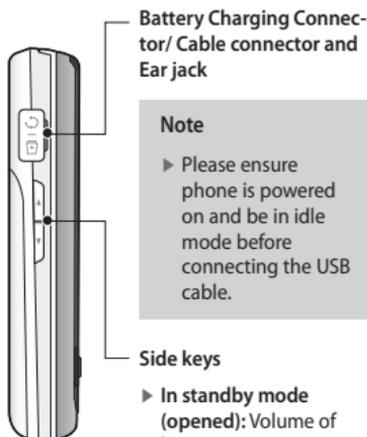

### Note

- ▶ Please ensure phone is powered on and be in idle mode before connecting the USB cable.

### Side keys


- ▶ **In standby mode (opened):** Volume of key tone.
- ▶ **During a call:** increase/decrease the volume of the earpiece

### Note


- ▶ To protect the sense of hearing, maximum volume level is 5.

# KF240d features

## Rear view

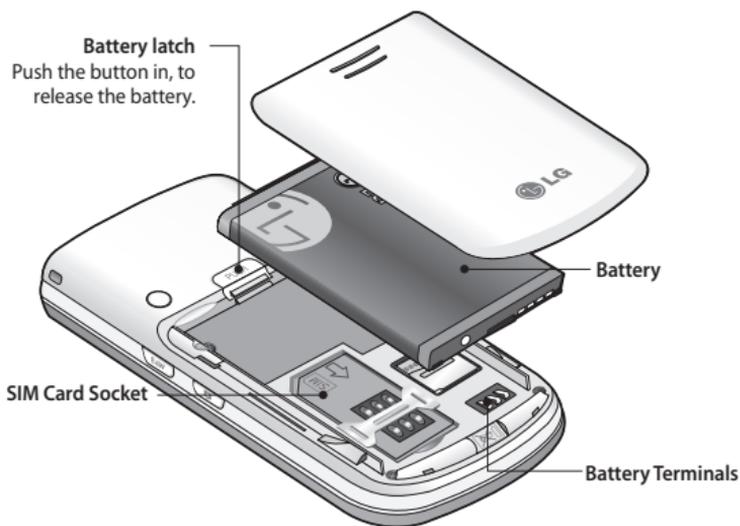

## Display Information

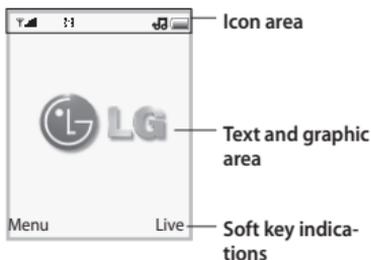

| Area         | Description   |
|--------------|---|
| First line   | Displays various icons.   |
| Middle lines | Display messages, instructions and any information that you enter, such as number to be dialed. |
| Last line    | Shows the functions currently assigned to the two soft keys.                                    |

The screen displays several icons. These are described below.

## On-Screen Icons

| Icon | Description                                   |
|------|---|
|      | Tells you the strength of the network signal. |
|      | You can use GPRS service.                     |
|      | Shows that you are using a roaming service.   |
|      | The alarm has been set and is on.             |
|      | Tells you the status of the battery.          |
|      | You have received a text message.             |
|      | You have received a voice message.            |
|      | Vibrate only menu in Profiles.                |

# KF240d features

| Icon  | Description   |
|---|---|
|  | General menu in Profiles.   |
|  | Outdoor menu in Profiles.   |
|  | Silent menu in Profiles.  |
|  | Headset menu in Profiles.   |
|  | You can divert a call.  |
|  | You have activated Bluetooth menu.  |
|  | Indicates that external memory is unformatted or is unsupported by the phone. |

\* The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and poor audio. Please refer to this signal as an indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).



# Installation

## Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

### 1. Remove the battery.

Press and hold down the battery release button and slide down the battery.

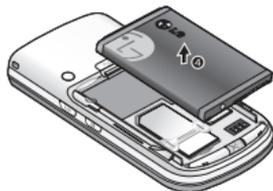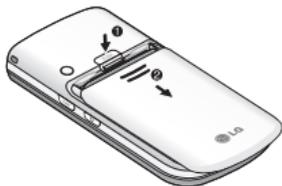

### Note

- ▶ Removing the battery from the phone when the power is on may cause the phone to malfunction.


# Installation

## 2. Install the SIM card.

Insert and slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.



To insert the SIM card

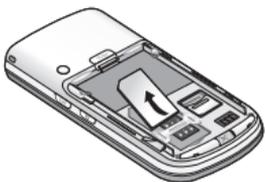

To remove the SIM card

### Note

- ▶ The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

### Warning!

- Do not replace or remove the SIM card while your phone is being used or turns on, or data on the SIM card might be damaged.

### 3. Install the battery.

Slide the battery onto the back of the phone, and push upwards until it snaps back into place.



## Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



1. Ensure the battery is fully charged before using the phone for the first time.
2. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the side of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the main socket. Use only the charger included in the box.
4. The moving bars of battery icon will stop after charging is complete.

# Installation

## Caution!

- *If the battery is completely discharged, the charging display will appear on the LCD approximately 1 to 1.5 minutes after connecting TA.*
- *Do not force the connector as this may damage the phone and/or the travel adapter.*
- *Insert the battery pack charger vertically to wall power outlet.*
- *If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.*
- *Do not remove your battery or the SIM card while charging.*

## Warning!

- *Unplug the power cord and charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. There is a risk of this causing a fire.*

## Disconnecting the charger

Disconnect the charger from the phone by pulling the connector, not the cord.



# General functions

## Making a Call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
  - ▶ Press and hold the  key to erase the entire number.
3. Press the  key to call.
4. When you want to finish, press the  key.

## Making a Call by Send Key

1. Press the  key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation key.
3. Press the  key.

## Making International Calls

1. Press and hold the  key for the international prefix. The + character can be replaced with the international access code.

2. Enter the country code, area code, and the phone number.
3. Press the  key.

## Ending a Call

When you have finished a call, press the  key.

## Making a Call From the Contact list

You can store names and phone numbers dialled frequently in the SIM card as well as the phone memory.

You can dial a number by simply looking up a name in the contact list.

## Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the key volume using the side keys.

# General functions

## Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Address Book) is displayed.

1. Slide up and press the  key or the left soft key to answer an incoming call. If the Any Key menu option (Menu #.5.4.2), has been set to any key press will answer a call except for the  key or the right soft key.
2. End the call by closing the phone or pressing the  key.

### Note

- ▶ You can answer a call while using the Address Book or other menu features. In case phone is connected with PC via USB cable, call and messages are not available.

## Vibrate Mode (Quick)

Vibrate Mode can be activated by pressing and holding the left navigation key.

## Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator (  ) on your phone's display screen.

## Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, creating schedule events in the calendar require entering text. The following text input methods are available in the phone.

### Note

- ▶ This model supports Turkish chars correctly.

## Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses.

As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary.

As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

#### Note

- ▶ You can select a different T9 language from the menu option or long press  key. The default setting on the phone is T9 enable MODE

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter

- ▶ The word changes as letters are typed, ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

**Example:** Press     to type Good.

- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any key strokes.

3. Complete each word with a space by pressing the key  or  key.

To delete letters, press . Press and hold down  to erase the letters continuously.

#### Note

- ▶ To exit the text input mode without saving your input, press  key. The phone returns to the idle screen.

## Using the ABC Mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
  - ▶ Once for the first letter.
  - ▶ Twice for the second letter.
  - ▶ And so on.
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase the letters continuously.

# General functions

| Key   | Characters in the order display |                            |
|---|---------------------------------|----------------------------|
|   | Upper Case                      | Lower Case                 |
|  | .,?!' " 1 - ( )<br>@ / : _      | .,?!' " 1 - ( )<br>@ / : _ |
|  | A B C 2 Ä Å Æ Ç                 | a b c 2 à â æ ç            |
|  | D E F 3 É Ê Ë Ì                 | d e f 3 é è ë è            |
|  | G H I 4 Î Ï                     | g h i 4 î ï                |
|  | J K L 5                         | j k l 5                    |
|  | M N O 6 Ñ Ò<br>Ë Æ              | m n o 6 ñ ò<br>ë ö æ       |
|  | P Q R S 7                       | p q r s 7                  |
|  | T U V 8 Û                       | t u v 8 û                  |
|  | W X Y Z 9 Ŵ Ŷ                   | w x y z 9 ŵ ŷ              |
|  | Space 0 (long<br>press)         | Space 0 (long<br>press)    |

## Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## Using the Symbol Mode


The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the  key. Use the navigation keys to select the desired symbol and press the [OK] key.

# Selection functions and options

Your phone offers a set of functions that allows you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked **Menu** and **Live**. Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

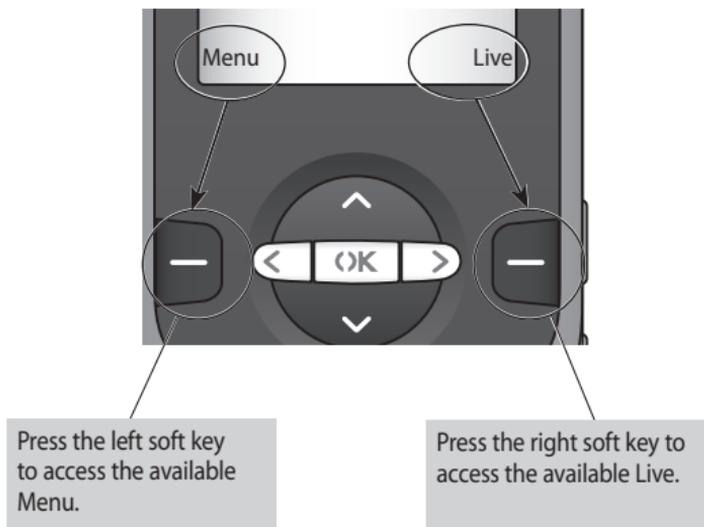

# In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key  [Options].

## During a Call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

### Making a Second Call (Network Dependent)

You can search and dial the number from Address Book to make a second call.

### Swapping Between Two Calls

To switch between two calls, press  key or the left soft key, and then select Swap Call.

## Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as Call waiting, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting (Menu #.5.6).

If Call Waiting is on, you can put the first call on hold and answer the second, by pressing the left soft key .

## Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the  key.

## Muting the Microphone

You can mute the microphone during a call by pressing the [Mute] key. The handset can be unmuted by pressing the [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

## DTMF tones while calling

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) press the key [Options] followed by Send DTMF on. Select DTMF off to disable DTMF tones. DTMF tones are normally on.

## Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature. A conference call can only be set up when you have one active call and one call on hold, both calls having been answered.

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

# In-call menu

## Making a Second Call

You can make a second call while currently in call. Enter the second number and press the  key.

When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

## Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

## Activate the Conference Call on Hold

To activate a conference call on hold, press the  key. Alternatively press the left soft key [Options] and select Join all/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key  [Options] followed by Conference call.

## Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

## Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

## Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the  key.

# Menu Tree

The menu in this phone can be displayed in 2 ways. One is by grid type and secondly in wheel format. Please note that menu number options are different in each view.

The default setting on the phone is set to show the menu in grid type, so therefore all the menu number selections throughout the manual are shown according to that setting.

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and the [OK] key. And you can also take a shortcut by pressing the corresponding number key of desired menu after pressing the left soft key [Menu].

|  |  |  |
|--|--|--|
| <b>1. SIM Service</b>  | <b>3. Organizer</b>  | <b>5. Messaging</b>  |
|  | 3.1 Calendar<br>3.2 Memo<br>3.3 To do  | 5.1 New message<br>5.2 Inbox<br>5.3 E-mail box<br>5.4 Drafts<br>5.5 Outbox<br>5.6 Sent<br>5.7 Listen to voicemail<br>5.8 Info service<br>5.9 Templates<br>5.0 Settings |
| <b>2. Calls</b>  | <b>4. Multimedia</b>   |  |
| 2.1 All calls<br>2.2 Missed<br>2.3 Dialed<br>2.4 Received<br>2.6 Call duration<br>2.5 GPRS Information | 4.1 MP3 player<br>4.2 Camera<br>4.3 Video camera<br>4.4 FM Radio<br>4.5 Voice recorder |  |

# Menu Tree

## 6. My stuff

- 6.1 Images
- 6.2 Sounds
- 6.3 Videos
- 6.4 Others
- 6.5 Games & Apps

## 7. Profiles

- 7.1 General
- 7.2 Silent
- 7.3 Vibrate only
- 7.4 Outdoor
- 7.5 Headset

## 8. Contacts

- 8.1 Search
- 8.2 Add new
- 8.3 Speed dial
- 8.4 Groups
- 8.5 Copy all
- 8.6 Delete all
- 8.7 Settings
- 8.8 Information

## 9. Fun & Tools

- 9.1 Favorites
- 9.2 Alarm clock
- 9.3 Calculator
- 9.4 Stopwatch
- 9.5 Unit converter
- 9.6 World time

## \*. Live

- \*.1 Home
- \*.2 Bookmarks
- \*.3 Go to URL
- \*.4 History
- \*.5 Saved pages
- \*.6 Settings
- \*.7 Information

## 0. Connectivity

- 0.1 Bluetooth
- 0.2 Network
- 0.3 USB connection

## #. Settings

- #.1 Date & Time
- #.2 Languages
- #.3 Display
- #.4 Calls
- #.5 Shortcuts
- #.6 Security
- #.7 Flight mode
- #.8 Power save
- #.9 Master reset
- #.0 Memory status

# SIM Service

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

# Calls

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

## All calls Menu 2.1

You can view all lists of outgoing or incoming calls.

## Missed Menu 2.2

This option lets you view the last 40 unanswered calls. You can also:

- ▶ View the number if available and call it, or save it in the Address Book
- ▶ Enter a new name for the number and save in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

## Dialed Menu 2.3

This option lets you view the last 40 outgoing calls (called or attempted). You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

## Received Menu 2.4

This option lets you view the last 40 incoming calls. You can also:

- ▶ View the number if available and call it or save it in the Address Book
- ▶ Enter new name for the number and save both in the Address Book
- ▶ Send a message by this number
- ▶ Delete the call from the list

## **GPRS information** Menu 2.5

You can check the amount of data transferred over the network through the GPRS information option.

In addition, you can also view how much time you were online.

## **Call duration** Menu 2.6

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.
- ▶ **Dialled calls:** Length of the outgoing calls.
- ▶ **Received calls:** Length of the incoming calls.

# Organizer

## Calendar

Menu 3.1

When you enter this menu a calendar will show up. On top of the screen there are sections for date. Whenever you change the date, the calendar will be updated according to the date. And square cursor will be used to locate the certain day. If you see marked date in the calendar, it means that there is a schedule or memo that day. This function helps to remind you of your schedule and memo.

To change the day, month, and year.

| Key   | Description |
|---|-------------|
|  | Yearly      |
|  | Monthly     |
|  | Weekly      |
|  | Daily       |

In the scheduler mode, press left soft key  [Options].

## Memo

Menu 3.2

1. Select the Memo by pressing the left soft key  [OK].
2. If the entry is empty, press the left soft key  [New].
3. Input the memo and then press left soft key  [Options] > [Save].

### Note

- ▶ If you want to change the text input mode, press the  in order.

## To do

Menu 3.3

You can view and create Todo notes.

1. Select the To do by pressing the left soft key  [OK].
2. If the note is not created yet, press the left soft key  [New].
3. Input the memo and the schedule alarm and then press the left soft key  [Options] > [Save].

# Multimedia

You can enjoy your multimedia function such as camera, voice recorder, MP3 for your fun and convenience.

## Note

- ▶ When the status of the battery indicates low, you may not use Camera or Multimedia function.
- ▶ While using Multimedia function, the status of the battery is changeable.

## MP3 player

Menu 4.1

The KF240d has an integrated MP3 player built-in.

You can enjoy listening to MP3 music files on your phone using a compatible headset or via the internal loudspeaker.

## Note

- ▶ Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- **MPEG-2 Layer III, MPEG-2.5 Layer III:** Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- **AAC+:** V1: (Bit rate 16~128Kbps)  
V2: (Bit rate 16~48Kbps)  
(Sampling frequency from 8KHz to 48KHz)

## Note

- ▶ KF240d doesn't support the variable bit rate of all mentioned file types. Therefore, you can't change the file from MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage.

When you connect the phone to a PC using the USB cable (supplied in the same package), and then you can show removable disk through windows explorer. After you copy songs in removable disk, you should execute safe remove from your system.

# Multimedia

## Note

- ▶ You should copy MP3 to Sounds/MP3 folder. If you copy another folder, you can't see MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.



Status of the music controller

---

## Repeat

---



Repeat all



Repeat one

---

## Note

- ▶ In case that any invalid file is included in the playlist, an error message will be popped up and go back to the prior screen.

## BGM Feature

If you press the Camera button while you are playing MP3 music, the BGM feature is enabled and displays the idle screen. Now you can use other menu items while enjoying MP3 music. (To return to the MP3 Player screen, press the Camera button on the idle screen.) When the BGM feature is on, you can control the volume (Volume button) on the idle screen.

## Note

- ▶ Accessing certain features may stop the music due to the memory capacity.

## Note

- ▶ Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

## Camera

### Menu 4.2

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

#### Note

- ▶ When using the camera, power consumption increases. If this icon  appears on the wallpaper, indicating low battery, recharge the battery before use.

Shutter sound or video recording sound is omitted even when setting mode, including silent mode .

#### • To take a picture

Hold down the camera  button.

- To take clear pictures, press the camera  button while holding the camera  without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).
- Handle carefully since the camera is vulnerable to shock and use a soft cloth when cleaning the camera lens.

- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.
- Auto Focus function is enabled when taking a picture or sticker shot. Press the camera  button half way to adjust focus.

1. Hold down the  in standby mode.
2. Focus on the subject to capture the image, and then press the  /  key.

#### Note

- ▶ You can adjust the brightness by using the  , .

To change the below functions, press the left soft key  [Options].

- ▶ **Resolution** [  ]: Allows you to set the image size.(1600x1200), (1280x960) (640x480) and (320x240). Multishot is only available with the (320x240), (640x480) pixel resolution.
- ▶ **Quality** [  ]: Allows you to set the image quality from Normal, Fine and Super fine.

# Multimedia

- ▶ **Self timer** [  ]: Allows you to select the delay time (Off, 3 seconds, 5 seconds, 10 seconds).  
Then the phone takes a photo after the specified time.
- ▶ **View option** [  ]: Allows you choose Full image or Full screen.
- ▶ **Save to** [  ]: You can set the space after taking a picture. (External/Phone)
- ▶ **Multi shot** [  ]: Allows to take multishot photos successively.
- ▶ **Color effect** [  ]: 4 settings are available.
- ▶ **White balance** [  ]: Allows you to change the settings according to the environment. (Fluorescent/Cloudy/Incandescent/Daylight/Auto)
- ▶ **Shutter tone** [  ]: You can set the sound when taking a picture.
- ▶ **Reset settings** [  ]: Allows you to reset the settings.

## Video camera Menu 4.3

1. Select Video camera menu.
2. Video camera settings menu is the same with Photo camera settings, except following items:

To change the below function, press the left soft key  [Options].

- ▶ **Video mode** [  ]: Allows you to set to send a video file through MMS or General.

## FM Radio Menu 4.4

You can search radio stations and enjoy listening to the radio.

### Note

- ▶ To improve the radio reception, extend the headset cord which functions as the FM antenna.

1. Press the corresponding number key of a channel to store the currently selected radio station.
2. After presetting radio channels, you can listen to other channel by pressing the corresponding number key (short press).

3. You can access the following option menus by pressing the left soft key [Options].

- ▶ **Edit channels:** You can adjust frequency and change the radio station in the selected channel. You can change the frequency 0.1 MHz at a time with Left/Right navigation keys and number keys.
- ▶ **Auto scan:** If you select "Auto Scan Now?" On, automatically set the radio channel. And When "Save channel pop-up?" message will be popped up, if you select Yes, the selected frequency will be stored.
- ▶ **Reset channels:** You can delete all channels you saved.
- ▶ **Listen via speaker/Headset:** You can listen to the radio via speaker.

## Voice recorder Menu 4.5

You can record voice memo.

### Record

1. Press OK to start recording. Once recording is started, the message Recording and the counter is displayed.
2. If you want to finish recording, press right soft key [Stop].

### Album

You can view the Sounds folder which lists all sound files saved in the memory.

# Messaging

## New message Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

### Message (Menu 5.1.1)

You can write and edit text message, checking the number of message pages.

1. Enter the New message menu by pressing the left soft key **[OK]**.
2. If you want to write a new message, select Message.
3. To make text input easier, use T9.
4. Press **[Options]** to attach the followings.

### Options

- ▶ **Send to:** Sends text messages.
1. Enter numbers of recipient.
  2. Press  key to add more recipients.
  3. You can add phone numbers from the address book.

4. Press the **[Options]** and then press send after entering numbers. If the message sent is failed ,it will be saved in the outbox folder.

## E-mail (Menu 5.1.2)

To send/receive an Email, you should set up the Email account.

1. Enter the Email addresses of the recipients in the To, Cc, Bcc fields. You can search the Contacts by pressing .

### Note

- ▶ Enter the reference Email address to forward the Email in Cc(Carbon copy) field.
- ▶ Enter a hidden reference Email address to forward the Email without forwarding information in Bcc(Blind Carbon Copy) field.
- ▶ Only valid Email addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (BCC) fields. When an Email address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To and Cc address fields and 10 recipients for the BCC address field.

2. Move the cursor to the Subject field and key in the subject.
3. You can enter the message contents by moving the cursor to the Message field.
4. When you have finished writing an Email, press **⏏** to send the Email.

#### Note

- ▶ In Inbox folder you may save not more than 20 messages, in Drafts and Outbox folders - 5 messages, and in Sent folder up to 10 messages. In case Drafts Outbox or Sent folder is full, and you try to save new message to one of this folders, first saved message will be automatically deleted.
- ▶ Maximum size for one sent message is 300 kb with attachments, and maximum size for one received message is 300 kb. In case you have received message with more than 5 attachments, only 5 of them will be received. Some attachment may display incorrectly.

## Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox. You can save SMS up to 110(SMS: 100, Delivery report: 10).

If the phone shows 'No space for SIM message', you have to delete only SIM messages from Inbox.

If the phone displays 'No space for message', you can make space of each repository as deleting messages, media and applications.

### \* SIM message

SIM message means the message exceptionally stored in SIM card. You can move this message to the phone.

For notified multimedia message, you have to wait for downloading and processing of the message.

To read a message, select one of the messages by pressing the left soft key

**▢** Options.

# Messaging

- ▶ **View:** You can view the received messages.
- ▶ **Delete:** You can delete the current message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call back to the sender.
- ▶ **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- ▶ **Multi delete:** After selecting the messages you want to remove, you can delete the selected messages.
- ▶ **Delete all read:** You can delete all messages read.
- ▶ **Delete all:** You can delete all messages.

## E-mail box Menu 5.3

Contains all your email messages. You can automatically or manually check your account for new E-mail.

## Drafts Menu 5.4

Using this menu, you can preset multimedia messages that you use most frequently. This menu shows the preset multimedia message list. The following options are available.

## Outbox Menu 5.5

This menu allows to view the message which is about to send or is failed sending. After sending the message successfully, the message will be moved to sent box.

## Sent

Menu 5.6

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

## Listen to voicemail

Menu 5.7

Once this menu has been selected, simply press the left soft key  [OK] to Listen to voicemail. You can also hold down the  key in standby mode to Listen to voicemail.

### Note

- ▶ When you receive a voice mail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

## Info service

Menu 5.8

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Each type of info message has the number; therefore, you can contact service provider as long as you have input the certain number for the information.

When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed.

# Messaging

## Templates

Menu 5.9

### Text templates (Menu 5.9.1)

- ▶ **View:** You can see text templates.
- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.
- ▶ **Send via:** You can send the selected template message by SMS, MMS or E-mail
- ▶ **Delete:** Deletes the template.
- ▶ **New template:** Use this to create new template.
- ▶ **Delete all:** Allows you to delete all multimedia messages.

### Multimedia templates

(Menu 5.9.2)

After saving new template, you can use the following options.

- ▶ **Save:** Allows you to save new multimedia templates you have created.

- ▶ **Insert:** You can add Symbol,Image, Video,Sound,New photo,New video,New sound,Text template,Contact,My business card,vCard,vCalendar.
- ▶ **Edit subject:** Allows you to modify the multimedia message you have chosen.
- ▶ **Preview:** You can preview multimedia templates you wrote.
- ▶ **Slide duration:** You can set the duration of slide of multimedia message.
- ▶ **Writing language:** Select the desired language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.
- ▶ **Exit:** Will take you back to the New Message menu.

## Settings

Menu 5.0

### Text message (Menu 5.0.1)

▶ **Message types:**

Text, Voice, Fax, Paging, X.400, Email, ERMES

- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to Yes, you can check whether your message is sent successfully.
- ▶ **Reply via same service center:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- ▶ **SMS Center:** If you want to send the text message, you can receive the address of SMS centre through this menu.
- ▶ **Character encoding:** Choose how your characters are encoded. This impacts the size of your message and therefore data charges.

### Multimedia message (Menu 5.0.2)

- ▶ **Subject:** You can enter multimedia messages subject when this menu is on.
- ▶ **Slide duration:** Displays the duration of each page when writing the message.
- ▶ **Delivery time:** Choose how long before each message is sent.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery reports:** If it is set to Yes in this menu, you can check whether your message is sent successfully.
- ▶ **Read report:** You can receive the report whether the receiver read the message or not.

# Messaging

- ▶ **Auto download:** If you select On, you receive multimedia messages automatically. If you select Off, you receive only notification message in the inbox and then you can check this notification. If you select Home network only, you receive multimedia messages depends on Home network.
- ▶ **Network profiles:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted Message Types**
  - Personal:** Personal message.
  - Advertisement:** Commercial message.
  - Informational:** Necessary information.

## E-mail (Menu 5.0.3)

You can configure settings for receiving and transmitting emails.

- ▶ **Email accounts:** You can create or configure an Email account including the Email server and user ID. You can edit a selected Email account by pressing the left soft key[option]- 2.Edit. You can select an Email account to be used to send an Email using .
- ▶ **Access point:** You can select, view and add new access point
- ▶ **Retrieve interval:** You can configure Retrieve interval to retrieve emails automatically from the incoming mail server. When a new Email arrives, an icon appears at the top of the screen.
- ▶ **Signature:** You can configure a text signature to be attached to the end of an Email. The configured signature text is automatically or manually attached to the end of the Email when it is sent.

**Note**

- ▶ When you try to change the mailbox type, all emails downloaded before would be deleted.

**Voice mail number (Menu 5.0.4)**

You can receive voicemail if your network service provider supports this feature. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

**Push messages (Menu 5.0.5)**

You can set the option whether you will receive the message or not.

**Info service (Menu 5.0.6)****▶ Receive**

**On:** If you select this menu, your phone will receive Info service messages.

**Off:** If you select this menu, your phone will not receive Info service messages any more.

**▶ Alert**

**On:** Your phone will beep when you have received Info service message numbers.

**Off:** Your phone will not beep even though you have received info service messages.

**▶ Languages**

You can select the language you want by pressing OK key. Then, the info service message will be shown in the language that you selected.

# My stuff

## Images

### Menu 6.1

Shows the list of JPG files at My media\Photos in Multimedia memory.

- ▶ **View:** You can see the JPG file when pressing OK key or selecting View menu of Option menus.
- ▶ **Delete:** Delete the file that you select.
- ▶ **Set as**
  - **Wallpaper:** Currently selected image can be set as a wallpaper.
  - **Picture ID:** Currently selected image can be set as a Picture ID.
- ▶ **Send via:** Allows you to send a image through MMS/Bluetooth.
- ▶ **File**
  - **Rename:** Change the file name of selected file.  
You cannot change the extension of file.
  - **Move to folder:** Move the selected file to the folder.
  - **Move to external memory:** Move the selected file to the Multimedia memory/external memory.
  - **Copy to external memory:** Copy the selected file to the Multimedia memory/external memory.

- **Information:** Show the file information.

- ▶ **Print via Bluetooth:** Most pictures that you have taken in the camera mode and downloaded through WAP can be transmitted via Bluetooth to a printer.
- ▶ **Slide show:** You can view a slide show of the files you stored.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as a type and name.
- ▶ **List view/Thumbnail view:** Allows you to set the view type.

## Sounds

### Menu 6.2

Displays the list of MP3, MP4, AAC, M4A files at My media\Music in Multimedia memory.

- ▶ **Play:** You can play the MP3 file when pressing OK key or selecting Play menu of Option menu.
- ▶ **Set as:** Currently selected sound can be set as a Ringtone/Ringtone ID.

- ▶ **Sort by:** You can arrange the files as a type and name.

## Videos

### Menu 6.3

Show the list of 3GP, 3G2 files at My media/Videos in Multimedia memory. Supported only .3gp files, that are encoded with MPEG4 and h.263 codecs and AMR audio-codec.

- ▶ **Play:** You can play the video file when pressing OK key or selecting Play menu of Option menus.
- ▶ **Send via:** Send the selected file to another device via Multimedia message or Bluetooth.

#### Note

- ▶ You may send files via Bluetooth only if they are stored in phone memory, not on memory card. To send file from external memory, please, firstly copy it to internal phone memory.

## Warning!

*You can't use the following characters,  
\\/:\*?<>|*

- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as a type and name.
- ▶ **List view/Thumbnail view:** Allows you to set the view type.
- ▶ **Landscape mode:** Currently selected file can be played horizontally.

## Others

### Menu 6.4

Show the list of files in My media\Others in the Multimedia memory.

#### Note

- ▶ You may send files via Bluetooth only if they are stored in phone memory, not on memory card. To send file from external memory, please, firstly copy it to internal phone memory.

# My stuff

## **Games & Apps**      Menu 6.5

Your KF240d comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

# Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

Each profile can be personalised. Press the left soft key [Menu] and select Profiles using up/down navigation keys.

The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tone:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tone:** Select the alert tone for messages.
- ▶ **Message volume:** Set the volume of the message tone.
- ▶ **Keypad tone:** Select the desired keypad tone.

- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Slide tone:** Allows to set the slide tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.

## Note

- ▶ All profiles cannot be re named.

# Contacts

## Search

Menu 8.1

1. Select Search by pressing the left soft key  [OK].
2. Enter the name that you want to search.

### Note

- ▶ Instant searching is available by inputting the initial letter of the name.

3. If you want to edit, delete, copy an entry, or to add the voice to one, select left soft key  [Options].

## Add new

Menu 8.2

You can add phonebook entry by using this function. Phone memory capacity is 1000 entries. SIM card memory capacity depends on the cellular service provider. The number of character is SIM dependent feature.

### Note

- ▶ Maximum stored name and number length depends on SIM-card type.

1. Select New contact by press left soft key  [OK].
2. Input a name.
3. Press , then you can input a number.
4. You can set a group for the entry by pressing , .
5. You can set a ringtone and a photo for the entry by press left soft key  [Options].

## Speed dial

Menu 8.3

You can assign any of the keys  to  with a Name list entry. You can call directly by pressing this key.

1. Open the phonebook first by pressing the right soft key  [Contacts] in standby mode.
2. Scroll to Speed dial, then press the left soft key  [OK].
3. If you want to add speed dial, select <Empty> by pressing the left soft key  [Assign]. Then, you can search the name in phonebook.

4. After assigning the number as speed dial, you can change and delete the entry. You can also make a call or send a message by this number.

## Groups Menu 8.4

You can list up to the members per each group. There are 7 groups you can make lists to.

## Copy all Menu 8.5

You can copy entries from SIM card memory to Phone memory and vice versa.

## Delete all Menu 8.6

You can delete all entries from SIM or Phone.

## Settings Menu 8.7

1. Press the right soft key **[Contacts]** in standby mode.
2. Scroll to Settings, then press the left soft key **[OK]**.

## Information Menu 8.8

### ▶ Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

### ▶ Own number (SIM dependent)

You can save and check your own number in SIM card.

### ▶ Business card

This option allows you to create your own business card featuring Name and an mobile phone number.

To create a new business card, press the left soft key **[New]** and enter the information into the fields.

If you want to edit, delete or to send a business card, select left soft key **[options]**.

# Fun & Tools

## Favorites

Menu 9.1

You can list up your favorite menu and access the menu directly in the standby mode by pressing .

## Alarm clock

Menu 9.2

You can set the alarm clock to go on at a specified time.

## Calculator

Menu 9.3

This contains the standard functions such as +, -, x, ÷ Addition, Subtraction, Multiplication, and Division.

Furthermore, you can use the various function of calculator such as +/-, sin, cos, tan, log, ln, exp, sqrt.

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press  key to view the result.
5. To input the decimal number, press  key.
6. To end Calculator, press the right soft key  [Back].

## Stopwatch

Menu 9.4

1. Press [Start] to take time and record the lap time by pressing [Lap].
2. Press [Stop] to ascertain the record of lap time.
3. Press [Reset] to default condition.

## Unit converter

Menu 9.5

This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume and Velocity.

1. You can select one of unit types by pressing  [OK] key.
2. Select the unit you want to convert by pressing . It is impossible to input “.” symbol in unit converter.

## World time

Menu 9.6

You can view clocks of the world's major cities.

1. Select the city belonged to the time zone by pressing .
2. You can set the current time to the city time you select by pressing the left soft key [OK].

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the () key. The phone will return to the idle menu.

### Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

| Key   | Description                           |
|---|---------------------------------------|
|  | Scrolls each line of the content area |
|  | Returns to the previous page          |
|  | Select options and confirm actions    |

## Home

Menu \*.1

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

## Bookmarks

Menu \*.2

This menu allows you to store the URL of Favorite web pages for easy access at a later time.

To create a bookmark.

1. Press the left soft key **▣** [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

After selecting a desired bookmark, the following options are available.

## Go to URL

Menu \*.3

You can connect directly to the site you want. After entering a specific URL, press the OK key.

## History

Menu \*.4

This menu shows the recently browsed pages.

## Saved pages

Menu \*.5

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

## Settings

Menu \*.6

You can set the profile, cache and security related to internet service.

### Network profile (Menu \*.6.1)

A profile is the network information used to connect to the Internet.

There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.

Each profile has submenus as follows:

### Cache (Menu \*.6.3)

The information or services you have accessed are saved in the cache memory of the phone.

#### Note

- ▶ A cache is a buffer memory, which is used to save data temporarily.

### Security certificates (Menu \*.6.5)

You can see the list of personal certificates that have been stored in your phone.

## Show image (Menu \*.6.6)

You can select to display image or not during WAP browsing.

## Script (Menu \*.6.7)

Select whether to turn JavaScript **On** or **Off**.

## Information Menu \*.7

This menu shows you about the version of WAP.

# Connectivity

## Bluetooth

Menu 0.1

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

### Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

## Network

Menu 0.2

You can select a network which will be registered either automatically or manually.

### Network selection (Menu 0.2.1)

Usually, the network selection is set to Automatic.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected Automatic, the phone will be set to Automatic even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone lets you select another network if the phone fails to access the selected network.
- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

### GPRS attach (Menu 0.2.2)

You can set GPRS service depending on various situations.

## USB connection Menu 0.3

You can choose one mode of Data service and USB Mass storage.

### ► Mass storage

You can connect your phone to your PC, as a USB storage device, using the cable in three ways.

1. Connect the phone to the PC when the idle(or Top menu) screen is displayed.
2. Connect the phone while it is performing an operation or menu function, and then move to the idle(or Top menu) screen.
3. Connect the phone while it is performing an operation or menu function, and then select the USB Mass Storage menu.

When you have finished using the phone memory, click Exit and take the following steps.

1. Click on the notification area.  
[Unplug or Eject Hardware]

2. Select USB mass Storage Device, click on Stop.

The following message will appear:  
The USB mass Storage Device device can now be safely removed from the system

3. Then remove the cable.

### ► Data service

Select the Data Service menu to use the LG Mobile Sync program.

# Settings

## Date & Time

Menu #.1

You can set functions relating to the date and time.

## Languages

Menu #.2

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

## Display

Menu #.3

### Wallpaper

You can select the background pictures in standby mode.

### Backlight timer

You can set the light-up duration of the display.

### Brightness

You can set the brightness of LCD:  
100%, 80%, 60%, 40%

## Home screen shortcut

Selecting On displays the functionalities of 4 Navigation keys and Menu key as pictures on the middle of the idle window. (Profiles/Messaging/Favorites/Contacts)

## Menu style

Your phone provides you with Grid and Wheel menu themes. Set the menu style by scrolling and pressing the left soft key **■** [OK].

## Dial

Your phone provides you with four dialing styles.  
(Robo style/Board style/Sketchbook style)

## Greeting note

If you select On, you can edit the text which is displayed in standby mode.

## Network name

If this function is activated, network name will be displayed on LCD.

## Calls

Menu #.4

You can set the menu relevant to a call by pressing  [Select] in the Setting menu.

### Call divert

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

### Call barring

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

### Fixed dial number

(SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

### Answer mode

#### ▶ Open slide

If you select this menu, you can receive an incoming call when you open the slide.

#### ▶ Press any key

If you select this menu, you can receive a call by pressing any key except  [End] /  keys.

#### ▶ SEND key only

If you select this menu, you can receive a call by only pressing  [Send] key.

### Send my number

(network and subscription dependent)

#### ▶ Set by network

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

# Settings

## Call waiting

(network dependent)

### ► On

If you select **On**, you can accept a waiting (receiving) call.

### ► Off

If you select **Off**, you cannot recognize the waiting (receiving) call.

### ► Status

Shows the status of Call waiting.

## Minute minder

If you select **On**, you can check the call duration by a beep sound given every minute during a call.

## Auto redial

### ► On

When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

### ► Off

Your phone will not make any attempts to redial when the original call has not connected.

## Send DTMF tones

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

## Shortcuts

Menu #.5

This option allows you to add your own favorites to the list already provided. Once you create your own menu, you can access the desired function quickly in the idle screen by pressing the right navigation key.

### Note

- Radio menu is already provided in your own favorites.

## Security

Menu #.6

### PIN code request

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press **[OK]**.

2. Set On/Off.
3. If you want to change the setting, you need to enter PIN code when you switch on the phone.
4. If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

## Auto key lock

This menu allows to set the time of Auto key lock.

## Phone lock

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to When switch on. If you set phone lock to When SIM changed, your phone will request security code only when you change your SIM card.

## Change codes

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes: **Security code, PIN1 code, PIN2 code.**

1. If you want to change the Security code/PIN1/PIN2 code input your original code, and then press  [OK].
2. Input new Security code/PIN1/PIN2 code and verify them.

## Flight mode

Menu #.7

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

# Settings

## **Power save** Menu #.8

If you set On, you can save the power when you don't use the phone.

## **Master reset** Menu #.9

You can initialize all factory defaults. You need Security code to activate this function.

## **Memory status** Menu #.0

You can check free space and memory usage of phone, sim card and external memory( if inserted).

# Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

---

## Standard Battery



---

## Headset



---

## Travel Adapter

This charger allows you to charge the battery while away from home or your office.



### Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

# Technical data

## General

**Product name:** KF240d

**System:** GSM 900 / DCS 1800 / PCS  
1900

## Phone usage temperature limit

**Normal:** 55 °C

**When charging:** 45 °C



