



CE 0168

MMBB0285103 (1.0)

KF310 User Guide

Making Emergency call when no USIM card present in the handset:

1. Enter emergency number 000 or 112
2. Press  key to activate Emergency call.

Congratulations on your purchase of the advanced and compact KF310 phone by LG, designed to operate with the latest digital mobile communication technology.

Bluetooth QD ID B013158

MANUFACTURER'S WARRANTY

Australia & New Zealand

1. WHAT THIS WARRANTY COVERS:

LG offers you a warranty that the enclosed Product and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of the Product.
- (2) The warranty extends only to the original consumer purchaser of the Product ("Customer") and is not assignable or transferable to any subsequent customer. LG offers a warranty for genuine LG battery packs, extending SIX (6) months from the date of purchase.
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND.
- (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factory rebuilt replacement items. LG or the authorised service centre will return the Product to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG.
- (5) Upon request from LG, the Customer must provide LG with proof of the date of purchase.
- (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory rights.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- (2) Defects or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas, unless caused directly by defects in material or workmanship.

- (4) If the Customer does not notify LG of the alleged defect or malfunction of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty.
- (5) Products which have had the serial number removed or made illegible.
- (6) If the battery short circuits or the seals of the battery are broken or show evidence of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits under this warranty.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses.)
- (12) Defects or damage resulting from breakage of or tampering with the LCD screen.
- (13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function.

3. STATEMENT

Except for those terms that cannot by law be excluded, all terms other than those expressly contained in this warranty statement are excluded. To the extent permitted by law, LG excludes all liability (whether in contract, tort or otherwise) for any consequential, special, incidental or indirect loss or damage including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

4. HOW TO GET WARRANTY SERVICE:

To obtain information regarding warranty service, please call the following toll free telephone numbers;

AUSTRALIA:

LG Electronics Australia Pty Ltd
2 Wonderland Drive
Eastern Creek NSW 2766
PO Box 212
HORSLEY PARK NSW 2175
Tel: 1800-638-080 Fax: 02-8805-4201

NEW ZEALAND:

LG Electronics Australia Pty Ltd
Unit A, 38 Highbrook Drive
East Tamaki 2013
PO Box 58195 Greenmount
Auckland 2141
Tel: 0800-666-780 Fax: 09-914-2441



LG Electronics Australia Pty Ltd.

English

Welcome to your KF310 handset

User guides can be daunting things, can't they?
But don't worry, we've made this one as
simple as possible.



KF310 User Guide



Your guide is designed to do two things.
First, there's an explanation on how to use your new KF310, so finding your way
around the handset will soon become the second nature.
Then there's an introduction to the wide range of services offered, to make sure you
get the best from them. If all you want to do is power up and get going, that's fine.

Table of Contents

KF310 Features	6	Games & Apps	25
Parts of the phone	6	My games & apps	26
Getting Started	10	Settings	26
Installing the USIM card and battery ..	10	Calling	27
Charging the Battery	12	Call logs	28
Disconnecting the charger	13	All calls	28
How to use a microSD memory card ...	13	Dialled calls	28
Memory card formatting	14	Received calls	28
Turning Handset ON/OFF	15	Missed calls	28
General Functions	16	Make video call	28
Making and answering calls	16	Call durations	28
Answering a call	17	Data volume	28
Entering text	18	Call costs	29
Getting to know your KF310	21	Call divert	29
Overview of Menu Functions	22	Call barring	30
		Fixed dial numbers	31
		Call waiting	31
		Common setting	31
		Video call setting	33
		Profiles	35

Multimedia	39	Templates	53
Camera	40	Text templates	53
Video camera	41	Multimedia templates	54
Music	43	Emoticons	54
Recently played	43	Settings	54
All tracks	43	Text message	54
Artists	43	Multimedia message	55
Albums	43	Email	56
Genres	43	Videomail	57
Playlists	43	Voicemail	57
Shuffle tracks	43	Service message	57
Video playlists	44	Info. service	58
Voice recorder	44	My stuff	59
Messages	47	My images	60
Create new message	48	My sounds	61
Message	48	My videos	62
Email	49	My games & apps	63
Inbox	50	Others	63
Mailbox	51	My memory card	64
Drafts	52	Tools	65
Outbox	52	Quick menu	66
Sent items	53	Alarms	66
My folders	53		

Table of Contents


Calculator	67	Browser	75
Stopwatch.....	67	Home	76
Converter	67	Enter address	76
World time	67	Bookmarks	76
Contacts	69	RSS reader	76
Add new	70	Saved pages	76
Search	70	History	76
Speed dials	70	Settings	76
Groups	71	Profiles	76
Service dial numbers.....	71	Appearance settings	77
Own number	71	Cache	77
My business card.....	71	Cookies	77
Settings	71	Security	77
Contact list settings	71	Reset settings	77
Synchronise contact	72	Connectivity	79
Copy	72	Bluetooth.....	80
Move	72	Server sync	82
Send all contacts via Bluetooth	72	USB connection mode	82
Backup contacts	72	Network	83
Restore contacts	73	Select Network	83
Clear contacts	73	Location mode	83
Memory info.	73	Preferred lists	83
		Internet profiles.....	83


Access points	84	Date & Time	91
Streaming settings	84	Auto key lock	92
Organiser	85	Security	92
Calendar	86	Power save	93
To do	87	Language	93
Memo.....	87	Memory manager	94
Secret memo	87	Handset common memory	94
Date finder.....	87	Handset reserved memory	94
Settings	87	USIM memory	94
Calendar	87	External memory	94
Send all schedules & to do via Bluetooth	87	Primary storage setting	94
Backup calendar & to do	88	Handset information	94
Restore calendar & to do	88	Reset settings	94
Memory info.	88	Accessories.....	96
Clear all	88	Glossary	98
Settings	89	Index.....	102
Screen	90	Emergency Services and	
Screen theme	90	Safety Precautions	108
Menu style	90	Caring for your KF310.....	113
Font	90		
Backlight	90		
Handset theme	90		
Greeting message	90		

KF310 Features

Parts of the phone

Open view

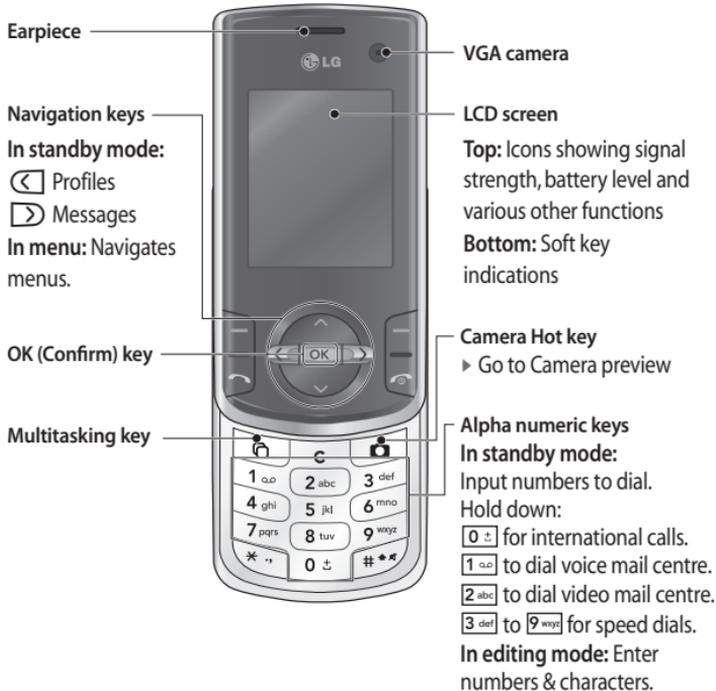

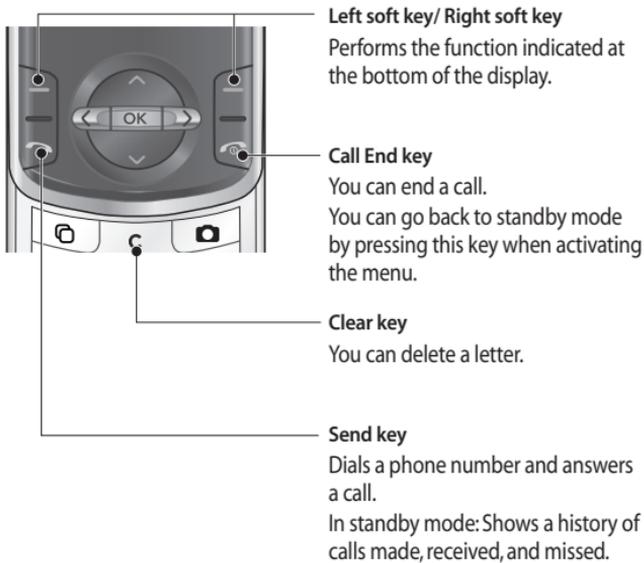

KF310 Features

Right side view



Headset/Charger/
Cable connector

Left side view




Handstrap Hole

microSD card slot

Side keys

Rear view

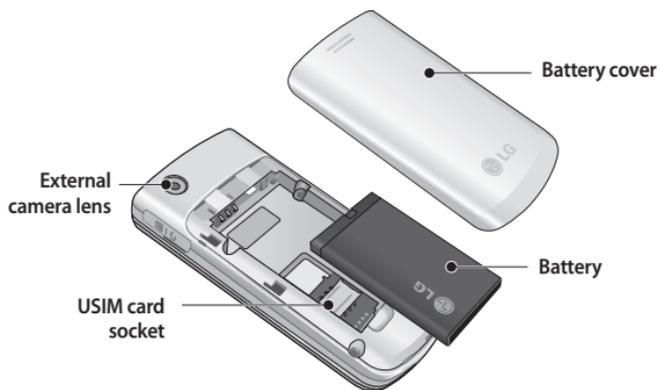

Getting Started

Installing the USIM card and battery

1. Installing the USIM card.

Your USIM card contains your phone number, service details and contacts and must be inserted into your handset. If your USIM card is removed then your handset becomes unusable (except for emergency calls) until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card. Slide the USIM card into the USIM card holder. Make sure that the USIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the USIM card, press down lightly and pull it in the reverse direction.



To insert the USIM card




To remove the USIM card

NOTE!

- The metal contact of the USIM card can easily be damaged by scratches. Pay special attention to the USIM card while handling. Follow the instructions supplied with the USIM card.
- After removing the battery, insert USIM card.

2. Installing the battery.

Slide the battery upwards until it snaps back into place.

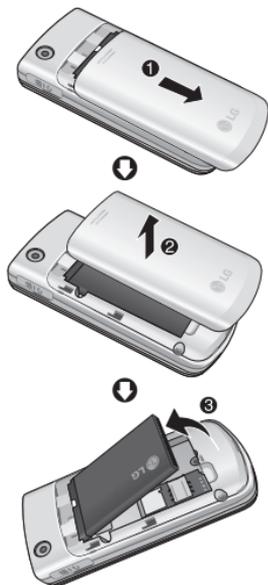

3. To remove the battery.

Turn the power off. (If the power is left on, there is a chance you could lose the stored telephone numbers and messages.)

Press and hold down the battery release button and slide the battery down.

Getting Started

Charging the Battery

Before connecting the travel adapter to the phone you must first install the battery.



- 1 With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the right side of the phone until it clicks into place.
- 2 Connect the other end of the travel adapter to the mains socket.

NOTE!

- Only use the charger included in the box.

- 3 The moving bars on the battery icon will stop after charging is complete.
- 4 Ensure the battery is fully charged before using the phone for the first time.

CAUTION!

- Do not force the connector as this may damage the phone and/or the travel adapter.
- If you use the battery pack charger when abroad, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the USIM card while charging.

WARNING!

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. This may cause a fire.

Disconnecting the charger

Disconnect the travel adapter from the phone as shown in the diagram below.



- 2 Lift the plastic cover which protects the microSD slot.



How to use a microSD memory card



<MicroSD memory card>

<How to insert a microSD memory card>

- 1 Turn the phone off. Inserting or removing the microSD when the phone is on may damage the files stored in the memory card.

- 3 Insert the memory card into the slot. The gold contacts must be kept on the back of the microSD. Don't push the microSD too much. If it doesn't go into the slot easily, you may be trying to insert it in the wrong way or there could be a foreign object in the slot.
- 4 Once inserted, push the memory card until you hear a Click, meaning that the microSD has been correctly engaged.

Getting Started



- 5 Close the plastic slot protection.
- 6 To remove the memory card, turn the phone off, open the slot protection and push the microSD to unlock it. Carefully extract the memory card.

Attention:

- Avoid using the Flash Memory Card when the battery is low.
- When writing to the card, wait for the operation to complete before removing the card.
- The card is designed to fit easily into the system one way only.
- Do not bend the card or force it into the slot.

- Do not insert any memory cards other than those made by microSD.
- If the microSD has been formatted using FAT32, format the microSD using FAT16 again.

For more information on the microSD, please refer to the memory card instruction manual.

Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu** → **Settings** → **Memory manager** → **External memory**, then press  the left soft key.

This operation should only be done when you insert the memory card for the first time. During formatting various folders will be created for different data types.

Turning Handset ON/OFF

Turning your handset on

Ensure that your USIM card is in your handset and the battery is charged. Press and hold  until the power comes on. Enter the USIM PIN code that was supplied with your USIM card if the **PIN code request** is set to **On**. After a few seconds you will be registered on the network.

Turning your handset off

Press and hold  until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

Emergency call function

The right soft key is represented by "Inactive/ Emergency call" on the screen. Press the right soft key or dial your emergency number using the number keys, and then press  to make an emergency call.

General Functions

Making and answering calls

Making a voice call

- 1 Enter the number including the full area code.
 - To delete a digit press  key.
To delete all digits press and hold  key.
- 2 Press  to make the call.
- 3 Press  to finish the call, or close the handset.

NOTE!

- To activate the speakerphone during a call, activate the touch keys and press .

Making a call from the call logs

- 1 In standby mode, press  and the latest incoming, outgoing and missed phone numbers will be displayed.
- 2 Select the desired number by using



- 3 Press  to call the number.

Making a video call

You can make and receive video calls when both you and the other person have 3G coverage. To make/answer a video call, do the following.

- 1 Input the phone number using the keypad, or select the phone number from the calls made/received lists.
 - To correct mistakes, press  briefly to delete the last number, or press and hold  to delete all numbers.
- 2 If you do not want to use the speakerphone, ensure you have the headset plugged in.
- 3 To start the video function, press the left soft key [Options] and select **Make video call**.
 - You will be notified that you will need to close other applications to make the video call.

NOTE!

- The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen.

- 4 Adjust the camera position if necessary.
- 5 Press  to finish the call, or close the handset.

Making a voice/video call from Contacts

It is easy to call anyone whose number you have stored in your Contacts.

- 1 Press  to access the contacts list.
- 2 Scroll to the contact to make a call.
- 3 Press  to make a voice call. Press the left soft key and select **Make video call** to make a video call.

- 4 Press  to finish the call.

Making international calls

- 1 Press and hold  for the international prefix. The '+' character prefixes the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press .

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.

- 1 Open the slider to answer an incoming call.

General Functions

NOTE!

- To reject an incoming call, press  or the right soft key twice.
- If you set **Answer mode** as **Press send key** (Menu 2.0.4), you can answer the call by pressing  after opening the slider.
- If the answer mode is set to Press any key, any key will answer a call except for .

- 2 End the call by closing the handset or pressing .

NOTE!

- You can answer a call while using the Contacts or other menu features.
- When the compatible headset is connected, you can also answer a call using the headset key, as well as using the phone. To reject an incoming call, press .
- You can mute the ringtone when a call comes in by pressing and holding the volume right soft key.

Shortcut to activate vibrate mode

You can activate the vibrate only mode by pressing and holding down  after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving close to a window may improve reception.

Entering text

You can enter alphanumeric characters using the keypad. For example, storing names in Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

Changing the text input mode

- 1 When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.

2 If T9 is on, you can change the mode to T9Abc, T9ABC, 123, T9abc by pressing **[#*#]**. When T9 is off, the mode will be changed to Abc, ABC, 123, abc.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

Using the ABC Mode

Use **[2 abc]** to **[9 wxyz]** to enter your text.

1 Press the key labelled with the required letter:

- Once for the first letter.
- Twice for the second letter.
- And so on.

2 To insert a space, press **[0 =]** once. To delete letters, press **[C]**.

Refer to the following table for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower case
1 .o	.,?!' " 1 - () @ / : _	.,?!' " 1 - () @ / : _
2 abc	A B C 2 À Á Â Ã Ç	a b c 2 à á â ã ç
3 def	D E F 3 É Ê Ë Ì	d e f 3 é ê ë è
4 ghi	G H I 4 Î	g h i 4 î
5 jkl	J K L 5	j k l 5
6 mno	M N O 6 Ñ Ò Ó Ç	m n o 6 ñ ò ó ç
7 pqrs	P Q R S 7	p q r s 7
8 tuv	T U V 8 Ù	t u v 8 ù
9 wxyz	W X Y Z 9 Ŵ Ŷ	w x y z 9 ŵ ŷ
0 =	Space, 0	Space, 0

NOTE!

- The characters assigned to the keys and their order of appearance depends on the language selected using the option Input method. The table above provides the characters set for English language.

General Functions

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the symbol mode


The symbol mode enables you to enter various symbols or special characters.

To enter a symbol, select **Options** → **Insert** → **Symbols**. Use the navigation and numeric keys to select the desired symbol and press **OK**.

Getting to know your KF310

The icon indicator bar

The icon indicator bar shows what operations are currently taking place, it also displays the status of the battery and signal strength. This appears through all activities. The table below gives a brief explanation of the icons and their function.

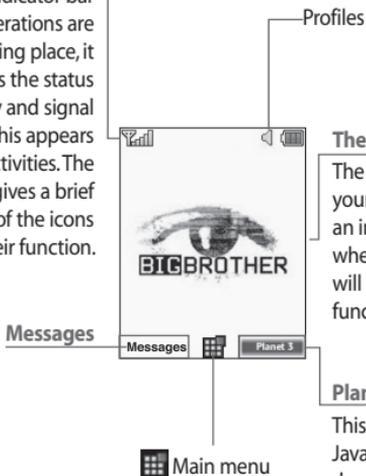

Profiles

The home screen

The central window of your start screen displays an image of your choice, when in use, this screen will display all of your functions and services.

Messages

Messages

Planet 3

Planet 3

This Handset supports Java™ so that you can download games from Planet 3, and play them on your handset.

Overview of Menu Functions

You can launch a menu by pressing **[OK]** in the idle screen. Move to the desired item and press **[OK]** to go into the sub menu.

From the main menu you can also go into a submenu by directly pressing the corresponding numeric key as follows. The main menu consists of the following top menus and sub menus.

1. Games & Apps	3. Profiles	5. Messages
1.1 My games & apps	3.1 Normal	5.1 Create new message
1.2 Settings	3.2 Silent	5.2 Inbox
2. Calling	3.3 Outdoor	5.3 Mailbox
2.1 Call logs	3.4 Flight mode	5.4 Drafts
2.2 Make video call	3.5 Customised 1	5.5 Outbox
2.3 Call durations	3.6 Customised 2	5.6 Sent items
2.4 Data volume	3.7 Customised 3	5.7 My folders
2.5 Call costs	4. Multimedia	5.8 Templates
2.6 Call divert	4.1 Camera	5.9 Emoticons
2.7 Call barring	4.2 Video camera	5.0 Settings
2.8 Fixed dial numbers	4.3 Music	6. My stuff
2.9 Call waiting	4.4 Video playlists	6.1 My images
2.0 Common settings	4.5 Voice recorder	6.2 My sounds
2.* Video call setting		6.3 My videos

6. My stuff
6.4 My games & apps
6.5 Others
6.6 My memory card
7. Tools
7.1 Quick menu
7.2 Alarms
7.3 Calculator
7.4 Stopwatch
7.5 Converter
7.6 World time
8. Contacts
8.1 Add new
8.2 Search
8.3 Speed dials
8.4 Groups
8.5 Service dial numbers
8.6 Own number
8.7 My business card
8.8 Settings

9. Browser
9.1 Home
9.2 Enter address
9.3 Bookmarks
9.4 RSS reader
9.5 Saved pages
9.6 History
9.7 Settings
*. Connectivity
*.1 Bluetooth
*.2 Server sync
*.3 USB connection mode
*.4 Network
*.5 Internet profiles
*.6 Access points
*.7 Streaming setting

0. Organiser
0.1 Calendar
0.2 To do
0.3 Memo
0.4 Secret memo
0.5 Date finder
0.6 Settings
#. Settings
#.1 Screen
#.2 Date & Time
#.3. Auto key lock
#.4 Security
#.5 Power save
#.6 Language
#.7 Memory manager
#.8 Handset information
#.9 Reset settings



1 Games & Apps

1. Press the **OK** (Menu) key.
2. Press the **1** key for Games & Apps.

Games & Apps

My games & apps Menu 1.1

You can easily download games and other applications in this menu. It may have two folders, no folders at all, or Games and Applications. The default folder can be dependent on the operator/country. Each folder has an embedded link for downloading games or applications. Please note that additional costs may be incurred when using online services. You can create a folder using the left soft key [Options].

Settings Menu 1.2

- **Profiles:** You can see profile and add new profile.
- **Certificates list:** You can see the certification list for using java application

2 Calling

1. Press the  (Menu) key.
2. Press the  key for Calling.



Calling

Call logs

Menu 2.1

All calls (Menu 2.1.1)

Allows you to view the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in Contacts.

Dialled calls (Menu 2.1.2)

Allows you to view dialled call records, make a call, send a message, and save the number in Contacts.

Received calls (Menu 2.1.3)

Allows you to view received call records, make a call, send a message, and save the number in Contacts.

Missed calls (Menu 2.1.4)

Allows you to view missed call records, make a call, send a message, and save the number in Contacts.

Make video call

Menu 2.2

You can make a video phone call in this menu. For details, refer to page 16 to 17.

Call durations

Menu 2.3

You can view call time by types. Press the left soft key [Options] to choose either partial initialisation or entire initialisation. Initialization will require your Security code.

Data volume

Menu 2.4

Allows you to check the sent, received and all data volume transferred. Press the left soft key to choose entire initialization , or selected volume type initialization.

Initialisation will require your Security code.

Call costs

Menu 2.5

- 1** This function displays the call costs of the Last call and All calls.
- 2** To edit, press the centre key [Edit] and enter the PIN2 code.
- 3** You can select either Units or Currency in Set call cost. Depending on your settings, USIM and operator, the call cost is displayed during a call.
- 4** In the Set limit configuration, select On to configure the cost limit. When a cost limit is configured, and the call costs reach the limit, making a call will not be allowed.

Call divert

Menu 2.6

Call divert menus for voice and video calls are provided.

1 When no call diverts exist

You can input the number to divert a call directly or search for it in phonebook. If you press [Divert], the phone will send the request to your service provider after entering the

number. While waiting for the result from the network, a Requesting message and animation appears.

2 When call diverts are already set

View a list of the call diverts already set up. While waiting for the result from the network, a Requesting message and animation appears.

3 Option menu

After activating All voice calls menu, select the Options menu at the bottom of the menus to display the Deactivate, Deactivate all, View status and clear list menus.

The View status menu shows the settings on the network. If you select this menu, Requesting message and animation appear. Then the network settings are displayed when the information is received from the network. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Clear list menu will delete all divert number list.

Calling

Call barring

Menu 2.7

Call barring menus for Voice and Video calls are provided.

The menu consists of Voice calls, Video calls and Deactivate all. The Voice calls and Video calls menus have the following submenus.

The Call barring menu consists of All outgoing, Outgoing international, Outgoing international calls except home country, All incoming and Incoming when abroad submenus.

The All outgoing menu bars dialling all outgoing calls, the Outgoing international menu bars dialling outgoing international calls, and the Outgoing international calls except home country menu bars dialling outgoing international calls except for the Home PLMN country. All incoming rejects all incoming calls and the Incoming when abroad menu rejects incoming calls when roaming.

Voice and Video calls

- 1** If you want to activate barring service, press ok Oand then input the barring password .The Phone will request the network to activate barring service and receive the result of the operation. After receive the result from the network, the result is displayed.
- 2** When the Options menu is selected, it activates the Outgoing calls menu. Select the Options menu from the soft menus on the lowest menu. Then Deactivate, Deactivate all, View status and Change password menus appear. The Deactivate menu deactivates the barring service after the user's Barring password is entered. The Deactivate all menu deactivates all barring services configured in the network after the user's Barring password has been entered.

The View status menu enables users to view the current network configuration. Selecting View status menu displays the Requesting message with animation

and the result of the operation when the network answers. Change password menu enables users to change the current barring password.

Deactivate all

You can select to deactivate all or not.

Fixed dial numbers

Menu 2.8

■ Turn on/ Turn off

- **On:** Select whether to activate FDN or not. PIN2 authentication is required.

- **Off:** Select whether to activate FDN or not. PIN2 authentication is required.

- **FDN list:** Displays the current FDN list. You can edit, add, or delete fixed dial numbers. PIN2 authentication is required to edit, add, or delete the list. And the configuration information is saved on the USIM. The information saved on the USIM is used when FDN restricts outgoing calls.

Call waiting

Menu 2.9

Activates waiting service. Selecting this item, displays Requesting message and animation. When the network answers, the result of the operation is displayed.

Common setting

Menu 2.0

Call reject

You can set whether to reject incoming calls.

Send my number

- **Set by network:** Configures with the default settings determined by the service provider.

- **On:** Configures to send my phone number when making an outgoing call.

- **Off:** Configures not to send my phone number when making an outgoing call.

Calling

Auto redial

Allows you to set the auto redial function when a call attempt has failed.

Answer mode

Allows you to set the answering method. You can choose between **Press send key**, **Slide up** and **Press any key**.

Minute minder

Determines whether to sound a 1 minute tone every 1 minute when you are on the phone.

BT answer mode

- **Hands-free:** You can answer a call using the Bluetooth headset, when the Bluetooth is connected.
- **Handset:** If you press  on the handset to answer a call, you can talk on the handset. If you press the Bluetooth headset key to answer a call, you can talk using the Bluetooth headset. This is the initial answer mode selection. And while talking, you can switch from handset to headset or from headset to handset.

Save new number

In this menu, you can save the phone number when ending a call if the phone number is not saved in a phonebook.

Slide close setting

When the slide is down, you can set the call is ended or not.

Select line (SIM dependent)

Depending on the support or not of 2 line services on your SIM card, you can select the line you wants.

Video call setting Menu 2.*

You can set the screen display when making /receiving a video call.

- **Use private picture:** Determine whether to show the private image or not.
- **Select private image:** Select the still image to be displayed.
- **Mirror:** Select to activate the mirror effect or not.
 - **On:** Displays the image flipped side to side.
 - **Off:** Displays the image as it is.



3 Profiles

1. Press the **OK** (Menu) key.
2. Press the **3 def** key for Profiles.

Profiles

The profiles menu allows you to personalise and set call tones, message tones, and videophone event tones.

The General and Loud profiles are preset by the manufacturer, but may be personalised.

The Silent and Vibration profiles are preset and CANNOT be personalised by the User.

User define menus 1,2, and 3 are completely available to users for all their needs.

1. Normal
2. Silent
3. Outdoor
4. Flight mode
5. Customised 1
6. Customised 2
7. Customised 3

The profiles may be personalised in the following menus:

- **Alert by:** You can personalise the type of signal made by the Videophone, choosing between Ring, Vibration, Silent, Ring & Vibration, Ring after vibration and Max Ring & Vibration.
- **Voice ringtone:** You can select a file from among your own personal files or from the default files, to be played by the videophone when receiving a voice call.
- **Video ringtone:** You can select a file from among your own personal files or from the default files, to be played by the videophone when receiving a video call.
- **Volume:** You can set the ring tone volume, choosing from 7 available levels.
- **Message alert:** You can set how often the videophone is to inform you of a received message until it is read.

- **Message tone:** You can select a file from among your own personal files or from the default files, to be played by the videophone upon receiving a message.
- **Key tone:** You can set the effect to be played when pressing the keys.
- **Key tone volume:** You can set the volume of the chosen effect, choosing from 7 available levels.
- **Slide tone:** You can select one of the available files, to be played by the videophone when slide open.
- **Confirmation tone:** You can set the confirmation tone to be played by the videophone to confirm actions.
- **Start-up sound:** You can set the effect to be played when the videophone is switched on.
- **Select start-up sound:** You can select which file will be played when the videophone is switched on.
- **Shut down sound:** You can set the effect to be played when the videophone is switched off.
- **Select shut down sound:** You can select which file will be played when the videophone is switched off.

4

Multimedia

1. Press the **OK** (Menu) key.
2. Press the **4 gh** key for Multimedia.



Multimedia

Camera

Menu 4.1

This application enables you to take a still picture. You can take a picture in the size you want, and use it for the address book photo, home screen and other more general purposes. Once taken, the picture can be sent by Message, Email or Bluetooth .

1 Press the left soft key to access **Options** and set the desired environment as follows.

- Move between the options menus with  / .
- Select the desired value with  /  and confirm the selection with .

Menu	Description
Go to	The Pictures folder is launched and displays existing pictures as thumbnails. You can view pictures by pressing  . You can also send the selected picture to another party via Message, Email, or Bluetooth.
Size	1600x1200, 1280x960, 640x480, 320x240, Wallpaper, 176x144, Contacts
Quality	Super fine, Fine, Standard
Burst shot	One, Three, Six, Nine (Note: Available Burst shot depends on the size.)
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen.
White balance	You can adjust the tone of the background photo according to the weather: Auto, Daylight, Cloudy, Illuminate, Indoors
Night mode	You can take better pictures at night by selecting On.

Menu	Description
Frame Shot	You can apply one of 10 frame effects when taking a picture. (available only in case of Wallpaper size)
Timer	You can delay the camera shutter time. None, 3 secs, 5 secs, 10 secs.  is shown when the timer is activated.
Effect	None, Black & White, Negative, Sepia
Sound	Select the desired shutter sound.
Memory	Select the desired memory in use, either in use Handset or External.
Mirror	You can activate the mirror effect by selecting On.
Swap cam	You can switch the camera to activate either the Internal or the External camera.
Preview screen	Select the desired preview method, either Full image or Full screen.

2 After finishing all the settings, press the right soft key [Close].

3 Focus the camera on what you want to take and press **[OK]**.

4 Press **[OK]** to save the picture. It is saved in the Pictures folder of My Files.

Video camera Menu 4.2

This application enables you to record a video clip. You can play and watch a saved video file in this menu. Once recorded, a video clip can be sent by Message, Email or Bluetooth.

1 Press the left soft key to access Options and set the desired environment as follows.

- Move between the options menus with **[←]**/**[→]**.
- Select the desired value with **[↑]**/**[↓]** and confirm the selection with **[OK]**.

Multimedia

Menu	Description
Go to	The Videos folder is launched and displays existing videos as thumbnails. You can view videos by pressing [OK] . You can also send the selected video to another party via Message, Email or Bluetooth.
Size	176x144, 128x96
Quality	Super fine, Fine, Standard
Brightness	From -2.0 to 2.0 at 0.5 intervals. The higher the level, the brighter the screen.
White balance	You can adjust the tone of the background video according to the weather. Auto, Daylight, Cloudy, Illuminate, Indoors

Menu	Description
Night mode	You can take better shots at night by selecting On.
Effect	None, Black & White, Negative, Sepia
Duration	Select the desired recording time. MMS, 30 sec, 1 mins, 2 mins, 5 mins, 60 mins.
Memory	Select the desired memory, either Handset or External.
Mirror	You can activate the mirror effect by selecting On.
Voice	Decide whether to record the sound or not.
Swap cam	You can switch the camera to activate either the Internal or the External.

2 After finishing all the settings, press the right soft key [Close].

3 Focus the camera on what to record and press **[OK]** to start recording. And press **[OK]** to stop recording.

- You can pause the recording by pressing the left soft key [Pause].

4 Press **[OK]** to save the video clip. It is saved in the Videos folder of My Files.

Music

Menu 4.3

Recently played (Menu 4.3.1)

You can replay the music which you recently listened to in “My music”.

All tracks (Menu 4.3.2)

You can view all the music files stored in the phone/external memory.

Artists (Menu 4.3.3)

You can view and play music sorted by Artists.

Albums (Menu 4.3.4)

You can view and play music sorted by Albums.

Genres (Menu 4.3.5)

You can view and play music sorted by Genres.

Playlists (Menu 4.3.6)

You can create your own playlists by choosing tracks from the All tracks menu list.

Shuffle tracks (Menu 4.3.7)

If you want to play the music continuously and randomly, select this option.

Multimedia

Video playlists

Menu 4.4

All of your videos are stored in the Video playlists menu.

- 1 Press **[OK]** then **[4 gh]**.
- 2 Select **Video playlists**, then **All videos**.
A list of all your video clips will appear.
- 3 Select **Play** to watch a video.
You can manage your video clips by creating playlists.
- 1 Press **[OK]** then **[4 gh]**.
- 2 Select **Video playlists**, then **Playlists**.
- 3 Select **Add**, enter the playlist name and select **Save**.
- 4 All of your videos will show in a list. Select the ones you want in the playlist a tick will appear next to their name.
- 5 Select **Done**.

Voice recorder

Menu 4.5

- 1 Press the left soft key [Option] to display the option pop up menu before recording.
- 2 Move to the desired menu item using / and press **[OK]**.
 - **Duration:** You can set the recording duration to MMS msg. size, 30 secs, or 1 min.
 - **Quality:** You can select a recording quality from Super fine, Fine, and Normal.
 - **Memory in use:** Choose whether to save your voice recordings to the Handset memory or to the External memory.
 - **Go to my sounds:** Opens the Voice recordings folder in Sounds.
- 3 Pressing **[OK]** starts recording. When a recording is started, the recording time appears on the LCD. To cancel the recording, press the Back.

4 When you finish the recording, press **OK** to exit. The recorded file is automatically saved in the Voice recordings folder in My files. If you press **OK** again, you can start recording new voice.

5 Press the left soft key to select the various options after the voice recording.

6 Select the desired menu using / and press **OK**.

- **Play:** You can play the voice.
- **Send:** To send the recorded file choose one from Message, Email and Bluetooth using / and press **OK**.
- **File:** You can change the name of a file and view the file information.
- **Delete:** Select this menu to delete a recorded file.
- **Use as:** You can set the recorded file as a Voice Ringtone or Video Ringtone.

■ **Go to my sounds:** Opens the Voice recordings folder in My Files.

7 Press the right soft key to close the sub-menu pop-up window.



5

Messages

1. Press the **OK** (Menu) key.
2. Press the **5** key for Messages.

Messages

Create new message

Menu 5.1

Message (Menu 5.1.1)

You can write and edit a message containing a combination of text, image, video and audio.

1 Enter your message in the Message field.

Option menus in Message field

■ **Insert:** You can perform the following actions:

1 Image: You can insert an image. (Existing image/Take picture)

2 Video: You can insert a video clip. (One video clip per slide)

3 Sound: You can insert a sound file. (One sound per slide)

4 Symbols: You can insert symbols. After entering the corresponding number keys, press **[OK]**.

5 Template: You can insert a text template saved on the phone. After selecting a template, press **[OK]**. The selected template is inserted into the Message window.

6 Emoticon: You can insert an emoticon on writing a message.

7 Name & Number: After searching the name and the number in phonebook, you can insert the entry.

8 New slide: Select this to add a new slide.

9 Subject: Select this to insert a subject.

■ **Save to drafts:** Select this to save the message to drafts.

■ **Input method:** Select the desired dictionary mode.

■ **Writing language:** You can select the language for writing a message.

■ **Add to dictionary:** You can add a word to the dictionary.

- 2 Press the right soft key [Back] to exit the menu or go to previous menu after setting submenus.
- 3 Press the center key [Send] to insert recipients address. After filling at least one recipient fields, press the confirmation key [Send] to send the message. The message will automatically be saved in the Sent Items folder. If the message has not been sent, it will remain in the Outbox with a failed status.

Email (Menu 5.1.2)

To send/receive an Email, you should set up the Email account.

- 1 Enter the Email addresses of the recipients in the To, Cc, Bcc fields. You can search the Contacts by pressing **OK**.

NOTE!

- Enter the reference Email address to forward the Email in Cc(Carbon copy) field.
 - Enter a hidden reference Email address to forward the Email without forwarding information in Bcc(Blind Carbon Copy) field.
 - Only valid Email addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (BCC) fields. When an Email address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To and Cc address fields and 10 recipients for the BCC address field.
- 2 Move the cursor to the Subject field and key in the subject.
 - 3 You can enter the message contents by moving the cursor to the Message field.
 - 4 Use the following functions by using the left soft key [Options].

Messages

- **Insert:** Select this menu to insert special characters, templates, and contacts. It is also possible to attach multimedia files (pictures, videos and sounds).
- **Search contacts:** Select this menu to insert Email addresses saved in Contacts. (Only shown in Option menu when cursor is located in To/Cc/Bcc fields.)
- **Recently used:** You can use the latest Email address you sent.
- **Save to drafts:** Select this menu to save the message in Drafts.
- **View attachment:** Shows the attached files. (This item is only available when some files have been attached.)
- **Remove:** Deletes the attachment file. (This item is only available when the files are already attached.)
- **Input method:** Select the desired dictionary mode.
- **Add to dictionary:** You can add a new word to the dictionary.

- **Writing language:** You can change the writing language.
 - **Set mail priority:** You can configure the priority of the Email you wish to send.
- 5 When you have finished writing an Email, press **OK** to send the Email.

Inbox

Menu 5.2

- 1 You can view received messages. Select a message and then press **OK** to view the message.
- 2 You can view the previous or next message by using **<** / **>**.
- 3 To view a multimedia message (Notification), select Retrieve in the message notification view screen. The file is then transmitted, and you can view the file when the transmission is complete.

NOTE!

- Not supported for multimedia message (Notification) and WAP push messages.

Mailbox

Menu 5.3

- 1 Select an Email account and then press **OK** to view the received Email list.
- 2 In Email list, you can use the following functions by using the left soft key [Options].
 - **Reply:** Creates a reply to the selected Email.
 - **Forward:** Forwards the selected Email message to others.
 - **Retrieve (POP3 only):** Retrieves new Email messages.
 - **Copy to (IMAP only):** Copies the selected email.
 - **Search:** Searches for the Email you want to find.
 - **Delete:** Deletes the Email.
 - **Delete from server (POP3 only):** Deletes the message or Email from server.
 - **Message synchronisation (IMAP only):** Synchronises Email to retrieve Email server.
 - **Create new message:** Creates a Message, Email or Voice message.
 - **Mark/Unmark:** Use mark/unmark option for multiple deletion.
 - **Set as read/unread:** You can set the selected Email to read or unread.
 - **Sort by:** You can sort Email according to the conditions.
 - **Expunge (IMAP only):** Removes the selected Email data.
 - **Message info.:** Brief information on the message including size, type, date, time and filenames.

Messages

Drafts

Menu 5.4

You can view saved messages. Select a message and then press **[OK]** to edit the message.

You can use the following functions by using the left soft key [Options].

- **Send:** Sends the selected message.
- **Delete:** Deletes the selected message.
- **Create new message:** You can write a new message or an Email.
- **Mark/Unmark:** You can select one or more messages for multiple deletion.
- **Filter:** Displays messages by desired message types.
- **Message info.:** You can check the message type, date and time.

Outbox

Menu 5.5

The Outbox is a temporary storage place for messages waiting to be sent. Failed messages are also placed in Outbox. For example, Emails will be placed in Outbox if the Email account is not correctly configured.

- 1 Select a message.
- 2 You can use the following functions by using the left soft key [Options].

[For sending / waiting messages]

- **Create new message:** You can write a new message or an Email.
- **Cancel sending:** You can stop sending/waiting status.
- **Message info.:** Message information: You can check the message type, date, time, size and where it's saved.

[For a failed message]

- **Resend:** Resends the selected message.
- **Delete:** Deletes the current message.

- **Save to drafts:** You can send the message to drafts.
- **Create new message:** You can write a new message or an Email.
- **Message info.:** You can check the message type, date and time.

Sent items Menu 5.6

Shows the messages you sent (Message/Email).

[Options]

- **Reply to:** Creates a reply to sender or all recipients of the selected message.
- **Forward:** Forwards the selected message.
- **Edit:** You can edit the selected message.
- **Delete:** Deletes the selected message.
- **Create new message:** You can write a new message.
- **Mark/Unmark:** You can select one or more messages for multiple deletion.

- **Filter:** Displays messages by desired message types.
- **Message info.:** You can check the message type, date and time.

My folders Menu 5.7

You can move messages existed in Inbox or Sent messages into My folders, and then you can move those messages existed in My folders into the original message box.

Templates Menu 5.8

Text templates (Menu 5.8.1)

You can add, edit, and delete frequently used useful phrases using the left soft key [Options].

NOTE!

- Depending on your service provider, useful phrases are saved as a default.

Messages

Multimedia templates

(Menu 5.8.2)

You can create, edit and view available templates when creating multimedia messages. Five types of template (Birthday, Greeting, Holiday, Thanks, Sorry) are saved by default.

Emoticons

Menu 5.9

You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message. If you press confirmation key, you can view the icon.

Settings

Menu 5.0

Text message (Menu 5.0.1)

You can configure text message related options.

- 1 Text message centre:** Input the address of the Text message centre.
- 2 Delivery report:** By enabling this option, you can verify whether your message has been sent successfully.

3 Validity period: This network service allows you to set how long your text messages will be stored at the message centre.

4 Message types: Text, Voice, Fax, X.400, Email

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

5 Character encoding: Auto/ Default alphabet /Unicode.

- **Auto:** Message with single byte character is normally encoded in Default alphabet(GSM7). Message with double-byte character is automatically encoded in unicode(UCS2).
- **Default alphabet:** Message with even double byte character is encoded in single byte. Please note that double byte characters with accent may be converted into single byte character without accent.

- **Unicode:** Message is encoded in double byte. Please note that you may be charged double.

6 Send long text as: Select a long text message as Multiple SMS or MMS.

Multimedia message

(Menu 5.0.2)

You can configure Multimedia message related options.

1 Retrieval mode: You can set the retrieval mode using Home network and Roaming network respectively. If you select **Automatic**, you will receive multimedia messages automatically. If you select **Manual**, you will only receive a notification message in the inbox and then you can decide whether to download multimedia messages or not.

2 Delivery report: Allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending a delivery confirmation mail to a sender.

- **Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.

■ **Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.

3 Read reply: Allows you to determine whether to request a read confirmation mail to a recipient, and whether to allow sending a read confirmation mail to a sender.

- **Request reply:** Determines whether to request a read confirmation mail for a Multimedia message.

■ **Allow reply:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.

4 Priority: You can select the priority level of the messages (Low, Normal and High).

Messages

5 Validity period: Allows you to configure the term of validity for a message when transmitting a multimedia message. The message would be saved in the multimedia message server only for the configured term.

6 Slide duration: Allows you to configure the duration of each page when writing a message.

7 Creation mode: Allows you to configure the message mode.

8 Delivery time: Configures the delivery time of message to the recipient. The Multimedia message centre will deliver the message after the delivery time.

9 Multimedia msg. centre: The details for the Multimedia gateway are pre-loaded onto your handset and should not be changed. If you change or delete these by mistake contact 3 customer services for support. You can add or edit the profile of multimedia message except the default profile.

10 Allows you to configure network information such as the MMSC and the Internet profile, to send a multimedia message.

Email (Menu 5.0.3)

You can configure settings for receiving and transmitting emails.

1 Email accounts: You can create or configure an Email account including the Email server and user ID.

2 Allow reply Email: Determines whether to allow sending a read confirmation mail for a read confirmation mail request.

3 Request reply Email: Determines whether to request a read confirmation mail.

4 Retrieve interval: You can configure Retrieve interval to retrieve emails automatically from the incoming mail server. Please note that additional charges may be incurred using the Retrieve interval feature.

5 Include message in Fwd. & Reply:

Determines whether to include the original message when you forward the message or reply to it.

6 Include attachment: Determines whether to include the attachment file when you forward the message.

7 Auto Retrieval in Roaming: Retrieves Email account automatically when you move in roaming area.

8 New email notification: Receives the notification information when arriving new Email.

9 Signature: You can configure a text signature to be attached to the end of an Email. The configured signature text is automatically or manually attached to the end of the Email when it is sent.

10 Priority: You can select the priority level of Emails (Low, Normal and High).

Videomail (Menu 5.0.4)

This menu allows you to get the video mail if this feature is supported by the network service provider. Please check with your network service provider for details of their service in order to configure the handset accordingly.

Voicemail (Menu 5.0.5)

This menu allows you to get the voice mail if this feature is supported by the network service provider. Please check with your network service provider for details of their service in order to configure the handset accordingly.

Service message (Menu 5.0.6)

You can configure the option settings such as Push(SI/SL) messages.

- **Service message:** If you set On, all service messages will be received.
- **Service security:** You can manipulate the overall receipt options related to Push (SI/SL) messages.

Messages

Info. service (Menu 5.0.7)

- **Cell broadcast:** You can set the reception status.
- **Channels:** You can add or modify the channels.
- **Languages:** You can select the language you want by pressing **[OK]**. Then, the info service message will be shown in the language that you have selected.

6 My stuff

1. Press the  (Menu) key.
2. Press the  key for My stuff.



My stuff

My images

Menu 6.1

The Pictures folder consists of embedded links for downloading pictures through the Internet and Default images.

Pictures taken using the camera are stored in the Pictures folder and you can create new folders to manage them.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- **Send:** You can send the selected image via Message, Email or Bluetooth.
- **Use as**
 - **Wallpaper:** You can set an image as the home screen theme.
 - **Contacts image:** Assign a picture to a contact. You will see this picture when they are calling or you are dialling them.
 - **Start-up:** You can set an image as the start up screen theme.
 - **Shut down:** You can set an image as the shut down image.

- **Move:** Enables the file to be moved to another folder.
- **Copy:** Copies the file to another folder.
- **Delete:** Deletes the selected image.
- **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- **File**
 - **Rename:** You can rename the image.
 - **Edit:** Enables the image to be edited.
 - **File info.:** Shows information about the selected image file.

NOTE!

- The edit menu is not displayed in the default images folder.
- Move outside the grey box - this is a separate option.

- **Create new folder:** You can create a new folder within the folder currently selected.
- **Slide show:** You can view the images as a slide show.

- **Sort by:** You can sort the files by date, file type or name.
- **List view/Grid view:** You can view the images as a List view or a Grid view.
- **Memory manager:** You can view the memory status (handset or external memory card).

My sounds

Menu 6.2

The Sounds folder consists of embedded links for downloading ringtones and music as well as folders containing the Default sounds and Voice recordings. Here you can manage, send or set sounds as ringtones.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- **Send:** You can send the selected sound via Message, Email or Bluetooth.
- **Use as**
 - **Voice ringtone:** You can set the sound file as a ringtone for incoming calls.
 - **Video ringtone:** You can set the sound file as a ringtone for incoming video calls.
 - **Message tone:** You can set the sound file as a new message alert.
 - **Start-up:** You can set the sound file as your start up tone.
 - **Shut down:** You can set the sound file as your shut down tone.
- **Move:** Enables the file to be moved to another folder.
- **Copy:** Enables the file to be copied to another folder.
- **Delete:** Deletes the selected audio file.
- **Mark/Unmark:** You can mark or unmark the selected file.
- **File**
 - **Rename:** You can rename the audio file.
 - **File info.:** Shows information about the selected audio file.
- **Create new folder:** You can create a new folder within the folder currently selected.

My stuff

- **Sort by:** You can sort the files by date, file type or name.
- **Memory manager:** You can view the memory status (handset or external memory card).

My videos

Menu 6.3

Here you can manage or send downloaded or captured videos clips.

If you press , you can activate the video file.

The following are available using the left soft key [Options] in the Video list.

- **Send:** You can send the selected video clip via Message, Email or Bluetooth.
- **Use as:** You can set the video file as voice ringtone or video ringtone.
- **Move:** Moves the file into handset memory or external memory.
- **Copy:** Copies the file in handset memory or external memory.
- **Delete:** Deletes the selected video.

- **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.

■ File

- **Rename:** You can rename the video.
- **File info.:** Shows information on the selected video file.

- **Create new folder:** You can create a new folder.

- **Sort by:** You can sort files by name, date, or file type.

- **List view/Grid view:** You can view the images as a List view or Grid view.

- **Memory manager:** Displays the memory status (handset or external memory card).

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the ///. Select a desired video and select Play to view the recorded video.

- **Landscape view:** You can view the video in wide view mode.

NOTE!

- You can also view the video in wide view mode by pressing **[**]****.

- **Mute/Unmute:** Switch the sound on/off.
- **Capture:** You can save what is on the paused screen as an image file (only possible in Pause mode).
- **Repeat:** You can set the repeat option (Off/One/All).
- **File info.:** You can check information on files being played.
- **Send:** You can send the video via Message, Email or Bluetooth.
- **Delete:** Deletes the selected video.
- **Use as:** You can set the video file as a voice ringtone or video ringtone. This menu will change and is dependent upon the type of file selected.

My games & apps Menu 6.4

You can easily download games and other applications in this menu. It may have two folders, no folders at all, or Games and Applications. The default folder can be dependent on the operator/country. Each folder has an embedded link for downloading games or applications. Please note that additional cost may be incurred when using online services. You can create a folder using the left soft key [Options].

Others Menu 6.5

Other files except pictures, sounds, videos, games & applications are stored in this folder.


My memory card Menu 6.6

If you purchase an optional external microSD memory card, you can manage more content. Refer to the section how to use a microSD memory card on page 19 and 20 to learn how to insert and remove the memory card.

You can manage content as you do on your phone.

7 Tools

1. Press the **OK** (Menu) key.
2. Press the **7** pages key for Tools.

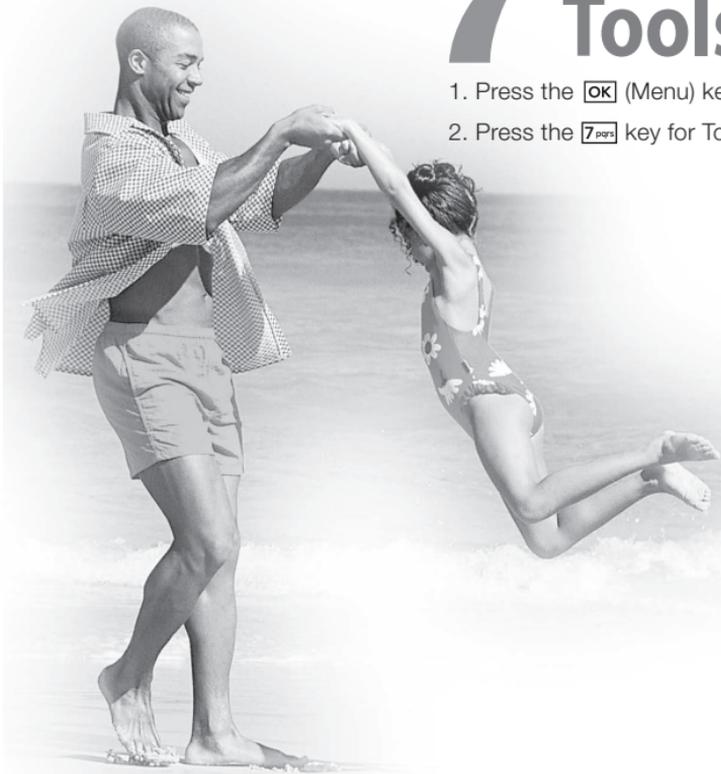

Tools

Quick menu

Menu 7.1

You can specify functions to save in the Quick menu. If you save the functions frequently used in the Quick menu, you can quickly start the functions simply by pressing key.

Alarms

Menu 7.2

If you set the alarm, the  appears on the indicator bar. The specified alarm sounds at the scheduled time.

Press **[OK]** to stop the alarm, and the alarm is released. Press the left soft key **[Snooze]** and choose the snooze interval. The alarm sound stops and resumes after the selected Snooze duration. You can configure up to 5 alarms.

- 1 Select your desired alarm to configure in the alarm list. If there is no alarm, press the left soft key **[Add]** to add a new alarm.
- 2 **Set/Cancel alarm:** Set or cancel the alarm using the options for specifying whether the alarm is on or by choosing the alarm time.

3 **Input alarm time:** Input your desired alarm time by specifying Hour and Minute. Choose either 'AM' or 'PM' which is visible if 12 hour format is specified for the phone.

4 **Select repeat mode:** Select the desired repeat mode using **[<]/[>]** or select the desired one from the list by pressing left soft key **[List]**.

5 **Select bell:** Select the bell to ring at the alarm time opening the list by pressing left soft key **[Edit]**.

6 **nput memo:** Input alarm name.

7 **Snooze:** You can set the snooze duration for the alarm.

8 When you have finished setting the alarm, press the centre key **[Save]**.

NOTE!

- The alarm will go on even when the phone is switched off.

Calculator

Menu 7.3

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions. (sin, cos, tan, log, ln, exp, sqrt, deg, rad)

Stopwatch

Menu 7.4

This menu allows you to record the elapsed time of an event.

Converter

Menu 7.5

Using this menu, users can convert Currency, Surface, Length, Weight, Temperature, Volume and Velocity.

World time

Menu 7.6

The World time function provides time information on major cities worldwide.

Contacts 8

1. Press the **OK** (Menu) key.
2. Press the **8** key for Contacts.



Contacts

This menu allows you to save and manage contact address information. The Contacts functions provide functions to add a new address or search saved contact addresses by name, phone number and group information.

Add new

Menu 8.1

You can register a new contact address. You can enter the name, different phone numbers and Email addresses of a new contact. You can also assign the contact to groups, include an image or avatar, assign a specific ringtone and even enter a memo for the contact.

Other available fields include Home page URL, Home address, Company name, Job title and company address.

You can enter and manage contact addresses depending on the memory usage.

Search

Menu 8.2

Performs the contact address search function. The search operation is performed based on a first name as a default. The current search method and results found are displayed in the Search window. You can make a phone call or send a message to the selected phone number. A Contacts search can be performed based on the phone number or group information.

NOTE!

- In Settings menu, the search operation can be performed based on the last name.

Speed dials

Menu 8.3

Using this menu you can manage speed dials. Speed dials are configured between 2-9. You can register speed dials for a specific contact address up to 5 different numbers, and a contact address may have multiple speed dials.

Groups

Menu 8.4

Using this menu you can manage group information (both stored in the Handset and the USIM). You can add, edit and delete groups. When a ringtone for a number is not specified, a call from the number sounds the group ringtone assigned to the number for the group.

Service dial numbers

Menu 8.5

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include emergency, directory enquiries and voice mail numbers. After selecting a service number, press to dial the service.

Own number

Menu 8.6

Allows you to display your phone number in the USIM card. You can save own numbers being used in the USIM card.

My business card

Menu 8.7

You can create your own business card by pressing the left soft key Add. After entering the name, number, Email and image, you can use it as a business card when sending the message.

Settings

Menu 8.8

Contact list settings (Menu 8.8.1)

- **View contacts from:** Select which contact information shall be displayed (from handset memory, from USIM card or both). All is the default setting.
- **Name display:** You can set the display order by name.
- **Show picture:** Select whether to display picture or not.

Contacts

Synchronise contact (Menu 8.8.2)

You can send the contents of phonebook to the server directly.

NOTE!

- This service is not available in all countries. Please contact your service provider for further information.

Copy (Menu 8.8.3)

You can copy contacts from the phone memory to the USIM or from the USIM to the phone memory. You can copy all or selected entries at a time.

- **Handset to USIM:** You can copy the entry from the handset memory to the USIM card (not all the data will be copied).
- **USIM to handset:** You can copy the entry from the USIM card to phone memory.

Move (Menu 8.8.4)

You can move contacts from the phone memory to the USIM or from the USIM to the phone memory. You can move all or selected items at a time.

- **Handset to USIM:** You can move the entry from the phone memory to the USIM card.
- **USIM to handset:** You can move the entry from the USIM card to phone memory.

Send all contacts via Bluetooth

(Menu 8.8.5)

You can send all phonebook data in handset to other handset by using Bluetooth.

Backup contacts (Menu 8.8.6)

You can save all the phonebook data in the handset to an external memory card by the form of vcard.

Restore contacts (Menu 8.8.7)

You can restore all the phonebook data in an external memory card to the phone memory by the form of vcard.

Clear contacts (Menu 8.8.8)

Clears all contact information. You can delete all contacts in the mobile phone memory as well as on the USIM card.

Memory info. (Menu 8.8.9)

You can check the status of contacts memory in this menu.



Browser 9

1. Press the **OK** (Menu) key.
2. Press the **9 keys** key for Browser.



Browser

Home

Menu 9.1

You can launch the web browser and access the homepage of the activated profile on Browser settings.

Enter address

Menu 9.2

You can manually enter a URL address and access the associated web page.

Bookmarks

Menu 9.3

You can store frequently accessed or favourite URLs/Pages. Send, Add new, Edit, Mark/Unmark or Delete operations can be performed on Bookmarks. Several preconfigured URLs are stored as bookmarks.

RSS reader

Menu 9.4

RSS reader provide news updates from websites registered in phone. You read these files in Rss reader, which collects news from registered wabsites registered in your phone and provides it to you in a simple form.

Saved pages

Menu 9.5

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

History

Menu 9.6

You can view the list of the pages you've already connected.

Settings

Menu 9.7

You can change the settings for browser connectivity and display.

Profiles (Menu 9.7.1)

Select the appropriate profile by pressing . This will activate the profile to initiate the browser launch.

Appearance settings (Menu 9.7.2)

- ▶ **Character encoding**
Sets the browser default character.
- ▶ **Scrolling control**
Allows you to set the scroll speed by selecting the number of lines to scroll. Select from the menu either 1 line, 2 lines or 3 lines.
- ▶ **Show image**
Allows you to enable or disable the image display during browsing.

NOTE!

- Enabling this function will delay displaying images until the completion of transmission. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

- ▶ **Java script**
Select whether to turn JavaScript On or Off.

Cache (Menu 9.7.3)

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in the Cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies (Menu 9.7.4)

Enabling Cookie allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

Security (Menu 9.7.5)

Certificates list

Certificates can be viewed from the list.

Session clear

Secure (WTLS/TLS) session data can be cleared using this option.

Reset settings (Menu 9.7.6)


Select this to reset your phone to its default browser configuration.





Connectivity

1. Press the  (Menu) key.
2. Press the  key for Connectivity.

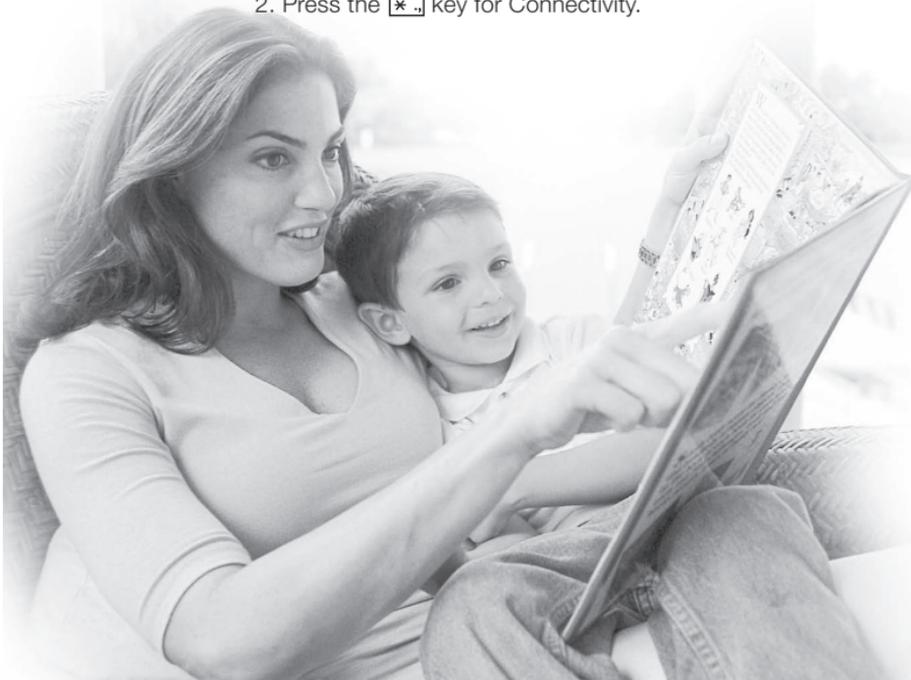

Connectivity

Bluetooth

Menu *.1

Bluetooth connection

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, PC, PDA or other phones.

You can, for example, have a conversation via a cordless Bluetooth handsfree or browse the Internet, wirelessly connected via a mobile phone. You can also exchange, for example, business cards, calendar items and pictures.

NOTE!

- We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

1 Getting started

- **Menu** → **Connectivity** → **Bluetooth** → **Turn on/off**

To use the Bluetooth function, you must first set **Turn on**.

2 Configuring Bluetooth settings

- **Menu** → **Connectivity** → **Bluetooth** → **Settings**

- **My device visibility:** Set [My handset's visibility] to [Visible] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select [Hidden], other devices will not be able to detect your phone when they are searching for a Bluetooth device.

- **My device name:** You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when [My handset's visibility] is set to [Visible].

- **Supported services:** You can view the list of devices such as headsets and handsfree kits supported by this Bluetooth enabled phone.
- **My address:** You can check the address of Bluetooth.

NOTE!

• When user uses Bluetooth Device in the handset, the security of the handset is at risk. Therefore, we recommend that Bluetooth visibility be set to Hidden after configuration or device pairing. For incoming files via Bluetooth regardless of paired devices, you can choose to accept or reject the connection, after checking the sender details.

3 Search and pair new device

<Searching new device>

You can search new device as following menu.

- **Menu** → **Connectivity** → **Bluetooth**
→ **Search new device**

<Pairing devices>

- 1 To search for a Bluetooth device to pair, press Add new device.
- 2 Screen shows Searching for devices. Bluetooth devices within a range of 10m will be found.
- 3 If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is found, you will be asked if you want to search again.

4 Pairing procedure

- Press **OK**. A window will appear on the screen asking you to enter your password.
- After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.

Connectivity

<Deleting devices>

- 1 Select a device to delete from the Paired devices screen.
- 2 You can delete a device by pressing the Delete key or by selecting Options > Delete. To delete all paired devices, select Options > Delete All.

<Transmitting data using Bluetooth>

- 1 To transmit data from your phone to another Bluetooth device, first select the application where the target data is saved. For example, to send data in the My Files to another device, select Menu → My stuff → My images / My Sounds / My Videos / Others / External memory → Select data to transmit → Send → Bluetooth

2 Transmitting data

- 1) Paired device found is displayed. If the desired device does not exist in the list, select [Refresh].
- 2) Select the device to which you want to transmit data from the devices on the screen and press **[OK]**.

- 3) If the other party selects [Yes] for [Connection request], the data is transmitted.

Server sync

Menu *.2

NOTE!

- This service is not available in all countries. Please contact your service provider for further information.

If Sync service is supported by your network operator, this service function synchronizes the data in a phone and the data on a server such as Contacts, Calendar, To do, and Memo via a wireless network.

USB connection mode

Menu *.3

You can activate USB connection mode of your phone for several usages. If you use Mass storage function like USB memory card, select Mass storage in this menu. Mass storage is available for only external memory card.

If you use Data service such as PC suite application, select Data service in this menu.

Network

Menu *.4

Select Network (Menu *.4.1)

Select between Automatic and Manual.

- **Automatic:** Automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
- **Manual:** All the currently 2G(GSM) and 3G(UMTS) available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are listed again and you can select any other one for registration.

NOTE!

- When your handset lose the network in manual mode, the popup message to select the available network will be shown in the Idle screen.

Location mode (Menu *.4.2)

You may have multiple data connections active at the same time when you are using your phone in Automatic, 3G only, 3G/GSM and GSM1900 networks.

Preferred lists (Menu *.4.3)

If the network is searching automatically, you can add a preferable network to be connected to. And the following options are available.

Internet profiles Menu *.5

This menu shows the Internet profiles. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

Access points Menu *.6

This menu shows the access point list. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

Streaming settings Menu *.7

If you want to set different network setting to play streaming content, you can set different network settings.

Organiser 0

1. Press the **OK** (Menu) key.
2. Press the **0** key for Organiser.



Organiser

Calendar

Menu 0.1

Schedule inquiry and search

1 Reference by Months

You can check out your schedule by months. when you select this menu, the cursor is on the current date.

The schedule saved for the date where the cursor is located is represented by a grey box. Pressing the shortcut key  moves to the previous year and pressing  move to the next year and pressing  moves to today. Pressing  or  moves to the previous month, and  or  moves to the next month. You can move the date using  /  /  / .

2 Detailed reference

You can refer to a detailed schedule, that is the whole contents of the schedule configured by the user.

Add new event

You can add an event. You can configure the start date, end date, start time, end time, contents, type of event, repetition, alarm of the schedule.

Delete all schedules

You can delete all saved schedule contents using this function.

Set up and release holiday

You can set up or release user holidays. Press the left soft key [Options] and select Set holiday. The selected date will be displayed in red.

To release the holiday, press the left soft key [Options] and select Clear holiday.

Schedule notification

If the user has configured the alarm setting, the specified alarm sound will ring. If the notification time is before the schedule start time, you can set up the alarm again.

To do

Menu 0.2

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

Memo

Menu 0.3

Using the memo management function, you can view and manage saved memo contents, and add new memo.

Secret memo

Menu 0.4

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Date finder

Menu 0.5

You can register the names and dates such as birthdays. You can check how many days remain before an event occurs or how many days have passed since an event.

Settings

Menu 0.6

Calendar (Menu 0.6.1)

You can set the configurations to view the calendar.

- **Default view:** You can set the default value to view a calendar; Month view, Week view
- **Week start time:** 1AM, 2AM, 3AM, 4AM, 5AM, 6AM, 7AM, 8AM, 9AM, 10AM, 11AM, 12PM
- **Week starts on:** You can set the default day to start a week; Sunday, Monday

Send all schedules & to do via Bluetooth (Menu 0.6.2)

You can send all the data in your calendar and/or to do list from your phone to other phones by using Bluetooth.

Organiser

Backup calendar & to do

(Menu 0.6.3)

You can create the backup files of the calendar or to do list saved in the phone when you insert an external memory.

Restore calendar & to do

(Menu 0.6.4)

You can reset the backup files of calendar or tasks when you insert an external memory.

Memory info. (Menu 0.6.5)


You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.

Clear all (Menu 0.6.6)

You can delete all data regarding Calendar, Tasks, Memo and Secret memo.

Settings

1. Press the  (Menu) key.
2. Press the  key for Settings.

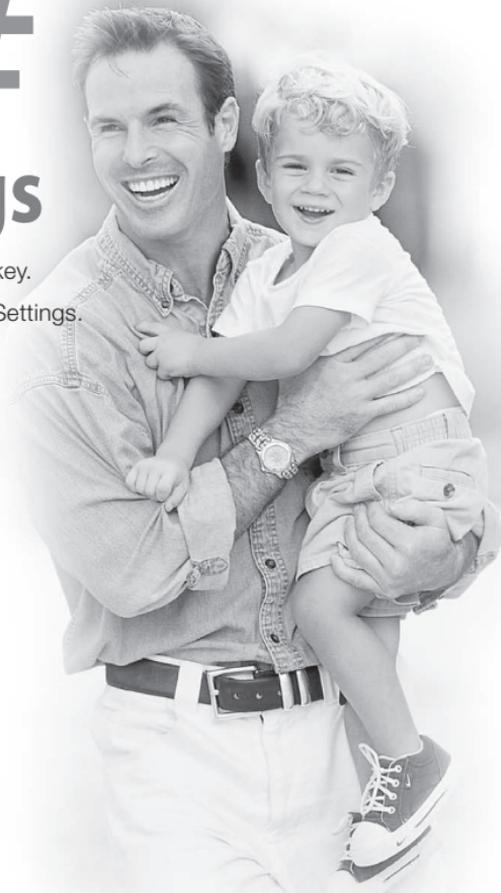

Settings

Screen

Menu #.1

This menu allows you to personalise the display options of the screens and of the menus entire graphic interface.

Screen theme (Menu #.1.1)

You can set the screen theme to be displayed on the main screen.

■ Home screen

- **Wallpaper:** You can select an image to be displayed on the main screen.
- **Display items:** You can select what items to display on the screen: Do not show, Calendar + Clock, Calendar, Clock, Clock + Key guide, Dual clock.

■ Start up

You can select the image to be displayed while the phone is being switched on.

■ Shut down

You can select the image to be displayed while the phone is being switched off.

Menu style (Menu #.1.2)

You can select the desired menu style from Grid style and List style.

Font (Menu #.1.3)

You can set the font style, dialling font size, and dialling font colour using



Backlight (Menu #.1.4)

You can set the backlight duration and the brightness on the Home screen and the duration on the Keypad individually.

Handset theme (Menu #.1.5)

You can set the theme of handset: White or Black

Greeting message (Menu #.1.6)

You can insert the message when switching on the phone.

Date & Time

Menu #.2

Although the current time is automatically configured when the phone is registered to the network, users can configure the time and date directly using this menu. The time configured by the user is valid only while the phone is turned on.

Time

- 1 Select the Time item from the Date & time list, and then press **[OK]**.
- 2 Move to your desired field, Hour, Minute, or am/pm field using the navigation keys. (When you have selected 12 hour as Time format)
- 3 Enter Hour, and Minutes using the number keys.
- 4 Select the time format using **[<]** / **[>]**.
- 5 Scroll down to select the hour indicator format i.e. Off, Cuckoo clock or Chime bell.

- 6 Press the centre soft key **[OK]** to set the time with the specified value.

Date

- 1 Select the Date item from the Date & time list, and then press **[OK]**.
- 2 Select the date format using **[<]** / **[>]**.
- 3 Enter Day, Month and Year using the number keys.
- 4 Press the centre soft key **[OK]** to set the date with the specified value.

Auto update date/time

When Auto Update is configured to On, the time and date are automatically updated according to the current time zone. If Confirm first is selected, the time and date update is confirmed before it is updated automatically.

Daylight saving

Select whether to activate the daylight saving function or not. You can set the Summer time difference of selected home city for 1 hour or 2 hours.

Settings

Auto key lock Menu #.3

If you activate this function, the keypad will be locked automatically after predefined delay time when the slide is closed.

Security Menu #.4

PIN code request (Menu #.4.1)

When this is set to On, you are requested to enter your PIN each time you switch the phone on.

NOTE!

- Press the right soft key in the PIN code entry window to return to the previous step.
- 3 incorrect PIN code entries would invalidate the PIN code. And you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again.
- The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)
- If the PIN code request cannot be disabled by operator settings, you will not be able to choose this menu item.

Handset lock (Menu #.4.2)

You can lock your phone. The following 4 lock functions are available.

- **When switched on:** Locks the handset whenever the handset is switched on.
- **When USIM changed:** Locks the handset when the phone's USIM card has been changed.
- **Immediately:** Locks the handset immediately.
- **None:** Deactivates the lock function. You are requested to enter the security code to confirm the selection.
 - To unlock the handset, you need to enter the security code.

Change codes (Menu #.4.3)

You can change the PIN, PIN2, and the mobile phone password.

■ PIN code

PIN is the abbreviation for Personal Identification Number, and is used to restrict use by an unauthorised user.

NOTE!

- Three incorrect PIN code entries in the PIN code entry window would invalidate the PIN code. In this case, you have to enter the PUK (PIN Unblock Key) code to configure the PIN code again. The maximum number of times you may enter the PUK code is 10. (Note: If you enter an incorrect PUK code 10 times, the USIM card will be blocked and must be replaced.)

■ PIN2 code

PIN2 is the abbreviation for Personal Identification Number 2, and is used to restrict use by unauthorised users as with the PIN. The PIN2 code change procedure is the same as the one for the PIN code. 3 incorrect PIN2 code entries would invalidate the PIN2 code. In this case, you have to enter the PUK2 code in order to use the PIN2 code again. The maximum number of times you may try to enter the PUK2 code is 10, like PUK1. 10 incorrect PUK2 code entries would invalidate the PIN2 code.

■ Security code

The security code is used to change the mobile phone password. The maximum number of attempts to enter the security code is not limited as it is with PIN and PIN2.

Power save**Menu #.5**

When you don't use a phone, you can save the power activating this menu.

Language**Menu #.6**

Select the display language. You can select Automatic language option to change display language to the USIM card supported language.

Settings

Memory manager Menu #.7

Handset common memory

(Menu #.7.1)

This function shows the status of the user memory of the mobile phone. Since this function scans the overall file system for statistics, a few seconds are required.

Handset reserved memory

(Menu #.7.2)

This function shows the status of the User reserved memory. The usual contents are Text msg, Contacts, Calendar, To do, Memo, Alarms, Call history, and Bookmarks. And it gives a clear illustration of the actual amount compared with the total amount for each item.

USIM memory (Menu #.7.3)

This function shows the status of the USIM card user memory.

External memory (Menu #.7.4)

This function shows the status of the External card user memory. This function

displays the In-use and free memory usage statistics.

Primary storage setting

(Menu #.7.5)

You can select the storage to download the file: Handset memory or External memory.

Handset information

Menu #.8

This menu is used to view phone number, model number and software version information.

Reset settings

Menu #.9

Select this to reset your phone to its default configuration. You are requested to enter the security code.



And so on...

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Europe



U.K and Hongkong



Australia

Standard Battery



NOTE!

- Always use genuine LG accessories.
- Failure to do so may invalidate your warranty.
- Accessories may vary in different regions: please check with our regional service company or agent for further information.

Data cable/CD

You can connect your phone to PC to exchange the data between them.

Hands free ear-microphone and music player controller combo

Stereo headset

Controller:

Answer & End key, music player control, volume control, Hold button and microphone.



After connecting the headset and the controller, plug the end of controller into the headset jack on the right side of the phone.

Glossary

2G

Second Generation wireless communication system. 2G system supports low quality voice and low-rate packet-data service. 2G refers to GSM in European countries, and CDMA in America.

3G

Third Generation wireless communication system. 3G means next generation wireless communication system developed based on the second generation wireless communication systems. 3G system supports real-time communication service and high-rate packet-data service. 3G refers to UMTS developed based on GSM in European countries,

Access point

Access point refers to a point through which users can connect to the network so that the users can use the network services.

AMR

Adaptive Multirate codec. A voice codec developed by ETSI for GSM. AMR supports 8 coding rates (from 4.75 to 12.2Kbps) so as to adaptively provide the quality of voice service in various radio channel conditions.

Download

Download means transmitting files from one computer system to another. Downloading usually means transmitting files from a big system to a small system.

Java™

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

MIDI

Musical Instrument Digital Interface. A file format to save digitized musical instrumental data. The original meaning of MIDI, or Music Instrument Digital Interface is a protocol to exchange data between a computer and electric instruments.

MMS (Multimedia Message Service)

A message service for the handset environment, standardised by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediate delivery of user-created content from phone to phone. The message addressing used is primarily phone numbers, thus the traffic goes from phone to phone. MMS also

provides support for e-mail addressing, so that messages can also be sent by email. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and later also video clips and presentation information.

MP3

Moving Picture Experts Group Layer-3 Audio. A file format to provide high-quality audio whose quality is equal to that of CD. MP3 is a digital audio standard developed by MPEG, or Moving Picture Experts Group and is widely used for digital audio files.

MPEG4

Motion Picture Experts Group 4. A digital video standard developed by MPEG, or Moving Picture Experts Group. MPEG4 compresses video data so that a large video file can be transmitted, and saved more easily. MPEG4 is suitable especially for mobile environment.

Glossary

Multimedia

Multimedia means media that include various media data such as voice, character string, image, and video data. Currently, the meaning of multimedia includes services provided through multimedia.

Multiparty Calls

Ability to establish a conference call involving up to five additional parties.

Roaming

Use of your phone when you are outside your home area (when traveling for example).

SDN (Service Dial Number)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

SMTP

Simple Mail Transfer Protocol. A protocol to transfer e-mails between computers over the Internet. SMTP defines the

format of control messages between computers, and interaction procedures between them to send e-mails.

Quick play

Quick play means a new type of service that enables users to listen to an audio or watch video without downloading complete audio or video file so that contents providers can provide audio or video data such as movie or news over the network in real-time on users' demand.

Sync

Sync means synchronizing PIM (Personal Information Management) data such as contact information, schedule, to-do, and memo with a PC or an external server.

UMTS

Universal Mobile Telephony System. UMTS refers to asynchronous 3G wireless technology of WCDMA that is developed based on GSM, the 2G wireless technology.

USB

Universal Serial Bus. A bus type interface that provides fast and flexible connection between devices and a computer.

USIM

Universal Subscriber Identity Module. An IC card used for UMTS the shape of which is the same as that of the SIM card of GSM. USIM is provided by network operator, and carries the authentication and service grade data for the network operator as well as user-specific data.

Video call

A communications service that enables users to talk watching each other over a 64Kbps data channel. Real-time video call service is a new type of service provided by WCDMA wireless communication system that is developed based on GSM+GPRS technology.

Voice mail

Computerised answering service that automatically answers your calls when you are not available, plays a greeting and records a message.

Index

A

ABC Mode	19
Accessories	96
Access points	84
Add new.....	70
Alarms.....	66
Albums.....	43
All calls.....	28
All tracks.....	43
AMR.....	98
Appearance settings	77
Artists.....	43
Auto key lock.....	92

B

Backlight.....	90
Backup calendar & to do.....	88
Backup contacts.....	72
Bluetooth.....	80
Bookmarks.....	76
Browser	75

C

Cache	77
Calculator	67
Calendar.....	86, 87
Call barring	30

Call costs.....	29
Call divert	29
Call durations	28
Caller ID.....	99
Calling.....	27
Call logs.....	28
Call waiting.....	31
Camera	40
Change codes	92
Charging the Battery.....	12
Clear all.....	88
Clear contacts	73
Common setting.....	31
Connectivity	79
Contact list settings	71
Contacts.....	69
Converter.....	67
Cookies.....	77
Copy	72
Create new message	48

D

Data volume	28
Date & Time	91
Date finder	87
Dialled calls.....	28
Download.....	98
Drafts	52

E

Email.....	49, 56
Emoticons	54
Enter address	76
Entering text.....	18
External memory	94

F

Fixed dial numbers	31
Font	90

G

Games & Apps	25
Genres	43
Greeting message	90
Groups.....	71

H

Handset common memory	94
Handset information.....	94
Handset lock.....	92
Handset reserved memory	94
Handset theme.....	90
History	76
Home	76

I

Inbox	50
Info. service	58
Installing the USIM card	10
Internet profiles	83

J

Java	98
------------	----

L

Language	93
Line Identification Services.....	99
Location mode	83

M

Mailbox	51
Make video call.....	28
Making and answering calls	16
Memo.....	87
Memory info.....	73, 88
Memory manager	94
Menu style	90
Message	48
Messages	47
microSD memory card.....	13
MIDI	99

Index

Missed calls.....	28
MMS	99
Move	72
MP3.....	99
MPEG4	99
Multimedia.....	39, 100
Multimedia message.....	55
Multimedia Message Service	99
Multimedia templates	54
Music.....	43
My business card	71
My folders.....	53
My games & apps	26, 63
My images.....	60
My memory card	64
My sounds.....	61
My stuff	59
My videos	62

N

Network	83
---------------	----

O

Organiser.....	85
Others	63
Outbox	52
Own number.....	71

P

PIN code request	92
Playlists.....	43
Power save	93
Preferred lists	83
Primary storage setting.....	94
Profiles	35, 76

Q

Quick menu	66
Quick play.....	100

R

Received calls.....	28
Recently played.....	43
Reset settings.....	77, 94
Restore calendar & to do	88
Restore contacts	73
Roaming	100
RSS reader	76

S

Saved pages	76
Screen	90
Screen theme.....	90
SDN.....	100
Search	70

Secret memo.....	87
Security.....	77,92
Select Network.....	83
Send all contacts via Bluetooth....	72
Send all schedules & to do via Bluetooth.....	87
Sent items.....	53
Server sync.....	82
Service dial numbers.....	71
Service message.....	57
Settings.....	26, 54, 71, 76, 87, 89
Shuffle tracks.....	43
SMTP.....	100
Speed dials.....	70
Stopwatch.....	67
Streaming settings.....	84
Synchronise contact.....	72

T

T9 Mode.....	19
Templates.....	53
Text message.....	54
Text templates.....	53
To do.....	87
Tools.....	65

U

UMTS.....	100
-----------	-----

USB.....	101
USB connection mode.....	82
USIM.....	101
USIM memory.....	94

V

Video call setting.....	33
Video camera.....	41
Videomail.....	57
Video playlists.....	44
Voicemail.....	57, 101
Voice recorder.....	44

W

World time.....	67
-----------------	----

Ambient Temperatures

Normal (55°C), charging (45°C)

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KF310

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1
EN 301 511 V9.0.2
EN 301 908-1 V2.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.6.1
EN 50360/EN 50361:2001
EN 60950-1 : 2001

Supplementary Information

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 31.Mar. 2008

LG Electronics Inc. Amsterdam Office
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com


Signature of representative

Emergency Services and Safety Precautions

- Do not allow battery to come into direct contact with an electric outlet or car cigarette lighter socket
- Do not pierce battery with sharp objects
- Do not drop or subject the phone to physical shock
- When the battery has reached the end of its life, dispose of it in accordance with local environmental regulations. Do not dispose of your battery in household rubbish.
- Do not immerse in water
- Do not disassemble or modify the battery
- Stop using the battery if abnormal heat, odour, discolouration, deformation, or abnormal conditions are detected during use, charge, or storage
- Do not use damaged or deformed batteries. In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin.
- If the leakage does come into contact with the eyes or skin, please wash thoroughly in clean water and consult with a doctor
- The earpiece may become warm during normal use. The handset itself may become warm while the battery is being charged
- Use a damp or anti-static cloth to clean the handset. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone
- Retain the cardboard packing supplied with this handset. It should be used if the phone has to be returned for service. This packaging can be recycled when no longer required
- Remember to make backup copies of all important data on your handset
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Aircraft safety

In accordance with CAA regulations, you must switch off your phone on aircraft. Mobile phone signals can interfere with aircraft equipment. Follow the instructions given by airline staff at all times

Hospital safety

Switch off your phone in areas where the use of handsets is prohibited. Follow the instructions given by the respective medical facility regarding the use of handsets on their premises

General safety

- Observe 'Turn off 2-way radio' signs, such as those near petrol stations, chemicals or explosives, and turn off your handset
- Do not allow children to play with the handset, charger or batteries
- Do not use the handset where blasting is in progress

- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any warning signs and the manufacturer's recommendations
- The phone is out of Three network coverage, 'Emergency Calls Only' will display on the screen and at this time you can call 000 or 112 and you will be connected via any available network to an operator who will connect you to either the Police, Ambulance and Fire Services.

Avoid damage to your hearing

- Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Emergency Services and Safety Precautions

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.
- Do not store or carry flammable or explosive materials near your handset
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions

Road safety

- You **MUST** exercise the proper control of your vehicle at all times. Give your full attention to driving
- Observe all laws in respect to the use of mobile phones when driving
- Pull off the road and park before making or answering a call where it is safe to do so. UK law prohibits the use of hand held mobile phones when driving
- You **MUST NOT** stop on the hard shoulder of a motorway to answer or make a call, except in an emergency
- Switch off your handset at refueling points and petrol stations, even if you are not refueling your own car

- The manufacturers of such equipment can advise if it is adequately shielded from radio transmissions. Consult your dealer and do not switch on the handset until it has been checked by qualified installers

Vehicles equipped with an air bag

An air bag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result

Third party equipment

The use of third party equipment, cables or accessories, not made or authorised by LG, may invalidate the warranty of your handset and also adversely affect the handset's safety or operation

Service

The handset, batteries and charger contain no user-serviceable parts. LG recommend that your LG KF310 handset is serviced or repaired by an LG authorised service centre

Efficient use

The handset has an antenna. For optimum performance with minimum power consumption, please do not cover the antenna area with your hand. Covering the antenna affects call quality and may cause the handset to operate at a higher power level than required. This decreases talk and standby time.

Radio frequency energy

Your handset is a low-power radio transmitter and receiver. When it is turned on, it receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call (the network) controls the power level at which the handset transmits.

- Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

- This handset model KF310 has been designed to comply with safety, requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health

Emergency Services and Safety Precautions

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using a standardised method with the phone transmitting at its highest certified power level in all used frequency bands
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves
- The SAR limit recommended by the International Commission on Non ionising Radiation Protection (ICNIRP), is 2W/kg averaged over ten (10) gramme of tissue
- The highest SAR value for this model phone when tested for use at the ear is 0.562 W/kg and when worn on the body, as described in this user guide, is 1.31 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.
- The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gramme of tissue (for example USA, Canada, Australia and Taiwan).

Caring for your KF310

Your KF310 is designed to be rugged and reliable and to provide years of trouble-free service. Please observe the following general tips when using your handheld:

- Take care not to scratch the screen of your handheld. Keep the screen clean. When working with your KF310, use the supplied stylus or plastic-tipped pens intended for use with a touch-sensitive screen. Never use an actual pen or pencil or other sharp object on the surface of the handheld screen.
- Your KF310 is not waterproof and should not be exposed to rain or moisture. Under extreme conditions, water may enter the circuitry through the front panel buttons. In general, treat your KF310 as you would a pocket calculator or other small electronic instrument.
- Take care not to drop your KF310 or subject it to any strong impact. Do not carry your KF310 in your back pocket: if you sit on it, you may damage it.
- Protect your KF310 from temperature extremes. For example, do not leave your organizer on the dashboard of a car on a hot day or on a day when temperatures are below freezing, and keep it away from heaters and other heat sources.
- Do not store or use your KF310 in any location that is extremely dusty, damp, or wet.
- Use a soft, damp cloth to clean your KF310. If the surface of the KF310 screen becomes soiled, clean it with a soft cloth moistened with a diluted window-cleaning solution.