

IKP135 | USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.



P/N: MMBB0216934(1.0)


Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a mobile network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

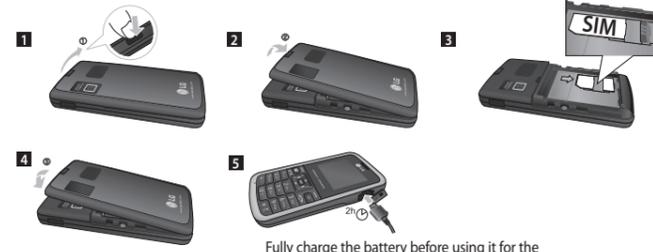

Fully charge the battery before using it for the first time.

Illustrations


- 1 2 Open battery cover and take out the battery
- 3 Insert your SIM
- 4 Insert the battery and close the battery cover
- 5 Charge your battery

Phone Components



Note: Phone appearance or features may in reality deviate from the description in this user guide.

Display Information

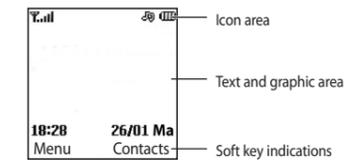


On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

	Tells you the strength of the network signal.
	You can use GPRS service.
	Shows that you are using a roaming service.
	Line 1/2 is in use for outgoing calls.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice mail.
	You have received a push message.
	You can view your schedule.
	Vibrate only profile is active.
	General profile is active.
	Outdoor profile is active.
	Silent profile is active.
	Headset profile is active.
	All calls divert has been set.

Selecting Functions and Options

Your phone offers a set of functions which are arranged to customise it. These functions are arranged in menus and sub-menus, accessed via the left and right soft keys. The label on the bottom of the display screen immediately above the soft keys indicates their current function.

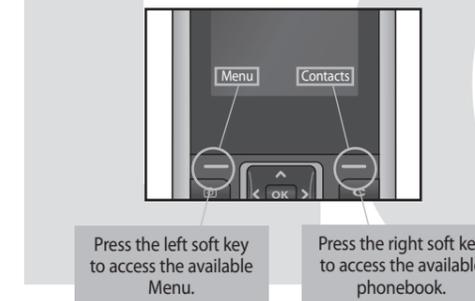

Press the left soft key to access the available Menu.

Press the right soft key to access the available phonebook.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

T9 Mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

Symbol Mode

This mode allows you to enter special characters by pressing key.

Turning Your Phone On and Off

1. Hold down the [END] key until the phone switches on.
2. To switch the phone off, hold down the [END] key until the power-off image displays.

Making a Call

1. Enter a phone number including the area code.
2. Press the [SEND] key to call the number.
3. When finished, press the [END] key.

Making an international call

1. Press and hold the key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [send] key to call the number.

Making a call from the phonebook

You can save the names and phone numbers dialled regularly in the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the contacts and pressing the key. For shortcut of the phonebook, you can press in standby mode.

Answering a Call

1. When the phone rings and the phone icon flashes on the screen, press the [SEND] key or the left soft key to answer.
2. End the call by pressing the [END] key

Note

› After the call ends, the phone will go back to standby mode.

Anti Theft Mobile Tracker

1. The ATMT of this phone provides you with the ability to have a tracking system in place for your mobile in case you loose or misplace it.
2. The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the message is send to your pre-defined number.

Menu Tree

› The menu in this phone can be displayed in 2 ways. One is by grid type or secondly in list format. Please note that menu number options are different in each view. The default setting on the phone is set to show the menu in grid type, so therefore all the menu number selections throughout the manual are set according to that setting.

- | | | |
|------------------------|----------------------|--------------------|
| 1. Browser | 3.7 Unit converter | 7.2 Silent |
| 1.1 Home | 3.8 World clock | 7.3 Vibrate only |
| 1.2 Yahoo! | 3.9 SIM Service | 7.4 Outdoor |
| 1.3 Bookmarks | 4. Multimedia | 7.5 Headset |
| 1.4 Enter address | 4.1 FM radio | 8. Contacts |
| 1.5 History | 4.2 Camera | 8.1 Search |
| 1.6 Saved pages | 4.3 Voice recorder | 8.2 New contact |
| 1.7 Settings | 5. Messaging | 8.3 Speed dial |
| 1.8 Information | 5.1 New message | 8.4 Groups |
| 2. Call history | 5.2 Inbox | 8.5 Copy all |
| 2.1 All calls | 5.3 Drafts | 8.6 Delete all |
| 2.2 Missed calls | 5.4 Outbox | 8.7 Settings |
| 2.3 Dialed calls | 5.5 Sent | 8.8 Information |
| 2.4 Received calls | 5.6 Listen voicemail | 9. Settings |
| 2.5 Call duration | 5.7 Info messages | 9.1 Date & Time |
| 2.6 Call costs | 5.8 Templates | 9.2 Languages |
| 2.7 Data information | 5.9 Settings | 9.3 Display |
| 3. Tools | 6. My stuff | 9.4 Connectivity |
| 3.1 Alarm clock | 6.1 Images | 9.5 Call |
| 3.2 Calendar | 6.2 Sounds | 9.6 Security |
| 3.3 Memo | 7. Profiles | 9.7 Flight mode |
| 3.4 To do | 7.1 General | 9.8 Power save |
| 3.5 Calculator | | 9.9 Reset |
| 3.6 Stopwatch | | 9.0 Memory status |

Quick Feature Reference

This section provides brief explanations of features on your phone.

Browser Menu 1

- | | |
|----------------------|--|
| Home | You can launch the web browser and access the homepage of the activated profile on browser settings. |
| Yahoo! | You can enjoy web surfing in this menu. |
| Bookmarks | You can store frequently accessed or favourite URLs/ Pages. |
| Enter address | You can manually enter an URL address and access the associated web page. |
| History | You can view the list of the pages you've already connected. |
| Saved pages | The phone can see the page on display as an offline file |
| Settings | You can change the settings for browser connectivity and display. |
| Information | You can view the information of WAP browser. |

Call history Menu 2

You can check the record of missed, received, and dialled calls only if the network supports Caller Line Identification (CLI) within the service area. The number and name/photo (if available) are displayed together with the date and time at which the call was made. You can also view call durations.

Tools Menu 3

- | | |
|-----------------------|---|
| Alarm clock | You can set up to 5 alarm clocks to go off at a specified time. |
| Calendar | When you enter this menu, a calendar appears. |
| Memo | You can register your own memos here. |
| To do | You can create, view, delete to do list. |
| Calculator | The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. |
| Stopwatch | This option allows you to use the function of a stopwatch. |
| Unit converter | This converts many measurements into a unit you want. |
| World clock | You can check the current time of Greenwich Mean Time (GMT) and major cities around the world. |
| SIM Service | Your service provider can offer special applications through the SIM card. |
- Note: Please note that this entry may occur under another name depending on your SIM card and that additional changes may occur when using this service.

Multimedia Menu 4

- | | |
|-----------------------|---|
| FM radio | <ol style="list-style-type: none"> 1. Press the corresponding number key of a channel to store the selected radio station. 2. After presetting radio channels, you can listen to another channel by pressing the corresponding number key. 3. You can access the following option menus by pressing the left soft key [Options]. |
| Camera | <p>This application enables you to take a still picture. You can take a picture in your desired size, and use it for the contacts photo, home screen and other more general purposes. Once taken, a still image can be sent via a Multimedia message.</p> <ul style="list-style-type: none"> › Select the Menu, Multimedia and Camera › Focus on the subject to capture the image, and then press the key. › If you want to view it, press the left soft key [Options] and select Album. |
| Voice recorder | You can record a voice memo in the Voice recorder menu. |

Messaging Menu 5	
This menu includes functions related to SMS (Short Message Services) and MMS (Multimedia Message Service).	
New message	Create and send a text or multimedia message to one or more recipients.
Inbox	You will be alerted when you have received a message.
Drafts	This menu shows the unsent message list.
Outbox	This menu allows to view the message which is about to be sent or has failed to be sent.
Sent	This menu allows you to view the messages which have already been sent, including time and content.
Listen voicemail	This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).
Info messages	Info service messages are text messages delivered by the network to your handset.
Templates	There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
Settings	This menu allows you to configure messaging functions to work with your network provider.

Settings Menu 9 (Continued)	
Call	<ul style="list-style-type: none"> › Call waiting: Allows to display requesting message and animation when activating the service. › Minute minder: Determines whether to sound a 1 minute tone every one minute when you are on the phone. › Auto redial: Allows you to set auto redial function when a call attempt has failed. › Send DTMF tones: You can send DTMF tones when using banking service and so on. * DTMF: Dual Tones Multiple Frequency
Security	<p>This menu allows you to protect your phone from unauthorized use.</p> <ul style="list-style-type: none"> › PIN code request: You can set the phone to ask for the PIN code of your SIM card when the phone is switched on. › Auto key lock: This menu allows to set the time of Auto key lock. › Phone lock: You can use a security code to avoid unauthorized use of the phone.
Flight mode	If set to On, the connection between the phone and network service will be cut off.
Power save	This function saves battery power by keeping the backlight brightness to max 40%. (Off/ Night only/ Always on)
Reset	<p>You can initialise all factory defaults. You will need the Security code to activate this function.</p> <p>Note: The security code is a password to reset the phone. The default number is "0000".</p>
Memory status	You can check the capacity of free memory.

Guidelines for Safe and Efficient Use (Continued)

In aircraft

Wireless devices can cause interference in aircraft.
› Turn off your mobile phone before boarding any aircraft.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

My stuff Menu 6	
You can access the following menus for your convenience and preferences.	
Images	Shows the list of image files.
Sounds	Shows the list of sound files.

Profiles Menu 7	
You can select ringtone or vibration for an incoming call and configure the sound and volume of the ringtone, key tone, and sound effect, according to a profile. The profiles provided include [General], [Silent], [Vibrate only], [Outdoor], [Headset].	

Guidelines for Safe and Efficient Use

Please read these simple guidelines. Ignoring them may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- › For your safety, use ONLY specified ORIGINAL batteries and chargers.
- › Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- › Batteries should be disposed of in accordance with relevant legislation.

Product care and maintenance

- WARNING!** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- › Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
 - › The unit should be kept away from heat sources such as radiators or cookers.
 - › Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
 - › Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

Guidelines for Safe and Efficient Use (Continued)

Battery information and care

- › You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- › Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- › Do not disassemble or short-circuit the battery pack.
- › Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- › Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- › Risk of explosion if battery is replaced by an incorrect type.
- › Dispose of used batteries according to the manufacturer's instructions.

Contacts Menu 8	
Search	<p>You can Search for contacts in Phonebook.</p> <p>Note: Instant searching is available by inputting the initial letter of the name you want to search.</p>
New contact	You can add phonebook entries by using this menu.
Speed dial	Assign contacts to any of the keys between  and  .
Groups	You can add members to each group, with up to a maximum of 7 groups in total.
Copy all	You can copy all entries from the SIM card memory to Phone memory.
Delete all	You can delete all entries from the SIM card memory or Phone memory.
Settings	You can set the Contact display option.
Information	<ul style="list-style-type: none"> › Service dial numbers: Access the list of service numbers assigned by your service provider. › Own numbers: You can save and check your own numbers in the SIM card. › My Business card: This option allows you to create your own business card featuring your name, mobile phone number and so on.

Guidelines for Safe and Efficient Use (Continued)

Electronic devices

- All mobile phones may get interference, which could affect performance.
- › Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Guidelines for Safe and Efficient Use (Continued)

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KP135 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- › The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- › While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- › The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- › The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.902 W/kg (10g) and when worn on the body is 0.746 W/kg (10g).
- › SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

Settings Menu 9	
Time & Date	You can set functions relating to the date and time.
Language	You can change the language for the display texts in your phone.
Display	You can change the settings for the phone display.
Connectivity	<p>You can configure the network setting and data access profiles in this menu.</p> <ul style="list-style-type: none"> › Network selection: You can set the method of searching network automatically, manually or preferred list. › GPRS attach: You can set GPRS service depending on various situations such as Power on or When needed. › Access point: This menu shows thw access point list. You can create new profiles, delete or edit them by using Option menu.
Call	<ul style="list-style-type: none"> › Call divert: You can divert calls to your voicemail box or to other number. › Call barring: The Call barring service prevents your phone from making or receiving a certain category of calls. This function requires the call barring password. › Fixed dial number (SIM dependent): You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code. The numbers you wish to allow access to once this service has been enabled, must be added to the contacts after enabling Fixed dial number. › Answer mode: Allows you to set the answering method (Any key/ Send key only) › Send my number: You can configure to send my phone number when making a call.

Guidelines for Safe and Efficient Use (Continued)

Road safety

- Check the laws and regulations on the use of mobile phones in the areas when you drive.
- › Do not use a hand-held phone while driving.
 - › Use a hands-free kit, if available.
 - › Pull off the road and park before making or answering a call if driving conditions so require.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

Technical Data

General

- › **Product name** : KP135
- › **System** : GSM 900 / DCS 1800

Ambient Temperatures

- › **Max.** : +55°C, Charging (+45°C)
- › **Min** : -10°C

Declaration of Conformity		LG Electronics	
Supplier Details			
Name: LG Electronics Inc.			
Address: LG Electronics Inc., LG Tech Tower 35, Yongsu-dong, Yongsu-gu, Seoul, Korea 150-721			
Product Details			
Product Name: SC600 / DC600 / DC600 Terminal Equipment			
Model Name: KP135			
Trade Name: LG			
Applicable Standards Details			
EMC: EN55022:2005 and EN 55024:2005			
SAR: EN 62209-1:2007, EN 62209-2:2007, EN 62209-3:2007, EN 62209-4:2007, EN 62209-5:2007, EN 62209-6:2007, EN 62209-7:2007, EN 62209-8:2007, EN 62209-9:2007, EN 62209-10:2007, EN 62209-11:2007, EN 62209-12:2007, EN 62209-13:2007, EN 62209-14:2007, EN 62209-15:2007, EN 62209-16:2007, EN 62209-17:2007, EN 62209-18:2007, EN 62209-19:2007, EN 62209-20:2007, EN 62209-21:2007, EN 62209-22:2007, EN 62209-23:2007, EN 62209-24:2007, EN 62209-25:2007, EN 62209-26:2007, EN 62209-27:2007, EN 62209-28:2007, EN 62209-29:2007, EN 62209-30:2007, EN 62209-31:2007, EN 62209-32:2007, EN 62209-33:2007, EN 62209-34:2007, EN 62209-35:2007, EN 62209-36:2007, EN 62209-37:2007, EN 62209-38:2007, EN 62209-39:2007, EN 62209-40:2007, EN 62209-41:2007, EN 62209-42:2007, EN 62209-43:2007, EN 62209-44:2007, EN 62209-45:2007, EN 62209-46:2007, EN 62209-47:2007, EN 62209-48:2007, EN 62209-49:2007, EN 62209-50:2007, EN 62209-51:2007, EN 62209-52:2007, EN 62209-53:2007, EN 62209-54:2007, EN 62209-55:2007, EN 62209-56:2007, EN 62209-57:2007, EN 62209-58:2007, EN 62209-59:2007, EN 62209-60:2007, EN 62209-61:2007, EN 62209-62:2007, EN 62209-63:2007, EN 62209-64:2007, EN 62209-65:2007, EN 62209-66:2007, EN 62209-67:2007, EN 62209-68:2007, EN 62209-69:2007, EN 62209-70:2007, EN 62209-71:2007, EN 62209-72:2007, EN 62209-73:2007, EN 62209-74:2007, EN 62209-75:2007, EN 62209-76:2007, EN 62209-77:2007, EN 62209-78:2007, EN 62209-79:2007, EN 62209-80:2007, EN 62209-81:2007, EN 62209-82:2007, EN 62209-83:2007, EN 62209-84:2007, EN 62209-85:2007, EN 62209-86:2007, EN 62209-87:2007, EN 62209-88:2007, EN 62209-89:2007, EN 62209-90:2007, EN 62209-91:2007, EN 62209-92:2007, EN 62209-93:2007, EN 62209-94:2007, EN 62209-95:2007, EN 62209-96:2007, EN 62209-97:2007, EN 62209-98:2007, EN 62209-99:2007, EN 62209-100:2007			
Supplementary Information			
The conformity to above standards is verified by BSMF.			
Declaration			
I hereby declare under our joint responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and directives.		Name: Dong Hyun, A/ Director	Issue Date: 13 Mar, 2008
Responsible Manager: LG Electronics, 35000 and Services B.V.		Signature of representative: 	
Tel: +82-51-955-1000, Fax: +82-51-955-1000		E-mail: jinh@lg.com	