



Safety Information



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO OUAL HIFTO SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center. Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.







This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Copyrights

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission. This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p UNIT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER. You have to set the disc format option to [Mastered] in order to make the discs compatible with the LG players when formatting rewritable discs. When setting the option to Live File System, you cannot use it on LG players.

(Mastered/ Live File System : Disc format system for Windows Vista)







Table of Contents

1 **Getting Started**

- 2 Safety Information
- 6 Unique Features
- 6 - Portable In
- 6 - USB Direct Recording
- 6 - Full HD up-scaling
- 6 Accessories
- 7 Introduction
- 7 - Playable Discs
- About the "⊘" Symbol Display 7
- 7 - Symbols Used in this Manual
- 7 - Regional Codes
- 8 Playable file Requirement
- 9 Remote control
- 10 Front panel
- 12 Rear panel

2 Connecting

- 13 Attaching the speakers to the unit
- 13 Connections to Your TV
- 14 - Component Video Connection
- 14 - HDMI Out Connection
- 15 - Video Connection
- 16 - Resolution Setting
- 16 Video Output Resolution
- 16 Optional Equipment Connection
- AUDIO (PORT. IN) In Connection 16
- 16 - Listening to music from your portable player or external device
- 17 - USB Connection
- 17 - OPTICAL In connection
- 17 - Home theater speaker ez setup
- 18 - Antenna Connection
- 18 - Playing the iPod
- 19 - Compatible iPod

3 System Setting

- 20 Adjust the setup settings
- OSD Initial language settings -20 Optional
- 20 - To display and exit the Setup menu
- 21 - Language
- 21 - Display
- 22 - Audio
- 22 - Lock (Parental Control)
- 23 - Others





4 Operating

- 24 Using the Home Menu
- 24 Basic Operations
- 25 Other Operations
- 25 Displaying Disc Information on-screen
- 25 To display the DVD Menu
- 25 To display the DVD title
- 25 1.5 times speed playback
- 25 Screen Saver
- 25 Starting play from selected time
- 26 Resume playback
- 26 Changing subtitle code page
- 26 Marked Playback
- 27 Viewing a PHOTO file
- 28 Last Scene Memory
- 28 System Select Optional
- 28 Adjust the speaker level settings
- 28 Auto Power Down
- 29 Setting the Clock
- 29 Using your player as an alarm clock
- 29 Sleep Timer Setting
- 29 Dimmer
- 29 Turn off the sound temporarily
- 29 DEMO
- 30 Radio Operations
- 30 Listening to the radio
- 30 Presetting the Radio Stations
- 30 Deleting all the saved stations
- 30 Deleting a saved station
- 30 Improving poor FM reception
- 31 Sound adjustment
- 31 Setting the surround mode
- 32 Advanced Operations
- 32 Recording to USB
- 33 Using a Bluetooth wireless technology
- Listening to music of a Bluetooth device

5 Troubleshooting

35 Troubleshooting

6 Appendix

- 36 Area Code List
- 37 Language code List
- 38 Trademarks and Licenses
- 39 Specifications
- 41 Maintenance
- 41 Handling the Unit
- 41 Notes on Discs

1

2

3

4

5







Unique Features

Portable In

Listens to music from your portable device. (MP3, Notebook, etc)

USB Direct Recording

 
Records music from CD to your USB device.

 
Full HD up-scaling

Views Full HD picture quality with simple setup.

Accessories


Please check and identify the supplied accessories.






Remote control (1)

  
Battery (1)





FM antenna (1)

 Antena AM (1)



Video cable (1)







Introduction

Playable Discs

This unit plays DVD±R/RW and CD-R/RW that contains audio titles, DivX, MP3, WMA and/or JPEG files. Some DVD±RW/DVD±R or CD-RW/ CD-R cannot be played on this unit due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.



DVD-VIDEO (8 cm / 12 cm disc)

Discs such as movies that can be purchased or rented.



DVD±R (8 cm / 12 cm disc) Video mode and finalized only.



DVD-RW (8 cm / 12 cm disc) Video mode and finalized only.



DVD+R: Video mode only



Supports the double layer disc also.



DVD+RW (8 cm / 12 cm disc) Video mode and finalized only.



Audio CD: Music CDs or CD-R/CD-RW in music CD format that can be purchased.

About the "⊘" Symbol Display

"O" may appear on your TV display during operation and indicates that the function explained in this owner's manual is not available on that specific media.

Symbols Used in this Manual

DVD

DVD-Video. DVD+R/RW in Video mode or VR mode and finalized

ACD

Audio CDs

MOVIE

Video files contained in the USB/Disc

MUSIC

Audio files contained in the USB/Disc

PHOTO

Photo files



Indicates special notes and operating features.



Indicates tip and hints for making the task easier.



Indicates cautions for preventing possible damages from abuse.

Regional Codes

This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled same as the rear of the unit or "ALL".

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your unit's regional code or the disc cannot play.
- If you try to play a DVD with a different regional code from your unit, the message "Check Regional Code" appears on the TV screen.







Playable file Requirement

MP3/ WMA music file requirement

MP3/ WMA file compatibility with this unit is limited as follows:

- Sampling frequency: within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate: within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Support Version: v2, v7, v8, v9
- Maximum files: Under 999
- File extensions: ".mp3"/".wma"
- CD-ROM file format: ISO9660/ JOLIET
- We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.

Photo file requirement

Photo file compatibility with this unit is limited as follows:

- Max pixel in width: 2 760 x 2 048 pixel
- Maximum files: Under 999
- Some discs may not operate due to a different recording format or the condition of disc.
- File extensions: ".jpg"
- CD-ROM file format: ISO9660/ JOLIET

DivX file requirement

DivX file compatibility with this unit is limited as follows:

- Available resolution: within 800 x 600 (W x H) pixels.
- The file name of the DivX subtitle should be entered within 45 characters.
- If there is impossible code to express in the DivX file, it may be displayed as "_" mark on the display.
- Frame rate: less than 30 fps.
- If the video and audio structure of recorded files is not interleaved, either video or audio is outputted.
- Playable DivX file: ".avi", ".mpg", ".mpeg", ".divx"
- Playable Subtitle format: SubRip (*.srt/*.txt), SAMI (*.smi), SubStation Alpha (*.ssa/*.txt), MicroDVD (*.sub/*.txt), SubViewer 2.0 (*.sub/*.txt), Vobsub (*.sub)
- Playable Codec format: "DIVX3.xx", "DIVX4.xx", "DIVX5.xx", "MP4V3", "3IVX".
- Playable Audio format: "AC3", "PCM", "MP3", "WMA".
- Sampling frequency: within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate: within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- For Discs formatted in Live file system, you can not it on this unit
- If the name of movie file is different from that of the subtitle file, during playback of a DivX file, subtitle may not be display.
- If you play a DivX file differ from DivXspec, it may not operate normally.










Remote control

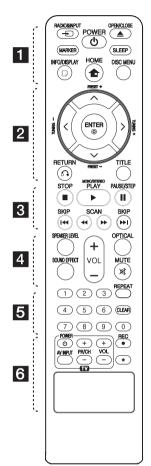

Battery Installation



Remove the battery cover on the rear of the Remote Control, and insert one (size AAA) battery with

◆ and ◆ matched correctly.

. 11

• RADIO&INPUT: Changes input sources.

MARKER: Marks play list.

OPE POWER: Switches the unit ON or OFF

△ OPEN/CLOSE: Ejects or insert the disc from slot loader.

SLEEP: Sets the System to turn off automatically at a specified time. (Dimmer: The display window will be darken by half.)

☐ **INFO/DISPLAY:** Accesses On-Screen Display.

HOME: Displays the [Home Menu].

DISC MENU: Accesses the menu on a DVD disc.

. 2

\(\frac{\frac}\fir\f{\frac{\frac{\frac{\fracc}\firac{\frac{\frac{\frac{\frac{\frac{\frac}\firac{\f{\frac{\fi

PRESET +/-: Selects programme of Radio.

TUNING -/+: Tunes in the desired radio station.

© ENTER: Acknowledges menu selection.

Presetting the radio stations.

RETURN: Moves backwards in the menu or exits the setup menu.

TITLE: If the current DVD title has a menu, the title menu appears on the screen. Otherwise, the disc menu may not appear.

. 3

I I SKIP: Goes to the next or previous chapter / track / file.

◄◄/▶► SCAN: Searches backward or forward.

■ STOP: Stops playback.

► PLAY, MONO/STEREO: Starts playback. Selects Mono/ Stereo.

II PAUSE/STEP: Pauses playback.

. 4

SPEAKER LEVEL: Sets the sound level of desired speaker.

SOUND EFFECT: Selects a sound effect mode.

VOL +/- (Volume): Adjusts speaker volume.

OPTICAL: Changes input source to optical directly.

MUTE: Mutes the sound.

0-9 numerical buttons: Selects numbered options in a menu.

CLEAR: Removes a number when setting the password.

REPEAT: Selects a play mode. (Repeat/ Random)

6

TV Control buttons: Controls the TV. (LG TV only)


- You can control the sound level, input source, and power switching of LG TVs as well.
 Hold POWER (TV) and press PR/CH (+/-) button repeatedly until the TV turns on or off.
- REC: USB Direct Recording.
- *: This button is not available.







Front panel

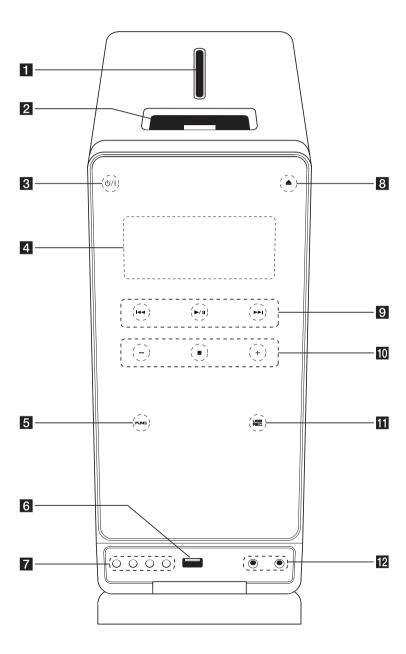







- 1 Disc Slot
- 2 iPod dock
- 3 ()/ (POWER) Switches the unit ON or OFF.
- 4 Display window
 Shows the current status of the unit.
- **5 FUNC.** (FUNCTION)

 Changes the input source or function.
- 6 USB Port Connects an USB device.
- You can choose fixed sound impression.
 - **SET/ DEMO**Confirms the setting. /Press **DEMO** in power off

Confirms the setting. /Press **DEMO** in power off state to demonstrate the function on display window. To cancel it, press **DEMO** again.

TIMER

With the TIMER function you can turn USB, CD play and TUNER reception on or off at a desired time.

CLOCK


For setting the clock and checking the time.

- **8** ♠ (OPEN/CLOSE)
 Ejects or insert the disc from slot loader.
- - ►/II (PLAY / PAUSE)
 Starts playback.
 Pauses playback temporarily, press again to exit pause mode.
- 10 -/+ (VOLUME)Adjusts speaker volume.IIII (STOP)
 - Stops playback.
- **11 USB REC.**Recoding to USB.
- PORT. IN Connects to a portable player with audio outputs.
 - **PHONES** Headphone jack





Rear panel

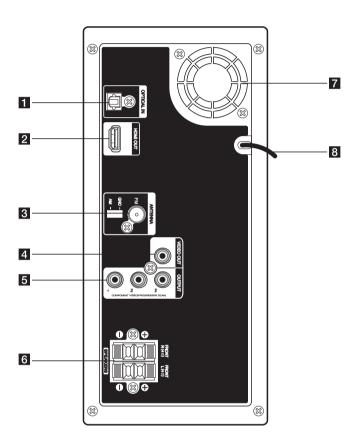

- 1 OPTICAL IN Connects to optical audio equipment.
- Connects to TV with HDMI inputs. (Interface for digital audio and video)
- 3 Antenna Connector FM- Connects the FM wired antenna AM- Connect the AM loop antenna
- 4 VIDEO OUT Connects to a TV with video inputs.

- 5 COMPONENT VIDEO (Y PB PR)OUTPUT (PROGRESSIVE SCAN) Connects to a TV with Y PB PR inputs.
- 6 Speakers connectors Connects the speaker cables.
- 7 Cooling Fan
- 8 Power cord






Attaching the speakers to the unit

To connect the cable to the unit, press each plastic finger pad to open the connection terminals on the unit. Insert the wire and release the finger pad.

Connect the black stripe of each wire to the terminals marked - (minus) and the other end to the terminals marked + (plus).

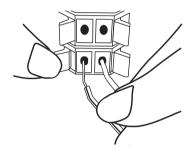



Caution

- The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor.
- Make sure to install the speaker with other people in order to prevent it from falling and causing injuries to the installer.

Connections to Your

Make one of the following connections, depending on the capabilities of your existing equipment.



Note

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the player. Use only one of the connections described in this manual.
- Please refer to the manuals of your TV, Stereo System or other devices as necessary to make the best connections.



Caution

- Make sure the unit is connected directly to the TV. Tune the TV to the correct video input channel
- Do not connect your player via your VCR. The image could be distorted by the copy protection system.






Component Video Connection

Connect the COMPONENT VIDEO OUTPUT (PROGRESSIVE SCAN) jacks on the unit to the corresponding input jacks on the TV using component cables.


You can hear the sound through the system's speakers.

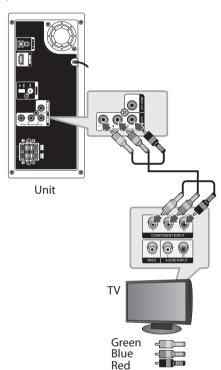

HDMI Out Connection

If you have a HDMITV or monitor, you can connect it to this unit using a HDMI cable (Type A, High Speed HDMI™ cable).

Connect the HDMI OUT jack on the unit to the HDMI IN jack on a HDMI compatible TV or monitor. Set the TV's source to HDMI (refer to TV's Owner's manual).

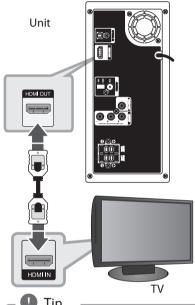

- Tip
- You can fully enjoy digital audio and video signals together with this HDMI connection.
- When you use HDMI connection, you can change the resolution for the HDMI output. (Refer to "Resolution" on page 16.)







Note -

- If a connected HDMI device does not accept the audio output of the unit, the HDMI device's audio sound may be distorted or may not output.
- When you connect a HDMI or DVI compatible device make sure of the followina:
 - Try switching off the HDMI/DVI device and this unit. Next. switch on the HDMI/DVI device and leave it for around 30 seconds. then switch on this unit.
 - The connected device's video input is set correctly for this unit.
 - The connected device is compatible with 720 x 480i (or 576i), 720 x 480p (or 576p), 1 280 x 720p, 1 920 x 1 080i or 1 920 x 1 080p video input.
- Not all HDCP-compatible HDMI or DVI devices will work with this unit.
 - The picture will not be displayed properly with non-HDCP device.
 - This unit does not playback and TV screen is changed to black or green screen or the snow noise may occur on the screen.
- If there is noise or lines on the screen, please check the HDMI cable and usea higher version cable than High Speed HDMI™ cable.


Caution -

- Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.
- When the HDMI connection with HDCP is not verified, TV screen is changed to black or green screen or the snow noise may occur on the screen. In this case, check the the HDMI connection, or disconnect the HDMI cable.

Video Connection

Connect the VIDEO OUT jack on the unit to the video in jack on the TV using a video cable.

You can hear the sound through the system's speakers.

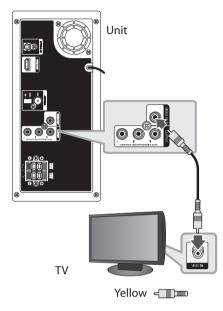





Resolution Setting

The unit provides several output resolutions for HDMI OUT and COMPONENT VIDEO OUT jacks, You can change the resolution using [Setup] menu.

- 1. Press 1 HOME.
- 2. Use </> to select the [Setup] and press ENTER. The [Setup] menu appears.



- 3. Use Λ/V to select [Display] option then press > to move to the second level.
- 4. Use Λ/V to select the [Resolution] option then press > to move to the third level.
- 5. Use Λ/V to select the desired resolution then press **© ENTER** to confirm your selection.



If your TV does not accept the resolution you have set on the player, you can set resolution to 480p (or 576p) as follows:

Press **STOP** for more than 5 seconds

Video Output Resolution

Displayed resolution in display window and outputted resolution may different according to connection type.

[HDMI OUT]: 1 080p, 1 080i, 720p and 480p (or 576p) and 480i (or 576i)


[COMPONENT VIDEO OUT]: 480p (or 576p) and 480i

[VIDEO OUT]: 480i (or 576i).

Optional Equipment Connection

AUDIO (PORT. IN) In Connection

Connect an output of portable device (MP3 or PMP etc) to the AUDIO (PORT, IN) input connector.

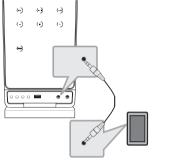

MP3 player, etc...

Listening to music from your portable player or external device

The unit can be used to play the music from many types of portable player or external devices.

- 1. Connect the portable player to the PORT.IN(PORTABLE IN) connector of the unit.
- 2. Turn the power on by pressing (I) (POWER).
- 3. Select the PORTABLE function by pressing → RADIO&INPUT.
- 4. Turn on the portable player or external device and start it playing.







USB Connection

Connect the USB port of USB Memory (or MP3 player, etc.) to the USB port on the front of the unit.



Removing the USB Device from the unit

- 1. Choose a different function mode or press

 STOP twice in a row
- 2. Remove the USB device from the unit.

You can only recharge your iPod through USB port. To listen to music on iPod, refer to the page 18

Compatible USB Devices


- MP3 Player: Flash type MP3 player.
- USB Flash Drive : Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support some USB devices.

USB device requirement

- Devices which require additional program installation connected to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/32) file system is supported.)
- This unit is not supported when the total number of files is 1 000 or more.
- External HDD, Card readers, Locked devices, or hard type usb devices are not supported.
- USB port of the unit cannot be connected to PC. The unit can not be used as a storage device.

OPTICAL In connection

Connect an optical output of Unit (or Digital Device etc) to the OPTICAL IN connector.

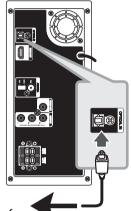

To the digital optical output jack of your component

Home theater speaker ez setup

Listen to sound from TV, DVD and Digital Device with 5.1(2.1 or 2)ch mode. Even in power off mode, if you press **OPTICAL**, then power is on and automatically changed to AUX OPT mode.

- 1. Connect the unit's OPTICAL IN jack to jack on optical out of your TV (or Digital Device etc.).
- 2. Select the AUX OPT by using the **OPTICAL**. To select the AUX OPT directly.
- 3. Listen sound with 5.1(2.1 or 2)ch speaker.
- 4. To escape from AUX OPT by using the **OPTICAL**. Function is retuned to previous one.






Antenna Connection

Connect the supplied FM/ AM antenna for listening to the radio.

Connect the AM loop antenna to the AM antenna connector. (A)

Connect the FM wire antenna to the FM antenna connector. (F)

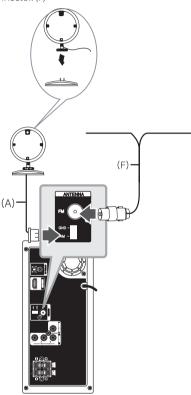


Note

- To prevent noise pickup, keep the AM Loop antenna away from the unit and other components.
- Be sure to fully extend the FM wire antenna. After connecting the FM wire antenna, keep it horizontal.

Playing the iPod

You can enjoy the sound with your iPod. For details about iPod, refer to the iPod User Guide.

1. Connect the iPod firmly.

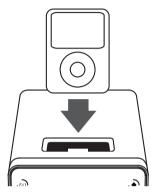

If you turn this unit on, your iPod is automatically turned on and recharging starts.

2. Press **FUNC.** on the unit or **• RADIO&INPUT** on the remote control to select iPod function. You can operate your iPod through an iPod's display by using the supplied remote control and also control on your iPod.



	Do this				
То	ON UNIT	ON REMOTE			
Pauses or restart	►/II	►/II			
Skip	 	 			
Search	Press and hold	Press and hold			
Move to the previous menu	-	<			
Move to the desired item	-	^/V			
Chooses a item	-	>			

Compatible iPod

- We recommend installing the latest software version.
- The unit supports the models as follows/ iPod nano 1 G, 2 G, 3 G, 4 G, 5 G, 6 G/ iPod classic/ iPod 4 G, 5 G/ iPod touch 2 G, 3 G, 4 G/ iPhone 3 G, 4. For some models, the unit may not operate depending on the firmware version.
- Depending on your iPod's software version, you may not control your iPod from the player.



- If this unit displays an error message, follow the message. An error message "ERROR".
 - Your iPod is not connected firmly.
 - -This unit recognizes your iPod as an unknown device.
 - Your iPod is exceptionally low in power.
 - → The battery needs to be charged.
 - → If you charge the battery while iPod is extremely low in power, it may take longer to be charged.
- Depending on your iPod's software version, it may not be possible to control your iPod from this unit. We recommed installing the latest software version.
- If you use an application, make a call, or send and receive SMS text message, etc. on iPod touch or iPhone, disconnect it from iPod dock of this unit and then use it.
- If you have a problem with your iPod, please visit www.apple.com/support.









Adjust the setup settings

By using the Setup menu, you can make various adjustments to items such as picture and sound.

You can also set a language for the subtitles and the Setup menu, among other things. For details on each Setup menu item, see pages 20 to 23.

OSD Initial language settings - Optional

During the first use of this unit, the initial language setup menu appears on your TV screen. You must complete initial language selection before using the unit. English will be selected as the initial language.

1. Press (I) (**POWER**) to turn the unit on. The language setup menu will appear on the screen.



2. Use $\wedge \vee <>$ to select a language then press

The confirm menu will appear.



3. Use <> to select the [Enter] then press • **ENTER** to finish the language setup.

To display and exit the Setup menu

 Press HOME. Displays the [Home Menu].



- 2. Select an [Setup] by using < >.
- Press ENTER. Displays the [Setup].
- 4. Press **The HOME** or **RETURN** to exit in the [Setup] Menu.

About halp many for Catum

about help menu for Setup				
Menu	Buttons	Operation		
▲▼ Move	۸۷	Moving to another menu.		
◀ Move	<	Moving to previous level.		
► Move	>	Moving to next level or selecting menu.		
♂ Close	₹ RETURN	To exit the [Setup] menu.		
⊙Select		To confirm menu.		







Language

Menu Language

Select a language for the Setup menu and then on screen display.

Disc Audio / Disc Subtitle / Disc

Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.

[Original]

Refers to the original language in which the disc was recorded.

[Other]

To select another language, press numeric buttons and then **© ENTER** to enter the corresponding 4-digit number according to the language code list on the page 37. If you enter the wrong language code, press **CLEAR**.

[Off (for Disc Subtitle)]

Turn off Subtitle.

Display

TV Aspect

Select which screen aspect to use based on the shape of your TV screen.

[4:3]

Select when a standard 4:3 TV is connected.

[16:9]

Select when a 16:9 wide TV is connected.

Display Mode

The Display Mode setting works only when the TV Aspect mode is set to 4:3.

[Letterbox]

Displays a wide picture with bands on the upper and lower portions of the screen.

[Panscan]

Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit. (If the disc/file is not compatible with Pan Scan, the picture is displayed at Letterbox ratio.)

Resolution

Sets the output resolution of the Component and HDMI video signal. Refer to "Resolution Setting" for details about the resolution (page 16).

[Auto]

If the HDMI OUT jack is connected to TVs providing display information (EDID), automatically selects the resolution best suited to the connected TV. If the COMPONENT VIDEO OUT is only connected, this changes the resolution to 480i (or 576i) as default resolution.

[1080p]

Outputs 1 080 lines of progressive video.

[1080i]

Outputs 1 080 lines of interlaced video.

[720p]

Outputs 720 lines of progressive video.

[480p (or 576p)]

Outputs 480 (or 576) lines of progressive video.

[480i (or 576i)]

Outputs 480 (or (576) lines of interlaced video.





Audio

DRC (Dynamic Range Control)

Make the sound clear when the volume is turned down (Dolby Digital only). Set to [On] for this effect.

Select [On] to mix karaoke channels into normal stereo.

This function is effective for multi-channel karaoke DVDs only.

HD AV Sync

Sometimes Digital TV encounters a delay between picture and sound. If this happens you can compensate by setting a delay on the sound so that it effectively 'waits' for the picture to arrive: this is called HD AV Sync. Use ΛV (on the remote control) to scroll up and down through the delay amount, which you can set at anything between 0 and 300m sec.

Lock (Parental Control)

Initial Setting the Area Code:

When you use this unit for the first time, you have to set the Area Code.

- 1. Select the [Lock] menu and then press >.
- 2. Press >.

To access the [Lock] options, you must input the password you have created. Input a password and press **© ENTER**. Enter it again and press **© ENTER** to verify. If you make a mistake before pressing **©** ENTER, press CLEAR.

- 3. Select the first character using Λ **V** buttons.
- 4. Press **© ENTER** and select the second character using Λ V buttons.
- 5. Press **© ENTER** to confirm your Area code selection.

Rating

Blocks playback of rated DVDs based on their contents. Not all discs are rated.

- 1. Select [Rating] on the [Lock] menu then press
- 2. Input a password and press **© ENTER**.
- 3. Select a rating from 1 to 8 using the ΛV buttons.

[Rating 1-8]

Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

[Unlock]

If you select unlock, parental control is not active and the disc plays in full.

4. Press **© ENTER** to confirm your rating selection.







Password

You can enter or change password.

- 1. Select [Password] on the [Lock] menu and then press >.
- Press **© ENTER**.
- 3. Input a password and press **© ENTER**. To change the password, press **© ENTER** when the [Change] option is highlighted. Input a password and press **© ENTER**. Enter it again and press **© ENTER** to verify.
- Press HOME to exit the menu.



If you forget your password, you can clear it using the following steps:

- 1. Select the [Setup] menu on the [Home Menul.
- 2. Input the 6-digit number "210499" and press **© ENTER**. The password is cleared.

Area Code

Enter the code of the area whose standards were used to rate the DVD video disc, based on the list on page 36.

- 1. Select [Area Code] on the [Lock] menu then press >.
- 3. Select the first character using Λ V buttons.
- 4. Press **© ENTER** and select the second character using Λ V buttons.
- 5. Press **© ENTER** to confirm your Area code selection.

Others

DivX VOD

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

AROUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod. divx.com for more information on how to complete your registration.

[Register]

Displays the registration code of your player.

[Deregister]

Deactivate your player and display the deactivation code.



All the downloaded videos from DivX VOD can only be played back on this unit.







Using the Home Menu

1. Press **THOME**. Displays the [Home Menu].



- 2. Select an option by using <>.
- 3. Press **© ENTER** then selected option menu.

[Music] - Displays [MUSIC] menu.

[Movie] – Start video media's playback or displays the [MOVIE] menu.

[Photo] - Displays [PHOTO] menu.

[Setup] - Displays the [Setup] menu.



Note

You can not select the [Music], [Movie] or [Photo] option when the USB device is not connected or a disc is not inserted.

Basic Operations

- 1. Insert the disc by using the **△ OPEN/CLOSE** or Connect the USB device to the USB port.
- Press HOME. Displays the [Home Menu].
- 3. Select an option by using <>. If you select the [Movie], [Photo] or [Music] option when you connect up to two devices, it appears as belows. Select a media then press • ENTER.



4. Press **© ENTER** then selected option menu.



- · For the most Audio CD and DVD-ROM discs, playback starts automatically.
- The unit plays only music file contained in the USB storage device or disc automatically.

То	Do this
Stop	Press ■ STOP.
Playback	Press ▶ PLAY, MONO/ STEREO.
Pause	Press II PAUSE/STEP.
Frame-by- Frame playback	Press II PAUSE/STEP repeatedly to play title Frameby-Frame. (DVD, DivX only)
Skipping to the next/ previous chapter/ track/ file	During playback, press I◀◀/ ▶►I SKIP to go to the next chapter/ track/ file or to return to the beginning of the current chapter/ track/ file. Press I◀■ SKIP twice briefly to step back to the previous chapter/ track/ file.
Locating a point quickly by playing a file in fast forward or fast reverse	During playback, press ◀◀/ ▶► SCAN repeatedly to select the required scan speed. To return to normal speed, press ► PLAY, MONO/ STEREO.
Playing repeatedly or randomly	Press REPEAT repeatedly, and the current title, chapter or track will be played back repeatedly or randomly. - DVD: Chapter/Title/ Off - DivX: Title/ All/ Off - Audio CD/ MP3/ WMA: Track/ All/ Random/ Off
Slowing down the playing speed	In the pause mode, press SLOW (◀◀ or ▶►) to select the required speed. (DVD, DivX only) The DivX file cannot be slow down reverse playback.





Displaying Disc Information on-screen

You can display various information about the disc loaded on-screen.

- 1. Press I INFO/DISPLAY to show various playback information. The displayed items differ depending on the disc type or playing status.
- 2. You can select an item by pressing ΛV and change or select the setting by pressing <>.

Title - Current title number/ total number of titles. Chapter - Current chapter number/ total number

of chapters. Time - Elapsed playing time.

Audio – Selected audio language or channel.

Subtitle - Selected subtitle.

Angle - Selected angle/ total number of angles.



If any button is not pressed for a few seconds, the on-screen display disappears.

To display the DVD Menu

When you play a DVD which contains several menu, you can select the menu you want using the Menu.

- 1. Press DISC MENU. The disc's menu appears.
- 2. Select the menu by using $\Lambda V < >$.
- Press ► PLAY, MONO/STEREO to confirm.

To display the DVD title

When you play a DVD which contains several title. you can select the title you want using the Menu.

- 1. Press TITLE. The disc's title appears.
- 2. Select the menu by pressing $\Lambda V < >$.
- Press ► PLAY, MONO/STEREO to confirm.

1.5 times speed playback DVD

The 1.5 speed allows you to watch the pictures and listen to the sound guicker than playing at a normal

- 1. During playback, press ▶ PLAY, MONO/ STEREO to play at 1.5 times speed. "►X1.5" appears on the screen.
- 2. Press ▶ PLAY, MONO/STEREO again to exit.

Screen Saver

The screen saver appears when you leave the unit in Stop mode for about five minutes.

Starting play from selected time

DVD MOVIE

To start playing at any chosen time on the file or

- 1. Press INFO/DISPLAY during playback.
- 2. Press $\wedge V$ to select the time clock icon and "--:--" appears.
- 3. Input the required start time in hours, minutes, and seconds from left to right. If you enter the wrong numbers, press **CLEAR** to remove the numbers you entered. Then input the correct numbers.
 - For example, to find a scene at 1 hour, 10 minutes, and 20 seconds, enter "11020" by using numerical buttons.
- 4. Press **© ENTER** to confirm. Playback starts from the selected time.





Resume playback DVD MOVIE MUSIC ACD

The unit records the point where you pressed the ■ STOP depending on the disc.

If "■ (Resume Stop)" appears on the screen briefly, press ▶ PLAY, MONO/STEREO to resume playback (from the scene point).

If you press **STOP** twice or unload the disc, "■"(Complete Stop) appears on the screen. The unit will clear the stopped point.



Note

The resume point may be cleared when a button is pressed (for example; (1) (POWER),

△ OPEN/CLOSE, etc).

Changing subtitle code page MOVIE

If the subtitle is not displayed properly, you can change the subtitle code page to view the subtitle file properly.

- 1. During playback, press 🗔 INFO/DISPLAY to display the On-Screen display.
- 2. Use ΛV to select the [Code Page] option.
- 3. Use <> to select desired code option.
- 4. Press RETURN to exit the On-Screen display.

Marked Playback MUSIC ACD

The mark function enables you to store your favourite files from any disc or USB device in the unit memory.

1. Select [Music] on the [Home Menu].

Returning to the upper folder. (MP3/WMA only)

> File information will be displayed according to the ID3TAG information on the appropriate music file. (MP3 only)



Selecting all tracks/ files.

Deselecting all tracks/files.

Moving to the previous or next file list.

- 2. Select a desired music on the [List] by using the ∧ V then press **MARKER** to appears the mark on the list.
- 3. Press **⊙** ENTER or **▶** PLAY, MONO/STEREO. Displays the play mode.
- 4. Select the play mode by using the ΛV and press ENTER.

[Mark Play]

Marked playback.

[Current Play]

Normal playback.



Note

If you want to select all files on the list, select [Select All] and press **© ENTER**.









To delete a Marker

- 1. Use $\bigwedge V$ to select the track that you wish to erase from the marked file.
- Press MARKER.

To delete all Markers

Use $\Lambda V <>$ to select [Deselect All] then press \odot ENTER in program edit mode.



Note -

The markers are also cleared when the disc or USB device is removed, the unit is switched to power off or the function is switched to others.

Viewing a PHOTO file **PHOTO**

This unit can play discs with photo files.

1. Select [Photo] on the [Home Menu] and press

> Moving to the previous or next file list.



Returning to the upper folder.

- 2. Press Λ V to select a folder, and then press \odot ENTER.
- 3. If you want to view a slide show, press Λ Vto highlight a file and press ▶ PLAY, MONO/ STEREO.

About help menu in the [Photo] menu

Menu	Buttons	Operation	
► Slide Show	PLAY, MONO/ STEREO	Viewing a slide show.	
▲▼♦ Move	^ V<>	Moving to another file or content.	
⊚ Select		Viewing a particular file.	
ঁ Close	♂ RETURN	Returning to the [Home Menu].	

About help menu in the full screen

Menu	Buttons	Operation
Menu	INFO/ DISPLAY	Displaying the Option menu.
◄/► Prev./ Next		Moving to another file.
رة Close	RETURN	Returning to the [Photo] menu.



Operating







You can use various options during viewing a photo in full screen.

- 1. While viewing a photo in full screen, press ☐ **INFO/DISPLAY** to display the option menu.
- 2. Select an option using $\Lambda V <>$.



- Current photo/Total number of photos -Use <> to view previous/next photo.
- Slide Show ►/II Press ⊙ ENTER to start or pause slide show.
- Speed x3/ x2/ x1 − Use **⊙** ENTER to select a delaying speed between photos in a slide show.
- 4 Rotate Press ENTER to rotate the photo.
- **Go to list** − Press **⊙ ENTER** to return [Photo] menu.

Last Scene Memory DVD

This unit memorizes last scene from the last disc. that is viewed. The last scene remains in memory even if you remove the disc from the unit or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled.

System Select - Optional

You must select the appropriate system mode for your TV system. Press and hold II PAUSE/STEP for more than five seconds to be able to select a system in the [Home Menul.



Note

If the USB device is connected or a disc is inserted, this function is not operated.

Adjust the speaker level settings

You can adjust the sound level of each speaker.

- 1. Press **SPEAKER LEVEL** repeatedly to select a desired speaker to set.
- 2. Press **VOL -/+** to adjust the sound level of the selected speaker while the level setting memu is displayed on the display window.
- 3. Repeat and adjust the sound level of the other speakers.

Auto Power Down

This unit will be off itself to save electronic consumption in the case main unit is not connected to external device and is not used for 25 minutes.

So does this unit after six hours since Main unit has been connected to other device using analog input.



Setting the Clock

- 1. Turn the unit on.
- 2 Press CLOCK for at least 2 seconds.
- 3. Choose time mode by pressing ► ✓/►►.
 - AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
- 4. Press **SET** to confirm your selection.
- Select the hours by pressing ►
- Press SET.
- 7. Select the minutes by pressing ► ✓ / ► ► I.
- 8. Press SET.

Using your player as an alarm clock

- 1. Turn the unit on.
- Press TIMER. Fach functions flashes.
- 3. Press **SET** when the function you want to be woken by is showing.
- 4. "ON TIME" will be displayed. This is your desired time to unit turns on. Press | change the hours and minutes and press SET to
- 5. The "OFF TIME" will be displayed. This is your desired time to unit turns off.
- 6. Press ► to change the hours and minutes and press SET to save.
- 7. Press ◄◄/▶▶ to change the volume and press **SET** to save. The clock icon "(C)" shows that the alarm is set.
- 8. Press TIMER button 2 times. You can check the setting status.



Note -

- If you set the clock time, you can check the time by pressing **CLOCK** even when the player is turned off.
- If you set the clock time and alarm, you can check the alarm icon "()" by pressing **CLOCK** even when the player is turned off.
- If you set the clock time and alarm, you can check the alarm icon "(-)" and setting information by pressing **TIMER** even when the unit is turned off.

Sleep Timer Setting

Press **SLEEP** one or more times to select delay time between 10 and 180 minutes, after the unit will turn off

To check the remaining time, press **SLEEP**.

To cancel the sleep function, press **SLEEP** repeatedly until "SLEEP 10" appears, and then press **SLEEP** once again while "SLEEP 10" is displayed.



You can check the remaining time before the Unit turns off.

Press **SLEEP** The remaining time appears in the display window.

Dimmer

Press **SLEEP** once. The display window will be darken by half. To cancel it, press **SLEEP** repeatedly until dim off. If touch the buttons in Sleep Timer mode, the buttons will be lightening for 5 seconds and darkening again.

Turn off the sound temporarily

Press MMUTE to mute your unit.

You can mute your unit, for example, to answer the telephone, the "■X" is displayed in the display window

DFMO

In the power off state, it demonstrates the function on display window by pressing **DEMO**. To cancel the DEMO, press it again.



Note

- While DEMO, this unit will keep DEMO status even if you unplug the power cord connection.
- You can enjoy other functions during the DEMO. Then the DEMO will pause to temporary.
 - Without input key in 10 sec, the DEMO will play back automatically.





Be sure that both FM and AM aerials are connected. (Refer to the page 18)

Listening to the radio

- 1. Press + RADIO&INPUT until FM or AM appears in the display window. The last received station is tuned in.
- 2. Press and hold **TUNING** (-/+) for about two seconds until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.

Press TUNING (-/+) repeatedly.

3. Adjust the volume by pressing -/+ on the front panel or by pressing VOL (+/-)on the remote control repeatedly.

Presetting the Radio Stations

You can preset 50 stations for FM and AM. Before tuning, make sure that you have turned down the volume.

- 1. Press RADIO&INPUT until FM appears in the display window.
- 2. Select the desired frequency by using TUNING
- 3. Press **O ENTER** a preset number will flash in the display window.
- 4. Press PRESET (-/+) to select the preset number vou want.
- Press **© ENTER**. The station is stored.
- 6. Repeat the steps 2 to 5 to store other stations.

Deleting all the saved stations

- 1. Press and hold CLEAR for two seconds. "ERASE ALL" will flash up on the unit display.
- 2. Press **CLEAR** to erase all saved of the radio stations.

Deleting a saved station

- 1. Press **PRESET +/-** to Select a preset number you want to delete.
- 2. Press **CLEAR**, the preset number will blink in the display window.
- 3. Press **CLEAR** again, to delete the selectd preset number.

Improving poor FM reception

Press ▶ PLAY, MONO/STEREO on the remote control. This will change the tuner from stereo to mono and usually improve the reception.



Sound adjustment

Setting the surround mode

This system has a number of pre-set surround sound fields. You can select a desired sound mode by using **SOUND EFFECT**.

You can change the **SOUND EFFECT** using **< >** arrow key while the sound effect information is displayed on.

The displayed items for the equalizer maybe different depending on sound sources and effects.

On Display	Description			
NAT PLUS	The NAT PLUS is Natural Plus sound effect. You can enjoy the natural sound effect same as a 5.1-channel. (Optional)			
NATURAL	You can enjoy comfortable and natural sound.			
Local specialization equalizer	Regionally optimized sound effect. (FORRO/ FUNK/ SERTANEJO/ DANGDUT/ ARABIC/ PERSIAN/ INDIA/ REGUETON/ MERENGUE/ SAMBA/ SALSA/ CUMBIA/ AFRO)			
AUTO EQ	Realizes the sound equalizer that is the most similar to the genre of which is included in the MP3 ID3 tag of song files.			
POP CLASSIC JAZZ ROCK	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock pop, jazz or classic concert.			
MP3 OPT	This function is optimized for compressible MP3, WMA file. It improves the treble sound.			
BASS BLAST	During playback, reinforce the treble, bass and surround sound effect.			
LOUDNESS	Improves the bass and treble sound.			

On Display	Description
VIRTUAL	You can enjoy more virtual surround sound.
BYPASS	You can enjoy the sound without equalizer effect.



- In some of surround modes, some speakers, there's no sound or low sound. It depends on the mode of surround and the source of audio, it is not defective.
- You may need to reset the surround mode, after switching the input, sometimes even after the sound track changed.







Recording to USB

You can record music or sound souce to USB device by connecting in to the port on the unit.

- 1. Connect the USB device to the unit.
- 2. Select a mode in which you want to record. Play back a sound source first.
- 3. Start the recording by pressing REC.
- 4. To stop recording, press STOP.

[All tracks/ files recording]

Record to USB in stop or play mode.

[Program list recording]

After marking desired file(s) and you can record it to USB (Refer to the page 26).

It'll be stored as follows.

Audio CD	CD_REC - TRK_001 - TRK_002
MP3/ WMA	FILE_REC - 001_ABC(File name) - 002_DEF(File name)
The other sources (Tuner, Portable)	EXT_REC - AUDIO_001 - AUDIO_002 - :



Note

- You can check the recording percentage rate for the USB record on the screen during the recording. (Audio CD or MP3/ WMA CD only)
- During recording MP3/WMA, there is no sound.
- When you stop recording during playback. the file that has been recorded at that time will be stored. (Audio CD only)
- Do not remove the USB device or turn off the unit during USB recording. If not, an incomplete file may be made and not deleted on PC.
- · If USB recording does not work, the message like "NO USB", "ERROR", "USB FULL" or "NO REC" is displayed on the display window.
- Multi card reader device or external HDD can not be used for USB recording.
- A file is recorded by 128 Mbyte (about 2 hours) when you record for a long term. There are recorded less than 4 files.
- When you stop recording during playback, the file will not be stored.
- The files in the sub-folders are not recorded during all track recording.
- You may not record more than 999 files.
- The numbering of the recording file is entered from the lowest number. So if you delete some of the recording files, the next recording file could be the lowest number among them.

The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

> Be responsible Respect copyrights.





Using a Bluetooth wireless technology

About Bluetooth

Bluetooth® is wireless communication technology for short range connection.

The available range is within 10 meters.

(The sound may be interrupted when the connection interfered by the other electronic wave or you connect the bluetooth in the other rooms.) Connecting individual devices under Bluetooth® wireless technology does not incur any charges. A mobile phone with Bluetooth® wireless technology can be operated via the Cascade if the connection was made via Bluetooth® wireless technology. Available Devices: Mobile phone, MP3, Laptop. PDA (This units be supported the Stereo Headset.)

Bluetooth Profiles

In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile. A2DP (Advanced Audio Distribution Profile)

Listening to music of a Bluetooth device

Pairing your unit and Bluetooth device

Before you start the pairing procedure, make sure the Bluetooth feature is turned on in to your Bluetooth device. Refer to your Bluetooth device's user guide. Once a pairing operation is performed. it does not need to be performed again.

- 1. Select the Bluetooth function by using the RADIO&INPUT.
- 2. Operate the Bluetooth device and perform the pairing operation. When searching for this unit with the Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device. Your unit appears as "LG Audio".
- 3. Enter the PIN code. PIN code · 0000
- 4. When this unit successfully paired with your Bluetooth device, Bluetooth LED of this unit lights up and appears "PAIRED".



Depending on the Bluetooth device type, some device have a different pairing way.

5. Listening to music. To play a music stored on your Bluetooth device, refer to your Bluetooth device's user guide.







Note

- The sound may be interrupted when the connection interfered by the other electronic wave.
- You cannot control the Bluetooth device with this unit.
- Pairing is limited one Bluetooth device per one unit and multi-pairing is not supported.
- Although the distance between your Bluetooth and the set is less than 10m, there are obstacles between both, your Bluetooth device cannot be connected.
- Depending on the type of the device, you may not be able to use the Bluetooth function.
- You can enjoy wireless system using phone, MP3, Notebook, headset, etc..
- The Electrical malfunction due to devices using same frequency such as Medical equipment, Microwaves or wireless LAN devices, the connection will be disconnected.
- When someone stands and interrupts communication between Bluetooth device and the player, the connection will be disconnected.
- If the gotten away of the distance between Bluetooth and the unit, the sound quality is lower and lower the connection will disconnect when the space between the Bluetooth and the unit gets out of the operating range of Bluetooth.
- The device with Bluetooth wireless technology is disconnected, if you turn off the main unit or put the device away from the main unit more than 10m.





Troubleshooting

PROBLEM	CORRECTION
No power	Plug the power cord into the wall outlet securely.
No picture	Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.
Tto piecure	Connect the video cables securely to both the TV and unit.
	Select the correct input mode of the unit so you can hear the sound from the unit.
There is little or no sound	Connect the audio cables into the connection terminals correctly.
	Replace with a new audio cable.
The DVD picture quality is poor	Clean the disc using a soft cloth with outward strokes.
	Insert a disc.
A DVD/CD will not play	Insert a playable disc (check the disc type, colour system and regional code).
	Enter your password or change the rating level.
Humming noise heard while a DVD	Clean the disc using a soft cloth with outward strokes.
or CD is playing	Move unit and audio components further away from your TV.
	Check the antenna connection and adjust its position.
Radio stations can't be tuned in	Attach an external aerial if necessary.
properly	Tune to the station manually.
	Preset some radio stations, see page 30 for details.
	The remote is not pointed directly at the unit. Point the remote directly at the unit.
The remote control doesn't work well / at all	The remote is too far from the unit. Use the remote within 23 feet (7m) of the unit.
	There is an obstacle in the path between the remote control and the unit. Remove the obstacle.
	The battery in the remote control are flat. Replace the battery with new ones.
iPod does not work.	Check whether the player is connected to the unit correctly. Connect it to the unit correctly.



Area Code List

Choose an area code from this list.

Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Fiji	FJ	Monaco	MC	Singapore	SG
Argentina	AR	Finland	FI	Mongolia	MN	Slovak Republic	SK
Australia	AU	France	FR	Morocco	MA	Slovenia	SI
Austria	AT	Germany	DE	Nepal	NP	South Africa	ZA
Belgium	BE	Great Britain	GB	Netherlands	NL	South Korea	KR
Bhutan	BT	Greece	GR	Antilles	AN	Spain	ES
Bolivia	ВО	Greenland	GL	New Zealand	NZ	Sri Lanka	LK
Brazil	BR	Hong Kong	HK	Nigeria	NG	Sweden	SE
Cambodia	KH	Hungary	HU	Norway	NO	Switzerland	CH
Canada	CA	India	IN	Oman	OM	Taiwan	TW
Chile	CL	Indonesia	ID	Pakistan	PK	Thailand	TH
China	CN	Israel	IL	Panama	PA	Turkey	TR
Colombia	CO	Italy	IT	Paraguay	PY	Uganda	UG
Congo	CG	Jamaica	JM	Philippines	PH	Ukraine	UA
Costa Rica	CR	Japan	JP	Poland	PL	United States	US
Croatia	HR	Kenya	KE	Portugal	PT	Uruguay	UY
Czech Republic	CZ	Kuwait	KW	Romania	RO	Uzbekistan	UZ
Denmark	DK	Libya	LY	Russian		Vietnam	VN
Ecuador	EC	Luxembourg	LU	Federation	RU	Zimbabwe	ZW
Egypt	EG	Malaysia	MY	Saudi Arabia	SA		
El Salvador	SV	Maldives	MV	Senegal	SN		
Ethiopia	ET	Mexico	MX				









Language code List

Use this list to input your desired language for the following initial settings: [Disc Audio], [Disc Subtitle] and [Disc Menu].

Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	French	7082	Lithuanian	7684	Sindhi	8368
Afrikaans	6570	Frisian	7089	Macedonian	7775	Singhalese	8373
Albanian	8381	Galician	7176	Malagasy	7771	Slovak	8375
Ameharic	6577	Georgian	7565	Malay	7783	Slovenian	8376
Arabic	6582	German	6869	Malayalam	7776	Spanish	6983
Armenian	7289	Greek	6976	Maori	7773	Sudanese	8385
Assamese	6583	Greenlandic	7576	Marathi	7782	Swahili	8387
Aymara	6588	Guarani	7178	Moldavian	7779	Swedish	8386
Azerbaijani	6590	Gujarati	7185	Mongolian	7778	Tagalog	8476
Bashkir	6665	Hausa	7265	Nauru	7865	Language	Code
Basque	6985	Hebrew	7387	Nepali	7869	Tajik	8471
Bengali; Bangla	6678	Hindi	7273	Norwegian	7879	Tamil	8465
Bhutani	6890	Hungarian	7285	Oriya	7982	Telugu	8469
Bihari	6672	Icelandic	7383	Panjabi	8065	Thai	8472
Breton	6682	Indonesian	7378	Pashto, Pushto	8083	Tonga	8479
Bulgarian	6671	Interlingua	7365	Persian	7065	Turkish	8482
Burmese	7789	Irish	7165	Polish	8076	Turkmen	8475
Byelorussian	6669	Italian	7384	Portuguese	8084	Twi	8487
Chinese	9072	Japanese	7465	Quechua	8185	Ukrainian	8575
Croatian	7282	Kannada	7578	Rhaeto-Romance	8277	Urdu	8582
Czech	6783	Kashmiri	7583	Rumanian	8279	Uzbek	8590
Danish	6865	Kazakh	7575	Russian	8285	Vietnamese	8673
Dutch	7876	Kirghiz	7589	Samoan	8377	Volapük	8679
English	6978	Korean	7579	Sanskrit	8365	Welsh	6789
Esperanto	6979	Kurdish	7585	Scots Gaelic	7168	Wolof	8779
Estonian	6984	Laothian	7679	Serbian	8382	Xhosa	8872
Faroese	7079	Latin	7665	Serbo-Croatian	8372	Yiddish	7473
Fiji	7074	Latvian, Lettish	7686	Shona	8378	Yoruba	8979
Finnish	7074	Lingala	7678			Zulu	9085









Trademarks and Licenses



iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod, iPhone may affect wireless performance.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



"DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.

DOLBY. DIGITAL

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.





What is SIMPLINK?

Some functions of this unit are controlled by TV's remote control when this unit and LGTV with SIMPLINK are connected through HDMI connection. Controllable functions by LGTV's remote control; Play, Pause, Scan, Skip, Stop, Power Off, etc.

- Refer to the TV owner's manual for the details of SIMPLINK function.
- LG TV with SIMPLINK function has the logo as shown above.
- Use a higher version cable than High Speed HDMI™ cable.

Bluetooth[®]

Bluetooth® wireless technology is a system which allows radio contact between electronic devices within a max. range of 10 meters.

Connecting individual devices under Bluetooth® wireless technology does not incur any charges. A mobile phone with Bluetooth® wireless technology can be operated via the Cascade if the connection was made via Bluetooth® wireless technology.

The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by LG Flectronics is under license. Other trademarks and trade names are those of their respective owners.



Specifications

General	
Power requirements	Refer to main label.
Power consumption	Refer to main label.
Dimensions (W x H x D)	135 X 295 X 315 mm without foot
Net Weight (Approx.)	3.45 kg
Operating temperature	41 °F to 95 °F (5 °C to 35 °C)
Operating humidity	5 % to 90 %

Inputs/ Outputs		
VIDEO OUT	1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1	
COMPONENT VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, sync negative, RCA jack x 1 (Pb)/(Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2	
HDMI OUT (video/audio):	19 pin Type A, HDMI™ Connector	
DIGITAL IN (OPTICAL):	3 V (p-p), Optical jack x 1	
PORT. IN	0.5Vrms (3.5 mm stereo jack)	

System			
Laser	Semiconductor laser, wavelength: 650 nm		
Signal system	Standard NTSC/PAL color TV system		
Frequency response	20 Hz to 20 kHz (48 kHz, 96 kHz, 192 kHz sampling)		
Signal-to-noise ratio	More than 80 dB		
Harmonic distortion	0.05 % at 1 W		
Dynamic range	More than 85 dB		
Bus Power Supply	USB DC 5 V === 500 mA iPod DC 5 V === 1 A		

Amplifier	
Stereo mode	$80 \text{ W} + 80 \text{ W} (4\Omega \text{ at 1kHz})$

Tuner	
FM Tuning Range	87.5 to 108.0 MHz or 87.50 to 108.00 MHz
AM Tuning Range	522 to 1 620 kHz, 520 to 1 710 kHz or 522 to 1 710 kHz





Front Speaker		
Туре	3 Way 4 speaker	
Impedance Rated	4Ω	
Input Power	80 W	
Max. Input Power	160 W	
Net Dimensions (W x H x D)	126 X 295 X 315 mm	
Net Weight	4.35 kg	

Design and specifications are subject to change without notice.





Maintenance

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

Maintaining the Unit

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.

Notes on Discs

Handling Discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.

Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning Discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center to out.

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.











