



**LG**

Life's Good

# OWNER'S MANUAL EZ SLIM WALL MOUNT

Please read this manual carefully before installation  
and retain it for future reference.

LSW600B



## Accessories



Wall mount anchor  
8 units



Wall mount screw  
8 units



Guide spacer 4 units



Guide space screw 4 units  
(M8X25 mm)



Safety clip  
2 units



User manual



Set protection  
cushion 4 units



## IMPORTANT SAFETY INSTRUCTIONS

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.



### Warning

This wall mount should be installed by a trained and experienced installer designated by the retailer.

Having the product installed by a non-specialized installer is very dangerous and can cause damage or injury.

Use a trained and experienced installer to move or replace the wall mount, if needed.

Installation requires special techniques and moving or installing the product on your own can cause serious safety issues.

When installing the wall mount, never hang the power or signal cable on the rear side the TV.

The cord can be damaged and cause a fire, an electric shock or damage to the product.

Do not install the product where the weight cannot be supported.

If the strength of the location where the wall mount is installed is not strong enough, it can fall off and cause an injury.

After installing the wall mount, do not hang on the product and prevent severe impact to the product.

The product can fall off and cause injury.



## Caution

Install the product according to the directions in the user manual.

If the product is not installed based on the directions in the user manual, it can cause a serious injury or damage to the product.

When installing the product or adjusting the height of the product after installing, always do so with 2 people.

Working alone can cause the product to fall off and result in injury or damage to the product.

During the installation, check the type of wall material and use the sealed anchor and screw if the conditions comply.

If you do not use the designated anchor or screw, the mount may not be able to withstand the weight of the product and cause a safety issue.

When drilling holes in the wall, always use a drill bit and drill of designated diameter. Also follow the designated directions for the depth of the hole.

If the product is installed without following the designated method, the product may be unstable and cause a safety issue.

Do not wipe the product with a wet towel and do not use any heater or humidifier below where the product is installed.

If water flows into the product or if moisture and heat are applied to the product, it can cause a fire, an electric shock or problem to the product.

Do not install the product near any object that may cause vibration.

Do not install the product near any high voltage power cable or power source.

Unplug the power cord from the power outlet before installing the product.

If you install the product with the power cord plugged, it can cause an electric shock or a fire.

Do not install the product with bare hands. Always wear proper work gloves.

It can cause an injury.

Do not allow the video connectors connected to the display to press against the wall. Use the included right-angle adapters if needed.

Only use attachments/accessories specified by the manufacturer.



## Before installation

- \* Do not use the product for purposes other than mounting a display on the wall.
- \* When installing/using the wall mount, be cautious of product damage and avoid accidents.
- \* If you have not fully read and understood the installation manual, do not install the product and contact the dealer to have a specialized installer install the product for you.
- \* Even if you are not a specialized installer, it is advantageous to have experience in mechanical or construction field in completely understanding this manual and installing the product.
- \* This product is designed to be mounted to walls that use standard intervals between the studs.
- \* Install the screw to attach the wall mount so that it can be assembled at the center from both ends of the studs. Use of stud finder, a separate device, is recommended.
- \* Install the product only on a vertical wall. The manufacturer is not responsible for issue from installing the product on severely wall or on the ceiling.
- \* Keep the included accessories out of reach of babies or children as it can cause safety issues including suffocation from swallowing the parts.
- \* Make sure screws are tight against the wall, but do not overtighten.
- \* Be careful not to install a TV that exceeds the weight restrictions of the wall mount.
- \* Be careful with the tools used during installation to prevent accidents or damage.




# Installation method

- Tools you will need : Phillips head "+" driver (Manual or motorized) Ø4 mm drill bit for wood or steel / Level / Stud finder / Drill. You may also need an 8 mm socket wrench or an Ø8 mm drill bit for concrete.

1

## Fixating the mounting bracket on the TV

- If the screw will not fully tighten when using a guide spacer, recheck the assembly depth of the screw and refer to the technical service manual.

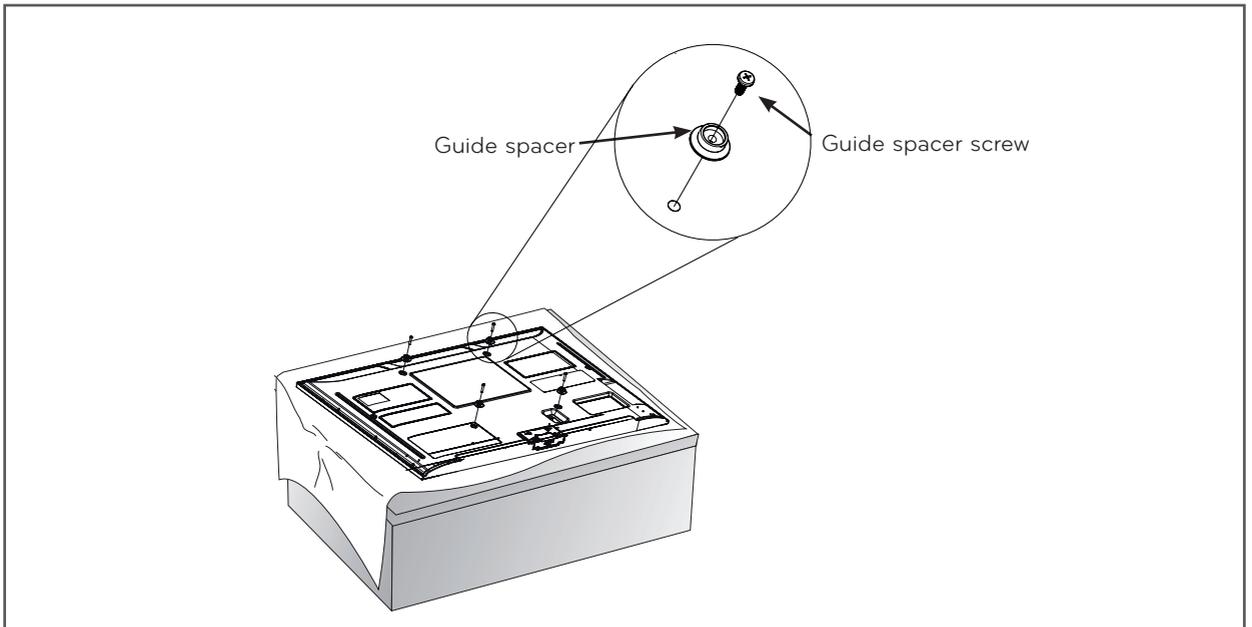

<Work procedure>

1. Check to see if the display has screws installed into the mounting holes. If so, remove those.
2. Assemble the guide spacer and the guide spacer screw in order as shown in the picture.

Lay the set down and secure the guide spacer and the set using the screws.


- Put the product on the table placing the screen face down. When doing this, it is highly recommended to place a floor cushion or soft clothes on the flat table before putting the product on it to avoid any damage of the screen surface.
- Tighten the screw until the set, guide spacer and the screw are fully pressing against one another.
- Use the "+" driver (Manual or motorized) when tightening the screw.

## 2 How to attach to masonry walls

- Use the anchors for wall material of concrete, light concrete, strong natural stone, soft natural stone masonry brick and hollow block that do not crack.

Please follow the below direction.


- Check the material of the wall and the thickness of the finishing.
- When installing the product on wall material not designated, install the product so that each fixated location can withstand the pull out load of 70 kgf (686 N) and shear load of 100 kgf (980 N) or above.

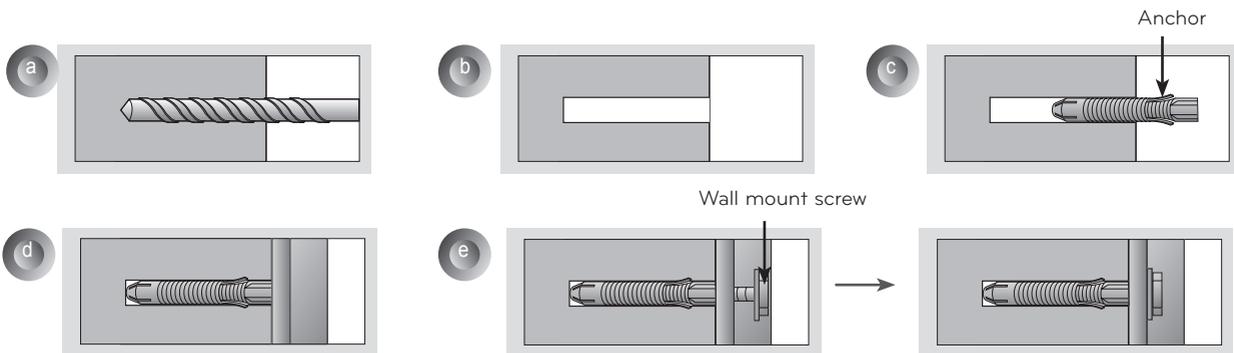

- Use the Ø8 mm drill bit for concrete and hammer (Impact) drill.

- Use a drill bit Ø8 mm to drill a hole for the anchor location within a depth of 80 mm ~ 100 mm
- Clean the drilled hole.
- Insert the sealed anchor to the hole. (When inserting the anchor, use a hammer.)
- Set the wall mount on the wall by aligning to the location of the hole. and, set the angle adjusting part to face upward.
- Align the wall mount bolt to the hole and tighten it. Then, fasten the bolts at torque of 45 - 60 kgf/cm.


## 3 How to install the wall mount

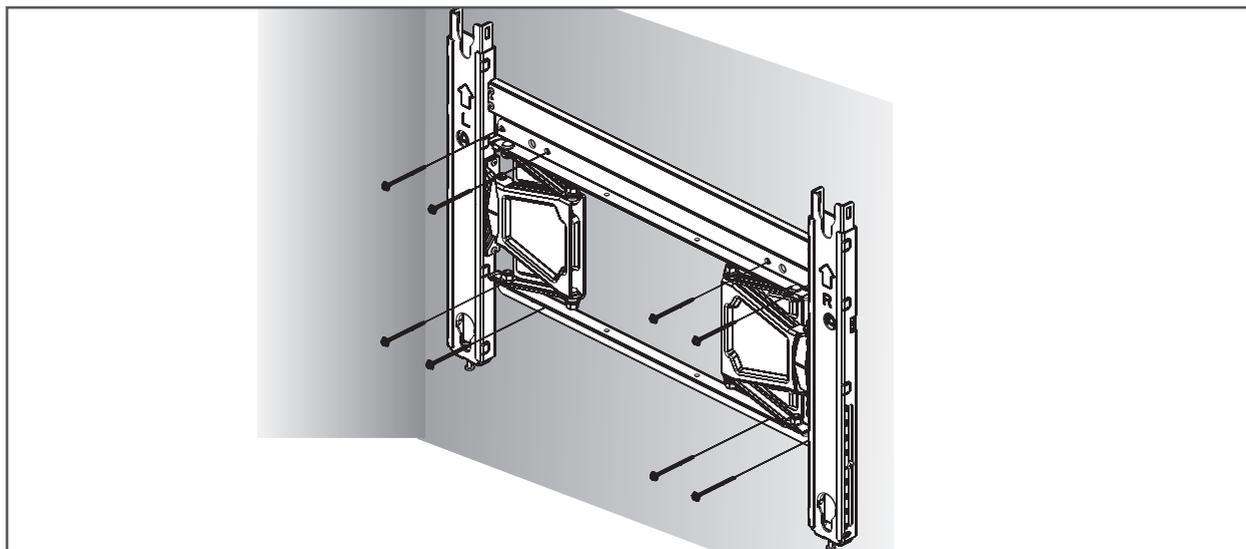

- If the screw cannot be assembled in the designated location inevitably, it can be assembled by rearranging to the closest location. But, do not change 2 or more locations from the designated spot.
- Fix the right and left side with two bolts each.
- Wall mounting equipment will be set up based in VESA 600X400 regulation.
- At this time, use a "+" driver (Manual or motorized) or 8 mm wrench to tighten the screw so that the wall, wall bracket and screw are completely pressed against one another.

## 4 How to assemble the wall mount support and display

- Always install the display with 2 or more people.

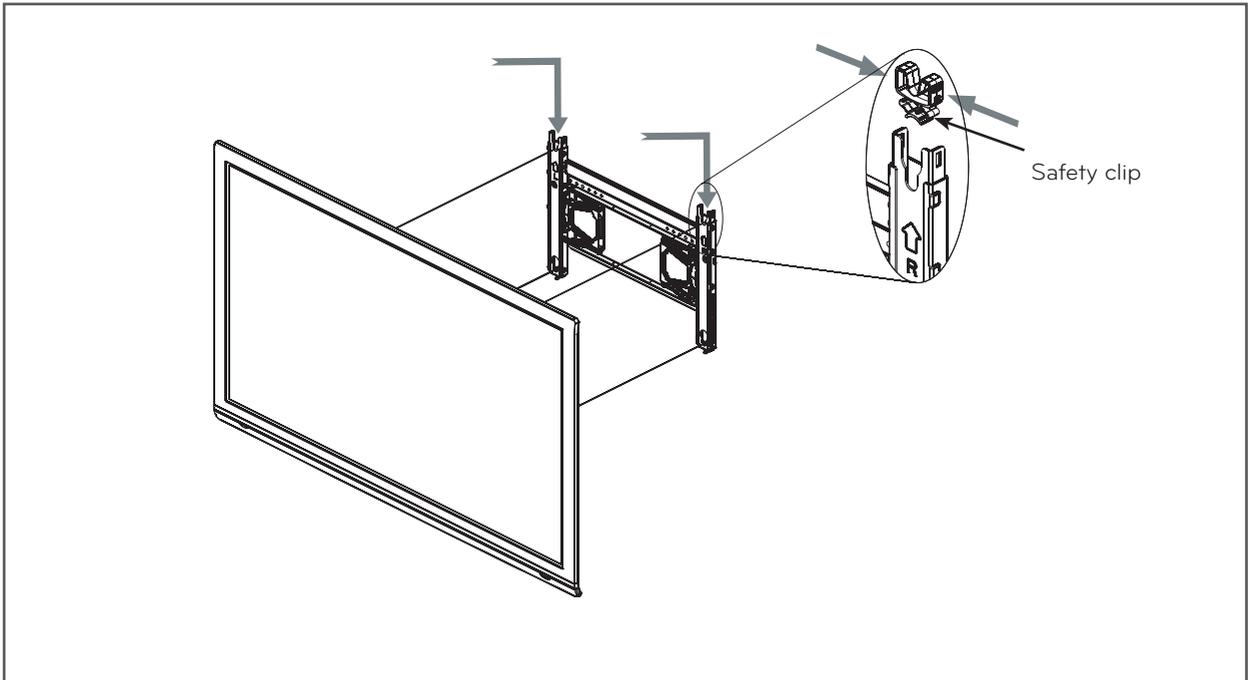


1. Set the display with the guide spacer assembled on the wall mount bracket on the wall in arrow direction. At this time, align the bottom assembly part and lift the set up lightly to align the top part.
2. When adjusting the horizontal level, use the safety ring provided by pressing it slightly to in the direction as illustrated. There is a risk of the product falling when the safety ring is not used as shown in the illustration.
  - Pull the bottom of the TV/Monitor to affirm that it is firmly fixed.
  - See A above, be sure to lift a product/speakers assembly by the product only, do not lift using only the speakers.)
  - When installing a display rotated, only rotate the display 90 degrees (portrait mode). (Only applies for VESA 200x200, 400x400)

## 5 How to level the Display


After installing the display, check to make sure it is level.

The wall mount has two screws that make minor adjustments to the level.

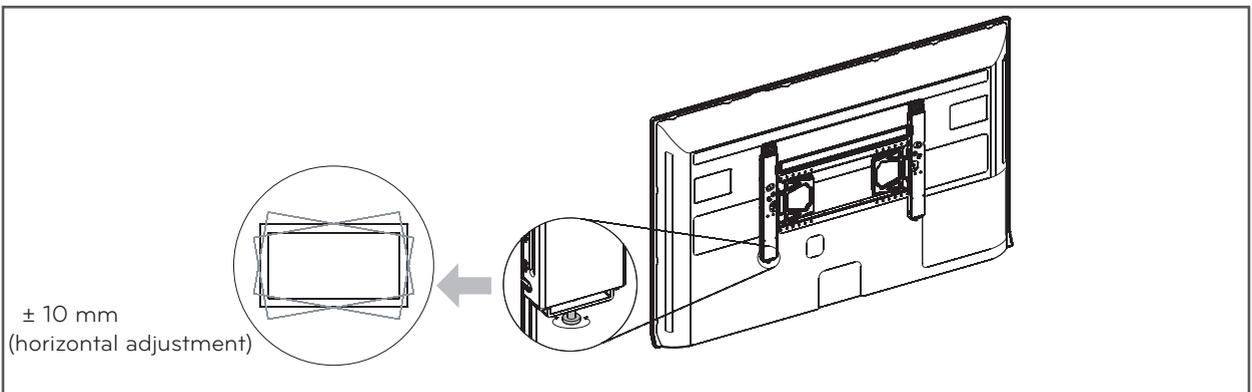

# 6 Tilt Angle Adjustment



- The tilt angle can be adjusted after installation and setup.
- When you adjust the angle, hold the product carefully with both hands to avoid any damage to the product or wall.

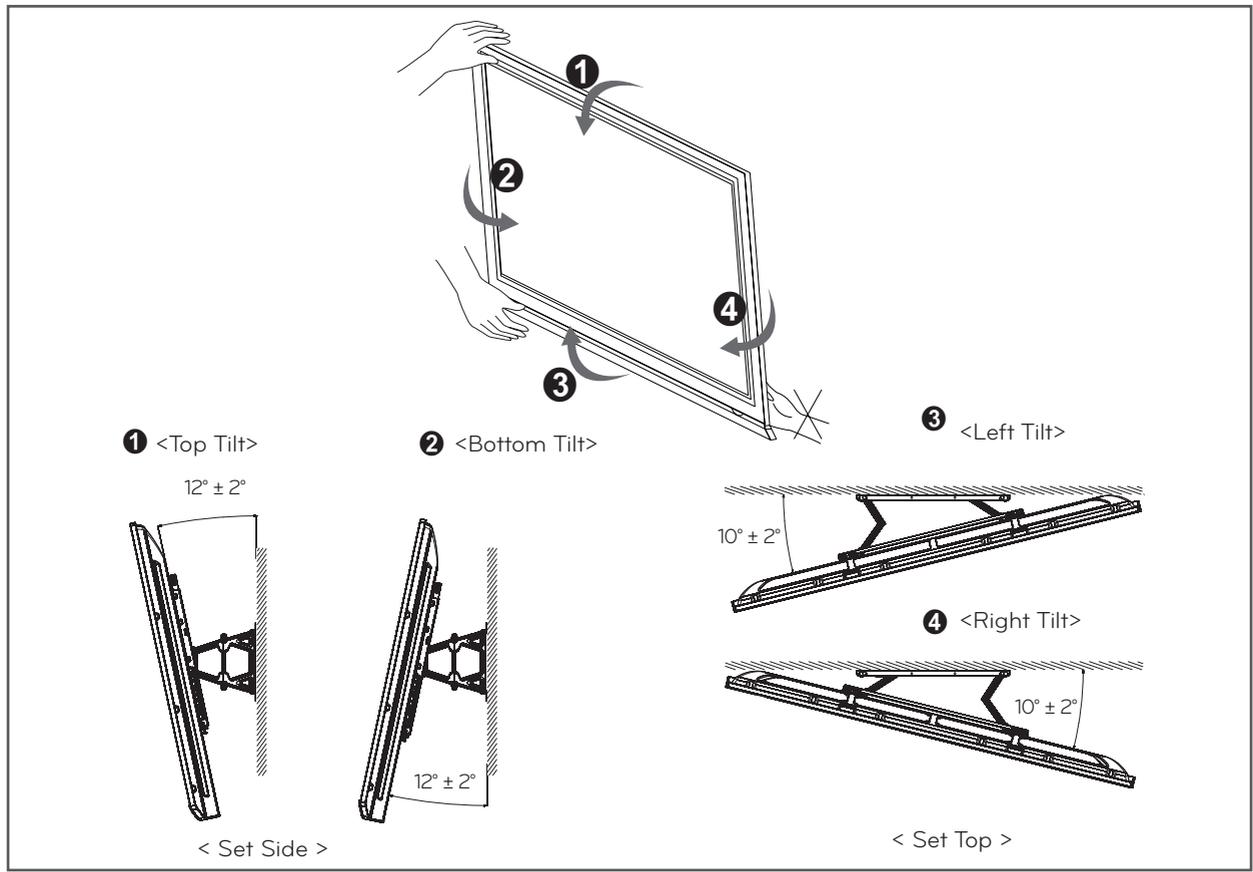

\* The above numbers are the maximum allowed, some models may do less.

- Use both hands when adjusting the angles. Do not place the hands on the TV's back side or the wall mount while adjusting. If could cause injury.
- Two adult people who are capable of adjusting the tilt angle to need excessive force.
- When adjusting the number **1** angle of the product, you must use both hands and then you can adjust the angle as shown above.
- When adjusting the number **2** angle of the product, you must use both hands and then you can adjust the angle as shown above.
- When adjusting the number **3** angle of the product, you must use both hands and then you can adjust the angle as shown above.
- When adjusting the number **4** angle of the product, you must use both hands and then you can adjust the angle as shown above.

## 7 How to adjust height

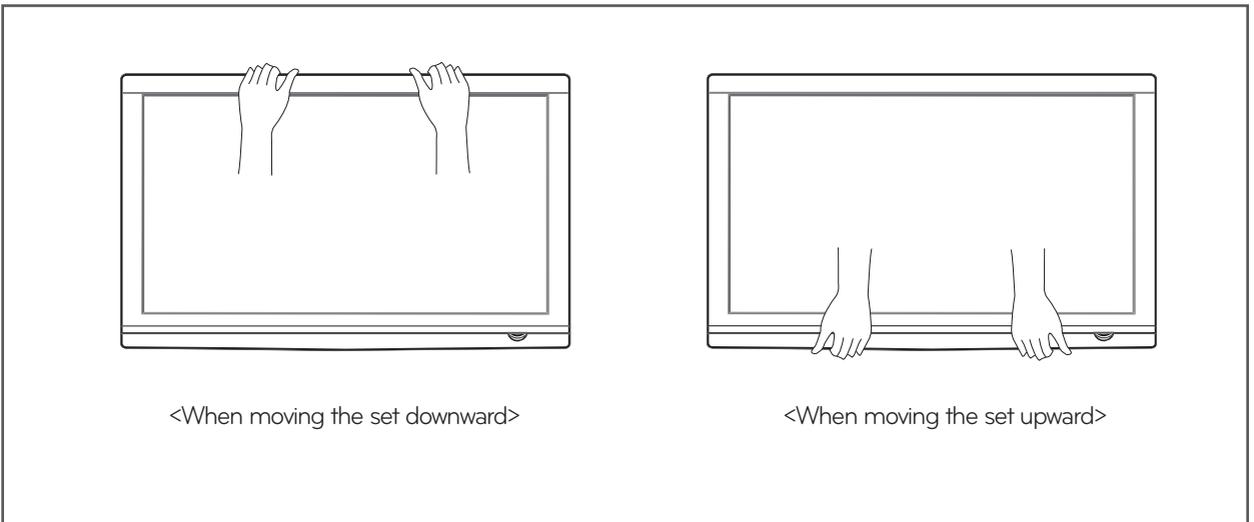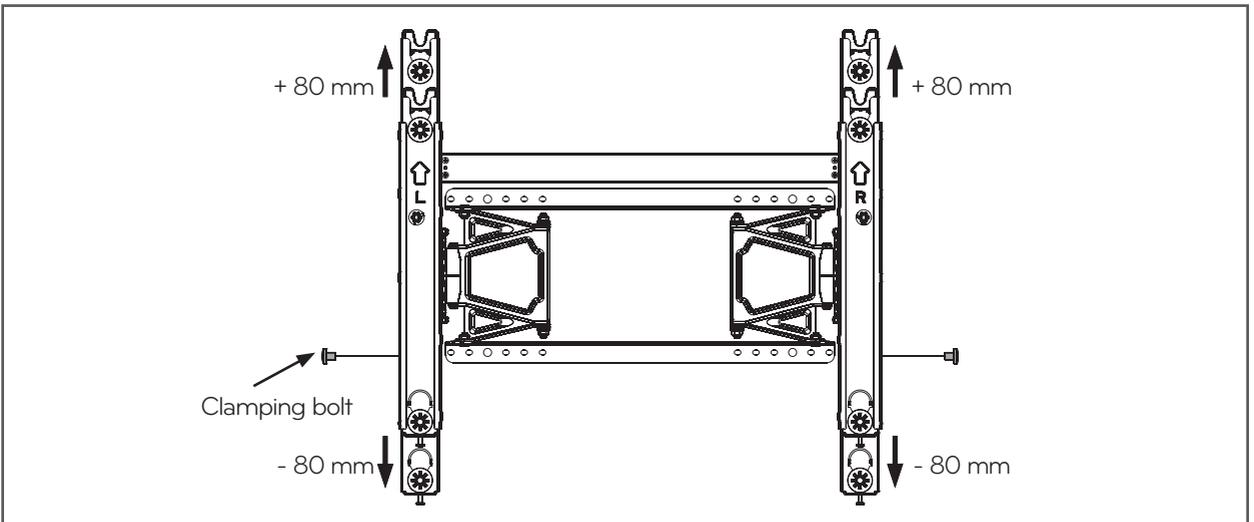


- It is possible to move the set upward and downward by as much as 80 mm.
- Please use both hands when adjusting the set upward and downward. Do not forget to remove the bolts on both sides of the set before adjusting the height. Anchor the bolts again after height adjustment.
- Use 14-55 kgf of power when adjusting the set upward or downward.

### **Note!**

\* Three adults are needed when installing the product and adjusting the height. Otherwise, serious injury or product damage can occur.


## 8 How to adhere the protection cushions and arrange cables

- Use the protection cushions to reduce shock between the wall and TV/Monitor.
- Arrange the cable like shown. You can purchase the cable holder separately or use it provided like accessory of the TV/Monitor get.

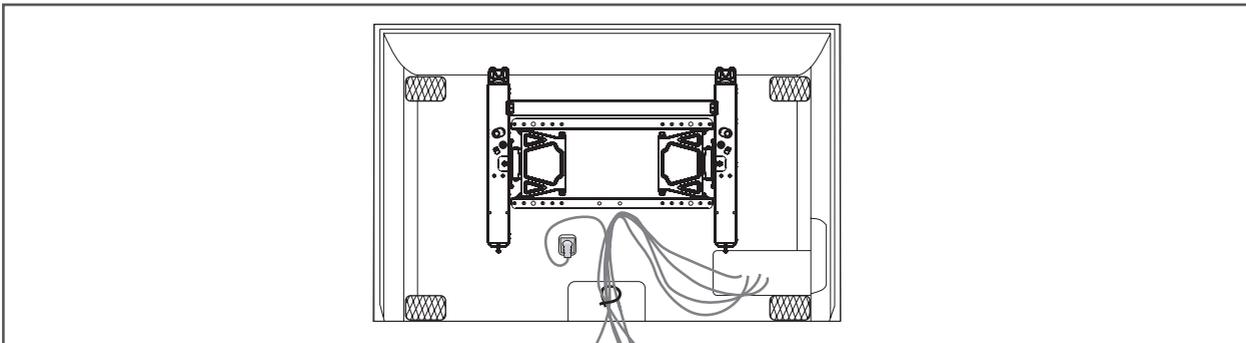

### Dimension

[ unit : mm ]

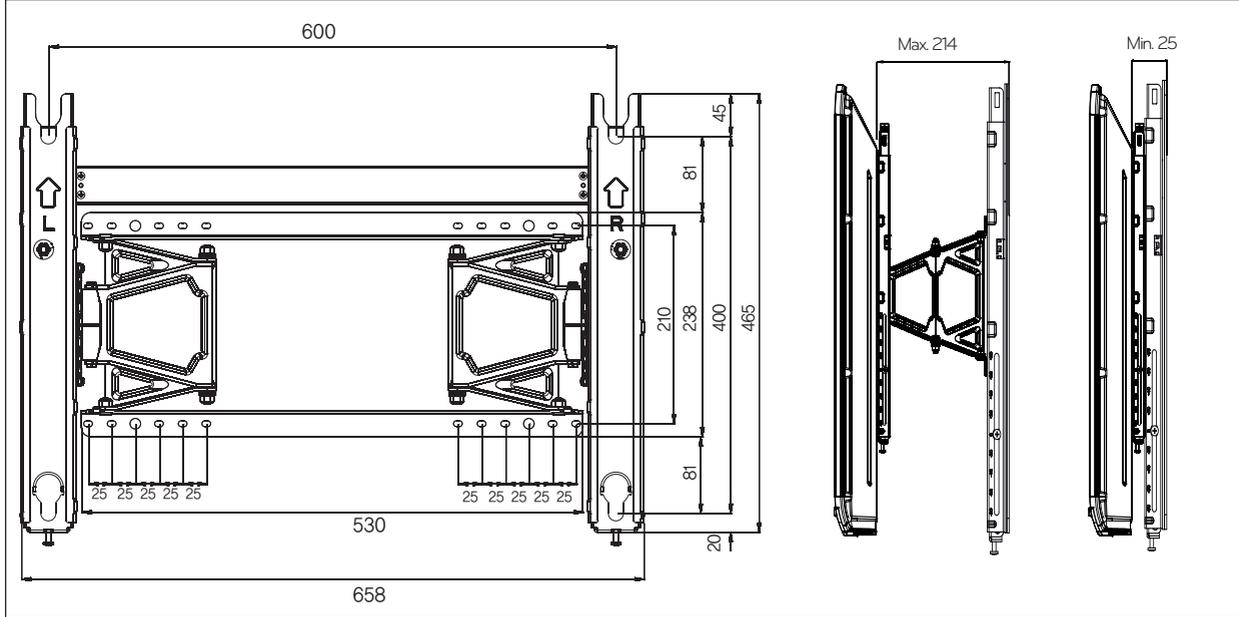

Model	LSW600B
Width (mm)	658
Height (mm)	465
Depth (mm)	25
Weight (kg)	6.3
Weight with packing (kg)	7.7
Wall mount Vesa specification	600 X 400
Max Load Capacity (kg)	75



The model and serial number of the product is located on the back or one side of the product. Record it below should you ever need service.

Supported Displays:  
(Please contact the retailers or refer to the TV owner's manual for applicable models.)

**MODEL** \_\_\_\_\_

**SERIAL** \_\_\_\_\_