



ENGLISH

nexus 4



Quick Start Guide

For online help and support, visit
support.google.com/nexus




MBM63821901 (1.0) G
Printed in Korea

Google, Android, Gmail, Google Maps, Nexus, Google Play, YouTube, Google+, and other trademarks are property of Google Inc. A list of Google trademarks is available at <http://www.google.com/permissions/guidelines.html>. LG and the LG logo are trademarks of LG Electronics Inc. All other trademarks are properties of their respective owners.


The content of this guide may differ in some details from the product or its software. All information in this document is subject to change without notice.

For online help and support, visit support.google.com/nexus

What's in the box

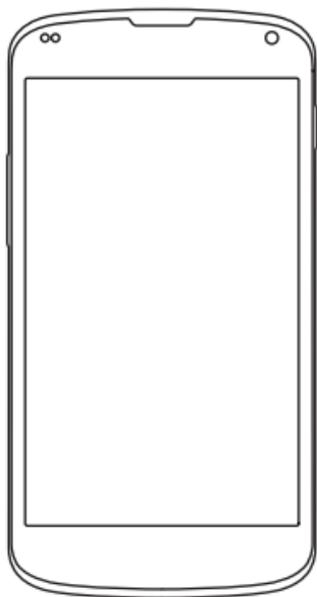


Nexus 4

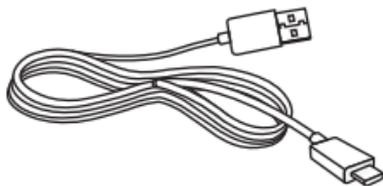

Micro USB cable



Travel adapter

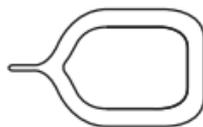



SIM ejection tool

This Quick Start Guide and a Safety & Warranty booklet are also included.


- If any item is damaged or missing, contact your point of purchase for assistance.
- Use only approved accessories.
- Accessories may vary by country or region.

Your Nexus 4

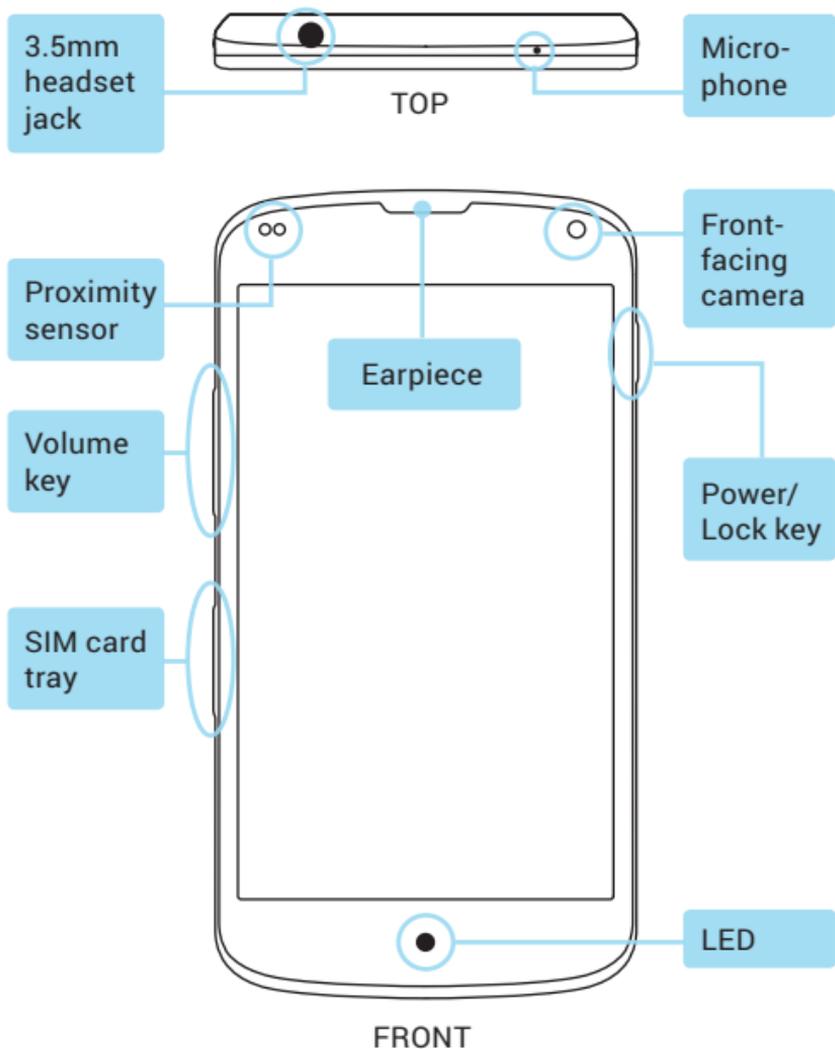

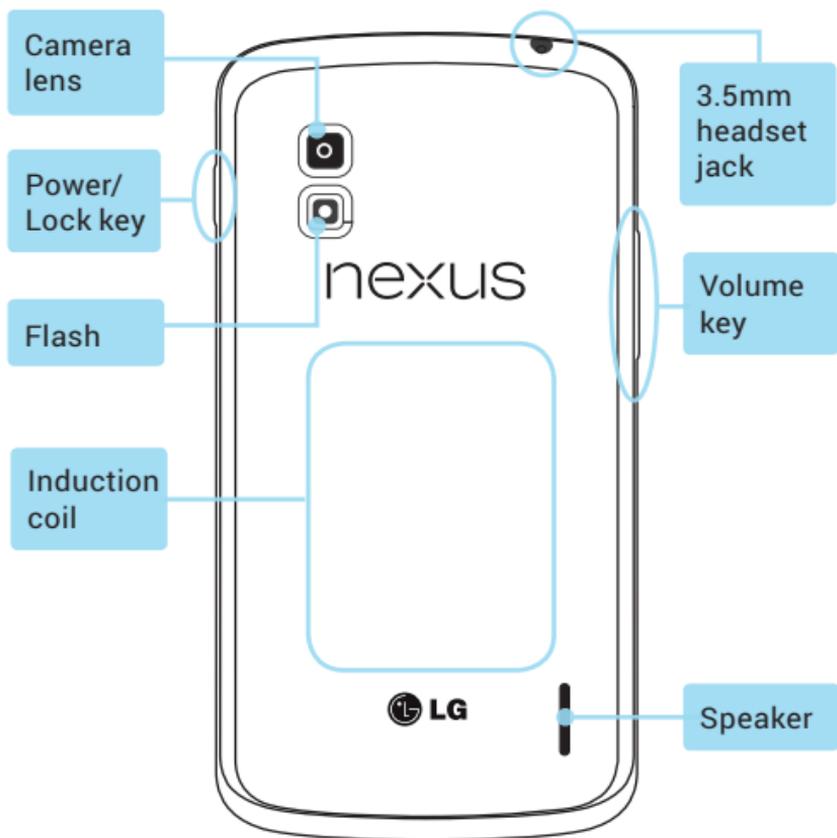

BACK

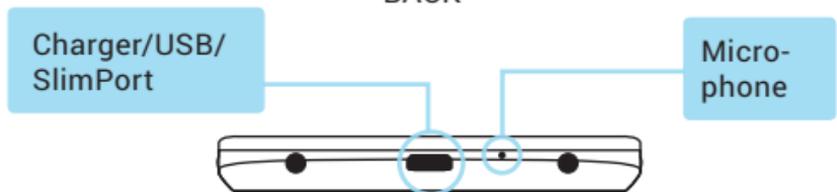


BOTTOM

Charge the battery

Your battery will not be fully charged when you first unpack your Nexus 4. It's a good idea to fully charge the battery as soon as you get a chance.

If you're using the travel adapter that comes with the phone, connect one end of the data cable to the charger port at the bottom of the phone, and the other end to the travel adapter. Then connect the travel adapter to a power outlet.

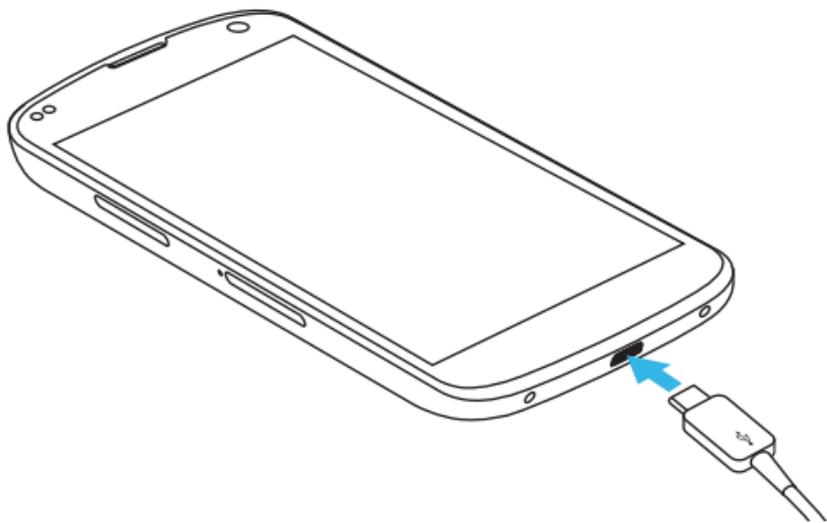


- The travel adapter varies by country or region.
- Use only the travel adapter and Micro USB cable that come with your Nexus 4. Using a different travel adapter or cable may damage your phone.
- The input voltage range between the wall outlet and this travel adapter is AC 100V–240V, and the travel adapter's output voltage is DC 5V, 1.2A.
- Charging your phone through a USB cable attached to another device, such as a laptop computer, takes longer than charging with a travel adapter.
- Nexus 4's battery can't be removed. Don't attempt to open the phone.

If you're using a wireless charger, see the instructions that come with the charger.

IMPORTANT: If you use a wireless charger, you must use an approved model and only as directed. The Nexus 4 travel adapter may not generate enough current to power a wireless charger.

Insert Micro SIM card & turn on phone

Before you start using your phone, you may need to insert your Micro SIM card. If no card is installed, the message “No SIM card” appears on the phone’s lock screen.

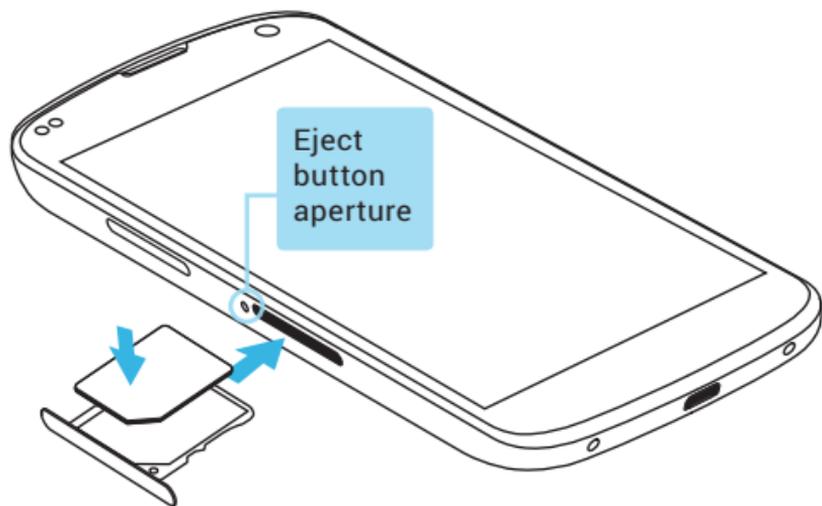


The SIM card tray is located on the left side of the phone below the volume button. The eject button is a small round aperture just above the tray door. To install a new Micro SIM card:

1. Insert the SIM ejection tool that comes with the phone (or a thin pin) into the eject button aperture, and push firmly but gently until the tray pops out.

2. Remove the tray and place the micro SIM card inside it, with the contacts out and the angled corner to the right. There is only one possible way to fit the card snugly into the tray.
3. Carefully reposition the tray in the slot and push it gently back into the phone.

TIP: Your phone's IMEI identification number is on the SIM card tray. You may need this number later to identify your phone for service purposes. Write the IMEI number down in your QSG or take a photo of the label on the product box.

To turn on your Nexus 4, press and hold the Power button on the right edge near the top for a few seconds.

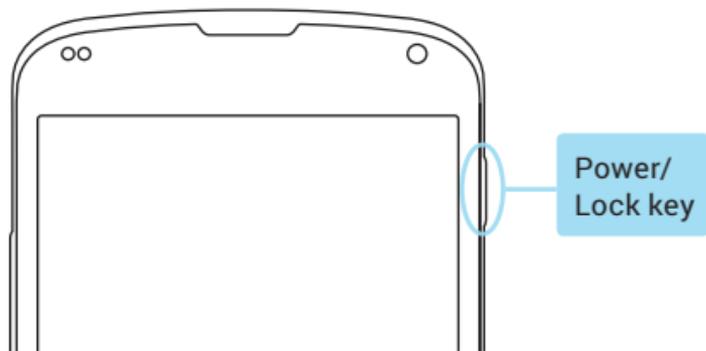

When Nexus 4 is on, press the Power button again to put it into sleep mode or wake it up.

To turn off your Nexus 4, press and hold the Power button until a confirmation dialog appears. Then touch **OK** to complete the shut down.

To restart your Nexus 4 if it becomes unresponsive, press and hold the Power/Lock key for at least 10 seconds.

TIP: To quickly silence your phone or toggle airplane mode, press and hold the power button for one or two seconds to see a quick confirmation dialog – even from the lock screen.

Set up your Nexus 4

The first time you turn on your phone, you'll see a Welcome screen. To choose a different language, touch the menu. Then touch **Start** and follow the on-screen instructions.

A series of screens takes you through the setup process. If you already have Gmail, use your Gmail address and password when asked. If you don't have Gmail or any other Google Account, go ahead and create one.

A Google Account lets you access your personal information from any computer or mobile device:

- **Access from anywhere.** View your email messages, text messages, or social stream no matter where you are or what computer or mobile device you're using – as long as you have a Wi-Fi or mobile data connection. The same goes for Play music, movies, or books in your Google Play libraries.
- **Never lose your contacts again.** When you sign into your phone with a Google Account, all the contacts you associate with that account in the People

app are automatically backed up. They're always accessible through your Google Account from any computer or mobile device.

- **Keep your stuff secure and available.** Google works around the clock to protect your personal data from unauthorized access and to ensure that you get it when you need it, wherever you need it.
- **Synchronize and back up all your data.** Whether you draft an email, add a contact, add an event to your calendar, or take a photo, your work gets backed up continuously by Google and synchronized with any computer where you use the same Google Account.
- **Use other Google services.** Your Google Account also lets you take full advantage of any other Google apps and services that you may want to use, such as Gmail, Google Maps Navigation, Google Play, YouTube, Google+, and many more.

If you skipped some of the steps in the Setup Wizard, you can configure new accounts (including Gmail) and adjust many other settings at any time. Touch the  All Apps icon from any Home screen, then  Settings.

For additional help and support, visit support.google.com/nexus.

Airplane precautions

Check with airline personnel if you want to use your Nexus 4 on board an aircraft. Most airlines have restrictions for using electronic devices. Most airlines allow electronic use only between and not during takeoffs and landings.

There are three main types of airport security devices: X-ray machines (used on items placed on conveyor belts), magnetic detectors (used on people walking through security checks), and magnetic wands (hand-held devices used on people or individual items). You can send your Nexus 4 through airport X-ray machines. But do not send your Nexus 4 through airport magnetic detectors or expose it to magnetic wands.







