



OWNER'S MANUAL

Network Camera & Network Video Server

Please read this manual carefully before operating your set and retain it for future reference.

MODEL

LSW900/LSW901 series

LVW900/LVW901 series

LVW700/LVW701 series

LVS301/LVS311 series

LSW2010 series

LDW2010 series

LVS201 series

LW9226(l)/LW9228(l) series

LNP3700T series

LNP2800(l) series



MFL67860005

The ipolute logo features the word 'ipolute' in a bold, lowercase, sans-serif font. The 'i' is lowercase and has a dot. The 'p' is lowercase and has a long descender. The 'o' is lowercase and has a dot. The 'l' is lowercase and has a dot. The 'u' is lowercase and has a dot. The 't' is lowercase and has a dot. The 'e' is lowercase and has a dot. The logo is positioned to the right of a stylized graphic element consisting of a curved line that starts above the 'i' and ends above the 'e', resembling a partial circle or a swoosh.

1312 (V1.8)

Contents

Introduction	3	Day/Night settings.....	33
Features Chart.....	3	3D-DNR setting.....	34
Operation and settings	4	Privacy setting.....	34
Before using the system.....	4	Special menu settings.....	35
Recommended PC Requirements.....	4	Reset setting.....	36
Accessing the LG IP device.....	5	OSD Menu Setup (LW9226/LW9228/ LW9228I/ LW9226I/ LNP3700T/LNP2800/LNP2800I series).....	37
LG Smart Web Viewer Overview.....	6	Auto Tracking.....	41
Configuration menu overview.....	7	General operation.....	42
Configuring the LG Network Camera Device.....	8	Camera menu settings.....	42
Accessing the Configuration menu.....	8	PAN/TILT Settings.....	48
System settings.....	8	OSD Settings.....	50
Audio & Video settings.....	11	LANGUAGE Setting.....	51
Network settings.....	20	RESET Setting.....	52
User settings.....	24	Reference	53
Event settings.....	26	Troubleshooting.....	53
OSD Menu Setup (LSW900/LSW901/LVW700/LVW701/ LVW900/LVW901/LDW2010/LSW2010 series).....	29	Open source software notice.....	56
General Operation.....	31	Specifications.....	57
Exposure settings.....	31		
White Balance settings.....	33		

Introduction

The LG Network Camera is designed to use on an Ethernet network and must be assigned an IP address to make it accessible.

This manual contains instructions on how to install and manage the LG Network Camera in your networking environment. Some knowledge of networking environments would be beneficial to the reader.

Should you require any technical assistance, please contact authorized service center.

Features Chart

This table shows the differences between the models.

Item	LSW900	LSW901	LVW700	LVW701	LVW900	LVW901	LSW2010	LDW2010
VA	No	Yes	No	Yes	No	Yes	No	No
PTZ	Yes	Yes	No	No	No	No	No	No
PRESET	Yes	Yes	No	No	No	No	No	No
Fan Fail Notification	Yes	Yes	No	No	Yes	Yes	No	No
WDR (OSD)	Yes	Yes	Yes	Yes	Yes	Yes	No	No

Item	LVS201	LVS301	LVS311	LW9226(I)	LW9228(I)	LNP3700T	LNP2800(I)
VA	No	No	Yes	No	No	No	No
PTZ	Yes	Yes	Yes	Yes	Yes	Yes	Yes
PRESET	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Fan Fail Notification	No	No	No	No	No	No	No
WDR (OSD)	No	No	No	Yes	Yes	Yes	Yes

Operation and settings

Before using the system

- Before using the LG IP device make sure the connections are correct and verify whether proper power supply is used.
- Check the connections of the LG IP device for the correct conditions.
- Check that the LG IP device is(are) connected to the network and that power is supplied.
- Once the connections are made you need to install the LG client program to the PC from which you want to access the device. The LG Smart Web Viewer program is automatically installed when you connect the LG IP device. The LG Ipsolute VMS and the LG Smart Web Viewer program are the network program of the LG Video Server and the LG IP cameras.
- To view streaming video in Internet Explorer, set your browser to allow ActiveX controls. If you find this message "This website wants to install the following add-on: 'IPCam_Streamer.cab' from 'LG ELECTRONICS INC'", Click the yellow bar and install LG Smart Web Viewer Program on your computer.
- The Layouts and the Live view pages may differ with different OS (Operating Systems) and Web Browsers.
- Care needs to be taken not to run any other applications when the Client Program is running as it may cause memory shortage.

Recommended PC Requirements

The LG IP device can be used with most standard operating systems and browsers.

Items	Requirements
Operating System	Windows XP Professional, Windows VISTA, Windows 7
CPU	Intel Core2 Quad Q6700 (2.66 GHz) or above
Web Browser	Microsoft Internet Explorer above the version 6.0 and below the version 8.0.
DirectX	DirectX 9.0 or above
Memory	2 GB or above RAM
Graphics Card	256 MB or above Video RAM
Resolution	2040 x 1536 (with 32 bit color) or higher

Accessing the LG IP device

You can access the LG IP device by following the below steps.

1. Install LG Ipsolute VMS Program

2. Discover the LG IP device using the IP Utility

The IP Utility can automatically discover and display LG IP devices on your network. The IP Utility shows the MAC address, IP address, Model name and so on.

Note:

The computer running the IP Utility must be on the same network segment (physical subnet) as the LG IP device.

- 2.1 Run the IP Utility program.
- 2.2 Click the [Search] button or select the [Search] option in the Device search menu.
After a few seconds the found LG IP devices gets displayed in the IP Utility window.

3. Logging in to the LG Smart Web Viewer

The LG Smart Web Viewer can be used with most web browsers. The recommended browser is Internet Explorer with Windows.


- 3.1 Run the IP Utility and find the LG IP devices.
- 3.2 When the LG IP devices appear in the IP Utility window, double-click IP address or right click on the same IP address and select "Connect to Web Page" to start the LG Smart Web Viewer. When accessing the LG Smart Web Viewer, the authentication dialog appears on the screen.

- 3.3 Enter the user name and password. (Note that the default administrator user name and password are "admin".)
- 3.4 Click the [OK] button and then the LG Smart Web Viewer is displayed in your browser.

Notes:

- You can also access the LG Smart Web Viewer as shown below.
 - 3.1 Start your Web browser.
 - 3.2 Enter the IP address of the LG IP device in the address bar of the browse.
 - 3.3 Enter the user name and password set by the administrator.
 - 3.4 Click the [OK] button and then the LG Smart Web Viewer is displayed in your browser.
- The LG Smart Web Viewer needs more time to display it according to the network conditions.
- If the login window is not displayed, check the pop-up blocker. If you set the pop-up blocker, the login window is not displayed. You must allow the pop-ups.
- If you connect the LG Smart Web Viewer for the first time, the Security Warning window is displayed to install the LG Smart Web Viewer program. You must install the LG Smart Web Viewer program for using the LG IP device.
- If your computer or network is protected by a proxy or firewall, the proxy or firewall settings can prevent the LG Smart Web Viewer program. Change the proxy or firewall settings to activate the LG Smart Web Viewer program.

LG Smart Web Viewer Overview

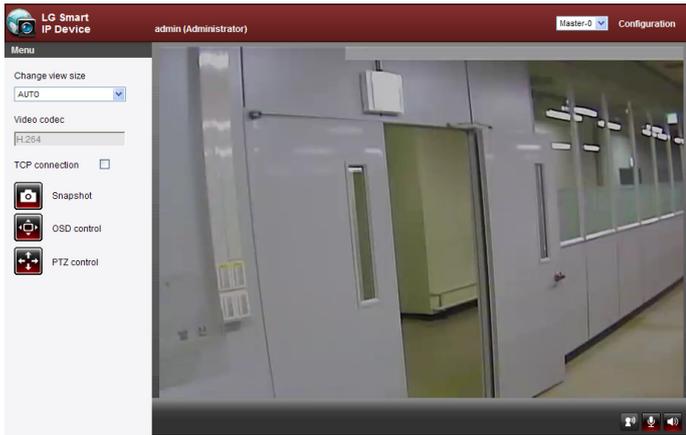

Item	Description
<p>Change view size</p> <p>AUTO</p>	<p>Select the video image size from the drop-down list.</p> <p>The initial view size is set to AUTO.</p>
<p>Video codec</p> <p>H.264</p>	<p>Displays the current video codec of the selected video stream (Master or Slave).</p>
<p>TCP connection <input type="checkbox"/></p>	<p>Check this option as the network connection type (TCP or UDP). If you check it, the client connects to the server using TCP connection.</p>

 <p>Snapshot</p>	<p>Click to save the current image in JPEG format on your computer.</p> <ol style="list-style-type: none"> 1. Click the [Snapshot] button and then the Snapshot window is displayed. 2. Click the [Save] button in the Snapshot window. 3. Enter the file name (JPEG format) and select the folder to save it. 4. Click the [Save] button to confirm it. 5. Click the [Close] button in the Snapshot window to close it.
 <p>OSD control</p>	<p>Displays the Camera OSD control window. Use these buttons to setup the Camera. This button does not appear on the screen if the login is other than the administrator.</p>
 <p>PTZ control</p>	<p>Displays the PTZ control window. Use these buttons to control the PTZ unit. This button is not displayed with normal or anonymous user. (The function depends on the model.)</p>
	<p>Select the video stream. From the Live view drop-down list, select the desired video image source between [Master-0] and [Slave-0].</p> <p>Note:</p> <p>Master and Slave are output video streams. You can set the stream configurations independently for either Master or Slave stream. This would facilitate the user to set the live view at his comfort.</p>

	<p>Provides all the necessary tools for setting up the device to your requirements. The user will need administrator level to do this.</p> <p>Note: If you want to exit the Configuration menu, select one of the video stream in the Live view drop-down list.</p>
	<p>Displays the current surveillance live screen. You can monitor the camera image on the live view window of the LG Smart Web Viewer.</p>
	<p>Click this button to connect or disconnect the audio communication between the LG IP device and the connected PC. (Color icon: On, Gray scale icon: Off.)</p>
	<p>Click this button to switch the microphone off and on for the computer. (Color icon: On, Gray scale icon: Off.)</p>
	<p>Click this button to switch the sound off and on, for the speaker of the computer. (Color icon: On, Gray scale icon: Off.)</p>

Configuration menu overview

The following table shows the list of menu items.

The configuration images are different from each model.

Main Menu	Sub Menu	Note
System	Version	
	Date & Time	
	Maintenance	
	Log & Report	
	Language	
Audio & Video	Camera	
	Stream	
	Audio	Option
	PTZ protocol	Option
	Preset	Option
	Motion detect	
Auto Tracking	Option	
Network	Basic	
	RTP stream	
	TCP/IP	
	DDNS	
	IP filtering	
	SNMP	
User	Basic	

Event	Event schedule	
	Event server	
	Sensor & Relay	Option
	Fan	Option

Configuring the LG Network Camera Device

The features and options of the LG IP camera are configured through the Configuration menu.

Only administrator-level users have permission to access the Configuration menu.

Accessing the Configuration menu

Click the [Configuration] button to display the LG Smart Web Viewer configuration window.

Warning

The Configuration setup should be made by qualified service personnel or system installers.

System settings

Version

Displays the current version of Firmware, Hardware, Software and Web Client.

The screenshot shows the 'System' menu with the 'Version' option selected. The 'Version list' section displays the following information:

Model Name	LNP3700T
Software version	1286.0.0.1212100
Unified package version	1935.xxxx

The 'Copyright' section displays: Copyright 2009 LG Electronics. All Rights Reserved.

Date & Time

The screenshot shows the 'Date & Time' configuration window. The 'Time zone' is set to GMT. The 'Time mode' section has the following options:

- Synchronize with NTP server: pool.ntp.org. Time will be synchronized with NTP server every 1 hour. Click button to test this server. [Test]
- Synchronize with personal computer: 2011-11-03 09:59:04
- Synchronize manually

The 'Date' is set to 2011-11-03 and the 'Time' is set to 09:59:03. The 'Server time' section shows the server time as 2011-11-03 00:59:03. A [Save] button is located at the bottom right.

Time zone

Set the time difference from GMT in the area where the IP device is installed. Select the time zone in the area where the IP device is installed from the drop down list.

Time mode

- > Synchronize with NTP Server: Select if you want to synchronize the IP device's date and time with those of the time server called NTP (Network Time Protocol). Specify the NTP server's name. Click the [Test] button for connection test to the server.
- > Synchronize with personal computer: Select if you want to synchronize the IP device's date and time with your computer.
- > Synchronize manually: Select if you want to set the IP device's date and time manually. Select the year, month and date by clicking the calendar button. Set hour, minutes and seconds in the edit boxes.

Notes:

- When system reboot after time setting, time of system could be delayed. If you set the time correctly, set the [Synchronize with NTP server] option.
- Refer to NTP configuration as operation system of the Recording Server when the Recording Server use recording function and NTP server.

Server time

- > Server time: Displays the current date and time of the IP device.
- Save: Click this button to confirm the settings.

Maintenance

Menu

- System
- Version
- Date & Time
- Maintenance**
- Log & Report
- Language
- Audio & Video
- Network
- User
- Event

Maintenance

System reboot

Click button to reboot this system. [Reboot]

Restore and backup

Click button to restore this configuration. [Restore]

[Browse] 찾아보기... [Upload] [ex. c:\backup.config]

* Configuration file must be uploaded before restoring.

Click button to backup this configuration. [Backup]

Firmware

Click button to upgrade firmware. [Upgrade]

[Browse] 찾아보기... [Upload] [ex. c:\firmware.dat]

*Firmware file must be uploaded before upgrading.

Click button to initialize the system. [Initialize]

System reboot

Click the [Reboot] button to restart the IP device. It takes some minutes for the IP device to start again.

Restore and backup

- > Backup: To take a backup all of the settings. If necessary, it make possible to return to a backedup configuration.
 1. Click the [Backup] button.
 2. Click the [Save] button.
 3. Follow the instructions on the browser to specify the folder.
 4. Click the [Save] button to save the settings.
- > Restore:
 1. Click the [Browse] button.
 2. Find and open the file in which the configuration setting data is stored.
 3. Click the [Restore] button and the system settings will be restored and reboot the system.

Notes:

- Backup and Restore can happen on IP device having the same version of firmware. This feature is not intended for multi-configurations or for firmware upgrades.
- [Backup] function is allowed in HTTP protocol but not in HTTPS protocol.

Firmware


- > Upgrade
 1. Click the [Browse] button.
 2. Find and open the firmware file.
 3. Click the [Upgrade] button to update the firmware.

Note:

When you upgrade the system, it may take some minutes to be done. Do not close the browser while the upgrade is in progress. If you close the browser, it may cause a malfunction. You should wait until the confirmation window is displayed. When the upgrade is finished, the confirmation window will be displayed.

- > Initialize: The [Initialize] button should be used with caution. Clicking it will return all of the IP device's settings to the factory default values. (Except for the Network settings, PTZ Protocol and Preset settings. The option depends on the model.)

Log & Report

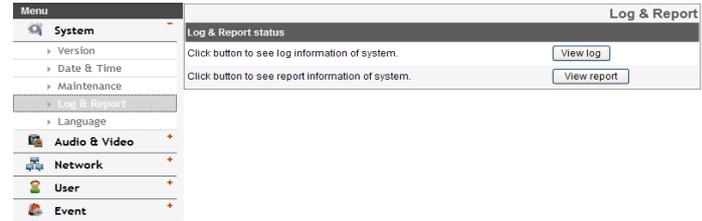

Log & Report status

The System log provides a summary of the status of the IP device. The unit records the data of the software activity in a file.

- > View Log: Click this button to display the system log information.
 - Download: Click this button to see the log information of system.
- > View report: Click this button to display the report of the system.
 - Download: Click this button to see the report information of system.

Note :

The downloaded file is a UNIX type. If you open the file in Microsoft Notepad, it will display the text as if the file contained no line breaks at all.

Language




Language list

Select a language for the LG Smart Web Viewer configuration menu and information display.

- Save: Click this button to confirm the settings.

Audio & Video settings

Camera

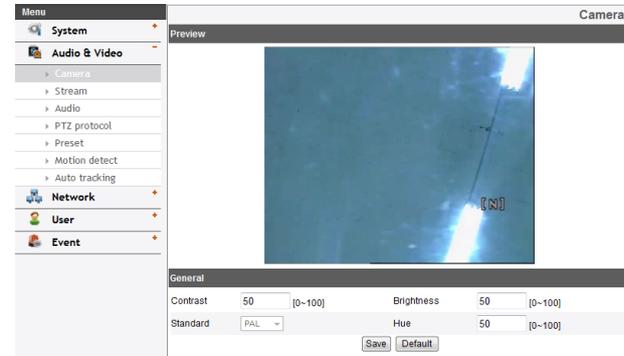

Preview

You can preview the camera image on the preview window.

General

- > Contrast: Edit the contrast value from 0 to 100. Selecting 100 provides the image with the highest contrast.
- > Brightness: Edit the brightness of the camera. It is brighter when a large value is selected and it is darker when a small value is selected.
- > Standard: Displays the video standard of the camera.
- > Hue: Edit the video Hue of the camera from 0 to 100.
- Save: Click this button to confirm the settings.
- Default: Click this button to restore the IP device back to original factory settings.

Stream

Menu	Stream
System	Master
Audio & Video	Enable <input checked="" type="checkbox"/> Deinterlacing <input checked="" type="checkbox"/>
> Camera	Video codec H264 Resolution D1
> Stream	Maximum frame rate 25 [1-25 fps] GOP size 30 [1-30]
> Audio	Quality VBR Stream quality MEDIUM
> PTZ protocol	
> Preset	
> Motion detect	
> Auto tracking	
Network	Slave
> User	Enable <input checked="" type="checkbox"/> Deinterlacing <input type="checkbox"/>
> Event	Video codec H264 Resolution CIF
	Maximum frame rate 25 [1-25 fps] GOP size 30 [1-30]
	Quality VBR Stream quality MEDIUM
	<input type="button" value="Save"/>

Master/Slave

- > Enable: Click to activate the stream function.
- > Deinterlacing: Click to activate the deinterlacing function.
- > Video codec: Select the video mode (Codec) from the drop down list. The viewer can choose between MJPEG and H.264.
- > Resolution: Select the output image size of the camera.
- > Maximum frame rate: Set the frame rate of the image.
- > GOP size: It means "Group of Pictures". The higher the GOP, the better is the video quality of the camera. Edit the value of GOP from 1 to 30. This setting is valid for H.264 video format only.
- > Quality: Select the Quality.
 - VBR: The bit rate may vary depending on the complexity of the video to meet the selected quality.
 - CBR: The video quality may vary in order to preserve a constant bit rate.
- > Stream quality: If the [Quality] option set to VBR, this option is displayed. Select the stream quality from the drop down box, the camera supports five types. (Highest, High, Medium, Low and Lowest)

- > Bit rate: If the [Quality] option set to CBR, this option is displayed. Edit the bit rate value from 256 kbps to 10 240 kbps.

Note:

If the 'Bit rate' is configured too low with high resolution, the actual frame rate will decrease because of narrow bandwidth. So you need to set or change the 'Bit rate' to high value.

- Save: Click this button to confirm the settings.

Audio (Option)

Menu	Audio
System	Audio in
Audio & Video	Enable <input type="checkbox"/> Audio type G711 PCMA
> Camera	
> Stream	
> Audio	Audio out
> PTZ protocol	Enable <input type="checkbox"/>
> Preset	<input type="button" value="Save"/>
> Motion detect	
> Auto tracking	
Network	
User	
Event	

Audio In

- > Enable: Click the check box if you want to send the audio from the microphone input connector.

Note:

The Clients connected to the IP device remain unaffected with additional changes made in the setting.

- > Audio type: Select the codec when you send the audio from the microphone input connector.

Audio Out

- > Enable: Click the check box to output the audio from the speaker.
- Save: Click this button to confirm the settings.

PTZ protocol (Option)

Allows the user to configure different PTZ controls by using different PTZ protocols.

PTZ configuration	
Enable	<input checked="" type="checkbox"/>
Camera ID	0 [0~255]
Pan speed	60 [0~127]
Tilt speed	60 [0~127]
Zoom speed	0 [0~3]
Focus speed	1 [1~3]
Preset tour park time	1 [1~100]

Port			
Baud rate	9600	Data bit	8
Parity	NONE	Stop bit	1

PTZ protocol list

- > PTZ protocol: Displays the selected PTZ protocol.
- > Edit: Click to display the PTZ protocol window. Select the PTZ protocol and then click the [Save] button. If you want to delete the protocol, click the [Remove] button.

Upload PTZ protocol

Follow the instructions below to upload PTZ protocol.

1. Click the [Browse] button, find and open the file and then click [Upload] button.
2. Click the [Add PTZ protocol] button and then the PTZ protocol will be added.


PTZ configuration

- > Enable: Click to use the PTZ protocol.
- > Camera ID: Enter the PTZ device ID. Make the same ID as the PTZ Device.
- > Pan speed: Enter the panning speed of the PTZ device in the edit box. Default value for the LG Multix Protocol is 60 and ranges from 0 to 127.
- > Tilt speed: Enter the tilting speed of the PTZ device in the edit box. Default value for the LG Multix Protocol is 60 and ranges from 0 to 127.
- > Zoom speed: Enter the zoom speed of the PTZ device to view the object close or at a distance. Default value for the LG Multix protocol is 1 and ranges from 0 to 3.
- > Focus speed: Enter the focus speed of the PTZ device to focus an object clearly near or far. Default value for the LG Multix protocol is 1 and ranges from 1 to 3.
- > Preset tour park time: Enter the parking time.

Port

- > Baud rate: Select the desired speed of communication between the IP device and the PTZ Device. Confirm selected parameter to the baud rate of the IP device.
- > Data bit: Set the number of the data bits for RS-422/RS-485 communication.
- > Parity: Select the desired parameter. The parity bit, added to the data, to perform parity check.
- > Stop bit: Enter the desired parameter. The stop bit, added to the last of data, in asynchronous communication.
- Save: Click this button to confirm the settings.

Preset (Option)

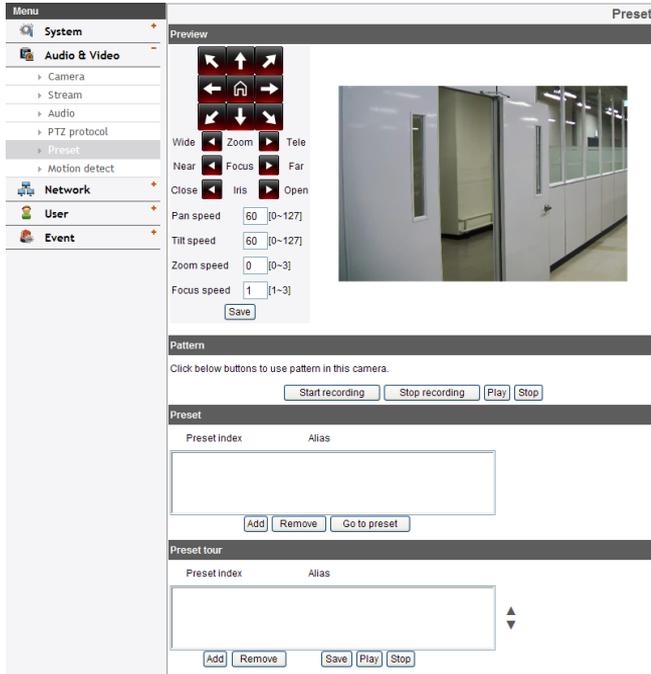

Preview

You can see the settings screen from the preview window.

1. Move the camera to the point you want by using the arrow buttons.
2. Adjust the zoom, focus or iris options.
3. Set the Pan, Tilt, Zoom or Focus speed options.

4. Click the [Save] button to confirm the settings.

Pattern

You can activate the camera in a repeating pattern. The pattern is programmed by recording your manual pan, tilt, and zoom operations. The camera stores the movements you performed in memory.

- > To record the pattern
 1. Click the [Start recording] button to start the pattern recording.
 2. Move the camera through the desired movement.
 3. Click the [Stop recording] button to stop the pattern recording.

Note:

The available total time of pattern is different depending on the connected PTZ device and operation.

- > To play the pattern
 1. Click the [Play] button to play the programmed pattern.
 2. Click the [Stop] button to stop playing.

Preset

Displays the registered preset position.

- Add: Click to add a preset position.
 1. Click the [Add] button.
 2. Select the preset index number.
 3. Enter the preset alias.
 4. Click the [Save] button.
 5. Repeat the steps 1 to 4 to add other positions.

Note:

If you set the HOME position, check the [Set home position] option.

- Remove: Click to delete the preset position.
 - Select the preset from the list.
 - Click the [Remove] button. The preset will be deleted.
- Go to preset: Move to the preset position.
 - Select the preset from the list.
 - Click the [Go to preset]. The camera will be moved to the selected preset.

Preset tour

A preset tour is composed of a group of preset positions that the operator can link together in a sequence.

- > To tour the preset positions
 - Choose the preset in the [Preset].
 - Click the [Add] button in the [Preset tour].
 - Repeat the steps 1 to 2 to add another preset.
 - Click the [Save] button to confirm the preset tour.
 - Click the [Play] button to start the preset tour.
 - Click the [Stop] button to stop the preset tour.

Note:

If you control the PTZ or OSD, the preset tour will be stopped.

- > Remove: Click this button to delete the selected preset in the [Preset tour].

PTZ protocol (LW9228/LW9226/LW9228I/LW9226I/LNP3700T/LNP2800/LNP2800I models only)

Allows the user to configure different PTZ controls by using different PTZ protocols.

PTZ configuration		
Enable	<input checked="" type="checkbox"/>	
Pan speed	60	[0-127]
Tilt speed	60	[0-127]
Zoom speed	0	[0-3]
Focus speed	1	[1-3]
Preset tour park time	5	[3-100]

PTZ configuration

- > Enable: Click to use the PTZ protocol.
- > Pan speed: Enter the panning speed of the PTZ device in the edit box. Default value for the LG Multix Protocol is 60 and ranges from 0 to 127.
- > Tilt speed: Enter the tilting speed of the PTZ device in the edit box. Default value for the LG Multix Protocol is 60 and ranges from 0 to 127.
- > Zoom speed: Enter the zoom speed of the PTZ device to view the object close or at a distance. Default value for the LG Multix protocol is 1 and ranges from 0 to 3.
- > Focus speed: Enter the focus speed of the PTZ device to focus an object clearly near or far. Default value for the LG Multix protocol is 1 and ranges from 1 to 3.
- > Preset tour park time: Enter the parking time.
- Save: Click this button to confirm the settings.


Presets (LW9228/LW9226/LW9228I/LW9226I/LNP3700T/LNP2800/ LNP2800I models only)

Note:

While configuring PATTERN/PRESET/GROUP TOUR/AUTO PAN, turn off AutoTracking feature temporarily.

Preview

You can see the settings screen from the preview window.

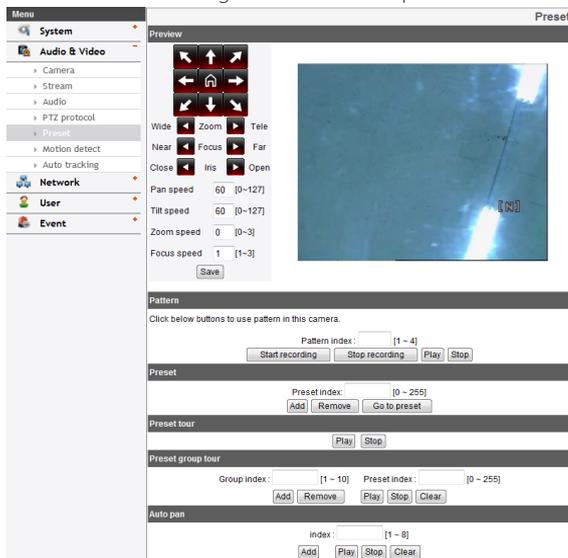

1. Move the camera to the point you want by using the arrow buttons.
2. Adjust the zoom, focus or iris options.
3. Set the Pan, Tilt, Zoom or Focus speed options.
4. Click the [Save] button to confirm the settings.

Pattern

You can activate the camera in a repeating pattern. The pattern is programmed by recording your manual pan, tilt, and zoom operations. The camera stores the movements you performed in memory. LNP3700T/LNP2800/LNP2800I series are supported pattern recording up to 4. (LW9226/LW9228 series do not need to select a pattern index.)

» To record the pattern

1. Enter the pattern number you wish to register.
2. Click the [Start recording] button to start the pattern recording.
3. Move the camera through the desired movement.
4. Click the [Stop recording] button to stop the pattern recording.

Note:

The available total time of pattern differs depending on connected PTZ device and operation.

» To play the pattern

1. Enter the pattern number you wish to register.
2. Click the [Play] button to play the programmed pattern.
3. Click the [Stop] button to stop playing.

Preset

Preset position is the function to register camera monitoring positions (preset positions) associated with position numbers. By entering the position numbers, you can move cameras to the preset positions.

» To register preset position

1. Enter the preset number you wish to register.

2. Move the camera to a point you wish.
 3. Click the [Add] button.
 4. Repeat the steps 1 to 3 to add other positions.
- » *To remove the preset position*
 1. Enter the memorized preset index number.
 2. Click the [Remove] button. The preset will be deleted.
 - » *Changing a picture in a preset position*
 1. Enter the memorized preset index number.
 2. Click the [Go to preset] button. The camera moves to the preset position and the picture of the camera in that position appears on the monitor.

Preset tour

A preset tour is composed of a group of preset positions that the operator can link together in a sequence.

1. Click the [Play] button to start the preset tour.
2. Click the [Stop] button to stop the preset tour.

Note:

If you control the PTZ, the preset tour will be stopped.

Preset group tour

You can create a group using preset positions that are registered already.

- » *To set the group*
 1. Enter the group number in the [Group index] option.
 2. Enter the preset index number in the [Preset index] option.
 3. Click the [Add] button.
 4. Repeat the steps 2 to 3 to add other preset index number.
 5. Repeat the steps 1 to 4 to set the other group index.

- » *To remove the preset index from the group*
 1. Enter the group number in the [Group index] option.
 2. Enter the preset index number in the [Preset index] option.
 3. Click the [Remove] button.
 4. Repeat the steps 2 to 3 to remove other preset index number.
 5. Repeat the steps 1 to 4 to set the other group index.
- » *To tour the group*
 1. Enter the group number in the [Group index] option.
 2. Click the [Play] button to start the group tour.
 3. Click the [Stop] button to stop the group tour.
- » *To delete a group*
 1. Enter the group number in the [Group index] option.
 2. Click the [Clear] button. The group will be deleted.

Auto pan

You can play the camera with auto pan function.


- » *To set the Auto Pan position*
 1. Enter the index number you wish to register.
 2. Move the camera to the desired point.
 3. Click the [Add] button.
 4. Repeat the steps 1 to 3 to add other index number. You can set the Auto pan index number up to 8.
- » *To play the auto pan*
 1. Click the [Play] button to start the Auto Pan function.
 2. Click the [Stop] button to stop the Auto Pan function.

Note:

If you click the [CLEAR] button, all of Auto pan position will be deleted.

=====

Motion detect

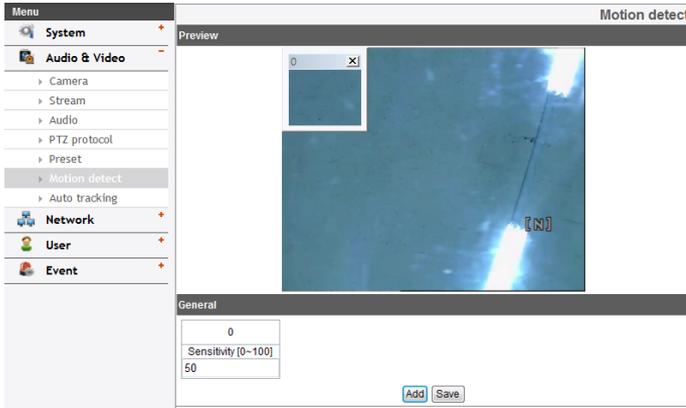

Preview

You can preview the motion detection window on the preview window.

General

- > Sensitivity: Enter the sensitivity to detect an object in motion.
- > Save: Click this button to confirm the settings.


How to set the motion detect window

1. Click the [Add] button. The motion detect window is displayed. You can add the five windows maximum for motion detection area.
2. Set the [Sensitivity] option.
3. Click the edge or corner of the window box to adjust the window size for motion detection.
4. Click the [Save] button to save the settings.

Note:

- You can reset the window size. Click one of the window edge or corner and drag & drop to reset the motion detection area.
- If LSW2010, LDW2010, LVS201 models, Motion Detection can be activated when at least one of channels (Master/Slave) is enabled, Video codec is set to H.264 and GOP size is more than 2.
- If not LSW2010, LDW2010, LVS201 models, Motion Detection can be activated when Master channel is enabled, Video codec is set to H.264 and GOP size is more than 2.

Auto Tracking (LW9228/LW9226/LW9228I/LW9226I/LNP3700T models only)

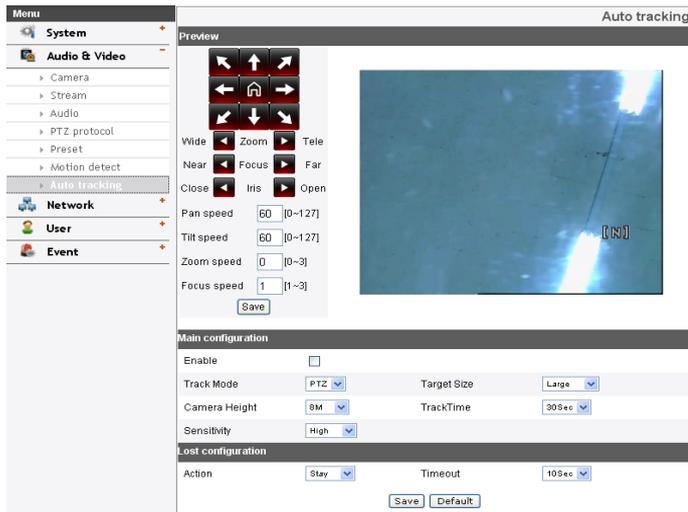

Preview

You can see the settings screen from the preview window.

1. Set the camera angle to the point you want with arrow buttons.
2. Adjust the zoom, focus options.
3. Set the Pan, Tilt, Zoom or Focus speed options.
4. Click the [Save] button to confirm the settings.

Main configuration

- > Enable: Click the check box if you want to activate this function.
- > Track Mode: During perform the Auto Tracking, track the object using PT(Pan / Tilt) or PTZ(Pan / Tilt / Zoom).

- > Target Size
 - SMALL: Make images about 1/4 of the object using Zoom feature.
 - MEDIUM: Make images about 1/2 of the object using Zoom feature.
 - LARGE: Make images about 3/4 of the object using Zoom feature.
- > Camera Height: Set to the height of the camera.
- > TrackTime: Set the maximum time object tracking. The camera moved to the initial position after tracking the amount of time set.
- > Sensitivity: Set the sensitivity of detection of objects.

Note:

Low sensitivity setting value can be difficult to detect of small objects or movement.

Lost configuration

- > Action
 - Stay: When tracking is failed, the camera stays current position preparing re-tracking, does not return to the initial position.
 - Return: When tracking is failed, the camera returns to the initial position preparing re-tracking.
- > Timeout: When tracking is failed for the first time, It tries to re-check the object during set timeout. After that, set action is performed.
- Save: Click this button to confirm the settings.
- Default: Click this button to restore the IP device back to original factory settings.

Network settings

Basic

The screenshot shows the 'Basic' tab of the Network settings page. The left sidebar contains a 'Menu' with categories: System, Audio & Video, Network (expanded to show Basic, RTP stream, TCP/IP, DDNS, IP filtering, and SNMP), User, and Event. The main content area is divided into sections: 'General' with a MAC address field (00:e0:91:85:75:33); 'Port & Encryption' with Web port (80), RTSP port (554), and Network encryption (HTTP); 'TTL' with a TTL field (7); and 'ARP Ping' with a checked checkbox and a 'Save' button.

General

- > MAC address: Displays the MAC address.

Port & Encryption

- > Web port: The default HTTP port number (80) can be changed to any port within the range 1 025 to 65 535.
- > RTSP port: Check RTSP port. The default port is 554. Other ports can be selected within the range 1 025 to 65 535.
- > Network encryption: Select the HTTP or HTTPS option for security.

Note:

The RTSP port number should not be same with the web port number.

TTL

- > TTL: This option indicates the Time-To-Live of multicast packets. The default setting is 7, and the allowed TTL range is from 1 to 255.

ARP Ping

- > Enable ARP Ping to configure IP address: Check to enable ARP ping.
- Save: Click this button to confirm the settings.

RTP stream

RTP (Real-time Transport Protocol) is an internet protocol that allows programs to manage the real-time transmission of multimedia data, via unicast or multicast.

The screenshot shows the 'RTP stream' settings page. The left sidebar is identical to the previous screenshot, but the 'RTP stream' option is selected. The main content area is divided into 'Master' and 'Slave' sections. Each section has radio buttons for 'RTP unicast' (selected) and 'RTP multicast'. Below these are fields for Video RTP port (8888), Audio RTP port (7777), Data RTP port (6666), and IP4 address (239.255.214.42). A 'Save' button is at the bottom.

Master / Slave

- > RTP unicast: When enabled the transmission of the data to the specified equipment happens on a network specifying a single address.

> RTP multicast: When enabled it reduces the transmission load on the camera by making the computer of the same segment network receive the same transmission data. When multicast option is checked then select Video Port number, Audio Port number and Data port number.


- Video RTP port: Specify the video transmission port number used for the multicast streaming.
- Audio RTP port: Specify the audio port number used for the multicast streaming.
- Data RTP port: Specify the VA data port number used for the multicast streaming.
- IPv4 address: Set the IP address for RTP multicast.

Note:

Each stream using multicast needs its own pair of multicast IP address and port numbers to avoid address conflict.

- Save: Click this button to confirm the settings.

TCP/IP

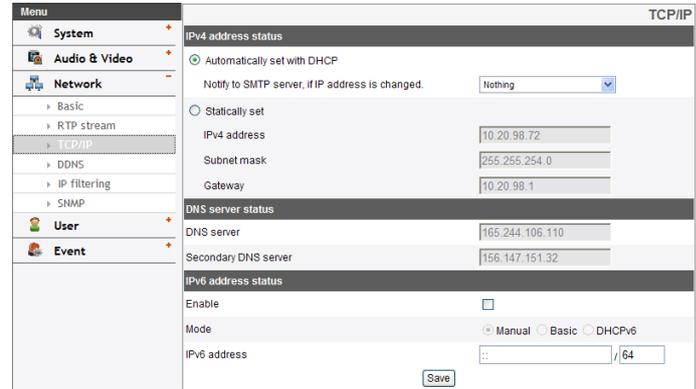

IPv4 address status

- > Automatically set with DHCP: Select this option when a DHCP server is installed on the network to allow IP address assignment. With this setting, the IP address is assigned automatically.
 - Notify to SMTP server, if IP address is changed: If you select this option, the user get a notification mail telling about changing of IP of the IP device.

Note:

You should register the SMTP server on the Event server setting to set this function.

- > Statically set: Select this option when you set a fixed IP address, with this setting, specify the IP address, Subnet mask and default gateway manually.
 - IPv4 address: Enter an IP address.
 - Subnet mask: Enter a subnet mask address.

- Gateway: Enter the gateway address.

DNS server status

- > Primary DNS server: Enter the Primary domain name server that translates the hostnames into IP address.
- > Secondary DNS server: Enter the Secondary DNS server address that backups the Primary DNS.
- Save: Click this button to confirm the settings.

IPv6 address status

- > Enable: Click the check box if you want to use the IPv6 address.
- > Mode
 - Manual: Select this option when you set a fixed IP address manually.
 - Basic: Select this option to allow IPv6 address assignment based on the Mac address. With this setting, the IP address is assigned automatically.
 - DHCPv6: Select this option when exist a DHCPv6 server in network. If DHCPv6 server is not existed or temporary disability, it requests assignment every 3 minutes.
- > IPv6 address: You can enter the IP address when you select the Manual mode. It alarms when you enter the invalid IP address.

DDNS

This free service is very useful when combined with the LG DDNS Server. It allows the user to connect the IP device using the URL, rather than an IP Address. This also solves the problem of having a dynamic IP address.




DDNS status

- > Don't use DDNS server: Disable the DDNS function.
- > Use DDNS server: Enable the DDNS function.
 - Provider: Displays the DDNS provider.
 - Hostname: Enter the hostname you want to use.
- Save: Click this button to confirm the settings.

IP filtering

The access of the IP addresses in the list are allowed or denied according to the choice made in the drop-down list of the Basic policy option. The administrator can add up to 10 IP address entries to the list (a single entry can contain multiple IP addresses). The users from these IP addresses need to be specified in the user list with the appropriate access rights. The IP list is to control the access permission of clients by checking the client IP address.

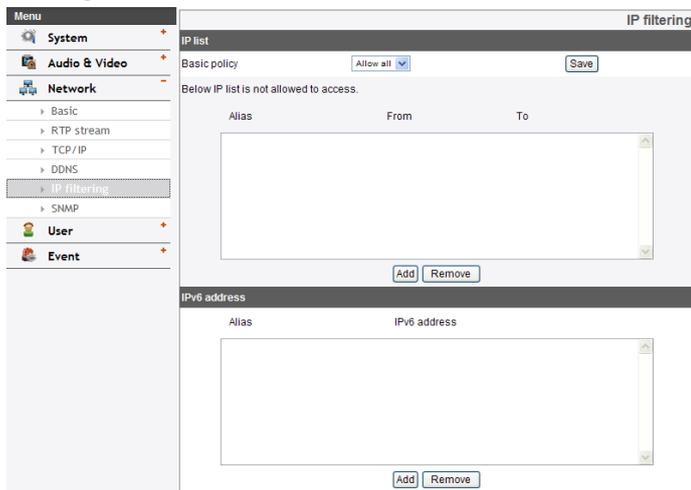

IP list

- > Basic policy: Select the basic policy type.
 - Allow all: Allow all the IP address basically, but the IP addresses in the list are denied.

- Deny all: Deny all the IP address basically, but the IP addresses in the list are allowed. It needs at least one IP address to activate this function.
- Save: Click this button to confirm the settings.
- Add: Click this button to add the IP address.
 1. Click the [Add] button.
 2. Set the IP options.

- Alias: Enter the alias.

- From: Enter the start IP address for the IP filtering.

- To: Enter the end IP address for the IP filtering.

Note:

If you want to deny or to allow a range of IP addresses, enter the start IP address to "From" and the end IP address to "To". You can also add an IP address by entering the same IP address to "From" and "To".

3. Click the [Save] button.
 4. Repeat the steps 1 to 3 to add additional IP address.
- Remove: Click this button to delete the IP address.
 1. Select the alias from the list.
 2. Click the [Remove] button. The IP address will be deleted.

IPv6 address

- Add: Click this button to add the IP address.
 1. Click the [Add] button.
 2. Set the IP address option.
 - Alias: Enter the alias.
 - IPv6 address: Enter the IP address for IP filtering.
 3. Click the [Save] button.
 4. Repeat the steps 1 to 3 to add additional IPv6 address.

- Remove: Click this button to delete the IPv6 address.
 - Select the alias from the list.
 - Click the [Remove] button. The IPv6 address will be deleted.

SNMP

The Simple Network Management Protocol (SNMP) is an application protocol to exchange the management information of network devices.

SNMP v1/v2c

- > Enable SNMP v1/v2c: Selects when SNMP is allowed access to this device.
- > Read Community: Specifies the SNMP management community in which you want to read this system.
- > Write Community: Specifies the SNMP management community in which you want to write this system.

SNMP v3

- > Enable SNMP v3: Selects when SNMP v3 is allowed access to this device. It supports authentication and encryption.
- > SecurityName: Type the security name for the SNMP.
- > Password: Type the password for the SNMP.

User settings

Basic

The IP device is shipped with the login rights of administrator only. If others need to access the IP device excluding the configuration a login with viewer rights need to be created. A maximum of 50 users can be created.

User list

- > Add the User

You can register a new user with various access rights.

 - Click the [Add] button. User setting dialog is displayed.
 - Enter the new User ID and Password. (Should have a minimum of 4 characters and preferably a combination of alphanumeric.)
 - To confirm the password, retype the password that you typed in the Password box.

4. Select the authority from the drop down list to provide the access rights to each user and then click the [Save] to confirm your selection.
 - Administrator: Allows you to operate setup menus and to view live images.
 - Power user: Use of the limited functions of the system. (The Configuration menu is not allowed.)
A power user can use the Live View, OSD control and audio functions.
 - Normal user: Provides the lowest level of access, Allows to view live images only.
 - Custom user: The user can login and view the live stream image only when the "Enable anonymous login" option is checked to enable it.

Note:

Remember the password.

> Edit the registered user

You can change the password or authority.

1. Choose the user ID and then click the [Edit] button.
2. Change the Password or Authority, then click the [Save] button to confirm your selection.

> Delete the registered user

1. Choose the user ID you want to delete.
2. Click the [Remove] button.

Note:

The default administrator user ID 'admin' and 'anonymous' are permanent and cannot be deleted.

Anonymous

> Enable anonymous login

Check the box to enable anonymous user login - allows the user access for only viewing the live stream image.

Maximum RTP stream connection

> Maximum number of simultaneous stream connection:

Set this number to limit the number of simultaneous stream connections.

The connections depend on the stream configuration as shown in the following Maximum RTP stream connection by stream configuration.

Video Codec	Resolution	Frame Rate	Quality	Maximum RTP stream
H.264	D1	30	HIGHEST	Up to 5
H.264	D1	30	MEDIUM	Up to 10
MJPEG	D1	30	MEDIUM	Up to 1
MJPEG	Half D1	30	MEDIUM	Up to 2
MJPEG	D1	15	MEDIUM	Up to 10

Note:

Preview window of the IP device setting and preset setting are affected by this setting.

- Save: Click this button to confirm the settings.

Event settings

Event schedule

When an event (VA/ Motion detect/ Sensor Event) occurs, this unit records the live images and routes as configured. The event function is depending on models.

Menu	Event schedule																		
System	Event schedule list																		
Audio & Video																			
Network																			
User																			
Event																			
> Event schedule																			
> Event server																			
> Sensor & Relay																			
	<table border="1"><tr><td>Trigger</td><td>Sensor-0</td></tr><tr><td>Relay</td><td>Relay-0</td></tr><tr><td>FTP server</td><td></td></tr><tr><td>SMTP server</td><td></td></tr><tr><td>Preset</td><td></td></tr><tr><td>Pre alarm</td><td>5</td><td>Post alarm</td><td>5</td></tr><tr><td colspan="4" style="text-align: center;"><input type="button" value="Edit"/></td></tr></table>	Trigger	Sensor-0	Relay	Relay-0	FTP server		SMTP server		Preset		Pre alarm	5	Post alarm	5	<input type="button" value="Edit"/>			
Trigger	Sensor-0																		
Relay	Relay-0																		
FTP server																			
SMTP server																			
Preset																			
Pre alarm	5	Post alarm	5																
<input type="button" value="Edit"/>																			
	<table border="1"><tr><td>Trigger</td><td>Sensor-1</td></tr><tr><td>Relay</td><td>Relay-1</td></tr><tr><td>FTP server</td><td></td></tr><tr><td>SMTP server</td><td></td></tr><tr><td>Preset</td><td></td></tr><tr><td>Pre alarm</td><td>5</td><td>Post alarm</td><td>5</td></tr><tr><td colspan="4" style="text-align: center;"><input type="button" value="Edit"/></td></tr></table>	Trigger	Sensor-1	Relay	Relay-1	FTP server		SMTP server		Preset		Pre alarm	5	Post alarm	5	<input type="button" value="Edit"/>			
Trigger	Sensor-1																		
Relay	Relay-1																		
FTP server																			
SMTP server																			
Preset																			
Pre alarm	5	Post alarm	5																
<input type="button" value="Edit"/>																			
	<table border="1"><tr><td>Trigger</td><td>Sensor-2</td></tr><tr><td>Relay</td><td>Relay-0</td></tr><tr><td>FTP server</td><td></td></tr><tr><td>SMTP server</td><td></td></tr><tr><td>Preset</td><td></td></tr><tr><td>Pre alarm</td><td>5</td><td>Post alarm</td><td>5</td></tr><tr><td colspan="4" style="text-align: center;"><input type="button" value="Edit"/></td></tr></table>	Trigger	Sensor-2	Relay	Relay-0	FTP server		SMTP server		Preset		Pre alarm	5	Post alarm	5	<input type="button" value="Edit"/>			
Trigger	Sensor-2																		
Relay	Relay-0																		
FTP server																			
SMTP server																			
Preset																			
Pre alarm	5	Post alarm	5																
<input type="button" value="Edit"/>																			
	<table border="1"><tr><td>Trigger</td><td>Sensor-3</td></tr><tr><td>Relay</td><td>Relay-1</td></tr><tr><td>FTP server</td><td></td></tr><tr><td>SMTP server</td><td></td></tr><tr><td>Preset</td><td></td></tr><tr><td>Pre alarm</td><td>5</td><td>Post alarm</td><td>5</td></tr><tr><td colspan="4" style="text-align: center;"><input type="button" value="Edit"/></td></tr></table>	Trigger	Sensor-3	Relay	Relay-1	FTP server		SMTP server		Preset		Pre alarm	5	Post alarm	5	<input type="button" value="Edit"/>			
Trigger	Sensor-3																		
Relay	Relay-1																		
FTP server																			
SMTP server																			
Preset																			
Pre alarm	5	Post alarm	5																
<input type="button" value="Edit"/>																			
	<table border="1"><tr><td>Trigger</td><td>MotionDetect-0</td></tr><tr><td>Relay</td><td>Relay-0</td></tr><tr><td>FTP server</td><td></td></tr><tr><td>SMTP server</td><td></td></tr><tr><td>Preset</td><td></td></tr><tr><td>Pre alarm</td><td>5</td><td>Post alarm</td><td>5</td></tr><tr><td colspan="4" style="text-align: center;"><input type="button" value="Edit"/></td></tr></table>	Trigger	MotionDetect-0	Relay	Relay-0	FTP server		SMTP server		Preset		Pre alarm	5	Post alarm	5	<input type="button" value="Edit"/>			
Trigger	MotionDetect-0																		
Relay	Relay-0																		
FTP server																			
SMTP server																			
Preset																			
Pre alarm	5	Post alarm	5																
<input type="button" value="Edit"/>																			

Event schedule list


- > To edit the Event Schedule
 1. Select the Trigger event and click the [Edit] button. Event schedule window is displayed.
 2. Set the options.
 - Trigger: Displays the selected trigger event.
 - Time: Sets the weekday, Start, Finish, Pre alarm, Post alarm and Ignore interval time options.
 - Action: Selects the options. This occurs when the event runs.
 - FTP server/SMTP server: Uploading of images to an FTP server, or e-mail notification.
 - Move camera to: Write the number of the preset, the camera would Move to this preset when the relay is activated.
 - Control relay: The relay is activated or deactivated.
 - Stream: Selects the stream of the connected camera.
 - Programmable Alarm: When the alarm is activated, the selected stream will be set with the specified framerate and quality during the control duration.
 1. Click the check box if you want to activate this function.
 2. Sets the options.
 3. Click the [Save] button to confirm the settings.

Note:

You should register the SMTP and FTP server on the Event server setting to set this function.

Event Server

Event Servers are used to receive the recorded video clip and/or notification messages.

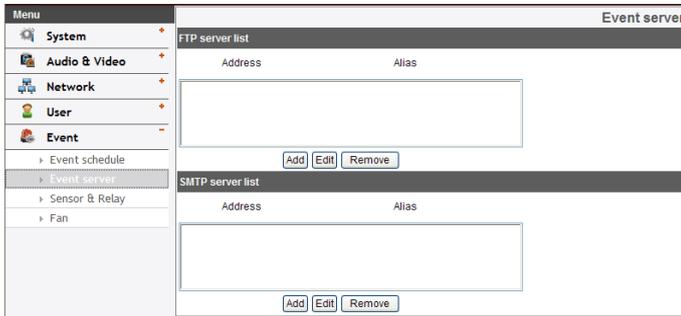

FTP server list

Image files can be transferred to the FTP server within the scheduled time. Image file that has been recorded linked to an external event is sent to the FTP server periodically.

- > To add the FTP server
 1. Click the [Add] button. FTP server setting window is displayed.
 2. Set the FTP server options.
 - Alias: Type the FTP Server name to upload the image files.
 - Address: Enter the FTP server's IP address.
 - Port: Enter the port number. The default FTP port is 21.
 - User ID: Type the user name for the Folder shared in the FTP server.
 - Password: Type the password for the folder shared in the FTP Server.

- Folder: Type the path with the folder that is shared in the FTP server.
- Test: Select [Test] to test the FTP server.

3. Click the [Save] button to confirm the settings.
- > To edit the FTP server
 1. Choose the FTP server in the FTP server list.
 2. Click the [Edit] button.
You can check or edit the FTP server options.
 - > To delete the FTP server
 1. Choose the FTP server in the FTP server list.
 2. Click the [Remove] button. This would remove the FTP server from the list.

SMTP server list

By selecting the e-mail option, a still image of the event is captured and an e-mail with the attached image file is sent to the specified mail address.

- > To add the SMTP server
 1. Click the [Add] button. SMTP server setting window is displayed.
 2. Set the SMTP server options.
 - Alias: Enter the SMTP server name.
 - User ID: Enter the user ID of the SMTP server. This would be the one who owns the mail account.
 - Password: Enter the password of the SMTP server.
 - Address: Enter the SMTP server address.
 - Port: Enter the port number. The default port is 25.

- Enable SSL: Check when use the SSL (Secure Socket Layer) protocol. SSL protocol is cryptographic protocols that provide secure communication on a network.
 - Receiving address: Type the recipients e-mail address. You can specify only one recipient e-mail address.
 - Administrator address: Type the e-mail address of the administrator.
 - Subject: Enter the subject/title of the e-mail.
 - Message: This message can describe the information of the acquired IP address, etc.
 - Test: Select [Test] to test the SMTP server.
3. Click the [Save] button to confirm the settings.
- > To edit the SMTP server
 1. Choose the SMTP server in the SMTP server list.
 2. Click the [Edit] button.
You can check or edit the SMTP server options.
 - > To delete the SMTP server
 1. Choose the SMTP server in the SMTP server list.
 2. Click the [Remove] button.

Sensor & Relay (Option)

Menu		Sensor & Relay			
System		Sensor			
Audio & Video		Enable	Alias	Type	
Network		<input checked="" type="checkbox"/>	Sensor-0	Normal open	
User					
Event		Relay			
Event schedule		Control duration	Alias	Type	Control relay
Event server		[1-86400(24hour), second]			
Sensor & Relay		5	Relay-0	Normal open	Run Stop
Fan		Save			

Sensor

- > Enable: Marks up when you want to activate the sensor.
- > Alias: Displays the sensor name.
- > Type: Select the sensor type.

Relay

- > Control duration: Enter the relay time.
- > Alias: Displays the relay name.
- > Type: Select the relay type.
- > Control relay
 - Run: Click to activate the relay.
 - Stop: Click to stop the relay.
- Save: Click this button to confirm the settings.

Note:

Number of sensor and relay are depending on models.

Fan (Option)



Fan fail notification

- > Control relay: Marks up when you want to activate the selected relay.
- > SMTP server: Selects the SMTP server. By selecting this option an e-mail notification is sent to the user indicating a failure in the fan operation.
- Save: Click this button to confirm the settings.

OSD Menu Setup (LSW900/LSW901/ LVW700/LVW701/LVW900/LVW901/ LDW2010/LSW2010 series)

The following table shows the list of menu items and options.

These options are depending on models. The OSD images are different from each model.

Main Menu	Sub Menu	Contents	
EXPOSURE	ELC/ALC or ELC (LDW2010 series only)	WDR/BLC or Backlight (LDW2010/LSW2010 series ONLY)	The option depends on the model.
		BRIGHTNESS	0 to 100
		AGC	OFF/LOW/ MIDDLE/HIGH
		SHUTTER	X512, ... , X2, AUTO, OFF, A.FLK, 1/160, ... , 1/90 000
		SENS-UP	OFF
			AUTO
EXIT	RET/TOP/END		
WHITE BAL	ATW	-	
	AWC → PUSH	-	

	MANUAL	COLOR TEMP	INDOOR, OUTDOOR
		RED	-100 to 100
		BLUE	-100 to 100
		EXIT	RET/TOP/END
DAY/NIGHT	AUTO	LEVEL	LOW/ MIDDLE/ HIGH
		DWELL TIME	5, 10, 15, 30, 60 SEC
		EXIT	RET/TOP/END
	DAY	-	
	NIGHT	-	
	3D-DNR	OFF	-
	LOW	-	
	MIDDLE	-	
	HIGH	-	
PRIVACY	OFF	-	
	ON	MASK NUMBER	AREA 1 to AREA 8
		DISPLAY	ON/OFF
		COLOR	GRAY, WHITE, BLACK
		HEIGHT	4 to 100
		WIDTH	4 to 100
		MOVE Y	2 to 98
		MOVE X	2 to 98
		EXIT	RET/TOP/END

SPECIAL	D-ZOOM	OFF	
		ON	ZOOM
			PAN
			TILT
			EXIT
	D-EFFECT	OFF/ V-FLIP/ MIRROR/ ROTATE	
	SHARPNESS	0 to 68	
	COLOR	OFF/ ON	
	STABILIZER	OFF/ ON	
	USER TITLE	OFF/ ON	
	LANGUAGE	The option depends on the model.	
	EXIT	RET/TOP/END	
RESET	CAMERA REBOOT	-	
	FACTORY RESET	-	
	EXIT	-	
EXIT	-	-	

General Operation

1. Click the [OSD control] button on the LG Smart Web Viewer.
2. Click  button on the OSD control window.
The camera setting menu appears on the live view window.




3. Use  or  button to select an option then click  button. Submenu appears.
4. Use  or  button to select a submenu option.
5. Use  or  button to select a value.
6. Select [EXIT] option then click  button to exit the setup menu. In the submenu, use  or  button to select the [EXIT] then use  or  button to select a mode and click  button to exit the setup menu.
 - RET: Return to the previous.
 - TOP: Return to the CAMERA SETTING menu screen.
 - END: Exit the setup menu.

Notes:

-  button: Used to move upper direction on the menu screen.
-  button: Used to move lower direction on the menu screen.
-  button: Used to increase the value selected in the menu.
-  button: Used to decrease the value selected in the menu.
-  button: Executes selections and displays a submenu for an item with the  mark.

Exposure settings

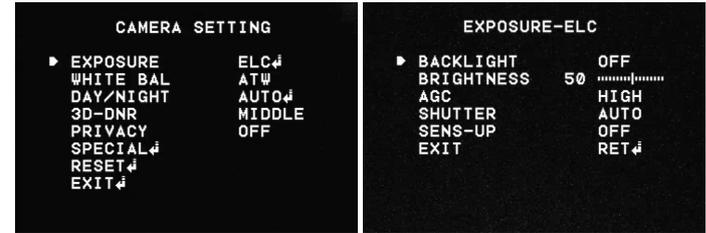

You can set the exposure options using the EXPOSURE menu.

1. Select [EXPOSURE] option on the [CAMERA SETTING] menu.
2. Use  or  button to select a mode.
3. Press  button and the EXPOSURE menu appears.

Notes:

- ELC Mode is right for outdoor scenes.
- ALC Mode is right for indoor scenes.

WDR/BLC (Option)

Use Backlight option to view the object clearly in backlight conditions.

1. Select [WDR/BLC] option on the [EXPOSURE] menu.
2. Use  or  button to select a mode then click  button.
 - WDR (Option): WDR (Wide dynamic range) feature can be very helpful to cope with very challenging lighting conditions. It is capable of capturing both of the dark part and bright part and combining the differences into a scene to generate a highly realistic image as original scene. Set the WDR limit.
 - > ACE (Adaptive Contrast Enhancement) : This function is used when you want to display dark areas of WDR brightly.
 - BLC: Camera's backlight compensation feature helps alleviate issues of visibility in high contrast areas. Set the BLC limit.
 - HSBLC: Use for masking brightness of the specific area to view the subject more clearly. The HSBLC mode is automatically activated only in low luminance scene.
 - > AREA SETTING: Use  or  button to select area then use  or  button to select [ON] or [OFF]. Click  button to exit the area setting menu.
 - > GRAY SCALE: Use  or  button to select a gray scale.
 - > USER SCALE: Use  or  button to select a bright level.
 - > MASK: Use  or  button to select [ON] or [OFF].
If you set the MASK to ON, the mask function is activated only when the HSBLC is activated by auto mode.
- OFF: Not in use.

BRIGHTNESS

You can increase the brightness of the darkened video. If you set the brightness to lower value, the image gets darkened. If you set the brightness to higher value, the image gets bright.

1. Select [BRIGHTNESS] option on the [EXPOSURE] menu.
2. Use  or  button to set the bright level.

AGC (Automatic Gain Control)

If the images are too dark, change the maximum [AGC] value to make the images brighter.

1. Select the [AGC] option on the [EXPOSURE] menu.
2. Use  or  button to select a mode.

SHUTTER (Shutter Speed)

Select the desired shutter speed for camera exposure. You can change the shutter speed to higher speed to capture fast-moving subjects, though the image becomes darker.

1. Select [SHUTTER] option on the [EXPOSURE] menu.
2. Use  or  button to set shutter speed.

SENS-UP

If pictures are not clear due to darkness, this SENS-UP operation would increase the sensitivity of picture.


1. Select [SENS-UP] option on the [EXPOSURE] menu.
2. Use  or  button to select a mode.
 - AUTO: Adjust the sensitivity of the picture automatically.
 - > SENS-UP LIMIT: Use  or  button to set the SENS-UP limit.
 - > EXIT: Select a mode and click  button to exit the menu.

Note:

If you set to one of the SHUTTER options except AUTO on the [SHUTTER] menu or [AGC] to [OFF], the [SENS-UP] setting is not available and [---] mark is displayed.

White Balance settings


Select the method by which the camera shifts its output colors to compensate for the color of a light source.

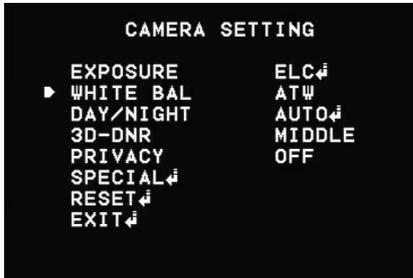

1. Select the [WHITE BALANCE] option.
2. Use **←** or **→** button to select a mode then click **↔** button.
 - ATW (Auto-Tracing White Balance): In this mode, white balance has better coverage than auto. Proper white balance may not be obtained under the following conditions:
 - > When the scene contains mostly high color temperature objects, such as a blue sky or sunset.
 - > When the scene is dim.
 - AUTO: You can set the white balance options automatically.
 - AWC **→** PUSH: If you select the AWC **→** PUSH mode, you will be able to set up the White Balance automatically using **↔** button.
 - MANUAL: You can set the white balance options manually.

- > COLOR TEMP: Use **←** or **→** button to select a function.
 - INDOOR: The color temperature range for the proper white balance is approximately 3 200 K.
 - OUTDOOR: The color temperature range for the proper white balance is approximately 5 100 K.
- > RED: Set the desired red value.
- > BLUE: Set the desired blue value.

Day/Night settings

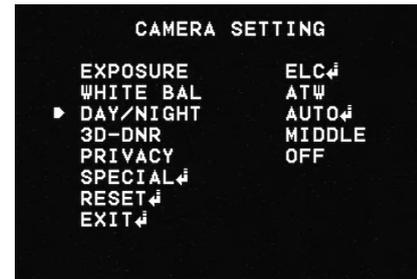

1. Select [DAY/NIGHT] option.
2. Use **←** or **→** button to select a mode for DAY/NIGHT function.
 - AUTO: DAY/NIGHT mode changes automatically.


Note:

If you set the AGC to [OFF] on the [EXPOSURE] menu, the AUTO mode of the DAY/NIGHT function is not available and [---] mark is displayed.

- > LEVEL: Use **←** or **→** button to select a level.
- > DWELL TIME: Use **←** or **→** button to select a dwell time.
- DAY: Color mode enabled.

- NIGHT: Black-and-white mode enabled.

3D-DNR setting

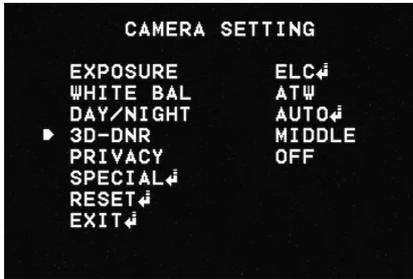

1. Select [3D-DNR] option.

If pictures are not clear due to noise, this option would reduce the noise of picture.


2. Use or button to select an option.

Notes:

- If you set the AGC to [OFF] on the [EXPOSURE] menu, the [3D-DNR] function is not available and [--] mark is displayed.
- When you use this function, the afterimage may occur.

Privacy setting

This function is aiming at the protection of personal privacy. The selected part is not displayed on the screen.

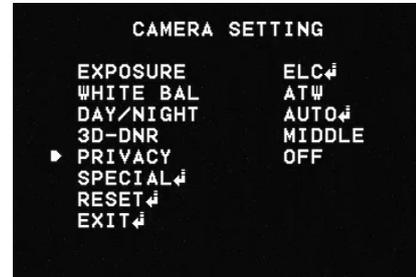


1. Select the [PRIVACY] option.
2. Use or button to select [ON] and press . The PRIVACY SETUP menu appears.
3. Use or button to select a zone number (AREA1 to AREA8) on the [MASK NUMBER] option.
4. Use or button to set to ON or OFF on the [DISPLAY] option. If you set to ON, the mask zone box appears on the live window.
5. Use or button to select the color of the mask zone box on the [COLOR] option.
6. Use or button to select an option then use or button to adjust the option.
 - HEIGHT: Increase or decrease the vertical size of the mask zone box.
 - WIDTH: Increase or decrease the horizontal size of the mask zone box.
 - MOVE Y: Moves vertical position of the mask zone box.
 - MOVE X: Moves horizontal position of the mask zone box.

Note:

The parts with the registered mask numbers from AREA1 to AREA4 have the same color. (So do the parts with the numbers from AREA5 to AREA8.) If you change the mask color, the registered mask color will be changed automatically with the same color for each of group (AREA1 to AREA4, AREA5 to AREA8).

Special menu settings

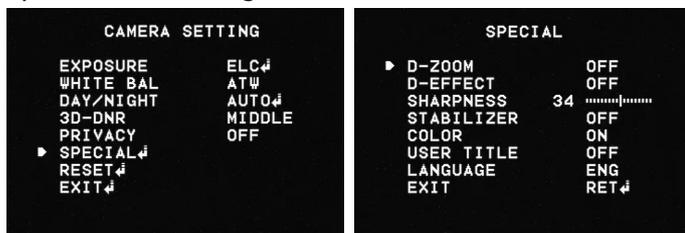

D-ZOOM

You can select the digital zoom level.

1. Select [D-ZOOM] option on the [SPECIAL] menu.
2. Use **←** or **→** button to select [ON] then click **↵** button. When you set to ON, the displayed image can be shaking.
3. Use **↑** or **↓** button to select an option then use **←** or **→** button to select a level.
 - ZOOM: Use **←** or **→** button to enlarge the screen.
 - PAN: Use **←** or **→** button to move the screen. (left or right)
 - TILT: Use **←** or **→** button to move the screen. (up or down)

D-EFFECT (Digital effect)

You can select the digital effect.

1. Select the [D-EFFECT] option on the [SPECIAL] menu.
2. Use **←** or **→** button to select a digital effect.
 - V-FLIP: Flip the picture vertically.
 - MIRROR: Turn on the mirror effect.
 - ROTATE: Rotate the picture. (180°)
 - OFF: Turn off the digital effect.

SHARPNESS

The degree to which the boundary of the two portions is clearly distinguished.

1. Select the [SHARPNESS] option on the [SPECIAL] menu.
2. Use **←** or **→** button to adjust the option. If you set the sharpness value to higher, the image outline becomes sharp. If you set to lower value, the image outline becomes dim.

STABILIZER

The image stabilizer function minimizes the appearance of shaky images caused by low-frequency vibration.

This function is useful for outdoor surveillance.

Select the [STABILIZER] option and set to ON or OFF.

Note:

If you set the [STABILIZER] to ON, the Digital zoom is set to [x1.1] automatically.

COLOR

You can switch the displayed picture to gray scale or color.

1. Select the [COLOR] option on the [SPECIAL] menu.
2. Use **←** or **→** button to change a color effect.
 - ON: To display the picture with color.

- OFF: To display the picture with grayscale.

USER TITLE

You can use the camera identification to assign a number and character to the camera.

To disappear the user title, select [OFF].

1. Select the [USER TITLE] option on the [SPECIAL] screen.
2. Use or button to select [ON] then click button. The USER TITLE menu appears.



3. Use , , , or button to select a character or number then click button.
 - CLR: Clear all entered characters and numbers.
 - POS: Move the USER TITLE position on the screen using the arrow buttons.
 - END: Confirm your selection or exit the setting.
 - (Blank): Insert a space at the cursor position.
 - / Moves cursor to left or right.

LANGUAGE

Select the viewer language for the camera setup menu and OSD information display.

1. Select the [LANGUAGE] option on the [SPECIAL] screen.
2. Use or button to select the language.

Reset setting



1. Select the [RESET] option.
2. Click button and the RESET menu appears.
3. Use or button to select option.
 - CAMERA REBOOT: Reboot the camera system.
 - FACTORY RESET: Clear certain settings and information and return to factory default settings.
4. Click button to confirm your selection.

OSD Menu Setup (LW9226/LW9228/ LW9228I/ LW9226I/LNP3700T/ LNP2800/LNP2800I series)

The following table shows the list of menu items and options.

LW9226/LW9228/LW9226I/LW9228I series

1st level	2nd level	3rd level	Contents
CAMERA SET	FOCUS	FOCUS MODE	AUTO/MANUAL/ONE PUSH/ ZOOM TRIG
		FOCUS DIST	LW9228 series: 50 CM, 1.8 M, 3 M, 6 M LW9226 series: 50 CM, 1 M, 3 M, 5 M
		RETURN	-
	EXPOSURE	IRIS	AUTO/MANUAL
		AGC	OFF/LOW/MIDDLE/HIGH
		WDR/BLC	OFF/WDR/BLC/HSBLC
		BRIGHTNESS	0 to 100
		SHUTTER	OFF, A.FLK, 1/160, ..., 1/90 000, X2, ..., X512, AUTO
		SENS-UP	AUTO X2/AUTO X3/.../AUTO X128/OFF
		RETURN	-

CAMERA SET	WHITE BALANCE	ATW	-	
		AUTO	-	
		MANUAL	COLOR TEMP	INDOOR/ OUTDOOR
			RED	- 100 to 100
			BLUE	- 100 to 100
	RETURN	-		
	ONE PUSH	-		
	DAY/NIGHT	AUTO	D/N LEVEL	LOW/MIDDLE/ HIGH
			DWELL TIME	5,10,15,30,60 SEC
			RETURN	-
		DAY	-	
		NIGHT	-	
	3D-DNR	OFF	-	
		LOW	-	
MIDDLE		-		
HIGH		-		
COLOR	ON	COLOR	-20 to 20	
	OFF	-		
SHARPNESS	0 to 68	-		
RETURN	-			

PAN/TILT SET	PRIVACY MASK	MASK NUMBER	1 to 8	-	
		SET MASK	-	-	
		MASK STATE	ON/OFF	-	
		MASK COLOR	GRAY, WHITE, BLACK	-	
		WIDTH	2 to 320	-	
		HEIGHT	3 to 240	-	
		RETURN	-		
	SPECIAL	PROPORTIONAL PT	ON/OFF	-	
		COMPASS	SET/ON/OFF	-	
		HOME POSITION	ON	SET	
				GO	
				DWELL TIME (0 to 100)	
				RETURN	
		OFF	-		
		AUTO RETURN	ON	RETURN TIME (1 MIN to 100 MIN)	
	OFF		-		
	TILT LIMIT	ON/OFF	-		
RETURN	-				
RETURN	-				

OSD SET	USER TITLE	ON/OFF
	ZOOM MAG	ON/OFF
	FUNCTION	ON/OFF
	DOME ID	ON/OFF
	RETURN	-
LANGUAGE	The option depends on the model.	
RESET	INFORMATION	-
	INITIALIZATION	-
	FACTORY RESET	-
	RETURN	-
RETURN	-	-

LNP3700T/LNP2800/LNP2800I series

1st level	2nd level	3rd level	Contents
CAMERA SET	FOCUS	FOCUS MODE	AUTO/MANUAL/ONE PUSH/ ZOOM TRIG
		FOCUS DIST	1M, 3 M, 6 M
		ZOOM START	LNP3700T series: x1 to x36 LNP2800 series: x1 to x27
		ZOOM END	LNP3700T series: x2 to x444 LNP2800 series: x2 to x336
		RETURN	-
	EXPOSURE	IRIS	AUTO/MANUAL
		AGC	OFF/1 to 10
		WDR/BLC	OFF/WDR/BLC/HSBLC
		BRIGHTNESS	0 to 100
		SHUTTER	OFF, A.FLK, 1/160, ..., 1/120 000, X2, ... X512, AUTO
		SENS-UP	AUTO X2/.../AUTO X128/OFF
		RETURN	-

CAMERA SET	ATW	-		
	AUTO	-		
	WHITE BALANCE	MANUAL	COLOR TEMP	INDOOR/ OUTDOOR
			RED	- 100 to 100
			BLUE	- 100 to 100
			RETURN	-
	ONE PUSH	-		
	DAY/NIGHT	AUTO	D/N LEVEL	LOW/MIDDLE/ HIGH
			DWELL TIME	5,10,15,30,60 SEC
			RETURN	-
		DAY	-	
	NIGHT	-		
	3D-DNR	OFF	-	
		LOW	-	
		MIDDLE	-	
		HIGH	-	
	COLOR	ON	COLOR	-50 to 50
OFF		-		
SHARPNESS	0 to 68			
STABILIZER	OFF/ON			
RETURN	-			

PAN/TILT SET	PRIVACY MASK	MASK NUMBER	1 to 8			
		SET MASK	-			
		MASK STATE	ON/OFF			
		MASK COLOR	GRAY, WHITE, BLACK			
		WIDTH	0 to 320			
		HEIGHT	0 to 240			
		RETURN	-			
	SPECIAL	PROPORTIONAL PT	ON/OFF	-		
		COMPASS	ON/OFF	-		
		HOME POSITION	ON	SET		
				GO		
				DWELL TIME (INFINITE, 1 MIN to 100 MIN)		
				RETURN		
			OFF	-		
		AUTO RETURN	ON	RETURN TIME (1 MIN to 100 MIN)		
	OFF		-			
	TILT LIMIT	ON/OFF	-			
	RETURN	-				
	RETURN	-				

OSD SET	USER TITLE	ON/OFF
	ZOOM MAG	ON/OFF
	FUNCTION	ON/OFF
	DOME ID	ON/OFF
	RETURN	-
LANGUAGE	The option depends on the model.	
RESET	INFORMATION	-
	INITIALIZATION	-
	CAMERA RESET	-
	FACTORY RESET	-
	RETURN	-
RETURN	-	-

Auto Tracking

Normal Scenario for Auto Tracking

Object detecting state

The camera starts to search a moving object. It may not start detecting under the same conditions. See 'About Auto Tracking'.

Object tracking state

If the camera detects the object, it starts to track the object. When it uses PTZ in tracking, it'll zoom in the object if it is small. If some OSD such as USER TITLE, ZOOM MAG, FUNCTION, DOME ID, and COMPASS are enabled, they are hidden from this state.

Recovery state

When the camera is configured to PTZ mode and lost the object, it will zoom out to re-tracking the object.

Lost state

If the camera fails to re-tracking the object, it can stay its position or return to the initial position where the tracking was started. The hidden OSD is shown from this state.

While PRESET TOUR / GROUP TOUR / AUTO PAN


- When the camera is stopped at one preset position, it follows the normal scenario for the preset dwell time.
- If a moving object is detected, the camera tracks the object until the lost state.
- If a moving object is not detected for the dwell time, it goes to the next preset position. While it is moving to the next position, the Auto Tracking is stopped temporary.
- Because of the OSD, Auto Tracking might operate incorrectly while PRESET TOUR/GROUP TOUR/AUTO PAN.

About Auto Tracking

- The Auto Tracking is stopped when a user moves the camera (Pan/Tilt/Zoom) or turns on OSD Menu. It is started again whenever a user stops the control.
- The Auto Tracking is disabled temporary while the camera is moving based on some configurations: PRESET TOUR, GROUP TOUR, PATTERN TOUR, and AUTO PAN.
- When NIGHT MODE or the camera height value is configured to 2.5 M, ZOOM function will be inactivated to operate Auto Tracking correctly.
- The following conditions can cause operational errors or make Auto Tracking impossible.
 - An object that is not distinguishable from background at low luminance.
 - An object that has similar color with background.
 - A lot of moving objects
 - Unsteady camera
 - Environments where a shadow is long
 - Environments where there is extreme flickering or where there is light shining and light reflection on the dome

General operation

1. Click the [OSD control] button on the LG Smart Web Viewer.
2. Click  button.
The camera setting menu appears on the live view window.

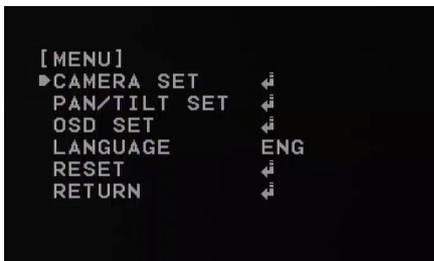

3. Use  or  button to select an option then click  button.
Submenu appears.
4. Use  or  button to select a submenu option.
5. Use  or  button to select a value.
6. Click  button to exit the setup menu.
In the submenu, use  or  button to select the [RETURN] option and click  button to return to the previous.


Note:

-  button: Used to move upper direction on the menu screen.
-  button: Used to move lower direction on the menu screen.
-  button: Used to increase the value selected in the menu.
-  button: Used to decrease the value selected in the menu.
-  button: Executes selections and displays a submenu for an item with the  mark.

Camera menu settings

Focus setting

The camera adjusts the focus automatically by sensing the center of the picture.

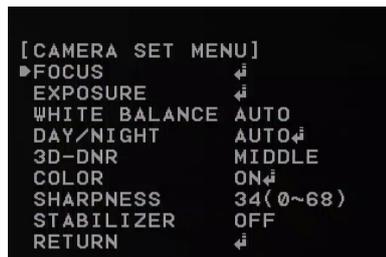

Focus mode

Select [FOCUS MODE] option on the [FOCUS] menu, then select the following mode.

- **AUTO:** Auto-focus is activated automatically.
- **MANUAL:** Focus is activated automatically after the zoom movement is finished. If you want to control the focus manually, press the FOCUS (← or →) buttons on the controller.
- **ONE PUSH:** The focus is activated manually. If the camera is received auto-focus command, the camera is activated auto-focus mode and the focus is set automatically and then the focus mode is automatically changed to manual mode.
- **ZOOM TRIG:** The focus is activated manually. If you change the zoom, the focus is activated automatically and then the focus mode is automatically changed to manual mode.

Focus Distance setting

Selects the minimum shooting distance for the focus. Select [FOCUS DIST] option on the [FOCUS] menu, then select a focus distance value.


Zoom Start setting (Option)

You can set the zoom start position of the camera. When the zoom function is operated, the zoom always will start at the selected zoom start position. Select [ZOOM START] option on the [FOCUS] menu, then set a zoom start position.


Zoom End setting (Option)

You can set the zoom end position of the camera. If you set the zoom end position, the zoom is operated up to the selected zoom end position. Select [ZOOM END] option on the [FOCUS] menu, then set the zoom end position.

Exposure settings

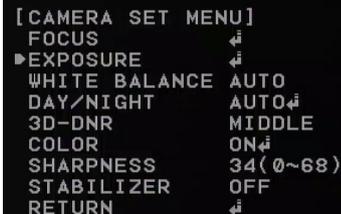

```
[CAMERA SET MENU]
FOCUS          ←
▶EXPOSURE      ←
WHITE BALANCE  AUTO
DAY/NIGHT      AUTO ←
3D-DNR         MIDDLE
COLOR          ON ←
SHARPNESS      34 (0~68)
STABILIZER     OFF
RETURN         ←
```

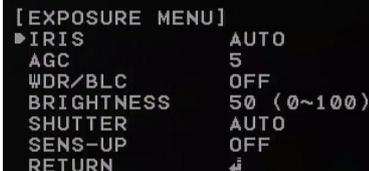

```
[EXPOSURE MENU]
▶IRIS          AUTO
AGC            5
WDR/BLC       OFF
BRIGHTNESS    50 (0~100)
SHUTTER       AUTO
SENS-UP       OFF
RETURN        ←
```

Iris setting

Select the desired lens iris value for camera exposure. Select [IRIS] option on the [EXPOSURE] menu, then select a value.

- **AUTO:** The lens iris is set automatically.
- **MANUAL:** Use ← or → button to select the DC Iris level. DC Iris level are set by one parameter unit.

AGC (Automatic Gain Control) setting

If the images are too dark, change the maximum [AGC] value to make the images bright.

1. Select the [AGC] option on the [EXPOSURE] menu.
2. Use  or  button to select a value.

WDR/BLC setting

Use WDR/BLC option to set the options for BLC or WDR camera.

1. Select [WDR/BLC] option on the [EXPOSURE] menu.
2. Use  or  button to select a mode then press 
 - WDR LEVEL: WDR (Wide dynamic range) feature can be very helpful to cope with very challenging lighting conditions. It is capable of capturing both of the dark part and bright part and combining the differences into a scene to generate a highly realistic image as original scene. Set the WDR level (LOW, MIDDLE, HIGH).
 - BLC LEVEL: Camera's backlight compensation feature helps alleviate issues of visibility in high contrast areas. Set the BLC level (LOW, MIDDLE, HIGH).
 - HSBC: Use for masking brightness of the specific area to view the subject more clearly.
 - HSBC LEVEL: Select the HSBC level. (LOW, MIDDLE, HIGH).
 - COLOR: Use  or  button to select a color.
 - OFF: Not used.

BRIGHTNESS setting

You can increase the brightness of the darkened video. If you set the brightness to lower value, the image gets darkened. If you set the brightness to higher value, the image gets bright.

1. Select [BRIGHTNESS] option on the [EXPOSURE] menu.
2. Use  or  button to set the bright level.

SHUTTER (Shutter Speed) setting

Select the desired shutter speed for camera exposure. You can change the shutter speed to higher speed to capture fast-moving subjects, though the image becomes darker.

1. Select [SHUTTER] option on the [EXPOSURE] menu.
2. Use  or  button to set shutter speed.

SENS-UP setting

If pictures are not clear due to darkness, use this function to increase the sensitivity of picture.


1. Select [SENS-UP] option on the [EXPOSURE] menu.
2. Use  or  button to set the SENS-UP limit. To set the SENS-UP function, select the [AUTO] on the [SHUTTER].

Note:

If you set to one of the SHUTTER options except AUTO on the [SHUTTER] menu, the [SENS-UP] setting is not available and [---] mark is displayed.

White Balance setting

Select the method by which the camera shifts its output colors to compensate for the color of a light source.

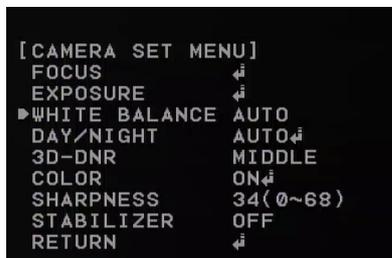


1. Select the [WHITE BALANCE] option on the [CAMERA SET] menu.
2. Use **←** or **→** button to select a mode then press **↔**.
 - ATW (Auto-Tracing White Balance): In this mode, the color temperature range for the proper white balance is approximately from 1 800 to 10 500 K. Proper white balance may not be obtained under the following conditions:
 - When the color temperature is out of the 1 800 K to 10 500 K range.
 - When the scene mostly contains high color temperature objects, such as a blue sky or sunset.
 - When the scene is dim.
 - AUTO: In this mode, the color temperature range for the proper white balance is approximately 2 700 K to 5 400 K. Proper white balance may not be obtained under the following conditions:
 - When the color temperature is out of the 2 700 K to 5 400 K range.
 - When the scene mostly contains high color temperature

objects, such as a blue sky or sunset.

- When the scene is dim.
- ONE PUSH: If you select the ONE PUSH mode, you will be able to set up the White Balance automatically using **↔** button.
- MANUAL: You can set the white balance options manually.
 - COLOR TEMP: Use **←** or **→** button to select a function.
 - › INDOOR: The color temperature range for the proper white balance is approximately 3 200 K.
 - › OUTDOOR: The color temperature range for the proper white balance is approximately 5 100 K.
 - RED: Set the desired red value.
 - BLUE: Set the desired blue value.

Day/Night setting

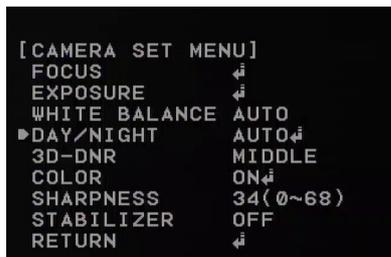


1. Select [DAY/NIGHT] option on the [CAMERA SET] menu.
2. Use ◀ or ▶ button to select the mode.
 - AUTO: DAY/NIGHT mode changes automatically.
 - D/N LEVEL: Use ◀ or ▶ button to select a level.
 - DWELL TIME: Use ◀ or ▶ button to select a dwell time.

Note:

If you set the AGC to [OFF] or the SHUTTER is set to one of the SHUTTER options except AUTO on the [EXPOSURE] menu, the AUTO mode of the DAY/NIGHT function is not available and [---] mark is displayed.

- DAY: Color mode enabled.
- NIGHT: Black-and-white mode enabled.

3D-DNR setting

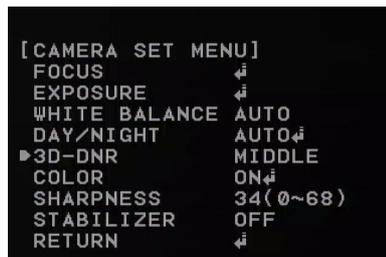

1. Select the [3D-DNR] option. If pictures are not clear due to brightness, use this function to reduce the noise of picture.
2. Use ◀ or ▶ button to select an option.

Note:

- If you set the AGC to [OFF] on the [EXPOSURE] menu, the [3D-DNR] function is not available.
- When you use this function, the afterimage may occur.

Color setting


You can switch the displayed picture to grayscale or color.



1. Select the [COLOR] option on the [CAMERA SET] menu.
2. Use **←** or **→** button to change a color effect.
 - ON: To display the picture with color. Select ON and press **←** to display the submenu. You can adjust the color level using the **←** or **→** button.
 - OFF: To display the picture with grayscale.

Sharpness setting

Sharpens the image outline.

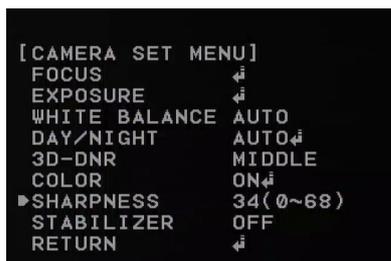

1. Select the [SHARPNESS] option on the [CAMERA SET] menu.
2. Use **←** or **→** button to adjust the option. If you set the sharpness value to higher, the image outline becomes sharp. If you set to lower value, the image outline becomes dim.

Stabilizer setting (Option)

The image stabilizer function minimizes the appearance of shaky images caused by low-frequency vibration.



This function is useful for outdoor surveillance. Select [STABILIZER] option and set to ON or OFF.



Note:

- If you set the [STABILIZER] to ON, the Digital zoom is set to [x1.1] automatically.
- [STABILIZER] is not activated for LW9226(l) and LW9228(l) models.

PAN/TILT Settings

Privacy Mask setting

This function is aiming at the protection of personal privacy, the mask zone is not displayed on the screen. Up to 8 zones can be registered.

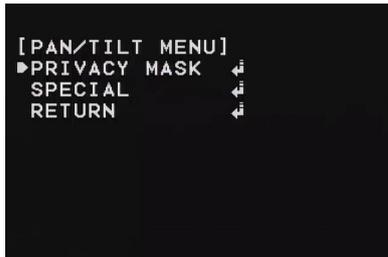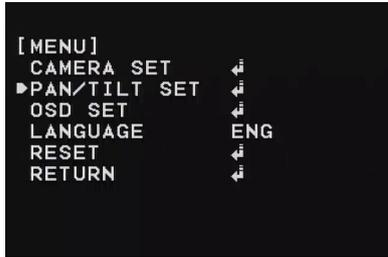


1. Select the [PRIVACY MASK] option on the [PAN/TILT MENU].
2. Press  button to display the PRIVACY MASK MENU.
3. Use  or  button to select a zone number on the [MASK NUMBER] option.

4. Select the [SET MASK] option and press  button.
5. Select the mask zone using the PTZ control buttons and then press  button to save it.
6. Use  or  button to set to [ON] or [OFF] on the [MASK STATE] option. If you already registered the mask zone and set to ON, the mask zone box appears on the monitor.
7. Use  or  button to select the color of the mask zone box on the [MASK COLOR] option.
8. Select the [WIDTH] option and use  or  button to adjust the horizontal size of the mask zone box.
9. Select the [HEIGHT] option and use  or  button to adjust the vertical size of the mask zone box.
10. Repeat steps 3 to 9 to add additional positions.

Notes:

- The parts with the registered mask numbers from 1 to 4 have the same color. (So do the parts with the numbers from 5 to 8). If you change the mask color, the registered mask color will be changed automatically with the same color for each of group (1 to 4, 5 to 8).
- The initial PRIVACY MASK color is set to black. After setting, the PRIVACY MASK position on [SET MASK] option, it'll be changed to gray color.
Be sure, you have to press  button on the [SET MASK] option to confirm the privacy mask color.

Special setting

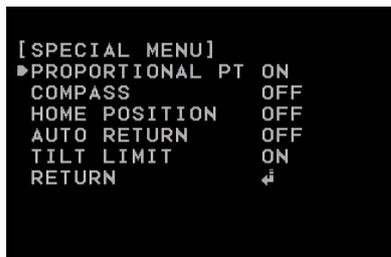

Proportional PT

This function optimizes the image by automatically adjusting the PAN/TILT (horizontal/vertical rotation) speed according to the zoom ratio.

1. Select [PROPORTIONAL PT] option on the [SPECIAL] menu.
2. Use or button to toggle it on and off.
 - ON : Pan/tilt speed is in inverse proportion to the zoom ratio.
 - OFF : The speed is constant at the fastest level regardless of the zoom ratio.

Compass

You can display the north, south, east and west information on the screen.

1. Select [COMPASS] option on the [SPECIAL] menu.
2. Set the [COMPASS] option to [SET] and then press button.
3. Select north point using the PTZ control buttons and then press button.
4. Set the [COMPASS] option to [ON].

Home position

The home position is the camera's basic position.

The camera returns to this position whenever you want.

Use the following procedure to make the home position.

1. Select [HOME POSITION] option on the [SPECIAL] menu.
2. Use or button to set it ON.
3. Press button.
4. Select [SET] option and then press button.
5. Select the home position where you want and then press button.
6. Select [DWELL TIME] option and then select the dwell time.
7. Select [RETURN] option and press button to exit the setting menu.

» *Go to Home position*

1. Select [HOME POSITION] option on the [SPECIAL] menu.
2. Use or button to set it ON.
3. Press button.
4. Select [GO] option and then press button. The camera will move to the home position.

Note:

If you set the [HOME POSITION] to [ON], the [AUTO RETURN] option is set to [OFF] automatically and you can not use it. (LW9226(I)/LW9228(I) series only)

Auto return

This function can be used to specify automatic return to a particular mode if a certain amount of time elapses without any operation being performed.

1. Select [AUTO RETURN] option on the [SPECIAL] menu.
2. Use  or  button to set it [ON] and then press  button.
3. Select [RETURN TIME] option and then select the auto return time.
4. Select [RETURN] option and press  button to exit the setting menu.

Note:



If you set [AUTO RETURN] to [ON], the [HOME POSITION] option is set to [OFF] automatically and you can not use it.
(LW9226(l)/LW9228(l) series only)

Tilt limit

You can specify the tilt range. If you set this function, the camera is able to tilt from 15° to 165°.

1. Select [TILT LIMIT] option on the [SPECIAL] menu.
2. Use  or  button to set it [ON]. If you do not want to use this function, set it to [OFF].

OSD Settings

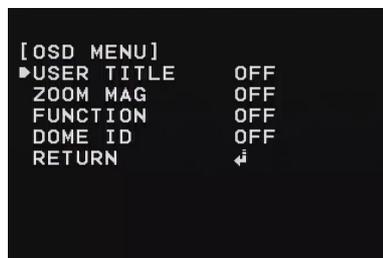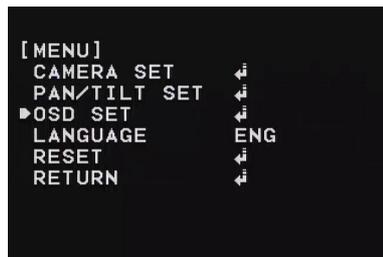

Note:

[DOME ID] is not activated for LNP3700T,LNP2800,LNP2800I models.

User title setting

You can use the camera identification to assign a number and character to the camera.

1. Select [USER TITLE] option on the [OSD] menu.

- Use or button to set it [ON].
- Press button. The USER TITLE menu appears.
- Use , , or button to select a character, number, symbol mark or option item.



- </>: Moves cursor to left or right.
- (Blank): Insert a space at the cursor position.
- CLR: If you enter the wrong code, select [CLR] then press . All letters will be erased at once.
- POS: Move the USER TITLE position on the screen using the or buttons.
- END: Select this option to exit the settings.

ZOOM MAG setting

Displays or removes the zoom OSD on the screen.

- Select [ZOOM MAG] option on the [OSD] menu.
- Use or button to set it [ON] or [OFF].
- Select [RETURN] option and press button to exit the setting menu.

FUNCTION setting

Displays or removes the Function OSD on the screen.

- Select [FUNCTION] option on the [OSD] menu.
- Use or button to set it [ON] or [OFF].
- Select [RETURN] option and press button to exit the setting menu.

DOME ID setting (Option)

Displays or removes the Camera ID OSD on the screen.


- Select [DOME ID] option on the [OSD] menu.
- Use or button to set it [ON] or [OFF].
- Select [RETURN] option and press button to exit the setting menu.

Note:



USER TITLE, ZOOM MAG, FUNCTION, DOME ID, and COMPASS are hidden when the camera starts tracking an object. When the tracking is stopped, those will be displayed as configured.

LANGUAGE Setting

Select a language for the setup menu and OSD display.

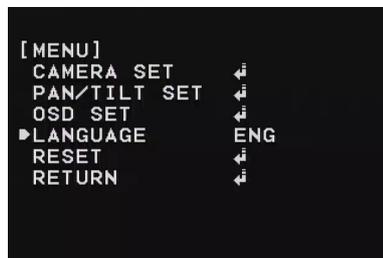

RESET Setting

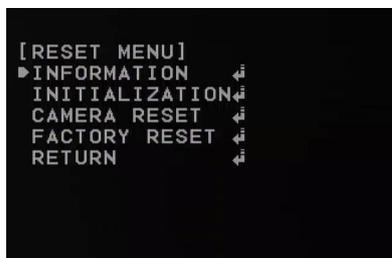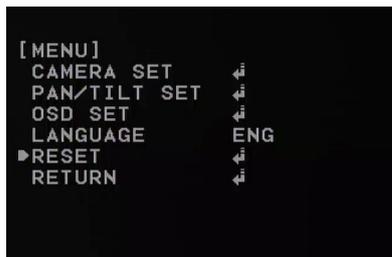

Note:

[CAMERA RESET] is not activated for LW9226(l) and LW9228(l) models.

Information

You can view the current camera information such as PTZ software version, camera software version, camera ID, Protocol and Baud Rate.

1. Select [INFORMATION] option on the [RESET] menu.
2. Press  button to display the current camera information.

Initialization

You can initialize the camera settings.

1. Select [INITIALIZATION] option on the [RESET] menu.
2. Press  button then confirmation window is displayed.
3. Select [YES] and press  button.

Camera reset (Option)

1. Select [CAMERA RESET] option on the [RESET] menu.
2. Press [Open] or [Close] button then confirmation window is displayed.
3. Select [YES] and press [Open] or [Close] button.

Factory reset

Clear certain settings and information and return to factory default settings.

1. Select [FACTORY RESET] option on the [RESET] menu.
2. Press  button then confirmation window is displayed.
3. Select [YES] and press  button. The camera will return to the factory default settings.

Reference

Troubleshooting

This section provides useful information to help you to resolve any difficulty you might have with your LG IP device. Fault symptoms, possible causes and remedial actions are provided here.

IP Setting problems

- ARP/Ping: Disconnect and reconnect the power to the network camera. The device should get the IP within 2 minutes.
- Ping your camera: Open the command prompt on your computer, type ping with the IP address of the network device. The reply obtained by this command provides explanation for the cause of the problem.
 1. bytes = 32 time = 2 ms indicates that the IP address is already used and cannot reuse the same. A new IP address needs to be obtained.
 2. Destination host unreachable: indicates that the network device and your computer do not fall in the same subnet hence needs to get a new IP address. Contact the system administrator for the required help.
 3. Request timed out: Indicates that the IP is free as it is not used by anyone and the network device can obtain this.
- IP Conflicts: If the LG network device is set with a static IP address and if the DHCP option is set then there may be IP's same as the network device and other network partner. Hence set the static IP address to 0.0.0.0 to resolve this conflict.

Cannot access the camera from browser:

- Reconnect the network camera with power and check the ping operation to know if the IP is used by others.
- Disable the proxy setting in the Browser if you are using a proxy server.
- Check for proper cabling and network connections, try to ping after verifying the connectivity.
- Sometimes when HTTPS is enabled, we would be checking the URL with http, in this case manually change the URL to the http/https accordingly.
- Verify the DNS and Gateway settings if the IP address is assigned statically to the network device.

Accessing camera external to the local network

- Firewall Protection: Check for the internet firewall with the system administrator, either he has to do port forwarding or modify the DMZ function on the router.
- Default router needed: Check if you need configure the router settings.

Sporadic network performance

- Network Switches or hubs used may be of the lower configuration and the load on this may not meet the required conditions of our network camera.
- Check for the RJ-45 cables that are used for the network connectivity.
- If POE is used check if the power is got by the network camera when connected to it.

Login Password lost

- Reset the camera by pressing the Reset button for more than 3 seconds to restore default settings.
- After the factory settings login using the default user name and password.

Video Streaming problems

- If the video streaming does not start on the Web browser, install the LG Web Client ActiveX program on your computer following the instructions on the Web browser.
- When Windows IE browsers are used always take care to allow pop ups, check this option before we run the web client.
- Check the quality of image by referring the video settings as described in the manual.
- Sometimes there would be intermittent or very slow video streaming, this may be because of the higher resolution and frame rate that are set for the video.
- The video streaming may appear poor at times, this may be because of the network traffic ,too many devices connected to the switch or hub, enabling motion detection to each of the video streams and because of other programs running on your computer.
- If the images appear to be blurred adjust the focus of the network camera to get a clear image.
- Video images if appear white and black adjust the settings in the OSD to get back the colorful image.
- Select the Night mode if the network camera is connected at a place where surrounding light is less or dark.

- If we obtain lower frame rate than set we need to check from the system administrator for sufficient bandwidth available or reduce the number of applications running on the client computer.
- If the client PC's are unable to access the multicast stream, check with the system administrator for the use of a valid multicast address or check if the router is supporting multicasting.
- If the images appear to have white or gray stripes on it, upgrade the Video graphics driver on the client PC to the latest version.
- Video images may be noisy if you are using the camera in a very low light environment or the bit rate/quality is set to very low values. Provide higher values for quality and support the surrounding environment with enough light.

Audio condition

The client computer that is interacting with the camera needs to have a sound card that is functional to support speaker and microphone.

The sound card needs to be checked for its support for full duplex communication.

Ensure that the mute button of the client computer is not set and all the audio settings are correct.

Speaker button on the web viewer should be enabled to listen the audio from the network camera.

Ensure that the bidirectional audio button is enabled on the Web viewer and the microphone is set.

Change the input and the output gain for microphone and the speaker respectively to set correct audio level.

For all further support please contact the supplier or forums or websites.

Open source software notice

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Specifications

LSW900/LSW901/LVW700/LVW701/LVW900/LVW901/LSW2010/LDW2010 Series

Item		LSW900	LSW901	LVW700	LVW701	LVW900	LVW901	LSW2010	LDW2010
Image Device		6 mm (1/3 type) Vertical Double Interline CCD						6 mm (1/3 type) Super HAD II CCD	
Lens Type		C/CS Mount		Varifocal Lens (2.8 mm to 11 mm)			C/CS Mount	Fixed Lens (F=3.7 mm)	
Video Out		1.0 Vp-p Composite Signal (75 Ω)							
Auto Gain Control		OFF/ LOW/ MIDDLE/ HIGH							
Exposure		ALC/ELC							ELC
Electric Shutter		1/50 to 1/90 000 (PAL), 1/60 to 1/90 000 (NTSC)							
Day/Night		True Day and Night (Auto/ Day / Night)						Digital Day and Night (Auto/ Day / Night)	
Sens-Up		AUTO/OFF							
Minimum Illumination	Color	0.1 lx (Sens-up Off)						0.06 lx (Sens-up Off)	0.3 lx (Sens-up Off)
	B/W	0.000 03 lx (Sens-up On)						0.000 06 lx (Sens-up On)	0.000 06 lx (Sens-up On)
White Balance		ATW / AWC / Manual							
Backlight Compensation		BLC/WDR/HSBLC/OFF			BLC/WDR			BLC/HSBLC/OFF	
3D-DNR		OFF/ Low/ Middle/ High							
Privacy Masking		8 Zone							
Digital Zoom		X8							
DIS(Stabilizer)		ON/OFF							
Digital Effect		OFF/V-Flip / Mirror / Rotate							
Resolution (Max)		704 x 480 (NTSC), 704 x 576 (PAL)							
Output		RJ-45 (Network), CVBS (Monitor)							
Frame Rate (Maximum)		30 fps/25 fps (NTSC/PAL)							

Compression		H.264 (Basic Profile), MJPEG, Dual Stream							
Audio		Full Duplex (Line level input/output)							
Audio Compression		G.726, G.711(A-law, u-law)							
Sensor/Relay		1 digital input, 1 relay output							
VA	Intruder detection	Not Support	Support	Not Support	Support	Not Support	Support	Not Support	
	Crossing Line	Not Support	Support	Not Support	Support	Not Support	Support	Not Support	
	Object Removal	Not Support	Support	Not Support	Support	Not Support	Support	Not Support	
	Object Counting	Not Support	Support	Not Support	Support	Not Support	Support	Not Support	
	Tampering	Not Support	Support	Not Support	Support	Not Support	Support	Not Support	
Event Detection		Sensor In, Motion detect							
		-	VA	-	VA	-	VA	-	-
Event Notification		Relay, SMTP, FTP							
ID/Password		Multi level user ID/password (Admin, Power, Normal, Customer)							
Encryption		HTTPS (SSL,TLS)							
Physical Layer		10/100 base TX Ethernet							
Protocol	IPv4 and IPv6	TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP							
	IPv4	FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)							
IP support		Dynamic, Static, Private IP							
Users		Unicast 10 Streams / 50 user registration							
Operation Temperature / Humidity		-10 °C to 50 °C / 0 %RH to 80 %RH				-30 °C to 50 °C / 0 % RH to 80 % RH		-10 °C to 50 °C / 0 %RH to 80 %RH	
Fan Operation Temp		Not Support				<15 °C (Dome inside)		Not Support	

Power Source	PoE, AC 24 V ($\pm 20\%$) (1 A or above) DC 12 V ($\pm 10\%$) (2 A or above)		PoE, AC 24 V ($\pm 20\%$) (1.5 A or above) DC 12 V ($\pm 10\%$) (3 A or above)	PoE, DC 12 V ($\pm 10\%$) (1 A or above)	
Power Consumption	About 9 W	About 10 W	About 10 W (without heater), 13 W (with heater)	About 4.2 W (DC), About 5.7 W (PoE)	
Other	RS-485 Support	Not Support	Not Support	Not Support	
Dimension	69 mm x 54 mm x 128.5 mm (W x H x D)	Ø156 mm x 155 mm (Φ x H)		(W) 67.4 mm x (H) 135.4 mm x (D) 61.5 mm	Ø122 mm x 102 mm (Φ x H)
Weight	0.5 kg	0.86 kg	1.4 kg	370 g	415 g

LVS201/LVS301/LVS311 Series

Item		LVS201	LVS301	LVS311
Resolution (Maximum)		704 x 480 (NTSC), 704 x 576 (PAL)		
Output		RJ-45(Network),	RJ-45 (Network), CVBS (Monitor)	
Frame Rate (Maximum)		30 fps/25 fps(NTSC/PAL)		
Compression		H.264 (Basic Profile), MJPEG, Dual Stream		
Audio		Not Support	Full Duplex(Line level input/output) - Audio Input 1Ch, Audio Output 1Ch	
Audio Compression		Not Support	G.726, G.711 (A-law, u-law)	
Sensor/Relay		Not Support	1 digital input, 1 relay output	
VA	Intruder detection	Not Support	Not Support	Support
	Crossing Line	Not Support	Not Support	Support
	Object Removal	Not Support	Not Support	Support
	Object Counting	Not Support	Not Support	Support
	Tampering	Not Support	Not Support	Support
Event Detection		Motion detection	Sensor In, Motion Detect	Sensor In, Motion Detect, VA
Event Notification		SMTP, FTP	Relay, SMTP, FTP	
ID/Password		Multi level user ID/password (Admin, Power, Normal, Customer)		
Encryption		HTTPS (SSL)	HTTPS (SSL,TLS)	
Physical Layer		10/100 base TX Ethernet		
Protocol	IPv4 and IPv6	TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP		
	IPv4	FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)		

IP support	Dynamic, Static, Private IP	
Users	Unicast 10 Streams / 50 user registration	
Operation Temperature / Humidity	-10 °C to 50 °C / 0 % RH to 80 % RH	
Power Source	PoE, DC 12 V (±20 %) (1 A or above)	PoE, AC 24 V (±20 %) (1 A or above), DC 12 V (±10 %) (2 A or above)
Power Consumption	About 3 W	About 7 W
Other	RS-485 Support	RS-485 / RS-422 Support
Dimension (W x H x D)	100 mm x 41 mm x 91 mm	170.4 mm x 56.2 mm x 130.2 mm
Weight	204 g	0.73 kg

LW9226/LW9226I/LW9228/LW9228I Series

Item		LW9226	LW9226I	LW9228	LW9228I
Camera	Image Sensor	4.5 mm (1/4 type) EX-view HAD CCD			
	Lens	x27 Zoom (F1.5 (Wide End), F3.8 (Tele End)) (f = 3.25 mm to 88 mm)		x37 Zoom (F1.5(Wide End), F4.1(Tele End)) (f = 3.5 mm to 129 mm)	
	Resolution	Up to 704 x 480, 704 x 576 (N/P)			
	Minimum Illumination	Color Mode: 0.003 (0.6) lx (Sens-up OFF) B/W Mode: 0.000 1 (0.1) lx (Sens-up OFF)			
	True Day/Night	Support			
	WDR	Support			
	Image Enhancement	Backlight Compensation, Exposure Control, Sens Up Control, AGC, White Balance, Privacy Masking, EIS, Digital Zoom			

PTZ	Optical Zoom	x27	x37
	Panning Range & Speed	0 ° to 360 °, Maximum 400 °/Second	
	Tilting Range & Speed	0 ° to 180 °, Maximum 400 °/Second	
	Auto Panning	Maximum 8 points	
	Preset	128	
	Group Touring	Maximum 9 Groups	
	Pattern	1 EA	
	Auto Tracking	Support	
Video/ Audio	Video Compression	H.264, MJPEG	
	Frame Rate	30 fps @ D1 + 30 fps @ CIF (NTSC), 25 fps @ D1 + 25 fps @ CIF (PAL)	
	Multi-Streaming	Dual Streaming	
	Audio Compression	G.726, G.711	
	2-way Audio	Support	
Event	Motion Detection	Support	
	Event Notification	Relay Out, Email, FTP	
	Pre Event Buffering	Support	
	Video Analytics Embedded	Not Support	

Interface	Video In/Out	1 BNC Out			
	Audio In/Out	1/1			
	Alarm In/Out	4/2			
Network	Ethernet	10/100 Ethernet			
	Security	Password Protection, HTTPS (SSL, TLS)			
	Protocol	IPv4 and IPv6	TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP		
		IPv4	FTP, SMTP, NTP, ARP, SNMP v1/v2c/v3, DDNS(LG)		
	Remote S/W	LG Ipsolute VMS or Web Client			
	Connections	Up to 10			
Misc.	Protection	IP66, Vandal Proof	-	IP66, Vandal Proof	-
	Power Source	AC 24 V			
	Power Consumption	25 W	19 W	25 W	19 W
	Operating Temperature	-20 °C to 50 °C	-10 °C to 50 °C	-20 °C to 50 °C	-10 °C to 50 °C
		Humidity: 0 % RH to 80 % RH			
	Safekeeping Temperature	-30 °C to 60 °C (Humidity: 0 % RH to 90 % RH)			
	Weight	4.17 kg	2.5 kg	4.17 kg	2.5 kg
Dimension (Φ xH)	234.6 mm x 269.9 mm	205.8 mm x 247.4 mm	234.6 mm x 269.9 mm	205.8 mm x 247.4 mm	

LNP3700T/LNP2800/LNP2800I Series

Item		LNP3700T	LNP2800	LNP2800I
Image Sensor		4.5 mm (1/4 type) CCD		
Lens		x37 Zoom, F1.5(Wide End), F4.1(Tele End) (f = 3.5 mm to 129.5 mm)	x28 Zoom, F1.5 (Wide End) , F3.0 (Tele End) (f = 3.5 mm to 98 mm)	
Resolution		Up to 704 x 480 (NTSC), 704 x 576 (PAL)		
Minimum Illumination	B/W	0.01 lx (Sens-up OFF), 0.000 01 lx (Sens-up ON)		
	Color	0.2 lx (Sens-up OFF), 0.003 lx (Sens-up ON)		
ICR Day/Night		Support		
Image Enhancement		Backlight Compensation, Exposure Control, Sens Up Control, AGC, White Balance, Privacy Masking, Digital Zoom, EIS		
Optical Zoom		x37	x28	
Panning Range & Speed		0 ° to 360 °, Maximum 500 °/Second		
Tilting Range & Speed		0 ° to 180 °, Maximum 500 °/Second		
Auto Panning		2 to 8 points		
Preset		256		
Group Touring		Maximum 10 Groups		
Pattern		4 EA		
Auto Tracking		Support	No Support	
Video Compression		H.264, MJPEG		
Frame Rate		30/25 fps @ D1 (N/P) + 30/25 fps @ CIF (N/P)		
Multi-Streaming		Dual Streaming		
Audio Compression		G.726, G.711		
2-way Audio		Support		

Motion Detection		Support	
Event Notification		Relay Out, Email, FTP, Preset(on Sensor)	
Pre Event Buffering		Support	
Video In/Out		1 BNC Out	
Audio In/Out		1/1	
Alarm In/Out		4/2	
Ethernet		10/100 Ethernet	
Security		Password Protection, HTTPS (SSL, TLS)	
Protocol	IPv4	TCP/IP, HTTP, HTTPS, RTP, RTSP, UDP, DHCP, ICMP, FTP, SMTP, NTP, ARP, SNMPv1/v2c/v3, DDNS(LG)	
	IPv4/v6	TCP/IP, UDP, HTTP, HTTPS, RTP, RTSP, DHCP, ICMP	
Open Protocol		ONVIF 2.2 Profile S,PSIA 1.1	
Remote S/W		LVi510, Mobile application (iPhone, Android, iPad)	
Connections		Up to 10	
Protection		IP66, Vandal Proof	No Support
Power Source		AC 24 V	
Power Consumption		Maximum 25 W	Maximum 21 W
Input current		1.8 A	1.4 A
Operating Temperature		-20 °C to 50 °C	-10 °C to 50 °C
Operating Humidity		0 % RH to 80 % RH	
Weight		4.17 kg	2.5 kg
Dimension (ØxH)		234.6 mm x 269.9 mm	205.8 mm x 269.9 mm

